Make the most of now.

Vodafone 710 Mobile Phone

User Manual



Copyright © 2006 Huawei Technologies Co. Ltd.

All Rights Reserved

Your Vodafone 710 is made exclusively for Vodafone by Huawei Technologies.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies

Co. Ltd.

Trademarks

Vodafone 2006. Vodafone and the Vodafone logos are trade marks of the Vodafone Group.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements,

information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Huawei Technologies Co. Ltd.

Address:

Administration Building, Huawei Technologies Co. Ltd..

Bantian, Longgang District, Shenzhen, P. R. China

Postal Code: 518129

Website: http://www.huawei.com

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section "Warnings and Precautions".



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them



Do not put your phone in a hightemperature place or use it in a place with flammable gas such as a gas station.



Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions on page 102 of this manual while using the USB cable. Otherwise your phone or PC may be damaged.



Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers.

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference

Table of Contents

Table of Contents 1	
Getting to Know Your Phone 1	
Packing List	1
Your Phone	
Getting Started 9	
Loading the Battery	9
Unloading the Battery	
Charging the Battery	9
Loading the SIM Card	
Loading/Removing a Memory Card	
Powering On/Off	13
Call Service 15	
Making or Answering Calls	15
Operations During a Call	17
Text Input 20	
T9 Input Method	
Traditional Input Method	21
"123" Numeric Input Method	21
Symbol Input Method	
Input Different Languages	22
Using the Menus 23	
Contacts 24	
Creating SMS/MMS/Email	24
Making Calls from the Contacts	24
Adding a New Contact	24
Deleting a Contact	
Searching for a Contact	25

	Copying Contacts	26
	Sending a Contact	26
	Marking/Unmarking a Contact	
	My Business Card	
	Backing Up Contacts	27
	Speed Dialing Numbers	
	Viewing the Memory Status	28
	Settings	
	Groups	
Call	Log 30	
	Making Calls from Call Log	30
	Other Operations	
Vies	saging 32	
	Text Messages	32
	Multimedia Messages	36
	Creating MMS Postcards	42
	Email	43
	Push Inbox	47
	Broadcast Inbox	48
	Voice Mail Number	49
	Common Phrases	49
Vlus	sic 50	
	My Music	50
	Playlist	
	Vodafone Radio DJ	
	Music Store	52
	My Wishlist	52
)ra	anicar & Toole 53	

SIM ToolKit	53	Video Call 69	
Alarm Clock	53	Functions on the Screen	69
Calendar	54	Function operations	69
Calculator	56	Entertainment 71	
Unit Converter	56	Games	7
Currency Converter	57	Camera	
Synchronise	57	Video Camera	
Tasks	58	Music	
Voice Recorder	59		/ 3
Memo Pad	60	Connections 76	
World Time	60	Bluetooth	
Stopwatch	60	USB	
Timer		Note on Connection Functions	84
Service Dial Number	61	DRM 86	
My Files 62		Settings 87	
Pictures	62	Phone Settings	8
Ringtones	62	Display Settings	
Games		Message Settings	89
Music	63	Call Settings	
Videos	64	Video Call Settings	
Applications	65	Connectivity	
Other	65	Network Setup	
Memory Card		Security Setup	
Vodafone live! 66		Warnings and Precautions 96	
Vodafone live!	66	Electronic Device	96
Enter URL	67	Hospital	96
Bookmarks	67	Area with Inflammables/Explosives	
Internet Settings	68	Traffic Safety	
		=	

Storage Environment	97
Child Safety	
Operating Environment	
Cleaning and Maintenance	
Environmental Protection	
Emergency Call	
Battery	
Charger	
Using the USB Cable	
Rules for Exposure to RF Energy	
Acronyms and Abbreviations 104	
Appendix 105	
••	
Index	
WARRANTY TERMS AND CONDIT	IONS

1 Getting to Know Your Phone

Your Vodafone 710 phone can operate in virtually all countries, automatically switching between WCDMA 2100 and GSM/GPRS 900/1800/1900 networks. So you'll be able to enjoy communications wherever you are using your mobile phone.

Note

The services supported by your phone must also be supported by the network where your phone is located. For details, please consult Vodafone. Note that you can also access information on Vodafone services at www.vodafone.com.

Packing List

Your phone package box contains the following articles:

- 1 One Vodafone 710 mobile phone
- 2 One travel charger
- 3 One Li-polymer battery
- 4 One user manual
- 5 One quick start guide (optional)

- 6 One stereo headset (optional)
- 7 One USB data cable (optional)
- One CD-ROM disk which contains Vodafone 710
 MOBILE PHONE PC Assistant (optional)

Your Phone

Front View and Back View





Side View



Keypad View



Keys

Key	Description
	 Make or answer a call. Access the Call Log screen in the standby mode.

Key Description



- Press this key to end an ongoing call or reject an incoming call.
- When it is not on the Home screen, press this key to return to the Home screen.
- Press and hold this key to power on the phone or press and hold it to power off the phone in the standby mode.



In the editing mode, press to delete a character before the cursor.



- Press to activate the function indicated at the left of the prompt bar on the screen.
- · Access main menu in standby mode.



- Activate the function indicated on the right of the prompt bar on the screen.
- In standby mode, press to access Vodafone live!.

Key	Description	Key	Description
(b)	 Access the Call Log screen in the standby mode. After entering or selecting a phone number, press to make a video call. 	•	Up: On a menu or on a mode selection screen, press to scroll upward. In standby mode, press to access the
•	 Access the Music screen in the standby mode. In an option list, press to tick a checkbox. 		Vodafone Live! screen. Down: On a menu or on a mode selection screen, press to scroll downward.
•	Press to start the selected function in the menu. In standby mode, press to access the main menu.		In standby mode, press to access the Contacts screen. Left: On a menu or on a mode selection screen, press to scroll leftward. In standby mode, press to access the Messaging/New SMS screen. Right: On a menu or on a mode selection

screen, press to scroll rightward.

• In standby mode, press to access the

My Files menu.

Key	Description
Character/ Number keys	 Used to enter numbers or characters. When menu items are numbered, press one of them to access a corresponding menu item. In the main menu, press a character/ number key to access a menu whose position on the screen corresponds to that of the number key. For instance,
	you can press to access Entertainment, or to access Vodafone Live!. • press to enter a space.
	 press and hold to switch the cur- rent profile to the meeting profile.

Key	Description
Record key/ Camera shortcut key	 In the standby mode with the phone open, press and hold for a few seconds to activate the camera. During a call, press to activate the voice recorder. In the standby mode with the phone closed, press and hold to start recording, and press again to end the recording. In the standby mode with the phone closed, press to activate the external screen and display relevant information. During charging with the phone powered off and closed, press to display the charging indicator on the external screen. When the charging finishes, the indicator stops blinking.
	, , , ,

Key	Description
Volume keys	 In the standby mode or during a call, press to adjust the volume of the earpiece. In the standby mode with the phone closed, press to activate the external screen and display relevant information. During charging with the phone powered off and closed, press to display the charging indicator on the external screen. When the charging finishes, the indicator stops blinking.

Home Screen



Icon bar

This area displays the phone status. The following table illustrates all the icons that may appear on this bar.

Icon	Description
Å.	Indicates signal strength. The more hori-
••••	zontal bars that appear, the stronger the
	signal.

Icon	Description
G	The phone is currently in a GSM network.
æ	The phone is currently in a WCDMA network.
ä	You are using the roaming service.
()	Indicates network connection state.
(Indicates security connection state of the network.
[\$	The phone is in a call.
黛	Alarm clock is enabled.
*	Bluetooth is enabled.
d.	You have new text messages.
£	You have new PUSH messages.
£	You have new emails.
ß	You have new multimedia messages.

lcon	Description
ß	You have new voice mail.
	The vibration mode is enabled.
₩	Indicates in mute mode.
F	The normal profile is activated.
	Call line 1 is enabled currently.
	Forwarding all incoming voice calls to line 1.
<u>[2</u>	Call line 2 is enabled currently.
	Forwarding all incoming voice calls to line 2.
6	The headset is plugged in.
4	Your PC connects to the Internet
	through your phone.
	Indicates battery power level.

Desktop

This area displays the operations and the function options.

Prompt Bar

This area displays the available operations at present.

The content displayed here varies with different screens.

- Press to execute the operation indicated on the left of the prompt bar.
- Press to execute the operation indicated on the right of the prompt bar.
- Press to start the selected function or option in the menu

2Getting Started

Loading the Battery

To load the battery:

- 1 Fit the battery into the battery slot on back of the phone.
- Press the battery down until it clicks into place.



Unloading the Battery

Only unload the battery after powering off your phone. Otherwise, your phone may be damaged. To unload the battery:

- 1 Push the battery latch upward.
- 2 Take out the battery.



Charging the Battery

Before charging the battery, please read carefully the following precautions.



- When you charge the battery for the first time, please charge it for at least 12 hours.
- The battery discharges even while not being used. So if you haven't used it for a long time, please recharge it first.

Charging the Battery

- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged repeatedly, but it will eventually wear out. After normal charging, if the time that the battery powers your phone becomes much shorter than usual, please replace the battery with one of the same type.
- Do not strike, toss or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- Charge the battery by using the charger supplied with your phone.

You can charge the battery at any time and use your phone during charging.

When you charge the battery with your phone powered on, the battery level icon will appear on the upper right corner of the internal screen. During battery charging, the charging indicator will blink continuously. When the charging indicator stops blinking, it indicates that the charging is finished.

 During charging with your phone powered off, a charging indicator indicating the power level of the battery will appear on the screen and blink continuously. When it stops blinking, it indicates that the charging is finished.



When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.

Charging with a Cable Charger

Before charging the battery with a cable charger, please make sure that the battery has been properly loaded into your phone.

To charge the battery:



As shown in the following figure: Insert the plug of the charger into the connector of the phone. Before inserting, please make sure that the arrow on the charger output jack points to the front side of the phone.

Loading the SIM Card

Plug in the connector of the charger to a power socket.



Loading the SIM Card

Your SIM card contains such information as phone numbers and contacts. Load your SIM card before using your phone. To use the SIM card properly, please read the following instructions carefully.

Note

- Keep the SIM card out of the reach of children.
- The SIM card and its metal contacts are easily damaged by scratching or bending.
 So be careful when you carry, load or remove it.

 Always disconnect the charger from the phone before loading or removing the SIM card

Loading the SIM Card

To load the SIM card:

- 1 Switch off the phone and remove the battery.
- Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the bottom right. Then slide in as shown.



■ Loading/Removing a Memory Card

Removing the SIM Card

To remove the SIM card, power off your phone and take out the battery. Then press the SIM card with one finger and slide it out of the slot.



Loading/Removing a Memory Card

The Vodafone 710 phone supports a memory card (mini-SD) with a capacity up to 1 GB.

Remove the rubber cap from the memory card slot; then insert the memory card into the slot, as shown in the following figure.



2 After inserting the memory card completely, replace the rubber cap.



To remove a memory card, open the rubber cap and press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.



Powering On/Off

Powering On

Ensure that the SIM card is in your phone and that the battery has been charged.

Press and hold until power is on.

Switching Off

Press and hold until power is off.

Access Codes

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding access

codes when you power on your phone. For setting and changing the access codes, please refer to "Settings/Security Setup" on page 94.

Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for your Vodafone 710 phone.

PIN

The PIN (Personal Identification Number) code is used to protect your SIM card from unauthorized use. Usually you will be supplied with the PIN code when you get the SIM card from Vodafone. If you have not got one or you have lost it, please consult Vodafone.

PIN2

Some SIM cards provide PIN2 code. Some special functions such as the "Fixed Dialer Number" are not available until you enter the PIN2 code and, at the same time, your SIM card must support these functions.

PUK

To unlock the locked SIM card, you have to enter the PUK (PIN Unblocking Key) code. Usually you will be

Powering On/Off

supplied with the PUK code when you get the SIM card from Vodafone. If you have not got one or you have lost it, please consult Vodafone.

PUK2

Some SIM cards provide PUK2 code which is used to unlock the locked PIN2 code. Usually you will be supplied with the PUK2 code when you get the card from Vodafone. If you have not got one or you have lost it, please consult Vodafone.

3Call Service

Making or Answering Calls

Making a Video Call

You can make a video call with someone whose phone also supports video calls.

- 1 Enter or edit a phone number in any of the following ways:
 - · Enter a phone number through the keypad.
 - Select a number from the Call Log screen.
 - Access the Contacts screen to select a phone number from Phone or SIM.
- press or select Options > Call > Video Call to dial.
- 3 Press ato end the video call.

Note

To delete a wrong number, press once to delete the digit to the left of the cursor; press and hold to delete all.

Making a Voice Call

- 1 Enter or edit a phone number in any of the following ways:
 - Enter a phone number through the keypad.
 - Press to select a number from the Call Log screen.
 - Access the Contacts screen to select a phone number from Phone or SIM.
 - Press
 to dial.
- 3 Press to end the call.

Making Voice Calls Using SDN

You can make a voice call through speed dialing. For instructions on assigning speed dialing numbers, refer to "Contacts/Speed Dialing Numbers" on page 27.

To make a call by speed dialing number(SDN), press and hold the number key until the phone dials the corresponding phone number.

Making or Answering Calls

Answering or Rejecting Calls

If there is an incoming call, the phone rings or vibrates, and displays the phone number or the caller name (if the caller is saved as a contact, except the calling ID is hidden).

When Auto Answer Disabled

You can set the answer mode to **Open flip, Any key** or **Send key**. For details, refer to "Settings/Call Setup/Answer Mode".

The following describes how to answer or reject a call in different answer modes:

То	Operation
Answer a call	 If the answer mode is Open flip, open the phone. If the answer mode is Any key, open the phone and press any key.
	 except and If the answer mode is Send key, press If the headset is in use, press the control key on the headset.

То	Operation
Reject a call	Press or select Options > Reject .
End a call	If the headset is not in use, you can
	close the phone or press .
	• If the headset is in use, press the con-
	trol key of the headset.
Reply by	Select Options > Reply to send a pre-
message	defined message to the caller.
yo m	hen the phone is closed and not in a call, u can press and hold the record key to ute the incoming call ring, or press and old the volume keys to reject the call.

You can set the auto answer mode to **Immediate** answer, **Message** or **Recorded message**. For details, refer to "Settings/Call settings/Auto Answer". The following describes how the phone will

When Auto Answer Enabled

react in different auto answer modes:

Operation If the auto answer mode is Immediate Answer a call answer, the phone will auto answer a call in 5 seconds. . If the auto answer mode is Text message, the phone will send a predefined message to the caller in 20 seconds. · If the auto answer mode is Recorded message, the phone will play a predefined audio file to the caller in 20 seconds

End a call • If the headset is not in use, you can end a call by closing the phone or by pressing <a> .

· If the headset is in use, you can press the control key on the headset.

Operations During a Call

Icon Description

Icon Description

A call is ongoing.



: The call is on hold.



There is a new incoming call during a call.

Operations

Hold/Resume

During a call, select **Options** > **Hold** to hold the call. To resume the call, select **Options** > **Resume**.

Answer/Reject

Your phone allows you to handle two calls simultaneously.

During a call, if there is a new incoming call, the icon blinks and the caller information appears on the screen:

Operations During a Call

- Press or select Options > Answer to answer it.
- Press or select Options > Reject to reject it.

Swap

During a 3-party call, select **Options** > **Swap** to swap between calls.

Conference call/Private call

During a 3-party call, select **Options > Conference call** to switch to the conference call.

During a conference call, select **Options > Private** call to talk with a party privately.

Handfree/Earpiece

During a call, press to switch between the Handsfree and the Earpiece modes.

Mute

During a call, select **Mute** to mute your voice. To resume the conversation, select **Unmute**.

End a Call

During a 3-party call or a conference call, select:

- Options > End > All calls to end the call with all parties.
- Options > End > current call to end the active call

During a 3-party call, you can select:

- Options > End > On hold to end the call that is on hold
- Options > End > Activate call to end the active call.

New Call

During a call, you can enter a phone number through the keypad or select a contact, and then press or select **Options** > **New call** to make a 3-party call.

Start Record/Stop Record

During a call, you can select **Options** > **Start record** to record the conversation.

To stop recording, select **Options > Stop record**.

Other Applications

During a call, select:

- Options > Other Apps > Messaging to access the inbox.
- Options > Other Apps > Contacts to access the phonebook.
- Options > Other Apps > Call Log to access the call log.

4Text Input

You can use the keypad to enter alphanumeric characters and symbols. For example, you can add entries to the contacts, write messages or schedule events on the calendar.

Note

While entering text:

- Press to switch between input methods, including "abc", "Abc", "ABC", and numbers.
- Press to enable or disable T9 input method.
- Press to display the commonly-used symbols list. You can use the scroll keys to select.
- Press to delete the letter before the cursor.

T9 Input Method

With the T9 input method, you can easily and quickly enter words with predictive text scheme.

 Press each key carrying the desired letter once, and then the predictive text scheme will present the

- candidate words composed by the letters you have entered in the drop-down menu.
- After entering all letters, if there is not the expected one in the drop-down menu, you can select [Spell] to enter the desired letter using the traditional input method and then select Insert. The words you inserted will be saved in the predictive text dictionary. If the dictionary is full, the new word replaces the oldest one

For example, to enter the word "good" with the T9 input method, follow these steps.

- Press successively the keys , , , , , , , , , , , and , which "g", "o", "o", and "d" belong to, and the candidate words composed by these letters will be shown in the drop-down menu.
- Use the up/down scroll key to select "good". Then press to enter a space for entering the next word.

Note

Press repeatedly and you will see "T9 english", "T9 English" and "T9 ENGLISH" on the upper left corner of the screen successively. It indicates the words to be

entered will be in lower case, first letter capitalized or in upper case.

Traditional Input Method

When T9 input method is off, you can use the traditional input method for entering alphabetic characters. Repeatedly press the key that carries the letter to be entered when it appears on the screen. For example, to enter the word "Hello" with the traditional input method, follow these steps.

- 1 Press that carries "h" repeatedly and all letters carried by this key will be displayed successively on the screen. Stop when you see an "h" on the screen
- 2 After entering the first letter, you can directly press another key (except) to enter the next letter. If the next desired letter is on the same key as the current one, wait until the cursor appears to the right of the current letter and then you can enter the next one.
- Enter "e", "I", "I" and "o" in the same way.

Note

- Press n repeatedly and you will see "abc", "Abc" or "ABC" on the upper left corner of the screen successively. It indicates the words to be entered will be in lower case, first letter capitalized or in upper case.
- · Press and hold number keys to enter numbers

"123" Numeric Input Method

With the "123" numeric input method, you can enter corresponding numeric characters by pressing the character/number keys. For example, to enter "1" with the "123" numeric input method, you can press . Then "1" appears on the screen.

Symbol Input Method

Symbol Input Method

Your Vodafone 710 provides an independent symbol input method.

For example, to enter ":" with the symbol input method, you can just press the scroll keys to select ":" in the symbol list and then press ...

Input Different Languages

In a text editing screen, select **Options > Input language** to set the language for the text. The selected language will be displayed on the upper middle part of the editing screen.

5Using the Menus

Your phone provides an extensive range of functions. You can use these functions by navigating the following menus: Entertainment, Music, Call Log, Vodafone Live!, Messaging, My Files, Organiser & Tools, Contacts and Settings.

- 1 In the standby mode, press to display the main menu.
- Press the scroll key to scroll through the menu, and then press to select.
- If the menu contains further submenus, repeat step 2.
- 4 Use the selected function according to the prompts on the screen.
- Select **Back** to return to the previous menu. Press to return to the standby mode.

6 Contacts

Contacts enables you to save and manage such information as phone numbers and addresses of your contacts. You can save such information in your phone or your SIM card. You can also assign eight frequently-used numbers to speed dialing keys for your convenience.

Creating SMS/MMS/Email

You can create a message, a MMS or an email and send it to a contact.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM .
- Select Options > Create, and then select SMS, MMS or Email to send it to the selected contact.

Making Calls from the Contacts

You can make a voice/video call with a contact selected from the contacts list.

In the Contacts screen, press the left/right scroll key to select Phone or SIM

Select a contact and select Options > Call. Then, you can select Voice Call or Video Call to make a call. Alternatively, you can select Edit before call to edit the number before making the call.

Adding a New Contact

For each contact to be added in your phone, you can add the name, mobile phone number, office telephone, home telephone, address, email address, fax number and country of the contact. You can also set an icon and a ring tone for each contact.

For each contact to be added in the SIM card, you can add the name and phone number, and depending on your SIM card type, also the fax number and email address.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM
- 2 Select Options > New.
- 3 Enter the contact information and then select Options > Save.

Deleting a Contact

You can delete a contact from your phone or SIM card.

- In the Contacts screen, press the left/right scroll key to select Phone in or SIM .
- Select the contact to delete. select Options > Mark/Unmark to tick the checkbox on the right of the contact or cancel the selection.
- Select Options > Delete marked. At the prompt, select Yes to confirm or No to cancel.

Searching for a Contact

You can find a contact from the contacts list easily and quickly by using this function on both the Phone screen and the SIM screen

- In the Contacts screen, press the left/right scroll key to select Phone in or SIM .
- Select Options > Search.

Select Options > Search, and then enter the contact name you are searching for. The contact will be displayed.

Note

The search result will include all matched contacts from both the phone and SIM memories, no matter from which screen (Phone or SIM) you start searching.

You can also use guick search in the **Phone** or SIM screen:

- In the Contacts screen, press the left/right scroll key to select Phone in or SIM .
- Enter a string (one or more letters or numbers) contained in the contact name you are searching for (which is displayed at the bottom of the screen). Then the contacts whose names contain this string will be displayed.

Copying Contacts

You can also find a contact by entering the initials of the first name and the last name of the contact. For example, to find a contact named "Alice Green", enter the initials "ag". This contact will be displayed in the candidate list.

Copying Contacts

You can copy one or more contacts from your phone to the SIM card or from your SIM card to the phone.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM .
- Select a contact to transfer. Select Options > Mark/Unmark to tick the checkbox to the right of the contact or cancel the selection
- 3 Select Options > Copy marked to SIM or Copy marked to phone. At the prompt, select Yes to confirm or No to cancel.

Note

Not all contact details will get transferred when copying a contact from the phone to the SIM card. Usually this the name, the first

number and the e-mail address but it depends on the SIM card type.

Sending a Contact

You can send a contact to other devices supporting SMS or Bluetooth. Before sending by Bluetooth, you need to switch on the Bluetooth device.

You can send only one contact by SMS each time. When sending by SMS, the information can include the contact name, phone number and email address. Other information (such as home address) cannot be sent by SMS.

Marking/Unmarking a Contact

You can select one or more contacts in your phone and SIM card

- In the Contacts screen, press the left/right scroll key to select Phone or SIM.
- Select Options > Mark/Unmark to tick the checkbox to the right of the entry or cancel the selection.

My Business Card

You can save your own information such as your name, mobile phone number, office telephone number, fax number, and email address to a Business Card. You can send the information by message or Bluetooth

- In the Contacts screen, press the left/right scroll key to select Phone in or SIM .
- Select Options > Mv business card.
- Select **Options** for one of the following operations: edit, save, sent by SMS, send by Bluetooth or delete the business card

Backing Up Contacts

You can back up your contacts by copying them from your phone to a memory card or from your memory card to your phone. You can also synchronize contacts in the phone with your personal phone book stored on the Vodafone network. Note that this service is not available in all networks. Please check

with Vodafone for more information. For details, refer to "Tools/Synchronise" on page 57.

- In the Contacts screen, press the left/right scroll key to select Phone 🗐 .
- Select Options > Backup contacts for one of the following options: backup contacts, restore contacts, and synchronise.

Speed Dialing Numbers

You can assign often-used numbers to speed dialing kevs "2" to "9".

- In the Contacts screen, press the left/right scroll key to select Phone in or SIM .
- Select a contact and select Options > Speed Dial No.
- Select a speed dial key for the contact, and then press .

Viewing the Memory Status

Viewing the Memory Status

You can view the memory status of both your phone and SIM card, including the number of existing contacts and the total capacity of the phone and the SIM card.

- In the Contacts screen, press the left/right scroll key to select Phone or SIM
- Select Options > Memory status to view the memory status.

Settings

This option is used to sort the contacts in the phone and the SIM card or to set an alert before saving.

Groups

You can rename a group, add group members, or delete a group.

Adding/Deleting Group Members

You can add a member to a group in your phone or delete a member from it.

- In the Contacts screen, press the left/right scroll key to select Groups.
- 2 Select a group and press to view the details.
- Select Option > Add. Select a contact and press . The member you added will be displayed in the group member list.

To delete a group member, select a member from the group member list, and then select **Options** > **Delete**.

Managing a Group

- In the Contacts screen, press the left/right scroll key to select Groups.
- Select a group and select **Options** for the following options.
 - · Details: to view the details of a group.

- Create: to send a text message or MMS to all members of a group.
- Rename: to change the name of a group.
- Delete: to delete a group and all members of the group.

Note

You cannot rename or delete any group preset in your phone.

7Call Log

The recently dialed calls, received calls and missed calls are saved automatically on your phone to make it easy to refer to them.

Making Calls from Call Log

- Select Call Log
 in the main menu and then press the left/right scroll key to switch between All calls
 in Missed
 in Received in and Dialed
 in Line In the main menu and then press the left/right scroll key to switch between All calls
 in Missed
 in the main menu and then press the left/right scroll key to switch between All calls
 in The Missed
 in the main menu and then press the left/right scroll key to switch between All calls
 in The Missed
 in the main menu and then press the left/right scroll key to switch between All calls
 in The Missed
 in the main menu and then press the left/right scroll key to switch between All calls
 in The Missed
 in the main menu and then press the left/right scroll key to switch between All calls
 in The Missed
 in The Mi
- Press the up/down scroll key to select a record.

 Press to make a voice call or press to make a video call.

Other Operations

Press the left/right scroll key to select All calls ,

Missed , Received for Dialed . Then select Options for the following options.

Options	Description
Call	To make a voice call or a video call.
	Alternatively, you can select Edit before
	call to edit the number before making a
	call.
Create	To send a message or MMS.
Save	To save the numbers of the selected
number	record to the phone, the USIM card, or
	an existing contact.
Delete	To delete the selected record.
Mark/	To mark/unmark a record or all records.
Unmark	
Display	You can select Normal to display all
mode	records or select Simple to ignore the
	repeated records.

Options	Description
Calls status	To display the information on voice calls, video calls and data services. • Voice call/Video call: to display the last call duration, incoming call duration, outgoing call duration, total time, and last reset time • Data: to display the total uplink flow, total downlink flow, and total connecting duration; the last uplink flow, last downlink flow and last connecting duration; and the last reset time. In the voice call, video call and data page, you can select Reset to clear all records.

8 Messaging

Text Messages

The maximum content for a single text message is 160 English letters. If the characters you entered exceed this limit, the text will be divided into two or more continuous messages for sending.

Creating a text Message

- 1 Select **Messaging** > **New SMS** the main menu.
- 2 In the message editing screen, select **Options**:
 - T9 Switch: enable or disable T9 input method.
 - Input mode: You may select one of the input methods to enter the message contents.
 - Common phrases: You can can use these to speed up the text entry.
 - Insert number: You can insert a phone number saved on the phone or the SIM card.
 - Input language: You can select a language for this message.
- After editing the message, press to access the "Edit numbers" screen.

- Enter the phone number, and then select
 Options > Send or press to send the message.
- Select **Options** > **Group** or **Contacts** to choose a number and send the message.
- Select Options > Save to save the message.

SMS Mailboxes

The phone provides three mailboxes for SMS, namely, Inbox , Outbox and Draft .

♠ Inbox

You can save the received messages in ${\bf Inbox}.$

Icons in Inbox

Icon	Description
Œ [©]	a read message in the phone memory
r_(i)	an unread message in the phone mem-
	ory
G.	a read message on the SIM card mem-
	ory
c#	an unread message on the SIM card
	memory

Icon	Description
8	a read message report
	an unread message report

Viewing Messages in Inbox

- Select Messaging > SMS > Inbox.
- Press the up/down scroll key to view the messages and then press (a) to view the details.
- 3 Reply or call back.
 - Press to reply with a text message.
 - Press to call back by a voice call or press
 - to call back with a video call.

Select **Options** for the following operations.

Opera- tion	Description
Reply	To reply the message.
Delete	To delete the message.
New	To create a message.

Opera- tion	Description
Forward	To forward the message.
Save	To save the numbers retrieved from
number	SMS to phone or SIM memory or an
	existing entry in the contacts.
Edit	To edit the number.
before	
call	
Copy to	To back up the SMS to SIM.
SIM	
Extract	To extract URL address from SMS for
URL	browsing web pages or stream media.
Save	To retrieve email address from SMS and
email	save.
address	

Other Operations for Inbox

- Select Messaging > SMS > Inbox 2.
- Select **Options** for the following operations:
 - Details: to view the selected SMS
 - · Delete: to delete the message.

Text Messages

- · Reply: to reply the message.
- New: to create a message.
- Forward: to forward the message.
- · Edit before call: to edit the number.
- Mark: to mark the selected message.
- Mark all: to mark all messages in the inbox.
- Save number: to save the numbers retrieved from SMS to phone or SIM memory or to the existing entry in the contacts.
- · Copy to SIM: to back the SMS up to SIM.
- Memory status: To view the storage status of SMS in the phone and SIM, including saved number and the total capacity.

Outbox

Outbox is used to save the messages that have been sent out.

Icons in Outbox

: A text message that has been sent out and saved to the phone.

: A text message that has been sent out and saved to the SIM card.

Viewing Messages in the Outbox

- Select Messaging > SMS > Outbox []
- Press the up/down scroll key to select a message and press to view the details.
- 3 Forward or make a call.
 - Press to forward a text message.
 - Press to make a voice call or press to make a video call.

You can Select **Options** for the following operations.

Opera- tion	Description
Forward	To forward the message.
Delete	To delete the message.
New	To create a message.
Edit	To edit the message.
Save	To save the numbers retrieved from
number	SMS to phone or SIM memory or an
	existing entry in the contacts.

Opera- tion	Description
Edit before call	To edit the number.
Copy to SIM	To back the SMS up to SIM.
Extract URL	To extract URL address from SMS for browsing web pages or stream media.
Save email address	To retrieve email address from SMS and save.

Other Operations for Outbox

- Select Messaging > SMS > Outbox
- Select **Options** for the following operations.
 - Details: to view the selected SMS
 - · Edit: to edit the message.
 - · Delete: to delete the message.
 - New: to create a message.
 - · Forward: to forward the message.
 - Edit before call: to edit the number.

- Mark: to mark the selected a message.
- · Mark all: to mark all messages in the inbox.
- . Save number: to save the numbers retrieved from SMS to phone or SIM memory or an existing entry in the contacts.
- . Copy to SIM: to back the SMS up to SIM.
- Memory status: to view the storage status of SMS in the phone and SIM, including saved number and the total capacity.

Draft

The Draft box is used to save the messages you created and saved and those which failed to send.

Icons in Draft

[A text message saved to the phone.

: A text message saved to the SIM card.

Viewing and Editing Messages in the Draft

- Select Messaging > SMS > Drafts [] .
- Press the up/down scroll key to select a message and press to edit it.

Other Operations for the Draft

Select Messaging > SMS > Drafts



Select Options, and then you can do the same operations as those of **Outbox**. You can also edit the selected messages.

SMS Settings

You can change the SMS settings by performing the following steps.

- 1 Select **Messaging > Settings > SMS** from the main menu.
- 2 Set the parameters related to messages:
 - Message centre: Your Vodafone 710 can auto read the number of the message centre from the SIM card or the phone. If you have deleted the information by accident, contact Vodafone.
 - Message validity: The time a message is kept in the message centre after it is sent.
 - Auto save: You can set whether a message will be saved automatically to Outbox when it is sent.
 - Save location: To set the position for saving newly created messages, received messages, and sent messages.

- Signature: To set whether your signature will be sent along with the message. You can edit the signature while creating a new message.
- Status report: You can set it to On or Off. If you set it to On, the network will send you the information on whether the message has reached the recipient.
- Concatenate SMS: You can set it to On or Off.
 If you set it to Off, you cannot edit and send messages longer than the limits of a single SMS.

Multimedia Messages

You can send messages attached with images, text and music under this mode.

Creating a Multimedia Message

- 1 Select **Messaging** > **New MMS** from the main menu.
- 2 Select To, Cc or Bcc.

- · Select an entry from the recipients list, and then press or select Options > Edit to enter a phone number.
- · Select a position from the recipients list, select Options > Contact or Group, and then select phone numbers.
- 3 Select **Back** to go back to the "Edit MMS" screen, select Subject to enter text as subject, and then press .
- Select Content to edit the pages.
 - (1) Select of to access the text entry field, and then edit text.
 - (2) Select to enter the image-editing field and then you can select images or video files in My Files.
 - (3) Select note the music-editing field and then you can select audio files in My Files.
 - (4) Access the field indicated by and press the left/right scroll key to select one from different pages if there are more pages.

- (5) Access the field indicated by € and press the left/right scroll key to adjust the playing time of the current page.
- (6) You can select **Options**, then select **Edit**, Send to, Remove object, Insert page, Delete page. Preview for the multimedia pages.
- Go back to the "Edit MMS" screen. Select **Options** for the following operations:
 - · Send: to send this multimedia message.
 - Save: to save this message to Messaging/ MMS/Drafts
 - · Add to template: to save this message at Messaging/MMS/Templates.
 - Send settings: to set relevant sending parameters for sending multimedia messages. For details, please refer to "Messaging/Settings/ MMS Settings" on page 41.
 - · Size: to view the size of this multimedia message.



- From the recipients list window select phone numbers you need for To, Cc or Bcc. Then select Options, you can set the phone number to Set To, Set Cc or Set Bcc. Meanwhile you may also select Delete or Delete all to delete the selected numbers or all numbers.
- If the video file is chosen in the imageediting field, you cannot edit the musicediting field any more.

MMS Mailboxes

Your Vodafone 710 provides four mailboxes for MMS, namely, Inbox Drafts , Sent and Templates.

Inbox

Inbox is used to save the multimedia messages you have received.

Icons in Inbox

Icon	Description
Æ	a read message
	an unread message
<u> </u>	a read notice or delivery report for MMS
e.	an unread notice or delivery report for MMS

Viewing Messages in Inbox

- Select a multimedia message to view its contents.
- During the playing, you can select **Stop** to stop playing.
- 3 Select **Options** for the following operations.
 - · Next page: to play the next page.
 - Previous page: to play the previous page.
 - · Rewind: to return to the first page.
 - Object list: After entering the content list of this message, you may select an item and select

Save to save the message to a corresponding directory of the folder.

- Extract URL: To extract URL address from MMS for browsing web pages or stream media.
- Save number: To save the numbers retrieved from MMS to phone or SIM memory or an existing entry in the contacts.
- Save Email address: To retrieve email address from MMS and save
- Callback: to call back the sender of the selected multimedia message.
- · Reply SMS: to reply a SMS to the SMS sender.
- Reply MMS: to reply a MMS to the MMS sender.

Other Operations for Inbox

- 1 Access the Inbox of MMS.
- 2 Select **Options**, and then you can do the following operations:
 - Reply MMS: to reply a MMS to the MMS sender

- Reply SMS: to reply a SMS to the MMS sender.
- Forward: to forward a selected multimedia message.
- Delete: to delete a selected multimedia message.
- Move: to move the selected multimedia message(s) to a specified folder.
- Folder: to save the multimedia message(s) you moved
- Callback: to call back the sender of the selected multimedia message.
- Save contact: to save a selected multimedia message sender's information.
- Sort: to sort the messages in the Inbox by senders or by date.
- · Mark: to mark the selected MMS.
- Mark all: to mark all the multimedia messages in the inbox.
- Memory status: to view the memory status of multimedia messages, including the occupied memory of every mailbox, template and folder and that of the total.

Drafts

Drafts is used to save the multimedia messages you created and saved and those which failed to be sent. Icons in Drafts

: A multimedia message saved after you created it or a multimedia message failed to be sent.

Viewing and Editing Messages in Drafts

- Access Drafts and select a multimedia message.
- Press to enter the editing screen.
- Now you can edit the message. The operations are the same as those for creating a multimedia message.

Other Operations for the Drafts

- Access the Drafts For the MMS.
- Select Options, and you can perform the following operations:
 - Edit: to edit the selected multimedia message.
 - · Mark: to choose the current multimedia message.
 - New MMS: to create a new multimedia message.

- · Delete: to delete the selected multimedia messages.
- · Move: to move the selected multimedia messages to a specified folder.
- · Folder: to save the multimedia messages you moved
- Sort: to sort the messages in the Drafts by recipients or by date.
- · Unmark all: to unmark all the multimedia messages in the Drafts.
- · Mark all: to mark all the multimedia messages in the Drafts
- · Memory status: to view the memory status of multimedia messages, including the occupied memory of every mailbox, Template, Folder, and that of total

Sent

The **Sent** is used to save the multimedia messages that have been sent successfully.

Icons in Sent

i A multimedia message has been sent.

Viewing Messages in Sent

- Select a multimedia message to view its contents
- During playing, you can select **Stop** to stop playing.
- 3 During playing, you may select **Options** to do the same operations as those of MMS Inbox. Refer to "Messaging/MMS/MMS Mailboxes" on page 38.

Other Operations for the Sent

- Access the **Sent** set of the **MMS**.
- Select Options and you can do the same operations as those of MMS Inbox. Refer to "Messaging/MMS/MMS Mailboxes" on page 38.

Templates

To send messages quickly, you can turn the content of commonly used multimedia messages into samples and save them. All operations on the **Templates** menu are basically the same as those for the Drafts. Please refer to "Drafts" on page 40 for details.

Folder

You can categorize your multimedia messages into different folders.

You can access Folder from the four tabs of Inbox. **Drafts. Sent** or **Template**. The management of the Folder is similar to that for the Drafts or Template. Please refer to these sections for details.

Now let us take entering the **Inbox** screen as an example.

Select MMS > Inbox . Then select Options > Folder. You can perform the following operations.

- · Rename: to rename a folder.
- · Select: to access a folder. Operations for this folder are similar to those for the Drafts or Templates.

MMS Settings

Select Messaging > Settings > MMS, and then you can set parameters related to multimedia messages. It contains the following submenus.

Sendina

This option is used to set parameters related to sending multimedia messages.

Creating MMS Postcards

- Valid period: The time for a multimedia message to be stored in the message centre after it has been sent.
- Send report: You have two alternatives, On and Off. With this mode enabled (On), the network will report on successfully sending a multimedia message.
- Read report: To set whether to accept a read report.
- Send limit: To set the size limit of a multimedia message to be sent.
- Save on send: To decide whether a multimedia message will be saved to the Sent folder after it has been sent.
- Sender visibility: To set whether the sender information will be displayed when a multimedia message is sent.

Retrieval

This option is used to set parameters related to retrieval of multimedia messages.

 Send delivery report: You have two alternatives, On and Off. With this mode enabled (On), the network will reply to the sender's multimedia message

- with a report indicating that you have received the message.
- Send read report: To set whether to send a read report.
- Retrieval limit: To set the size limit of a multimedia message that you can receive.
- Auto retrieval: To set whether the phone automatically receives multimedia messages or not.
 Settings such as "Network Access Point" and "WAP gateway" are all pre-set for your convenience.

Creating MMS Postcards

Use this option to get Vodafone to print out a photo you have selected and send it by post to the recipient. From the Messaging menu, choose the New postcard menu and press .

Select the photo you want to send and press . Then press Insert and choose the High Resolution format if requested. Type out the message you would like printed on the postcard and press . Enter the recipient's name, address, post code and city (and

optionally county and Country) using on to move through the options.

Finally, to send the postcard press Options > Send.



This service may not be supported in all counties yet. Check with your local Vodafone service provider.

Email

Your Vodafone 710 provides four mailboxes for email, namely, Inbox 2, Drafts 4, Outbox 2 and Sent 2.

Creating an Email

- 1 Select Messaging > New Email from the main menu.
- Select Recipients and press ... · Select one record in the recipients list and then press to enter an email address.
 - Select Options > Contact/Group/History to select an email address.

- 3 In the email editing screen, select subject and press to edit the contents.
- In the email editing screen, select the Content text box and press to edit the content.
- In the email editing screen, select Attachment to attach picture, music, video, or eBook.
- 6 In the email editing screen, select **Options** to save or send the email. The saved emails are in the Messaging/Email/Drafts.



In the recipients list screen, select the addresses you want to sent, Cc, or Bcc email to. Select Options > Set To/Set Cc/ Set Bcc or you can also delete/clear email addresses.

Mailboxes

Your Vodafone 710 provides four mailboxes for Emails, namely, Inbox 2, Drafts 4, Outbox 2 and SentOutbox 2.

Email

Inbox

All Emails received are saved in the inbox.

Icons in Inbox

: A read email.

: An unread email.

Viewing and Editing Emails in Inbox

- Select an email and press to view the content. If only the title of this email is received, the phone will prompt whether to download other information of the email.
- In the details screen, select Reply to reply the sender.

Other Options for Inbox

- 1 Access Inbox fee of email.
- 2 Select **Options** for the following operations.
 - · View: to view the selected email.
 - Select: to mark the selected emails in the inbox.
 - · Reply: to reply to the selected email.
 - · Forward: to forward the selected email.
 - · Delete: to delete the selected email.

- Move to: to move the selected email to a specified folder.
- My folders: to categorize your emails in different folders
- Sort: to sort your emails according to date, sender or topic.
- · Sync inbox: to synchronize emails from server.
- · Mark: to mark the selected emails in the inbox.
- · Mark all: to mark all emails in the inbox.

Drafts

The saved new emails are saved in the drafts.

Icons in Drafts

: Emails to be sent.

Viewing and Editing Emails in Drafts

- Select the desired email in the drafts and press to enter the editing screen.
- 2 Edit the related information. For details, follow the same operations as in creating an email.

Other operations in Drafts

 
- 1 Enter Drafts pof email.
- 2 Select **Options** for the following operations.

- Edit: to edit the selected emails in the drafts.
- · Select: to mark the selected emails in the drafts
- · New Email: to create a new email.
- Delete: to delete the selected email.
- Move to: to move the selected email to a specified folder
- · My folders: to categorize your emails in different folders
- · Sort: to sort your emails according to date, sender or topic.
- · Mark all: to mark all emails in the drafts.

Outhox

Those emails which failed to send are retained in the outbox.

Icon for Outbox



Viewing and Editing Emails in Outbox

Select an email and press to enter the editing screen.

Edit the related information. For details, follow the same operations as those in creating an email

Other Operations in Outbox

- Enter Outbox and of email.
- Select **Options** for the following operations:
 - . Edit: to edit the selected email.
 - . Select: to mark the selected emails in the outhox
 - . Send: to send the selected email.
 - · Delete: to delete the selected email.
 - Move to: to move the selected email to a specified folder
 - · My folders: to categorize your emails in different folders
 - Sort: to sort your Emails according to date, sender or topic.
 - . Mark all: to mark all emails in the outbox.

Sent

The Emails sent to server are saved in the sent box.

Email

Icon for Sent

: A read email.

Viewing and Editing Emails in Sent

- Select an email and press to enter the editing screen.
- 2 Edit the related information. For details, follow the same operations as in creating an email.

Other Options in Sent

- Enter Sent and of email.
- Select Options for the following operations.
 - · View: to view the selected email.
 - · Select: to mark the selected emails in the sent.
 - · Forward: to forward the selected email.
 - · Delete: to delete the selected email.
 - Move to: to move the selected email to a specified folder.
 - My folders: to categorize your emails in different folders.
 - Sort: to sort your emails according to date, sender or topic.
 - · Mark all: to mark all emails in the sent.

Folder

You can categorize your emails in different folders. You can enter **Folder** from the inbox, drafts, outbox and the sent box.

Here's an example, using the folder of the inbox: Select **Email > Inbox**. Then select **Options > Folder** for the following operations.

- · Rename: to rename the folder.
- · Select: to enter one folder.

Email Settings

Select **Messaging > Settings > Email** to set the following items.

Accounts

- Select Options > Add account and enter the account name. Press to access the General settings screen.
- The related account information contains: Account name, Display name, Email address, Protocol, Incoming mail server, User name, Password, and Outgoing mail server.

- 3 Select Options > Advanced settings to enter the Advanced Settings screen.
- 4 Return to the Account screen. Select Options > Activate to activate this account.
- To delete an account, select an account and then select **Options** > **Delete account**.

Note

For the account settings, contact Vodafone.

Common Options

- · Reply with history: to reply with history.
- Save sent email: to save sent emails to the sent box.
- · Send limit: to set the size of email.
- Receive limit: to set the limit of the received email.
 If the size of the email exceeds the limit, only the title of the email will be received. If Only header is selected, only the title of the email will be received.
- Network Access Point: This option is used to select information about the profile to be adopted when you send emails. For more information, consult Vodafone.

After finishing all settings, press Back.

Memory Status

The memory in use of Inbox, Drafts, Outbox, Sent and My folders are displayed.

Push Inbox

The Push Inbox is used to save the Push messages you have received.

You can enable or disable Wap Push via the Internet Settings. For more information, please refer to "Internet Settings" on page 68.

Viewing Push Messages

In the **Push Inbox**, select a Push message, and then press to view the details of the Push message.

Icon for Push Inbox

- A read Push message.

Other Operations for the Push Inbox

 Load: To start the WAP browser and connect a URL specified by the Push message.

Broadcast Inbox

- Delete: To delete the selected messages.
- Unmark all: To unmark all Push messages.
- mark all: To mark all the Push messages.

Push Inbox Settings

Select **Messaging > Settings > Push messages** to set the Push inbox.

Push Message Setting

You can select following options:

- · Accept all: to set to accept all Push messages.
- Accept trusted: to set to accept only the trusted Push messages.
- Accept MMS Push: to set to accept only the Push messages prompting you with a multimedia message.
- Accept none: to set to accept no Push messages.

Push SL Setting

You can enable or disable the push SL function by selecting **On** or **Off**.

Whitelist and Blacklist

You can enable or disable whitelist and blacklist function by selecting **On** or **Off**.

Push Whitelist

It is used to save the trusted Push message number.

Push Blacklist

It is used to save the un-trusted Push message number.

Broadcast Inbox

The broadcast messages are saved in the broadcast inbox. You can set the broadcast message.

Select **Messaging > Setting > Broadcast** to set the following items.

- · Service: to enable or disable this service.
- Subscription: to subscribe to broadcast channels or cancel the subscription.
- Language: to select the language of the broadcast.
- Silent alert: to set whether to use an alert when there is a new broadcast message.
- Auto delete: to set whether to auto delete earlier messages when the broadcast inbox memory is full.

Voice Mail Number

The voice mail number is already pre-set for you in the phone. To access your voicemail, press and hold in standby mode, the phone will dial out the voice mail number automatically.

Common Phrases

Your Vodafone 710 has been preset with some commonly used phrases for inputting message, sending messages while answering a call and auto replying. You can edit them if you want.

- 1 Select Messaging > Settings > Common phrases.
- Select the phrase to be modified and then select Modify.

9 Music

Music penables you to manage your music files easily and conveniently. It enables you to purchase a huge variety of up to date music from Vodafone. Vodafone offers a great variety of Music which is always up to date.

My Music

You can play various music files, including those supplied with the phone, recorded by yourself with the phone, downloaded from the Internet, and attached to email. You can also enjoy the online audio files.

Function Options During Playing

During playing the music file, Select **Options** for the following operations.

Options	Description
Open file	To select and play the music files in your
	phone.
Full	To play the video file in full screen.
screen	

Options	Description
Mute/	To mute or unmute the music
Unmute	
Playlist	To access the music playlist.
Book-	To access the bookmark list. You can
marks	select and access the existed URL or
	new stream media address to play
	stream media files.
Video	To enable the video camera function.
camera	
History	To record the played music information.
Send	To send the music file through mes-
	sages, Email or Bluetooth.
Set as	To set the music file as voice tone, video
	tone or contact tone.
Property	To view the information of the music
	files.
Settings	To set the play mode, full screen direc-
	tion, and Stream setting.

Screen Operations During Playing

During playing the music file, you can execute the following operations on the music file.

Opera- tion	Description
=	Press the up scroll key to play the previ-
	ous music file.
▼	Press the down scroll key to play the
	next music file.
44	Press the right scroll key to fast forward
	the music file.
*	Press the left scroll key to rewind the
	music file.
11/	Press to pause the playing.
	Press again to resume the playing.
	Press the volume keys to adjust the vol-
4(0	ume.
	<u> </u>

Note

When a call is coming:

- If a music file is being played, the music file continues to play from where it was interrupted after the call.
- If the music has been paused, the music file stays in the paused state after the call.

Playlist

Selecting this option, you can rename and edit the playlist as well as play the music in the playlist.

Vodafone Radio DJ

Vodafone Radio DJ is a service which provides you a selection of different music channels for you to choose similar to Radio. If you skip tracks on a channel you listen to, the service will realise the kind of music you are skipping and then not offer it again on this channel. Also you can very easily mark music tracks you like to download them later on.

You can do the following operations.

 My Channels: To create or edit the existed channels. Select **Options** to edit, create, rename, or delete user-defined channels.

Music Store

- RDJ Channels: Here you find a selection of different music channels for you to choose. Select a channel and then press to display the music playlist contained in this channel.
- RDJ Collections: In this area you find specific music collections like the "best of hits" of an artist.
- My Account: To display and purchase the playing time for streaming media. This will also be displayed automatically when your account balance is too low for a channel or music album you have selected.

Music Store

In the Vodafone Music Store you can find a great variety of music for you to download onto your mobile phone.

My Wishlist

On your music wishlist you will find all the songs which you have marked to download while listening to a Radio DJ channel.

10Organiser & Tools

This function provides you with various assistant tools, including SIM ToolKit, Alarm clock, Calendar, Calculator, Unit converter, Currency converter, Synchronise, Tasks, Voice recorder, Memo, World Time, Stopwatch, Timer and Service dial number. You can access the **Organiser & Tools** screen by selecting of from the main menu.

SIM ToolKit

Your Vodafone 710 supports a number of clever Sim ToolKit (STK) functions such as location based services. For more information, consult Vodafone.

Alarm Clock

You can set several alarm clocks. You can also set the prompt messages, alarm tones and the cycle period for alarm clocks.

Setting Alarm Clocks

You can set an alarm clock as follows:

- Select one alarm from the list, and press to set an alarm clock.
- 2 Set the alarm time.
- 3 Enter the prompt message.
- 4 Select a ringtone. Your phone provides standard ringtones and supports downloaded ringtones.
- 5 Set the alarm cycle.
- 6 Select whether to enable snooze.
- Select whether to vibrate when the time for an alarm clock is up.
- 8 Select whether to set the alarm tone.
- Press the left function key to start the alarm clock.

Prompt Interface for an Alarm

When it is time for an alarm clock to ring, the selected alarm tone is played and a prompt interface is displayed. You can stop the ringing by pressing any key or by closing or opening your phone. On the prompt

Calendar

interface, you can select to snooze or stop the alarm prompt.

- Snooze: On the prompt interface, press the right function key to snooze the alarm. Then the alarm will ring again in five minutes. You can snooze the alarm three times.
- Stop: On the prompt interface, press the left function key to stop the alarm clock. Then the alarm clock will not ring again.

If your phone is powered off, the alarm clock can still ring, and you will be prompted whether to power on the phone when it rings.

Stopping the Alarm Clock

Select an alarm clock from the list, and press the left function key to deactivate it.

Calendar

With this function, you can view the calendar and manage your schedules.

New Schedule

Ways to Create Schedules

Operation	Description
On the	Two ways are available:
month view screen	 Select a date and press to access the schedule event list of the current day. Select Options > New to create the schedule events of the current day Select a date and select Options > New to create the schedule events for the current day.
On the	Select Options > New to create the
week view screen	schedule events for the current day.
On the	Select Options > New to create the
day view screen	schedule events for the current day.

Creating a Schedule

In the screen for editing schedule, you can set the following items: schedule title, schedule location, schedule type, start/end time of the schedule, whether to alarm, when to alarm before the start time, alarm cycle, schedule details, alarm tone, and image files

Note

You can create up to 500 schedules in total and 15 for each day. While creating a new schedule, you need to set to alarm before setting the alarm time, the alarm cycle, the alarm tone and the image.

Calendar Functions

Enter calendar function and select Options, you can execute the following operations on the calendars.

Operation	Description
View	To view the calendar in three different
mode	modes: month view, week view, and day view.
New	To create a new schedule.
Go to	To go to a certain date directly from the
	Month view screen.

Operation	Description
Display	To view all events, specified events, Cal-
events	endar files and to back up all schedules
	to a memory card.
Delete	To delete all past events , specific period
event	events or all events.
Backup all	To backup all schedules to the memory
	card.
Restore	To restore all schedules from the mem-
data	ory card to the phone.
Memory	View the memory status, including the
status	used space and the total space.
Settings	Save location: you can save the sched
	ules to your phone or memory card.
	Main view: you can set the default view
	to Month view, Week view or Day view.
	• Week begin day: you can select Begin
	with Monday or Begin with Sunday.

Prompt Interface for a Schedule

When it is time to remind you of a schedule, the selected ringtone is played and a prompt interface is

Calculator

displayed. You can stop the ringing by pressing any key or by closing or opening your phone. On the prompt interface, you can select to snooze or stop the prompt.

- Snooze: On the prompt interface, press the right function key to snooze. Then you will be prompted again after five minutes. The prompt will always snooze until you stop it.
- Stop: On the prompt interface, press the left function key to stop the prompt. Then you will not be prompted any more.

Calculator

You can perform addition, subtraction, multiplication, division and extraction operations on your phone.

- Press the number keys to enter the figures.
- · Press the scroll key to enter the operators.
- · Press the left function key to clear.
- Press the right function key to exit Calculator.
- Press to enter a radix point.
- Press to delete the character on the left of the cursor.

- Press to perform extraction.
- Press to enter an equal mark.

Unit Converter

You can convert units of length and weight between different systems on your phone.

- 1 Press the up/down scroll key to select the unit type bar, input unit bar or output unit bar.
- 2 On the unit type selection bar, press the left/right scroll key to select weight or length.
- 3 On the **From** bar, press the left/right scroll key to select the unit to be converted from.
- 4 On the **To** bar, press the left/right scroll key to select the unit to be converted to
- 5 Press the number keys to enter a numeric value in the number bar.

Then you can view the conversion result.

Press or select CE to clear the numeric values you entered.

To using this function, access the **Currency converter** screen, and then press the up/down scroll key to switch between the setup items.

- On the Input bar, press the number keys to enter a numeric value to be converted.
- 2 On the **From** bar, press the left/right scroll key to select the currency to be converted from.
- On the **To** bar, press the left/right scroll key to select the currency to be converted to.
- 4 On the **Rate** bar, enter the currency rate. Then you can view the conversion result.

Press to clear the numeric values you entered.

Press Setting in the currency converter screen, and you can select frequently used currency units. This makes it easy to switch between selected units in the From or To bar

Synchronise

You can synchronise contacts with your personal phone book stored on the Vodafone network. This service might not be available in all Vodafone networks. Contact Vodafone for further details.

Select **Synchronise** from **Organiser** & **Tools** to create or edit a profile. Select **Options** > **View log** to view the latest synchronisation log. Before you use the synchronise function, you may need to set a profile.

- To create a profile, select Options > New to create a profile.
- Press the left/right scroll key to switch between Synchronise Item, Server Setting, and Network Profile.
- In the Synchronise Item screen, select the item to be synchronized and press to confirm it. Then, enter the database path, User name, Password of the synchronization items.
- 4 In the Server Setting screen, enter the user

Tasks

name, password, server URL and port .

- 5 In the Network profile screen, enter the proxy server address and the port. Then, enter the network access point and select a desired profile.
- Return to the previous menu and select Options
 Synchronise to start synchronising.



Note that this service is not available on all networks. Please contact Vodafone for more information.

Tasks

You can define and manage tasks to be conducted before a certain time. Your phone can remind you of these tasks and track them automatically.

Select **Tasks** from **Organiser** & **Tools** . The tasks are classified into three kinds: pending, done, and all. You can define up to 1000 tasks on your phone.

New Tasks

To define a new task, press
one or select **Options** > **New** on the Tasks screen. Then proceed with the following steps:

- 1 Enter the title of the task.
- 2 Set the deadline.
- 3 Set the priority level.
- 4 Set the accomplishment status of the task.
- Select whether to alert.
 If you select alert, you need to set the time for alert.
- 6 Set the alert time of the task.

 If you select not to alert, skip this step.
- 7 Set the type of the task.
- 8 Press the left function key to save it.

Other Operations on the Tasks Screen

On the Tasks screen, you can also perform the following operations: delete, edit, copy, mark finished,

Operations on the Task Prompt Interface

When it is time for the phone to remind you of a task, it rings automatically and a prompt interface is displayed. You can stop the ringing by pressing any key or by folding/unfolding your phone. On the prompt interface, you can select to snooze or stop the task prompt.

- Snooze: On the prompt interface, press the right function key to snooze the alarm clock. Then the phone will ring after five minutes. The prompt will always snooze until you stop it.
- Stop: On the prompt interface, press the left function key to stop the ringing and close the prompt interface. Then the phone will not ring any more.

Voice Recorder

You can record voices or sounds on your phone. You can set the recording duration.

Select **Organiser** & **Tools** > **Voice recorder** from the main menu, then you can execute the following operations

Preparations Before Recording

- Set the duration: On the standby screen of the voice recorder, select **Options > Duration** to set the duration.
- View records: On the standby screen of the voice recorder, select Options > Gallery to view the audio files.
- Start recording: On the standby screen of the voice recorder, press or select Option > Record to start recording.

Operations During Recording

- Pause: During recording, press to pause, and press again to resume.
- 2 Stop and save: During recording, press the left function key to stop recording.

Memo Pad

The audio file is saved in **My Files\Music** automatically.



Play an audio file instantly: After recording is finished, select **Option** > **Play** to play the audio file instantly.

Alternatively, you can select **Options** for the following operations: send by Message, Email or Bluetooth, set as tone and delete.

Memo Pad

You can take down important events on your phone. You can save up to 100 such memos.

Select **Memo** from **Organiser** & **Tools** . If there is no memo, you need to create one when you access the **Memo** screen.

On the Memo Pad screen, you can perform the following operations: new, delete, edit, send by Message or Bluetooth, view the memory status and delete all.

World Time

You can view the time of important cities around the world.

To switch among the time zones, press the left/right scroll key.

If the daylight saving time (DST) is used in your city, you need to set to DST. Then, you can get the right local time. To set to DST, switch to the desired time zone and then select **Options > DST**.

Stopwatch

You can use the stopwatch function and save up to five records on your phone.

- · Start: Press the left function key to start timing.
- Lap: Press the left function key to save the first record of timing. Timing for the second record starts automatically. You can go on timing and saving in this way until five records are saved. Then the stopwatch is stopped.
- Pause: Press the right function key during timing to pause.

- Continue: Press or select Options > Continue to resume timing.
- Reset: In the state of pause, select Options >
 Reset to clear all the stopwatch records.

Timer

You can set a timer for up to 99 hours and 59 minutes. After you have set it, the timer is displayed on the home screen.

On the **Timer** screen, you can perform the following operations: pause, continue and reset.

Service Dial Number

With this number you can get in touch with Vodafone.

11 My Files

My Files enables you to manage the Pictures, Ringtones, Games, Music, Videos, Applications and Others files conveniently. You can access My Files by selecting from the main menu.

Pictures

Select My Files > Pictures to access the picture folder. Select Download Pictures to download more pictures from Vodafone live!. The downloaded files are saved in this folder.

You can execute the following operations on the picture files.

Opera- tion	Description
View	To view a picture file.
Send	To send a picture file by message, post-
	card, email or Bluetooth.
Cut	To cut a picture file.
Сору	To copy a picture file.
Delete	To delete a picture file.

Opera- tion	Description
Mark/	To select one or more pictures or cancel
Unmark	the selection.
Set as	To set a picture as thumbnail of a con-
contact	tact.
image	
Picture	To edit a picture file.
edit	
Rename	To rename a picture file.
Proper-	To view the properties of one or more
ties	files.

Ringtones

Select My Files > Ringtones to access the ringtone folder. Select Download Ringtones to download the latest Ringtones from Vodafone. The downloaded files are saved in this folder.

You can execute the following operations on the ringtone files.

Note

Some sound files are protected by DRM, and may not be able to be used as a ringtone.

Games

Your Vodafone 710 supports Java games.
Select My Files > Games to access the game folder.
Select Download Games to download the latest
Java games from the Internet. The downloaded files
are saved in this folder.

Music

Select My Files > Music to access the music folder. Select Download Music to download music from the Vodafone live! portal. The downloaded files are saved in this folder.

You can execute the following operations on the music files.

Opera- tion	Description
Play	To play a music file.
Send	To send a music file by message, email
	or Bluetooth.
Set as	To set a music file as voice call tone,
	video call tone or specific contact tone.

Videos

Description
To cut a music file.
To copy a music file.
To delete a music file.
To select one or more music files or can-
cel the selection.
To rename a music file.
To view the properties of one or more
files.

While playing a music file, you can also execute the following operations: open a file, view in full screen, view the playlist, edit bookmarks, enable video camera and view the history.

Videos

Select **My Files > Videos** to access the video folder. Select **Download Videos** to download videos from the Internet. The downloaded files are saved in this folder. You can execute the following operations on the video files.

Opera- tion	Description
Play	To play a video file.
Send	To send a video file by message, email
	or Bluetooth.
Cut	To cut a video file.
Сору	To copy a video file.
Delete	To delete a video file.
Mark/	To select one or more video files or can-
Unmark	cel the selection.
Rename	To rename a video file.
Proper-	To view the properties of one or more
ties	files.

Operations During Playing

During playing a video file, you can also execute the following operations: open a file, view in full screen, mute, view the playlist, edit bookmarks, enable video camera, view the history, send the file by MMS, Email or Bluetooth, view the property and setting.

Applications

Any applications that you download are saved in this folder.

Other

In the **Other** folder, you can save any kind of file. You can also create new folders in this folder to categorise your files.

Memory Card

When the phone detects and recognises the memory card, **Memory card** is displayed as a tab on the top of the **My Files** screen. You can execute the same operations on the contents in the memory card as those in the phone. Your Vodafone 710 also provides a function to format the memory card.

12 Vodafone live!

The built-in browser makes it easy and pleasant to tour around in the Vodafone live! portal. You can access the Browser screen by selecting from the main menu.

Vodafone live!

Browsing Pre-set Web Pages

In the homepage, select a link from the page; and then select to browse the page. During browsing, you can press the scroll keys to select a link to be accessed. The selected link is highlighted.

Press oto enter it.

Other Operations for the Homepage

After selecting **Options** from the homepage, you can perform the following operations:

Function	Description
Home-	To access the homepage.
page	
Forward	To go forward when you browse web
	pages.

Function	Description		
Book-	To access the bookmark directory and		
marks	view the saved bookmarks.		
Enter	To enter a web site address and connect		
URL	it.		
Recent	To access pages you have browsed		
pages	recently. Ten entries of records can be		
	saved.		
Save	To save the pages in your phone. Web		
page	pages will be saved to the Saved pages		
Save item	n To save contents on the page to the fold		
	ers in your phone.		
Refresh	To refresh the current web page.		
Exit	To exit the current web page.		
Saved	To browse the saved pages offline.		
pages	Select Options > Goto to connect the		
	server end. Select Option > Delete to		
	delete the selected pages.		

Function Description

Settings

- Save as homepage: to save the current page as the homepage. You can press the up/down scroll key to switch between the title editing bar and the address editing bar.
- Multimedia: to set whether to show images or play background music.
- Cache: to set the cache to On/Off and clear the cache.
- Cookies: to enable (On) or disable (Off) cookies and clear cookies.
- Security: to show the "Current certificate", "CA certificates" and "Session info".
- Character set: to select one of the character sets, including "Automatically", "Unicode (UTF-8)", "UCS-2", "GB2312", and "BIG-5".
- Clear recent page list: to clear recent page list.

Enter URL

Access the **Enter URL** screen, and then you can enter the address of the web page to be accessed. You can select **Goto**, **Edit**, **Delete** or **Delete** all from the **Options** to perform corresponding operations upon the entered address.

Bookmarks

With this option you can save and edit the information of the websites that you often access.

Some bookmarks have been preset by Vodafone for you on the phone. Select any one of them, and then

Adding a Bookmark

Select **Add** to add a Title and Address for a bookmark.

you can perform the following operations:

Go to a Bookmark

Select a bookmark and press oto connect the selected bookmark. You may also connect to the

Internet Settings

server to get the latest web page by selecting **Options > Goto**.

Editing a Bookmark

Select a bookmark and then select **Options** > **Edit** to edit the selected bookmark. The preset bookmarks cannot be edited.

Deleting a Bookmark

Select a bookmark and then select **Options** > **Delete** to delete the selected bookmark

Internet Settings

These are preset for you to use the Vodafone service. But if you need to modify them, open the Browser and select **Internet Settings**.

13 Video Call

Video calling is one of the major features of the 3G network, enabling you to see as well as hear when calling.

Functions on the Screen

During a video call, the phone displays the phone number of the other party, call duration, and available options.

During a video call, you can press to hold the call and send a preset file to the other party. You can press again to resume the call. Before you use the function, you can preset a file in settings/video call/Send freeze image.

You can also adjust the following settings:

Icon	Description		
	Press the up or down scroll key to adjust		
275	the brightness.		
Q	Press the left or right scroll key to zoom		
	in or zoom out.		

I	lcon	Description	
Press the volume keys to adjust		Press the volume keys to adjust the vol-	
	V	ume.	
	4 0/ [Press oto switch between the loud-	
		speaker mode and the earpiece mode.	

Function operations

During a video call, you can select **Options** to do the following operations:

Opera- tion	Description
Hands-	Switch between the loudspeaker mode
free/Ear-	and the earpiece mode.
piece	
Picture	To set the P-in-P mode to off, top left,
in Pic-	top right or bottom left.
ture	
Switch	To switch display.
display	

Function operations

Opera- tion	Description		
External view or Internal view	To switch between the main lens and the assistant lens.		
Image quality	To set the image quality to best quality or more smooth.		
Forbid video/ Open video	To forbid or allow the video from your side.		
Forbid audio/ Open audio	To forbid or allow the audio from your side.		
Play file	To play a media file.		
Record	To record a video clip. A recorded video clip is saved to the My Files/Videos directory.		

Opera- tion	Description		
Other	SMS: To access the inbox.		
Applica-	Contact: To access the Contacts		
tions	screen.		
	 Call Log: To access the Call Log 		
	screen.		

14Entertainment

You can use the phone to play games, take photos, and listen to online music.

Games

You can play games and download more games.

Downloaded games are saved to the My

Files\Games directory.

Downloading Games

Vodafone offers a great choice of games for your mobile phone. To download one of these to the phone or memory card, select **Download Games**.

Available Options of Games

You can scroll the cursor to a Java game and press

or select Options > Select to launch the game.
In the Games screen, you can select Options to do the following operations:

Opera- tion	Description	
Select	To launch the game.	
Update	To upgrade the game.	

Opera- tion	Description			
Delete	To delete the game.			
Proper-	To view the property of the game.			
ties				
Move	To move games saved in the phone to			
	the memory card and vice versa.			
Security	To set the security requirements of the			
	game:			
	Net Access			
	 Application Auto In 			
	 Local Connectivity 			
	 Messaging 			
	 Multimedia Recording 			
	 Read User Data Access 			
	 Write User Data Access and Phone 			
	call			
Send	To send the game to a recipient through			
	email or Bluetooth.			
Setting	To set the volume, vibration and internet			
	setting.			

Camera

Camera

Press the Camera key or select Entertainment > Camera to launch the camera.

Operations in the Viewfinder Screen

In the viewfinder screen, you can:

Icon	Operation		
	Press the left/right scroll key to adjust		
2.7%	the brightness.		
Q	Press the up scroll key or the down		
	scroll key to zoom in or zoom out.		
24	Press the volume up key or volume		
_	down key to adjust the contrast		

Note If you use the assistant lens and set the resolution to 640×480 , you cannot zoom in or zoom out.

In the viewfinder screen, you can select **Options** to set the following items:

Opera- tion	Description		
Snapshot	To take a photo.		
Video	To record a video clip. For details, see		
camera	"Operations During Recording".		
Frame	To choose a frame for pictures.		
Normal	To set the viewfinder size.		
size or			
Screen			
size			
Gallery	To access the My Files/Pictures direc-		
	tory to view pictures.		
Internal	To switch between the assistant lens		
view or	and the main lens.		
External			
view			

Opera- tion	Description	Opera- tion	Description	
Capture mode	 To set the shooting mode to: Single mode: To take one picture each time. 2×2: To take four pictures each time. 3×3: To take nine pictures each time. After taking the photos, you can send a picture, set a picture as the wallpaper, and edit a picture. For details, refer to "Operations After Taking a Picture" on page 74. 	Set as	Set as To set: Size: To set the picture resolution. Effects: To set the picture effect to sepia, monochrome or colour. Image quality: To set the image quality to high, medium or low. White balance: To set the white balance to auto, fluorescent, incandescent, daylight, cloudy or night mode. Flashlight: To enable or disable the flash. Save to: To set the storage position of pictures to the phone or the memory card. Shutter tone: To set the shutter tone to dulcet, traditional, hi or silent.	
Self timer	To set the countdown time for the phone to take a picture automatically. After setting this function, you need to press to start the countdown. After 10 seconds, the phone takes a picture automatically.			

Video Camera

Operations After Taking a Picture

In the viewfinder screen, you can press to take a picture.

Pictures taken are auto saved to the **My Files/Pictures** directory.

After taking a picture, you can select **Options** to select:

Opera- tion	Description			
Delete	To delete the picture.			
Send	To send the picture through MMS, post-			
	card, email or Bluetooth.			
Set as	To set the picture as the wallpaper or the			
	image of a contact.			
Edit	To edit the picture.			

Video Camera

You can use your phone to record a video.
In the main menu, select **Entertainment > Camera**> **Options > Video camera** to launch the video camera.

Operations in the Viewfinder Screen

In the viewfinder screen, you can:

Icon	Operation
*	Press the left scroll key or the right scroll
	key to adjust the brightness.
Q	Press the up scroll key or the down
	scroll key to zoom in or zoom out.

In the viewfinder screen, you can select Options to set the following items:

Opera- tion	Description				
Camera	To launch the camera.				
Record	To start recording the video.				
Zoom	To zoom in or zoom out.				
display					
Internal	To switch between the assistant lens				
view/	and the main lens.				
External					
view					

Opera- tion	Description
Gallery	To access the My Files/Videos directory
	to view videos.
Set as	To set the following settings: • Size: To set the video resolution.
	 Quality: To set the video quality to high, medium or low.
	 Frame rate: To set the frame rate to high, medium or low.
	 Audio: To enable or disable the audio recording.
	• Duration: To set the video duration to 50 KB, 100 KB, 200 KB, 300 KB,
	3 minutes, 5 minutes or no limit.
	Save to: To set the save to position of videos to the phone or the memory card.
	 Reset: To restore to the factory settings.
Memory	To view the total duration of all videos,
size	the used space, and the free space.

Operations During Recording

In the viewfinder screen, you can press to start recording the video.

During the recording, you can execute the following operations:

Opera- tion	Description
Pause/	To pause and then to start recording
Record	again.
Cancel	To cancel the recording.
Stop	To stop.

Music

Music enables you to manage your music files easily and conveniently. It can play all kinds of music files as well as purchase music, manage the channels and play streaming media. For more details, Please refer to "Music" on page 50.

15 Connections

Your Vodafone 710 provides you with many data communication functions. You can access the **connect** screen by selecting Settings from the main menu. You can synchronise data between your phone and a PC through USB cable or Bluetooth. You can transfer files between your phone and other Bluetooth devices. You can also use the built-in modem of your phone to establish a dialup connection for your PC to access the Internet.

Bluetooth

You may use the built-in Bluetooth function of your phone to synchronise data between a PC and your phone, or use the built-in modem of your phone to access the Internet with a PC, or exchange data with other Bluetooth devices. You can also talk using the Bluetooth headset or Bluetooth loudspeaker.

Note

The Bluetooth function supported by your Vodafone 710 meets the requirements of Bluetooth Specification 1.1. However, how successfully it works depends upon the compatibility of the Bluetooth devices you

use with it. For more information, refer to the user manuals of related devices, or consult the manufacturer of related devices.

Bluetooth-Based Synchronisation

Your Vodafone 710 can respond to data synchronisation requests from a computer.

With the Bluetooth technology and the Vodafone 710 MOBILE PHONE PC Assistant supplied with your phone, the phone can communicate with a PC. You can backup and edit the contact entries and short messages saved on your phone and SIM card to a PC. You can also synchronise contact entries, schedule events and To Do tasks between your phone and Outlook . In addition, with the Memo Pad of your phone, you can receive and send Outlook mails by Bluetooth.

Follow these steps to operate the Bluetooth synchronisation with your Vodafone 710 phone.

Your PC needs to support Bluetooth function. If not, see page 81 on how to use a USB connection.

- Install the Vodafone 710 MOBILE PHONE PC Assistant supplied with your phone: Insert the disk and select Install Vodafone PC Assistant and then click Continue. Then follow the guide to complete the installation.
- Select Settings > Connectivity > Bluetooth > Switch On/Off > On to enable the Bluetooth function
- 4 Run the driver software for Bluetooth on the PC, and pair the Vodafone 710 phone. After the PC detects and recognises the Vodafone 710 serial port service, activate the Bluetooth serial port service of the Vodafone 710.
- Run the Vodafone 710 MOBILE PHONE PC
 Assistant on the PC.
- 6 Now you can operate the synchronisation. For details of the operation, refer to the Help of the Vodafone 710 MOBILE PHONE PC Assistant.

The Bluetooth Headset

You can answer a call by a Bluetooth headset or Bluetooth loudspeaker. For details, refer to the corresponding user manual of a Bluetooth headset or loudspeaker.

Select **Settings > Connectivity > Bluetooth** to access the Bluetooth Settings screen.

To use a Bluetooth headset, follow these steps.

- 1 Set the Bluetooth headset to the status for detecting.
- Select Switch On/Off > On from the Bluetooth settings list to enable the device. A Bluetooth device icon appears on the icon bar.
- 3 Select **Devices** and then select **Search**. when the Bluetooth headset has been found, its profile will be displayed in the device list.
- 4 If a Bluetooth headset is detected and recognised for the first time, it should be authenticated by PIN code.

To authenticate the Bluetooth headset, follow these steps.

Bluetooth

- Select the found Bluetooth headset and select Options > Pair.
- Enter the Bluetooth PIN code of the headset. It should be provided by the headset manufacturer.
- 3 Select the paired Bluetooth headset and select Options > Connect.
- 4 If the connection is successful, a headset icon will be shown on the icon bar.

Note

Only when authentication is needed should the Bluetooth headset be set to the status for detecting. Once the headset has been authenticated, you just need to turn on your Bluetooth headset. For more information, refer to the user manual of your Bluetooth headset

Now you can use the Bluetooth headset as the connection has been established between your phone and the Bluetooth headset. On the **Devices** screen, the left function key is for the following operations.

- Connect/Disconnect: You can connect or disconnect the Bluetooth headset with your phone.
- Pair: You can enter the Bluetooth PIN code of the headset.
- Set as trusted/Set as untrusted: You can set the Bluetooth headset as a trusted device. You do not need to authenticate this device for the next time of use.
- · Rename: You can rename the Bluetooth headset.
- Delete: You can delete the Bluetooth headset from the device list.
- Device Details: You can view the detailed information of the Bluetooth headset.
- Search: You can search for another Bluetooth device.

Note

- The device list will keep the information of all authenticated devices. If your Bluetooth headset is used for the first time, you need to enter the PIN code for authentication.
 From then on you can use the headset directly.
- The way for using a Bluetooth loudspeaker is similar to that for a Bluetooth

headset. For details, refer to the user manual supplied with your Bluetooth loudspeaker.

· Only when the connection has been established can you adjust the volume of the Bluetooth headset

Bluetooth-Based Data Transfer

You can exchange data between your Bluetooth phone and other Bluetooth devices.

- Select Switch On/Off > On from the Bluetooth settings list to enable the Bluetooth device. A Bluetooth device icon will appear on the icon bar.
- Select Devices list.
- Select Options > Search to search a Bluetooth device. When a Bluetooth device is found for the first time, authentication is required.

To authenticate this Bluetooth device, follow these steps.

- 1 Select the Bluetooth device that you want to exchange data with and then select Options > Pair
- The initiator of the data exchange enters the PIN code that is agreed by the two parties to invite the other party to establish a connection. On the invitation, the invited party should enter the same PIN code
- 3 If the authentication is successful, the connection will be established between your phone and the other Bluetooth device.

Now you can exchange data between your phone and the other Bluetooth device

Note

- · Data that can be exchanged by Bluetooth includes the contact entries. Memo Pad records, schedule events and To Do tasks. as well as such media files as images, videos, music, ringtones and various data files in Mv Files.
- If you want to exchange data between your phone and another device, that

Bluetooth

- device must support Bluetooth and the Bluetooth function must be enabled.
- In transferring data by Bluetooth, the received contacts, Memo Pad records, schedule events and To Do tasks will be saved to Contacts, Memo Pad and To Do, and other media and data files will be saved to the corresponding folders in My Files.

Bluetooth-Based Internet Access

Connecting your phone to a PC through Bluetooth function enables the PC to use the phone as a modem to establish a dial-up connection to the Internet. (This is particularly useful for laptops.)

You can create Bluetooth-based Internet access through the Vodafone Mobile Phone PC Assistant supplied with Vodafone 710, or the built-in Internet wizard of the Windows operating system, or the Internet wizard supplied with the Bluetooth drive suite of the PC.



Windows 2000 and Windows XP are supported.

Accessing the Internet using the Vodafone Mobile Phone PC Assistant

To access the Internet by Bluetooth using the Vodafone Mobile Phone PC Assistant, follow these steps.

- Make sure that your PC supports the Bluetooth function and your SIM card allows the Internet access service.
- Select Settings > Connectivity > Modem and set the port to Modem via Bluetooth.
- 3 Select Settings > Connectivity > Bluetooth > Switch On/Off > On.
- Make sure that Bluetooth modem is in Device Manager/Modem of your PC. Run the driver program for Bluetooth on your PC, and then pair the Vodafone 710 phone. After the PC has detected the Vodafone 710 dial-up network service you can activate this service.

5 Install the Vodafone Mobile Phone PC Assistant. After inserting the CD, follow the prompts to complete the install.

To run the Vodafone 710 Dial-up Internet, follow these steps.

- 1 Run the Vodafone 710 Dial-up Internet on the PC Click OK
- Select Add and then click OK to confirm.
- 3 Select the modem that is connected by Bluetooth.
- Select Vodafone Phone Connection to make a dial-up connection.

Other Bluetooth Operations

You can execute the basic settings for the Bluetooth functions.

Select Settings > Connectivity > Bluetooth for the following operations.

- · Switch On/Off: Used to set the Bluetooth device to On or Off.
- · Search new devices: Used to search for new Bluetooth devices.

- · Devices: Used to view all detected Bluetooth devices.
- · Visibility: Used to set whether your phone can be found by other devices when the Bluetooth function is enabled
- Rename my device: Used to rename your phone.
- My device information: Used to view the detailed information of your phone, such as the device name and device address

USB

You can synchronise data between your phone and PC, surf the Internet with your phone and read the memory card by USB cable.



. To use USB cable, please strictly obey the following rules. Otherwise, your phone or PC may be damaged. To connect your phone with a PC through USB cable, first connect the USB connector to your phone, and then connect the other end of the cable to the PC.To disconnect your phone from the PC, first disable the

USB

Vodafone 710 MOBILE PHONE PC Assistant, then disconnect the USB connector from the PC, and finally disconnect the USB cable from your phone.

- If the PC cannot recognise your phone when connecting through the USB cable, power off and restart the PC and then retry.
- Do not plug the USB cable in and out of your Vodafone 710 frequently.

USB-Based Synchronisation

Your Vodafone 710 supports the synchronisation requests from a PC to your phone.

With USB cable and Vodafone 710 MOBILE PHONE PC Assistant, your phone can communicate with a PC. You can back up the contact entries and messages saved on your phone and the SIM card to a PC. You can also synchronise contacts, schedule events and To Do tasks between your phone and Outlook

To operate the USB-based synchronisation with your phone, follow these steps.

- Install the Vodafone 710 MOBILE PHONE PC Assistant. After inserting the CD, follow the guide to complete the install.
- Select Settings > Connectivity > Modem from the main menu of your phone and set the port to Modem via USB.
- 3 Connect your phone and PC with the USB cable.
- 4 Run the Vodafone 710 MOBILE PHONE PC Assistant on the PC.
- 5 Now you can operate the synchrotion.

Note

While running the *Vodafone 710 MOBILE PHONE PC Assistant* on the PC, you can select **Tools > Options > Communication**, and then click **Default** to connect the corresponding port of the USB modem.

Accessing the Internet by USB

Connecting your phone and PC with the USB cable enables the PC to use the phone as a modem to establish a dial-up connection to the Internet.

To access the Internet by using the USB, two ways are available: use the Vodafone 710 Mobile Phone PC Assistant supplied with your Vodafone 710 or to use the Windows operating system to set the service.

Note

Only Windows 2000 and Windows XP are supported.

- Using Vodafone 710 Mobile Phone PC Assistant to Access the Internet through USB Cable To use the Vodafone 710 Mobile Phone PC Assistant supplied with your Vodafone 710 phone to access the Internet, follow these steps:
- 1 Select Settings > Connectivity > Modem and set the port to Modem via USB.
- Install Vodafone Mobile Phone PC Assistant After inserting the CD, follow the prompts to complete the install.
- Connect your phone and PC with USB cable.
- Confirm the USB device is shown in **Device** Manager/Port of your PC.

To run the Vodafone 710 Dial-up Internet, follow these steps.

- 1 Run the Vodafone 710 Dial-up Internet on the PC Select **OK**
- Select **Add** and then press **OK** to confirm.
- Select the USB port that is connected by USB cable.
- Enter the information provided by the service provider for a dial-up connection in Connect Setting and then click OK.
- 5 Select Vodafone Phone Connection on your PC to create the dial-up connection.
- Using Windows Operation System to Set the Function of Accessing the Internet with Your Phone

You can also connect your phone and PC with the USB cable, and then use the Windows operating system to set the function of accessing the Internet by your phone.

1 Select Settings > Connectivity > Modem and set the port to Modem via USB.

SD Card Reader

- Install the Vodafone 710 Mobile Phone PC Assistant. After inserting the CD, follow the prompts to complete the install.
- 3 Connect your phone and PC with the USB cable.
- 4 Make sure that the USB modem is in the **Device** manager/Modem of your PC.
- Select Start > Control Panel > Network Connections and then click Create a new connect. Then you can follow the guides to create a new connection.
- Use the new connection to make the dial-up connection.

SD Card Reader

You can read the files saved in the SD card by USB cable

To use the SD card reader, follow these steps.

- 1 Insert the SD card to your phone.
- 2 Connect your phone and PC with the USB cable.

Found New Hardware is displayed on your PC, and an icon for the mobile memory drive appears.

Note

The function of SD card reader and the other functions using the USB cable are incompatible. If you enable the SD card reader, the other functions using the USB cable will become unavailable. If you need to recover the other USB functions, disable the card reader function.

Note on Connection Functions

Some of the data connection functions of the Vodafone 710 cannot be used simultaneously. See the following chart for which features are supported.

	Bluetooth headset	Bluetooth Modem	Bluetooth- based syn- chronization	SD card reader	USB Modem	USB-based synchroniza- tion
SD card reader	Supported	Supported	Supported	-	Unsupported	Unsupported
USB Modem	Supported	Unsupported	Supported	Unsupported	Supported	Unsupported
USB-based synchroniza-tion	Supported	Supported	Unsupported	Unsupported	Unsupported	-
Bluetooth headset	-	Unsupported	Unsupported	Supported	-	Supported
Bluetooth Modem	Unsupported	-	Supported	Supported	Unsupported	Supported
Bluetooth- based syn- chronization	Unsupported	Supported	-	Supported	Supported	Unsupported

16_{DRM}

Vodafone 710 supports "Forward Lock", "Combined delivery" and "Separated delivery" modes defined in OMA DRM1.0. Digital rights management (DRM) is the solution for preventing the digital contents from piracy and protecting the provider's interests. Here, the digital contents include Java applications and the multimedia contents such as image, audio and video. By attaching the copyright information, the file contents are protected by DRM. The DRM function controls the usages of these contents on terminals. The attached copyright information may restrict the using times, using period and validity period in accessing the protected contents. If the protected content cannot be accessed, it indicates that the corresponding copyright is overdue or used up. You

You can find out the copyright information by viewing the properties of the DRM files. You can also delete, switch and update the copyright.

need to re-purchase the right for the DRM files in

"Separated delivery" mode.

The status of the files supported by the Vodafone 710 are listed as follows. The icon for the files protected

by "Forward lock" is the same as that for common files.

Туре	Common File	File with Copyright Protected File	
		Usable	Unusable
		(Green	(Red lock)
		lock)	
Audio	₽.	₽	4
Video		<u> </u>	<u> </u>
Image	.	E	E

Select Settings > Security > DRM setting, Enter the correct phone password and press to confirm, and you can delete all the rights.

17 Settings

You can access the Settings screen by selecting - from the main menu.

Phone Settings

You can change the settings of the phone, including Profiles, Phone language, Input language, Sound, Date and time, Date format, Shortcut, as well as Auto ON and OFF.

Profiles

You can select different profiles for the phone to fit different environmental situations.

The Vodafone 710 provides profiles including Normal, Meeting, Silent, Activity, Car, Headset, Offline, Sleep and My profile.

You can select a profile and then press or select **Options > On** to activate this profile. You can also select **Options > Edit** to edit the following settings for this profile.

 Voice call tone: To select the standard ringtones or the downloaded ringtones for incoming voice calls.

- Video call tone: To select the standard ringtones provided by the phone or select downloaded tones for incoming video calls.
- Message tone: To select the standard ringtones or the downloaded ringtones for new messages.
- Tone volume: To set the volume of incoming call rings and incoming message rings.
- Earpiece volume: To adjust the volume of the earpiece.
- Key tone volume: To adjust the volume for the keybeep.
- Game volume: To set the volume of the game.
- Alert volume: To set the volume of the prompt tone.
- Vibration: To enable or disable the vibration prompt mode.
- Flip tone: To set whether to make a sound when you open/close your phone.
- Power On/Off tone: To set whether to make a sound when you power your phone on/off.

Note In the standby mode, you can press and hold of to switch the current profile to the

Phone Settings

meeting profile. If the current profile is offline, you cannot execute this function.

Phone Language

Your Vodafone 710 supports several languages. Select **Settings > Phone setup > Phone language** to select a language. Besides these languages, you can also select **Auto**. This option is used to set the phone language to be the same as that used in your SIM card.

Input Language

The option is used to set the language used to enter text.

Sound and Vibration

The option is used to change the settings for the normal profile.



You can select **Phone setup > Profiles** to set the sounds for the phone.

Date and Time

This option is used to change the system time for the phone.

Date Format

This option is used to change the display format of the date of the phone. Three formats are available: yy/mm/dd, mm/dd/yy, dd/mm/yy.

Shortcuts

This option is used to assign the most used functions to the scroll keys as shortcut keys.

Auto ON and OFF

This option is used to set your phone to power on or off automatically.

- In the Auto ON and Auto OFF screen, enable this function and set the cycle for Auto On and Auto Off respectively. Then select Save.
- 2 Set the time for **Auto On** and **Auto Off**, and then select **Option** > **Save** to save your settings.

Display Settings

You can change the settings for the phone display.

Wallpaper

You can select wallpaper and set the wallpaper layout for the home screen.

Your Vodafone 710 provides standard wallpaper for you to select. You can also select downloaded wallpaper by selecting **Download**.

Brightness

This option is used to set the brightness of the screen.

Keypad Backlight

This option is used to turn the keypad backlight on or off.

Backlight Time

This option is used to set the backlight delay time for the screen. Four options are available: 5 seconds, 15 seconds, 30 seconds and Always on..

LCD Sleep Delay

This option is used to set the duration between backlight off and LCD off.

Greeting Message

This option is used to enter a greeting message that appears on the screen when you power on your phone.

Message Settings

You can change the message settings including SMS, MMS, Email, Push messages, Voice mail No. and Common phrase.

Call Settings

You can change the settings for making calls.

Call Forwarding

It is used to forward incoming calls.

In the main screen, select Settings > Call setup > Call forwarding.

Call Settings

- Select the forwarding condition from All calls, If out of reach, If busy, and If not answer.
- Then select the forwarding type from Voice call, Fax call, Data call and All services. You will have the following options.
 - Activate: Enter the forwarded-to number and press to forward incoming call to this number.
 - · Deactivate: Cancel call forwarding settings.
 - Check status: Check the status of call forwarding service.

Alternatively, you can select **Disable all** and then select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then press to disable all call forwarding services of this type.

Call barring

It is used to set the call barring mode for the phone. Select **Call setup > Call barring** for the following options:

Barring outgoing calls:

- Select the barring condition from All outgoing calls, International calls, and International calls except home.
- Then select the barring type from Voice call, Fax call, Data call, and All services. You will have the following options:
 - Activate: Enter the call barring password and press to enable this service.
 - Deactivate: Enter the call barring password and press a to disable this service.
 - Check status: Check the status of the call barring service.

Barring incoming calls:

- 1 Select the barring condition from All incoming calls and Incoming calls when abroad.
- Then select the barring type from Voice call, Fax call, Data call, and All services. You will have the following options:

- Activate: Enter the call barring password and press to enable this service.
- Deactivate: Enter the call barring password and press at to disable this service.
- Check status: Check the status of the call barring service

Disable All

Select one type from **Voice call**, **Fax call**, **Data call** and **All services**, and then enter the call barring password. Press to cancel all call barring services of each type.

Call Waiting

It is used to enable or disable the call waiting function. You can also view whether the call waiting function is enabled by checking the status.

The call waiting function is network-dependent. For more information, please consult Vodafone.

Auto Redial

This function is used to auto redial the dialed number if the dialing failed.

Answer Mode

It is used to set the mode for answering an incoming call. Three options are available: **Open flip, Any key** and **Send key**.

Auto answer

It is used to select auto answering for incoming calls. Select **Call setup > Auto answer** for the following options.

- Immediate answer: To answer an incoming call immediately.
- Message: To auto send a text message that is preset and chosen from the "Common phrases" to the current caller.
- Recorded message: To answer an incoming call by auto playing a recorded message.
- · Disable: To disable the auto answer function.

Calling ID

With this function, you can select whether your phone number is shown on the called phone.

Video Call Settings

Select **Call setup > Calling ID**, and then you will have the following options.

- Auto: Whether your phone number will be shown on the called phone depends on the network.
- Send: Your phone number will be shown (if the network supports this service).
- Hide: Your phone number will not be shown (if the network supports this service).

Select Line

It is used to set the call line for your phone. Two options are available: **Line 1 and Line 2**.

My Number

With this function, you can save your own phone numbers on the SIM card. You can select **Options** to edit or delete the records

Call Barring Password

This function is used to change the password for call barring.

Select **Call barring password** from the **Call setup** screen. Now you can change the call barring password.

- 1 Enter the old call barring password. (This is provided by your network operator if it is the first time for you to change the password.)
- 2 Enter a new call barring password.
- 3 Enter once again the new call barring password, and then press .

Prompt to save

This function is used to prompt whether to save the number when there is an incoming call. You can enable or disable this function.

Video Call Settings

You can change the settings for the Video Call function, including Picture in Picture, Switch display, Image quality, Forbid video, Forbid audio, Auto voice call, Send freeze image and Auto answer.

Picture in Picture

During a video call, your image can be shown on your phone. You can select P-in-P function to arrange the positions of your image. You can also close your image window.

Switch Display

During a video call, you can switch between image windows: to display your image in the small window and the other party's image in the large window, or display yours in the large window and the other party's in the small window.

Image Quality

You can set the image quality for video. Two options are available: Best quality and More smooth.

Forbid Video

You can open or close the video channel during a video call

Forbid Audio

You can open or close the audio channel during a video call.

Auto Voice Call

If the other party's phone does not support the Video Call service, this function enables the phone to automatically switch to making a voice call.

Send Freeze Image

The option is used to select a file and send it to the other party when you hold a video call.

Auto Answer

This function is used to auto answer an incoming video call. You can enable or disable this function.

Connectivity

The data connection function provides you with many data communication functions. You can synchronize data between your phone and a PC through a USB cable or Bluetooth, Your PC can use the built-in.

Network Setup

modem of your phone to access the Internet. For detailed information, refer to "Connections" on page 76.

Network Setup

You can change the settings for the network.
Select **Settings > Network** for following options:
Mode, Network selection, Cell information, My public land mobile network (PLMN) list.

Security Setup

You can change settings related to the phone security.

Select **Security** from **Settings**, and then enter the correct phone password if you have set the phone lock to **On** (the initial password is 0000). Then press

to display the following security setting items:

Reset

This option is used to reset your phone to the factory settings.

Password lock

This option is used to enable or disable the "Phone lock" and "PIN lock".

Operation		Description
Phone lock	1	Select Phone lock.
IOCK	2	Press the up/down scroll key to select On or Off .
	3	Enter the phone password.
PIN locked	1	Select PIN lock.
	2	Press the up/down scroll key to select On or Off .
	3	If the desired status is the same as the current status, just press . Conversely, you need to select the desired status and then enter the PIN code.

Change password

You can modify the phone password and PIN code.

- 1 Select Security > Change password.
- Select one item from Change phone password, Change PIN, Change PIN2.
- 3 Enter the old password (The initial phone password of the Vodafone 710 is 0000).
- 4 Enter a new password;
- 5 Enter the new password again to confirm.

Note

- To modify the PIN code, you must set the "PIN locked" to "On" first.
- If you enter the wrong PIN or PIN2 three times, the SIM card will be locked. You need the PUK or PUK2 code to unlock the SIM card. If you enter the wrong PUK or PUK2 code 10 times in total, the SIM card will be locked permanently.
- PUK or PUK2 code are delivered with the SIM card. If you do not have one or forget it, contact Vodafone service provider.

Fixed Dialer Number

If your SIM card supports the FDN (Fixed Dialer Number) function, you can set limits for phone numbers

Select **Security > Fixed dialer number** for the following options.

- On: You can dial the numbers in the FDN list only.
 To enable this function, you need to enter the correct PIN2 code.
- · Off: You can dial any number.
- FDN list: It is used to view the fixed dialer numbers.
 To create, edit or delete it, you need to enter the correct PIN2 code.

DRM setting

For details, please refer to "DRM" on page 86.

Fixed SIM card

You use this function to unlock the phone with the operator. Before accessing the setting page, you need to enter the password. For the password and other information, contact your network provider.

18Warnings and Precautions

Electronic Device

Turn off your phone near high-precision electronic devices. The phone may affect the performance of these devices.

Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where phone use is prohibited.

When using your phone near someone who is suffering from a heart disease, turn down the ringtone volume or vibration properly so that it does not affect the person.

Area with Inflammables/Explosives

In any area with inflammables and explosives, turn off your phone and do not take out, install or charge the battery, to avoid the risk of causing either an explosion and a fire. Areas with inflammables and explosives include, but are not limited to:

- · Petrol stations
- Areas for storing fuels (such as the bunk under the deck of a ship)
- Devices/Vehicles for transporting and storing fuels or chemical products
- Areas with chemical substances and particles (such as: granules, dust, metal powder) in the air

- · Areas with the sign "Explosives"
- Areas with the sign "Turn off bi-directional wireless equipment"
- Areas where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe local laws and regulations on phone use. To avoid a traffic accident, do not use your phone while driving.
- Secure the phone in its holder. Do not place the phone on the seat or other places where it can come loose in a sudden stop or collision.
- Use the phone only when the vehicle is stopped in a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use only in emergency.
- Do not place the phone over the airbag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the airbag inflates.

Observe the rules and regulations of airline companies. When boarding or approaching a plane, turn off the phone and take out the battery. In areas where phone use is prohibited, turn off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Turn off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the phone, fire, or explosion may occur.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.

Child Safety

- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheating, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt, to avoid damaging the phone while seated.
- Do not hold the phone to your ear when it rings or when you have switched on the handsfree function.
 Otherwise you risk serious permanent damage to your hearing.

Child Safety

- Put your phone, battery, and charger in places out of the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings.
 Otherwise, if it is swallowed, one of these could get jammed in the gullet or cause suffocation.

Operating Environment

- The phone, battery, and charger are not waterresistant. Keep them dry. Protect the phone, battery and charge from water or vapour. Do not touch the phone with a wet hand. Otherwise, short-circuiting and malfunction of the phone or electric shock may occur.
- Do not use the phone in dusty, damp and dirty places or places with a magnetic field. Otherwise, malfunction of the circuit may occur.
- · Protect your phone from moisture and humidity.
- Do not turn the phone on or off when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least 0,6 inch (1,5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as feeling sick or queasy) after playing games on your phone for a long time, please go to see a doctor immediately.
- On a day with thunderstorms, do not use your phone outdoors or when it is being charged.

Cleaning and Maintenance

- Do not touch the antenna when a call is going on.
 Touching the antenna may affect call quality and cause the phone to operate with more power. As a result, the talk time and standby time are shortened.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.

Cleaning and Maintenance

- Before you clean or maintain the phone, turn off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuiting of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charger. Otherwise, part damage or a fire can be caused. We recommend cleaning the phone and the charger with a piece of soft antistatic cloth that is a little wet.

- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the local authorized service center for help.

Environmental Protection

Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of an exhausted battery or old phone in municipal waste.

: This symbol indicates that the equipment carrying this mark must NOT be thrown into general waste but should be collected separately and properly recycled under local regulations.

Emergency Call

Emergency Call

You can use your phone for emergency calls. However, connections cannot be guaranteed in all conditions. You should never rely solely on a mobile phone for essential communications.

Battery

- Use the battery approved by the manufacturer only.
 Otherwise, it may explode.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not expose the battery to extreme temperatures, never above +60°C (+140°F).
- Do not connect the two poles of the battery with conductors such as cables, jewelleries or any other metal material. Otherwise, the battery will be shortcircuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheating, fire, or explosion may occur.

- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then consult an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin
- The battery is not fully charged when delivered.
 Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least two hours. You can only charge the battery in a temperature range of +5°C to 45°C.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and refer to a doctor immediately.
- If there is battery deformation, colour change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheating, explosion, or fire may occur.

- When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not remove the battery while the phone is turned on.
- If you have not used the battery for a long time, charge it and then store it at normal temperature.

Charger

- Use only the charger approved by the phone manufacturer. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the power cord at once. Otherwise, electric shock, short-circuiting of the charger, or fire may occur.
- Keep the charger dry. If water or other liquid leaks into the charger, electrical leakage or other faults may occur.

- Do not use the charger in a dusty or damp environment.
- Keep the power cord away from any heating appliance
- Ensure the charger is plugged into the power socket when charging the battery. Improper insertion may result in electric shock, fire, or explosion.
 To unplug the charger, pull the plug out rather than yanking the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise, electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- If any liquid such as water leaks into the charger, remove the plug of the charger from the socket

Using the USB Cable

immediately. Otherwise, overheating, fire and other malfunction may occur.

Using the USB Cable

To use the USB cable, please strictly obey the following rules. Otherwise, your phone or PC may be damaged:

- To connect your phone and PC with the USB cable, first connect to the phone, and then connect to the PC.
- During the process of communication between your phone and PC, it is strictly forbidden to plug in or pull out the USB cable.
- To disconnect your phone and PC from the USB cable, disconnect from PC first, and then disconnect from the phone.

Rules for Exposure to RF Energy

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed

by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.663 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body. In this case, the highest tested SAR value is 0.422 W/kg**.

As SAR is measured utilizing the devices highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of

calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (http://www.who.int/emf) or Company Vodafone (http://www.vodafone.com).

*The tests are carried out in accordance with international guidelines for testing.

**For body worn operation, this phone has been tested and meets RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1,5 centimeters (0,6 inch) from the body. Use of other accessories may not ensure compliance with RF exposure guidelines

19 Acronyms and Abbreviations

DCF	DRM Content Format
DRM	Digital Rights Management
FDN	Fixed Dial Number
GPRS	General Packet Radio Service
GSM	Global System for Mobile communica-
	tion
OTA	Over-The-Air
PIN	Personal Identification Number
PLMN	Public Land Mobile Network
PUK	PIN Unblocking Key
SD	Secure Digital Card
SAR	Specific Absorption Rate
STK	SIM Tool Kit
URL	Universal Resource Locator
USB	Universal Serial Bus
WAP	Wireless Application Protocol
WCDMA	Wideband code division multiple access

20 Appendix

The Vodafone 710 supports image files, video files and audio files of many formats. For details, see the following table.

File type	Formats
Image	JPG, PNG, BMP, GIF, BCI, WBMP, SVG,
	and SVGZ.
Audio	MP3, AAC/AAC+, AMR, MID, WAV
	(ADPCM), MMF, QCP, and XMF/DLS.
Video	3GP,MP4, 3G2, and PMD.

Index

54 92 92 88 88 91
91
91
70
72
94
101
9
10
98
99
49
93
26
36
32
43
42
24
57
88
88
68
25
89

71	Keypad Backlight	89
95	Keypad View	3
68	Keys	3
96	LCD Sleep Delay	89
46	Loading the Battery	9
43	Loading the SIM Card	11
100	Loading the SIM Card	11
67	Loading/Removing a Memory Card	12
99		
95	Making a Video Call	15
95	Making a Voice Call	15
93	Making Calls from Call Log	30
93	Making Calls from the Contacts	24
2	Making or Answering Calls	15
69		
50	Managing a Group	28
69	Marking/Unmarking a Contact	26
63	Memo Pad	60
71	Memory Card	65
67	Message Settings	89
89		
28	MMS Settings	41
6	Multimedia Messages	36
96	Music Store	52
17	Music	63
93	Music	75
22	My Business Card	27
88	My Music	50
68	My Number	92
	95 95 68 46 43 100 99 95 95 93 2 69 50 63 71 67 89 28 66 96 17 93 28 88	95 Keypad View 68 Keys 96 LCD Sleep Delay 46 Loading the Battery 43 Loading the SIM Card 100 Loading the SIM Card 67 Loading/Removing a Memory Card 99 Mailboxes 95 Making a Video Call 95 Making a Voice Call 93 Making Calls from Call Log 93 Making Calls from the Contacts 2 Making or Answering Calls 69 Making Voice Calls Using SDN 50 Managing a Group 69 Marking/Unmarking a Contact 63 Memo Pad 71 Memory Card 67 Message Settings 89 MMS Mailboxes 28 MMS Settings 89 MMS Settings 60 Music Store 117 Music 93 Music 22 My Business Card 88 My Music

My Wishlist	52	Profiles	
Network Setup	94	Prompt Interface for a Schedule	55
New Schedule	54	Prompt Interface for an Alarm	53
New Tasks	58	Prompt to save	
Note on Connection Functions	84	Push Inbox Settings	48
Operating Environment	98	Push Inbox	
Operations After Taking a Picture	74	Removing the SIM Card	12
Operations During a Call	17	Reset	
Operations During Playing	64	Ringtones	62
Operations During Recording	59	Rules for Exposure to RF Energy 1	02
Operations During Recording		Screen Operations During Playing	51
Operations in the Viewfinder Screen	72	SD Card Reader	84
Operations in the Viewfinder Screen	74	Searching for a Contact	25
Operations on the Task Prompt Interface	59	Security Setup	94
Operations	17	Select Line	92
Other Operations for the Homepage	66	Send Freeze Image	93
Other Operations on the Tasks Screen	58	Sending a Contact	26
Other Operations	30	Service Dial Number	61
Other	65	Setting Alarm Clocks	53
Packing List	1	Settings	28
Password lock	94	Shortcuts	88
Phone Language	88	Side View	. 2
Phone Settings	87	SIM ToolKit	53
Picture in Picture	93	SMS Mailboxes	32
Pictures	62	SMS Settings	36
Playlist	51	Sound and Vibration	88
Powering On		Speed Dialing Numbers	27
Powering On/Off	13	Stopping the Alarm Clock	54
Preparations Before Recording	59	Stopwatch	60

Storage Environment	97
Switch Display	93
Switching Off	13
Symbol Input Method	22
Synchronise	
T9 Input Method	
Tasks	
Text Messages	32
The Bluetooth Headset	
Timer	61
Traditional Input Method	21
Traffic Safety	
Wallpaper	
Video Call Settings	92
Video Camera	
Videos	
Viewing Push Messages	47
Viewing the Memory Status	
Unit Converter	
Unloading the Battery	9
Vodafone live!	
Vodafone Radio DJ	51
Voice Mail Number	
Voice Recorder	59
World Time	60
USB	81
USB-Based Synchronisation	82
Using the USB Cable	
Your Phone	2

WARRANTY TERMS AND CONDITIONS

- 1. Vodafone undertakes the warranty of Mobile Phone for a period of two (2) years from the date of Purchase by the original owner (not transferable) under normal use.
- 2.Battery and Charger have a limited warranty for six(6) months against manufacturing defects. And other accessories have a limited warranty for three(3) months against manufacturing defects.
- 3. This Warranty does not cover damage resulting from;
- a) Normal wear & tear of the equipment;
- b) Defects and damages due to the equipment being used other than its normal and customary manner;
- c) An unauthorized disassembly, repair, alteration or modifications being carried out;
- d) Misuse, abuse, negligence or accident howsoever caused:
- e) Defects or damage arising from improper testing, operation, maintenance, installation, or any alteration or modification:
- f) Defects or damage due to spillage of food or liquids, corrosion, rust or the use of wrong voltage;
- g)Scratches or damage to plastic surfaces and all other externally exposed parts that are due to normal customer use:
- 4.The Handset requiring service/repair must be delivered at the user's cost.
- 5. This warranty will be null and void in any of the following events:

- a) If the serial number or warranty seal on the equipment has been defaced or removed
- b) If any term contained in this warranty has been altered or modified in any way without prior written consent of Vodafone
- 6. The limited warranty extends only to customer who purchase the product in one of the countries (or areas) set forth at the end of this document
- The limited warranty is only valid in Vodafone's intended country (or area) of sale of the Product.
- 7.If the product is return to Vodafone after the expiration of the warranty period, Vodafone's normal service policies shall apply and the Consumer will be charged accordingly.
- a) Vodafone neither assumes for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.
- b)All warranty information, product features and specifications are subject to change without notice.
- 8. THIS WARRANTY IS IN LÏEU OF ANY AND OTHER WARRANTIES EXPRESSED OR IMPLIED, SPECIFICALLY INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. VODAFONE ASSUMES NO LIABILITY FOR THE BREACH OF THE WARRANTY BEYOND CORRECTING THE BREACH IN THE MANNER DESCRIBED ABOVE. IN NO EVENT SHALL VODAFONE BE LIABLE FOR CONSEQUENTIAL LOSS OR DAMAGES, INCLUDING LOSS OF

USE OR LOSS OF PROFITS RESULTING FROM THE PRODUCT.

WARRANTY CARD

Model:

IMEI Number:

Serial Number:

Purchase Date: Owner's Name:

Owner's Name.

Mobile Number:

Address:

Email Address:

Authorized Distributor's Stamp

For the limited warranty provided by Vodafone to be valid, the distributor's stamp must be endorsed on this card.