



LGC WIRELESS

InterReach™ Unison

**Installation, Operation,
and Reference Manual**



LGC WIRELESS

InterReach™ Unison

**Installation, Operation,
and Reference Manual**

This manual is produced for use by LGC Wireless personnel, licensees, and customers. The information contained herein is the property of LGC Wireless. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of LGC Wireless.

LGC Wireless reserves the right to make changes, without notice, to the specifications and materials contained herein, and shall not be responsible for any damages caused by reliance on the material as presented, including, but not limited to, typographical and listing errors.

Your comments are welcome – they help us improve our products and documentation. Please address your comments to LGC Wireless, Inc. corporate headquarters in San Jose, California:

Address 2540 Junction Avenue
 San Jose, California
 95134-1902 USA

 Attn: Marketing Dept.

Phone 1-408-952-2400

Fax 1-408-952-2410

Help Hot Line 1-800-530-9960 (U.S. only)
 +1-408-952-2400 (International)
 +44(0) 1223 597812 (Europe)

Web Address <http://www.lgcwireless.com>

e-mail info@lgcwireless.com
 service@lgcwireless.com

Copyright © 2001 by LGC Wireless, Inc. Printed in USA. All rights reserved.

Trademarks

All trademarks identified by [™] or [®] are trademarks or registered trademark of LGC Wireless, Inc. All other trademarks belong to their respective owners.

Limited Warranty

Seller warrants articles of its manufacture against defective materials or workmanship for a period of one year from the date of shipment to Purchaser, except as provided in any warranty applicable to Purchaser on or in the package containing the Goods (which warranty takes precedence over the following warranty). The liability of Seller under the foregoing warranty is limited, at Seller's option, solely to repair or replacement with equivalent Goods, or an appropriate adjustment not to exceed the sales price to Purchaser, provided that (a) Seller is notified in writing by Purchaser, within the one year warranty period, promptly upon discovery of defects, with a detailed description of such defects, (b) Purchaser has obtained a Return Materials Authorization (RMA) from Seller, which RMA Seller agrees to provide Purchaser promptly upon request, (c) the defective Goods are returned to Seller, transportation and other applicable charges prepaid by the Purchaser, and (d) Seller's examination of such Goods discloses to its reasonable satisfaction that defects were not caused by negligence, misuse, improper installation, improper maintenance, accident or unauthorized repair or alteration or any other cause outside the scope of Purchaser's warranty made hereunder. Notwithstanding the foregoing, Seller shall have the option to repair any defective Goods at Purchaser's facility. The original warranty period for any Goods that have been repaired or replaced by seller will not thereby be extended. In addition, all sales will be subject to standard terms and conditions on the sales contract.

Table of Contents

SECTION 1	General Information	1-1
	1.1 Purpose and Scope	1-2
	1.2 Conventions in this Manual	1-3
	1.3 Acronyms in this Manual	1-4
	1.4 Standards Conformance	1-6
	1.5 Related Publications	1-6
SECTION 2	InterReach™ Unison System Description	2-1
	2.1 System Overview	2-1
	2.2 System Hardware	2-3
	2.3 System Software	2-4
	2.4 System OA&M Capabilities	2-5
	2.4.1 Configuring, Maintaining, and Monitoring Unison Locally ..	2-6
	2.4.2 Monitoring and Maintaining Unison Remotely	2-7
	2.4.3 Using Alarm Contact Closures	2-8
	2.5 System Connectivity	2-9
	2.6 System Operation	2-10
	2.7 System Specifications	2-11
	2.7.1 Physical Specifications	2-11
	2.7.2 Environmental Specifications	2-12
	2.7.3 Operating Frequencies	2-12
	2.7.4 RF End-to-End Performance	2-13
SECTION 3	Unison Main Hub	3-1
	3.1 Main Hub Front Panel	3-3
	3.1.1 Optical Fiber Uplink/Downlink Ports	3-4
	3.1.2 Communications RS-232 Serial Connector	3-4
	3.1.3 LED Indicators	3-6
	3.2 Main Hub Rear Panel	3-8
	3.2.1 Main Hub Rear Panel Connectors	3-9
	3.2.1.1 N-type Female Connectors	3-9

	3.2.1.2 9-pin D-sub Connector	3-9
3.3	Faults and Warnings	3-10
3.4	Main Hub Specifications	3-11
SECTION 4	Unison Expansion Hub	4-1
4.1	Expansion Hub Front Panel	4-3
4.1.1	RJ-45 Connectors	4-4
4.1.2	Optical Fiber Uplink/Downlink Connectors	4-4
4.1.3	LED Indicators	4-5
4.2	Expansion Hub Rear Panel	4-7
4.3	Faults and Warnings	4-8
4.4	Expansion Hub Specifications	4-9
SECTION 5	Unison Remote Access Unit	5-1
5.1	Remote Access Unit Connectors	5-3
5.1.1	SMA Connector	5-3
5.1.2	RJ-45 Port	5-3
5.2	LED Indicators	5-3
5.3	Faults and Warnings	5-4
5.4	Remote Access Unit Specifications	5-5
SECTION 6	Installing Unison Components	6-1
6.1	Installation Requirements	6-1
6.1.1	Component Location Requirements	6-1
6.1.2	Cable and Connector Requirements	6-1
6.1.3	Neutral Host System Requirements	6-1
6.1.4	Distance Requirements	6-2
6.2	Safety Precautions	6-3
6.2.1	Installation Guidelines	6-3
6.2.2	General Safety Precautions	6-3
6.2.3	Fiber Port Safety Precautions	6-4
6.3	Preparing for System Installation	6-5
6.3.1	Pre-Installation Inspection	6-5
6.3.2	Installation Checklist	6-6
6.3.3	Tools and Materials Required	6-8
6.3.4	Optional Accessories	6-8
6.4	Unison Component Installation Procedures	6-9
6.4.1	Installing RAUs and Passive Antennas	6-11
6.4.1.1	Installing RAUs in a Neutral Host System	6-12
6.4.2	Installing Expansion Hubs	6-13
6.4.2.1	Troubleshooting Expansion Hub LEDs During Installation	6-18
6.4.2.2	Installing Expansion Hubs in a Neutral Host System	6-18
6.4.3	Installing a Main Hub	6-19

6.4.4 Installing Main Hubs in a Neutral Host System 6-20

6.5 Starting and Configuring the System 6-21

6.5.1 Troubleshooting Main Hub LEDs During Installation 6-24

6.6 Interfacing a Main Hub to a Base Station or Roof-top Antenna 6-26

6.6.1 Connecting Multiple Main Hubs 6-30

6.7 Connecting Contact Alarms to a Unison System 6-34

6.7.1 Alarm Source 6-35

6.7.2 Alarm Sense 6-38

SECTION 7 Installing and Using the AdminManager Software 7-1

7.1 Installing the AdminManager Software 7-2

7.1.1 PC/Laptop Requirements 7-2

7.2 Installation Wizard 7-12

7.2.1 Step 1: Verify Hardware 7-13

7.2.1.1 Description of Step 1 Panel 7-14

7.2.2 Step 2: Set Operation Band 7-15

7.2.2.1 Description of Step 2 Panel 7-17

7.2.3 Step 3: Configure System Parameters 7-19

7.2.3.1 Description of Step 3 Panel 7-20

7.2.4 Step 4: Final System Test 7-21

7.2.4.1 Description of Step 4 Panel 7-22

7.2.5 Finish Panel 7-23

7.2.5.1 Description of Finish Panel 7-23

7.3 Configuration & Maintenance Panel 7-24

7.3.1 Window Description 7-25

7.3.2 Options when Connected Locally 7-28

7.3.3 Read-Only Options when Connected Remotely 7-33

7.4 Upgrading Firmware 7-37

7.5 System Status Tree 7-38

7.5.1 System Status Tree Icons 7-38

SECTION 8 Designing a Unison Solution 8-1

8.1 Maximum Output Power per Carrier at RAU 8-3

8.2 Estimating RF Coverage 8-19

8.2.1 Path Loss Equation 8-20

8.2.2 Coverage Distance 8-21

8.2.3 Examples of Design Estimates 8-27

8.3 System Gain 8-31

8.3.1 System Gain (Loss) Relative to ScTP Cable Length 8-31

8.4 Link Budget Analysis 8-32

8.4.1 Elements of a Link Budget for Narrowband Standards 8-33

8.4.2 Narrowband Link Budget Analysis for a Microcell Application 8-35

8.4.3	Elements of a Link Budget for CDMA Standards	8-37
8.4.4	Spread Spectrum Link Budget Analysis for a Microcell Application	8-40
8.4.5	Considerations for Re-Radiation (over-the-air) Systems	8-44
8.5	Optical Power Budget	8-45
8.6	Connecting a Main Hub to a Base Station	8-47
8.6.1	Attenuation	8-48
8.6.2	Uplink Attenuation	8-49
8.6.2.1	Uplink Attenuation Exception: CDMA	8-50
8.7	Designing for a Neutral Host System	8-51
8.7.1	Capacity of the Unison Neutral Host System	8-51
8.7.2	Example Unison Neutral Host System	8-52
SECTION 9	Replacing Unison Components in an Operating System	9-1
9.1	Replacing an RAU	9-1
9.2	Replacing an Expansion Hub	9-3
9.3	Replacing a Main Hub	9-4
SECTION 10	Maintenance, Troubleshooting, and Technical Assistance	10-1
10.1	Maintenance	10-1
10.2	Troubleshooting	10-2
10.2.1	Fault Indications	10-3
10.2.2	Warning Indications	10-8
10.3	LED Troubleshooting Guide	10-10
10.3.1	Troubleshooting Main Hub LEDs During Normal Operation	10-11
10.3.2	Troubleshooting Expansion Hub LEDs During Normal Operation	10-12
10.4	Technical Assistance	10-14
APPENDIX A	Cables and Connectors	A-1
A.1	Cat-5/6 Cable (ScTP)	A-1
A.2	Fiber Optical Cables	A-3
A.3	Coaxial Cable	A-3
APPENDIX B	Compliance	B-1
B.1	Safety Requirements	C-1
B.2	Radio/EMC Requirements	C-2
APPENDIX C	Glossary	C-1

List of Figures

Figure 2-1	OA&M Communications	2-5
Figure 2-2	Local System Monitoring and Reporting	2-6
Figure 2-3	Remote System Monitoring and Reporting	2-7
Figure 2-4	Unison's Double Star Architecture	2-9
Figure 3-1	Main Hub in a Unison System	3-1
Figure 3-2	Main Hub Block Diagram	3-2
Figure 3-3	Main Hub Front Panel	3-3
Figure 3-4	Standard Serial Cable Pinout	3-4
Figure 3-5	Null Modem Cable Pinout	3-5
Figure 3-6	Main Hub Rear Panel	3-8
Figure 4-1	Expansion Hub in a Unison System	4-1
Figure 4-2	Expansion Hub Block Diagram	4-2
Figure 4-3	Expansion Hub Front Panel	4-3
Figure 4-4	Expansion Hub Rear Panel	4-7
Figure 5-1	Remote Access Unit in a Unison System	5-1
Figure 5-2	Remote Access Unit Block Diagram	5-2
Figure 6-1	Simplex Base Station to a Main Hub	6-27
Figure 6-2	Duplex Base Station to a Main Hub	6-28
Figure 6-3	Connecting a Main Hub to Multiple Base Stations	6-29
Figure 6-4	Connecting Two Main Hubs to a Simplex Repeater or Base Station	6-30
Figure 6-5	Connecting Two Main Hubs to a Duplex Repeater or Base Station	6-31
Figure 6-6	Connecting MetroReach to Unison	6-35
Figure 6-7	Connecting a BTS to Unison	6-36
Figure 6-8	Daisy-Chained Alarm Source Cable	6-37
Figure 6-9	Connecting LGCell to Unison	6-38
Figure 6-10	Alarm Sense Adaptor	6-39
Figure 7-1	PC Connected to Main Hub	7-1
Figure 7-2	AdminManager Start Window	7-10
Figure 7-3	Step 1: Verify Hardware Panel	7-13

Figure 7-4 Step 2: Set Operation Band 7-15
Figure 7-5 Step 3: Configure System Parameters 7-19
Figure 7-6 Step 4: Final System Test 7-21
Figure 7-7 Finish Panel 7-23
Figure 7-8 Configuration & Maintenance Window 7-24
Figure 7-9 Firmware Update Window 7-37
Figure 8-1 Determining Path Loss between the Antenna and the Wireless Device 8-19
Figure 1 Losses to be Included in Optical Power Budget 8-45
Figure 8-2 Connecting Main Hubs to a Simplex Base Station 8-47
Figure 8-3 Main Hub to Duplex Base Station or Repeater Connections 8-48
Figure A-1 Wiring Map for Cat-5/6 Cable A-2

List of Tables

Table 2-1	Cellular RF End-to-End Performance	2-13
Table 2-2	iDEN RF End-to-End Performance	2-13
Table 2-3	GSM RF End-to-End Performance	2-14
Table 2-4	EGSM RF End-to-End Performance	2-14
Table 2-5	DCS RF End-to-End Performance	2-15
Table 2-6	PCS RF End-to-End Performance	2-15
Table 2-7	W-CDMA RF End-to-End Performance	2-16
Table 3-1	Main Hub Status LED States	3-6
Table 3-2	Main Hub Port LED States	3-7
Table 3-3	Main Hub Specifications	3-11
Table 4-1	Expansion Hub Unit Status and DL/UL Status LED States	4-5
Table 4-2	Expansion Hub Port LED States	4-6
Table 4-3	Expansion Hub Specifications	4-9
Table 5-1	Remote Access Unit LED States	5-3
Table 5-2	Remote Access Unit Specifications	5-5
Table 6-1	Unison Distance Requirements	6-2
Table 6-2	Installation Checklist	6-6
Table 6-3	Tools and Materials Required for Component Installation	6-8
Table 6-4	Optional Accessories for Component Installation	6-8
Table 6-5	Troubleshooting Expansion Hub LEDs During Installation	6-18
Table 6-6	Troubleshooting Main Hub LEDs During Installation Power On	6-24
Table 7-1	Configuration and Maintenance Window Options	7-25
Table 7-2	Frequency Bands Adjacent to System Configured Bands	7-30
Table 7-3	System Status Tree Icons	7-38
Table 8-1	800 MHz (AMPS) Power per Carrier	8-4
Table 8-2	800 MHz (TDMA) Power per Carrier	8-5
Table 8-3	800 MHz (CDMA) Power per Carrier	8-6
Table 8-4	800 MHz (iDEN) Power per Carrier	8-7
Table 8-5	900 MHz (GSM or EGSM) Power per Carrier	8-8

Table 8-6	900 MHz (EDGE) Power per Carrier	8-9
Table 8-7	1800 MHz (GSM) Power per Carrier	8-10
Table 8-8	1800 MHz (EDGE) Power per Carrier	8-11
Table 8-9	1800 MHz (CDMA Korea) Power per Carrier	8-12
Table 8-10	1900 MHz (TDMA) Power per Carrier	8-13
Table 8-11	1900 MHz (GSM) Power per Carrier	8-14
Table 8-12	1900 MHz (CDMA) Power per Carrier	8-15
Table 8-13	1900 MHz (EDGE) Power per Carrier	8-16
Table 8-14	2.1 GHz (WCDMA) Power per Carrier	8-17
Table 8-15	Coaxial Cable Losses	8-19
Table 8-16	Average Signal Loss of Common Building Materials	8-20
Table 8-17	Estimated Path Loss Slope for Different In-Building Environments	8-21
Table 8-18	Frequency Bands and the Value of the first Term in Equation (3)	8-22
Table 8-19	Approximate Radiated Distance from Antenna for 800 MHz Cellular Applications	8-23
Table 8-20	Approximate Radiated Distance from Antenna for 800 MHz iDEN Applications	8-23
Table 8-21	Approximate Radiated Distance from Antenna for 900 MHz GSM Applications	8-24
Table 8-22	Approximate Radiated Distance from Antenna for 900 MHz EGSM Applications	8-24
Table 8-23	Approximate Radiated Distance from Antenna for 1800 MHz DCS Applications	8-25
Table 8-24	Approximate Radiated Distance from Antenna for 1800 MHz CDMA (Korea) Applications	8-25
Table 8-25	Approximate Radiated Distance from Antenna for 1900 MHz PCS Applications	8-26
Table 8-26	Approximate Radiated Distance from Antenna for 2.1 GHz UMTS Applications	8-26
Table 8-27	System Gain (Loss) Relative to ScTP Cable Length	8-31
Table 8-28	Link Budget Considerations for Narrowband Systems	8-33
Table 8-29	Distribution of Power within a CDMA Signal	8-37
Table 8-30	Additional Link Budget Considerations for CDMA Systems	8-38
Table 10-1	Main Hub Faults	10-3
Table 10-2	Expansion Hub Faults	10-5
Table 10-3	Remote Access Unit Faults	10-7
Table 10-4	Main Hub Warnings	10-8
Table 10-5	Expansion Hub Warnings	10-9
Table 10-6	Remote Access Unit Warnings	10-9
Table 10-7	Troubleshooting Main Hub Port LEDs During Normal Operation	10-11
Table 10-8	Troubleshooting Main Hub Status LEDs During Normal Operation	10-11

Table 10-9	Troubleshooting Expansion Hub Port LEDs During Normal Operation	10-12
Table 10-10	Troubleshooting Expansion Hub Status LEDs During Normal Operation	10-13
Table A-1	Cat-5/6 Twisted Pair Assignment	A-1

General Information

This section contains the following subsections:

- Section 1.1 Purpose and Scope 1-2
- Section 1.2 Conventions in this Manual 1-3
- Section 1.3 Acronyms in this Manual 1-4
- Section 1.4 Standards Conformance 1-6
- Section 1.5 Related Publications 1-6

1.1 Purpose and Scope

This document describes the InterReach™ Unison system components and the AdminManager software. Included is information for the installation, operation, and maintenance of the system. Also included is information about how to use the AdminManager software to install and configure the Unison system, as well as to perform other tasks such as change gain settings and check system status.

1.2 Conventions in this Manual

The following table lists the type style conventions used in this manual.

Convention	Description
bold	Used for emphasis
BOLD CAPS	Used to indicate labels on equipment
SMALL CAPS	Used to highlight software window buttons

Measurements are listed first in metric units, followed by U.S. Customary System of units in parentheses. For example:

0° to 45°C (32° to 113°F)

The following symbols are used to highlight certain information as described.

NOTE: This format is used to emphasize text with special significance or importance, and to provide supplemental information.



CAUTION: This format is used when a given action or omitted action can cause or contribute to a hazardous condition. Damage to the equipment can occur.



WARNING: This format is used when a given action or omitted action can result in catastrophic damage to the equipment or cause injury to the user.

Procedure

This format is used to highlight a procedure.

1.3 Acronyms in this Manual

Acronym	Definition
AGC	automatic gain control
ALC	automatic level control
AMPS	Advanced Mobile Phone Service
BTS	base transceiver station
Cat-5/6	Category 5 or Category 6 (twisted pair cable)
CDMA	code division multiple access
CDPD	cellular digital packet data
dB	decibel
dBm	decibels relative to 1 milliwatt
DC	direct current
DCS	Digital Communications System
DL	downlink
EDGE	Enhanced Data Rates for Global Evolution
EGSM	Extended Global Standard for Mobile Communications
EH	Expansion Hub
GHz	gigahertz
GPRS	General Packet Radio Service
GSM	Groupe Speciale Mobile (now translated in English as Global Standard for Mobile Communications)
Hz	hertz
IF	intermediate frequency
iDEN	Integrated Digital Enhanced Network (Motorola variant of TDMA wireless)
LAN	local area network
LO	local oscillator
mA	milliamps
MBS	microcellular base station
MH	Main Hub
MHz	megahertz
MMF	multi-mode fiber
MTBF	mean time between failures
NF	noise figure
nm	nanometer
OA&M	operation, administration, and maintenance

Acronym	Definition
PCS	Personal Communication Services
PLL	phase-locked loop
PLS	path loss slope
RAU	Remote Access Unit
RF	radio frequency
RSSI	received signal strength indicator
SC/APC	fiber optic connector complying with NTT SC standard, angle-polished
SMA	sub-miniature A connector (coaxial cable connector type)
SMF	single-mode fiber
ST	straight tip (fiber optic cable connector type)
ScTP	screened twisted pair
TDMA	time division multiple access
UL	uplink; Underwriters Laboratories
uW	microwatts
UMTS	Universal Mobile Telecommunications System
UPS	uninterruptable power supply
W	watt
W-CDMA	wideband code division multiple access

1.4 Standards Conformance

- Utilizes the TIA/EIA 568-A Ethernet cabling standards for ease of installation (see Appendix B).
- See Appendix B for compliance information.

1.5 Related Publications

- *MetroReach Focus Configuration, Installation, and Reference Manual*; LGC Wireless part number 8500-10
- *LGCell Version 4.0 Installation, Operation, and Reference Manual*; LGC Wireless part number 8100-50
- *OpsConsole User Guide*; LGC Wireless part number 8701-10
- *ARM2000 Installation, Operation, and Reference Manual*; LGC Wireless part number 8305-10
- *LGC Wireless Accessories Catalog*; LGC Wireless part number 8600-10
- *Neutral Host System Planning Guide*; LGC Wireless part number 9000-10

InterReach™ Unison System Description

2.1 System Overview

InterReach™ Unison is an intelligent fiber optic wireless networking system that is designed to handle both wireless voice and data communications and provide high-quality, ubiquitous, seamless access to the Cellular or Personal Communications Services (PCS) network in any public or private facility, including:

- Campus environments
- Airports
- Office buildings
- Shopping Malls
- Hospitals
- Public Facilities (convention centers, sports venues, etc.)

Unlike other wireless distribution alternatives, Unison is an intelligent active system, using microprocessors to enable key capabilities such as software-selectable band settings, automatic gain control, ability to incrementally adjust downlink/uplink gain, end-to-end alarming of all components and the associated cable infrastructure, and a host of additional capabilities.

The Unison system supports major Cellular/PCS standards and air interface protocols in use around the world, including:

- Frequencies: 800 MHz, 900 MHz, 1800 MHz, 1900 MHz, 2100 MHz
- Protocols: AMPS, TDMA, CDMA, DCS, GSM, EGSM, iDEN, CDPD, EDGE, GPRS, WCDMA

Key System Features

- **Superior RF performance**, particularly in the areas of IP3 and noise figure.
- **High downlink composite power** (+26 dBm), IP3 (+38 dBm) and **low uplink noise figure** (22 dB for a system with 8 RAUs), enables support of a large number of channels and larger coverage footprint per antenna.
- The Main Hub and the Expansion Hub are **software configurable**. Thus, the frequency band can be field configured.
- The system supports flexible cabling alternatives, allowing the **use of either multimode or single-mode fiber** (in addition to standard Cat-5 or Cat-6 [Cat-5/6] twisted pair). Cabling type can be selected to meet the resident cabling infrastructure of the facility and unique building topologies.
- **Extended system “reach”**. Using multimode fiber, fiber runs can be as long as 1.5 kilometers. Alternately, with single mode fiber the fiber run can be as long as 6 kilometers (creating a total system “wingspan” of 12 kilometers). And the Cat-5/6 twisted pair cable run can be up to 100 meters recommended maximum (150 meters with RF performance degradation).
- **Flexible RF configuration capabilities**, including:
 - System gain:
 - Ability to manually set gain in 1 dB steps on both downlink and uplink.
 - RAU:
 - RAU uplink and downlink gain can be attenuated 10 dB.
 - Uplink level control protects the system from input overload and can be optimized for either a single operator or multi-operators/protocols.
 - VSWR check on RAU reports if there is a problem with the antenna.
- The system **firmware effectively “future proofs” the product**. When any modifications are made to the product, including the addition of new software capabilities/services, systems that have already been installed can be upgraded simply by downloading new firmware (either locally or remotely).
- **Extensive OA&M capabilities**, including fault isolation to the field replaceable unit, automatic reporting of all warnings and alarms, and user-friendly graphical-user interface OA&M software packages.

2.2 System Hardware

The InterReach Unison system consists of three modular components:

- 19" rack-mountable **Main Hub** (*connects to up to 4 Expansion Hubs*)
 - Converts RF signals to optical on the downlink; optical to RF on the uplink
 - Microprocessor controlled (for alarms, monitoring, and control)
 - Software configurable band
 - Simplex interface to any RF source
 - System master – periodically polls all downstream units (Expansion Hubs/RAUs) for system status, and automatically reports any warnings/alarms
- 19" rack-mountable **Expansion Hub** (*connects to up to 8 Remote Access Units*)
 - Converts optical signals to electrical on the downlink and electrical signals to optical on the uplink
 - Microprocessor controlled (for alarms, monitoring, and control)
 - Software configurable band (based on command from Main Hub)
 - Supplies DC power to RAU
- **Remote Access Unit (RAU)**
 - Converts electrical signals to RF on the downlink; RF to electrical on the uplink
 - Microprocessor controlled (for alarms, monitoring, and control)
 - Protocol/band specific units

The minimum configuration of a Unison system is one Main Hub, one Expansion Hub, and one RAU (1-1-1). The maximum configuration of a system is one Main Hub, four Expansion Hubs, and 32 RAUs (1-4-32). Multiple systems can be combined to provide larger configurations.

2.3 System Software

The AdminManager software runs on a Laptop PC which is either directly connected to the DB-9 RS-232 male connector on the Main Hub's front panel or is remotely communicating through a modem that is connected to the DB-9 connector on the Main Hub's rear panel. The AdminManager communicates with one Main Hub, and its downstream units, at a time.

- Connected locally, you can access the Installation Wizard which lets you configure a newly installed system, or access the Configuration Panel which lets you query system status, configure a newly added or swapped unit, or change system parameters.
- Connected remotely, AdminManager initiates communications with the Main Hub. You can access a read-only Configuration Panel which lets you check system status to help you determine if an on-site visit is required.

Refer to Section 7 for information about installing and using the AdminManager software.

Alternately, an LGC Wireless OA&M software application called the OpsConsole is available separately. The OpsConsole lets you manage, monitor, and maintain multiple sites and systems from a centralized location. This software is described in a separate LGC document (part number 8701-10).

2.4 System OA&M Capabilities


The InterReach Unison is microprocessor controlled and contains firmware which enables much of the OA&M functionality.

Complete alarming, down to the field replaceable unit (i.e., Main Hub, Expansion Hub, Remote Access Unit) and the cabling infrastructure, is available. All events occurring in a system, defined as a Main Hub and all of its associated Expansion Hubs and Remote Access Units, are automatically reported to the Main Hub. The Main Hub monitors system status and communicates that status using the following methods:

- Normally closed (NC) alarm contact closures can be tied to standard NC alarm monitoring systems or directly to a base station for alarm monitoring.
- The Main Hub's front panel serial port connects directly to a PC (for local access) or to a modem (for remote access).

Figure 2-1 OA&M Communications

AdminManager can only initiate communications with a remotely installed system; it cannot receive modem calls. Use the OpsConsole for monitoring and receiving communications from remotely installed systems.

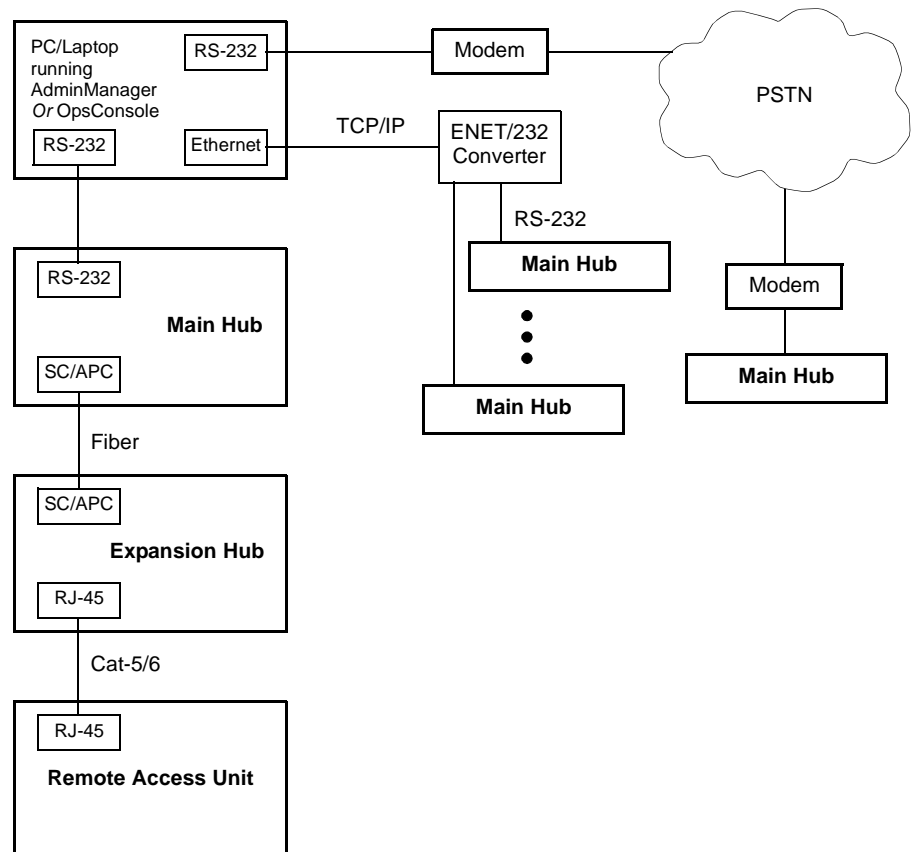


2.4.1 Configuring, Maintaining, and Monitoring Unison Locally

Each Main Hub, Expansion Hub, and RAU in the system constantly monitors itself and its downstream units for internal fault and warning conditions. The results of the monitoring are stored in memory and compared against new results.

The Expansion Hubs monitor their RAUs and store their status in memory. The Main Hub monitors its Expansion Hubs and stores their status and the status of the RAUs in its memory. When a unit detects a change in status, a fault or warning is reported. Faults are indicated locally by red status LEDs, and faults and warnings are reported to the Main Hub and displayed on a PC/laptop, via the Main Hub's serial port, that is running the AdminManager software.

Using AdminManager locally, you can install a new system or new components, change system parameters, and query system status. The following figure illustrates how the system reports its status to AdminManager.

Figure 2-2 Local System Monitoring and Reporting

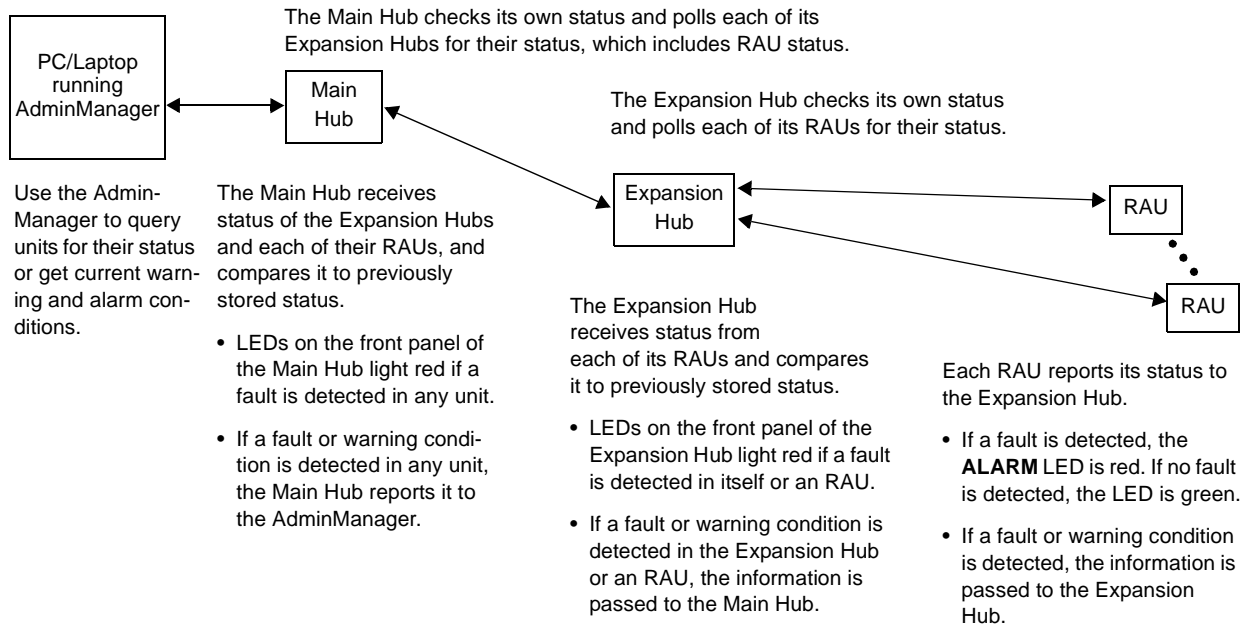


2.4.2 Monitoring and Maintaining Unison Remotely

When monitoring the system remotely, any change of state within the system causes the Main Hub to initiate an automatic call-out and report the system status to the OpsConsole. If the host does not acknowledge the connection, the Main Hub issues an automatic call-out every 15 minutes until an auto acknowledge or standard request for status (initiated by the host) is received.

You can use AdminManager to query system status via a read-only Configuration & Maintenance panel. You cannot change system parameters or configure system components remotely with AdminManager. (Refer to Figure 2-1 on page 2-5.)

The following figure illustrates how the system reports its status to the OpsConsole.

Figure 2-3 Remote System Monitoring and Reporting

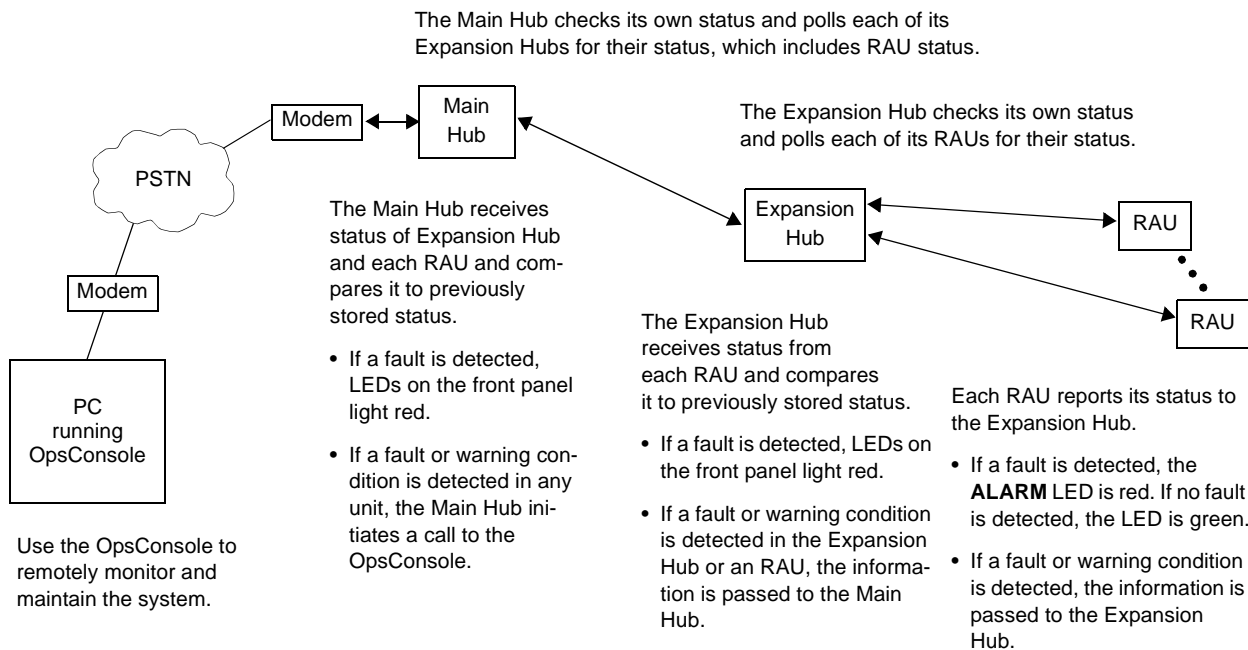

Refer to the *OpsConsole User Guide*, LGC Wireless part number 8701-10, for more information about using the OpsConsole for system monitoring.

2.4.3 Using Alarm Contact Closures

The DB-9 female connector on the rear panel of the Main Hub can be connected to a local base station or to a daisy-chained series of Unison, LGCell, and/or MetroReach Focus systems.


- When you connect MetroReach Focus or a BTS to Unison, the Unison Main Hub is the output of the alarms (alarm source) and Focus is the input (alarm sense).
- When you connect LGCell to Unison, the Unison Main Hub is the input of the alarms (alarm sense) and the LGCell is the output (alarm source).

Refer to Section 6.7 on page 6-34 for information on how to connect other equipment to a Unison system for monitoring.

2.5 System Connectivity


The double star architecture of the Unison system, illustrated in the following figure, provides excellent system scalability and reliability. The system requires only one pair of fiber for 8 antenna points. This makes any system expansion, such as adding an extra antenna for additional coverage, potentially as easy as pulling an extra twisted pair (instead of pulling additional fiber).

Figure 2-4 Unison's Double Star Architecture

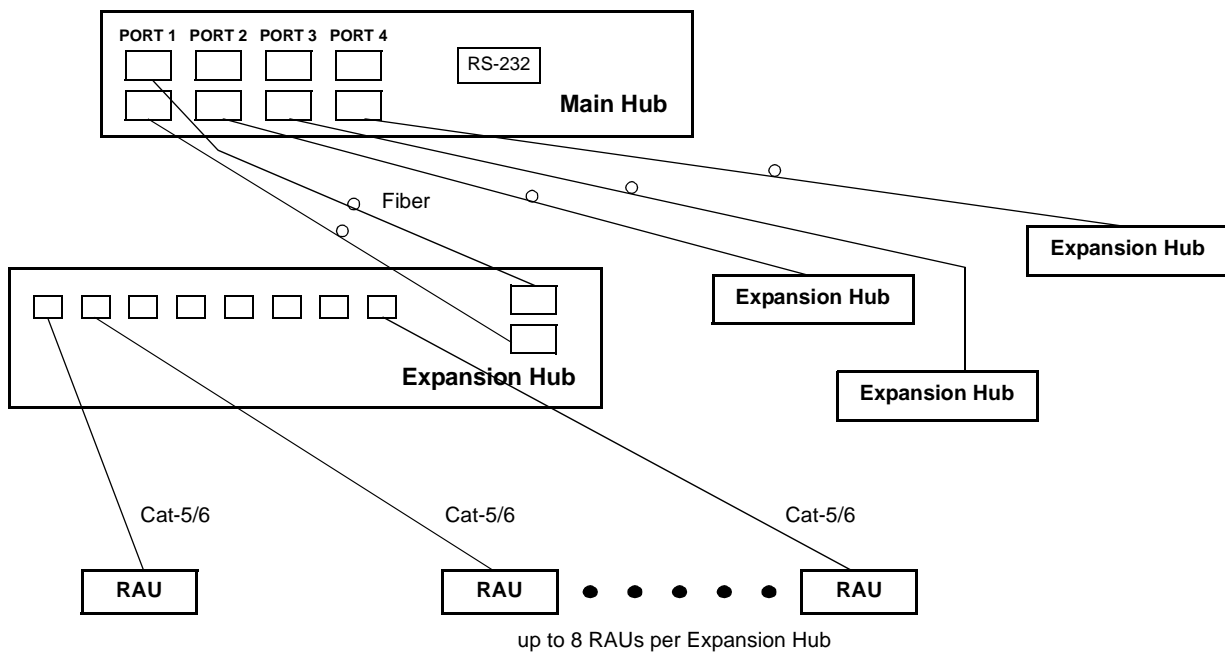


2.6 System Operation

• Downlink (Base Station to Wireless Devices)

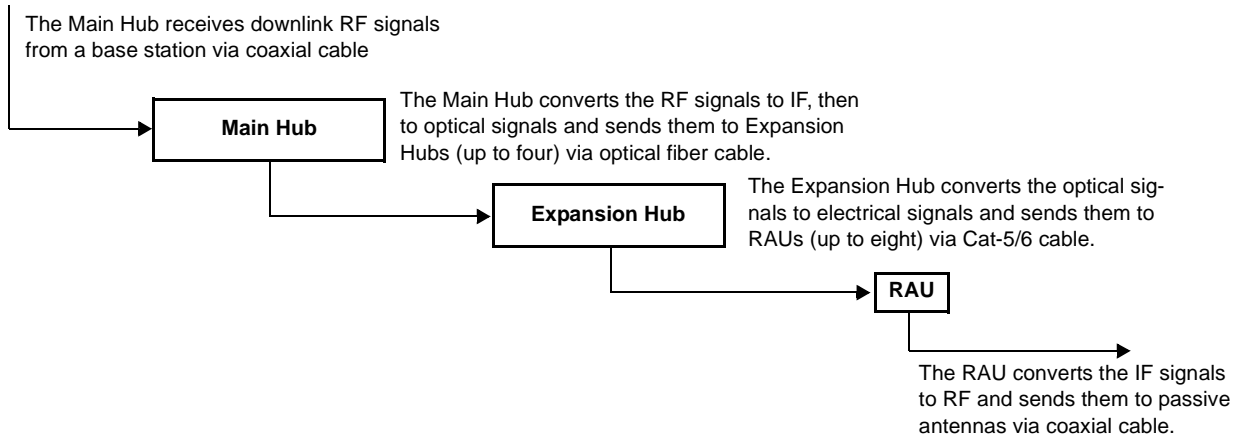

• Uplink (Wireless Devices to Base Station)

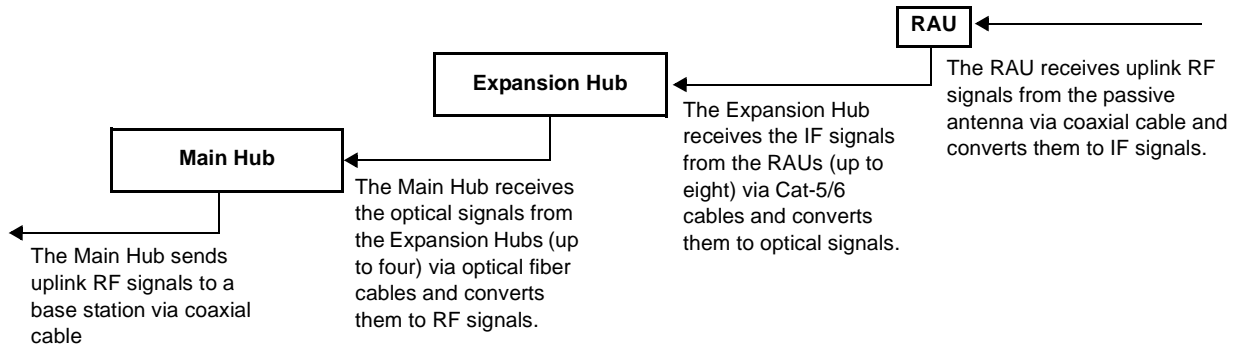

2.7 System Specifications

2.7.1 Physical Specifications

Parameter	Main Hub	Expansion Hub	Remote Antenna Unit
RF Connectors	2 N-type, female	8 shielded RJ-45, female (Cat-5/6)	1 RJ-45, female (Cat-5/6) 1 SMA, male (coaxial)
External Alarm Connector (contact closure)	1 9-pin D-sub, female	—	—
Serial Interface Connector	1 9-pin D-sub, male	—	—
Fiber Connectors	4 Pair, SC/APC	1 Pair, SC/APC	—
LED Alarm and Status Indicators	Unit Status (1 pair): • Power • Main Hub Status Downstream Unit Status (1 pair per fiber port): • Link • E-Hub/RAU	Unit Status (1 pair): • Power • E-Hub Status Fiber Link Status (1 pair): • DL Status • UL Status RAU/Link Status (1 pair per RJ-45 port): • Link • RAU	Unit Status (1 pair): • Link • Alarm
AC Power (Volts)	Rating: 100–240V, 0.5A, 50–60 Hz Operating Range: 85–250V, 2.4–0.8A, 47–63 Hz	Rating: 115/230V, 5/2.5A, 50–60 Hz Operating Range: 90–132V/170–250V auto-ranging, 2.2–1.5A/1.2–0.8A, 47–63 Hz	—
DC Power (Volts)	—	—	36V
Power Consumption (W)	30	260 (includes 8 RAUs)	11
Enclosure Dimensions* (height × width × depth)	44.5 mm × 438 mm × 305 mm (1.75 in. × 17.25 in. × 12 in.)	89 mm × 438 mm × 305 mm (3.5 in. × 17.25 in. × 12 in.)	44 mm × 305 mm × 158 mm (1.7 in. × 12 in. × 6.2 in.)
Weight	< 3 kg (< 6.5 lb)	< 5 kg (< 11 lb)	< 1 kg (< 2 lb)
MTBF	106,272 hours	78,998 hours	282,207 hours

*Excluding angle-brackets for 19" rack mounting of hubs.

2.7.2 Environmental Specifications

Parameter	Main Hub and Expansion Hub	RAU
Operating Temperature	0° to +45°C (+32° to +113°F)	-25° to +45°C (-13° to +113°F)
Non-operating Temperature	-20° to +85°C (-4° to +185°F)	-25° to +85°C (-13° to +185°F)
Operating Humidity; non-condensing	5% to 95%	5% to 95%

2.7.3 Operating Frequencies

Freq. Band	Unison Band	Description	RF Passband	
			Downlink (MHz)	Uplink (MHz)
PCS	PCS1	A & D Band	1930–1950	1850–1870
PCS	PCS2	D & B Band	1945–1965	1865–1885
PCS	PCS3	B & E Band	1950–1970	1870–1890
PCS	PCS4	E & F Band	1965–1975	1885–1895
PCS	PCS5	F & C Band	1970–1990	1890–1910
DCS	DCS1	DCS1 Band	1805–1842.5	1710–1747.5
DCS	DCS2	DCS2 Band	1842.5–1880	1747.5–1785
DCS	DCS3	DCS3 Band	1840–1875	1745–1780
Cellular	CELL	–	869–894	824–849
iDEN	iDEN	–	851–869	806–824
EGSM	EGSM	–	925–960	880–915
GSM	GSM	–	935–960	890–915
UMTS	UMTS1	–	2110–2145	1920–1955
UMTS	UMTS2	–	2125–2160	1935–1970
UMTS	UMTS3	–	2135–2170	1945–1980

2.7.4 RF End-to-End Performance

Table 2-1 Cellular RF End-to-End Performance

Parameter	Typical	Link	
		UL	DL
Average gain with 75 m Cat-5/6 at 25°C (77°F)*	15 dB	✓	✓
Uplink Ripple with 75 m Cat-5/6	3 dB	✓	
Downlink Ripple with 75 m Cat-5/6	2 dB		✓
Output IP3	38 dBm		✓
Input IP3†	-16 dBm	✓	
Output 1 dB Compression Point	26 dBm		✓
AMPS output power per carrier when 30 carriers are present	0.7 dBm		✓
TDMA output power per carrier when 16 carriers are present	4.0 dBm		✓
CDMA output power per carrier when 6 carriers are present	7.8 dBm		✓
Noise Figure 1 MH-1 EH-8 RAUs	16 dB	✓	
Noise Figure 1 MH-4 EHs-32 RAUs	22 dB	✓	

*System output gain: 0 to 15 dB, adjustable in 1 dB steps.

The gain of individual RAUs can be attenuated 0 to 10 dB, adjustable in one step.

†For two tones into one RAU, IP3 higher in other circumstances.

Table 2-2 iDEN RF End-to-End Performance

Parameter	Typical	Link	
		UL	DL
Average gain with 75 m Cat-5/6 at 25°C (77°F)*	15 dB	✓	✓
Uplink Ripple with 75 m Cat-5/6	3 dB	✓	
Downlink Ripple with 75 m Cat-5/6	2 dB		✓
Output IP3	38 dBm		✓
Input IP3	-16 dBm	✓	
Output 1 dB Compression Point	26 dBm		✓
Output power per carrier when 6 carriers are present	6.4 dBm		✓
Noise Figure 1 MH-1 EH-8 RAUs	17 dB	✓	
Noise Figure 1 MH-4 EHs-32 RAUs	23 dB	✓	

*System output gain: 0 to 15 dB, adjustable in 1 dB steps.

The gain of individual RAUs can be attenuated 0 to 10 dB, adjustable in one step.

Table 2-3 GSM RF End-to-End Performance

Parameter	Typical	Link	
		UL	DL
Average gain with 75 m Cat-5/6 at 25°C (77°F)*	15 dB	✓	✓
Uplink Ripple with 75 m Cat-5/6	3 dB	✓	
Downlink Ripple with 75 m Cat-5/6	2 dB		✓
Output IP3	38 dBm		✓
Input IP3	-16 dBm	✓	
Output 1 dB Compression Point	26 dBm		✓
GSM output power per carrier when 12 carriers are present	5.0 dBm		✓
Noise Figure 1 MH-1 EH-8 RAUs	17 dB	✓	
Noise Figure 1 MH-4 EHs-32 RAUs	23 dB	✓	

*System output gain: 0 to 15 dB, adjustable in 1 dB steps.
The gain of individual RAUs can be attenuated 0 to 10 dB, adjustable in one step.

Table 2-4 EGSM RF End-to-End Performance

Parameter	Typical	Link	
		UL	DL
Average gain with 75 m Cat-5/6 at 25°C (77°F) *	15 dB	✓	✓
Uplink Ripple with 75 m Cat-5/6	3 dB	✓	
Downlink Ripple with 75 m Cat-5/6	3 dB		✓
Output IP3	38 dBm		✓
Input IP3	-16 dBm	✓	
Output 1 dB Compression Point	26 dBm		✓
GSM output power per carrier when 12 carriers are present	5.0 dBm		✓
Noise Figure 1 MH-1 EH-8 RAUs	16 dB	✓	
Noise Figure 1 MH-4 EHs-32 RAUs	22 dB	✓	

*System output gain: 0 to 15 dB, adjustable in 1 dB steps.
The gain of individual RAUs can be attenuated 0 to 10 dB, adjustable in one step.

Table 2-5 DCS RF End-to-End Performance

Parameter	Typical	Link	
		UL	DL
Average gain with 75 m Cat-5/6 at 25°C (77°F)*	15 dB	✓	✓
Uplink Ripple with 75 m Cat-5/6	5.5 dB	✓	
Downlink Ripple with 75 m Cat-5/6	3 dB		✓
Output IP3	36.5 dBm		✓
Input IP3	-16 dBm	✓	
Output 1 dB Compression Point	24.5 dBm		✓
GSM output power per carrier when 16 carriers are present	5.0 dBm		✓
Noise Figure 1 MH-1 EH-8 RAUs	17 dB	✓	
Noise Figure 1 MH-4 EHs-32 RAUs	23 dB	✓	

*System output gain: 0 to 15 dB, adjustable in 1 dB steps.
The gain of individual RAUs can be attenuated 0 to 10 dB, adjustable in one step.

Table 2-6 PCS RF End-to-End Performance

Parameter	Typical	Link	
		UL	DL
Average gain with 75 m Cat-5/6 at 25°C (77°F)*	15 dB	✓	✓
Uplink Ripple with 75 m Cat-5/6	3 dB	✓	
Downlink Ripple with 75 m Cat-5/6	3 dB		✓
Output IP3	36.5 dBm		✓
Input IP3	-16 dBm	✓	
Output 1 dB Compression Point	24.5 dBm		✓
TDMA output power per carrier when 16 carriers are present	4.0 dBm		✓
GSM output power per carrier when 16 carriers are present	4.2 dBm		✓
CDMA output power per carrier when 8 carriers are present	7.8 dBm		✓
Noise Figure 1 MH-1 EH-8 RAUs	16 dB	✓	
Noise Figure 1 MH-4 EHs-32 RAUs	22 dB	✓	

*System output gain: 0 to 15 dB, adjustable in 1 dB steps.
The gain of individual RAUs can be attenuated 0 to 10 dB, adjustable in one step.

Table 2-7 W-CDMA RF End-to-End Performance

Parameter	Typical	Link	
		UL	DL
Average gain with 75 m Cat-5/6 at 25°C (77°F) *	15 dB	✓	✓
Uplink Ripple with 75 m Cat-5/6	3 dB	✓	
Downlink Ripple with 75 m Cat-5/6	3 dB		✓
Output IP3	36.5 dBm		✓
Input IP3	-12 dBm	✓	
Output 1 dB Compression Point	26 dBm		✓
Output power per carrier when 7 carriers are present	TBD		✓
Noise Figure 1 MH-1 EH-8 RAUs	16 dB	✓	
Noise Figure 1 MH-4 EHs-32 RAUs	22 dB	✓	

*System output gain: 0 to 15 dB, adjustable in 1 dB steps.
 The gain of individual RAUs can be attenuated 0 to 10 dB, adjustable in one step.

Unison Main Hub

The Main Hub distributes downlink RF signals from a base station, repeater, or MetroReach Focus system to up to four Expansion Hubs, which in turn distribute the signals to up to 32 Remote Access Units. The Main Hub also combines uplink signals from the Expansion Hubs for a base station or MetroReach Focus system.

Figure 3-1 Main Hub in a Unison System



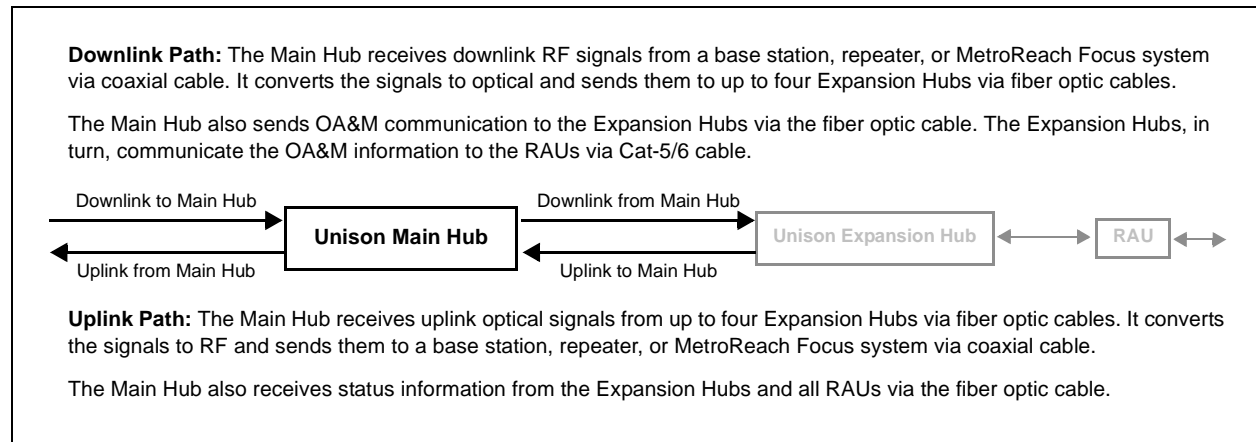


Figure 3-2 Main Hub Block Diagram

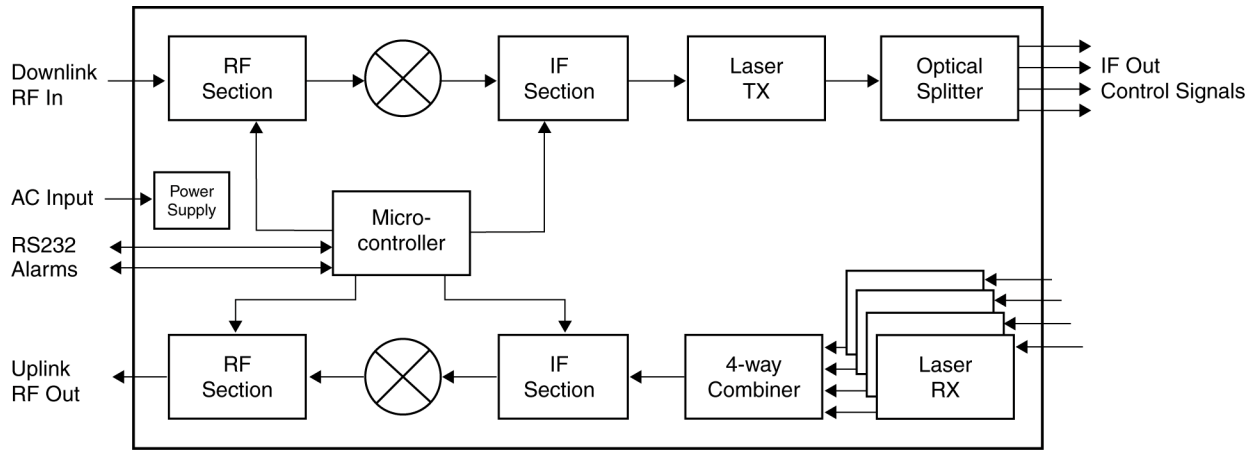

3.1 Main Hub Front Panel

Figure 3-3 Main Hub Front Panel

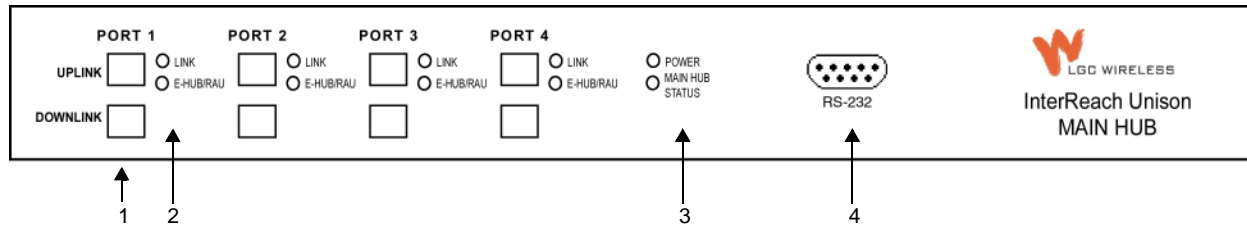

1. Four fiber optic ports (labeled **PORT 1**, **PORT 2**, **PORT 3**, **PORT 4**)
 - One standard female SC/APC connector per port for MMF/SMF input (labeled **UPLINK**)
 - One standard female SC/APC connector per port for MMF/SMF output (labeled **DOWNLINK**)
2. Four sets of fiber port LEDs (one set per port)
 - One LED per port for port link status (labeled **LINK**)
 - One LED per port for downstream unit status (labeled **E-HUB/RAU**)
3. One set of unit status LEDs
 - One LED for unit power status (labeled **POWER**)
 - One LED for unit status (labeled **MAIN HUB STATUS**)
4. One 9-pin D-sub male connector for system communication and diagnostics using a PC/laptop (labeled **RS-232**)

3.1.1 Optical Fiber Uplink/Downlink Ports

The optical fiber uplink/downlink ports transmit and receive optical signals between the Main Hub and up to four Expansion Hub(s) using industry-standard SMF or MMF cable. There are four fiber ports on the front panel of the Main Hub; one port per Expansion Hub. Each fiber port has two female SC/APC connectors:

- **Optical Fiber Uplink Connector**

This connector (labeled **UPLINK**) is used to receive the uplink optical signals from an Expansion Hub.

- **Optical Fiber Downlink Connector**

This connector (labeled **DOWNLINK**) is used to transmit the downlink optical signals to an Expansion Hub.



CAUTION: To avoid damaging the Main Hub's fiber connector ports, use only SC/APC fiber cable connectors.

3.1.2 Communications RS-232 Serial Connector

Remote Monitoring

Use a standard serial cable to connect a modem to the 9-pin D-sub male serial connector for remote monitoring or configuring. The cable typically has a DB-9 female and a DB-25 male connector. The following figure shows the cable pinout.


Figure 3-4 Standard Serial Cable Pinout

DB-9 Connector Pin	DB-25 Connector Pin
1	8
2	3
3	2
4	20
5	7
6	6
7	4
8	5
9	22

Local Monitoring

Use a null modem cable to connect a laptop or PC to the 9-pin D-sub male serial connector for local monitoring or configuring. The cable typically has a DB-9 female connector on both ends. The following figure shows the cable pinout.

Figure 3-5 Null Modem Cable Pinout

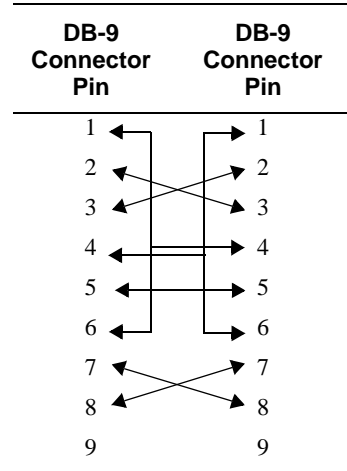

Note that for each connector, pins 1 and 6 are tied together and sent to pin 4 of the opposite connector.

3.1.3 LED Indicators

The unit's front panel LEDs indicate fault conditions and commanded or fault lockouts. The LEDs do not indicate warnings or if the system test has not been performed. Use the LEDs as a go/no go test or as a backup when you are not using AdminManager.

Upon power up, the Main Hub goes through a five-second test to check the LED lamps. During this time, the LEDs blink through the states shown in Table 3-2, letting you visually verify that the LED lamps and the firmware are functioning properly.

NOTE: Refer to Section 10 for troubleshooting using the LEDs.

Unit Status LEDs

The Main Hub status LEDs can be in one of three states, as shown in Table 3-1. These LEDs can be:

- steady green
- steady red
- blinking green/red (alternating green/red)

There is no off state when the unit's power is on.

Table 3-1 Main Hub Status LED States

	LED State	Indicates
● POWER ● MAIN HUB STATUS	Green	<ul style="list-style-type: none"> • Main Hub is connected to power
● POWER ● MAIN HUB STATUS	Green	<ul style="list-style-type: none"> • Main Hub is not reporting a fault; but the system test may need to be performed or a warning condition could exist
● POWER ● MAIN HUB STATUS	Red	<ul style="list-style-type: none"> • Main Hub is connected to power • Main Hub is reporting a fault or lockout condition
● POWER ● MAIN HUB STATUS	Alternating Green/Red	<ul style="list-style-type: none"> • Main Hub is connected to power • Main Hub input signal level too high

Port LEDs

The Main Hub has one pair of fiber port LEDs for each of the four Expansion Hub ports. The LED pairs can be in one of four states, as shown in the following table, in a combination of the following:

- off
- steady green
- steady red


The port LEDs indicate the status of the Expansion Hub and RAUs; however, they do not indicate which particular unit is having a problem (i.e., the Expansion Hub vs. one of the RAUs).

Table 3-2 Main Hub Port LED States

	LED State	Indicates
LINK ○ E-HUB/RAU ○	Off Off	<ul style="list-style-type: none"> • Expansion Hub not connected
LINK ● E-HUB/RAU ●	Green Green	<ul style="list-style-type: none"> • Expansion Hub connected, communications normal • No faults from Expansion Hub or any connected RAU
LINK ● E-HUB/RAU ○	Red Off	<ul style="list-style-type: none"> • Loss of communications with Expansion Hub
LINK ● E-HUB/RAU ●	Green Red	<ul style="list-style-type: none"> • Expansion Hub connected • Fault or lockout reported by Expansion Hub or any connected RAU

3.2 Main Hub Rear Panel

Figure 3-6 Main Hub Rear Panel

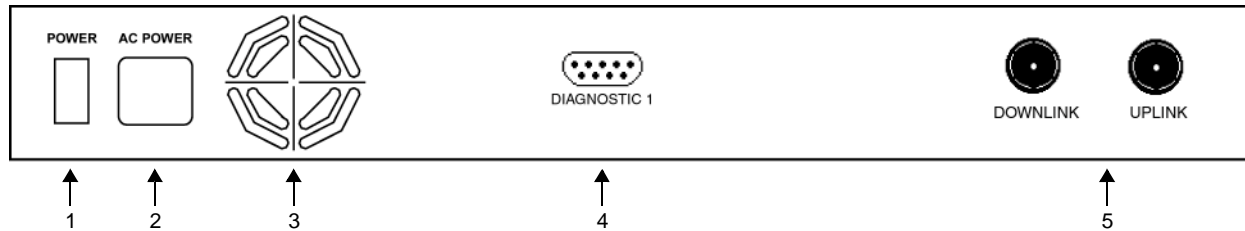

1. Power on/off switch
2. AC power cord connector
3. Fan exhaust vent
4. One 9-pin D-sub female connector for contact closure monitoring (labeled **DIAGNOSTIC 1**)
5. Two N-type, female connectors:
 - Downlink (labeled **DOWNLINK**)
 - Uplink (labeled **UPLINK**)

3.2.1 Main Hub Rear Panel Connectors

3.2.1.1 N-type Female Connectors

There are two N-type female connectors on the rear panel of the Main Hub:

- The **UPLINK** connector transmits uplink RF signals to a repeater, local base station, or MetroReach Focus system.
- The **DOWNLINK** connector receives downlink RF signals from a repeater, local base station, or MetroReach Focus system.

3.2.1.2 9-pin D-sub Connector

The 9-pin D-sub connector (labeled **DIAGNOSTIC 1**) provides contact closure for major error and minor error system alarm monitoring.

The following table lists the function of each pin on the 9-pin D-sub connector. Pin locations are labeled on the figure.

Pin	Function
1	Ground / Alarm Input
2	Reserved
3	Reserved
4	Minor Error (positive connection)
5	Minor Error (negative connection)
6	DC Ground (common)
7	Major Error (positive connection)
8	Alarm Input
9	Major Error (negative connection)

This interface can either generate contact alarms or sense a single external alarm contact.

3.3 Faults and Warnings

The Main Hub monitors and reports changes in system performance to:

- Ensure that Expansion Hubs and Remote Access Units are connected and functioning properly.
- Ensure that the fiber receivers, amplifiers, and IF/RF path in the Main Hub are functioning properly.

The Main Hub periodically polls attached Expansion Hubs and their Remote Access Units for status. Both fault and warning conditions are reported to a connected PC/laptop that is running the AdminManager software or to the optional remote OpsConsole. Only faults are indicated by LEDs.

The faults and warnings that the Main Hub is responsible for monitoring and reporting are listed in Section 10.

3.4 Main Hub Specifications

Table 3-3 Main Hub Specifications

Specification	Description
Enclosure Dimensions (H × W × D):	44.5 mm × 438 mm × 305 mm (1.75 in. × 17.25 in. × 12 in.)
Weight	< 3 kg (< 6.5 lb)
Operating Temperature	0° to +45°C (+32° to +113°F)
Non-operating Temperature	-20° to +85°C (-4° to +185°F)
Operating Humidity, non-condensing	5% to 95%
External Alarm Connector (contact closure)	1 9-pin D-sub, female
Serial Interface Connector	1 9-pin D-sub, male
Fiber Connectors	4 Pair, SC/APC
RF Connectors	2 N-type, female
LED Fault and Status Indicators	Unit Status (1 pair): <ul style="list-style-type: none"> • Power • Main Hub Status Downstream Unit/Link Status (1 pair per fiber port): <ul style="list-style-type: none"> • Link • E-Hub/RAU
AC Power	Rating: 100–240V, 0.5A, 50–60 Hz Operating Range: 85–250V, 2.4–0.8A, 47–63 Hz
Power Consumption (W)	30
MTBF	106,272 hours

Unison Expansion Hub

The Expansion Hub interfaces between the Main Hub and the Remote Access Unit(s) by converting optical signals to electrical signals. It also supplies the DC power to operate the Remote Access Unit(s).

Figure 4-1 Expansion Hub in a Unison System



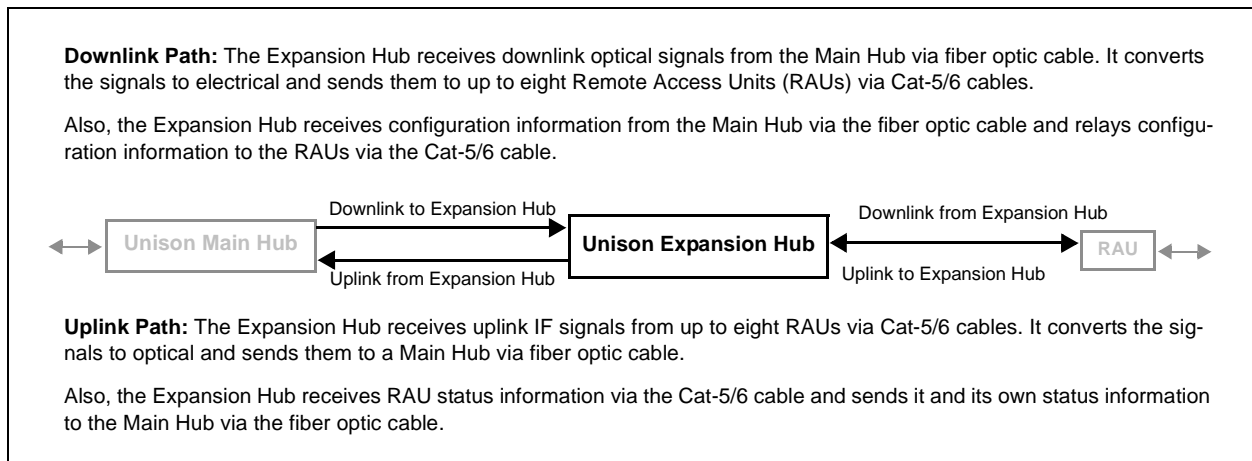


Figure 4-2 Expansion Hub Block Diagram

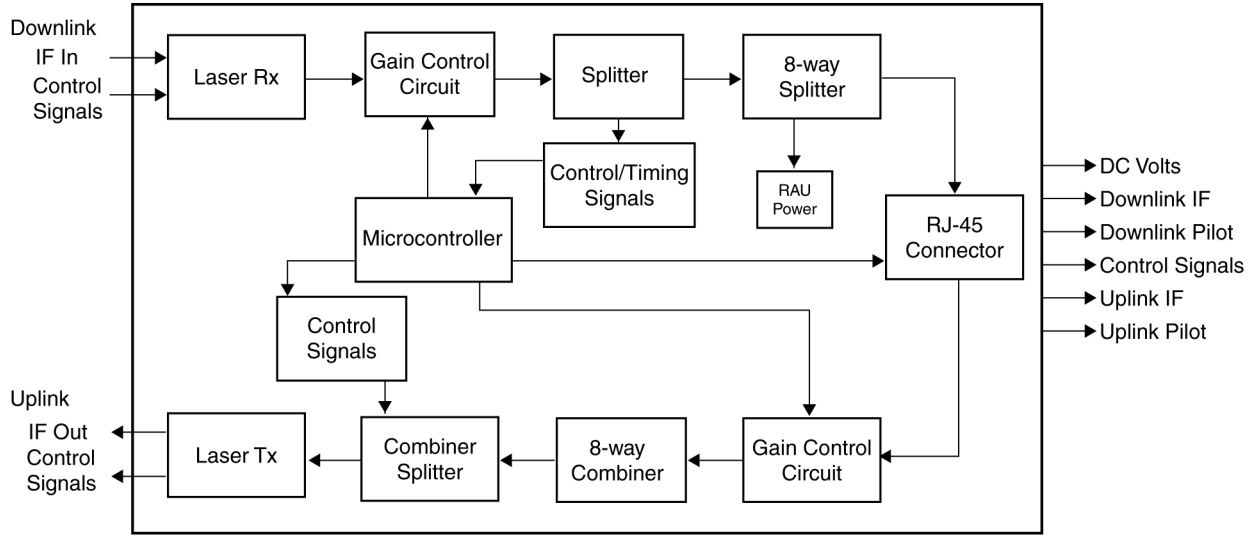

4.1 Expansion Hub Front Panel

Figure 4-3 Expansion Hub Front Panel

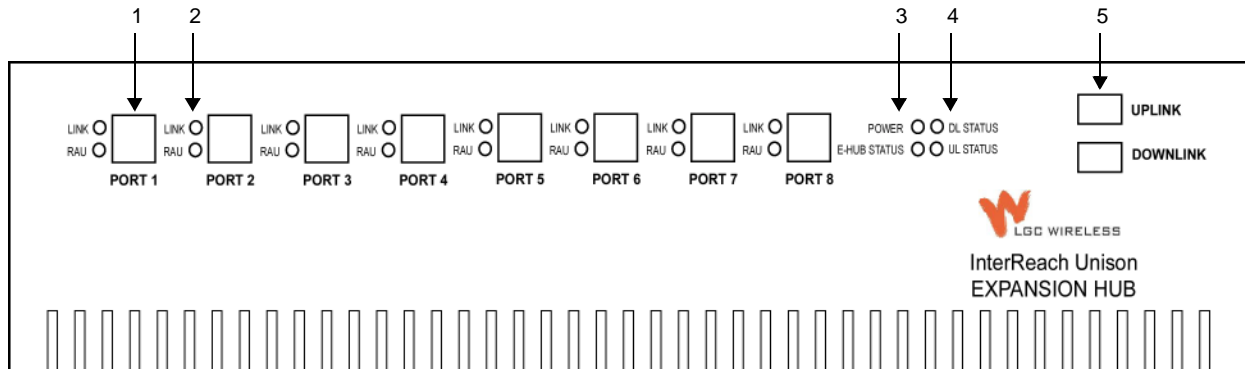

1. Eight standard Cat-5/6 ScTP cable RJ-45 connectors (labeled **PORT 1, 2, 3, 4, 5, 6, 7, 8**)
2. Eight sets of RJ-45 port LEDs (one set per port)
 - One LED per port for link status (labeled **LINK**)
 - One LED per port for downstream unit status (labeled **RAU**)
3. One set of unit status LEDs
 - One LED for unit power status (labeled **POWER**)
 - One LED for unit status (labeled **E-HUB STATUS**)
4. One set of fiber connection status LEDs
 - One LED for fiber downlink status (labeled **DL STATUS**)
 - One LED for fiber uplink status (labeled **UL STATUS**)
5. One fiber optic port which has two connectors
 - One standard female SC/APC connector for MMF/SMF input (labeled **UPLINK**)
 - One standard female SC/APC connector for MMF/SMF output (labeled **DOWNLINK**)

4.1.1 RJ-45 Connectors

The eight RJ-45 connectors on the Expansion Hub are for the Cat-5/6 ScTP cable that is used to transmit and receive signals to and from RAUs. Use shielded RJ-45 connectors on the Cat-5/6 cable.

The Cat-5/6 cable also delivers DC electrical power to the RAUs. The Expansion Hub's DC voltage output is 36V DC nominal. A current limiting circuit is used to protect the Expansion Hub if any port draws excessive power.

4.1.2 Optical Fiber Uplink/Downlink Connectors

The optical fiber uplink/downlink port transmits and receives optical signals between the Expansion Hub and the Main Hub using industry-standard SMF or MMF cable. The fiber port has two female SC/APC connectors:

- **Optical Fiber Uplink Connector**

This connector (labeled **UPLINK**) is used to transmit (output) uplink optical signals to the Main Hub.

- **Optical Fiber Downlink Connector**

This connector (labeled **DOWNLINK**) is used to receive (input) downlink optical signals from the Main Hub.



CAUTION: To avoid damaging the Expansion Hub's fiber connector port, use only SC/APC fiber cable connectors.

4.1.3 LED Indicators

The unit's front panel LEDs indicate fault conditions and commanded or fault lockouts. The LEDs do not indicate warnings or if the system test has not been performed. Use the LEDs as a go/no go test or as a backup when you are not using AdminManager.

Upon power up, the Expansion Hub goes through a five-second test to check the LED lamps. During this time, the LEDs blink through the states shown in Table 4-2, letting you visually verify that the LED lamps and the firmware are functioning properly.

NOTE: Refer to Section 10 for troubleshooting using the LEDs.

Unit Status and DL/UL Status LEDs

The Expansion Hub unit status and DL/UL status LEDs can be in one of five states, as shown in the following table. These LEDs can be:

- steady green
- steady red

There is no off state when the unit's power is on.

Table 4-1 Expansion Hub Unit Status and DL/UL Status LED States

	LED State	Indicates
POWER ● ● DL STATUS E-HUB STATUS ● ● UL STATUS	Green / Green Green / Green	<ul style="list-style-type: none"> • Expansion Hub is connected to power • Expansion Hub is not reporting a fault or lockout; but the system test may need to be performed or a warning condition could exist • Optical power in is above minimum (Main Hub is connected) although the cable length may be longer than recommended maximum • Optical power out (uplink laser) is normal
POWER ● ● DL STATUS E-HUB STATUS ● ● UL STATUS	Green / Green Red / Green	<ul style="list-style-type: none"> • Expansion Hub is reporting a fault or commanded lockout, but optical power in and out are normal
POWER ● ● DL STATUS E-HUB STATUS ● ● UL STATUS	Green / Red Red / Green	<ul style="list-style-type: none"> • Fault condition detected, optical power in is below minimum. (Main Hub is not connected, is not powered, or Main Hub's DL laser has failed.)
POWER ● ● DL STATUS E-HUB STATUS ● ● UL STATUS	Green / Green Red / Red	<ul style="list-style-type: none"> • Expansion Hub is reporting a fault condition • Optical power in is normal, optical power out is below minimum (Expansion Hub uplink laser has failed; unable to communicate with Main Hub)
POWER ● ● DL STATUS E-HUB STATUS ● ● UL STATUS	Green / Red Red / Red	<ul style="list-style-type: none"> • No downlink or uplink: replace Expansion Hub

Port LEDs

The Expansion Hub has one pair of port LEDs for each of the eight RJ-45 ports. The port LEDs can be in one of four states, as shown in the following table. These LEDs can be:


- off
- steady green
- steady red

Table 4-2 Expansion Hub Port LED States

	LED State	Indicates
LINK ○ RAU ○	Off Off	<ul style="list-style-type: none"> • RAU is not connected
LINK ● RAU ●	Green Green	<ul style="list-style-type: none"> • RAU is connected • No faults from RAU
LINK ● RAU ○	Red Off	<ul style="list-style-type: none"> • Loss of communications to RAU
LINK ● RAU ●	Green Red	<ul style="list-style-type: none"> • RAU is connected • Fault/lockout condition reported by RAU

4.2 Expansion Hub Rear Panel

Figure 4-4 Expansion Hub Rear Panel

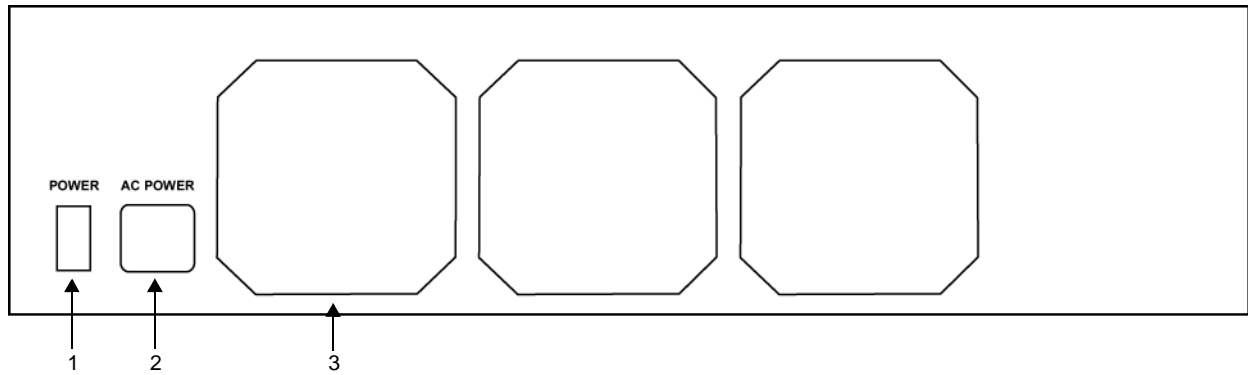

1. Power on/off switch
2. AC power cord connector
3. Three air exhaust vents

4.3 Faults and Warnings

The Main Hub periodically polls attached Expansion Hubs and their Remote Access Units for status. Both fault and warning conditions are reported to a connected PC/laptop that is running the AdminManager software or to the optional remote OpsConsole. Only faults are indicated by LEDs.

The faults and warnings that the Expansion Hub is responsible for monitoring and Reporting are listed in Section 10.

4.4 Expansion Hub Specifications

Table 4-3 Expansion Hub Specifications

Specification	Description
Enclosure Dimensions (H × W × D)	89 mm × 438 mm × 305 mm (3.5 in. × 17.25 in. × 12 in.)
Weight	< 5 kg (< 11 lb)
Operating Temperature	0° to +45°C (+32° to +113°F)
Non-operating Temperature	−20° to +85°C (−4° to +185°F)
Operating Humidity, non-condensing	5% to 95%
Cat-5/6 Connectors	8 shielded RJ-45, female (Cat-5/6)
Fiber Connectors	1 Pair, SC/APC
LED Alarm and Status Indicators	Unit Status (1 pair): <ul style="list-style-type: none"> • Power • E-Hub Status Fiber Link Status (1 pair): <ul style="list-style-type: none"> • DL Status • UL Status RAU/Link Status (1 pair per RJ-45 port): <ul style="list-style-type: none"> • Link • RAU
AC Power (Volts) (47–63 Hz)	Rating: 115/230V, 5/2.5A, 50–60 Hz Operating Range: 90–132V/170–250V auto-ranging, 2.2–1.5A/1.2–0.8A, 47–63 Hz
Power Consumption (W)	260 (includes 8 RAUs)
MTBF	78,998 hours

Unison Remote Access Unit

The Remote Access Unit (RAU) is an active transceiver that connects to an Expansion Hub using industry-standard Cat-5/6 ScTP cable. The cable also delivers electrical power to the RAU.

An RAU passes RF signals between an Expansion Hub and an attached passive antenna where the signals are transmitted to wireless devices.

Figure 5-1 Remote Access Unit in a Unison System

Downlink Path: The RAU receives downlink IF signals from an Expansion Hub via Cat-5/6 cable. It converts the signals to RF and sends them to a passive RF antenna via coaxial cable.


Also, the RAU receives configuration information from the Main Hub via the Cat-5/6 cable.



Uplink Path: The RAU receives uplink RF signals from a passive RF antenna via coaxial cable. It converts the signals to IF and sends them to an Expansion Hub via Cat-5/6 cable.

Also, the RAU sends its status information to the Expansion Hub via the Cat-5/6 cable.

Figure 5-2 Remote Access Unit Block Diagram

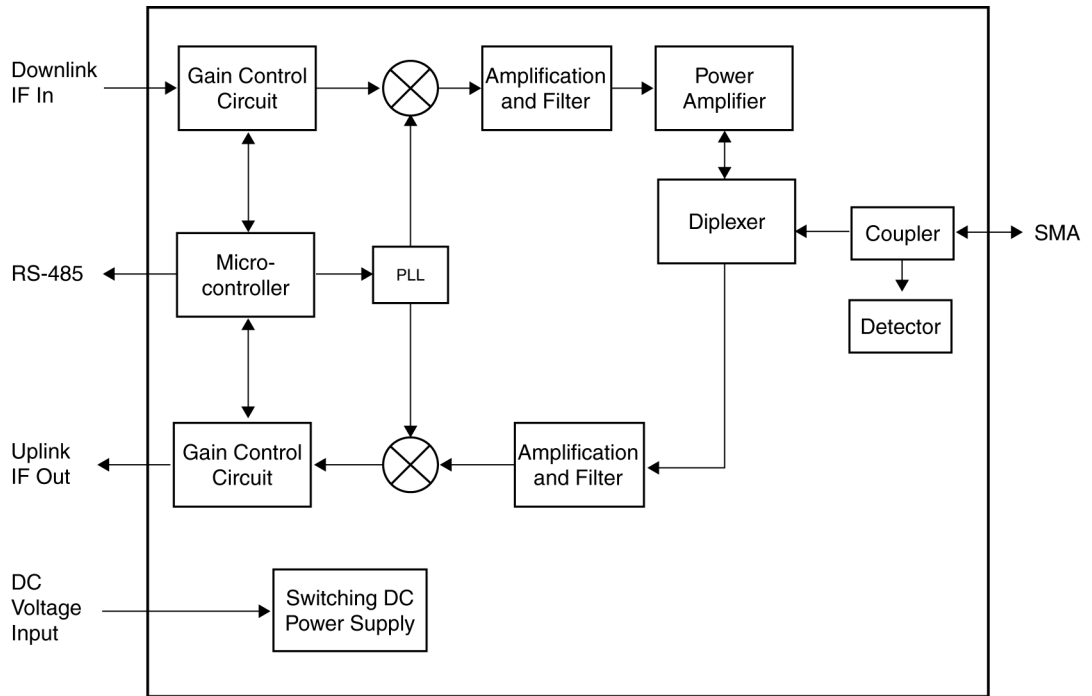

5.1 Remote Access Unit Connectors

5.1.1 SMA Connector

The RAU has one female SMA connector. The connector is a duplexed RF input/output port that connects to a standard passive antenna using coaxial cable.

5.1.2 RJ-45 Port

The RAU has one RJ-45 port that connects it to an Expansion Hub using Cat-5/6 ScTP cable. Use shielded RJ-45 connectors on the Cat-5/6 cable.

5.2 LED Indicators

Upon power up, the RAU goes through a two-second test to check the LED lamps. During this time, the LEDs blink through the states shown in Table 5-1, letting you visually verify that the LED lamps and the firmware are functioning properly.

NOTE: Refer to Section 10 for troubleshooting using the LEDs.

Status LEDs

The RAU status LEDs can be in one of four states, as shown in the following table. These LEDs can be:

- off
- steady green
- steady red

Table 5-1 Remote Access Unit LED States

	LED State	Indicates
LINK ○ ALARM ○	Off Off	<ul style="list-style-type: none"> • RAU is not receiving DC power
LINK ● ALARM ●	Green Green	<ul style="list-style-type: none"> • RAU is powered and is not indicating a fault condition. Communication with Expansion Hub is normal; but the system test may need to be performed or a warning condition could exist (use AdminManager to determine)
LINK ● ALARM ●	Green Red	<ul style="list-style-type: none"> • RAU is indicating a fault or lockout condition, but communication with the Expansion Hub is normal
LINK ● ALARM ●	Red Red	<ul style="list-style-type: none"> • RAU is reporting a fault or lockout condition, and it is not able to communicate with the Expansion Hub

5.3 Faults and Warnings

The Main Hub periodically polls attached Expansion Hubs and their Remote Access Units for status. Both faults and warning conditions are reported to a connected PC/laptop that is running the AdminManager software, or to the optional remote OpsConsole. Only faults are indicated by LEDs.

The faults and warnings that the RAU is responsible for monitoring and reporting are listed in Section 10.

5.4 Remote Access Unit Specifications

Table 5-2 Remote Access Unit Specifications

Specification	Description
Dimensions (H × W × D)	44 mm × 305 mm × 158 mm (1.7 in. × 12 in. × 6.2 in.)
Weight	< 1 kg (< 2 lb)
Operating Temperature	–25° to +45°C (–13° to +113°F)
Non-operating Temperature	–25° to +85°C (–13° to +185°F)
Operating Humidity, non-condensing	5% to 95%
RF Connectors	1 RJ-45, female (Cat-5/6) 1 SMA, male (coaxial)
LED Alarm and Status Indicators	Unit Status (1 pair): • Link • Alarm
Maximum Heat Dissipation (W)	11
MTBF	282,207 hours

Installing Unison Components

6.1 Installation Requirements

6.1.1 Component Location Requirements

Unison components are intended to be installed in indoor locations only.

6.1.2 Cable and Connector Requirements

The Unison equipment operates over standard Category 5 or 6 (Cat-5/6) screened twisted pair (ScTP) and industry-standard single-mode fiber (SMF) or multimode fiber (MMF) cable.

These cables are widely used industry standards for Local Area Networks (LANs). The regulations and guidelines for Unison cable installation are identical to those specified by the TIA/EIA 568-A standard and the TIA/EIA/IS-729 supplement for LANs (see Appendix B).

LGC Wireless recommends plenum-rated Cat-5/6 ScTP and fiber cable and connectors for conformity to building codes and standards. **ScTP is required in order to meet FCC and CE Mark emissions tests.**

6.1.3 Neutral Host System Requirements

As in any Unison system, a neutral host system requires one pair of fiber strands between each Main Hub and each Expansion Hub, and one Cat-5/6 cable between each Expansion Hub and each RAU. To help achieve the cost savings possible in a neutral host system, it is advantageous to install additional cables for future growth.

6.1.4 Distance Requirements

The following table shows the distances between Unison components and related equipment.

Table 6-1 Unison Distance Requirements

Equipment Combination	Cable Type	Distance	Additional Information
Repeater to Main Hub	Coaxial; N male connectors	3–6 m (10–20 ft) typical	Limited by loss and noise. Refer to your link budget calculation.
Base Station to Main Hub	Coaxial; N male connectors	3–6 m (10–20 ft) typical	Limited by loss and noise. Refer to your link budget calculation.
Main Hub to Expansion Hub	Multimode Fiber: Single-Mode Fiber: SC/APC male connectors	1.5 km (4,921 ft) max. 6 km (19,685 ft) max.	Limited by 3 dB optical loss.
Expansion Hub to RAU	Cat-5/6 ScTP; shielded RJ-45 male connectors	10 meters (33 ft) absolute min. 25 meters (82 ft) recommended min. 100 m (328 ft) recommended max. 150 m (492 ft) absolute max.	See “System Gain (Loss) Relative to ScTP Cable Length” on page 8-31.
RAU to passive antenna	Coaxial; SMA male connectors	1–3.5 m (3–12 ft) typical	Limited by loss and noise. Refer to your link budget calculation.

6.2 Safety Precautions

6.2.1 Installation Guidelines

Use the following guidelines when installing LGC Wireless equipment:

1. Provide sufficient airflow and cooling to the equipment to prevent heat build-up from exceeding the maximum ambient air temperature specification. Do not compromise the amount of airflow required for safe operation of the equipment.
2. Be careful when servicing these products. If you are removing the system, turn it off and remove the power cord first. There are no user-serviceable parts inside the components.
3. The internal power supply has internal fuses that are not user replaceable. Consider the worst-case power consumption shown on the product labels when provisioning the equipment's AC power source and distribution.

6.2.2 General Safety Precautions

The following precautions apply to LGC Wireless products:

- The units have no user-serviceable parts. Faulty or failed units are fully replaceable through LGC Wireless. Please contact us at:
 - 1-800-530-9960 (U.S. only)
 - +1-408-952-2400 (International)
 - +44(0) 1223 597812 (Europe)
- Although modeled after an Ethernet/LAN architecture and connectivity, the units are not intended to connect to Ethernet data hubs, routers, cards, or other similar data equipment.
- When you connect the fiber optic cable, take the same precaution as if installing Ethernet network equipment. All optical fiber SC/APC connectors should be cleaned according to the cable manufacturer's instructions.
- When you connect a radiating antenna to an RAU, **DO NOT** over-tighten the SMA connector. Firmly hand-tightening the connector is adequate.



WARNING: To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture. The components are intended for indoor use only. Do not install the RAU outdoors. Do not connect an RAU to an antenna that is located outside where it could be subject to lightning strikes, power crosses, or wind.

6.2.3 Fiber Port Safety Precautions

The following are suggested safety precautions for working with fiber ports. For information about system compliance with safety standards, see Appendix B.



WARNING: Observe the following warning about viewing fiber ends in ports. Do not stare with unprotected eyes at the connector ends of the fibers or the ports of the hubs. Invisible infrared radiation is present at the front panel of the Main Hub and the Expansion Hub. Do not remove the fiber port dust caps unless the port is going to be used. Do not stare directly into a fiber port.

- **Test fiber cables:** When you test fiber optic cables, connect the optical power source last and disconnect it first. Use Class 1 test equipment.
- **Fiber ends:** Cover any unconnected fiber ends with an approved cap. Do not use tape.
- **Broken fiber cables:** Do not stare with unprotected eyes at any broken ends of the fibers. Laser light emitted from fiber sources can cause eye injury. Avoid contact with broken fibers; they are sharp and can pierce the skin. Report any broken fiber cables and have them replaced.
- **Cleaning:** Be sure the connectors are clean and free of dust or oils. Use only approved methods for cleaning optical fiber connectors.
- **Modifications:** Do not make any unauthorized modifications to this fiber optic system or associated equipment.
- **Live work:** Live work is permitted because LGC Wireless equipment is a Class 1 hazard.
- **Signs:** No warning signs are required.
- **Class 1 laser product:** The system meets the criteria for a Class 1 laser product per IEC 60825-1:1998-01 and IEC 60825-2:2000-05.

**CLASS 1
LASER PRODUCT**

This label appears on the front panel of the Main Hub and the Expansion Hub.

- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

6.3 Preparing for System Installation

6.3.1 Pre-Installation Inspection

Follow this procedure before installing Unison equipment:

1. Verify the number of packages received against the packing list.
2. Check all packages for external damage; report any external damage to the shipping carrier. If there is damage, a shipping agent should be present before unpacking and inspecting the contents because damage caused during transit is the responsibility of the shipping agent.
3. Open and check each package against the packing slip. If any items are missing, contact LGC Wireless customer service.
4. If damage is discovered at the time of installation, contact the shipping agent.

6.3.2 Installation Checklist

Table 6-2 Installation Checklist

✓	Installation Requirement	Consideration
	Floor Plans	Installation location of equipment clearly marked
	Power available: Main Hub (AC) Expansion Hub (AC) To RAU (DC)	Power cord is 2 m (6.5 ft) long. Rating: 100–240V, 0.5A, 50–60 Hz Rating: 115/230V, 5/2.5A, 50–60 Hz 36V
	Rack space available: Main Hub Expansion Hub	44 mm (1.75 in.) high (1U) 89 mm (3.5 in.) high (2U)
	Clearance for air circulation: Main and Expansion Hubs RAU	76 mm (3 in.) front and rear, 51 mm (2 in.) sides 76 mm (3 in.) all around
	Suitable operating environment: Main and Expansion Hubs RAUs	Indoor location only 0° to +45°C (+32° to +113°F) 5% to 95% non-condensing humidity –25° to +45°C (–13° to +113°F) 5% to 95% non-condensing humidity
Donor Antenna-to-Unison Configuration		
	Donor Antenna	Installed, inspected; N-male to N-male coaxial cable to lightning arrestor/surge suppressor
	Lightning Arrestor or Surge Suppressor	Installed between roof-top antenna and repeater; N-male to N-male coaxial cable
	Repeater	Installed between lightning arrestor/surge suppressor and Main Hub; N-male to N-male coaxial cable
	Attenuator	Installed between the circulator and the Main Hub downlink port to prevent overload. Optionally, it may be installed between the uplink port and the circulator
	Circulator	Installed between the repeater and the Main Hub uplink and downlink ports
Base Station-to-Unison Configuration		
	Base Station	Verify RF power (see tables in Section 8.1 on page 8-3); N-male to N-male coaxial cable; installed, inspected
	Attenuator	Attenuation may be required to achieve the desired RF output at the RAU and the desired uplink noise floor level
	Circulator	When using a duplex BTS: Installed between the repeater and the Main Hub uplink and downlink ports. Not used with a simplex BTS

Connecting Multiple Main Hubs Together

Table 6-2 Installation Checklist (continued)

✓	Installation Requirement	Consideration
	Power combiner/splitter	N-male to N-male coaxial cables; power combiner/splitter to Main Hub and base station or repeater
	Attenuator	Attenuation may be required to achieve the desired RF output at the RAU and the desired uplink noise floor level
	Circulator	When using a duplex BTS: Installed between the repeater the Main Hub uplink and downlink ports. Not used with a simplex BTS
Cabling		
	Coaxial: repeater or base station to Main Hub	Coax approved; N-type male connectors
	Coaxial: RAU to passive antennas	Use low-loss cable; SMA male connector; typical 1 m (3.3 ft) using RG142 coaxial cable
	Fiber: Main Hub to Expansion Hubs	SC/APC (angle-polished) male connectors; MMF: limited by optical loss of 3 dB, up to 1.5 km (4,921 ft); SMF: limited by optical loss of 3 dB, up to 6 km (19,685 ft)
	Cat-5/6 ScTP: Expansion Hub to RAUs	TIA/EIA 568-A approved; shielded RJ-45 male connectors <ul style="list-style-type: none"> • Absolute Minimum: 10 meters (33 ft) • Recommended Minimum: 25 meters (82 ft) • Recommended Maximum: 100 meters (328 ft) • Absolute Maximum: 150 meters (492 ft) Tie-off cables to avoid damaging the connectors because of cable strain
	Daisy-chain cable	For contact alarm monitoring: connecting up to 5 LGCell systems to Unison, connecting up to 5 Unison systems to MetroReach Focus, or connecting up to 5 Unison systems to a base station
	Null modem cable	Female connectors; Main Hub to a laptop that is running the AdminManager software; local connection
	Straight-through cable	Female/male connectors; Main Hub to a modem; remote connection
Configuring System		
	Laptop running AdminManager software	Refer to requirements in Section 7.1.1, "PC/Laptop Requirements," on page 7-2
Distances		
	Main Hub is within 3–6m (10–20 ft) of connecting repeater	If longer distance, determine the loss of the cable used for this connection and adjust the RF signal into the Main Hub accordingly. This can be done by readjusting the power from the base station, or by changing the attenuation value between the base station/repeater and the Main Hub
	Main Hub is within 3–6m (10–20 ft) of connecting base station	
	Main Hub is within correct distance of Expansion Hub(s); SMF and MMF optical link budget: 3 dB	

6.3.3 Tools and Materials Required

Table 6-3 Tools and Materials Required for Component Installation

✓	Description
	Cable ties
	Philips screwdriver
	Mounting screws and spring nuts
	Fiber cleaning supplies
	Compressed air
	Screws, anchors, pipe clamp, etc. (for mounting RAUs)
	Drill
	Fusion splicer

6.3.4 Optional Accessories

Table 6-4 Optional Accessories for Component Installation

✓	Description
	Wall-mount equipment rack(s) (PN: 4712)
	Cable management (Cable manager: PN 4759; Tie wrap bar: PN 4757)
	Splice trays

6.4 Unison Component Installation Procedures

The following procedures assume that the system is new from the factory and that it has not been programmed with a band.

If you are replacing components in a pre-installed system with either new units or units that may already be programmed (i.e., re-using units from another system), refer to Section 9.

- Installing RAUs and Passive Antennas 6-11
 - Installing RAUs 6-11
 - Installing Passive Antennas 6-11
 - Connecting the Antenna to the RAU 6-11
 - Testing and Connecting the ScTP Cable 6-12
 - Installing RAUs in a Neutral Host System 6-12
- Installing Expansion Hubs 6-13
 - Installing an Expansion Hub in a Rack 6-13
 - Installing an Expansion Hub in a Wall-Mounted Rack 6-14
 - Installing an Optional Cable Manager in the Rack 6-14
 - Powering On the Expansion Hub 6-15
 - Testing and Connecting the Fiber Cables 6-15
 - Connecting the ScTP Cables 6-17
 - Checking the RJ-45 Port LEDs 6-17
 - Installing Expansion Hubs in a Neutral Host System 6-18
- Installing a Main Hub 6-19
 - Installing a Main Hub in a Rack 6-19
 - Installing an Optional Cable Manager in the Rack 6-19
- Starting and Configuring the System 6-21
 - Connecting a Laptop and Starting the AdminManager Software 6-21
 - Powering On the Main Hub 6-21
 - Connecting the Fiber Cables to the Main Hub 6-22
 - Checking the Main Hub's Fiber Port LEDs 6-23
 - Configuring the Unison System 6-25
 - Installing Main Hubs in a Neutral Host System 6-20

The following procedures assume that the system is installed and programmed.

- Interfacing a Main Hub to a Base Station or Roof-top Antenna 6-26
 - Connecting a Main Hub to a Roof-top Antenna 6-26
 - Connecting a Main Hub to an In-Building Base Station 6-27
 - Connecting a Main Hub to Multiple Base Stations 6-29
- Connecting Multiple Main Hubs 6-30
 - Connecting Multiple Main Hubs to a Simplex Repeater or Base Station . . 6-32
 - Connecting Multiple Main Hubs to a Duplex Repeater or Base Station . . 6-33
- Connecting Contact Alarms to a Unison System 6-34

6.4.1 Installing RAUs and Passive Antennas



CAUTION: Install RAUs in indoor locations only.

✓ Installing RAUs

Mount all RAUs in the locations marked on the floor plans.

Considerations:

- **Install iDEN and 800 MHz cellular RAUs so that their antennas will be at least 6 to 8 meters (20 to 26 feet) apart.**
- Keep at least 76 mm (3 in.) clearance around the RAU to ensure proper venting
- Always mount the RAU with the flat face against the mounting surface

✓ Installing Passive Antennas

Refer to the manufacturer's installation instructions to install passive antennas.

Passive antennas are usually installed below the ceiling. If they are installed above the ceiling, the additional loss due to the ceiling material must be considered when estimating the antenna coverage area.

Considerations:

- Use coaxial cable with the least amount of loss possible.
- **Keep iDEN and 800 MHz cellular antennas at least 6 to 8 meters (20 to 26 ft) apart.**

✓ Connecting the Antenna to the RAU

Connect a passive antenna to the SMA male connector on the RAU using coaxial cable.



CAUTION: When connecting to the SMA female connector on the RAU and passive antenna, **DO NOT** over-tighten the connector. Firmly hand-tightening the connector is adequate.

✓ Testing and Connecting the ScTP Cable

Consideration:

- Before connecting the ScTP cable to the RAU, confirm that it meets TIA/EIA 568-A standard and the TIA/EIA/IS-729 supplement.

To test and connect the ScTP cable:

1. Perform cable testing.

Test results are required for the final As-Built Document.

Cable length:

- Absolute Minimum: 10 m (33 ft)
- Recommended Minimum: 25 m (82 ft)
- Recommended Maximum: 100 m (328 ft)
- Absolute Maximum: 150 m (492 ft)

2. Label the cable and make a note of the designation.

This information is needed when connecting the cable to the Expansion Hub.

3. Connect the cable to the RJ-45 female port on the RAU.

Power is supplied by the Expansion Hub. Because the Expansion Hub is not yet connected, no LEDs will illuminate.

6.4.1.1 Installing RAUs in a Neutral Host System

When installing both iDEN and cellular systems in parallel, either as dual-band or neutral host systems, special provision must be taken to assure that the individual RAUs do not interfere with each other.

The 800 MHz cellular and iDEN RAU's antennas must be separated by 6 to 8 meters (20 to 26 feet) to assure that the iDEN downlink signals do not interfere with the cellular uplink signals.

6.4.2 Installing Expansion Hubs

The Expansion Hub (2U high) can mount in a standard 19 in. (483 mm) equipment rack or in a wall-mountable equipment rack that is available from LGC Wireless. Allow clearance of 76 mm (3 in.) front and rear and 51 mm (2 in.) sides for air circulation.

Install the Expansion Hub in a horizontal position only.



CAUTION: Install Expansion Hubs in indoor locations only.

✓ Installing an Expansion Hub in a Rack

Consideration:

- The Expansion Hub is shipped with #10-32 mounting screws. Another common rack thread is #12-24. Confirm that the mounting screws match the rack's threads.
- If you want to move the mounting brackets to a mid-mounting position, see Installing an Expansion Hub in a Wall-Mounted Rack on page 6-14.

To install the hub in a rack:

1. Insert spring nuts into the rack where needed or use existing threaded holes.
2. Place the Expansion Hub into the rack from the front.
3. Align the flange holes with the spring nuts installed in Step 1.
4. Insert the mounting screws in the appropriate positions in the rack.
5. Tighten the mounting screws.

✓ Installing an Expansion Hub in a Wall-Mounted Rack

Considerations:


- The rack and the Expansion Hub are both 305 mm (12 in.) deep. The rack mounting brackets on the Expansion Hub must be moved from the front position to allow for the 76 mm (3 in.) rear clearance required.
- The maximum weight the rack can hold is 22.5 kg (50 lbs).

To install the hub in a wall-mounted rack:


1. Attach the equipment rack to the wall using the screws that are provided.
The rack must be positioned so that the Expansion Hub will be in a horizontal position when it is installed.
2. Remove both of the rack mounting brackets from the hub.
3. Reattach each of the rack mounting brackets to the opposite side of the hub from which it came.

Refer to the following figure for bracket placement.

Right Rack Mounting Bracket as installed from the factory.

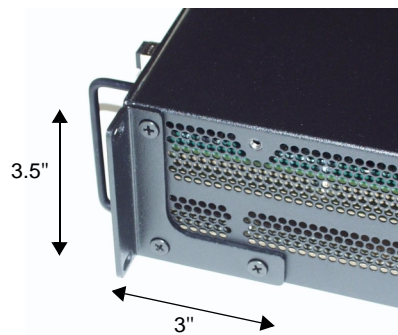

Left Rack Mounting Bracket installed on the right side of the hub.

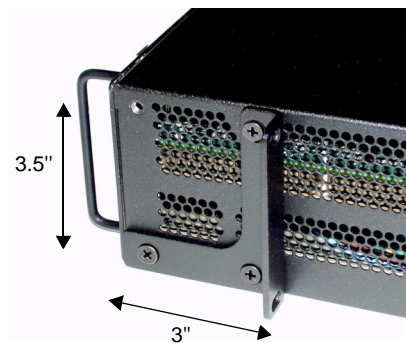

4. Attach the Expansion Hub to the rack.

✓ Installing an Optional Cable Manager in the Rack

- Using the screws provided, fasten the cable manager to the rack, immediately above or below the Expansion Hub.

✓ **Powering On the Expansion Hub**

1. Connect the AC power cord to the Expansion Hub.
2. Plug the power cord into an AC power outlet.
3. Turn on the power to the Expansion Hub and check that all the LED lamps are functioning properly.

Upon power-up, the LEDs will blink for five seconds for a visual check that they are functioning. After the five-second test:

- The **POWER** and **UL STATUS** LEDs should be green.
- The **E-HUB STATUS** and **DL STATUS** LEDs should be red because the Main Hub is not yet connected.
- All port LEDs should be off because no RAUs are connected yet.

NOTE: Leave the dust caps on the fiber ports until you are ready to connect the fiber optic cables.

✓ **Testing and Connecting the Fiber Cables**

Considerations:

- Before connecting the fiber cables, confirm that their optical loss does not exceed 3 dB optical budget.
- If fiber distribution panels are used, confirm that the total optical loss of fiber cable, from the Main Hub through distribution panels and patch cords to the Expansion Hub, does not exceed the optical budget.
- Make sure the fiber cable's connectors are SC/APC (angle-polished). Using any other connector type will result in degraded system performance and may damage the equipment.

NOTE: Observe all Fiber Port Safety Precautions listed in Section 6.2.3 on page 6-4.

To test the fiber cables:

1. Perform cable testing and record the results.
Test results are required for the final As-Built Document.
2. Make a note of which cable you will use for uplink and downlink.
This information is needed when connecting the cables to the Main Hub.

To clean the fiber ports:

Use compressed air to blow dust out of each fiber port before you insert the SC/APC connector. Note that compressed air should not leave any residue as this will contaminate the fiber port.

To clean the fiber connectors:

Be sure that the fiber cable's SC/APC connectors are clean and free of dust or oils. If the fiber connector front face is not free of dust or oils, follow the manufacturer's recommendations for cleaning it.

To connect the fiber cables:

The fiber cable is labeled with either **1** or **2**, or is color-coded. In addition to these labels, you should add a code that identifies which port on the Main Hub is being used and which Expansion Hub the cables are intended for. This differentiates the connectors for proper connection between the Main Hub and Expansion Hubs.

If the fiber jumper is labeled with **1** or **2**:

1. Connect **1** to **UPLINK** on Expansion Hub.
2. Connect **2** to **DOWNLINK** on Expansion Hub.
3. Label both ends of each cable with which Main Hub port is used.

For example:

First pair to Main Hub port 1: 11 (uplink), 12 (downlink);

Second pair to Main Hub port 2: 21 (uplink), 22 (downlink);

Third pair to Main Hub port 3: 31 (uplink), 32 (downlink); and so on.

4. Record which number you connected to **UPLINK** and **DOWNLINK**.

This information is needed when connecting the other end of the fiber cable to the Main Hub's fiber ports.

If the fiber jumper is color-coded (for example, "blue" or "red"):

1. Connect "blue" to **UPLINK** on Expansion Hub.
2. Connect "red" to **DOWNLINK** on Expansion Hub.
3. Label both ends of each cable with which Main Hub port is used.

For example:

First pair to Main Hub port 1: 11 (uplink), 12 (downlink);

Second pair to Main Hub port 2: 21 (uplink), 22 (downlink);

Third pair to Main Hub port 3: 31 (uplink), 32 (downlink); and so on.

4. Record which color and port number you connected to **UPLINK** and **DOWNLINK**.

This information is needed when connecting the other end of the fiber cable to the Main Hub's fiber ports.

✓ Connecting the ScTP Cables

Considerations:

- Confirm that the cables have been tested and the results recorded.

To connect the ScTP cables:

1. Connect the ScTP cables to any available RJ-45 port on the Expansion Hub.
2. Record which RAU you are connecting to which port.
This information is required for the As-Built Document.
3. Tie-off cables or use the optional cable manager to avoid damaging the connectors because of cable strain.

✓ Checking the RJ-45 Port LEDs

- The **LINK** LED should be green indicating that power is being supplied to the RAU.
- The **RAU** LED should be red indicating that communication is established but a band is not programmed.
 - If the **LINK** LED is red and the **RAU** LED is off, then the RAUs are not communicating with the Expansion Hub.
- If the LEDs are off, the RAU is not drawing power.

6.4.2.1 Troubleshooting Expansion Hub LEDs During Installation

- All Expansion Hub **LINK** and **E-HUB/RAU** LEDs with RAUs connected should indicate Green/Red, which indicates that the RAU is powered on and communication has been established.
- The Expansion Hub **UL STATUS** LED should be Green.

Table 6-5 Troubleshooting Expansion Hub LEDs During Installation

During Installation	LED	State	Action	Impact
Expansion Hub power is On and no RAUs are connected	POWER	Off	Check AC power; check that the Expansion Hub power-on switch is on; replace the Expansion Hub.	Expansion Hub is not powering on.
	LINK	LEDs on but didn't blink through all states	Replace the Expansion Hub.	Microcontroller not resetting properly; flash memory corrupted.
	E-HUB/RAU			
	UL STATUS	Red	Replace the Expansion Hub.	The Expansion Hub laser is not operational; no uplink between the Expansion Hub and Main Hub.
	LINK	Red	Port unusable; replace the Expansion Hub when possible.	Current sensor fault; do not use the port.
E-HUB/RAU	Off			
Connect RAU	LINK	Off	Check the Cat-5/6 cable.	Power is not getting to the RAU.
	E-HUB/RAU	Off		
	LINK	Red	Test the Cat-5/6 cable. If the cable tests OK, try another port. If the second port's LEDs are Red/Off, replace the RAU. If the second RAU doesn't work; replace the Expansion Hub.	Power levels to RAU are not correct; communications are not established. If the second port works, flag the first port as unusable; replace EH when possible.
	E-HUB/RAU	Off		

6.4.2.2 Installing Expansion Hubs in a Neutral Host System

Installing Expansion Hubs in a neutral host system is the same as described in Section 6.4.2 on page 6-13.

If rack-mounting the Expansion Hubs, we recommend mounting all neutral host system hubs in the same rack(s) or location, grouped by frequency or carrier. For example, group the Expansion Hubs for the iDEN carrier(s) together, then the 800 MHz cellular carrier(s), and so on.

6.4.3 Installing a Main Hub



CAUTION: Install Main Hubs in indoor locations only.

✓ Installing a Main Hub in a Rack

The Main Hub (1U high) mounts in a standard 19 in. (483 mm) equipment rack. Allow clearance of 76 mm (3 in.) front and rear, and 51 mm (2 in.) on both sides for air circulation.

Consideration:

- The Main Hub is shipped with #10-32 mounting screws. Another common rack thread is #12-24. Confirm that the mounting screws match the rack's threads.


To install the hub in a rack:

1. Insert spring nuts into rack where needed or use existing threaded holes.
2. Place the Main Hub into the rack from the front.
3. Align the flange holes with the spring nuts installed in Step 1.
4. Insert the mounting screws in the appropriate positions in the rack.
5. Tighten the mounting screws.

NOTE: Do not turn on the Main Hub until you've started the AdminManager software (see Section 6.5 on page 6-21).

Rack-mounting Option

You can flip the rack mounting brackets, as shown in the following figure, so the hub can be mounted 76 mm (3 in.) forward in the rack.

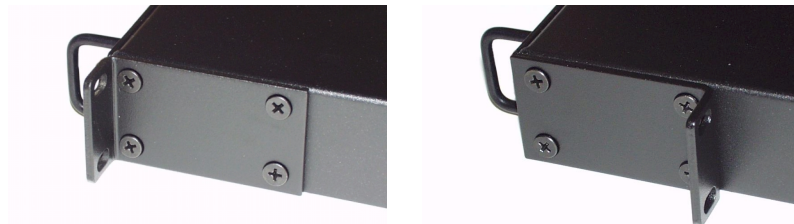

✓ Installing an Optional Cable Manager in the Rack

- Using the screws provided, fasten the cable manager to the rack, immediately above or below the Main Hub.

6.4.4 Installing Main Hubs in a Neutral Host System

Installing Main Hubs in a neutral host system is the same as described in Section 6.4.3 on page 6-19.

We recommend mounting all neutral host system Main Hubs in the same rack(s), grouped by frequency or carrier. For example, group the Main Hubs for the iDEN carrier(s) together, then the 800 MHz cellular carrier(s), and so on.

Connecting to base stations and repeaters is the same as described in Section 6.6 on page 6-26 and Section 6.6.1 on page 6-30.

6.5 Starting and Configuring the System

✓ Connecting a Laptop and Starting the AdminManager Software

Considerations:

- The AdminManager software is installed on a laptop computer that meets the requirements that are listed on page 7-2.
- Null modem cable with female connectors is needed.

To connect and start the AdminManager software:

1. Connect the null modem cable to the laptop and then to the **RS-232** port on the Main Hub's front panel.
2. Turn on the laptop and start the AdminManager software.

The main Installation Wizard window is displayed when the software is ready.

✓ Powering On the Main Hub

After mounting the Main Hub in the rack, connect it to the AC power. You may use multiple outlet surge protectors for multiple Main Hubs.

1. Connect the AC power cord to the Main Hub.
2. Plug the power cord into an AC power outlet.
3. Turn on the power.

Upon power-up, the LEDs will blink for five seconds for a visual check that they are functioning. After the five-second test:

- The **POWER** LED should be green.
- The **MAIN HUB STATUS** LED should be red because a band has not been programmed.
- All fiber port LEDs should be off, indicating that no fiber cables are connected.

NOTE: Leave the dust caps on the fiber ports until you are ready to connect the fiber optic cables.

✓ Connecting the Fiber Cables to the Main Hub

Considerations:

- Before connecting the fiber cables, confirm that their optical loss does not exceed 3 dB optical budget.
- If fiber distribution panels are used, confirm that the total optical loss of fiber cable, from the Main Hub through distribution panels and patch cords to the Expansion Hub, does not exceed the optical budget.
- Make sure the fiber cable's connectors are SC/APC (angle-polished). Using any other connector type will result in degraded system performance and may damage the equipment.

NOTE: Observe all Fiber Port Safety Precautions listed in Section 6.2.3 on page 6-4.

To clean the fiber ports:

Use compressed air to blow dust out of each fiber port before you insert the SC/APC connector. Note that compressed air should not leave any residue as this will contaminate the fiber port.

To clean the fiber connectors:

Be sure that the fiber cable's SC/APC connectors are clean and free of dust or oils. If the fiber connector front face is not free of dust or oils, follow the manufacturer's recommendations for cleaning it.

To connect the fiber cables:

The fiber cable is labeled with either **1** or **2**, or is color-coded. For proper connection between the Main Hub ports and the Expansion Hub ports, refer to the numbering or color-coded connections you recorded when installing the Expansion Hub(s).

If the fiber jumper is labeled with **1** or **2**:

1. Connect **1s** to **UPLINK** ports on the Main Hub.
Refer to the connections you recorded, or the cable label, when the Expansion Hub(s) were installed to know which Main Hub **UPLINK** port to use.
2. Connect **2s** to **DOWNLINK** ports on the Main Hub.
Refer to the connections you recorded, or the cable label, when the Expansion Hub(s) were installed to know which Main Hub **DOWNLINK** port to use.

If the fiber jumper is color-coded (for example, "blue" or "red"):

1. Connect "blue"s to **UPLINK** ports on the Main Hub.
Refer to the connections you recorded, or the cable label, when the Expansion Hub(s) were installed to know which Main Hub **UPLINK** port to use.
2. Connect "red"s to **DOWNLINK** ports on the Main Hub.
Refer to the connections you recorded, or the cable label, when the Expansion Hub(s) were installed to know which Main Hub **DOWNLINK** port to use.

Checking the Main Hub's Fiber Port LEDs

- The **LINK** LED should be green if the fiber is connected to the Expansion Hub, and communication and optical power are okay.
- The **E-HUB/RAU** LED should be red because a band has not been programmed.
 - If the **LINK** LED is red and the **E-HUB/RAU** LED is off, there is no communication with the Expansion Hub. Check the fiber cables (downlink first); a cable may be broken or the optical link budget may be exceeded.
 - If the **PORT** LEDs are blank (off), the Main Hub does not recognize the presence of an Expansion Hub. Check the fiber cables (uplink first); a cable may be broken or the optical link budget may be exceeded. Check to ensure that the cables are connected at the Expansion Hub, and that the Expansion Hub's power is on.

NOTE: Refer to Section 10 for troubleshooting.

6.5.1 Troubleshooting Main Hub LEDs During Installation

The following Main Hub LED indications assume that the Expansion Hub LEDs have already been checked.

- All Main Hub fiber port LEDs that have Expansion Hubs connected to them should be Green/Red, indicating that the Expansion Hub is powered on and communication has been established.

Table 6-6 Troubleshooting Main Hub LEDs During Installation Power On

During Installation Power On	LED	State	Action	Impact
Main Hub power is On with no Expansion Hubs connected.	POWER	Off	Check AC power; check that the Main Hub power-on switch is on; replace Main Hub	Main Hub is not powering on.
	LINK	LEDs on but didn't blink through all states	Replace the Main Hub.	Microcontroller not resetting properly; flash memory corrupted.
	E-HUB/RAU			
	LINK	Red	The port is unusable; replace the Main Hub when possible.	Fiber sensor fault, do not use the port.
	E-HUB/RAU	Off		
Connect Expansion Hub Fiber Pair	LINK	Off	Swap the uplink and downlink cables. If the port LEDs do not illuminate, check the fiber uplink for excessive optical loss. Connect the fiber pair to another port. If the second port's LEDs do not illuminate Green/Red, replace the Main Hub.	The Main Hub does not sense the presence of the Expansion Hub. If the second port works, flag the first port as unusable; replace the Main Hub when possible.
	E-HUB/RAU	Off		
	LINK	Red	If the Expansion Hub DL STATUS LED is red, check the downlink fiber cable for excessive optical loss. Connect the fiber pair to another port. If the second port's LEDs do not illuminate Green/Red, replace the Main Hub.	The Expansion Hub does not sense the presence of the Main Hub. If the second port works, flag the first port as unusable; replace the Main Hub when possible.
	E-HUB/RAU	Off		

✓ **Configuring the Unison System**

The system will not work until a band has been set and a system test is performed.

- The AdminManager software must be running on a PC/laptop that is connected to the Main Hub's front panel RS-232 connector.

1. Select the Installation Wizard (Local) mode radio button and click **RUN**.

The Step 1, Verify Hardware window is displayed.

Refer to Section 7.2 on page 7-12 for a description of the Installation wizard.

2. Confirm that all system devices are displayed in the System Status box and click **NEXT**.

The Step 2, Set Operation Band window is displayed.

3. Select the desired frequency band and click **APPLY**.

4. Click **NEXT** if the message displayed indicates a successful band setting.

The Step 3, Configure System Parameters window is displayed.

5. Enter the desired parameters and click **APPLY**.

6. Click **NEXT** if the message displayed indicates a successful parameter setting.

The Step 4, Final System Test window is displayed.

7. Click **APPLY** to initiate the final system test.

During testing the system is off-line and a center band tone is being transmitted.

8. Click **NEXT** if the message displayed indicates a successful test.

The Finish window is displayed.

9. Click **FINISH**.

The AdminManager session is ended and the window is closed.

NOTE: Refer to Section 10 for troubleshooting.

6.6 Interfacing a Main Hub to a Base Station or Roof-top Antenna



WARNING: Exceeding the maximum input power could cause failure of the Main Hub (refer to Section 8.1 on page 8-3 for maximum power specifications). If the maximum composite power is too high, attenuation is required.


✓ Connecting a Main Hub to a Roof-top Antenna

It is recommended that you use a lightning arrestor or surge protector in a roof-top antenna configuration. Insert the lightning arrestor or surge protector between the roof-top antenna and the repeater that is connected to the Main Hub.

1. Connect an N-male to N-male coaxial cable to the roof-top antenna.
2. Connect the other end of the N-male to N-male coaxial cable to the grounded surge suppressor.
3. Connect an N-male to N-male coaxial cable to the grounded surge suppressor.
4. Connect the other end of the N-male to N-male coaxial cable to the repeater.
5. Connect an N-male to N-male coaxial cable to the repeater.
6. Connect the other end of the N-male to N-male coaxial cable to the circulator 1 connector.
7. Connect an N-male to N-male coaxial cable to the circulator 2 connector.
8. Connect the other end of the N-male to N-male coaxial cable to the **DOWNLINK** connector on the Main Hub.

Attenuation may be required to achieve the desired RF output at the RAU.

9. Connect an N-male to N-male coaxial cable to the circulator 3 connector.
10. Connect the other end of the N-male to N-male coaxial cable to the **UPLINK** connector on the Main Hub.

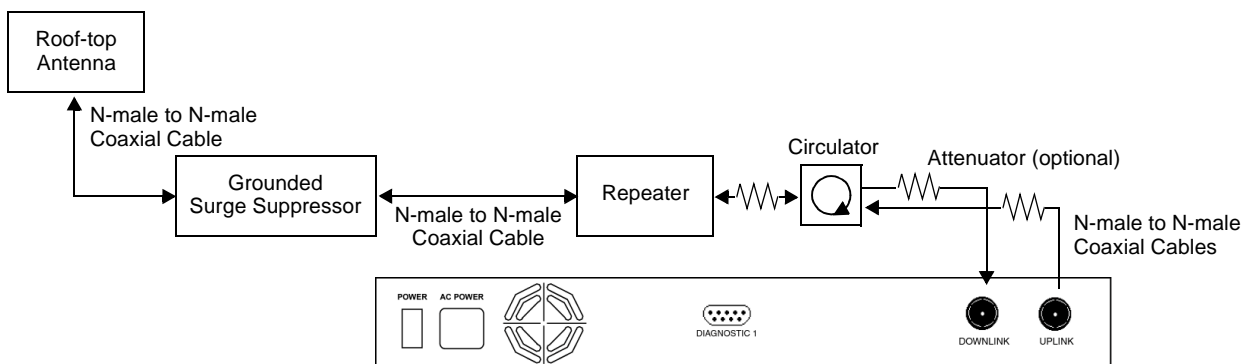


✓ Connecting a Main Hub to an In-Building Base Station

Connecting a Simplex Base Station to a Main Hub:

1. Connect an N-male to N-male coaxial cable to the transmit simplex connector on the base station.
2. Connect the other end of the N-male to N-male coaxial cable to the **DOWNLINK** connector on the Main Hub.
3. Connect an N-male to N-male coaxial cable to the receive simplex connector on the base station.
4. Connect the other end of the N-male to N-male coaxial cable to the **UPLINK** connector on the Main Hub.

Figure 6-1 Simplex Base Station to a Main Hub

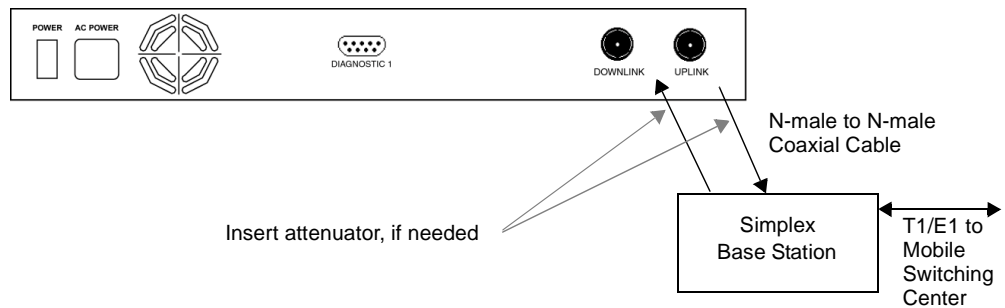


Connecting a Duplex Base Station to a Main Hub:

When connecting to a duplex base station, use a circulator between it and the Main Hub.

You can insert attenuators between the circulator and Main Hub as needed; refer to Section 8.6.1 on page 8-48 for more information.

1. Connect an N-male to N-male coaxial cable to the duplex connector on the base station.
2. Connect the other N-male connector to a circulator.
3. Connect an N-male to N-male coaxial cable to the **DOWNLINK** connector on the Main Hub.
4. Connect the other end of the N-male coaxial cable to the transmit connector on the circulator.
5. Connect an N-male to N-male coaxial cable to the **UPLINK** connector on the Main Hub.
6. Connect the other end of the N-male coaxial cable to the receive connector on the circulator.


Figure 6-2 Duplex Base Station to a Main Hub

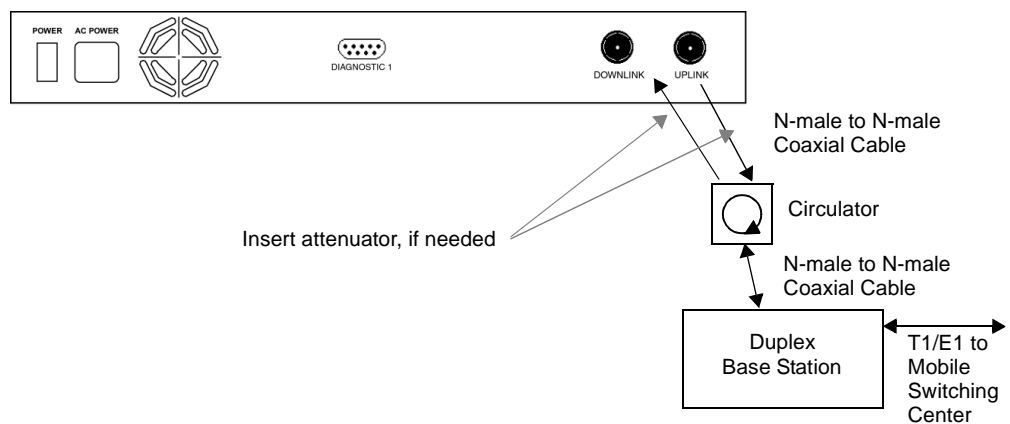

✓ Connecting a Main Hub to Multiple Base Stations

You can use power combiner/splitters to connect a Main Hub to multiple base stations, as shown in the following figure.

Figure 6-3 Connecting a Main Hub to Multiple Base Stations

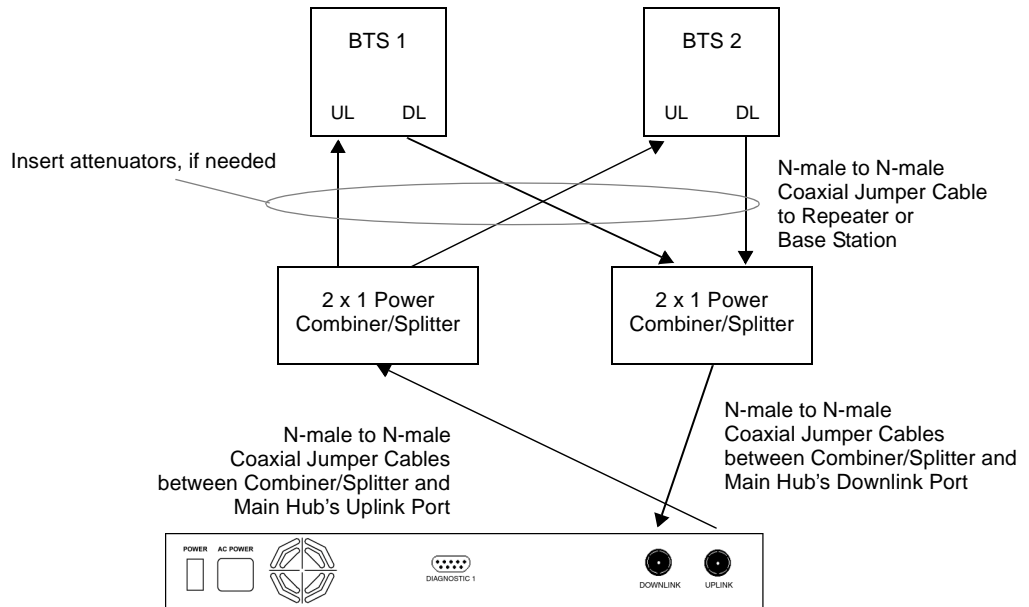


6.6.1 Connecting Multiple Main Hubs

You can use power combiner/splitters as splitters to connect multiple Main Hubs in order to increase the total number of RAUs in a system. You can also use power combiner/splitters to combine base station channels in order to increase the number of RF carriers the system transports.


The following figure shows connecting two Main Hubs to a simplex repeater or base station. Connecting two Main Hubs increases the total number of supportable RAUs from 32 to 64. Two Main Hubs support up to 8 Expansion Hubs which in turn support up to 64 RAUs.

Figure 6-4 Connecting Two Main Hubs to a Simplex Repeater or Base Station

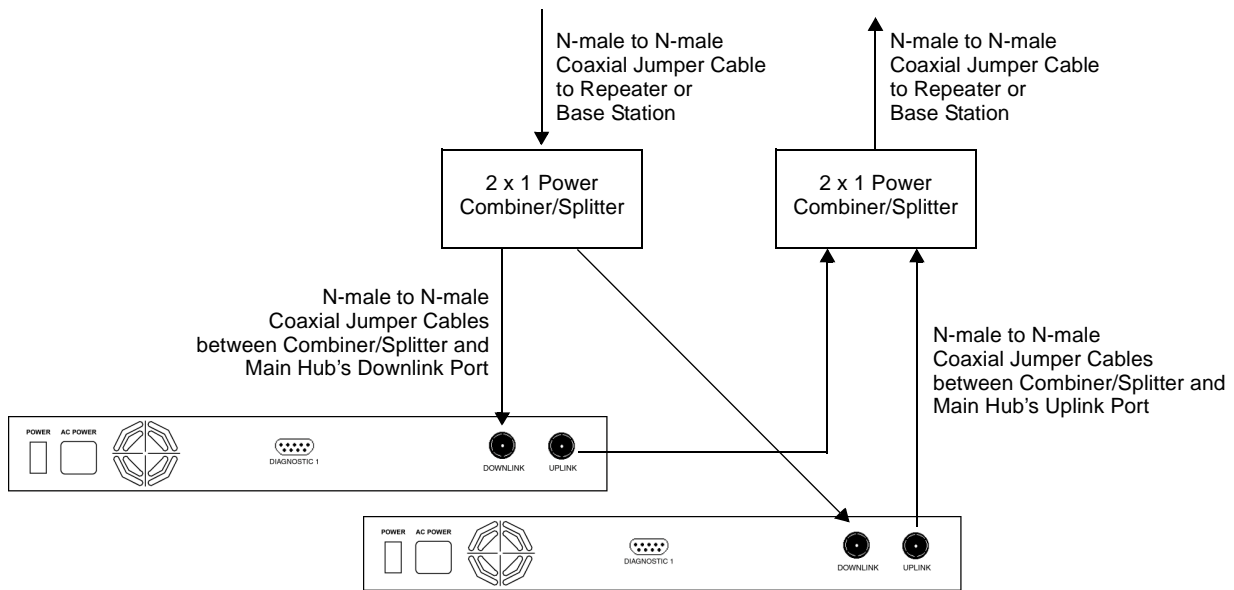

To connect two Main Hubs to a duplex repeater or base station, you need to use one circulator and one more coaxial jumper cable, as shown in the following figure.

Figure 6-5 Connecting Two Main Hubs to a Duplex Repeater or Base Station

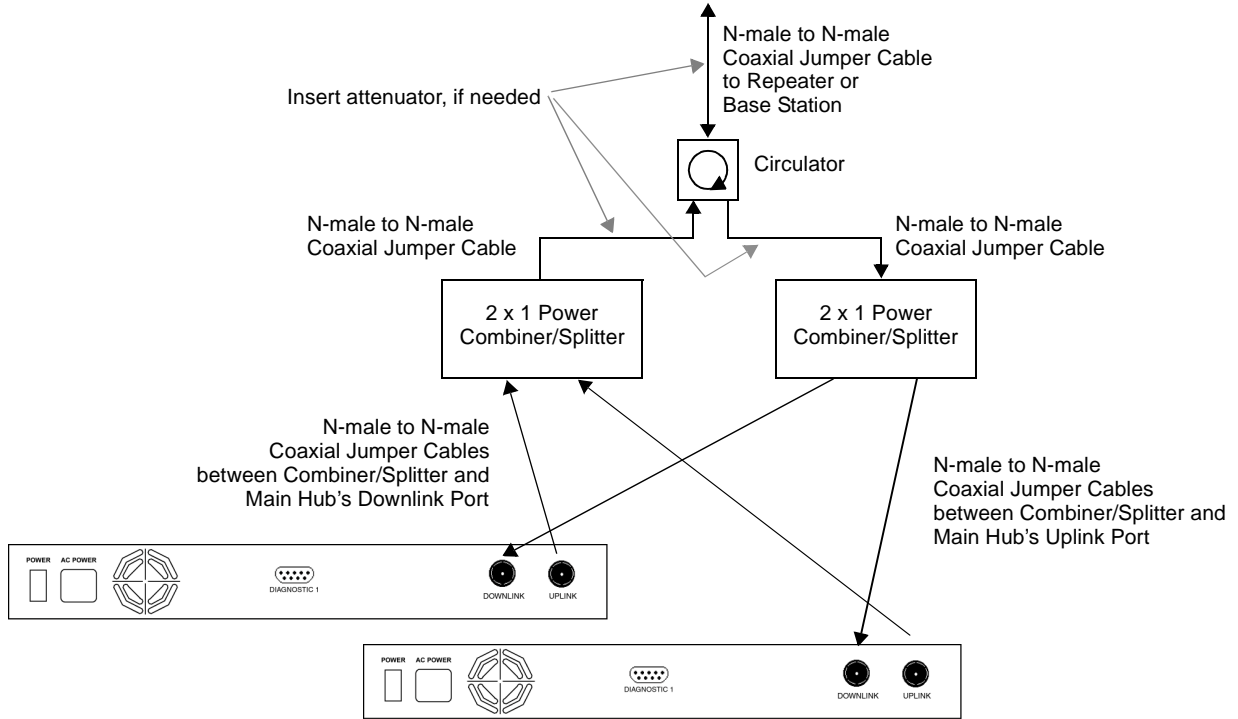

✓ Connecting Multiple Main Hubs to a Simplex Repeater or Base Station

You will need the following:

- 2 hybrid power combiner/splitters; one for uplink and one for downlink (2x1 for two Main Hubs, 3x1 for three, 4x1 for four, etc.)
- 1 N-male to N-male coaxial jumper cable between each power combiner/splitter and the base station
- 2 N-male to N-male coaxial jumper cables between each power combiner/splitter and each Main Hub

Figure 6-4 on page 6-30 illustrates this procedure.

1. Connect the power combiner/splitters to the repeater or base station using N-male to N-male coaxial jumper cables:
 - a. From the first power combiner/splitter to the repeater or base station
 - b. From the second power combiner/splitter to the repeater or base station
2. Connect the power combiner/splitters to the Main Hubs:
 - a. From the first Main Hub's **UPLINK** port to the first power combiner/splitter
 - b. From the first Main Hub's **DOWNLINK** port to the second power combiner/splitter
 - c. From the second Main Hub's **UPLINK** port to the first power combiner/splitter
 - d. From the second Main Hub's **DOWNLINK** port to the second power combiner/splitter
3. Check Main Hub LEDs.

After connecting and powering on the Main Hub, check all LEDs to ensure that the system is operating properly.

NOTE: Use a 50 ohm terminator on any unused power combiner/splitter ports.

✓ Connecting Multiple Main Hubs to a Duplex Repeater or Base Station

You will need the following:

- 2 hybrid power combiner/splitters; one for uplink and one for downlink (2x1 for two Main Hubs, 3x1 for three, 4x1 for four, etc.)
- 2 N-male to N-male coaxial jumper cables to connect each Main Hub to the power combiner/splitters
- 1 circulator
- 1 N-male to N-male coaxial jumper cable between each circulator and the repeater or base station
- 1 N-male to N-male coaxial jumper cable between each circulator and power combiner/splitter

Figure 6-5 on page 6-31 illustrates this procedure.

1. Connect the Circulator to the power combiner/splitters and to the repeater or base station using one N-male to N-male coaxial jumper cable.
2. Connect each power combiner/splitter to the circulator using one N-male to N-male coaxial jumper cable.
3. Connect the power combiner/splitter to the Main Hubs:
 - a. From the first Main Hub's **UPLINK** port to the first power combiner/splitter
 - b. From the first Main Hub's **DOWNLINK** port to the second power combiner/splitter
 - c. From the second Main Hub's **UPLINK** port to the first power combiner/splitter
 - d. From the second Main Hub's **DOWNLINK** port to the second power combiner/splitter
4. Check Main Hub LEDs.

After connecting and powering on the Main Hub, check all LEDs to ensure that the system is operating properly.

NOTE: Use a 50 ohm terminator on any unused power combiner/splitter ports.

6.7 Connecting Contact Alarms to a Unison System

John Boyd: NO and NC contact sense info

Alarm Source intro

Alarm Sense intro


6.7.1 Alarm Source

Unison is always an alarm source, no matter what type of equipment you are connecting to.

Using MetroReach Focus to Monitor Unison

When you connect MetroReach Focus to Unison, the Unison Main Hub is the output of the alarms (alarm source) and Focus is the input (alarm sense), as shown in the following figure.


Figure 6-6 Connecting MetroReach to Unison

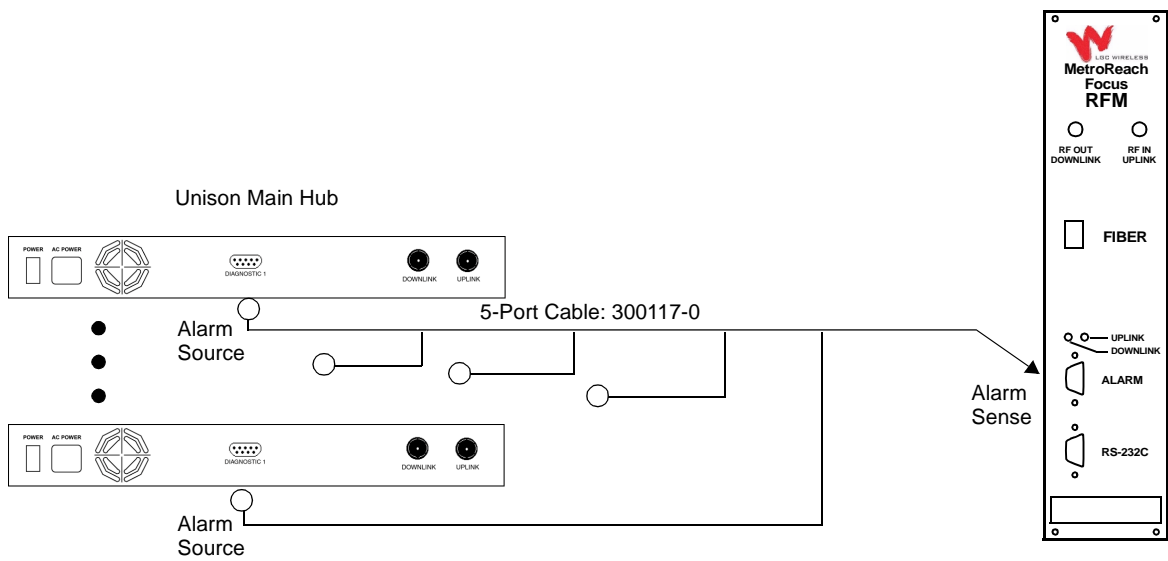

Using a Base Station to Monitor Unison

When you connect a BTS to Unison, the Unison Main Hub is the output of the alarms (alarm source) and the BTS is the input (alarm sense), as shown in the following figure.


Figure 6-7 Connecting a BTS to Unison

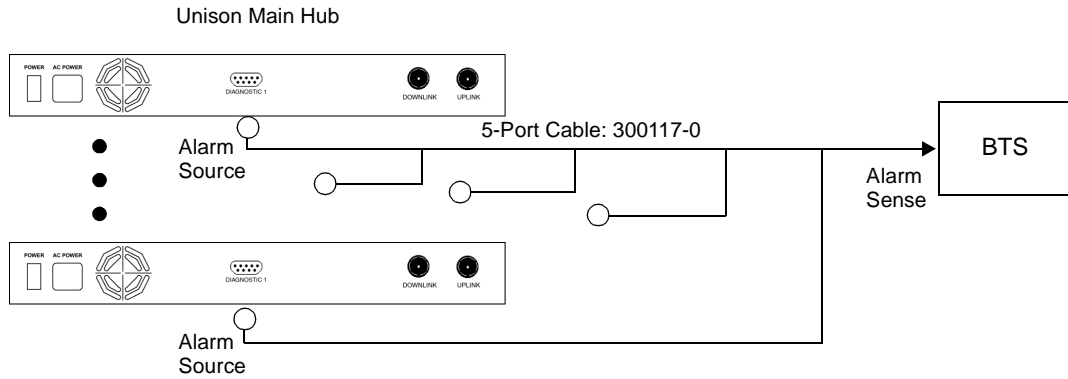

Daisy-Chained Alarm Source Cable

The daisy-chained alarm cable (PN 300117-0) that is used in these configurations is shown in Figure 6-8.

Figure 6-8 Daisy-Chained Alarm Source Cable

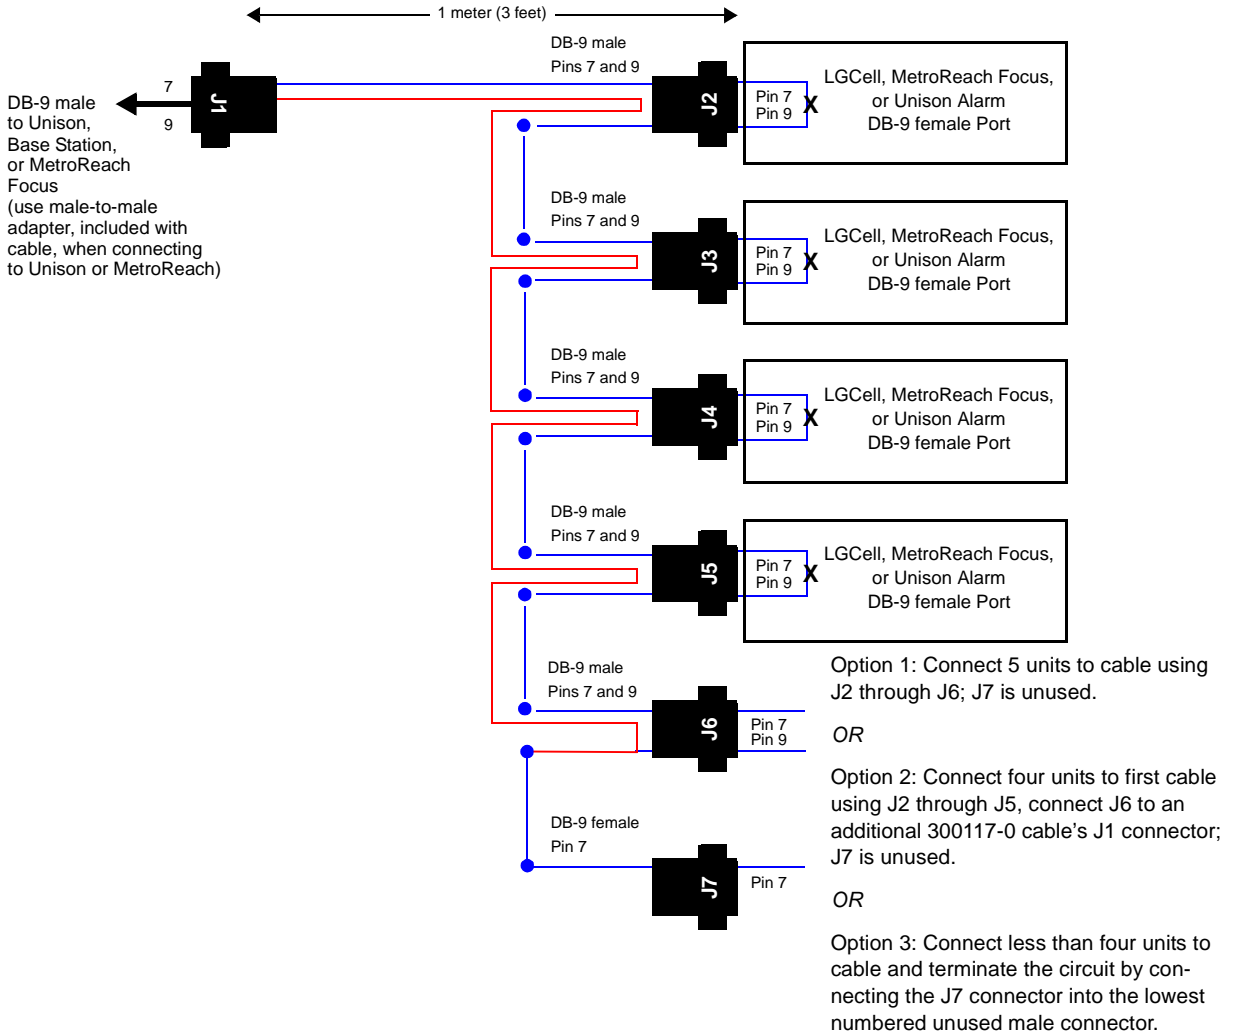


6.7.2 Alarm Sense

Use the AdminManager to enable the Unison system for “alarm sense” when connecting to the contact closure of LGCell Main Hubs.

Using Unison to Monitor LGCells

When you connect LGCell to Unison, the Unison Main Hub is the input of the alarms (alarm sense) and the LGCell is the output (alarm source), as shown in the following figure.

Figure 6-9 Connecting LGCell to Unison

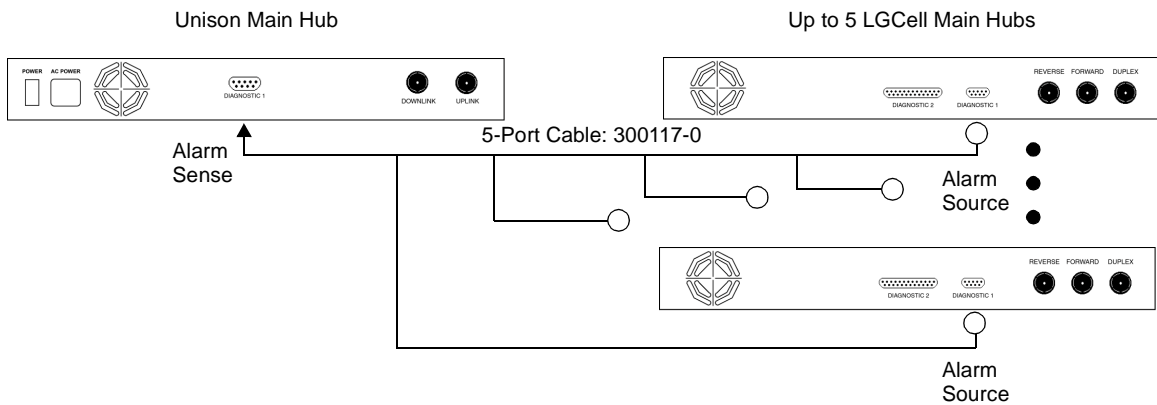

John: How do I show the adaptor in this drawing?

Alarm Sense Cable Adaptor

Figure 6-10 shows the alarm sense cable adaptor (PN XXXXXX-0) that is used with the daisy-chained alarm source cable in this configuration.


Figure 6-10 Alarm Sense Adaptor

Installing and Using the AdminManager Software

The AdminManager software is used to install, configure, and maintain the Unison system from a PC or laptop that you connect directly to a Main Hub's front panel serial port.

You can use the AdminManager to remotely view system status by connecting a PC or laptop to the Unison system via a dialup modem.

Figure 7-1 PC Connected to Main Hub

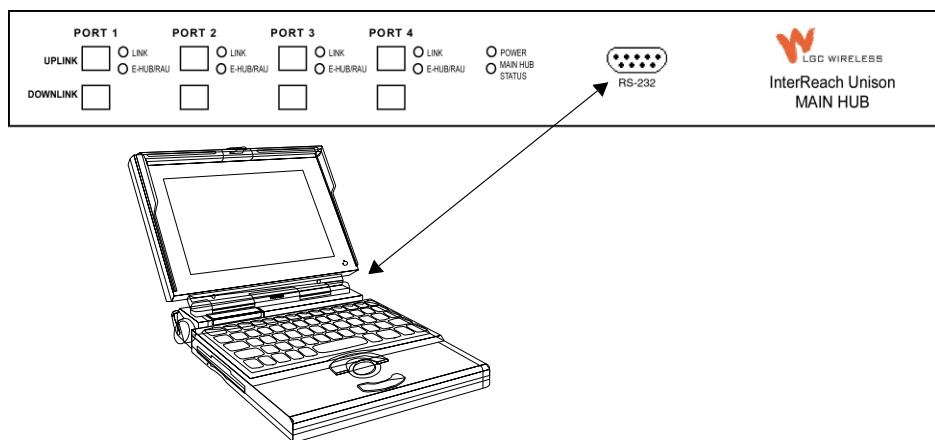

7.1 Installing the AdminManager Software

7.1.1 PC/Laptop Requirements

- Operating System:
 - Windows 2000 Professional (recommended)
 - Windows 98 SE with IE 5.0
- 1 Communication Port (COM1–COM4)
- 133 MHz or higher Pentium-compatible CPU
- 64 MB memory (Windows 2000) or 32 MB (Windows 98 SE)
- At least 150 MB free disk space
- VGA or higher resolution
- Standard 9600 Modem
- CD-ROM drive
- DB-9 female-to-DB-9 female NULL modem cable


✓ Installing AdminManager

Install the AdminManager software on a PC/laptop that meets the requirements as described in Section 7.1.1.


1. Turn on the PC/laptop and insert the AdminManager CD into the PC/laptop's CD drive.

setup.exe is automatically launched.

The following pop-up window is displayed while InstallShield checks the PC's system.

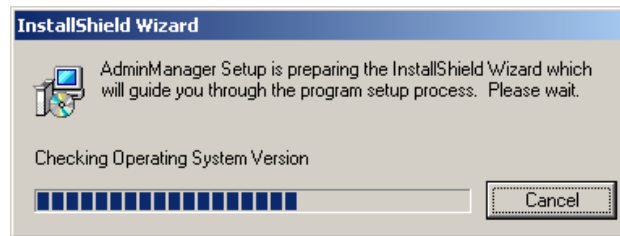


The Welcome to InstallShield Wizard window is displayed.

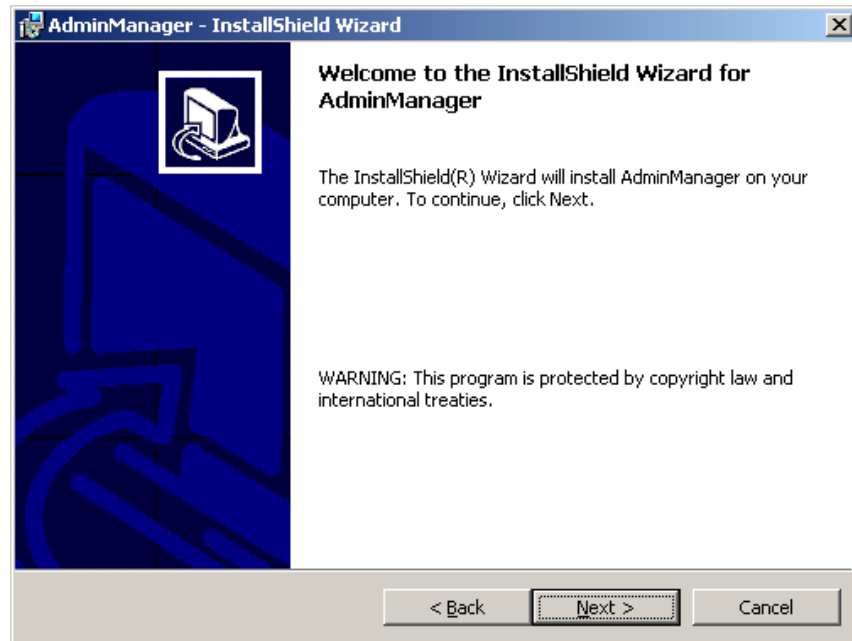

2. Click the NEXT button to begin the AdminManager installation.


The License Agreement window is displayed.

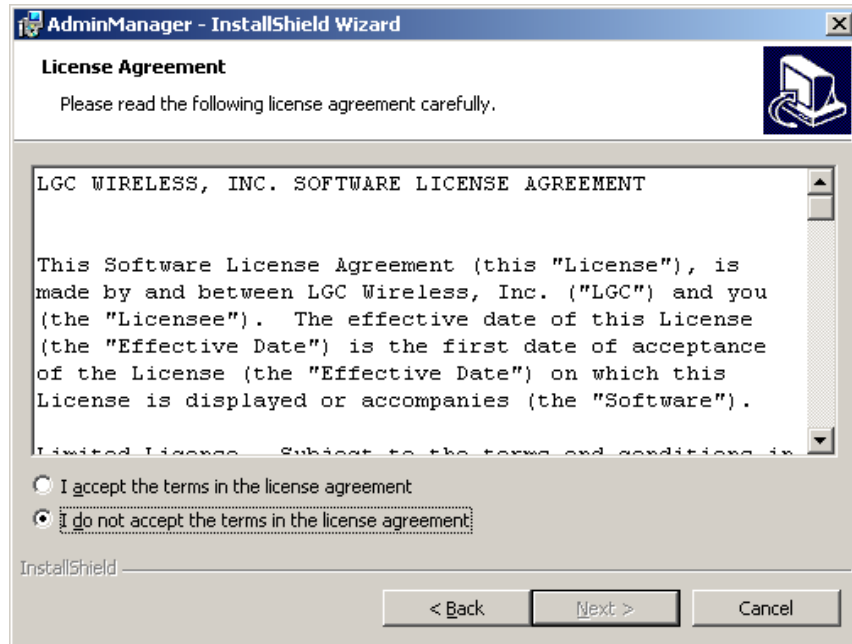

If you select the "I do not accept" radio button, the InstallShield Wizard stops and the windows close.

3. Read the agreement and select the “I accept” radio button, and then click the NEXT button.


The Customer Information window is displayed.

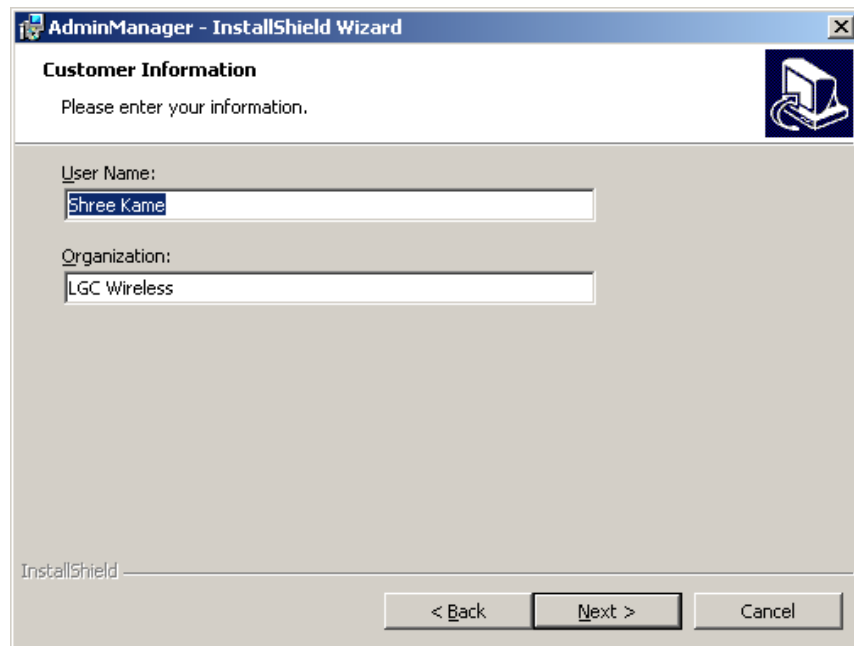


The screenshot shows a Windows-style dialog box titled "AdminManager - InstallShield Wizard". The window has a blue title bar with a close button (X) in the top right corner. Below the title bar, the text "Customer Information" is displayed in bold, followed by the instruction "Please enter your information." and a small icon of a computer monitor with a mouse. The main area of the window contains two text input fields. The first field is labeled "User Name:" and contains the text "Shree Kame". The second field is labeled "Organization:" and contains the text "LGC Wireless". At the bottom of the window, there are three buttons: "< Back", "Next >", and "Cancel". The "Next >" button is highlighted with a dark border. The text "InstallShield" is visible in the bottom left corner of the window's content area.

4. Enter a User Name and Organization in the text boxes, and then click the NEXT button.

The Destination Folder window is displayed

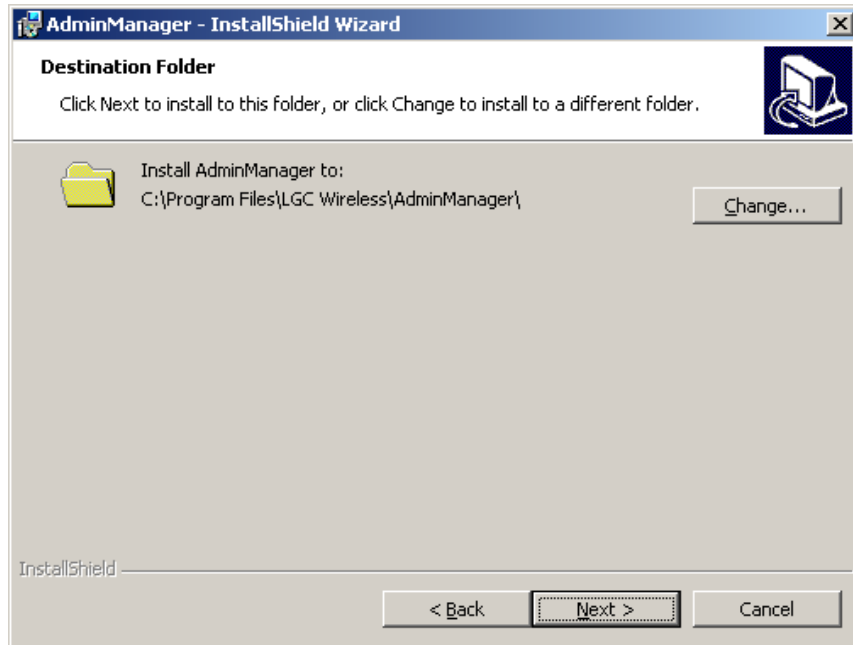


5. Click the NEXT button to accept the default destination.
The Ready to Install the Program window is displayed.

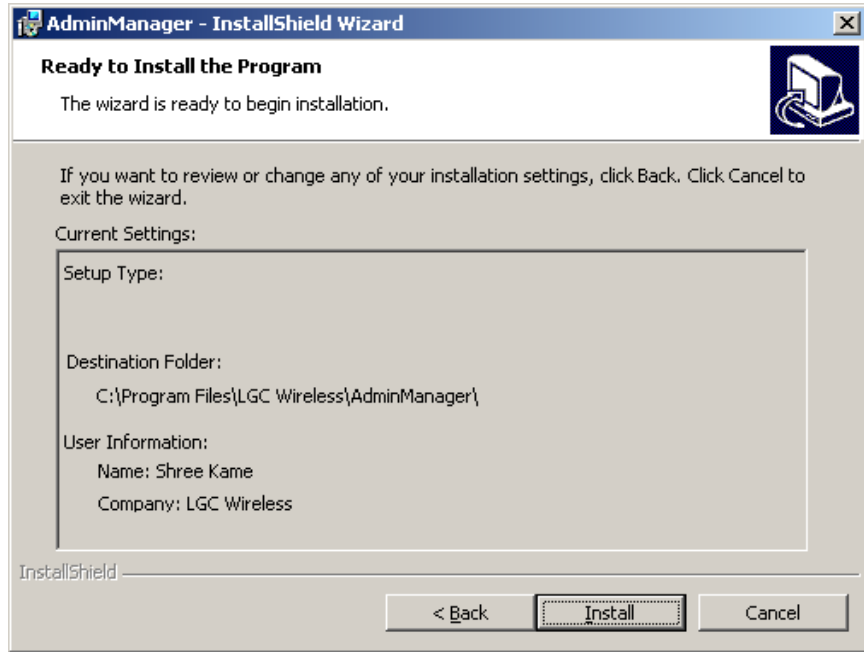


NOTE: To change information that is displayed in the Ready to Install the Program window, click the BACK button and make changes in previous windows.

- Click the **INSTALL** button if the information that is displayed in the Ready to Install the Program window is correct.

The Installing AdminManager window is displayed.

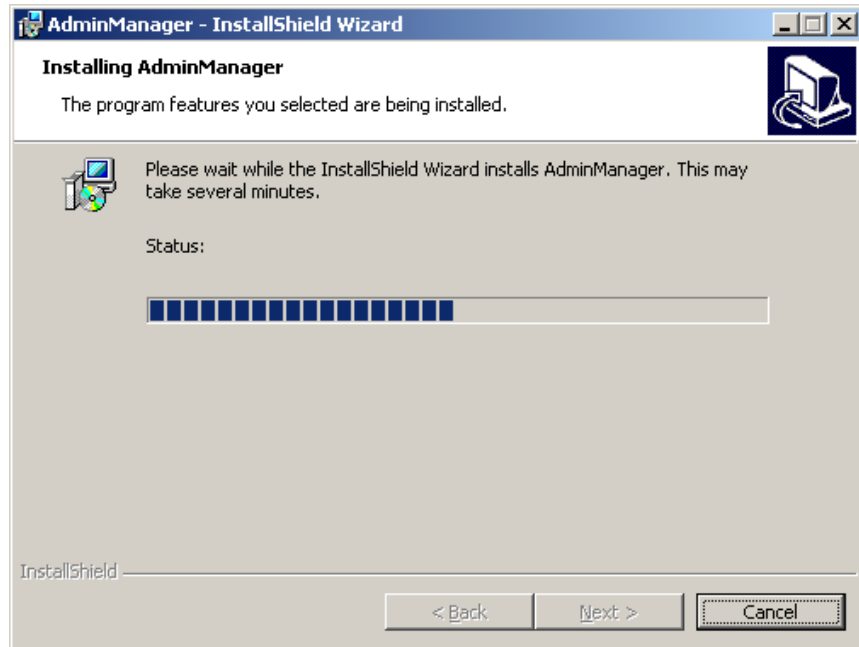


PDF files are used for Help. If the InstallShield Wizard detects that the PC does not have software for viewing PDF files, the following pop-up is displayed.

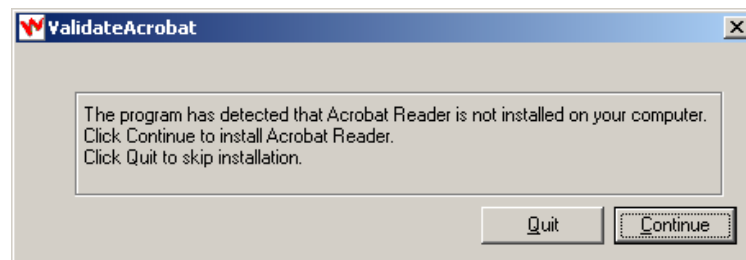

- Click **CONTINUE** to install Acrobat Reader from the CD onto your PC.
- Click **QUIT** to skip the installation of Acrobat Reader.

When the installation is finished, the InstallShield Wizard Completed window is displayed.

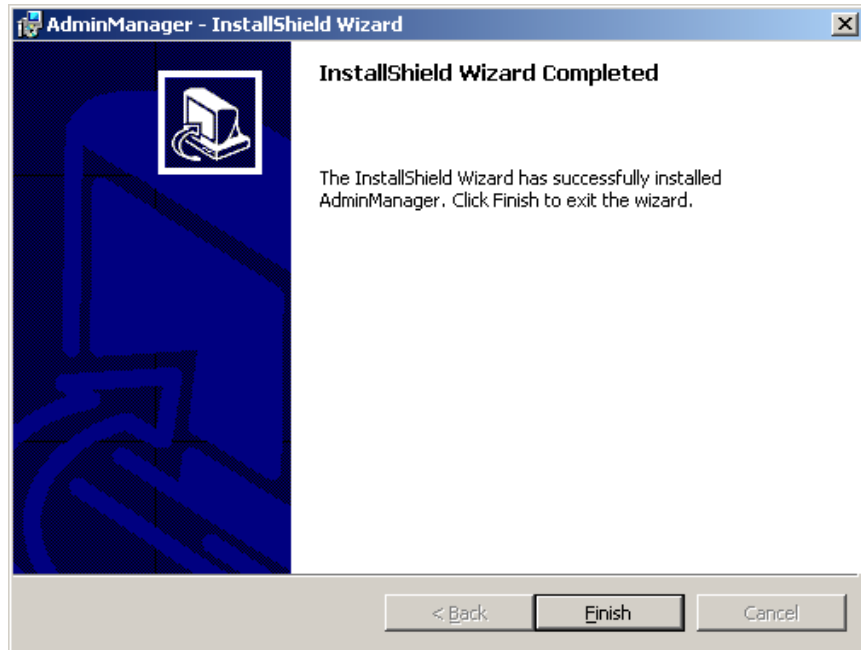

7. Click the FINISH button to end the InstallShield Wizard session and close the window.

An AdminManager shortcut is added to your PC's Start menu and an icon is added to your desktop.


✓ Starting AdminManager

1. Using the NULL modem cable, connect the PC/laptop to the Main Hub's front panel RS-232 connector.
2. Turn on the power to the Main Hub, if it is not already on.
3. Double-click the AdminManager icon to start the software.

Alternately, you can click the Start button that is on the PC's taskbar, click Programs, click AdminManager, and then click the AdminManager application.

The following window is displayed when AdminManager starts.

Figure 7-2 AdminManager Start Window

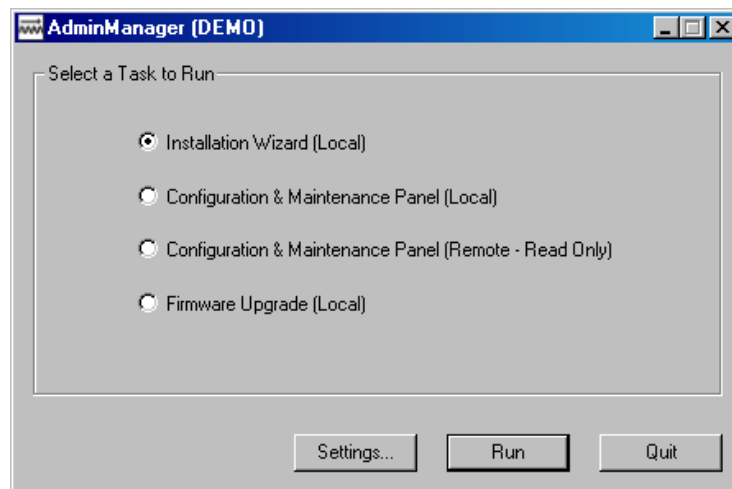

You can display the AdminManager User Guide at any time while the software is running by pressing the F1 key.


AdminManager Operation Modes

You can choose one of four operation modes from the AdminManager Start window.

- **Section 7.2 Installation Wizard** 7-12
Select this option when you are installing a system or a Main Hub for the first time.
- **Section 7.3 Configuration & Maintenance Panel** 7-24
 - **Section 7.3.2 Options when Connected Locally** 7-28
Select this option when you want to perform specific tasks, such as perform the system test and set system parameters, or check the status of an operating system. All options are available when you are connected locally.
 - **Section 7.3.3 Read-Only Options when Connected Remotely** 7-33
The Configuration Panel is displayed in a read-only state. When you are connected remotely there are a limited number of options available. The options let you check the status of the system and determine if a site visit is required. (This is the only operation mode you can choose when you are connected remotely.)
- **Section 7.4 Upgrading Firmware** 7-37
Select this option when you are upgrading a component's firmware.

Buttons

- **Settings**
Clicking the SETTINGS button displays the Application Setting dialog box in which you enter the communications port number that the modem will connect to for remote monitoring and that the PC will use for connecting directly to a Main Hub

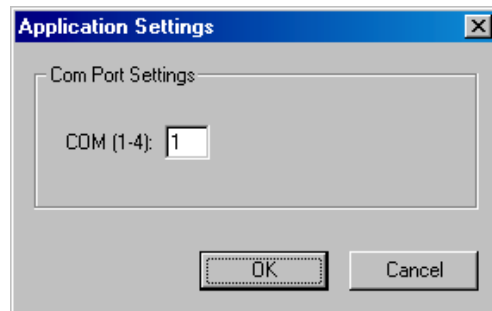

- **Run**
Depending on the operation option that you selected, clicking the RUN button displays the Step 1 panel of the Installation Wizard, the Configuration & Maintenance window, or the Firmware Update window.
- **Quit**
Clicking the QUIT button stops the AdminManager and closes the panel.

7.2 Installation Wizard


Use the Installation Wizard when you are installing a new system or a new Main Hub to a system. Installation consists of four steps; each one is displayed in a separate panel of the Wizard.

- Section 7.2.1 Step 1: Verify Hardware 7-13
- Section 7.2.2 Step 2: Set Operation Band 7-15
- Section 7.2.3 Step 3: Configure System Parameters 7-19
- Section 7.2.4 Step 4: Final System Test 7-21

7.2.1 Step 1: Verify Hardware

During this step, the AdminManager software is in a listening mode. The Main Hub detects downstream units (Expansion Hubs and RAUs) and automatically reports the system configuration, which AdminManager displays as a configuration tree in the System Status pane of the Step 1 panel.

Figure 7-3 Step 1: Verify Hardware Panel

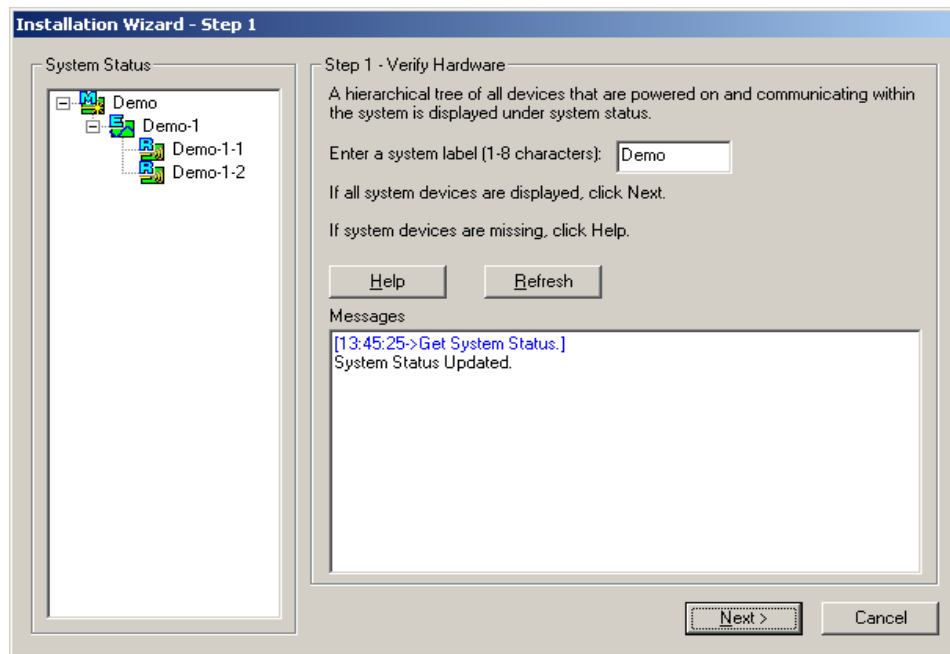

✓ Verify Hardware Configuration

1. Enter a system label (up to 8 characters) in the System Label text box.
This label is assigned to the Main Hub and appears in the System Status tree.
2. Click the NEXT button when the configuration is displayed correctly in the System Status pane.

The Main Hub automatically reports any change in system status to the Admin-Manager, which automatically updates the System Status tree.

7.2.1.1 Description of Step 1 Panel

Panes

- **System Status**

A hierarchical tree of detected system components is displayed in the System Status pane. See Section 7.5 on page 7-38 for more information about the System Status tree.

- **Messages**

Status and error messages are displayed in the Messages pane. If the status is okay, the NEXT button is selectable.

Command Buttons

- **Help**

Clicking the HELP button displays the Unison Hardware Troubleshooting Guide.

- **Refresh**

Clicking the REFRESH button issues a query status command to the Main Hub and the System Status tree is updated. Also, any disconnect status is cleared. While the Main Hub does report system status to the AdminManager automatically, you can use this button to force an update if communications fail or if there has been a status change that is not showing in the System Status tree.

- **Next**

Clicking the NEXT button displays the Installation Wizard Step 2 panel.


- **Cancel**

Clicking the CANCEL button quits the Installation Wizard and displays the AdminManager Start window (Figure 7-2).

7.2.2 Step 2: Set Operation Band

The Main and Expansion Hubs are manufactured and shipped without a band of operation programmed into them. The RAUs, on the other hand, are manufactured to a specific band or set of bands. In order for the system to perform, you must program the Main and Expansion Hubs to the band that the downstream RAUs are intended for.

Figure 7-4 Step 2: Set Operation Band

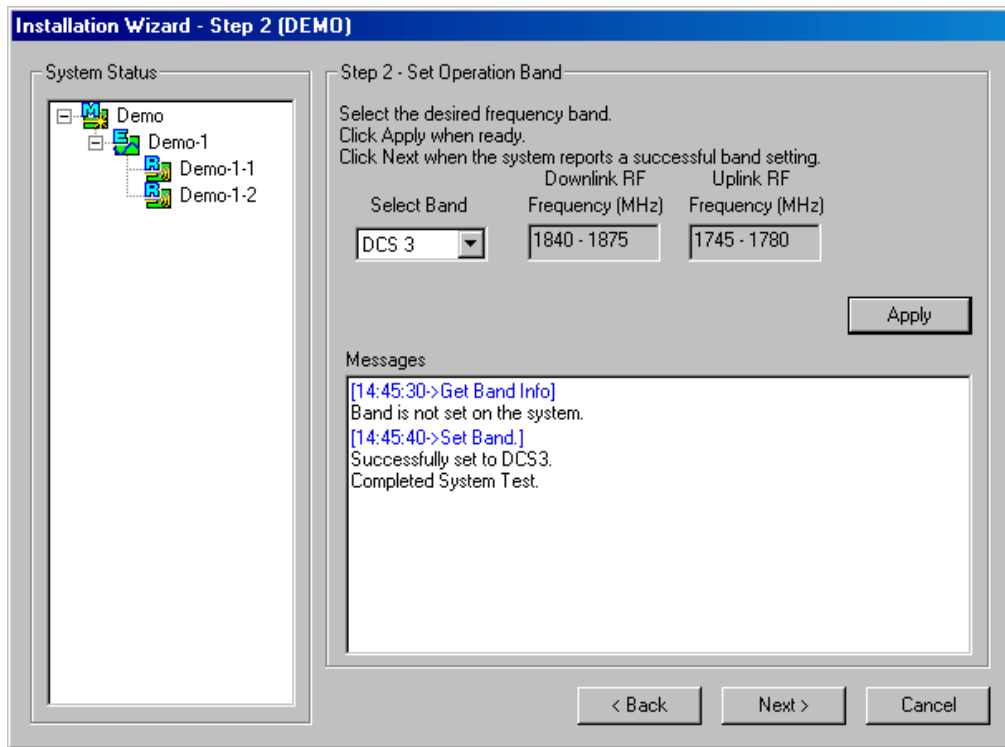

Set Operation Band

1. Select a band from the Select Band drop-down list box.
2. Click the APPLY button.
3. Click the NEXT button if:
 - a. The configuration is displayed correctly in the System Status pane.
 - b. There are no error messages in the Messages pane.

If a band setting error message is displayed, you can:

1. Disconnect the unit from the system.
2. Click the BACK button to return to Step 1.
3. Click the REFRESH button to clear the disconnected unit.
4. Click the NEXT button to continue to Step 2.

NOTE: “Band not initialized” faults can only be cleared by performing Step 2. The Configuration & Maintenance panel does not provide a way to clear these faults.

7.2.2.1 Description of Step 2 Panel

Panes

- **System Status**

A hierarchical tree of detected system components is displayed in the System Status pane. See Section 7.5 on page 7-38 for more information about the System Status tree.

- **Messages**

Status and error messages are displayed in the Messages pane. If the status is okay, the NEXT button is selectable.

Drop-Down List Box

- **Select Band**

Choose from:

Unison Band	RF Passband	
	Downlink (MHz)	Uplink (MHz)
Cellular	869–894	824–849
DCS1	1805–1842.5	1710–1747.5
DCS2	1842.5–1880	1747.5–1785
DCS3	1840–1875	1745–1780
EGSM	925–960	880–915
GSM	935–960	890–915
iDEN	851–869	806–824
PCS A&D	1930–1950	1850–1870
PCS B&E	1945–1965	1865–1885
PCS D&B	1950–1970	1870–1890
PCS E&F	1965–1975	1885–1895
PCS F&C	1970–1990	1890–1910
UMTS 1	2110–2145	1920–1955
UMTS 2	2125–2160	1935–1970
UMTS 3	2135–2170	1945–1980

Command Buttons

- **Apply**

Clicking the APPLY button issues the set band command to the Main Hub and all downstream components.

In order for the system to complete the band configuration, the factory-set band of all the attached RAUs must match the band command issued by the AdminManager software. If the band command matches the RAU's, then the system band is set. If the band command does not match, the command is rejected and a "Set band error" message for that RAU is displayed.

- **Back**

Clicking the BACK button returns AdminManager to the Step 1 panel.

- **Next**

Clicking the NEXT button displays the Installation Wizard Step 3 panel. This button is selectable only when the APPLY function is successful.


- **Cancel**

Clicking the CANCEL button quits the Installation Wizard and displays the AdminManager Start window (Figure 7-2).

7.2.3 Step 3: Configure System Parameters

From this panel, you can set uplink and downlink system gain from 0 dB to 15 dB in 1 dB steps. By default, the UL and DL System Gain is set at 15 dB. Current hardware settings are shown in the text boxes when the panel is first displayed. Figure 7-5 shows the display after the UL System Gain was changed to 11 dB.

Figure 7-5 Step 3: Configure System Parameters

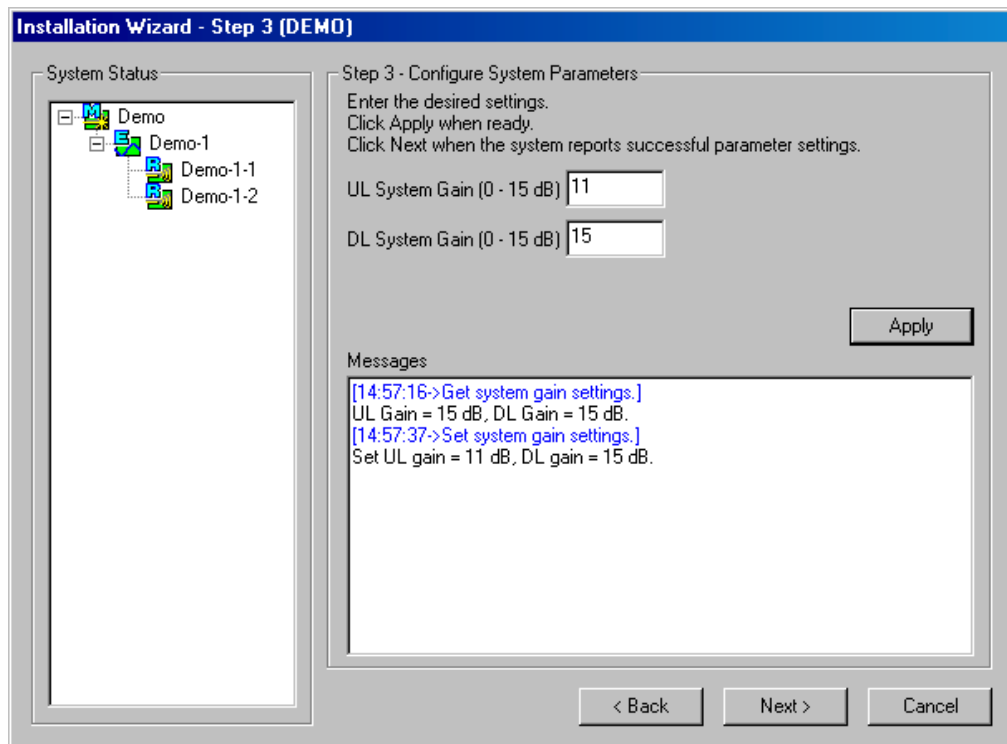

✓ Configure System Parameters

If you want to keep the values as they are initially displayed, click the NEXT button.

If you want to change the values:

1. Enter a value in the UL System Gain text box, if desired.
2. Enter a value in the DL System Gain text box, if desired.
3. Click the APPLY button when you are ready.
4. Click the NEXT button if:
 - a. The configuration is displayed correctly in the System Status pane.
 - b. There are no error messages in the Messages pane.

7.2.3.1 Description of Step 3 Panel

Panes

- **System Status**

A hierarchical tree of detected system components is displayed in the System Status pane. See Section 7.5 on page 7-38 for more information about the System Status tree.

- **Messages**

Status and error messages are displayed in the Messages pane. If the status is okay, the NEXT button is selectable.

Text Boxes

- **UL System Gain and DL System Gain**

Both the uplink and the downlink system gain can be adjusted from 15 dB to 0 dB in 1 dB increments using these text boxes.

Command Buttons

- **Apply**

Clicking the APPLY button sets the selected value.

- **Back**

Clicking the BACK button returns AdminManager to the Step 2 panel.

- **Next**

Clicking the NEXT button displays the Installation Wizard Step 4 panel.


- **Cancel**

Clicking the CANCEL button quits the Installation Wizard and displays the AdminManager Start window (Figure 7-2).

7.2.4 Step 4: Final System Test

This step performs an end-to-end RF path functional test that includes cable length estimation and system gain refinement. Any disconnect status is cleared and all fault logs are cleared.

Figure 7-6 Step 4: Final System Test

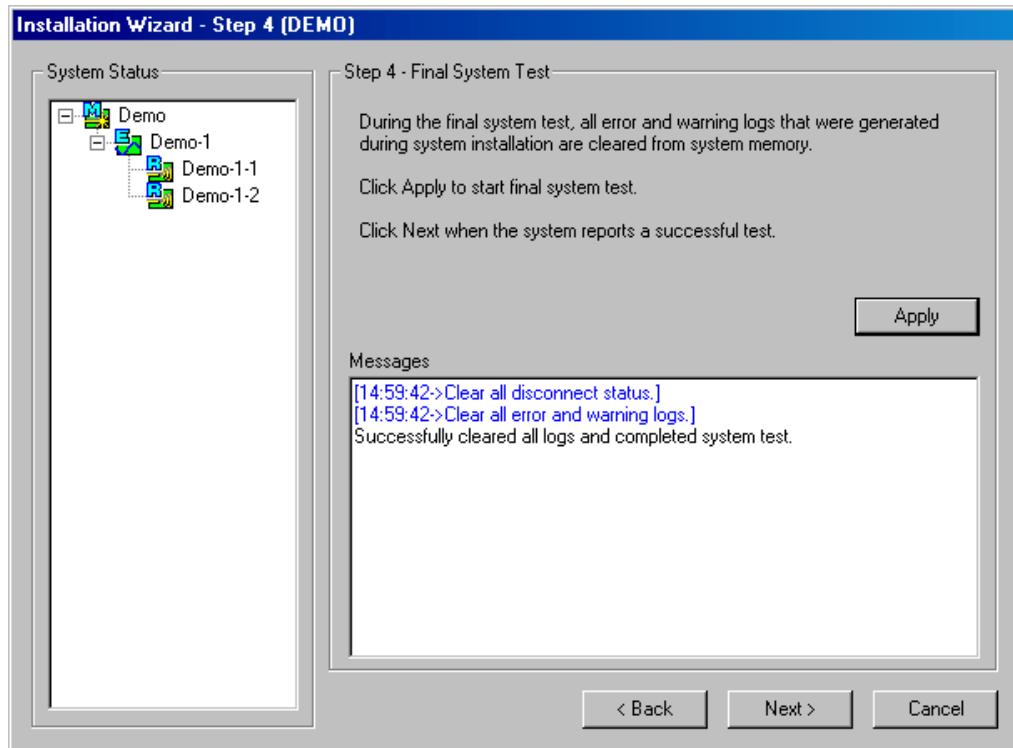

✓ Perform Final System Test

1. Click the APPLY button if the configuration is displayed correctly in the System Status pane.
2. Click the NEXT button when a successful test message is displayed in the Messages pane.

You can use the BACK button to return to previous steps and make changes if an error is displayed in the Messages pane.

7.2.4.1 Description of Step 4 Panel

Panes

- **System Status**

A hierarchical tree of detected system components is displayed in the System Status pane. See Section 7.5 on page 7-38 for more information about the System Status tree.

- **Messages**

Status and error messages are displayed in the Messages pane. If the status is okay, the NEXT button is selectable.

Command Buttons

- **Apply**

Clicking the APPLY button starts the final system test.

- **Back**

Clicking the BACK button returns AdminManager to the Step 3 panel.

- **Next**

Clicking the NEXT button displays the Installation Wizard Finish panel. This button is selectable only when the APPLY function is successful.


- **Cancel**

Clicking the CANCEL button quits the Installation Wizard and displays the AdminManager Start window (Figure 7-2).

7.2.5 Finish Panel

The Finish panel is displayed when the final system test is successfully completed.

Figure 7-7 Finish Panel

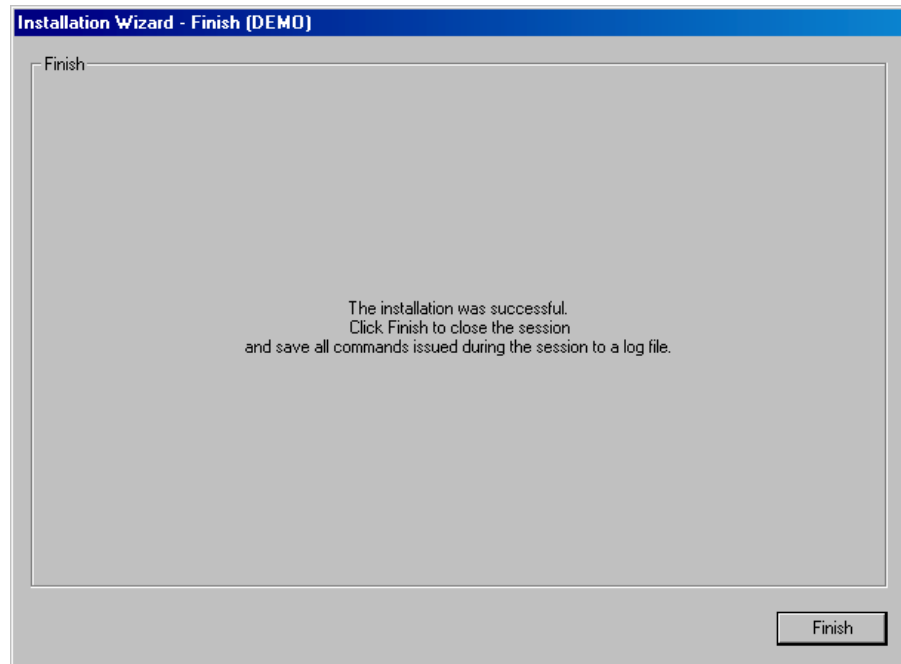

1. Click the FINISH button.
A Save As dialog box is displayed.
2. Specify a file name and where to save the configuration file.
The information that is stored in the configuration file is required for the As-Built Documentation.

7.2.5.1 Description of Finish Panel

Command Button


- **Finish**

Clicking the FINISH button displays a Save As dialog box for saving the configuration file and then quits the session.

7.3 Configuration & Maintenance Panel

The Configuration & Maintenance Panel is used after the initial installation of a system. From this panel you can check status of the system, get current errors and warnings, get information about a particular unit in the system, set system parameters, and perform a system test, for example.

Figure 7-8 Configuration & Maintenance Window

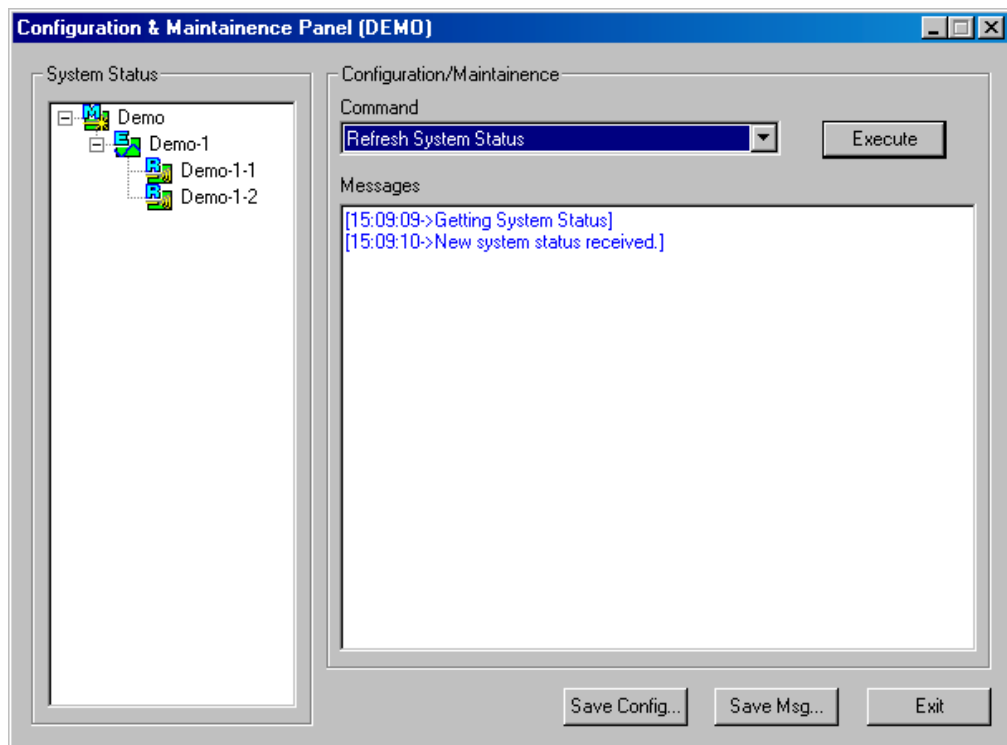

7.3.1 Window Description

Panes

- **System Status**

A hierarchical tree of detected system components is displayed in the System Status pane. See Section 7.5 on page 7-38 for more information about the System Status tree.

- **Messages**

Status and error messages are displayed in the Messages pane.

Drop-Down List Box

Table 7-1 Configuration and Maintenance Window Options

Connection		Option
Local	Remote	
✓		Advanced RAU Settings
✓		Clear All Disconnect Status
✓		Command Unit In-Service
✓		Command Unit Out-of-Service
✓	✓	Get Current Errors
✓	✓	Get Current Warnings
✓	✓	Get System Parameters
✓	✓	Get Unit Info
✓	✓	Refresh System Status
✓		Set Callback Number
✓		Set Contact Sense Properties
✓		Set System Parameters
✓		System Test


Command Buttons

- **Execute**

Clicking the EXECUTE button starts the command that is selected in the Command list box.

- **Save Config**

Clicking the SAVE CONFIG button displays the Save Configuration Notes dialog box. Any additional information that you type into the text box is saved at the top of the configuration file.

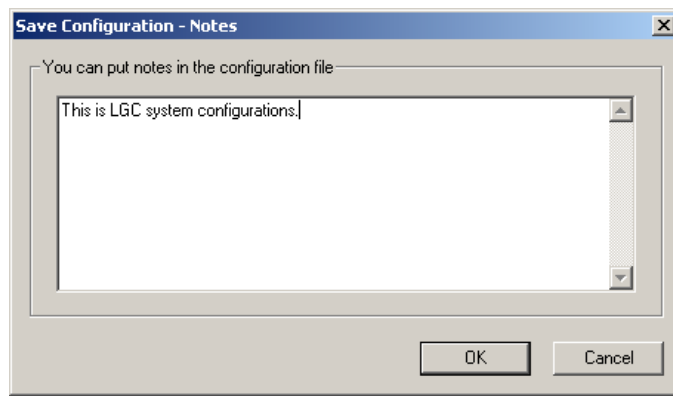

After you click OK in this dialog box, the Save As dialog box is displayed, in which you specify the name of the file and where to save the configuration file. Following is an example configuration file that includes notes:

```

Begin Notes *****
LGC HQ
05/23/01 MH configuration L010MH11
System configuration
End Notes *****

Frequency Band is DCS Low.
System Gain: UL = 12 dB, DL = 4 dB.
Callback Number is 1234567.
System label is LGC.

Main Hub Information:
Serial Number: L010BMH1
Part Number: 7405101
Revision Number: 03
Firmware Revision: 010526

Expansion Hub LGC-1 Information:
Serial Number: L010BEH9
Part Number: 7405101
Revision Number: 03
Firmware Revision: 010513

RAU LGC-1-5 Information:
Serial Number: L010BRU1
Part Number: 7405101
Revision Number: 03

Firmware Revision: 010021

```

- **Save Msg**

Selecting the **SAVE MSG** button displays the Save As dialog box in which you specify the name of the file and where to save the contents of the Message text box.

- **Exit**


Selecting the **EXIT** button quits the session and displays the AdminManager Start window (Figure 7-2).

7.3.2 Options when Connected Locally

When you are locally connected to the Main Hub, you can choose the following options in addition to those listed in Section 7.3.3, “Read-Only Options when Connected Remotely,” on page 7-33 (also, see Table 7-1 on page 7-25).

Advanced RAU Settings

- Set uplink and downlink 10 dB attenuation for an individual RAU
Refer to “Using the 10 dB Attenuation Setting” on page 7-29 for a description of this setting.
- Select a UL ALC setting for an individual RAU
Refer to “Using the Uplink ALC Setting” on page 7-30 for a description of this setting.

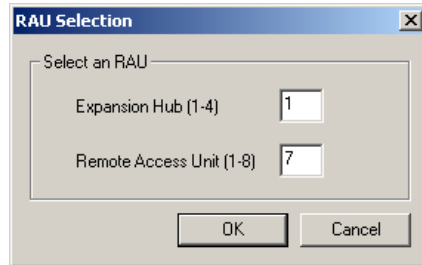


1. Enter the Expansion Hub number and the RAU number in the text boxes on the RAU Selection dialog box and click OK.

The Advanced RAU Settings dialog box is displayed.”

In the Advanced RAU Settings example shown below, Demo-1-1 indicates that RAU number 1 that is connected to Expansion Hub number 1 in the “Demo” Main Hub system is selected.

2. Select the Uplink and Downlink check box to enable the 10 dB attenuation setting.
3. Select a radio button from the UL ALC Setting list.

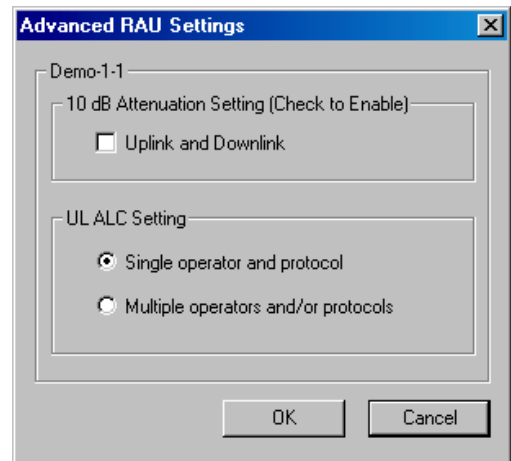

Using the 10 dB Attenuation Setting

By selecting the Uplink and Downlink checkbox in the Advanced RAU Settings dialog box, the uplink and downlink signals in the individual RAU, which you specified in the RAU Selection dialog box, are both reduced by 10 dB. One reason you may want to use this setting is to reduce the RAU's output power when an RAU is located near an exterior wall of a building and its RF signal is going beyond the wall to the outside of the building, where it can negatively affect the outdoor macro system.

The following table shows some examples of how the 10 dB attenuation setting affects coverage distance. These examples assume a 0 dB gain system, a 3 dBi gain antenna, and the difference between a -85 dB and a -75 dB design.

Frequency	Environment	Reduction in Coverage Distance
800 MHz	Open, like a parking garage	24 meters (80 feet)
800 MHz	Heavily walled, like a Hospital	12.5 meters (41 feet)
1900 MHz	Open, like a parking garage	24 meters (80 feet)
1900 MHz	Heavily walled, like a Hospital	9 meters (30 feet)

You can use the following formula to calculate the reduction in distance covered.

- d_{orig} = original distance
- d_{new} = new distance with 10 dB attenuation enabled
- PLS = path loss slope [dB]

$$d_{\text{new}} = (10^{-10/\text{PLS}})d_{\text{orig}}$$

Examples:

$$d_{\text{new}} = 0.31 d_{\text{orig}} \text{ for PLS} = 20 \text{ dB (free space)}$$

$$d_{\text{new}} = 0.46 d_{\text{orig}} \text{ for PLS} = 30 \text{ dB}$$

Using the Uplink ALC Setting

Uplink automatic level control (UL ALC) circuitry within the RAU provides automatic level control on high-power signals in the uplink path. This functionality is required to prevent compression caused by a single or multiple wireless devices that are in very close proximity to an RAU. Compression causes signal degradation and, ultimately, bit errors, and should be prevented. Two settings are available to optimize UL ALC performance:


- **Single Operator and Protocol:** Use when only one operator and protocol is on-the-air within the Unison system's configured and adjacent frequency bands.
- **Multiple Operators and/or Protocols:** Use when more than one operator and/or protocol is present in the Unison system's frequency and adjacent frequency bands.

The following table shows the frequency bands that are adjacent to the bands that the system is configured for.


Table 7-2 Frequency Bands Adjacent to System Configured Bands

System Configuration	Adjacent Bands
iDEN	Cellular
Cellular	iDEN
PCS AD	PCS B
PCS DB	PCS A, PCS E
PCS BE	PCS D, PCS F
PCS EF	PCS B, PCS C
PCS FC	PCS E
GSM	–
EGSM	–
DCS 1	DCS 2
DCS 2	DCS 1, DCS 3
DCS 3	–
UMTS 1	UMTS 2, UMTS 3
UMTS 2	UMTS 1, UMTS 3
UMTS 3	UMTS 1, UMTS 2


- **Clear All Disconnect Status:** clears a port disconnect fault when an Expansion Hub or an RAU is disconnected and will not be re-connected.
- **Command Unit In-Service:** returns a unit to service that was previously removed from service; restores a component to the system's alarm monitoring; displays the unit lock, unit not system tested, or normal operation icon.
- **Command Unit Out-of-Service:** removes a unit, and all of its downstream units, from service, there is no RF transmission; lets you temporarily remove a component from the system's alarm monitoring; displays unit "lock" icon.
- **Set Callback Number:** displays a dialog box in which you enter the phone number that the system uses to communicate with OpsConsole users. You can use up to 64 characters: 0 through 9, and the comma (,) for a pause. Leave the field blank if you do not want the unit to call out. Refer to your modem documentation for other characters that you can use. To disable callback, leave the text box empty.

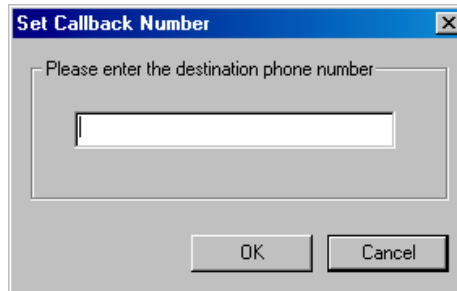

- **Set Contact Sense Properties:** enables/disables the external sensing of either normally open or normally closed contact closures; displays "contact sense alarm" or "contact sense okay" icon.

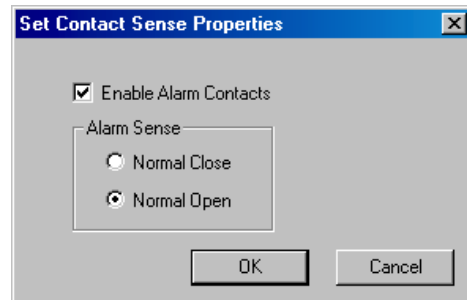

- **Set System Parameters:** displays a dialog box from which you select uplink and downlink gain settings, and/or specify a system label.

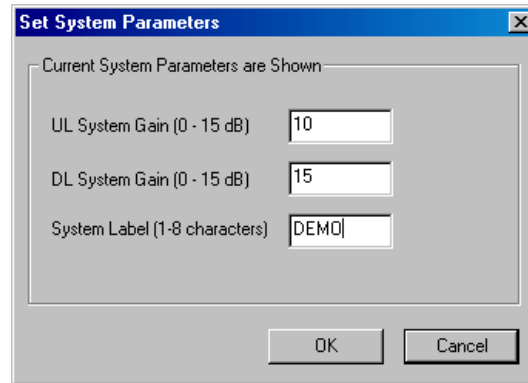


- **System Test:** An end-to-end RF path functional test that includes cable length estimation and system gain refinement is performed during the system test. System operation is suspended while the test is being performed.


7.3.3 Read-Only Options when Connected Remotely

You can only choose read-only options and view system status when you are remotely connected to the Main Hub. You cannot set parameters or change system configuration remotely. (See Table 7-1 on page 7-25.)


- **Get Current Errors:** displays the highest priority error with a recommendations for resolving it

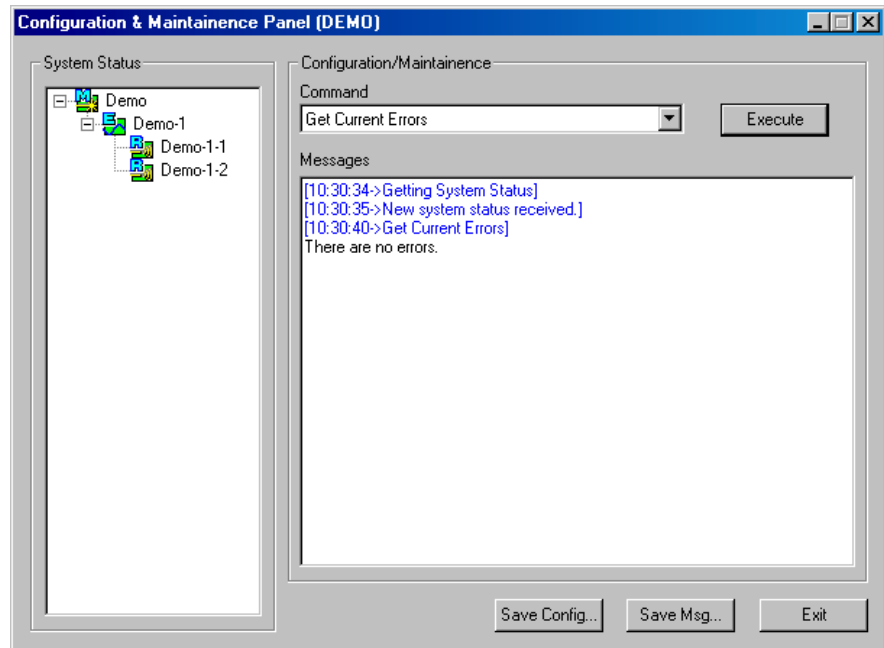


- **Get Current Warnings:** displays the highest priority warning with a recommendations for resolving it

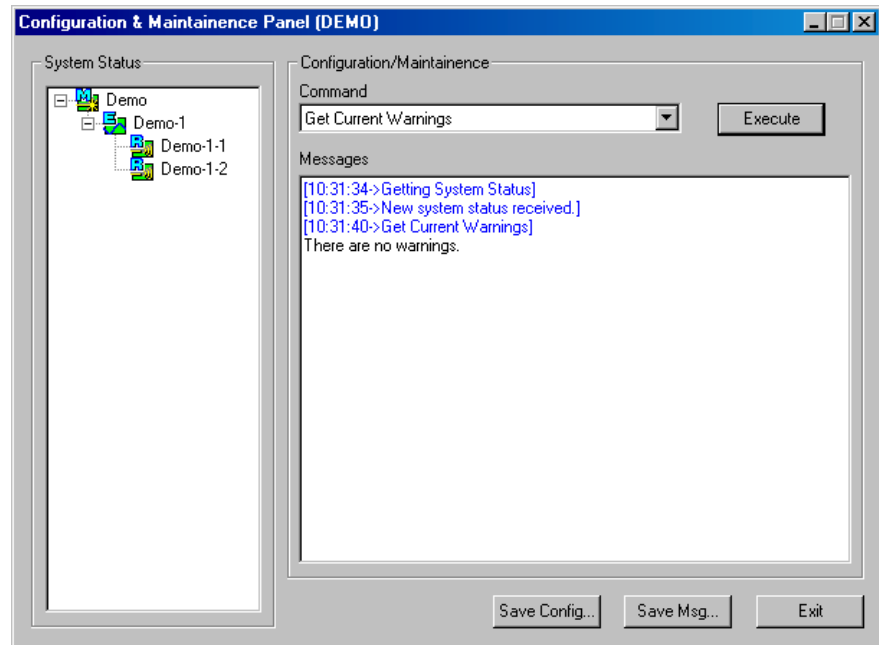


- **Get System Parameters:** displays the frequency band, callback number, uplink and downlink system gain, and system label

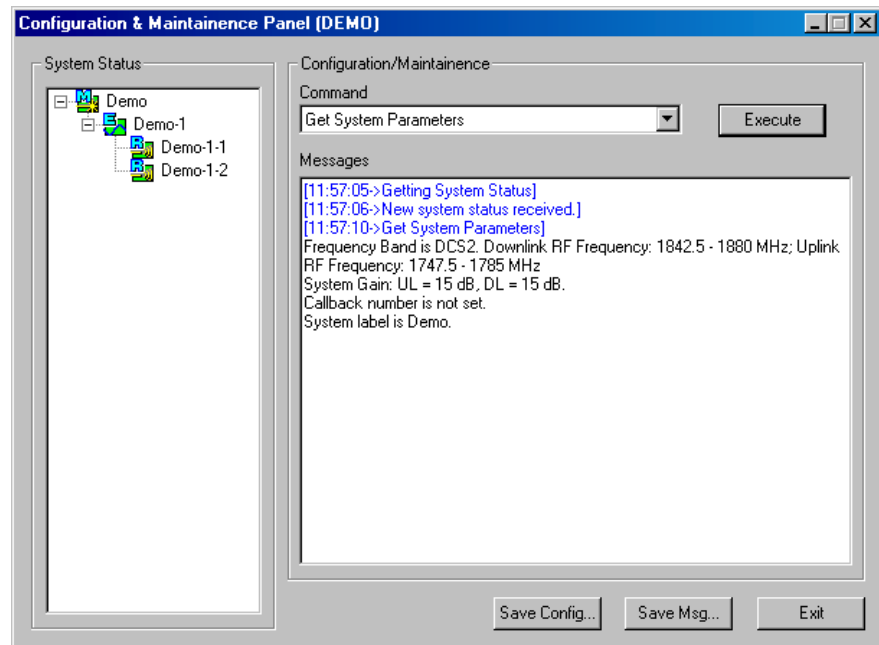


- **Get Unit Info:** displays the Options dialog box in which you select a unit.

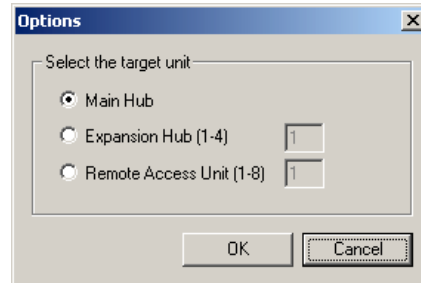

Select a unit and click the OK button to display that unit's serial number, part number, revision number and firmware version. Additionally, the advanced settings for the RAU are displayed when RAU information is requested.

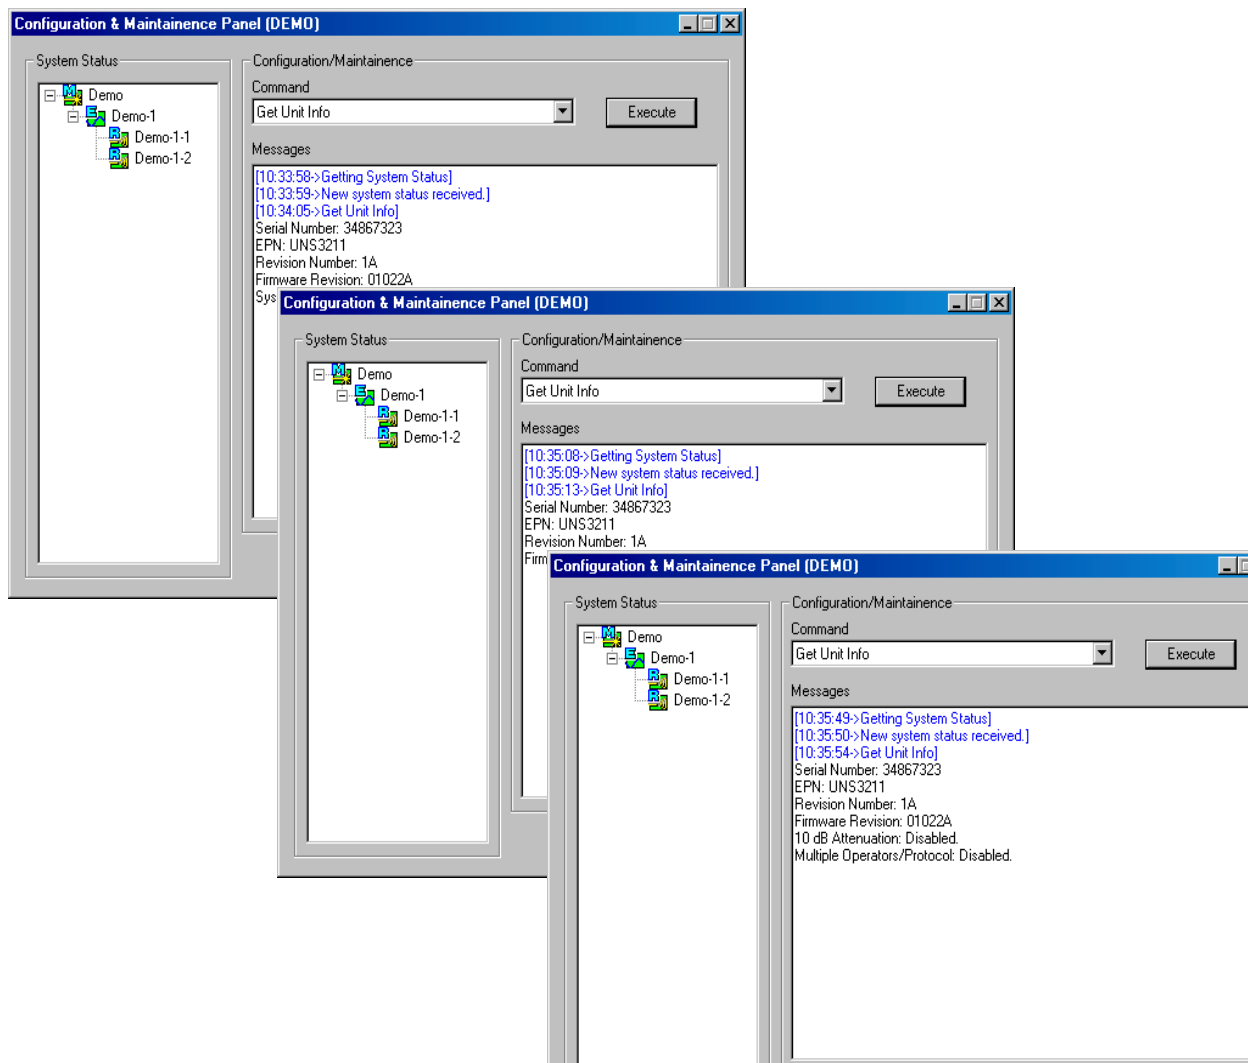


- **Refresh System Status:** requests system status and updates the System Status tree

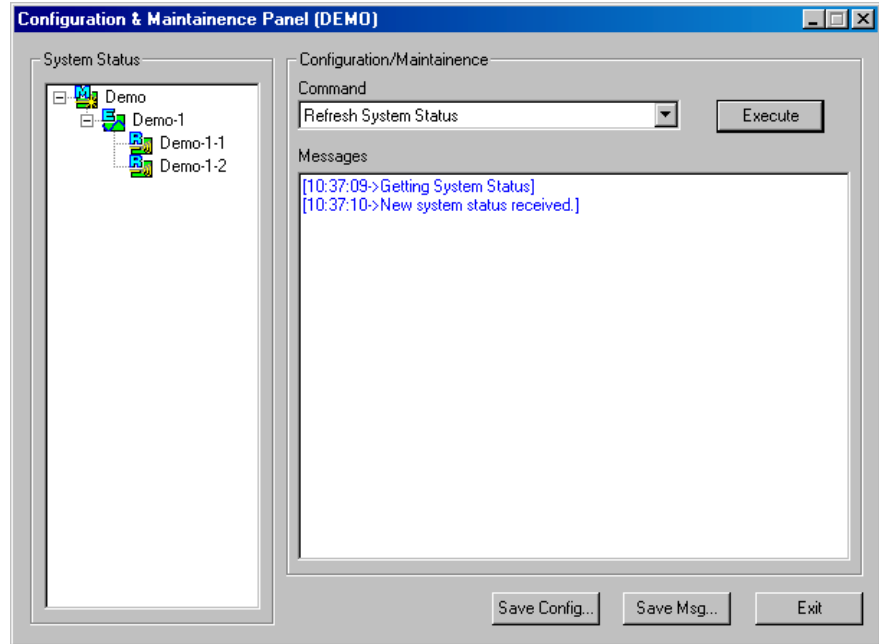

7.4 Upgrading Firmware

The firmware update program automatically detects which unit the firmware is intended for and displays the firmware ID and version number in the Firmware Update window, as shown in the following figure.

Figure 7-9 Firmware Update Window

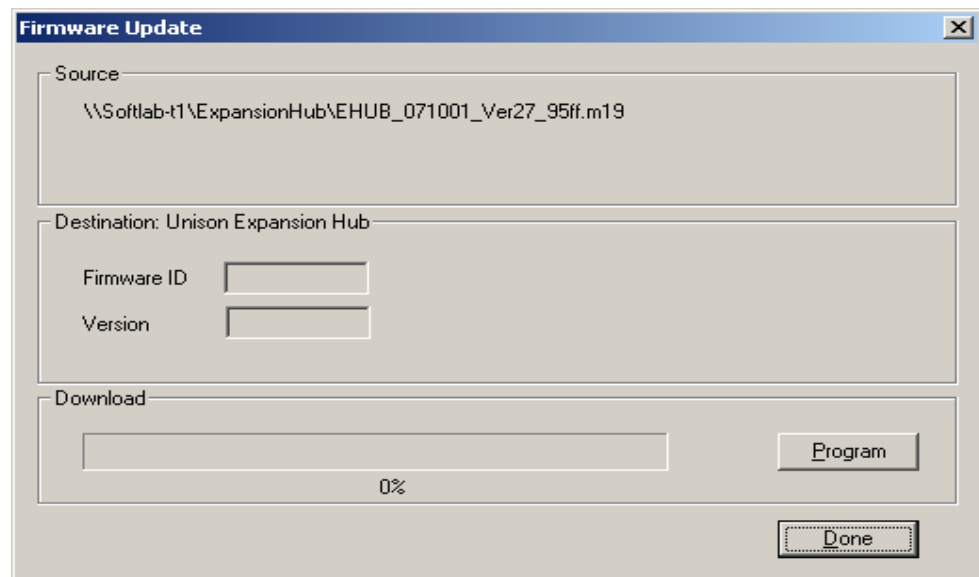

✓ Updating Firmware

1. Copy the firmware program to the PC.
2. Start AdminManager and select the Firmware Update radio button on the Start window, and then click run.
An Open File dialog box is displayed.
3. Choose the .m19 file you want to open from the Open File dialog box and click OPEN.
The firmware ID and version number are displayed in the Firmware Update window.
4. Click the PROGRAM button to start the download.
This button changes to CANCEL during the download, click it to stop the firmware update.
5. Click the DONE button.
This button is enabled when the download is completed.



















7.5 System Status Tree

A hierarchical tree of the detected system components is displayed in the System Status pane.

7.5.1 System Status Tree Icons

The following table shows the icons that may appear in the System Status tree.

Table 7-3 System Status Tree Icons

Icon	Description
	Main Hub normal operation
	Main Hub fault
	Main Hub lock (unit and all downstream units are out-of-service)
	Main Hub has not been system tested since last power on
	Main Hub warning
	Expansion Hub normal operation
	Expansion Hub fault
	Expansion Hub lock (unit and all downstream RAUs are out-of-service)
	Expansion Hub has not been system tested since last power on
	Expansion Hub warning
	RAU normal operation
	RAU fault
	RAU lock
	RAU has not been system tested since last power on
	RAU warning
	No communication
	Contact sense alarm
	Contact sense okay

Designing a Unison Solution

Designing a Unison solution is ultimately a matter of determining coverage and capacity needs. This requires the following steps:

1. Determine the wireless service provider's requirements.

This information is usually supplied by the service provider:

- Frequency (i.e., 850 MHz)
- Band (i.e., "A" band in the Cellular spectrum)
- Protocol (i.e., TDMA, CDMA, GSM, iDEN)
- Peak capacity requirement (this, and whether or not the building will be split into sectors, determines the number of carriers that the system will have to transmit)
- Design goal (RSSI, received signal strength at the wireless handset, i.e., -85 dBm)

The design goal is always a stronger signal than the cell phone needs. It includes inherent factors which will affect performance (see Section 8.4.1 on page 8-33).

- RF source (base station or BDA), type of equipment if possible

2. Determine the power per carrier and input power from the base station or BDA into the Main Hub: Section 8.1, "Maximum Output Power per Carrier at RAU," on page 8-3.

The maximum power per carrier is a function of the number of RF carriers, the carrier headroom requirement, signal quality issues, regulatory emissions requirements, and Unison's RF performance. The power per carrier decreases as the number of carriers increases.

3. Determine the in-building environment: Section 8.2, "Estimating RF Coverage," on page 8-19.

- Determine which areas of the building require coverage (entire building, public areas, parking levels, etc.)

- Obtain floor plans to determine floor space of building and the wall layout of the proposed areas to be covered. Floor plans will also be useful when you are selecting antenna locations.
 - If possible, determine the building's construction materials (sheetrock, metal, concrete, etc.)
 - Determine type of environment
 - Open layout (e.g., a convention center)
 - Dense, close walls (e.g., a hospital)
 - Mixed use (e.g., an office building with hard wall offices and cubicles)
4. **Develop an RF link budget: Section 8.4, “Link Budget Analysis,” on page 8-32.**

Knowing the power per carrier, you can calculate an RF link budget which is used to predict how much propagation loss can be allowed in the system, while still providing satisfactory performance throughout the area being covered. The link budget is a methodical way to derive a “design goal”. If the design goal is provided in advance, the link budget is simply: *allowable RF loss = max. power per carrier – design goal*.

5. **Determine the appropriate estimated path loss slope that corresponds to the type of building and its layout, and estimate the coverage distance for each RAU: Section 8.2, “Estimating RF Coverage,” on page 8-19.**

The path loss slope (PLS), which gives a value to the RF propagation characteristics within the building, is used to convert the RF link budget into an estimate of the coverage distance per antenna. This will help establish the Unison equipment quantities you will need. The actual path loss slope that corresponds to the specific RF environment inside the building can also be determined empirically by performing an RF site-survey of the building. This involves transmitting a calibrated tone for a fixed antenna and making measurements with a mobile antenna throughout the area surrounding the transmitter.

6. **Determine the items required to connect to the base station: Section 8.6, “Connecting a Main Hub to a Base Station,” on page 8-47.**

Once you know the quantities of Unison equipment you will use, you can determine the accessories (combiners/dividers, surge suppressors, repeaters, attenuators, circulators, etc.) that are required to connect the system to the base station.

The individual elements that must be considered in designing a Unison solution are discussed in the following sections.

8.1 Maximum Output Power per Carrier at RAU

The following tables show the recommended maximum power per carrier out of the RAU SMA connector for different frequencies, formats, and numbers of carriers. These limits are dictated by RF signal quality and regulatory emissions issues. The maximum input power to the Main Hub is determined by subtracting the system gain from the maximum output power of the RAU. System gain is software selectable from 0 dB to 15 dB in 1 dB steps. Additionally, both the uplink and downlink RAU gain can be reduced by 10 dB.

Therefore, when you connect a Main Hub to a base station or repeater, the RF power per carrier usually needs to be attenuated in order to avoid exceeding Unison's **maximum composite output power**.

(reference to "composite" power. PS)

Refer to Section 8.7, "Designing for a Neutral Host System," on page 8-51 when combining frequencies or protocols on a single Main Hub.



WARNING: Exceeding the maximum input power could cause permanent damage to the Main Hub.

Table 8-1 800 MHz (AMPS) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	10.0
6	10.5
7	9.5
8	8.5
9	8.0
10	7.0
11	7.0
12	6.5
13	6.0
14	5.5
15	5.5
16	5.0
20	4.0
30	2.0



WARNING: For 800 MHz AMPS, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-2 800 MHz (TDMA) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	10.0
6	10.0
7	9.5
8	8.5
9	8.0
10	7.5
11	7.0
12	6.5
13	6.5
14	6.0
15	5.5
16	5.5
20	4.5
30	2.5



WARNING: For 800 MHz TDMA, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-3 800 MHz (CDMA) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	16.0
2	13.5
3	12.0
4	11.0
5	10.0
6	9.5
7	8.5
8	8.0



WARNING: For 800 MHz CDMA, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-4 800 MHz (iDEN) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	9.0
6	8.0
7	7.0
8	6.5
9	6.0
10	5.5
11	5.0
12	4.5
13	4.0
14	4.0
15	3.5
16	3.0
20	2.0
30	0.5



WARNING: For 800 MHz iDEN, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-5 900 MHz (GSM or EGSM) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	9.0
6	8.5
7	8.0
8	7.5
9	7.0
10	6.5
11	6.5
12	6.0
13	5.5
14	5.5
15	5.0
16	5.0



WARNING: For 900 MHz GSM or EGSM, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-6 900 MHz (EDGE) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	9.0
6	8.5
7	8.0
8	7.5
9	7.0
10	6.5
11	6.5
12	6.0
13	5.5
14	5.5
15	5.0
16	5.0



WARNING: For 900 MHz EDGE, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-7 1800 MHz (GSM) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	10.0
6	9.5
7	8.5
8	7.5
9	7.0
10	6.5
11	6.0
12	5.5
13	5.0
14	5.0
15	4.5
16	4.0



WARNING: For 1800 MHz GSM, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-8 1800 MHz (EDGE) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	9.0
6	8.0
7	7.5
8	6.5
9	6.0
10	5.5
11	5.0
12	4.5
13	4.5
14	4.0
15	3.5
16	3.5



WARNING: For 1800 MHz EDGE, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-9 1800 MHz (CDMA Korea) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	14.5
2	12.0
3	10.5
4	9.5
5	8.5
6	8.0
7	7.0
8	6.5



WARNING: For 1800 MHz CDMA (Korea), do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-10 1900 MHz (TDMA) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	10.0
6	9.0
7	8.0
8	7.0
9	6.5
10	6.0
11	5.5
12	5.0
13	5.0
14	4.5
15	4.0
16	4.0
20	3.0
30	1.0



WARNING: For 1900 MHz TDMA, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-11 1900 MHz (GSM) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	10.0
6	9.5
7	8.5
8	7.5
9	7.0
10	6.5
11	6.0
12	5.5
13	5.0
14	5.0
15	4.5
16	4.0



WARNING: For 1900 MHz GSM, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-12 1900 MHz (CDMA) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	14.5
2	12.0
3	10.5
4	9.5
5	8.5
6	8.0
7	7.0
8	6.5



WARNING: For 1900 MHz CDMA, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-13 1900 MHz (EDGE) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	10.0
2	10.0
3	10.0
4	10.0
5	9.0
6	8.0
7	7.5
8	6.5
9	6.0
10	5.5
11	5.0
12	4.5
13	4.5
14	4.0
15	3.5
16	3.5



WARNING: For 1900 MHz EDGE, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Table 8-14 2.1 GHz (WCDMA) Power per Carrier

No. of Carriers	Power per Carrier (dBm)
1	14.5
2	11.0
3	8.5
4	7.0
5	6.0
6	5.0
7	4.5
8	3.5



WARNING: For 2.1 GHz WCDMA, do not exceed the maximum composite input power of 1W (+30 dBm) to the Main Hub at any time.

Allowing for Future Capacity Growth


Sometimes a Unison deployment initially is used to enhance coverage. Later that same system may also need to provide increased capacity. Thus, the initial deployment might only transmit **two** carriers but need to transmit **four (increase this number? PS)** carriers later. There are two options for dealing with this scenario:

1. Design the initial coverage with a maximum power per carrier for four carriers.
2. Design the initial coverage for two carriers but leave Expansion Hub ports unused. These ports can be used later if coverage holes are discovered once the power per carrier is lowered to accommodate the two additional carriers.

8.2 Estimating RF Coverage

The maximum power per carrier (based on the number and type of RF carriers that are being transmitted) and the minimum acceptable received power at the wireless device (i.e., RSSI, the design goal) establish the RF link budget, and consequently the maximum acceptable path loss between the antenna and the wireless device.

Figure 8-1 Determining Path Loss between the Antenna and the Wireless Device

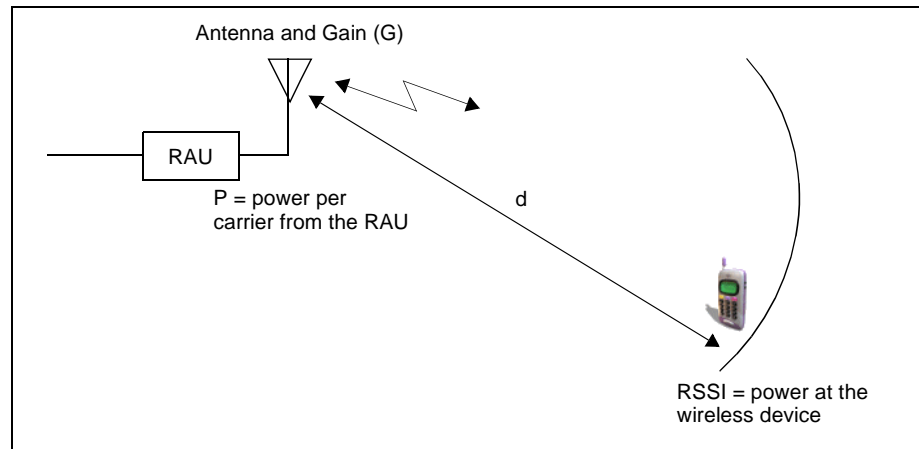

$$(P + L_{\text{coax}} + G) - \text{RSSI} = \text{PL} \tag{1}$$

The path loss (PL) is the loss in decibels (dB) between the antenna and the wireless device. The distance, d, from the antenna corresponding to this path loss can be calculated using the path loss equations in Section 8.2.1 and in Section 8.2.2.

The following table lists the coaxial cable loss for **XXX size** cable. **Enrique: What diameter coax? (Adam)**

Table 8-15 Coaxial Cable Losses

Length of Cable	Loss at 800 MHz (dB)	Loss at 1900 MHz (dB)
0.9 m (3 ft)	0.4	0.6
1.8 m (6 ft)	0.9	1.4
3.0 m (10 ft)	1.5	2.4

8.2.1 Path Loss Equation

Indoor path loss obeys the distance power law¹ in equation (2):

$$PL = 20\log(4\pi d_0 f/c) + 10n\log(d/d_0) + X_s \quad (2)$$

where:

- PL is the path loss at a distance, d, from the antenna (the distance between the antenna that is connected to the RAU and the point where the RF signal decreases to the minimum acceptable level at the wireless device).
- d_0 is usually taken as 1 meter of free-space.
- f is the operating frequency in hertz.
- c is the speed of light in a vacuum (3.0×10^8 m/sec).
- n is the path loss exponent and depends on the building “clutter”.
- X_s is a normal random variable that depends on partition losses inside the building, and therefore, depends on the frequency of operation.

As a reference, the following table gives estimates of signal loss for some RF barriers.¹

Table 8-16 Average Signal Loss of Common Building Materials

Partition Type	Loss (dB) @ <2 GHz	Frequency (MHz)
Metal wall	26	815
Aluminum siding	20	815
Foil insulation	4	815
Cubicle walls	1.4	900
Concrete block wall	13	1300
Concrete floor	10	1300
Sheetrock	1 to 2	1300
Light machinery	3	1300
General machinery	7	1300
Heavy machinery	11	1300
Equipment racks	7	1300
Assembly line	6	1300
Ceiling duct	5	1300
Metal stairs	5	1300

1. Rappaport, Theodore S. *Wireless Communications, Principles, and Practice*. Prentice Hall PTR, 1996.

8.2.2 Coverage Distance

Equations (1) and (2), on pages 8-19 and 8-20, respectively, can be used to estimate the distance from the antenna to where the RF signal decreases to the minimum acceptable level at the wireless device.

Equation (2) can be simplified to:

$$PL(d) = 20\log(4\pi f/c) + PLS\log(d) \quad (3)$$

where PLS (path loss slope) is chosen to account for the building's environment. Because different frequencies penetrate partitions with different losses, the value of PLS will vary depending on the frequency.

Table 8-17 shows estimated path loss slope (PLS) for various environments that have different "clutter" (i.e., objects that attenuate the RF signals, such as walls, partitions, stairwells, equipment racks, etc.)

Table 8-17 Estimated Path Loss Slope for Different In-Building Environments

Facility	PLS for 800/900 MHz	PLS for 1800/1900 MHz
Manufacturing	35	32
Hospital	39.4	38.1
Airport	35	32
Retail	36.1	33.1
Warehouse	35	32
Parking Garage	33.7	30.1
Office: 80% cubicle/20% hard wall	36.1	33.1
Office: 50% cubicle/50% hard wall	37.6	34.8
Office: 20% cubicle/80% hard wall	39.4	38.1

For simplicity, Equation (3) can be used to estimate the coverage distance of an antenna that is connected to an RAU, for a given path loss, frequency, and type of in-building environment.

Table 8-18 gives the value of the first term of Equation (3) (i.e., $(20\log(4\pi f/c))$) for various frequency bands.

Table 8-18 Frequency Bands and the Value of the first Term in Equation (3)

	Band (MHz)		Mid-Band Frequency (MHz)	$20\log(4\pi f/c)$
	Uplink	Downlink		
800 MHz Cellular	824–849	869–894	859	31.1
800 MHz iDEN	806–824	851–869	837.5	30.9
900 MHz GSM	890–915	935–960	925	31.8
900 MHz EGSM	880–915	925–960	920	31.7
1800 MHz DCS	1710–1785	1805–1880	1795	37.5
1800 MHz CDMA (Korea)	1750–1780	1840–1870	1810	37.6
1900 MHz PCS	1850–1910	1930–1990	1920	38.1
2.1 GHz UMTS	1920–1980	2110–2170	2045	TBD

For reference, Tables 8-19 through 8-25 show the distance covered by an antenna for various in-building environments. The following assumptions were made:

- Path loss Equation (3)
- 6 dBm output per carrier at the RAU output
- 3 dBi antenna gain
- RSSI = -85 dBm (typical for narrowband protocols, but not for spread-spectrum protocols)

Table 8-19 Approximate Radiated Distance from Antenna for 800 MHz Cellular Applications

Facility	Distance from Antenna	
	Meters	Feet
Manufacturing	63	205
Hospital	39	129
Airport	63	205
Retail	55	181
Warehouse	63	205
Parking Garage	73	241
Office: 80% cubicle/20% hard wall	55	181
Office: 50% cubicle/50% hard wall	47	154
Office: 20% cubicle/80% hard wall	39	129

Table 8-20 Approximate Radiated Distance from Antenna for 800 MHz iDEN Applications

Facility	Distance from Antenna	
	Meters	Feet
Manufacturing	64	208
Hospital	40	131
Airport	64	208
Retail	56	184
Warehouse	64	208
Parking Garage	75	244
Office: 80% cubicle/20% hard wall	56	184
Office: 50% cubicle/50% hard wall	48	156
Office: 20% cubicle/80% hard wall	40	131

Table 8-21 Approximate Radiated Distance from Antenna for 900 MHz GSM Applications

Facility	Distance from Antenna	
	Meters	Feet
Manufacturing	60	197
Hospital	38	125
Airport	60	197
Retail	53	174
Warehouse	60	197
Parking Garage	70	230
Office: 80% cubicle/20% hard wall	53	174
Office: 50% cubicle/50% hard wall	45	148
Office: 20% cubicle/80% hard wall	38	125

Table 8-22 Approximate Radiated Distance from Antenna for 900 MHz EGSM Applications

Facility	Distance from Antenna	
	Meters	Feet
Manufacturing	60	197
Hospital	38	125
Airport	60	197
Retail	53	174
Warehouse	60	197
Parking Garage	70	231
Office: 80% cubicle/20% hard wall	53	174
Office: 50% cubicle/50% hard wall	45	149
Office: 20% cubicle/80% hard wall	38	125

Table 8-23 Approximate Radiated Distance from Antenna for 1800 MHz DCS Applications

Facility	Distance from Antenna	
	Meters	Feet
Manufacturing	58	191
Hospital	30	100
Airport	58	191
Retail	51	167
Warehouse	58	191
Parking Garage	75	246
Office: 80% cubicle/20% hard wall	50	166
Office: 50% cubicle/50% hard wall	42	137
Office: 20% cubicle/80% hard wall	30	100

Table 8-24 Approximate Radiated Distance from Antenna for 1800 MHz CDMA (Korea) Applications

Facility	Distance from Antenna	
	Meters	Feet
Manufacturing	58	191
Hospital	30	100
Airport	58	191
Retail	51	167
Warehouse	58	191
Parking Garage	75	247
Office: 80% cubicle/20% hard wall	51	167
Office: 50% cubicle/50% hard wall	42	138
Office: 20% cubicle/80% hard wall	30	100

Table 8-25 Approximate Radiated Distance from Antenna for 1900 MHz PCS Applications

Facility	Distance from Antenna	
	Meters	Feet
Manufacturing	56	183
Hospital	29	96
Airport	56	183
Retail	49	160
Warehouse	56	183
Parking Garage	72	236
Office: 80% cubicle/20% hard wall	49	160
Office: 50% cubicle/50% hard wall	40	132
Office: 20% cubicle/80% hard wall	29	96

Table 8-26 Approximate Radiated Distance from Antenna for 2.1 GHz UMTS Applications

Facility	Distance from Antenna	
	Meters	Feet
Manufacturing	54	176
Hospital	28	93
Airport	54	176
Retail	47	154
Warehouse	54	176
Parking Garage	69	226
Office: 80% cubicle/20% hard wall	47	154
Office: 50% cubicle/50% hard wall	39	128
Office: 20% cubicle/80% hard wall	28	93

8.2.3 Examples of Design Estimates

Example Design Estimate for an 800 MHz TDMA Application

1. Design goals:

- Cellular (859 MHz = average of the lowest uplink and the highest downlink frequency in 800 MHz Cellular band)
- TDMA provider
- 6 TDMA carriers in the system
- -85 dBm design goal (to 95% of the building) — the minimum received power at the wireless device
- Base station with simplex RF connections

2. Power Per Carrier: The tables in Section 8.1, “Maximum Output Power per Carrier at RAU,” on page 8-3 provide maximum power per carrier information. The 800 MHz TDMA table (on page 8-5) indicates that Unison can support 6 carriers with a recommended maximum power per carrier of 10.5 dBm. The input power should be set to the desired output power minus the system gain.

3. Building information:

- 8 floor building with 9,290 sq. meters (100,000 sq. ft.) per floor; total 74,322 sq. meters (800,000 sq. ft.)
- Walls are sheetrock construction; suspended ceiling tiles
- Antennas used will be omni-directional, ceiling mounted
- Standard office environment, 50% hard wall offices and 50% cubicles

4. Link Budget: In this example, a design goal of -85 dBm is used. Suppose 3 dBi omni-directional antennas are used in the design. Then, the maximum RF propagation loss should be no more than 98.5 dB (10.5 dBm + 3 dBi + 85 dBm) over 95% of the area being covered. *It is important to note that a design goal such as -85 dBm is usually derived taking into account multipath fading and log-normal shadowing characteristics. Thus, this design goal will only be met “on average” over 95% of the area being covered. At any given point, a fade may bring the signal level underneath the design goal.*

Note that this method of calculating a link budget is only for the downlink path. For information to calculate link budgets for both the downlink and uplink paths, see Section 8.4 on page 8-32.

5. Path Loss Slope: For a rough estimate, Table 8-17, “Estimated Path Loss Slope for Different In-Building Environments” on page 8-21, shows that a building with 50% hard wall offices and 50% cubicles, at 859 MHz, has an approximate path loss slope (PLS) of 37.6. Given the RF link budget of 98.5 dB, the distance of coverage from each RAU will be 60/62 meters (198/203 ft). This corresponds to a coverage area of 11,465/12,079 sq. meters (123,409/129,952 sq. ft.) per RAU (see Section 8.2.1 for details on path loss estimation). For this case we assumed a circular radiation pattern, though the actual area covered will depend upon the pattern of the antenna and the obstructions in the facility.

Adam and Rich provided different distance numbers. Which are correct? JW

6. **Equipment Required:** Since you know the building size, you can now estimate the Unison equipment quantities that will be needed. Before any RF levels are tested in the building, you can estimate that 2 antennas per level will be needed.
 - a. 1 antenna per floor \times 8 floors = 8 RAUs
 - b. 8 RAUs \div 8 (max 8 RAUs per Expansion Hub) = 1 Expansion Hubs
 - c. 1 Expansion Hubs \div 4 (max 4 Expansion Hubs per Main Hub) = 1 Main Hub

Check that the MMF and Cat-5 cable distances are as recommended. If the distances differ, use the tables in Section 8.3, "System Gain," on page 8-31 to determine system gains or losses. The path loss may need to be recalculated to assure adequate signal levels in the required coverage distance.

The above estimates assume that all cable length requirements are met. If Expansion Hubs cannot be placed so that the RAUs are within the distance requirement, additional Expansion Hubs may need to be placed closer to the required RAUs locations.

An RF Site Survey and Building Evaluation is required to accurately establish the Unison equipment quantities required for the building. The site survey measures the RF losses within the building to determine the actual PLS, which will be used in the final path loss formula to determine the actual requirements of the Unison system.

Example Design Estimate for an 1900 MHz CDMA Application

1. Design goals:

- PCS (1920 MHz = average of the lowest uplink and the highest downlink frequency in 1900 MHz PCS band)
- CDMA provider
- 8 CDMA carriers in the system
- -85 dBm design goal (to 95% of the building) — the minimum received power at the wireless device
- Base station with simplex RF connections

2. **Power Per Carrier:** The tables in **Section 8.1, “Maximum Output Power per Carrier at RAU,”** on page 8-3 provide maximum power per carrier information. The 1900 MHz CDMA table (on page 8-15) indicates that Unison can support 8 carriers with a recommended maximum power per carrier of 6.5 dBm. The input power should be set to the desired output power minus the system gain.

3. Building information:

- 16 floor building with 9,290 sq. meters (100,000 sq. ft.) per floor; total 148,640 sq. meters (1,600,000 sq. ft.)
- Walls are sheetrock construction; suspended ceiling tiles
- Antennas used will be omni-directional, ceiling mounted
- Standard office environment, 80% hard wall offices and 20% cubicles

4. **Link Budget:** In this example, a design goal of -85 dBm is used. Suppose 3 dBi omni-directional antennas are used in the design. Then, the maximum RF propagation loss should be no more than 94.5 dB (6.5 dBm + 3 dBi + 85 dBm) over 95% of the area being covered. *It is important to note that a design goal such as -85 dBm is usually derived taking into account multipath fading and log-normal shadowing characteristics. Thus, this design goal will only be met “on average” over 95% of the area being covered. At any given point, a fade may bring the signal level underneath the design goal.*

Note that this method of calculating a link budget is only for the downlink path. For information to calculate link budgets for both the downlink and uplink paths, see Section 8.4 on page 8-32.

5. **Path Loss Slope:** For a rough estimate, Table 8-17, “Estimated Path Loss Slope for Different In-Building Environments” on page 8-21, shows that a building with 80% hard wall offices and 20% cubicles, at 1920 MHz, has an approximate path loss slope (PLS) of 38.1. Given the RF link budget of 94.5 dB, the distance of coverage from each RAU will be 50 meters (166 ft). This corresponds to a coverage area of 8,031 sq. meters (86,404 sq. ft.) per RAU (see Section 8.2.1 for details on path loss estimation). For this case we assumed a circular radiation pattern, though the actual area covered will depend upon the pattern of the antenna and the obstructions in the facility.

6. **Equipment Required:** Since you know the building size, you can now estimate the Unison equipment quantities that will be needed. Before any RF levels are tested in the building, you can estimate that 2 antennas per level will be needed.
 - a. 2 antennas per floor \times 16 floors = 32 RAUs
 - b. 32 RAUs \div 8 (max 8 RAUs per Expansion Hub) = 4 Expansion Hubs
 - c. 4 Expansion Hubs \div 4 (max 4 Expansion Hubs per Main Hub) = 1 Main Hub

Check that the MMF and Cat-5 cable distances are as recommended. If the distances differ, use the tables in Section 8.3, "System Gain," on page 8-31 to determine system gains or losses. The path loss may need to be recalculated to assure adequate signal levels in the required coverage distance.

The above estimates assume that all cable length requirements are met. If Expansion Hubs cannot be placed so that the RAUs are within the distance requirement, additional Expansion Hubs may need to be placed closer to the required RAUs locations.

An RF Site Survey and Building Evaluation is required to accurately establish the Unison equipment quantities required for the building. The site survey measures the RF losses within the building to determine the actual PLS, which will be used in the final path loss formula to determine the actual requirements of the Unison system.

8.3 System Gain

The system gain can be decreased from 15 dB to 0 dB gain in 1 dB increments and the uplink and downlink gain of any RAU can be decreased by 10 dB in one step using AdminManager or OpsConsole.

8.3.1 System Gain (Loss) Relative to ScTP Cable Length

The recommended minimum length of ScTP cable is 20 meters (66 ft) and the recommended maximum length is 100 meters (328 ft). If the ScTP cable is less than 10 meters (33 ft), system performance may not meet specifications. If the ScTP cable is longer than 100 meters (328 ft), the gain of the system will decrease, as shown in Table 8-27.

Table 8-27 System Gain (Loss) Relative to ScTP Cable Length

ScTP Cable Length	Typical change in system gain (dB)	
	Downlink	Uplink
800 MHz TDMA/AMPS and CDMA; 900 MHz GSM and EGSM; and iDEN		
110 m / 361 ft	-1.0	-0.7
120 m / 394 ft	-3.2	-2.4
130 m / 426 ft	-5.3	-4.1
140 m / 459 ft	-7.5	-5.8
150 m / 492 ft	-9.7	7.6
1800 MHz GSM (DCS); 1900 MHz TDMA, CDMA, and GSM		
110 m / 361 ft	-1.0	-0.7
120 m / 394 ft	-4.0	-2.4
130 m / 426 ft	-6.4	-4.1
140 m / 459 ft	-8.8	-5.8
150 m / 492 ft	-11.3	-7.6
2.1 GHz UMTS		
110 m / 361 ft		
120 m / 394 ft		
130 m / 426 ft		
140 m / 459 ft		
150 m / 492 ft		

I need 2.1 GHz figures for this table. JW

8.4 Link Budget Analysis

A link budget is a methodical way to account for the gains and losses in an RF system so that the quality of coverage can be predicted. The end result can often be stated as a “design goal” in which the coverage is determined by the maximum distance from each RAU before the signal strength falls beneath that goal.

One key feature of the link budget is the maximum power per carrier discussed in Section 8.1. While the maximum power per carrier is important as far as emissions and signal quality requirements are concerned, it is critical that the maximum signal into the Main Hub never exceed 1W (+30 dBm). Composite power levels above this limit will cause damage to the Main Hub.



WARNING: Exceeding the maximum input power of 1W (+30 dBm) could cause permanent damage to the Main Hub.

8.4.1 Elements of a Link Budget for Narrowband Standards

The link budget represents a typical calculation that might be used to determine how much path loss can be afforded in a Unison design. This link budget analyzes both the downlink and uplink paths. For most configurations, the downlink requires lower path loss and is therefore the limiting factor in the system design. It is for this reason that a predetermined “design goal” for the downlink is sufficient to predict coverage distance.

The link budget is organized in a simple manner: the transmitted power is calculated, the airlink losses due to fading and body loss are summed, and the receiver sensitivity (minimum level a signal can be received for acceptable call quality) is calculated. The maximum allowable path loss (in dB) is the difference between the transmitted power, less the airlink losses, and the receiver sensitivity. From the path loss, the maximum coverage distance can be estimated using the path loss formula presented in Section 8.2.1.

Table 8-28 provides link budget considerations for narrowband systems.

Table 8-28 Link Budget Considerations for Narrowband Systems

Consideration	Description
BTS Transmit Power	The power per carrier transmitted from the base station output
Attenuation between BTS and Unison	This includes all losses: cable, attenuator, splitter/combiner, and so forth. On the downlink, attenuation must be chosen so that the maximum power per carrier going into the Main Hub does not exceed the levels given in Section 8.1. On the uplink, attenuation is chosen to keep the maximum uplink signal and noise level low enough to prevent base station alarms but small enough not to cause degradation in the system sensitivity. If the Unison noise figure minus the attenuation is at least 10 dB higher than the BTS noise figure, the system noise figure will be approximately that of Unison alone. See Section 8.6 for ways to independently set the uplink and downlink attenuations between the base station and Unison.
Unison Gain	This is the system gain (see Table 8-26 on page 8-29)
Antenna Gain	The radiated output power includes antenna gain. For example, if you use a 3 dBi antenna at the RAU that is transmitting 0 dBm per carrier, the effective radiated power (relative to an isotropic radiator) is 3 dBm per carrier.
BTS Noise Figure	This is the effective noise floor of the base station input (usually base station sensitivity is this effective noise floor plus a certain C/I ratio).
Unison Noise Figure	This is Unison’s uplink noise figure, which varies depending on the number of Expansion Hubs and RAUs, and the frequency band. Unison’s uplink noise figure is specified for a 1-1-4 configuration. Thus, the noise figure for a Unison system (or multiple systems whose uplink ports are power combined) will be $NF(1-1-4) + 10*\log(\# \text{ of Expansion Hubs})$. This represents an upper-bound because the noise figure is lower if any of the Expansion Hub’s RAU ports are not used.

Table 8-28 Link Budget Considerations for Narrowband Systems (continued)

Consideration	Description															
Thermal Noise	<p>This is the noise level in the signal bandwidth (BW). Thermal noise power = $-174 \text{ dBm/Hz} + 10\text{Log}(\text{BW})$.</p> <table border="1"> <thead> <tr> <th>Protocol</th> <th>Signal Bandwidth</th> <th>Thermal Noise</th> </tr> </thead> <tbody> <tr> <td>TDMA</td> <td>30 kHz</td> <td>-129 dBm</td> </tr> <tr> <td>CDMA</td> <td>1.25 MHz</td> <td>-113 dBm</td> </tr> <tr> <td>GSM</td> <td>200 kHz</td> <td>-121 dBm</td> </tr> <tr> <td>iDEN</td> <td>25 kHz</td> <td>-130 dBm</td> </tr> </tbody> </table> <p style="color: red; margin-left: 400px;">spread-spectrum, remove? PS</p>	Protocol	Signal Bandwidth	Thermal Noise	TDMA	30 kHz	-129 dBm	CDMA	1.25 MHz	-113 dBm	GSM	200 kHz	-121 dBm	iDEN	25 kHz	-130 dBm
Protocol	Signal Bandwidth	Thermal Noise														
TDMA	30 kHz	-129 dBm														
CDMA	1.25 MHz	-113 dBm														
GSM	200 kHz	-121 dBm														
iDEN	25 kHz	-130 dBm														
Required C/I ratio	For each wireless standard a certain C/I (carrier to interference) ratio is needed to obtain acceptable demodulation performance. For narrowband systems, (TDMA, GSM, EDGE, iDEN, AMPS) this level varies from about 9 dB to 20 dB.															
Mobile Transmit Power	The maximum power the mobile can transmit (power transmitted at highest power level setting).															
Multipath Fade Margin	This margin allows for a certain level of fading due to multipath interference. Inside buildings there is often one or more fairly strong signals and many weaker signals arriving from reflections and diffraction. Signals arriving from multiple paths add constructively or destructively. This margin accounts for the possibility of destructive multipath interference. In RF site surveys this margin will not appear because it will be averaged out over power level samples taken over many locations.															
Log-normal Fade Margin	This margin adds an allowance for RF shadowing due to objects obstructing the direct path between the mobile equipment and the RAU. In RF site surveys, this shadowing will not appear because it will be averaged out over power level samples taken over many locations.															
Body Loss	This accounts for RF attenuation caused by the user’s head and body.															
Minimum Received Signal Level	This is also referred to as the “design goal”. The link budget says that you can achieve adequate coverage if the signal level is, on average, above this level over 95% of the area covered, for example.															

8.4.2 Narrowband Link Budget Analysis for a Microcell Application

Adam,
Any WCDMA issues?
(PS)

Narrowband Link Budget Analysis: Downlink

Line	Downlink	
Transmitter		
a.	BTS transmit power per carrier (dBm)	33
b.	Attenuation between BTS and Unison (dB)	-23
c.	Power into Unison (dBm)	10
d.	Unison gain (dB)	0
e.	Antenna gain (dBi)	3
f.	Radiated power per carrier (dBm)	13
Airlink		
g.	Multipath fade margin (dB)	6
h.	Log-normal fade margin with 8 dB std. deviation, edge reliability 90% (dB)	10
i.	Body loss (dB)	3
j.	Airlink losses (not including facility path loss)	19
Receiver		
k.	Thermal noise (dBm/30 kHz)	-129
l.	Mobile noise figure (dB)	7
m.	Required C/I ratio (dB)	12
n.	Minimum received signal (dBm)	-110
p.	Maximum path loss (dB)	104

- $c = a + b$
- $f = c + d + e$
- $j = g + h + i$
- $n = k + l + m$
- k: in this example, k represents the thermal noise for a TDMA signal, which has a bandwidth of 30 kHz
- $p = f - j - n$

Narrowband Link Budget Analysis: Uplink

Line	Uplink	
	Receiver	
a.	BTS noise figure (dB)	4
b.	Attenuation between BTS and Unison (dB)	-10
c.	Unison gain (dB)	0
d.	Unison noise figure (dB) 1-4-32	22
e.	System noise figure (dB)	22.6
f.	Thermal noise (dBm/30 kHz)	-129
g.	Required C/I ratio (dB)	12
h.	Antenna gain (dBi)	3
i.	Receive sensitivity (dBm)	-97.4
	Airlink	
j.	Multipath fade margin (dB)	6
k.	Log-normal fade margin with 8 dB std. deviation, edge reliability 90% (dB)	10
l.	Body loss (dB)	3
m.	Airlink losses (not including facility path loss)	19
	Transmitter	
n.	Mobile transmit power (dBm)	28
p.	Maximum path loss (dB)	106.4

- e: enter the noise figure and gain of each system component (a, b, c, and d) into the standard cascaded noise figure formula

$$F_{\text{sys}} = F_1 + \frac{F_2 - 1}{G_1} + \frac{F_3 - 1}{G_1 G_2} + \dots$$

where

$$F = 10^{(\text{Noise Figure}/10)}$$

$$G = 10^{(\text{Gain}/10)}$$

(See Rappaport, Theodore S. *Wireless Communications, Principles, and Practice*. Prentice Hall PTR, 1996.)

- i = f + e + g - h
- m = j + k + l
- p = n - m - i

8.4.3 Elements of a Link Budget for CDMA Standards

A CDMA link budget is slightly more complicated because the spread spectrum nature of CDMA must be considered. Unlike narrowband standards such as TDMA and GSM, CDMA signals are spread over a relatively wide frequency band. Upon reception, the CDMA signal is de-spread. In the de-spreading process the power in the received signal becomes concentrated into a narrow band, whereas the noise level remains unchanged. Hence, the signal-to-noise ratio of the de-spread signal is higher than that of the CDMA signal before de-spreading. This increase is called *processing gain*. For IS-95 and J-STD-008, the processing gain is 21 dB or 19 dB depending on the user data rate (9.6 Kbps for rate set 1 and 14.4 Kbps for rate set 2, respectively). Because of the processing gain, a CDMA signal (comprising one Walsh code channel within the composite CDMA signal) can be received at a lower level than that required for narrowband signals. A reasonable level is -95 dBm, which results in about -85 dBm composite as shown below.

An important issue to keep in mind is that the downlink CDMA signal is composed of many orthogonal channels: pilot, paging, sync, and traffic. The composite power level is the sum of the powers from the individual channels. An example is given in the following table.

Table 8-29 Distribution of Power within a CDMA Signal

Channel	Walsh Code Number	Relative Power Level	
Pilot	0	20%	-7.0 dB
Sync	32	5%	-13.3 dB
Primary Paging	1	19%	-7.3 dB
Traffic	8–31, 33–63	9% (per traffic channel)	-10.3 dB

This table assumes that there are 15 active traffic channels operating with 50% voice activity (so that the total power adds up to 100%). Notice that the pilot and sync channels together contribute about 25% of the power. When measuring the power in a CDMA signal you must be aware that if only the pilot and sync channels are active, the power level will be about 6 to 7 dB lower than the maximum power level you can expect when all voice channels are active. The implication is that if only the pilot and sync channels are active, and the maximum power per carrier table says that you should not exceed 10 dBm for a CDMA signal, for example, then you should set the attenuation between the base station and the Main Hub so that the Main Hub receives 3 dBm (assuming 0 dB system gain).

An additional consideration for CDMA systems is that the uplink and downlink paths should be gain and noise balanced. This is required for proper operation of soft-hand-off to the outdoor network as well as preventing excess interference that is caused by mobiles on the indoor system transmitting at power levels that are not coordinated with the outdoor mobiles. This balance is achieved if the power level transmitted by the mobiles under close-loop power control is similar to the power level transmitted under open-loop power control. The open-loop power control equation is

$$P_{TX} + P_{RX} = -73 \text{ dBm (for Cellular, IS-95)}$$

$$P_{TX} + P_{RX} = -76 \text{ dBm (for PCS, J-STD-008)}$$

where P_{TX} is the mobile’s transmitted power and P_{RX} is the power received by the mobile.

The power level transmitted under closed-loop power control is adjusted by the base station to achieve a certain E_b/N_0 (explained in Table 8-30 on page 8-38). The difference between these power levels, Δ_p , can be estimated by comparing the power radiated from the RAU, $P_{downlink}$, to the minimum received signal, P_{uplink} , at the RAU:

$$\Delta_p = P_{downlink} + P_{uplink} + 73 \text{ dBm (for Cellular)}$$

$$\Delta_p = P_{downlink} + P_{uplink} + 76 \text{ dBm (for PCS)}$$

It’s a good idea to keep $-12 \text{ dB} < \Delta_p < 12 \text{ dB}$.

Table 8-30 provides link budget considerations for CDMA systems.

Table 8-30 Additional Link Budget Considerations for CDMA Systems

Consideration	Description
Multipath Fade Margin	The multipath fade margin can be reduced (by at least 3 dB) by using different lengths of optical fiber (this is called “delay diversity”). The delay over fiber is approximately 5µS/km. If the difference in fiber lengths to Expansion Hubs with overlapping coverage areas produces at least 1 chip (0.8µS) delay of one path relative to the other, then the multipaths’ signals can be resolved and processed independently by the base station’s rake receiver. A CDMA signal traveling through 163 meters of MMF cable will be delayed by approximately one chip.
Power per carrier, downlink	This depends on how many channels are active. For example, the signal will be about 7 dB lower if only the pilot, sync, and paging channels are active compared to a fully-loaded CDMA signal. Furthermore, in the CDMA forward link, voice channels are turned off when the user is not speaking. On average this is assumed to be about 50% of the time. So, in the spreadsheet, both the power per Walsh code channel (representing how much signal a mobile will receive on the Walsh code that it is de-spreading) and the total power are used. The channel power is needed to determine the maximum path loss, and the total power is needed to determine how hard the Unison system is being driven. The total power for a fully-loaded CDMA signal is given by (approximately): total power = voice channel power + 13 dB + $10\log_{10}(50\%)$ = voice channel power + 10 dB
Information Rate	This is simply $10\log_{10}(9.6 \text{ Kbps}) = 40 \text{ dB}$ for rate set 1 $10\log_{10}(14.4 \text{ Kbps}) = 42 \text{ dB}$ for rate set 2
Process Gain	The process of de-spreading the desired signal boosts that signal relative to the noise and interference. This gain needs to be included in the link budget. In the following formulas, P_G = process gain: $P_G = 10\log_{10}(1.25 \text{ MHz} / 9.6 \text{ Kbps}) = 21 \text{ dB}$ rate set 1 $P_G = 10\log_{10}(1.25 \text{ MHz} / 14.4 \text{ Kbps}) = 19 \text{ dB}$ rate set 2 Note that the process gain can also be expressed as $10\log_{10}$ (CDMA bandwidth) minus the information rate.

Table 8-30 Additional Link Budget Considerations for CDMA Systems

Consideration	Description
Eb/No	<p>This is the energy-per-bit divided by the received noise and interference. It's the CDMA equivalent of signal-to-noise ratio (SNR). This figure depends on the mobile's receiver and the multipath environment. For example, the multipath delays inside a building are usually too small for a rake receiver in the mobile (or base station) to resolve and coherently combine multipath components. However, if artificial delay can be introduced by, for instance, using different lengths of cable, then the required E_b/N_o will be lower and the multipath fade margin in the link budget can be reduced in some cases.</p> <p>If the receiver noise figure is NF (dB), then the receive sensitivity (dBm) is given by:</p> $P_{sensitivity} = NF + E_b/N_o + \text{thermal noise in a 1.25 MHz band} - P_G$ $= NF + E_b/N_o - 113 \text{ (dBm/1.25 MHz)} - P_G$
Noise Rise	<p>On the uplink, the noise floor is determined not only by the Unison system, but also by the number of mobiles that are transmitting. This is because when the base station attempts to de-spread a particular mobile's signal, all other mobile signals appear to be noise. Because the noise floor rises as more mobiles try to communicate with a base station, the more mobiles there are, the more power they have to transmit. Hence, the noise floor rises rapidly:</p> $\text{noise rise} = 10 \log_{10}(1 / (1 - \text{loading}))$ <p>where <i>loading</i> is the number of users as a percentage of the theoretical maximum number of users.</p> <p>Typically, a base station is set to limit the loading to 75%. This noise ratio must be included in the link budget as a worst-case condition for uplink sensitivity. If there are less users than 75% of the maximum, then the uplink coverage will be better than predicted.</p>
Hand-off Gain	<p>CDMA supports soft hand-off, a process by which the mobile communicates simultaneously with more than one base station or more than one sector of a base station. Soft hand-off provides improved receive sensitivity because there are two or more receivers or transmitters involved. A line for hand-off gain is included in the CDMA link budgets worksheet although the gain is set to 0 dB because the in-building system will probably be designed to limit soft-handoff.</p>

Other CDMA Issues

- Never combine multiple sectors (more than one CDMA signal at the same frequency) into a Unison system. The combined CDMA signals will interfere with each other.
- Try to minimize overlap between in-building coverage areas that utilize different sectors, as well as in-building coverage and outdoor coverage areas. This is important because any area in which more than one dominant pilot signal (at the same frequency) is measured by the mobile will result in soft-handoff. Soft-handoff decreases the overall network capacity by allocating multiple channel resources to a single mobile phone.

8.4.4 Spread Spectrum Link Budget Analysis for a Microcell Application

Spread Spectrum Link Budget Analysis: Downlink

Line	Downlink	
	Transmitter	
a.	BTS transmit power per traffic channel (dBm)	30.0
b.	Voice activity factor	50%
c.	Composite power (dBm)	40.0
d.	Attenuation between BTS and Unison (dB)	-24
e.	Power per channel into Unison (dBm)	9.0
f.	Composite power into Unison (dBm)	16.0
g.	Unison gain (dB)	0.0
h.	Antenna gain (dBi)	3.0
i.	Radiated power per channel (dBm)	12.0
j.	Composite radiated power (dBm)	19.0
	Airlink	
k.	Handoff gain (dB)	0.0
l.	Multipath fade margin (dB)	6.0
m.	Log-normal fade margin with 8 dB std. deviation, edge reliability 90% (dB)	10.0
n.	Additional loss (dB)	0.0
o.	Body loss (dB)	3.0
p.	Airlink losses (not including facility path loss)	19.0
	Receiver	
q.	Mobile noise figure (dB)	7.0
r.	Thermal noise (dBm/Hz)	-174.0
s.	Receiver interference density (dBm/Hz)	-167.0
t.	Information ratio (dB/Hz)	41.6
u.	Required $E_b/(N_o + I_o)$	7.0
v.	Receive Sensitivity (dBm)	-118.4
w.	Minimum received signal (dBm)	-99.4
x.	Maximum path loss (dB)	-99.4
y.	Difference between open- and closed-loop transmitter power (dB)	-2.0

Adam, you said to move "y" to the next page, but didn't tell me where to move it to. Julie

- b and c: see notes in Table 8-30 regarding power per carrier, downlink
- $e = a + d$
- $f = c + d$
- $i = e + g + h$
- $j = f + g + h$
- $p = -k + l + m + n + o$
- $s = q + r$
- $v = s + t + u$
- $w = p + v$
- $x = j - w$
- $y = j$ (downlink) + m (uplink) + P

where

$$P = P_{tx} + P_{rx} = \begin{array}{l} -73 \text{ dB for Cellular} \\ -76 \text{ dB for PCS} \end{array}$$

Spread Spectrum Link Budget Analysis: Uplink

Line	Uplink	
	Receiver	
a.	BTS noise figure (dB)	3.0
b.	Attenuation between BTS and Unison (dB)	-30.0
c.	Unison gain (dB)	0.0
d.	Unison noise figure (dB)	22.0
e.	System noise figure (dB)	33.3
f.	Thermal noise (dBm/Hz)	-174.0
g.	Noise rise 75% loading (dB)	6.0
h.	Receiver interference density (dBm/Hz)	-134.6
i.	Information rate (dB/Hz)	41.6
j.	Required $E_b/(N_o+I_o)$	5.0
k.	Handoff gain (dB)	0.0
l.	Antenna gain (dBi)	3.0
m.	Minimum received signal (dBm)	-91.1
	Airlink	
n.	Multipath fade margin (dB)	6.0
o.	Log-normal fade margin with 8 dB std. deviation, edge reliability 90% (dB)	10.0
p.	Additional loss (dB)	0.0
q.	Body loss (dB)	3.0
r.	Airlink losses (not including facility path loss)	19.0
	Transmitter	
s.	Mobile transmit power (dBm)	28.0
t.	Maximum path loss (dB)	100.1

- e: enter the noise figure and gain of each system component (a, b, c, and d) into the standard cascaded noise figure formula

$$F_{sys} = F_1 + \frac{F_2 - 1}{G_1} + \frac{F_3 - 1}{G_1 G_2} + \dots$$

where

$$F = 10^{(\text{Noise Figure}/10)}$$

$$G = 10^{(\text{Gain}/10)}$$

(See Rappaport, Theodore S. *Wireless Communications, Principles, and Practice*. Prentice Hall PTR, 1996.)

- $h = e + f + g$
- $m = h + i + j - k - l$
- $r = n + o + p + q$
- $t = s - r - m$

8.4.5 Considerations for Re-Radiation (over-the-air) Systems

The Unison can be used to extend the coverage of the outdoor network by connecting to a roof-top donor antenna that is pointed toward an outdoor base station. Additional considerations for such an application of the Unison are:

- Sizing the gain and output power requirements for a bi-directional amplifier (repeater).
- Ensuring that noise radiated on the uplink from the in-building system does not cause the outdoor base station to become desensitized to wireless handsets in the outdoor network.
- Filtering out signals that lie in adjacent frequency bands. For instance, if you are providing coverage for Cellular B-band operation it may be necessary to filter out the A, A' and A'' bands which may contain strong signals from other outdoor base stations.

Further information on these issues can be found in LGC Wireless' application notes for re-radiation applications.

Rich, are we supporting re-rad applications? (PS)

8.5 Optical Power Budget

Rich is updating this section for Unison.


Unison uses SC/APC connectors. The connector losses associated with mating to these connectors is accounted for in the design and *should not* be included as elements of the Optical Power Budget. The reason is that when the Optical Power Budget is defined, measurements are taken with these connectors in place.

The Main Hub/Expansion Hub link uses one fiber strand and its Optical Power Budget is:

- Uplink: 5.5 dB @ 1550 nm
- Downlink: 7 dB @ 1310 nm

The following figure shows what is to be included when calculating Optical Power Budget losses.

Figure 1 Losses to be Included in Optical Power Budget

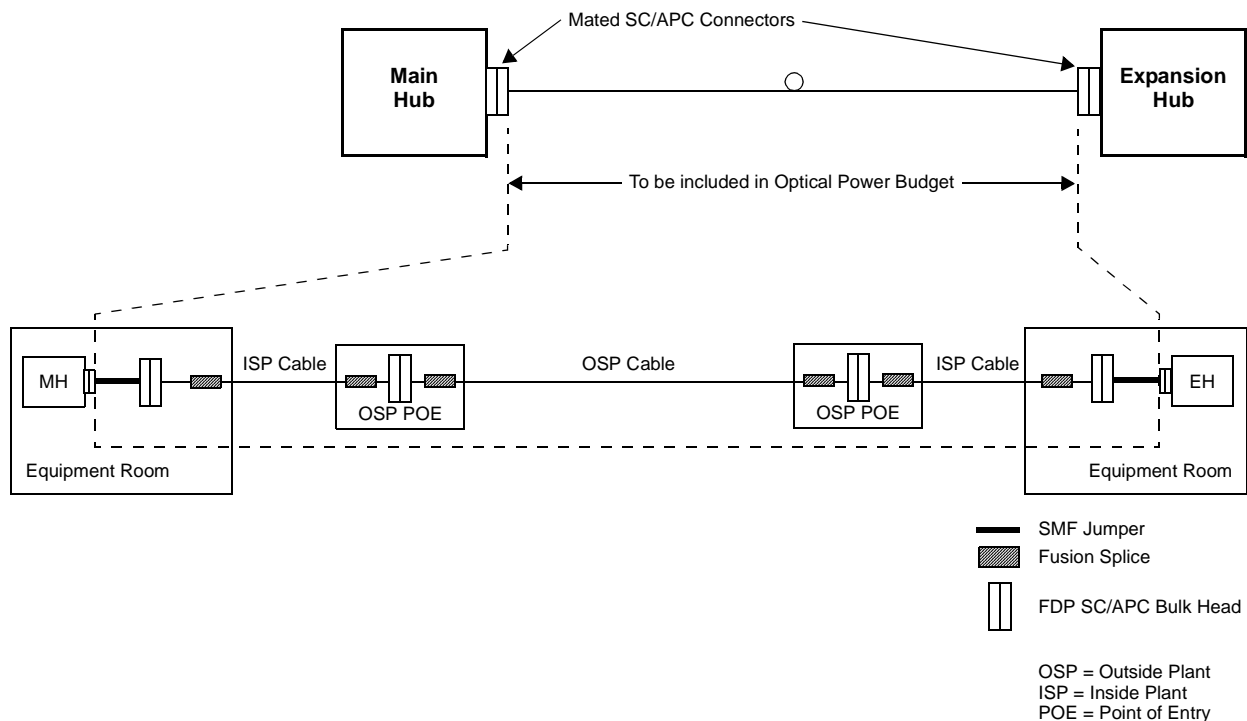

The following table lists the typical losses from the configuration shown in Figure 1.

Description	Downlink (1310 nm)	Loss Subtotal	Uplink (1550 nm)	Loss Subtotal	Source
Optical Power Budget (dB)	7		5.5		LGC Wireless
Inside Plant Cable Loss (dB/km)	0.5		0.5		OCC/ CommScope
Cable Length (km) ^a	1.2	0.6	1.2	0.6	
SMF Jumper Loss (approx. dB/km) ^b	1.0	0.0	0.5	0.0	
SC/APC Insertion Loss (dB): 4 used	0.25	1.0	0.25	1.0	Siecor
Fusion Splice Loss (dB): 6 used	0.05	0.3	0.05	0.3	Alcoa Fujikura
Losses (dB)		1.9		1.9	
Available budget for OSP (dB) (Optical Power Budget – Known Losses)		5.1		3.6	
Outside Plant Cable Loss (dB/km)	0.35		0.25		CommScope
Optical Power Budget – Known Losses ÷ Outside Plant Cable Loss = Potential Fiber Length (km)^c	7 – 5.1 ÷ <u>0.35</u> 14.57		5.5 – 3.6 ÷ <u>0.25</u> 14.40		


- a. This length will vary for each individual building.
b. It is assumed that the SMF jumpers are less than a meter and therefore their loss is negligible.
c. Actual fiber length may vary due to the quantity and quality of fiber splices in the OSP network.

NOTE: Where known losses are less than 1.7 dB (1310 or 1550), the potential reach will exceed 15 km. For CDMA, care must be taken to ensure that the fiber-induced latencies do not conflict with the Operator's PN offset plan.

8.6 Connecting a Main Hub to a Base Station

The first consideration when connecting Unison Main Hubs to a base station is to ensure there is an equal amount of loss through cables, combiners, etc. from the base station to the Main Hubs. For this example, assume that the base station will have simplex connections, one uplink and one downlink. Each of these connections will need to be divided to equilibrate power for each Main Hub. For example, two Main Hubs will require a 2×1 combiner/divider; four Main Hubs will require a 4×1 combiner/divider; and so on.

Figure 8-2 Connecting Main Hubs to a Simplex Base Station

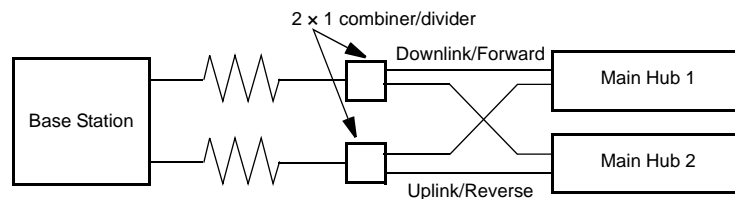

When connecting a Unison Main Hub to a base station, also consider the following:

1. The downlink power from the base station must be attenuated enough so that the power radiated by the RAU does not exceed the maximum power per carrier listed in **Section 8.1, “Maximum Output Power per Carrier at RAU,”** on page 8-3.
2. The uplink attenuation should be small enough that the sensitivity of the overall system is limited by Unison, not by the attenuator. However, some base stations will trigger alarms if the noise or signal levels are too high. In this case the attenuation will have to be large enough to prevent this from happening.


If, in an area covered by Unison, a mobile phone indicates good signal strength but consistently has difficulty completing calls, it is possible that the attenuation between Unison and the base station needs to be adjusted. In other words, it is possible that if the uplink is over-attenuated, the downlink power will provide good coverage, but the uplink coverage distance will be small.

When there is an excessive amount of loss between the Main Hub uplink and the base station, the uplink system gain can be increased to as much as 15 dB to prevent a reduction in the overall system sensitivity.

8.6.1 Attenuation

Figure 8-3 shows a typical setup wherein a duplex base station is connected to a Main Hub. For a simplex base station, eliminate the circulator and connect the simplex ports of the base station to the simplex ports of the Main Hub. Add attenuators to regulate the power appropriately.

Figure 8-3 Main Hub to Duplex Base Station or Repeater Connections

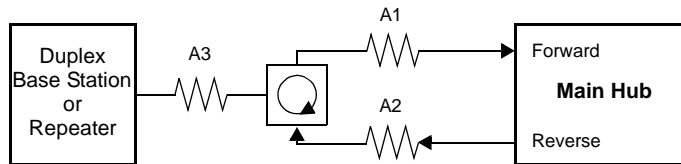

- A typical circulator has an IP3 of +70dBm. If you drive the circulator too hard it will produce intermods that are bigger than the intermods produced by Unison. The IP3 at the Forward port input of the Main Hub is approximately +38 dBm. The IP3 of the circulator at that same point (i.e., following attenuator A1) is +70dBm – A1. Thus, to keep the system IP3 from being adversely affected by the circulator, attenuator A1 should be no more than approximately +30 dB.
- A filter diplexer can be used in place of the circulator. The IP3 of the diplexer can be assumed to be greater than +100 dBm. If a diplexer is used, A3 can be omitted.
- A1+A3 should be chosen so that the output power per carrier at the RAU's output is correct for the number of carriers being transmitted. Suppose the base station transmits 36 dBm per carrier and it is desired that the RAU output be 6 dBm per carrier and the forward port gain is 0 dB. Then A1+A3=30 dB.
- A2+A3 should, ideally, be at least 10 dB less than the noise figure plus the gain of the Unison system. For example, if the reverse port has a 0 dB gain and if there are 32 RAUs, the noise figure is approximately 22 dB. So A2+A3 should be about 10 dB. If A2+A3 is too large, the uplink coverage can be severely reduced.
- Given these three equations:
 - A1 < 30 dB
 - A1+A3 = 30 dB (in this example)
 - A2+A3 < 10 dB (in this example)
 we could choose A1=20 dB, A2=0 dB, A3=10 dB

8.6.2 Uplink Attenuation

The attenuation between the Main Hub's reverse port and the base station does two things:

1. It attenuates the noise coming out of Unison.
2. It attenuates the desired signals coming out of Unison.

Setting the attenuation on the uplink is a trade-off between keeping the noise and maximum signal levels transmitted from Unison to the base station receiver low while not reducing the SNR (signal-to-noise ratio) of the path from the RAU inputs to the base station inputs. This SNR can not be better than the SNR of Unison by itself, although it can be significantly worse.

For example, suppose we have a GSM Unison system consisting of one Main Hub, four Expansion Hubs, and 32 RAUs (1-4-32) with uplink NF=22 dB. (See Table 8-30 on page 8-38.) If we use 30 dB of attenuation between the Main Hub's reverse port and the base station (which has its own noise figure of about 4 dB), the overall noise figure will be 34.3 dB (refer to the formula on page 8-36) which is 12.3 dB worse than Unison by itself. That causes a 12.3 dB reduction in the uplink coverage distance. Now, if the attenuation instead is 10 dB, the cascaded noise figure is NF=22.6 dB, which implies that the uplink sensitivity is limited by Unison, a desirable condition.

Rule of Thumb

A good rule of thumb is to set the uplink attenuation, A2+A3 in Figure 8-3 on page 8-48, as follows:

$$A2+A3 \approx \text{Unison uplink NF} + \text{uplink gain (0 dB for reverse port)} - \text{BTS NF} - 10\text{dB}$$

and round A2 *down* to the nearest convenient attenuation value.

8.6.2.1 Uplink Attenuation Exception: CDMA

In CDMA systems, the power transmitted by the mobile is determined by the characteristics of both the uplink and downlink paths. The power transmitted by the mobile should be similar in open-loop control (as determined by the downlink path) as during closed-loop control (as determined by the uplink and downlink paths). In addition, the mobile's transmit power when it communicates with a base station through Unison should be similar to the power transmitted when it communicates with a base station in the outdoor network (during soft hand-off). Because of these considerations, you should not allow the downlink and uplink gains to vary widely.

Open-loop power control:

$$P_{TX} = -76 \text{ dBm (for PCS)} - P_{RX}$$

where P_{TX} is the power transmitted and P_{RX} is the power received by the mobile. If PL is the path loss (in dB) between the RAU and the mobile, and P_{DN} is the downlink power radiated by the RAU, then

$$P_{TX} = -76 \text{ dBm (for PCS)} - P_{DN} + PL$$

Closed-loop power control:

$$\begin{aligned} P_{TX} &= \text{noise floor} + \text{uplink NF} - \text{process gain} + E_b/N_o + PL \\ &= -113 \text{ dBm/1.25 Mhz} + \text{NF} - 19 \text{ dB} + 7 \text{ dB} + PL \end{aligned}$$

where $E_b/N_o = 7 \text{ dB}$ is a rough estimate, and NF is the cascaded noise figure of the Unison uplink, the uplink attenuation, and the base station noise figure. Equating P_{TX} for the open-loop and closed-loop we see that

$$\text{NF} = 49 - P_{DN}$$

where P_{DN} is determined by the downlink attenuation. Since P_{DN} for Unison is about 10 dBm, we see that the cascaded noise figure is about 39 dB, which is considerably higher than that of Unison itself. This implies that we should use a fairly large attenuation on the uplink. This case suggests using as much attenuation on the downlink as on the uplink. The drawback of doing this is that the uplink coverage sensitivity is reduced. A link budget analysis will clarify these issues. Typically, the uplink attenuation between the Main Hub and the base station will be the same as, or maybe 10 dB less than, the downlink attenuation.

8.7 Designing for a Neutral Host System

Designing for a neutral host system uses the same design rules previously discussed. Since a neutral host system typically uses *multiple systems in parallel*, we find it best to design for the worst case system so that there will not be holes in the covered area and the economies of a single installation can be achieved. For example, as indicated Section 7.1, the 1900 MHz RF signals do not propagate throughout a building as well as the 800 MHz systems, therefore, we design to the 1900 MHz path loss formula.

8.7.1 Capacity of the Unison Neutral Host System

As indicated in Section 2.3, "System Bandwidths," on page 2-10, each Main Hub can support more than one sub-band of the Cellular or PCS bands. The exception to this is the iDEN Main Hub, because the SMR band is not split into sub-bands.

The 800 MHz Main Hub can support both the A band and the B band simultaneously. Also, the 1800 MHz and 1900 MHz Main Hubs can support two bands each (as the frequencies currently are allocated).

For example, a neutral host system that consists of one iDEN, one 800 MHz, and two 1900 MHz systems can support up to seven separate service providers:

- 1 on iDEN
- 2 on 800 MHz, A band and B band
- 2 in each 1900 MHz

Rich, what's correct for Unison? JW

8.7.2 Example Unison Neutral Host System

Simon: do you have a Unison example? This is for LGCell. I need it ASAP (Wednesday PM). Thanks, Julie

The following example configuration assumes:

- 0 dBm per carrier output
- Each System supports two bands, and therefore, two Operators (Exception: iDEN supports one Operator)

Example Configuration:

- 800 MHz iDEN: System 1
1 - iDEN system: 8 Channels, 23 voice calls
- 800 MHz Cellular: System 2
1 - TDMA Band: 8 Channels, 23 voice calls
1 - CDMA Band: 2 Channels, 30–40 voice calls
- 1900 MHz PCS: Systems 3 & 4 (2 band combinations/system)
1 - TDMA Band: 8 Channels, 23 voice calls
1 - CDMA Band: 2 Channels, 30–40 voice calls
1 - GSM Band: 4 Channels, 31 voice calls

Number of subscribers¹ that could be served in this example:

- 800 MHz Cellular: System 1
1 - iDEN Operator: 23 voice calls, 315 subscribers
- 800 MHz Cellular: System 2
1 - TDMA Operator: 23 voice calls, 315 subscribers
1 - CDMA Operator: 30–40 voice calls, 438–620 subscribers
- 1900 MHz PCS: Systems 3 & 4 (2 band combinations/system)
1 - TDMA Operator: 23 voice calls, 315 subscribers
1 - CDMA Operator: 30–40 voice calls, 438–620 subscribers
1 - GSM Operator: 31 voice calls, 456 subscribers

This configuration supports growth for up to 7 Operators.

1. Based on Standard Erlang B 2% GOS requirement. Each user has a 0.05 wireless Erlang which is higher than the standard 0.035 wireless Erlang.

Replacing Unison Components in an Operating System

9.1 Replacing an RAU

Be aware that the new RAU must be the same band as the one you are replacing. If you replace an RAU with one that is of the wrong band, it will not work.

The Main Hub automatically checks the band of a replaced RAU. There is no need to issue commands directly from the Main Hub. Therefore, as long as the RAU is of the correct band, the system will operate properly.

✓ Replacing an RAU

1. Use AdminManager or refer to the As-Built Document to review the current RAU's configuration.
2. Disconnect the Cat-5/6 cable and antenna from the unit to be replaced.
3. Install the new RAU.
4. Connect the antenna and then the Cat-5/6 cable to the new RAU

✓ AdminManager Tasks

- Use the Advanced RAU Settings option on the Configuration & Maintenance panel to set the RAU's 10 dB attenuation and UL ALC settings.
- When convenient, perform System Test to optimize performance.

During System Test, the entire system is temporarily off-line and no RF is being transmitted.

✓ Checking the RAU's LEDs

1. The RAU's **LINK** and **ALARM** LEDs should blink (green/red) on power up.
 - If the LEDs do not blink on power up, replace the RAU.
2. After several seconds both LEDs should change to green, which indicates that the unit has been successfully replaced, there is communication with the Expansion Hub, and the RAU band is correct.
 - a. If the **LINK** LED remains green and the **ALARM** LED remains red, verify that the RAU model is correct for the intended frequency band.
 - Disconnect the cable and then reconnect it once; doing this more than once will not change the result.
 - b. If both LEDs still don't change to green, use the AdminManager to determine the exact nature of the fault and see a recommendation of how to correct it.
 - c. If both LEDs turn red (after 45 seconds), the Expansion Hub has terminated communications.

9.2 Replacing an Expansion Hub

✓ Replacing an Expansion Hub

1. Turn off the power to the Expansion Hub.
2. Disconnect all Cat-5/6 cables, both fiber cables, and the AC power cord.
3. Replace the Expansion Hub with a new one.
4. Connect the AC power cord, all Cat-5/6 cables, and both fiber cables – remembering to clean and correctly connect the uplink and downlink fiber.
5. Turn on the power to the Expansion Hub.

✓ AdminManager Tasks

- The Main Hub automatically issues the band setting.
- When convenient, perform System Test to optimize performance.

During System Test, the entire system is temporarily off-line and no RF is being transmitted.

✓ Checking the Expansion Hub's LEDs

- The LEDs should blink through all states on power up.
 - If the LEDs do not blink on power up, replace the Expansion Hub.
 - If the LEDs do not illuminate at all, make sure the AC power cable is connected.
- The **UL STATUS** and **DL STATUS** LEDs should be green.
- The **E-HUB STATUS** and **POWER** LEDs should be green.
- For each RJ-45 port that has an RAU connected:
 - The **E-HUB/RAU** LEDs should be green.
 - The **LINK** LEDs should be green.

It can take several seconds for each Cat-5/6 connection for the LEDs to display properly.

NOTE: Refer to Section 10 for troubleshooting using the LEDs.

9.3 Replacing a Main Hub

You must record the system configuration settings from the old Main Hub's memory before replacing the unit. You will program the new Main Hub with this information. If the Main Hub is programmed incorrectly, the system will not work. If the Main Hub is not functioning, get the configuration settings from the As-Built Document that was created as part of the original installation.

✓ Get System Configuration Settings

1. Connect the null modem cable to the PC and the Main Hub.
2. Start the AdminManager software.
3. Select the Configuration & Maintenance Panel option from the introductory window.
4. Click the SAVE CONFIG button.

The Save Configuration Notes dialog box is displayed.

5. Type any notes you want to save with the configuration settings into the dialog box and click OK.

The configuration settings are saved in a text file, for example:

```
Begin Notes *****
LGC HQ
05/23/01 MH configuration L010MH11
System configuration
End Notes *****

Frequency Band is DCS Low.
System Gain: UL = 12 dB, DL = 4 dB.
Callback Number is 1234567.
System label is LGC.

Main Hub Information:
Serial Number: L010BMH1
Part Number: 7405101
Revision Number: 03
Firmware Revision: 010526

Expansion Hub LGC-1 Information:
Serial Number: L010BEH9
Part Number: 7405101
Revision Number: 03
Firmware Revision: 010513

RAU LGC-1-5 Information:
Serial Number: L010BRU1
Part Number: 7405101
Revision Number: 03

Firmware Revision: 010021
```


✓ Replacing a Main Hub

1. Turn off the power to the Main Hub.
2. Disconnect all fiber cables and the AC power cord.
3. Replace the Main Hub with a new one.
4. Connect the AC power cord and all fiber cables – remembering to clean and correctly connect the uplink and downlink fiber cables.
5. Connect the null modem cable to the PC and then to the Main Hub's front panel DB-9 serial connector.
6. Start the AdminManager software.
7. Select the Installation Wizard option from the introductory window.
8. Turn on the power to the Main Hub.

✓ AdminManager Tasks

- Use the Installation Wizard to:
 - Set the Operation Band
- Use the Configuration & Maintenance panel to:
 - Set Callback Number
 - Set Contact Sense Properties
 - Set System Parameters
 - Perform System Test

During the System Test the system is out-of-service and no RF is being transmitted. Choose a time of day to perform the System Test that will have the least impact on the system.

✓ Checking the Main Hub's LEDs

- The LEDs should blink through all states on power up.
 - If the LEDs do not blink on power up, replace the Main Hub.
 - If the LEDs do not illuminate at all, make sure the AC power cable is connected.
- For each fiber optic port that has a Main Hub connected:
 - The **LINK** LED should be green.
 - The **E-HUB/RAU** LED should be:
 - Green if the **MAIN HUB STATUS** is green.
 - Red if the **MAIN HUB STATUS** is red.
- The **MAIN HUB STATUS** LED should be:
 - Red if the Main Hub is new from the factory and a band has not been programmed, or if the wrong band is programmed.
 - Green if the Main Hub was previously programmed with a correct band (matches the RAUs in the system).

NOTE: If there is communication between the Main Hub and the Expansion Hubs, use the AdminManager software's Configuration & Maintenance panel to isolate system problems.

Maintenance, Troubleshooting, and Technical Assistance

There are no user-serviceable parts in any of the Unison components. Faulty or failed components are fully replaceable through LGC Wireless.

Address	2540 Junction Avenue San Jose, California 95134-1902 USA
Phone	1-408-952-2400
Fax	1-408-952-2410
Help Hot Line	1-800-530-9960 (U.S. only) +1-408-952-2400 (International) +44(0) 1223 597812 (Europe)
Web Address	http://www.lgcwireless.com
e-mail	service@lgcwireless.com

10.1 Maintenance

No periodic maintenance of the Unison equipment is required.

10.2 Troubleshooting

NOTE: Unison has no user-serviceable parts. Faulty or failed units are fully replaceable through LGC Wireless.

Sources of potential problems include:

- Malfunction of one or more Unison components
 - Faulty cabling/connector
 - Antenna, base station, or repeater problem
 - External RF interface
-

NOTE: Faulty cabling is the cause of a vast majority of problems. All Cat-5/6 cable should be tested to TIA/EIA 568-A specifications.

It is recommended that you use the AdminManager for troubleshooting the system, and use the LEDs as backup or for confirmation. However, if there are communication problems within the system, the LEDs may provide additional information that is not available using AdminManager.

To begin troubleshooting, use the AdminManager software to determine the current faults and warnings for all of the units in the system. To troubleshoot, start with the Main Hub's faults and warnings, then proceed to each of the Expansion Hubs, finishing with each of the RAUs.

If you do not have a PC with AdminManager available, the LEDs provide a minimal set of diagnostic information.

If you cannot determine the cause of a problem after following the recommended procedures, call LGC Wireless customer help hot line:

1-800-530-9960 (U.S. only)
+1-408-952-2400 (International)
+44(0) 1223 597812 (Europe)

10.2.1 Fault Indications

Once all of the units are powered on and the cable connections are made, the faults from each unit can be requested using the AdminManager. Start with the Main Hub and work downstream.

Resolve all faults first and then check the warnings. Take appropriate action to resolve the faults, as indicated in the following tables.

Main Hub Faults

Table 10-1 Main Hub Faults

Fault Message	LED	State	Possible Causes	Action	Impact
Hardware failure.	STATUS	Red	Internal hardware failure.	Replace the Main Hub.	System off-line.
Frequency band not programmed.	STATUS	Red	Factory default.	Program the frequency band using the AdminManager's Installation Wizard.	System off-line.
Main Hub is over temperature.	STATUS	Red	Fan failure. Ambient temperature is above maximum.	If fan is not operating, replace the Main Hub. If fan is operating, check room environmental controls.	Possible unit failure.
Failed to perform system test.	STATUS	Red	Internal failure.	Replace the Main Hub when possible.	Degraded performance.
Uplink EHz AGC failure.	STATUS	Red	Uplink fiber has high optical loss. Main Hub uplink port failure.	Measure UL optical fiber loss. Clean the Main Hub's uplink fiber port. Move fiber pair to another port. If fault is not reported, fiber is okay and MH port is dirty or bad. Use the AdminManager to 'Clear All Disconnect Status' to clear the disconnect fault on the original port.	The Main Hub's EHz port is off-line; downlink is okay.

Table 10-1 Main Hub Faults (continued)

Fault Message	LED	State	Possible Causes	Action	Impact
No communication with EHN.	LINK	Red	Downlink fiber has high optical loss. Expansion Hub downlink port failure. Main Hub internal failure.	If common point of failure for more than one Expansion Hub, replace the Main Hub. Measure downlink optical fiber loss. Clean the Expansion Hub's downlink fiber port. Clean the Main Hub's downlink fiber port. Move the Main Hub fiber pair to another port. If fault is not reported, fiber is okay and the Main Hub port is dirty or bad. Use the AdminManager's "Clear All Disconnect Status" command to clear the disconnect fault on the original port.	EHN and connected RAUs are off-line.
	E-HUB/RAU	Off			
EHN disconnected.	LINK	Red	The Expansion Hub was connected and is now disconnected. The uplink fiber optical loss exceeds minimum threshold. Expansion Hub uplink laser failure.	If EHN is disconnected, reconnect it or clear the disconnect fault using the AdminManager's "Clear All Disconnect Status" command. If EHN is connected, check the uplink fiber cable's optical loss. Clean the Main Hub's uplink port. Clean EHN's uplink port. Check that EHN's uplink laser is operational.	EHN and connected RAUs are off-line.
	E-HUB/RAU	Off			
EHN/RAU reports fault condition.	LINK	Green	Any EH or RAU fault	Use the AdminManager to check for Expansion Hub and RAU faults. Proceed to Expansion Hub or RAU troubleshooting section.	EHN and/or RAU off-line
	E-HUB/RAU	Red			

Expansion Hub Faults

Table 10-2 Expansion Hub Faults

Fault Message	LED	State	Possible Causes	Action	Impact
Hardware failure.	STATUS	Red	Expansion Hub internal hardware failure. Main Hub internal hardware failure. ? (JS) Downlink fiber has high optical loss.	If common point of failure for more than one Expansion Hub, replace the Main Hub. Measure downlink optical fiber loss. Clean the Expansion Hub's downlink fiber port. Clean the Main Hub's downlink fiber port. Replace the Expansion Hub.	Expansion Hub and connected RAUs are off-line
PLL unlock.	STATUS	Red	Internal hardware failure.	Replace the Expansion Hub.	Expansion Hub and connected RAUs are off-line
Frequency band not programmed.	STATUS	Red	Internal hardware failure.	Cycle power on the Expansion Hub. If fault persists, replace the Expansion Hub.	Expansion Hub and connected RAUs are off-line
Expansion Hub is over temperature.	STATUS	Red	Fan failure(s). Ambient temperature above maximum	If fans are not operating, replace the Expansion Hub. If fans are operating, check room environmental controls.	Expansion Hub and connected RAUs are off-line. RAUs are commanded off-line which disables their power amplifiers. If the Expansion Hub temperature does not start to drop, the Expansion Hub will disable DC power to all RAUs.
Downlink pilot failure.	STATUS	Red	Downlink fiber has high optical loss. MH downlink port failure. EH downlink port failure. MH internal hardware failure. EH internal hardware failure.	If common point of failure for more than one EH, replace MH. Measure DL optical fiber loss. Clean MH downlink fiber port. Clean EH downlink fiber port. Replace EH.	EH and connected RAUs are off-line.

Table 10-2 Expansion Hub Faults (continued)

Fault Message	LED	State	Possible Causes	Action	Impact
Failed to perform system test.	STATUS	Red	Internal failure. Main Hub internal failure.	If common point of failure for more than one Expansion Hub, replace the Main Hub. Replace the Expansion Hub when possible.	Degraded performance.
Uplink RAUn AGC failure. Universal or particular RAU port? (JS)	LINK RAU	Red Off	Cat-5/6 cable length. Expansion Hub uplink port failure. Expansion Hub internal failure.	Check Cat-5/6 cable length. Move RAU to another port. If no fault reported, replace the Expansion Hub. If fault reported, replace RAU.	Expansion Hub and connected RAUs are off-line.
No communication with RAUn	LINK RAU	Red Off	Cat-5/6 cable failure. RAU internal failure. Expansion Hub port failure.	Verify Cat-5/6 cable has no shorts or opens. Move RAU to another port. If fault persists, replace RAU, else replace the Expansion Hub.	RAUn is off-line.
RAUn over current	LINK RAU	Green Red	Cat-5/6 cable failure. RAU internal failure.	Verify Cat-5/6 cable has no shorts or opens. Move RAU to another port. If fault persists, replace RAU. If no fault reported, remove RAU, power cycle the Expansion Hub, connect known good RAU to port. If fault reported, replace the Expansion Hub.	RAUn is off-line.

Remote Access Unit Faults

Table 10-3 Remote Access Unit Faults

Fault Message	LED	State	Possible Causes	Action	Impact
Hardware failure.	ALARM	Red	Internal hardware failure.	Replace the RAU.	RAU is off-line.
Frequency band not programmed.	ALARM	Red	Wrong version of RAU for frequency band desired.	Replace the RAU if not valid for desired frequency band.	RAU is off-line.
RAU is over temperature.	ALARM	Red	Ambient temperature above maximum.	Check environmental controls; move the RAU to cooler environment.	RAU is off-line.
Power supplied by EH is too low.	ALARM	Red	Cat-5/6 cable failure. RAU internal failure. Expansion Hub internal failure.	Verify Cat-5/6 cable has no shorts or opens. Move the RAU cable to another Expansion Hub port. If fault persists, replace the RAU; otherwise, replace Expansion Hub.	RAU is off-line.
Power supplied by EH is too high.	ALARM	Red	Cat-5/6 cable failure. Expansion Hub internal failure. RAU internal failure.	Verify Cat-5/6 cable has no shorts or opens. Move RAU cable to another Expansion Hub port. If fault persists, replace the RAU, otherwise replace the EH.	RAU is off-line.
Cat-5/6 cable too long.	ALARM	Red	Cat-5/6 cable is too long.	Verify Cat-5/6 cable has no shorts or opens. Verify maximum Cat-5/6 cable length of 150 meters.	RAU is off-line.
Downlink pilot failure. Could this also be a problem with the EH port? (JS)	ALARM	Red	Cat-5/6 cable failure. RAU internal failure.	Verify Cat-5/6 cable has no shorts or opens. Verify maximum Cat-5/6 cable length of 150 meters. Verify minimum Cat-5/6 cable length of 10 meters.	RAU is off-line.

10.2.2 Warning Indications

Warnings alert you to conditions that may impact system performance and conditions that indicate potential system failure.

Before addressing warnings, ensure that all faults are resolved. Take appropriate action to resolve the warnings, as indicated in the following tables.

Main Hub Warnings

Table 10-4 Main Hub Warnings

Warning Message	Action	Impact
Downlink laser is failing.	Replace the Main Hub when possible.	The downlink laser will eventually fail and the system will be off-line.
Temperature is high.	Check room environmental controls.	Potential Main Hub failure.
Fan failure.	Check the Main Hub fan for rotation, air flow blockage, dust; replace the Main Hub if temperature rises.	Temperature may rise to fault level resulting in Main Hub and connected Expansion Hub(s) and RAU(s) being off-line.
Port <i>n</i> uplink fiber optical loss greater than recommended maximum.	Check the uplink fiber cable for optical loss. Clean the cable connector. Clean the fiber ports.	Degraded system performance.

Expansion Hub Warnings

Table 10-5 Expansion Hub Warnings

Warning Message	Action	Impact
Downlink fiber optical loss greater than recommended maximum.	Check the downlink fiber cable for excessive optical loss. Clean the cable connector. Clean the fiber ports.	Degraded system performance.
Uplink laser is failing.	Replace the Expansion Hub when possible.	The uplink laser will eventually fail resulting in the Expansion Hub and connected RAUs being off-line.
Temperature is high.	Check room environmental controls.	Potential Expansion Hub failure.
Fan failure(s).	Check the Expansion Hub fans for rotation, air flow blockage, dust; replace the Expansion Hub if temperature rises.	Temperature may rise to fault level resulting in the Expansion Hub and connected RAUs being off-line.
Cat-5/6 cable between EH and RAU is greater than recommended maximum.	Check that the Cat-5/6 cable does not exceed the recommended maximum length.	Degraded system performance.

Remote Access Unit Warnings

Table 10-6 Remote Access Unit Warnings

Warning Message	Action	Impact
Temperature is high.	Move the RAU to cooler environment.	Potential RAU failure.
DC voltage is low.	Check the Cat-5/6 cable for shorts and opens. Replace the RAU when possible.	RAU at minimum voltage setting for proper operation. not an impact (JS)
Power amplifier is failing.	Replace the RAU when possible.	Potential RAU failure.
Cat-5/6 cable between EH and RAU is greater than recommended maximum.	Check that the Cat-5/6 cable does not exceed the recommended maximum length.	Degraded system performance.
Antenna disconnected.	Check the RAU SMA antenna connection.	Poor RAU coverage.

10.3 LED Troubleshooting Guide

The following troubleshooting guide is from the perspective that all Unison equipment is installed, their cables are connected, and they are powered on; it is assumed that the system was operating normally before the current problem. (Refer to Section 6 for information on troubleshooting during initial installation of the system.)

Always use AdminManager, if possible, to troubleshoot the system. The LEDs are for backup troubleshooting; although, an Expansion Hub uplink laser failure can only be resolved using the **EH UL STATUS** LED.

Begin with troubleshooting the Main Hub's LEDs and then the Expansion Hub's LEDs. The RAU LEDs probably will not provide additional information for troubleshooting.

10.3.1 Troubleshooting Main Hub LEDs During Normal Operation

- All of the Main Hub's LEDs should be green during normal operation. If any LEDs are red, get status using the AdminManager software for the exact cause and recommendations.

Table 10-7 Troubleshooting Main Hub Port LEDs During Normal Operation

During Normal Operation	LED	State	Action	Impact
Expansion Hub Not Connected	LINK	Red	If the Expansion Hub was disconnected accidentally, re-connect the cables. The LEDs should change to Green/Red (then Green/Green, after 20 seconds, if the Main Hub band has been programmed). If the Expansion Hub is to be removed from service permanently, then use the AdminManager's 'Clear All Disconnect States' command to clear all disconnect states to no connect states. The Main Hub's port LEDs should change to Off/Off.	Expansion Hub was previously connected, but it is not currently connected; Expansion Hub cable disconnect. The AdminManager software will clear all disconnects caused by installation as part of the clean-up process. After installation, power cycle the Main Hub or use the AdminManager's 'Clear All Disconnect States' command.
	E-HUB/RAU	Off		
Expansion Hub Connected	LINK	Red	Use the AdminManager to determine the exact cause of the Main Hub's faults.	Lost communication with Expansion Hub; could be Expansion Hub problem or fiber cable problem.
	E-HUB/RAU	Off		
	LINK	Green	Expansion Hub or connected RAU reports a fault condition; use the AdminManager to determine the exact cause of the Expansion Hub and RAU's faults.	
	E-HUB/RAU	Red		

Table 10-8 Troubleshooting Main Hub Status LEDs During Normal Operation

During Normal Operation	LED	State	Action	Impact
At Any Time	MAIN HUB STATUS	Red	Use the AdminManager to determine the exact cause of the fault. Power cycle one time. If fault remains, replace the Main Hub.	Internal Main Hub fault.
	MAIN HUB STATUS	Alternating Red/Green	Reduce input signal power; reduce system gain.	Signal compression.

10.3.2 Troubleshooting Expansion Hub LEDs During Normal Operation

- All of the Expansion Hub **LINK** and **E-HUB/RAU** LEDs that have RAUs connected should be Green/Green, indicating that the RAU is powered on, communication is established, and operation is normal.
- The **POWER** and **MAIN HUB STATUS** LEDs should both be Green.

Table 10-9 Troubleshooting Expansion Hub Port LEDs During Normal Operation

During Normal Operation	Port LEDs	State	Action	Impact
RAU is not connected	LINK	Red	If the RAU was disconnected accidentally, re-connect the Cat-5/6 cable. The Expansion Hub's port LEDs should change to Green/Red (then Green/Green, after 20 seconds, if the Main Hub is connected, powered on, and has band programmed). If you are removing the RAU from service permanently, then command 'Clear All Disconnect States' using the AdminManager software. The Expansion Hub's port LEDs should change to Off/Off.	RAU was previously connected, but it is not currently connected; RAU cable is disconnected.
	RAU	Off		
RAU is connected	LINK	Red	Disconnect/reconnect the Cat-5/6 cable to force power-on reset to the RAU. If the port LEDs remain Red/Off, check the Expansion Hub faults using the AdminManager for the exact cause.	Lost communications with the RAU. The RAU could have powered down due to over current; cable could have been damaged.
	RAU	Off		
	LINK	Green	RAU reports a fault condition; check the Expansion Hub faults using the AdminManager for the exact cause.	Depends on the fault condition.
	RAU	Red		

Table 10-10 Troubleshooting Expansion Hub Status LEDs During Normal Operation

During Normal Operation	EH Status LEDs	State	Action	Impact
At Any Time (JS)	UL STATUS	Red	Replace the Expansion Hub	Uplink laser failure; no communications between the Main Hub and the Expansion Hub
	DL STATUS	Red	Check the downlink fiber for optical loss	No communications with the Main Hub
	E-HUB STATUS	Red	If either the UL STATUS or the DL STATUS are also red, see above. Cycle power on the Expansion Hub. If fault remains, replace the Expansion Hub.	Internal Expansion Hub fault (including either of the above UL STATUS or DL STATUS states)

10.4 Technical Assistance

Call our help hot line for technical assistance:

1-800-530-9960 (U.S. only)
+1-408-952-2400 (International)
+44(0) 1223 597812 (Europe)

Leave your name and phone number and an LGC Wireless customer service representative will return your call within an hour. Be prepared to provide the following information when you receive the return call:

- Company name
- End user name
- Type of system, model number, frequency
- Approximate time in service (warranty), sales order number
- Description of problem
- LED status
- AdminManager fault and warning status

Cables and Connectors

A.1 Cat-5/6 Cable (ScTP)

- Connects the Expansion Hub to the RAU(s)
- Transmits (downlink) and receives (uplink) cellular and PCS signals
- Delivers DC electrical power to the RAUs. The Expansion Hub's DC voltage output is 36V DC nominal. A current limiting circuit is used to protect the Expansion Hub if it reaches its current limit
- Use shielded RJ-45 connectors
- Distances:
 - Absolute Minimum: 10 meters (33 ft)
 - Recommended Minimum: 25 meters (82 ft)
 - Recommended Maximum: 100 meters (328 ft)
 - Absolute Maximum: 150 meters (492 ft)


There are four separate twisted pairs in one Cat-5/6 screened twisted pair (ScTP) cable. The ScTP cable loss described in this document is for Cat-5 Mohawk/CDT 55986 or Belden 1624P DataTwist Five cable, or equivalent. The following table lists the functional assignment of the pairs:

Table A-1 Cat-5/6 Twisted Pair Assignment

Pair (wire number)	Function
1 & 2	Clock and Input Voltage
3 & 6	RS485
4 & 5	Uplink IF, UL Pilot and Ground
7 & 8	Downlink IF, DL Pilot and Ground

All Cat-5/6 cable must be terminated according to the TIA/EIA 568-A standard. The following diagram shows the top view of the wiring map for the cable and how the four pairs should be terminated.

Figure A-1 Wiring Map for Cat-5/6 Cable

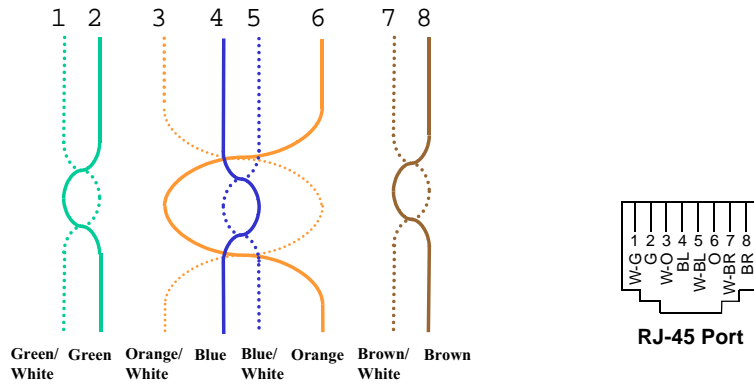

NOTE: Be sure to test cable termination before installing the cable.

The nominal DC impedance of the Cat-5/6 cable is 0.08 ohm/meter and the nominal RF impedance is 100 ohm.

A.2 Fiber Optical Cables

- Connects Main Hub to Expansion Hub(s)
- Transmits (downlink) and receives (uplink) cellular and PCS signals
- Use industry-standard 62.5 μ m/125 μ m MMF or Corning SMF-28 fiber, or equivalent (SC/APC [angle-polished] connectors only)
- Distances:
 - Multimode Fiber: up to 1.5 km (4,921 ft) – 3 dB optical loss maximum
 - Single-Mode Fiber: up to 6 km (19,685 ft) – 3 dB optical loss maximum

A.3 Coaxial Cable

- Connects a Main Hub to a repeater or base station (N-type connectors)
- Connects an RAU to a passive antenna (SMA connectors)

Compliance

B.1 Safety Requirements

All of the safety requirements are in process:

- UL/cUL 1950 3rd edition
- CB scheme evaluation with all national deviations
- EN 60950:1992 including amendments A1, A2, A3, A4, and A11

B.2 Radio/EMC Requirements

All anticipated standards approvals listed below are pending.

GSM/EGSM/DCS Products

Radio: EN 301502 v.7.0.1 (8-2000)

EMC: EN 301489-8

CISPR22

CISPR24

Cellular Products

FCC part 15 class A

FCC part 22

PCS Products

FCC part 15 class A

FCC part 24

iDEN Products

FCC part 15 class A

FCC part 90

GSM Products

FCC part 15 class A

FCC part 90

Glossary

Air Interface A method for formatting data and voice onto radio waves. Common air interfaces include AMPS, TDMA, CDMA, and GSM.

AIN Advanced Intelligent Network. AINs allow a wireless user to make and receive phone calls while roaming outside the user's "home" network. These networks, which rely on computers and sophisticated switching techniques, also provide many Personal Communications Service (PCS) features.

Amplitude The distance between high and low points of a waveform or signal.

AMPS Advanced Mobile Phone Service. AMPS is an analog cellular FDMA system. It was the basis of the first commercial wireless communication system in the U.S and has been used in more than 35 other countries worldwide.

Analog The original method of modulating radio signals so they can carry information which involves transmitting a continuously variable signal. Amplitude Modification (AM) and Frequency Modulation (FM) are the most common methods of analog modulation.

ANSI The American National Standards Institute. A nonprofit, privately funded membership organization founded in 1918 that reviews and approves standards developed by other organizations.

Antenna A device for transmitting and/or receiving signals.

Attenuation The decrease in power that occurs when any signal is transmitted. Attenuation is measured in decibels (dB).

Backhaul A term applied to the process of carrying wireless traffic between the MSC and the base station.

Base Station The radio transmitter/receiver that maintains communications with mobile devices within a specific area.

BSC Base Station Controller. A GSM term referring to the device in charge of managing the radio interface in a GSM system, including the allocation and release of radio channels and hand-off of active calls within the system.

- BTA** Basic Trading Area. The U.S. and its territories are divided into 493 areas, called BTAs. These BTAs are composed of a specific list of counties, based on a system originally developed by Rand McNally. The FCC grants licenses to wireless operators to provide service within these BTAs and/or MTAs. (See MTA.)
- BTS** Base Transceiver Station. A GSM term referring to the group of network devices that provide radio transmission and reception, including antennas.
- C/I** Carrier to interference ratio. The ratio of the desired signal strength to the combined interference of all mobile phones using the system. Usually, the interference of most concern is that provided by mobile phones using the same channel in the system. These are referred to as “co-channel interferers.”
- CCITT** Consultative Committee on International Telephone and Telegraph. This organization sets international communications standards. The CCITT is now known as ITU (the parent organization).
- CDMA** Code Division Multiple Access. A digital wireless access technology that uses spread-spectrum techniques. Unlike alternative systems, such as GSM, that use time-division multiplexing (TDM), CDMA does not assign a specific frequency to each user. Instead, every channel uses the full available spectrum. Individual conversations are assigned a unique code which allows the conversation to be spread out over multiple channels; transmitted to the far end; and re-assembled for the recipient using a specific code.
- CDPD** Cellular Digital Packet Data. CDPD allows data transmission over the analog wireless network. CDPD breaks data into packets and transmits these packets on idle portions of the network.
- Cell** A cell defines a specific, physical area of coverage of a portion of a wireless system. It is the basic “building block” of all modern wireless communications systems.
- Cell Site** A term which refers to the location of the transmission equipment (e.g., basestation) within the cell.
- CEPT** Conference of European Postal and Telecommunications Administrations. This organization’s mandate is to define pan-European wireless communications standards. In 1982, CEPT mandated GSM as the access protocol for public wireless communications systems across Europe.
- Channel** The path along which a communications signal is transmitted. Channels may be simplex (communication occurs in only one direction), duplex (communication occurs in both directions) or full duplex (communication occurs in both directions simultaneously).
- Circuit** A communication connection between two or more points. A circuit can transmit either voice or data.
- CO** Central Office. The main switching facility for a telecommunications system.

CTIA Cellular Telecommunications Industry Association. The CTIA is an industry association made up of most of the wireless carriers and other industry players. It was formed in 1984 to promote the cellular industry and cellular technology.

D-AMPS Digital Advanced Mobile Phone Service. See IS-54.

dB Decibel. A unit for expressing the ratio of two amounts of power. It is often used in wireless to describe the amount of power loss in a system (i.e., the ratio of transmitted power to received power).

DCS Digital Communications System. DCS is often called “upbanded GSM” since it is the GSM access scheme adopted to operate in the 1700–1800 MHz portion of the spectrum.

Digital A method of storing, processing, and transmitting information by representing information as “0s” and “1s” via electrical pulses. Digital systems have largely replaced analog systems because they can carry more data at higher speed than analog transmission systems.

Electromagnetic Spectrum Electrical wave forms in frequency ranges as low as 535 kHz (AM radio) and as high as 29 GHz (cable TV).

ESMR Enhanced Specialized Mobile Radio. Digital mobile telephone services offered to the public over channels previously used for two-way analog dispatch services. ESMR provides digital mobile radio and telephone service as well as messaging and dispatch features.

ETSI European Telecommunications Standards Institute. ETSI was established in 1988 to set standards for Europe in telecommunications, broadcasting and office information technology.

FCC Federal Communications Commission. In the United States, the FCC is responsible for the management and regulation of communication policy for all public communications services, including wireless.

FDMA Frequency Division Multiple Access. A wireless access protocol that assigns each user a specific radio channel for use. Since FDMA only supports one user (or conversation) on each channel, it does not maximize use of the spectrum and is therefore largely superseded by other access protocols (such as CDMA, TDMA, GSM, iDEN) that support multiple users on a single channel.

Frequency Hopping A wireless signal transmission technique whereby the frequency used to carry a signal is periodically changed, according to a predetermined code, to another frequency.

Fixed An ITU definition for radio communications between specified fixed points. Point-to-point high-frequency circuits and microwave links are two examples of fixed applications.

FM Frequency Modulation. A method of transmitting information in which the frequency of the carrier is modified according to a plan agreed to by the transmitter and the receiver. FM can be either analog or digital.

Forward Channel Refers to the radio channel that sends information from the base station to the mobile station. (See Reverse Channel.)

Frequency The number of times an electrical signal repeats an identical cycle in a unit of time, normally one second. One Hertz (Hz) is one cycle per second.

Frequency re-use The ability to use the same frequencies repeatedly across a cellular system. Because each cell is designed to use radio frequencies only within its boundaries, the same frequencies can be reused in other cells not far away with little potential for interference. The reuse of frequencies is what enables a cellular system to handle a huge number of calls with a limited number of channels.

Gain The increase in power that occurs when any signal is amplified, usually through an amplifier or antenna.

GHz Gigahertz. A measure of frequency equal to one billion hertz.

GSM Groupe Speciale Mobile (now translated in English as Global Standard for Mobile Communications). GSM is the digital wireless standard used throughout Europe, in much of Asia, as well as by some operators in the U.S. and South America.

Handoff The process by which the wireless system passes a wireless phone conversation from one radio frequency in one cell to another radio frequency in another as the caller moves between two cells. In most systems today, this handoff is performed so quickly that callers don't notice.

Hertz A measurement of electromagnetic energy, equivalent to one "wave" per second. Hertz is abbreviated as "Hz".

iDEN Integrated Digital Enhanced Network. A TDMA-based wireless access technology that combines two-way radio, telephone, text message, and data transmission into one network. This system was developed by Motorola. In the U.S., iDEN is used by Nextel in its network.

IEEE The Institute of Electrical and Electronics Engineers. The world's largest technical professional society with members from more than 130 countries. The IEEE works to advance the theory and practice of electrical, electronics, computer engineering and computer science.

Infrastructure A term used to encompass all of the equipment, including both hardware and software, used in a communications network.

IS-54 Interim Standard-54. A U.S. TDMA cellular standard that operates in the 800 MHz or 1900 MHz band. IS-54 was the first U.S. digital cellular standard. It was adopted by the CTIA in 1990.

IS-95 Interim Standard-95. A U.S. CDMA cellular standard that operates in the 800 MHz or 1900 MHz band. This standard was developed by Qualcomm and adopted by the CTIA in 1993.

IS-136 Interim Standard-136. A U.S. TDMA cellular standard based on IS-54 that operates in the 800 MHz or 1900 MHz band.

IS-553 Interim Standard-533. The U.S. analog cellular (AMPS) air interface standard.

ITU International Telecommunications Union. The ITU is the principal international standards organization. It is chartered by the United Nations and it establishes international regulations governing global telecommunications networks and services. Its headquarters are in Geneva, Switzerland.

LMDS Local Multipoint Distribution Services. LMDS provides line-of-sight coverage over distances up to 3–5 kilometers and operates in the 28 GHz portion of the spectrum. It can deliver high speed, high bandwidth services such as data and video applications.

Local Loop A communication channel (usually a physical phone line) between a subscriber's location and the network's Central Office.

MHz Megahertz. One million Hertz. One MHz equals one million cycles per second.

Microcell A network cell designed to serve a smaller area than larger macrocells. Microcells are smaller and lower powered than macrocells. As the subscriber base increases, operators must continue to increase the number of cells in their network to maximize channel re-use. This has led to an increasing number of microcells being deployed in wireless networks.

Microwave Electromagnetic waves with frequencies above 1 GHz. Microwave communications are used for line-of-sight, point-to-point, or point-to-multipoint communications.

MSA Metropolitan Statistical Area. The FCC has established 306 MSAs in the U.S. The MSAs represent the largest population centers in the U.S. At least two wireless operators are licensed in each MSA.

MSC Mobile Services Switching Center. A generic term for the main cellular switching center in the wireless communications network.

MSS Mobile Satellite Service. Communications transmission service provided by satellites. A single satellite can provide coverage to the entire United States.

MTA Major Trading Area. The U.S. and its territories are divided into 51 MTAs. Each MTA is composed of a specific number of BTAs. The FCC grants licenses to wireless operators to provide service within these MTAs and/or BTAs. (See BTA.)

Multiplexing The simultaneous transmission of two or more signals on the same radio (or other) transmission facility.

N-AMPS Narrowband Advanced Mobile Phone Service.

- PCMCIA** Personal Computer Memory Card International Association. This acronym is used to refer to credit card sized packages containing memory, I/O devices and other capabilities for use in Personal Computers, handheld computers and other devices.
- PCS** Personal Communications Service. A vague label applied to new-generation mobile communication technology that uses the narrow band and broadband spectrum recently allocated in the 1.9 GHz band.
- PDA** Personal Digital Assistant. Portable computing devices that are extremely portable and that offer a variety of wireless communication capabilities, including paging, electronic mail, stock quotations, handwriting recognition, facsimile, calendar, and other information handling capabilities.
- PDC** Personal Digital Cellular (formerly Japanese Digital Cellular). A TDMA-based digital cellular standard that operates in the 1500 MHz band.
- Phase** The particular angle of inflection of a wave at a precise moment in time. It is normally measured in terms of degrees.
- PHS** Personal Handyphone System. A wireless telephone standard, developed and first deployed in Japan. It is a low mobility, small-cell system.
- POP** Short for “population”. One person equals one POP.
- POTS** Plain Old Telephone Service.
- PSTN** Public Switched Telephone Network. Refers to the international telephone system and includes both local and long distance networks.
- Reverse Channel** Refers to the radio channel that sends information from a mobile station to a base station. (See Forward Channel.)
- RF** Radio Frequency. Those frequencies in the electromagnetic spectrum that are associated with radio wave propagation.
- Roaming** The ability to use a wireless phone to make and receive calls in places outside one's home calling area.
- RSA** Rural Service Area. One of the 428 FCC-designated rural markets across the United States used as license areas for cellular licenses. (See MTAs and BTAs.)
- Sector** A portion of a cell. Often, different sectors within the same cell will each use a different set of frequencies to maximize spectrum utilization.
- Signal to Noise Ratio** The ratio of signal power to noise power at a given point in a given system.
- Smart Antenna** Refers to an antenna whose signal handling characteristics change as signal conditions change.
- Soft Handoff** Virtually undetectable by the user, soft handoff allows both the original cell and a new cell to serve a call temporarily during the handoff transition.

Spectrum The range of electromagnetic frequencies.

Spread Spectrum A method of transmitting a signal over a broad range of frequencies and then re-assembling the transmission at the far end. This technique reduces interference and increases the number of simultaneous conversations within a given radio frequency band.

T-1 A North American commercial digital transmission standard. A T-1 connection uses time division multiplexing to carry 24 digital voice or data channels over copper wire.

TDMA Time Division Multiple Access. A method of digital wireless communications that allows multiple users to access (in sequence) a single radio frequency channel without interference by allocating unique time slots to each user within each channel.

TIA Telecommunications Industry Association.

TR-45 One of six committees of the Telecommunications Industry Association. TR-45 oversees the standard making process for wireless telecommunications.

Upbanded A service or technology that has been re-engineered to operate at a higher frequency than originally designed.

Wireless Describes any radio-based system that allows transmission of voice and/or data signals through the air without a physical connection, such as a metal wire or fiber optic cable.

Wireline Wire paths that use metallic conductors to provide electrical connections between components of a system, such as a communication system.

WLANS Wireless Local Area Networks. Technology that provides wireless communications to Portable Computer users over short distances.

