

# *FLEXEX**Series*

## User's Manual

# Table of Contents

	<b>Page</b>
<b>1. Introduction</b>	3
<b>2. Radio Controlled Safety</b>	4
<b>3. General System Information</b>	
A. Transmitter Handset	
1. External Illustration (Standard Push Button Configuration)	5
2. Internal Illustration	6
B. Receiver Unit	
1. External Illustration	7
2. Internal Illustration	8
<b>4. Function Settings</b>	
A. Transmitter Handset	
1. System Channel Settings	9
2. Push Button Functions with LED Displays	
a. Standard Push Button Configuration (Transmitter Toggle)	10
b. Standard Push Button Configuration (A/B Selector)	11~13
c. Inline Push Button Configuration (Transmitter Toggle)	14
d. Inline Push Button Configuration (A/B Selector)	15~17
3. Channel Change via Push Buttons	18
4. Program 4-digit Security Code	19
5. I-Chip	20
B. Receiver Unit	
1. System Channel Settings	21
2. Output Relay Configurations	
a. Output Relay Types	22
b. Output Relay Action at 2 <sup>nd</sup> Speed	22~23
c. ON/OFF Push Button Function	23
d. Magnet ON/OFF Push Button Function	24
e. Brake Function	24
f. External Warning Function	24
g. Momentary Contact	24
h. Toggled Contact	24
i. 3 <sup>rd</sup> Speed Push Button Function	24

j.	Auxiliary STOP Push Button Function	25
k.	Pitch & Catch Function	25
3.	Receiver Auto-Scanning Settings	25
4.	Dip-switch Settings	
a.	Interlocked Functions	26
b.	Non-interlocked Functions	27
5.	Jumpers Settings	28
6.	I-Chip Programming Port	29
7.	Voltage Settings	29
<b>5.</b>	<b>System Channels Table</b>	<b>30</b>
<b>6.</b>	<b>Receiver Installation</b>	
A.	Output Relay Contact Diagram	31
B.	Pre-Installation Precautions	32
C.	Step-By-Step Installation	32~33
D.	System Testing	33
<b>7.</b>	<b>Operating Procedure</b>	
A.	Transmitter Operation	
1.	General Operating Procedure	34~35
2.	A/B Selector Push Button Operating Procedure	35
3.	3 <sup>rd</sup> Speed Push Button Operating Procedure	35
4.	Pitch & Catch Operating Procedure	36
5.	Automatic Channel Scanning Operating Procedure	36
6.	Changing Transmitter Batteries	36
B.	Status Light Indicators & Warnings	
1.	Transmitter STATUS Light Indication	37
2.	Receiver STATUS Light Indication	38
3.	Receiver SQ Light Indication	38
4.	Receiver POWER Light Indication	38
5.	Receiver COM Light Indication	38
C.	Trouble Shooting Tips	39
<b>8.</b>	<b>System Specifications</b>	<b>40</b>
<b>9.</b>	<b>EU Declaration of Conformity</b>	<b>41</b>

# 1. Introduction

The **FLEX** radio remote control systems are designed for control of industrial equipment and machinery such as overhead traveling cranes, jib cranes, gantry cranes, tower cranes, electric hoists, winches, monorails, conveyor belts, mining equipment and other material handling equipment where wireless control is preferred.

Each **FLEX** system consists of a transmitter handset and receiver unit. Other standard-equipped accessories include transmitter waist belt, spare transmitter power key, clear vinyl pouch, “AA” alkaline batteries, compass direction decal sheet and user’s manual.

List of notable features include:

- \* 62 user-programmable channels – Advanced synthesized RF controls with 62 built-in channels, no more fixed channel and fragile quartz crystals to break.
- \* Automatic channel scanning receiver – No more hassle of climbing up the crane to change receiver channels.
- \* Over one million unique ID codes (20bit) – Each and every Flex system has its own unique ID codes and serial number, never repeats.
- \* Advanced controls – The Flex system utilizes advanced microprocessor controls with 32bit CRC and Hamming Code, which provide ultra fast, safe, precise, and error-free encoding and decoding.
- \* Unique I-CHIP design – The I-CHIP functions in a way that is very similar to SIM card used on mobile phones, with the ability to transfer system information and settings from one transmitter to another without the hassle of resetting the spares.
- \* Reliable push buttons – The in-house designed push buttons with gold-plated contacts are rated for more than one million press cycles.
- \* Low power consumption – Requires only two “AA” Alkaline batteries for more than 150 hours of operating time between replacements.
- \* Ultra-durable nylon and fiberglass composite enclosures – Highly resistance to breakage and deformation even in the most abusive environments.
- \* Full compliance – All systems are fully complied with the FCC Part-15 Rules, European Directives (Safety, EMC, R&TTE, Machinery) and Industry Canada Specifications (IC).

## 2. Radio Controlled Safety

Flex radio remote control system should be operated by persons with sufficient amount of knowledge and skill in crane operation and safety. Persons being trained to operate a radio remote controlled crane should possess the knowledge of all hazards peculiar to radio remote controlled crane operation, ability to judge distance and moving objects, equipment capacity and radio remote controlled safety rules. Radio remote controlled cranes should not be operated by any person with insufficient eyesight, hearing, illness, and under influence of drugs and medications that may cause loss of crane control.

Below are some general operating safety tips that should be strictly followed when operating a radio remote controlled crane.

1. Prior to crane operation always check the transmitter handset for any damage that might inhibit proper crane operation.
2. Always check if the red emergency stop button is working properly prior to crane operation.
3. Check the Status LED on the transmitter for any signs of low battery power (refer to page 37).
4. Check the Status LED on the transmitter for any signs of irregularities (refer to page 37).
5. The crane limit switches should be checked prior to crane operation or at the beginning of each shift. When checking limit switches the hoist should be centered over an area free of personnel and equipment.
6. If the power to the crane is removed, the operator should turn off the transmitter power immediately until the power to the crane is restored.
7. If the crane fails to respond properly to operator's command the operator should stop operation, turn the transmitter power off, and then report the condition to their supervisor.
8. The transmitter power should be turned off after each use. If the transmitter handset is not in use always turn the power off and stored it in a safe or designated location. Never leave the transmitter handset unattended in the working area.
9. Make sure the system is not set to the same channel as any other Flex systems in use within a distance of 300 meters (900 feet).
10. Never operate a crane or equipment with two transmitter handsets at the same time unless they are programmed with "Pitch & Catch" function. For information on the "Pitch & Catch" feature, please refer to page 25 and page 36 of this manual.




### CAUTION

**RISK OF EXPLOSION IF BATTERY IS PLACED BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**


# 3. General System Information

## A. TRANSMITTER HANDSET

### 1. External Illustration (Standard Push Button Configuration)

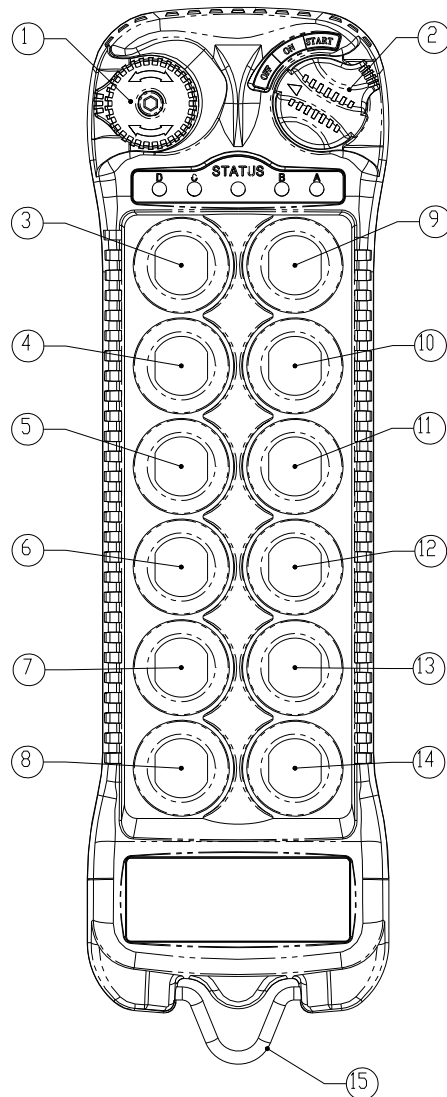


(Fig. 01)

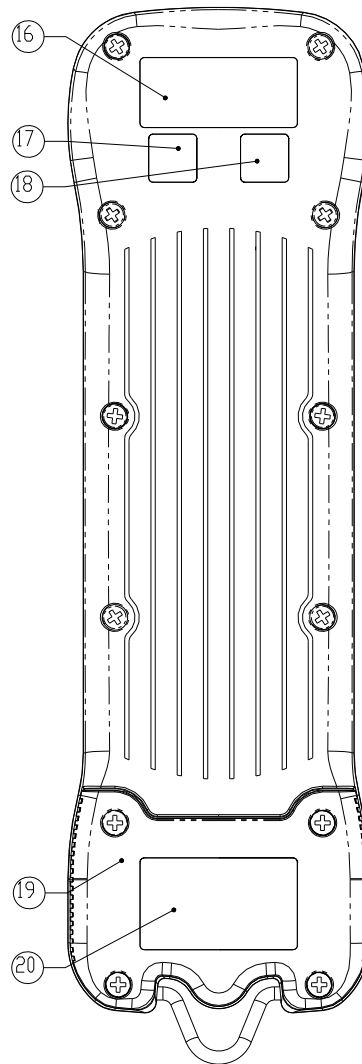

(Fig. 02)

- |                               |                     |                          |
|-------------------------------|---------------------|--------------------------|
| 1. Emergency Stop Button      | 8. Push Button #12  | 15. Strap Ring           |
| 2. Removable Power Key Switch | 9. Push Button #1   | 16. System Information   |
| 3. Push Button #2             | 10. Push Button #3  | 17. System Channel       |
| 4. Push Button #4             | 11. Push Button #5  | 18. Crane Number         |
| 5. Push Button #6             | 12. Push Button #7  | 19. Battery Cover        |
| 6. Push Button #8             | 13. Push Button #9  | 20. Approval Information |
| 7. Push Button #10            | 14. Push Button #11 |                          |

## 2. Internal Illustration

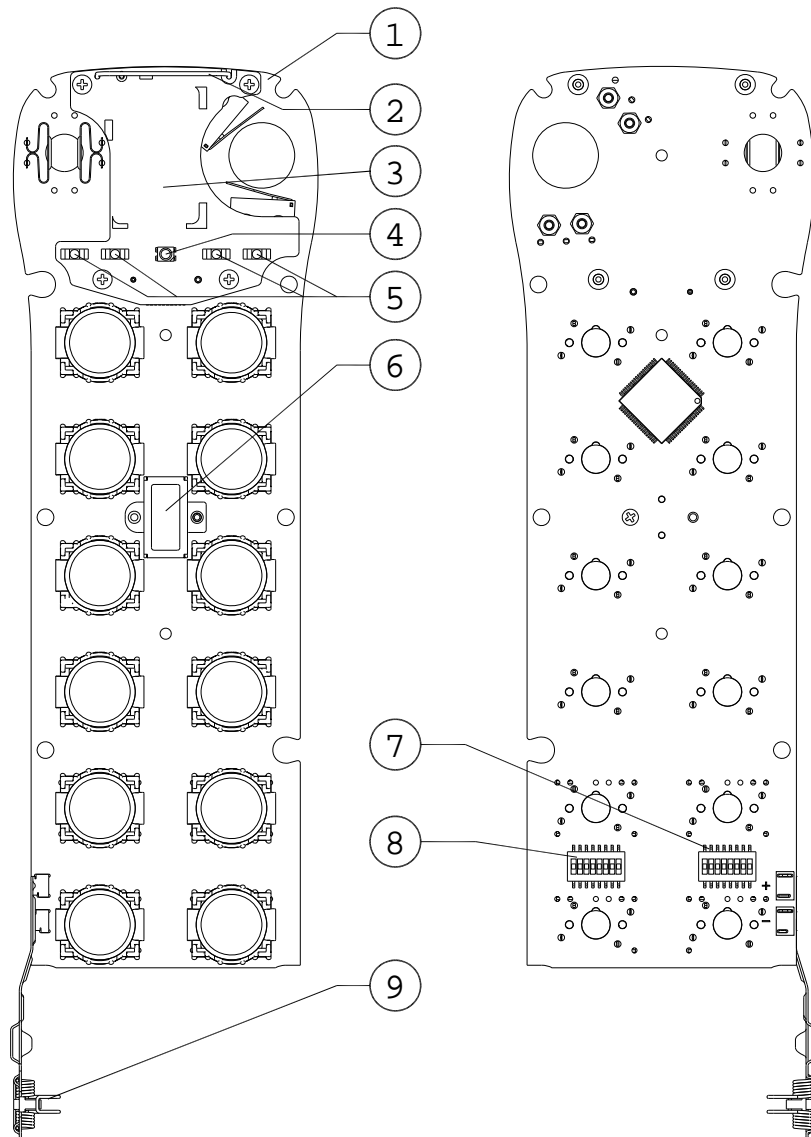


(Fig. 03)

(Fig. 04)

- |                          |                              |
|--------------------------|------------------------------|
| 1. Encoder Board         | 6. I-CHIP                    |
| 2. Arial Antenna         | 7. Function Dip-Switch       |
| 3. Transmitting Module   | 8. Channel Dip-Switch        |
| 4. Status LED Display    | 9. Battery Contact Mechanism |
| 5. Function LED Displays |                              |

## B. RECEIVER UNIT

### 1. External Illustration

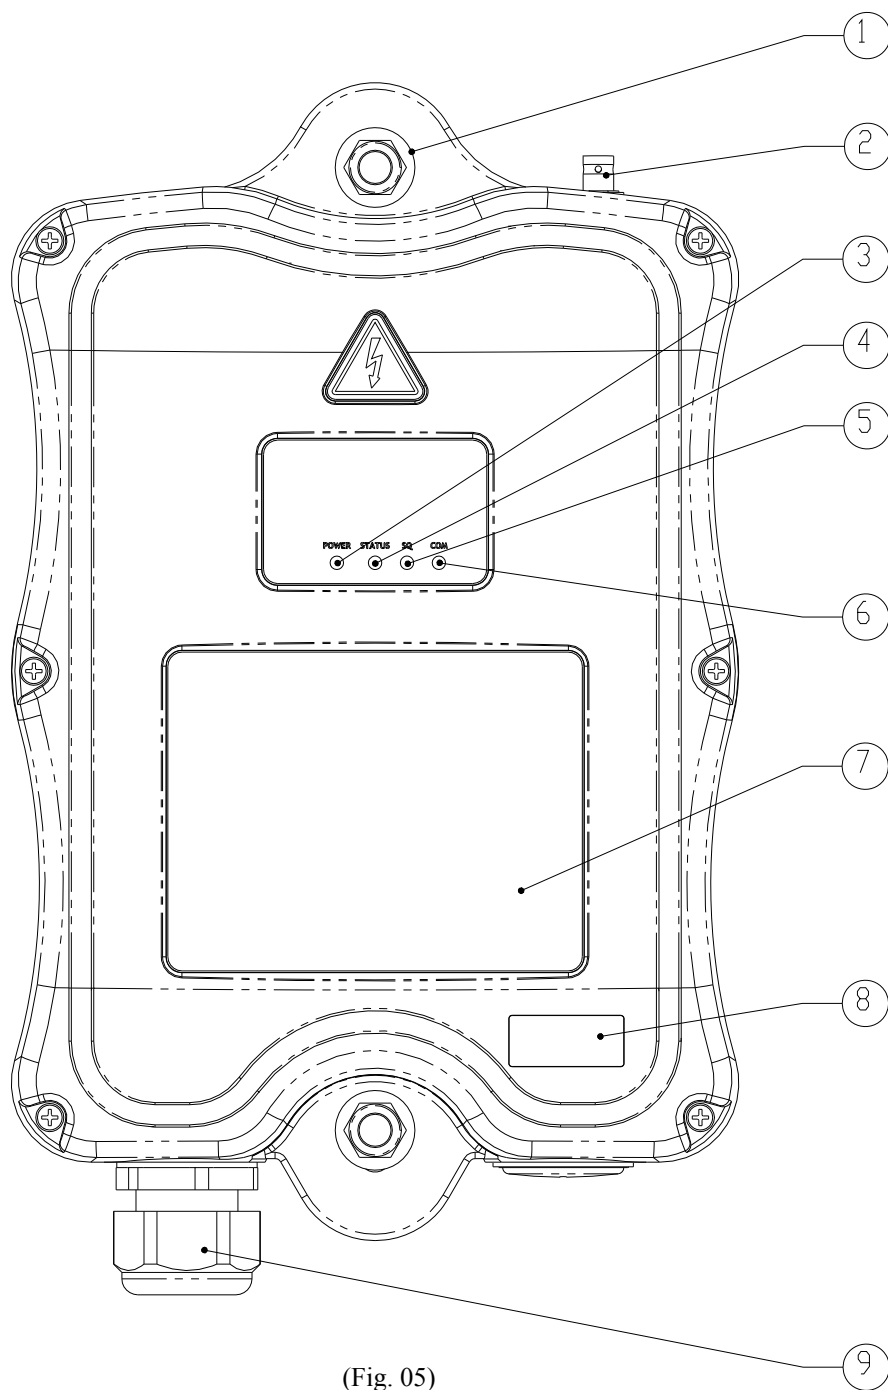

(Fig. 05)

- |                          |                           |
|--------------------------|---------------------------|
| 1. Shock Mount           | 6. COM LED Display        |
| 2. External Antenna Jack | 7. Output Contact Diagram |
| 3. Power LED Display     | 8. System Information     |
| 4. Status LED Display    | 9. Cord Grip              |
| 5. SQ LED Display        |                           |



## 2. Internal Illustration


(Fig. 06)

- |                      |                       |
|----------------------|-----------------------|
| 1. AC Line Filter    | 4. Decoder Module     |
| 2. Power Transformer | 5. Output Relay Board |
| 3. Receiving Module  |                       |

# 4. Function Settings

## A. TRANSMITTER HANDSET

### 1. System Channel Settings

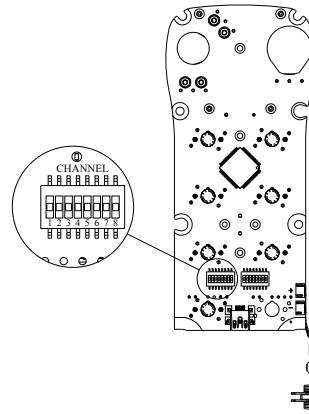


(Fig. 07)

Set the transmitter channel by adjusting the channel dip-switch located on the backside of the transmitter encoder board (refer to Fig. 07 above). Only the first six (6) positions are used for channel programming (refer to Fig. 08 below). The system channels table located on page 30 illustrates which dip-switch setting corresponds to which channel. Once the transmitter channel is altered do make sure to change receiver channel as well. The channel on both transmitter and receiver must be identical in order for system to work. To change receiver channel please refer to page 21.

*Example:*

(Fig. 08)

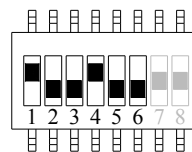

Top slot → "1"

Bottom slot → "0"


The above dip-switch setting "1 0 0 1 0 0" corresponds to "channel 36" in the system channels table on page 30.

## 2. Push Button Functions with LED Displays

### A. Standard Push Button (Transmitter Toggle)

Set transmitter toggle (latching output relay) function by adjusting the 8-position function dip-switch located on the backside of the transmitter encoder board (refer to Fig. 09 below).

The LED 1 through LED 4 shown inside the shaded box (see below) illustrates which LED on the transmitter will light up when the designated push button (PB7 ~ PB12) is pressed.

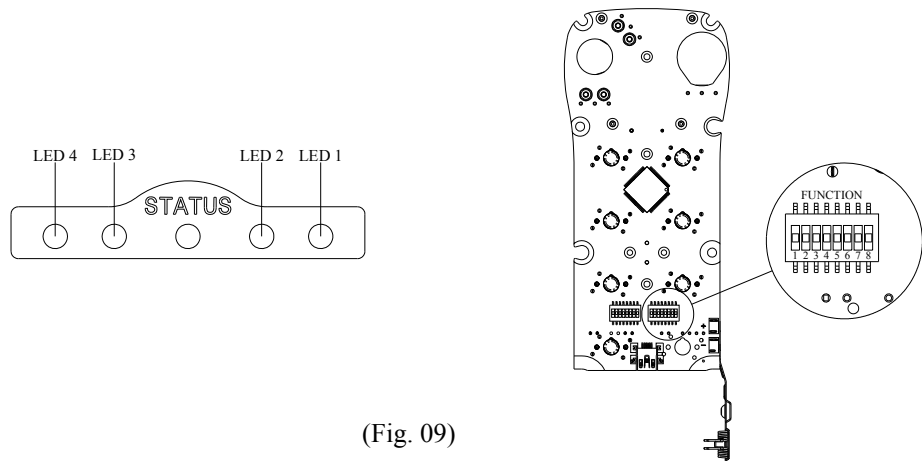

(Fig. 09)

	DIP	PB7	PB8	PB9	PB10	PB11	PB12
<b>1</b>	00000000	Normal	Normal	Normal	Normal	Normal	Normal
<b>2</b>	00001001	Normal	Normal	Normal	LED 4	Normal	Normal
<b>3</b>	00001010	Normal	Normal	LED 3	LED 4	Normal	Normal
<b>4</b>	00001011	Normal	LED 2	LED 3	LED 4	Normal	Normal
<b>5</b>	00001100	LED 1	LED 2	LED 3	LED 4	Normal	Normal
<b>6</b>	00001101	Normal	Normal	Normal	Normal	Normal	LED 4
<b>7</b>	00001110	Normal	Normal	Normal	Normal	LED 3	LED 4
<b>8</b>	00001111	Normal	Normal	Normal	LED 2	LED 3	LED 4
<b>9</b>	00010000	Normal	Normal	LED 1	LED 2	LED 3	LED 4

\* PB7...PB12 → Push button number

\* Normal → Normal momentary contact

\* LED 1...LED 4 → Transmitter toggled with designated LED Display

## B. Standard Push Button Configuration (A/B Selector)

There are four (4) different types of A/B selector sequence available on the Flex system.

Choose the one that is most suitable for your application.

Type-A selector sequence : A → B → A → B ...

Type-B selector sequence : Off → A → B → Off → A → B ...

Type-C selector sequence : A → B → A+B → A → B → A+B ...

Type-D selector sequence : Off → A → B → A+B → Off → A → B → A+B ...

	DIP	PB7	PB8	PB9	PB10	PB11	PB12
<b>10</b>	00101111	A/1&2	Normal	Normal	Normal	Normal	Normal
<b>11</b>	00110000	B/1&2	Normal	Normal	Normal	Normal	Normal
<b>12</b>	00110001	C/1&2	Normal	Normal	Normal	Normal	Normal
<b>13</b>	00110010	D/1&2	Normal	Normal	Normal	Normal	Normal
<b>14</b>	00110011	Normal	A/3&4	Normal	Normal	Normal	Normal
<b>15</b>	00110100	Normal	B/3&4	Normal	Normal	Normal	Normal
<b>16</b>	00110101	Normal	C/3&4	Normal	Normal	Normal	Normal
<b>17</b>	00110110	Normal	D/3&4	Normal	Normal	Normal	Normal
<b>18</b>	00110111	A/1&2	A/3&4	Normal	Normal	Normal	Normal
<b>19</b>	00111000	A/1&2	B/3&4	Normal	Normal	Normal	Normal
<b>20</b>	00111001	A/1&2	C/3&4	Normal	Normal	Normal	Normal
<b>21</b>	00111010	A/1&2	D/3&4	Normal	Normal	Normal	Normal
<b>22</b>	00111011	B/1&2	B/3&4	Normal	Normal	Normal	Normal
<b>23</b>	00111100	B/1&2	C/3&4	Normal	Normal	Normal	Normal
<b>24</b>	00111101	B/1&2	D/3&4	Normal	Normal	Normal	Normal
<b>25</b>	00111110	C/1&2	C/3&4	Normal	Normal	Normal	Normal
<b>26</b>	00111111	C/1&2	D/3&4	Normal	Normal	Normal	Normal
<b>27</b>	01000000	D/1&2	D/3&4	Normal	Normal	Normal	Normal

\* PB7...PB12 → Push button number

\* Normal → Normal momentary contact

\* A/1&2...D/3&4 → A/B Selector type with designated LED Display (LED 1&2 or LED 3&4)

	<b>DIP</b>	<b>PB7</b>	<b>PB8</b>	<b>PB9</b>	<b>PB10</b>	<b>PB11</b>	<b>PB12</b>
<b>28</b>	01000001	Normal	Normal	A/1&2	Normal	Normal	Normal
<b>29</b>	01000010	Normal	Normal	B/1&2	Normal	Normal	Normal
<b>30</b>	01000011	Normal	Normal	C/1&2	Normal	Normal	Normal
<b>31</b>	01000100	Normal	Normal	D/1&2	Normal	Normal	Normal
<b>32</b>	01000101	Normal	Normal	Normal	A/3&4	Normal	Normal
<b>33</b>	01000110	Normal	Normal	Normal	B/3&4	Normal	Normal
<b>34</b>	01000111	Normal	Normal	Normal	C/3&4	Normal	Normal
<b>35</b>	01001000	Normal	Normal	Normal	D/3&4	Normal	Normal
<b>36</b>	01001001	Normal	Normal	A/1&2	A/3&4	Normal	Normal
<b>37</b>	01001010	Normal	Normal	A/1&2	B/3&4	Normal	Normal
<b>38</b>	01001011	Normal	Normal	A/1&2	C/3&4	Normal	Normal
<b>39</b>	01001100	Normal	Normal	A/1&2	D/3&4	Normal	Normal
<b>40</b>	01001101	Normal	Normal	B/1&2	B/3&4	Normal	Normal
<b>41</b>	01001110	Normal	Normal	B/1&2	C/3&4	Normal	Normal
<b>42</b>	01001111	Normal	Normal	B/1&2	D/3&4	Normal	Normal
<b>43</b>	01010000	Normal	Normal	C/1&2	C/3&4	Normal	Normal
<b>44</b>	01010001	Normal	Normal	C/1&2	D/3&4	Normal	Normal
<b>45</b>	01010010	Normal	Normal	D/1&2	D/3&4	Normal	Normal

\* PB7...PB12 → Push button number

\* Normal → Normal momentary contact

\* A/1&2...D/3&4 → A/B Selector type with designated LED Display (LED 1&2 or LED 3&4)

	<b>DIP</b>	<b>PB7</b>	<b>PB8</b>	<b>PB9</b>	<b>PB10</b>	<b>PB11</b>	<b>PB12</b>
<b>46</b>	01010011	Normal	Normal	Normal	Normal	A/1&2	Normal
<b>47</b>	01010100	Normal	Normal	Normal	Normal	B/1&2	Normal
<b>48</b>	01010101	Normal	Normal	Normal	Normal	C/1&2	Normal
<b>49</b>	01010110	Normal	Normal	Normal	Normal	D/1&2	Normal
<b>50</b>	01010111	Normal	Normal	Normal	Normal	Normal	A/3&4
<b>51</b>	01011000	Normal	Normal	Normal	Normal	Normal	B/3&4
<b>52</b>	01011001	Normal	Normal	Normal	Normal	Normal	C/3&4
<b>53</b>	01011010	Normal	Normal	Normal	Normal	Normal	D/3&4
<b>54</b>	01011011	Normal	Normal	Normal	Normal	A/1&2	A/3&4
<b>55</b>	01011100	Normal	Normal	Normal	Normal	A/1&2	B/3&4
<b>56</b>	01011101	Normal	Normal	Normal	Normal	A/1&2	C/3&4
<b>57</b>	01011110	Normal	Normal	Normal	Normal	A/1&2	D/3&4
<b>58</b>	01011111	Normal	Normal	Normal	Normal	B/1&2	B/3&4
<b>59</b>	01100000	Normal	Normal	Normal	Normal	B/1&2	C/3&4
<b>60</b>	01100001	Normal	Normal	Normal	Normal	B/1&2	D/3&4
<b>61</b>	01100010	Normal	Normal	Normal	Normal	C/1&2	C/3&4
<b>62</b>	01100011	Normal	Normal	Normal	Normal	C/1&2	D/3&4
<b>63</b>	01100100	Normal	Normal	Normal	Normal	D/1&2	D/3&4

\* PB7...PB12 → Push button number


\* Normal → Normal momentary contact

\* A/1&2...D/3&4 → A/B Selector type with designated LED Display (LED 1&2 or LED 3&4)

### C. Inline Push Button Configuration (Transmitter Toggle)

The push button arrangement for inline push button setup starts from top to bottom and then from right column to left column (refer to Fig. 10 below). To set inline push button configuration please refer to JP4 and JP5 jumpers setting on page 28. With inline push buttons configuration, PB1 & PB2 still corresponds to output relay K1~K4, PB3 & PB4 corresponds to relay K5~K8, etc...

(Fig. 10)

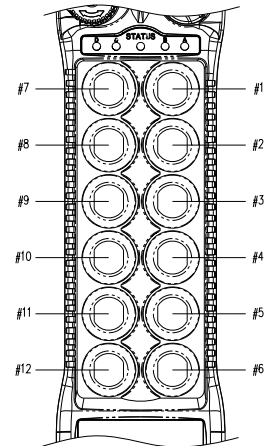

	DIP	PB7	PB8	PB9	PB10	PB11	PB12
<b>64</b>	00000000	Normal	Normal	Normal	Normal	Normal	Normal
<b>65</b>	00000101	Normal	Normal	Normal	LED 4	Normal	Normal
<b>66</b>	00010100	Normal	Normal	LED 3	LED 4	Normal	Normal
<b>67</b>	00010101	Normal	LED 2	LED 3	LED 4	Normal	Normal
<b>68</b>	00010110	LED 1	LED 2	LED 3	LED 4	Normal	Normal
<b>69</b>	00001001	Normal	Normal	Normal	Normal	LED 4	Normal
<b>70</b>	00010111	Normal	Normal	Normal	LED 3	LED 4	Normal
<b>71</b>	00011000	Normal	Normal	LED 2	LED 3	LED 4	Normal
<b>72</b>	00011001	Normal	LED 1	LED 2	LED 3	LED 4	Normal
<b>73</b>	00001101	Normal	Normal	Normal	Normal	Normal	LED 4
<b>74</b>	00011010	Normal	Normal	Normal	Normal	LED 3	LED 4
<b>75</b>	00011011	Normal	Normal	Normal	LED 2	LED 3	LED 4
<b>76</b>	00011100	Normal	Normal	LED 1	LED 2	LED 3	LED 4

\* PB7...PB12 → Push button number

\* Normal → Normal momentary contact

\* LED 1...LED 4 → Transmitter toggled with designated LED Display

## D. Inline Push Button Configuration (A/B Selector)

There are four (4) different types of A/B selector sequence available on the Flex system.

Choose the one that is most suitable for your application.

Type-A selector sequence : A → B → A → B ...

Type-B selector sequence : Off → A → B → Off → A → B ...

Type-C selector sequence : A → B → A+B → A → B → A+B ...

Type-D selector sequence : Off → A → B → A+B → Off → A → B → A+B ...

	DIP	PB9	PB10	PB11	PB12
<b>77</b>	01110011	A/1&2	Normal	Normal	Normal
<b>78</b>	01110100	B/1&2	Normal	Normal	Normal
<b>79</b>	01110101	C/1&2	Normal	Normal	Normal
<b>80</b>	01110110	D/1&2	Normal	Normal	Normal
<b>81</b>	00110011	Normal	A/3&4	Normal	Normal
<b>82</b>	00110100	Normal	B/3&4	Normal	Normal
<b>83</b>	00110101	Normal	C/3&4	Normal	Normal
<b>84</b>	00110110	Normal	D/3&4	Normal	Normal
<b>85</b>	01110111	A/1&2	A/3&4	Normal	Normal
<b>86</b>	01111000	A/1&2	B/3&4	Normal	Normal
<b>87</b>	01111001	A/1&2	C/3&4	Normal	Normal
<b>88</b>	01111010	A/1&2	D/3&4	Normal	Normal
<b>89</b>	01111011	B/1&2	B/3&4	Normal	Normal
<b>90</b>	01111100	B/1&2	C/3&4	Normal	Normal
<b>91</b>	01111101	B/1&2	D/3&4	Normal	Normal
<b>92</b>	01111110	C/1&2	C/3&4	Normal	Normal
<b>93</b>	01111111	C/1&2	D/3&4	Normal	Normal
<b>94</b>	10000000	D/1&2	D/3&4	Normal	Normal

\* PB7...PB12 → Push button number

\* Normal → Normal momentary contact

\* A/1&2...D/3&4 → A/B Selector type with designated LED Display (LED 1&2 or LED 3&4)



	<b>DIP</b>	<b>PB9</b>	<b>PB10</b>	<b>PB11</b>	<b>PB12</b>
<b>95</b>	10000001	Normal	A/1&2	Normal	Normal
<b>96</b>	10000010	Normal	B/1&2	Normal	Normal
<b>97</b>	10000011	Normal	C/1&2	Normal	Normal
<b>98</b>	10000100	Normal	D/1&2	Normal	Normal
<b>99</b>	01000101	Normal	Normal	A/3&4	Normal
<b>100</b>	01000110	Normal	Normal	B/3&4	Normal
<b>101</b>	01000111	Normal	Normal	C/3&4	Normal
<b>102</b>	01001000	Normal	Normal	D/3&4	Normal
<b>103</b>	10000101	Normal	A/1&2	A/3&4	Normal
<b>104</b>	10000110	Normal	A/1&2	B/3&4	Normal
<b>105</b>	10000111	Normal	A/1&2	C/3&4	Normal
<b>106</b>	10001000	Normal	A/1&2	D/3&4	Normal
<b>107</b>	10001001	Normal	B/1&2	B/3&4	Normal
<b>108</b>	10001010	Normal	B/1&2	C/3&4	Normal
<b>109</b>	10001011	Normal	B/1&2	D/3&4	Normal
<b>110</b>	10001100	Normal	C/1&2	C/3&4	Normal
<b>111</b>	10001101	Normal	C/1&2	D/3&4	Normal
<b>112</b>	10001110	Normal	D/1&2	D/3&4	Normal

\* PB7...PB12 → Push button number

\* Normal → Normal momentary contact

\* A/1&2...D/3&4 → A/B Selector type with designated LED Display (LED 1&2 or LED 3&4)

	<b>DIP</b>	<b>PB9</b>	<b>PB10</b>	<b>PB11</b>	<b>PB12</b>
<b>113</b>	10001111	Normal	Normal	A/1&2	Normal
<b>114</b>	10010000	Normal	Normal	B/1&2	Normal
<b>115</b>	10010001	Normal	Normal	C/1&2	Normal
<b>116</b>	10010010	Normal	Normal	D/1&2	Normal
<b>117</b>	01010111	Normal	Normal	Normal	A/3&4
<b>118</b>	01011000	Normal	Normal	Normal	B/3&4
<b>119</b>	01011001	Normal	Normal	Normal	C/3&4
<b>120</b>	01011010	Normal	Normal	Normal	D/3&4
<b>121</b>	10010011	Normal	Normal	A/1&2	A/3&4
<b>122</b>	10010100	Normal	Normal	A/1&2	B/3&4
<b>123</b>	10010101	Normal	Normal	A/1&2	C/3&4
<b>124</b>	10010110	Normal	Normal	A/1&2	D/3&4
<b>125</b>	10010111	Normal	Normal	B/1&2	B/3&4
<b>126</b>	10011000	Normal	Normal	B/1&2	C/3&4
<b>127</b>	10011001	Normal	Normal	B/1&2	D/3&4
<b>128</b>	10011010	Normal	Normal	C/1&2	C/3&4
<b>129</b>	10011011	Normal	Normal	C/1&2	D/3&4
<b>130</b>	10011100	Normal	Normal	D/1&2	D/3&4

\* PB7...PB12 → Push button number

\* Normal → Normal momentary contact

\* A/1&2...D/3&4 → A/B Selector type with designated LED Display (LED 1&2 or LED 3&4)


### 3. Channel Change via Push Buttons

Other than CHANNEL dip-switch on the encoder board, the transmitter channel can also be changed directly on the push buttons. Please refer to the instruction below on how to change transmitter channel via push buttons.


- a. Press and hold PB1, PB2 and PB3 and rotate the power key to START position at the same time. A series of green and red blinks will appear on the Status LED showing the current channel setting. A green blink represents the tens (+10) and a red blink represents the units (+1).

Examples: 2 green blinks followed by 5 red blinks represents channel 25.

6 red blinks represents channel 06.

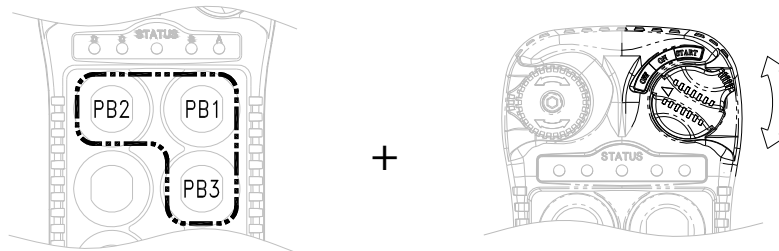

- b. Select new channel by pressing PB1 and PB2 on the transmitter. Press PB1 to increment the units (+1) and PB2 to increment the tens (+10).

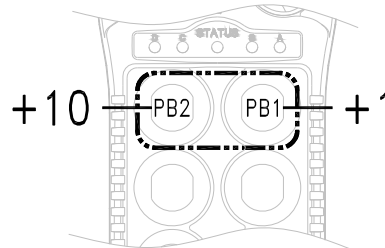

Examples: Press PB2 two times and then PB1 four times will give you channel 24.


Press PB1 nine times with give you channel 09.

- c. When finished, the newly selected channel will appear on the Status LED via series of green and red blinks again.
- d. Exit the channel programming by turning off the transmitter power.
- e. Make sure the receiver channel is set identical to the transmitter. Please refer to page 21 and page 36 on how to change receiver channel.
- f. Please note that when the CHANNEL dip-switch inside the transmitter is changed, the priority will revert back to the new channel set on the CHANNEL dip-switch.
- g. Please note that when channel is set beyond channel 62 via PB1 and PB2 (i.e. channel 63, 68, 88, etc...), the system will recognize it as channel 62.

## 4. Program 4-digit Security Code

Prior to rotating the transmitter power key-switch to START position to begin operation, you must first enter a 4-digit security code in order to proceed further. When this 4-digit security code is input correctly after turning on the transmitter power, a green light will appear on the Status LED... proceed to START activation. If this 4-digit security code is input incorrectly, an orange light will appear on the Status LED... system locked. If this occurs, then you must reset the e-stop button and input the correct 4-digit code. Please refer to the instruction below on how to program the 4-digit security code.

- a. Press and hold PB1, PB2, PB3 and PB4 and rotate the power key to START position at the same time.

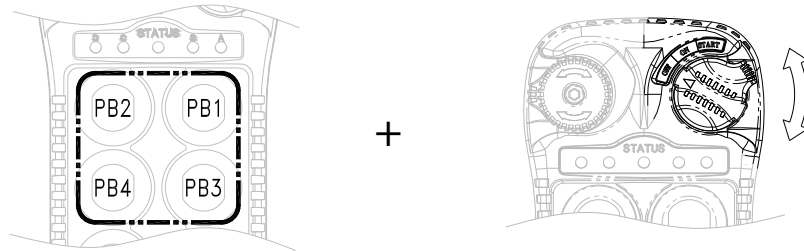

- b. A constant orange light will appear on the Status LED telling you that you are in the security code programming mode.
- c. For newly purchased system with the security code function deactivated (default setting), press PB1 four times (1111) to activate the security code function. At this time the Status LED on the transmitter will blink orange slowly telling you that the 4 digits entered is correct. Then select your own 4-digit security code by pressing PB1, PB2, PB3 or PB4 on the transmitter (four presses randomly). At this time a fast orange blinks is displayed on the Status LED telling you to reconfirm the 4-digit security code you have just entered. A green light will appear once you have re-entered the same 4-digit security code again (programming completed). If red light is shown on the Status LED after you have re-entered the security code (incorrect input), then you must reset the transmitter power and then repeat step a, b and c again.

**Steps:** Press and hold PB1~PB4 and rotate power key to START position → constant orange → press PB1 four times (for new systems) or 4-digit security code → slow orange blinks → enter the new 4-digit security code → fast orange blinks → re-enter the same 4-digit security code again → green light.


- d. If you wish to cancel the security code function, then repeat a, b, c above and press PB1 four times as your new security code (security code function disabled).
- e. If you do not remember the 4-digit security code, then you must contact your dealer or distributor for further assistance.

## 5. I-Chip

I-CHIP functioned in a way that is very similar to a SIM card inside a mobile phone, which stores information such as your phone number, account number, phone book and other settings. I-CHIP works exactly the same way, as it stores information such as system serial number/ID code, channel and push button configurations.

When replacing a transmitter handset, just take the I-CHIP out of the old transmitter and install it into the new one (refer to Fig. 11 below). The new transmitter handset will then operate according to the information stored in the I-CHIP unless the settings on both Channel and Function dip-switch are changed thereafter. Basically the microprocessor will operate according to the last setting change either on I-CHIP or the dip-switches.


For safety purposes, system serial number/ID code stored inside the I-CHIP can not be changed directly on the transmitter encoder board. Only channels and push button configurations can be changed directly on the encoder board via Channel and Function dip-switches. There are only two ways that you can change transmitter serial number/ID code; 1) via I-CHIP programming port located on the decoder module inside the receiver unit, please refer to page 29 on how to program the I-CHIP (serial number/ID code) via receiver unit; 2) via an external I-CHIP programmer or duplicator unit available from the factory. Please ask your local dealers for assistance if your system requires serial number/ID code adjustments.

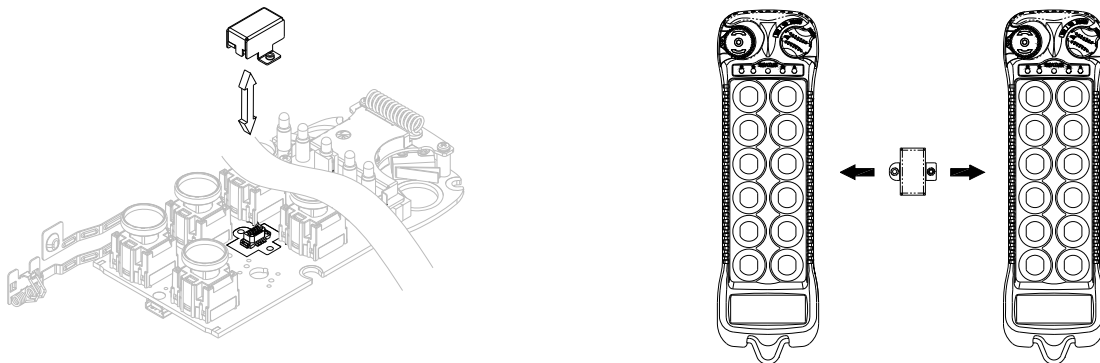

(Fig. 11)

## B. RECEIVER UNIT

### 1. System Channel Settings

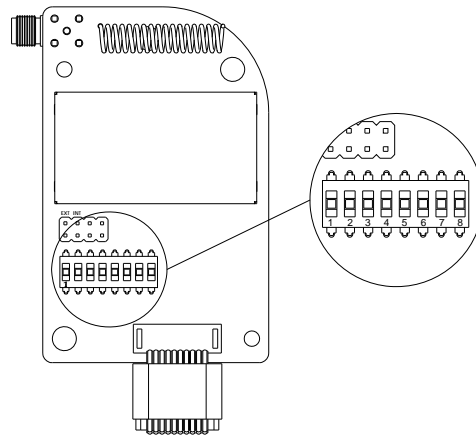


(Fig. 12)

Even though Flex system is equipped with automatic channel scanning receiver, the user can also set the receiver channel manually. Please refer to page 36 on how automatic channel scanning receiver works.

Set the receiver channel by adjusting the channel dip-switch located on the receiver module (refer to Fig. 12 above), only the first six (6) positions are used for channel programming (refer to Fig. 13 below). The system channels table located on page 30 illustrates which dip-switch setting corresponds to which channel. Once the receiver channel is altered do make sure to change transmitter channel as well. The channel on both transmitter and receiver must be identical in order for system to work. To change transmitter channel please refer to page 9.

*Example:*

(Fig. 13)

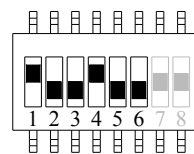

Top slot → "1"


Bottom slot → "0"

The above dip-switch setting "1 0 0 1 0 0" corresponds to "channel 36" in the system channels table on page 30.

## a. Output Relay Types


### 1. Three (3) output relays per motion – shared 2<sup>nd</sup> speed output relay

Output relays with Forward 1<sup>st</sup> speed (F1), Reverse 1<sup>st</sup> speed (R1) and Forward/Reverse 2<sup>nd</sup> speed (F/R2). Forward and Reverse 2<sup>nd</sup> speed (F/R2) shared the same output relay.

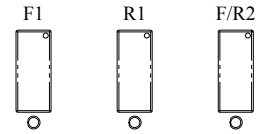

### 2. Four (4) output relays per motion – separate 1<sup>st</sup> and 2<sup>nd</sup> speed output relays


Output relays with Forward 1<sup>st</sup> speed (F1), Reverse 1<sup>st</sup> speed (R1), Forward 2<sup>nd</sup> speed (F2) and Reverse 2<sup>nd</sup> speed (R2). Forward and Reverse 2<sup>nd</sup> speed with separate output relays.

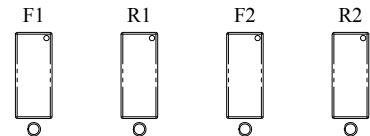

## b. Output Relay Actions at 2<sup>nd</sup> Speed


### 1. 3-output relays configuration with Closed/Closed contact at 2<sup>nd</sup> speed

At 2<sup>nd</sup> speed, both 1<sup>st</sup> speed (F1 or R1) and 2<sup>nd</sup> speed (F/R2) output relays are closed (refer to page 26 on how to set to this function).

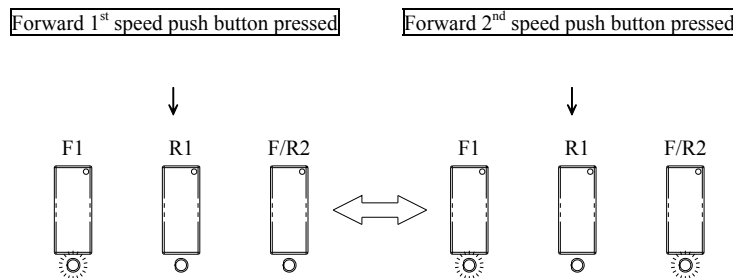


### 2. 4-output relays configuration with Opened/Closed contact at 2<sup>nd</sup> speed

At 2<sup>nd</sup> speed, only the 2<sup>nd</sup> speed (F2 or R2) output relay is closed (refer to page 26 on how to set to this function).

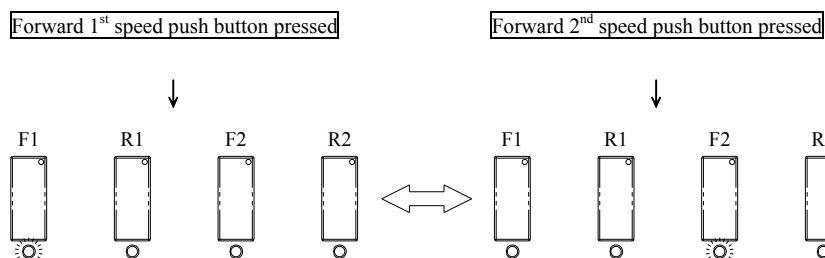


## 2<sup>nd</sup> speed


At 2<sup>nd</sup> speed, both 1<sup>st</sup> speed (F1 or R1) and 2<sup>nd</sup> speed (F2 or R2) output relays are closed (refer to page 26 on how to set to this function).

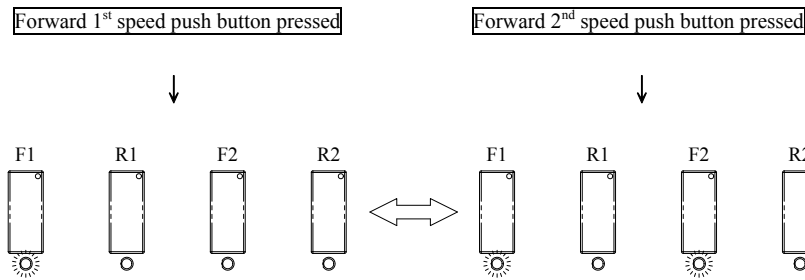

### 4. 4-output relays configuration with Forward and Fast output relays engaged at 2<sup>nd</sup> speed.

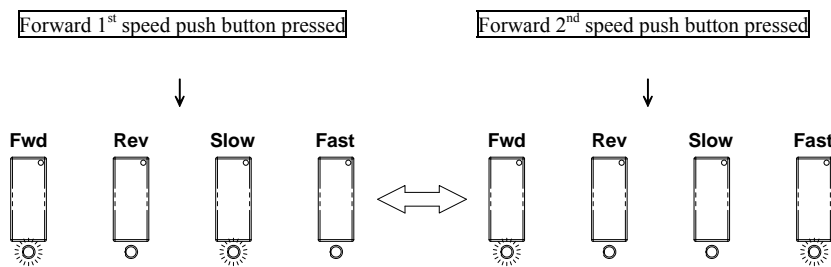


### 5. 4-output relays configuration with Forward, Slow, and Fast output relays engaged at 2<sup>nd</sup> speed.

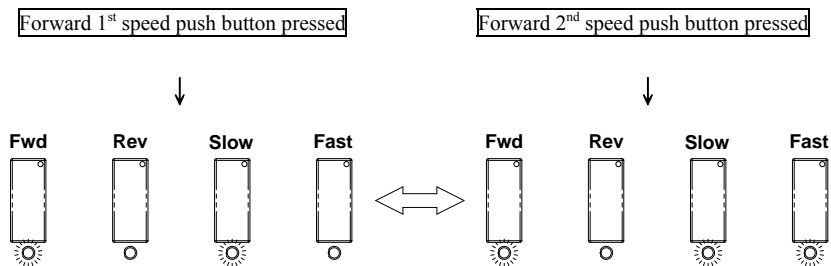

### c. ON/OFF Push Button Function


The user can set any of the two adjacent push buttons on the transmitter to behave like a mechanical ON & OFF rocker switch (refer to page 26 on how to set to this function). When “On” output relay is closed (“On” push button pressed), the “Off” output relay will open automatically, or vice versa.

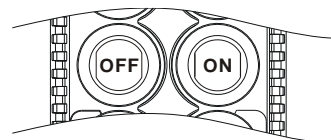



#### **d. Magnet ON/OFF Push Button Function**

The user can set any of the two adjacent push buttons on the transmitter to control a magnet. To activate the magnet just press the push button with the Magnet symbol. To deactivate the magnet, for safety purpose, you must first press and hold the Magnet push button and then press the OFF push button. Press the OFF push button by itself can not deactivate the magnet (refer to page 26 on how to set to this function).

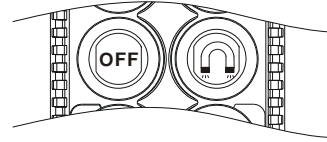

#### **e. Brake Function**

When the transmitter push button is released from 2<sup>nd</sup> speed up to 1<sup>st</sup> speed, both 1<sup>st</sup> and 2<sup>nd</sup> speed output relays will open for up to 1.0 second and then with 1<sup>st</sup> speed output relay closed thereafter (refer to page 26 on how to set to this function).

#### **f. External Warning Function**

The user can install an external warning device (rotating lights, horn, etc...) to a special “Function output relay” located inside the receiver. The user can choose which push button pairs or crane motions he desired to have external warnings when push button is pressed (refer to page 26 on how to set to this function).

#### **g. Momentary Contact**


When push button is released the output relay corresponds to that push button will open (refer to page 27 on how to set to this function). This type of contact is usually applies to external application such as horns or buzzers.

#### **h. Toggled Contact**

When push button is released the output relay corresponds to that push button will remained closed (maintained contact) until next time the user presses the same push button again (refer to page 27 on how to set to this function). This type of contact is usually applies to external application such as lights.


#### **i. 3<sup>rd</sup> Speed Push Button Function**

This function allows the crane to travel an additional step beyond 2<sup>nd</sup> speed. For example, if the operator is pressing the “UP” push button down to 2<sup>nd</sup> speed, pressing the 3<sup>rd</sup> speed push button (with “UP” push button still hold at 2<sup>nd</sup> speed) will toggle between 2<sup>nd</sup> speed and 3<sup>rd</sup> speed (refer to page 27 on how to set to this function).

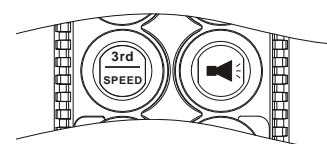

### j. Auxiliary STOP Push Button Function (JP3 must be inserted)

The auxiliary STOP function acts as a 2<sup>nd</sup> emergency stop button. Other than by emergency stop button and transmitter power key switch, the receiver MAIN is also deactivated when this auxiliary stop push button is pressed (refer to page 27 on how to set to this function).




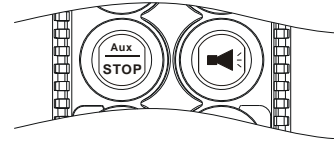


### k. Pitch & Catch Function

This function allows two operators controlling one crane from opposite ends of a cross or long travel (refer to page 27 on how to set to this function). When set to “Pitch & Catch” make sure the 2<sup>nd</sup> transmitter is set to the next upper channel (channel X\*+1). For example, if the system is preset at “Ch.01” then the channel of the 2<sup>nd</sup> transmitter should be set to “Ch.02”. Furthermore, the dip-switch position #7 and #8 on the receiving module should be set to “10”, this will allow the receiver to scan only Ch.01 and Ch.02 (please refer to the illustration below). On the other hand, since there are only 62 available channels on the Flex system, the system preset at channel 62 is ineffective because the 2<sup>nd</sup> transmitter can not be set to Ch.63. If your system is preset at Ch.62 do make sure to change it to another channel.

## 3. Receiver Auto-Scanning Settings

### Receiver Channel Dip-switch

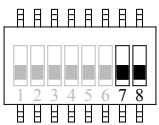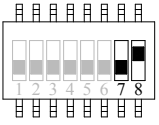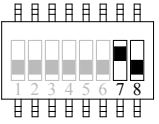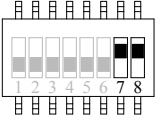- ↓
- (1)  → Scanning all 62 channels (manufacture preset)  
*For standard operation*
- (2)  → Single fixed channel (channel X\*)  
*Auto scanning function disabled*
- (3)  → Scanning 2 channels only (channel X\*, channel X\*+1)  
*For Pitch & Catch, Tandem, and Random Access operation with 2 receivers*
- (4)  → Scanning 3 channels only (channel X\*, channel X\*+1, channel X\*+2)  
*For Random Access operation with 3 receivers*

\* Channel X → Channel set on the receiving module



Example: If the first 6 dip-switch positions on the receiving module is set to Ch.01 (“000000” or “000001”), when set to 2-channel scanning (type-3 above), then the receiver will only scan Ch.01 and Ch.02.

## 4. Dip-Switch Settings

### a. Interlocked Functions

Interlocked means the two adjacent push buttons can not be activated simultaneously at the same time as it will cancel each other out. Interlocked settings are usually applied to crane's forward and reverse motions. Each dip-switch on the decoder module corresponds to one (1) motion or two (2) adjacent push buttons (refer to Fig. 14 & 15 below). Only the first 7 dip-switch positions are used (counting from left to right), the 8<sup>th</sup> dip-switch position (far right) is not used.

(Fig. 14)

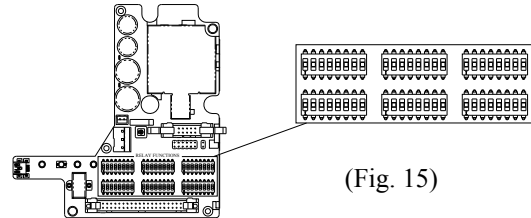

(Fig. 15)

■ Manufacture preset

Dip Settings	Function Descriptions	# of Relays Used
0000000	Normal (single speed only, F2 & R2 relays not used)	2
0000001	Closed/Closed Relay Action at 2 <sup>nd</sup> Speed (separate 2 <sup>nd</sup> speed relay)	4
0000010	Closed/Closed Relay Action at 2 <sup>nd</sup> Speed (shared 2 <sup>nd</sup> speed relay)	3
0000011	Opened/Closed Relay Action at 2 <sup>nd</sup> Speed (separate 2 <sup>nd</sup> speed relay)	4
0000100	Forward and Fast output relays engaged at 2 <sup>nd</sup> speed	4
0000101	Forward, Slow, and Fast output relays engaged at 2 <sup>nd</sup> speed	4
0000110	On (right button) & Off (left button)	2
0001001	On + Start / Off + Start -- Prior to pressing the button you must first rotate and hold the power key switch at START position to activate On or Off relays.	2
0000111	Safety Magnet On & Off	2
0001010	FWD/REV toggled (latching)	2
0010000	Normal + External Warning*	2
0010001	Closed/Closed Relay Action + External Warning*	4
0010010	Closed / Closed Relay Action + External Warning*	3
0010011	Opened/Closed Relay Action + External Warning*	4
0100001	Closed/Closed + Brake	4
0100010	Closed/Closed Relay Action + Brake	3
0100011	Opened/Closed Relay Action + Brake	4
0110001	Closed/Closed Relay Action + Brake + External Warning*	4
0110010	Closed/Closed Relay Action + Brake + External Warning*	3
0110011	Opened/Closed Relay Action + Brake + External Warning*	4

\* External warning function requires installing an external warning device such as horn and rotating lights to the function relay output.

## b. Non-Interlocked Functions

Contrary to interlocked settings, non-interlocked settings allow the two adjacent push buttons be used simultaneously at the same time. Non-interlocked settings are usually applied to crane's auxiliary functions such as lights, horn, 3<sup>rd</sup> speed, auxiliary stop and Pitch & Catch. Each dip-switch on the decoder module corresponds to one (1) motion or two (2) adjacent push buttons (left & right push buttons).

Function Code	Dip Position Setting #1	Dip Position Setting #2 ~ #4 (left button) & #5 ~ #7 (right button)	Function Description
A	1	000	Normal (momentary) contact
B	1	001	Toggled (latching) contact
C	1	010	Acceleration (3 <sup>rd</sup> speed)
D	1	100	Normal + Start function. For added safety, you must first rotate and hold the power key switch at "START" position and then press the intended push button at the same time to activate the output relay.
E	1	110	Pitch & Catch
F	1	111	Auxiliary Stop

Example #1: Left button (set to function code A) / right button (set to function code A) → **1 000 000**

Example #2: Left button (set to function code B) / right button (set to function code B) → **1 001 001**

Example #3: Left button (set to function code A) / right button (set to function code C) → **1 000 010**

Example #4: Left button (set to function code F) / right button (set to function code A) → **1 111 000**


**!** When set to Pitch & Catch function make sure the 2<sup>nd</sup> transmitter is set to the next upper channel. For example, if the system is preset at Ch.01 then the 2<sup>nd</sup> transmitter should be set to Ch.02. Furthermore, you must also set the dip-switch on the receiving module (position #7 & #8) to "10" position (2-channel scanning), please refer to page 25.

**!!** When set to "Auxiliary Stop" do make sure that JP3 is inserted (refer to jumper settings next page).

## 5. Jumper Settings

Jumper settings are applied to functions such as Start command, transmitter push button layout, system information (serial number/ID code) programming, and system testing. The jumpers #3 ~ #7 are located on the decoder module above the six (6) dip-switches (refer to Fig.16 below).

(Fig. 16)

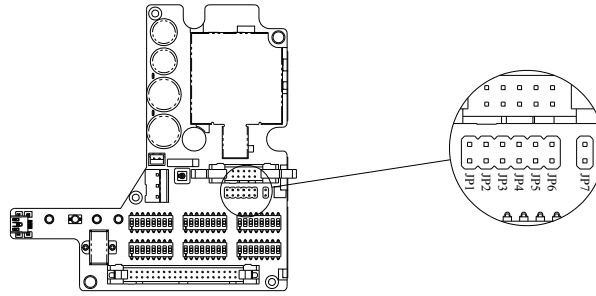


■ Manufacture preset

Jumper Settings		Function
JP3 (Blank)		After transmitter inactivity (MAIN deactivated), press any push button on the transmitter to reactivate the receiver MAIN.
JP3 (Inserted)		After transmitter inactivity (MAIN deactivated), rotate the transmitter power key-switch to “START” position to reactivate the receiver MAIN.
JP4 (Blank)	JP5 (Blank)	Standard right-to-left push button configuration for all models.
JP4 (Inserted)	JP5 (Blank)	In-line push button configuration (top to bottom) for FLEX 8ES/EX.
JP4 (Blank)	JP5 (Inserted)	In-line push button configuration (top to bottom) for FLEX 12ES/EX.
JP4 (Inserted)	JP5 (Inserted)	In-line push button configuration (top to bottom) for FLEX 4ES/EX.
JP6 (Blank)		Program system serial number/ID code and channel from decoder module to I-CHIP.
JP6 (Inserted)		Program system serial number/ID code and channel from I-CHIP to decoder module.
JP7 (Inserted)		For system test only, receiver MAIN disabled.

## 6. I-Chip Programming Port

(Fig. 17)

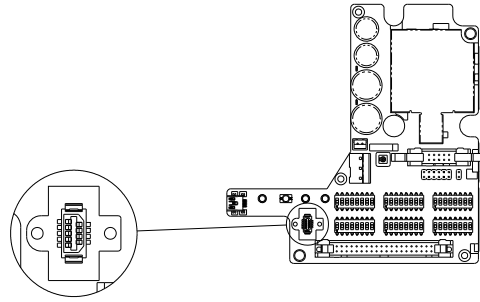


I-CHIP programming port located on the decoder module (refer to Fig. 17 above) inside the receiver is designed for the purpose of transferring system serial number/ID code either from I-CHIP to receiver or from receiver to I-CHIP. If you wish to transfer system information from receiver to I-CHIP, just insert the I-CHIP onto the programming port (JP6 jumper not inserted), wait until the Status LED on the decoder module turned constant green (within 2 seconds), and then take the I-CHIP out of the programming port (programming completed). At this time the I-CHIP should also possess the same serial number/ID code as the receiver. If the Status LED on the decoder module displayed a constant red light after inserting the I-CHIP (programming failed), then you must reinsert the I-CHIP one more time. On the other hand, if you wish to transfer system information from I-CHIP to receiver, then you must first insert JP6 jumper prior to inserting the I-CHIP, then wait for the green light to appear on the Status LED. At this time the receiver should also possess the same system information as the I-CHIP. Please note that the receiver unit must be powered in order to proceed with the programming.

## 7. Voltage Settings

Prior to installation always check the voltage setting is correct for your application (refer to Fig. 18 below).

- Position 1 → AC110 - 120V~ 50/60Hz
- Position 2 → AC220 - 240V~ 50/60Hz
- Position 3 → NA
- Position 4 → NA

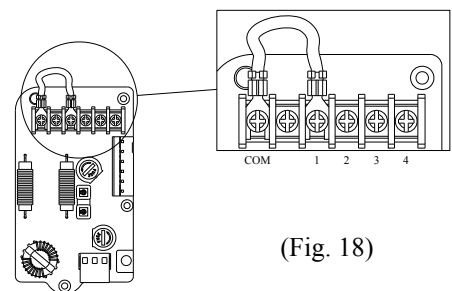

(Fig. 18)

### F9 and F10 power fuse ratings:

FUSE #	AC110 - 120V~ 50/60Hz	AC220 - 240V~ 50/60Hz
F9	1.0A (red)	1.0A (red)
F10	1.0A (red)	1.0A (red)

\* Output relay fuse → 5.0A (clear)


# 5. System Channels Table

Channel	Frequency	Dip-switch Setting	Channel	Frequency	Dip-switch Setting
01	433.000MHZ	000000	32	433.775MHZ	100000
01	433.000MHZ	000001	33	433.800MHZ	100001
02	433.025MHZ	000010	34	433.825MHZ	100010
03	433.050MHZ	000011	35	433.850MHZ	100011
04	433.075MHZ	000100	36	433.875MHZ	100100
05	433.100MHZ	000101	37	433.900MHZ	100101
06	433.125MHZ	000110	38	433.925MHZ	100110
07	433.150MHZ	000111	39	433.950MHZ	100111
08	433.175MHZ	001000	40	433.975MHZ	101000
09	433.200MHZ	001001	41	434.000MHZ	101001
10	433.225MHZ	001010	42	434.025MHZ	101010
11	433.250MHZ	001011	43	434.050MHZ	101011
12	433.275MHZ	001100	44	434.075MHZ	101100
13	433.300MHZ	001101	45	434.100MHZ	101101
14	433.325MHZ	001110	46	434.125MHZ	101110
15	433.350MHZ	001111	47	434.150MHZ	101111
16	433.375MHZ	010000	48	434.175MHZ	110000
17	433.400MHZ	010001	49	434.200MHZ	110001
18	433.425MHZ	010010	50	434.225MHZ	110010
19	433.450MHZ	010011	51	434.250MHZ	110011
20	433.475MHZ	010100	52	434.275MHZ	110100
21	433.500MHZ	010101	53	434.300MHZ	110101
22	433.525MHZ	010110	54	434.325MHZ	110110
23	433.550MHZ	010111	55	434.350MHZ	110111
24	433.575MHZ	011000	56	434.375MHZ	111000
25	433.600MHZ	011001	57	434.400MHZ	111001
26	433.625MHZ	011010	58	434.425MHZ	111010
27	433.650MHZ	011011	59	434.450MHZ	111011
28	433.675MHZ	011100	60	434.475MHZ	111100
29	433.700MHZ	011101	61	434.500MHZ	111101
30	433.725MHZ	011110	62	434.525MHZ	111110
31	433.750MHZ	011111			


# 6. Receiver Installation

## A. OUTPUT RELAY CONTACT DIAGRAM


Push button 1~2

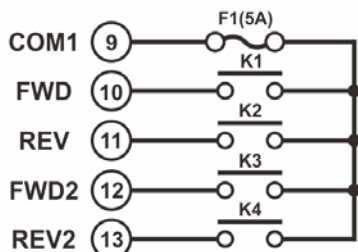


Push button 5~6

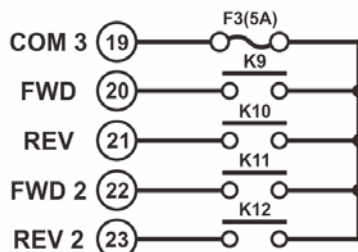


Push button 9~10

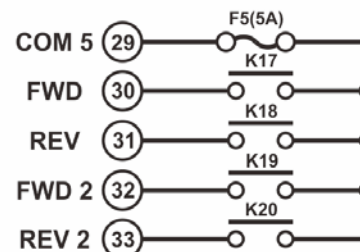


Push button 3~4

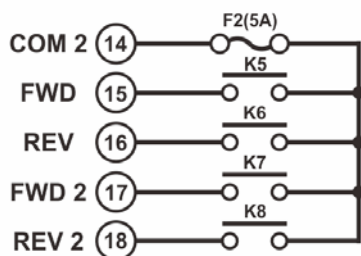


Push button 7~8

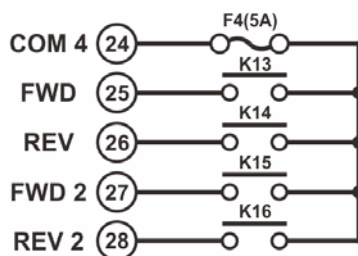


Push button 11~12

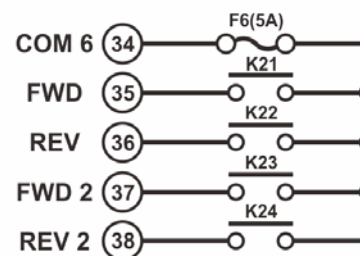

MAIN/Function

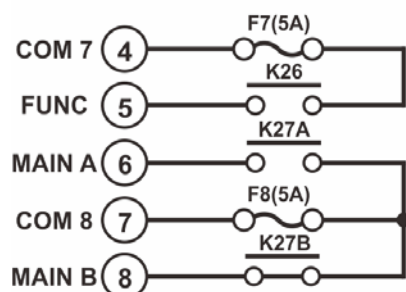

Power

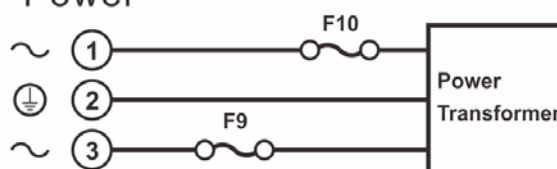


- \* For 3-relay (shared 2<sup>nd</sup> speed) and 4-relay (separate 2<sup>nd</sup> speed) configuration please refer to page 22~26.
- \* For 4-relay closed/closed and 4-relay opened/closed relay configuration please refer to page 22~26.
- \* For different voltage settings please refer to page 29.
- \* For F9 and F10 power fuse ratings please refer to page 29.



## B. PRE-INSTALLATION PRECAUTIONS



1. Make sure the transmitter and receiver are with identical serial number/ID code and channel.
2. Make sure the receiver is not set to the same channel as any other systems in use in the surrounding area.
3. Make sure that the crane or equipment is working properly prior to installation.
4. Make sure the power source to the receiver is set correctly.
5. Switch off the main power source to the crane or equipment prior to installation.

## C. STEP-BY-STEP INSTALLATION

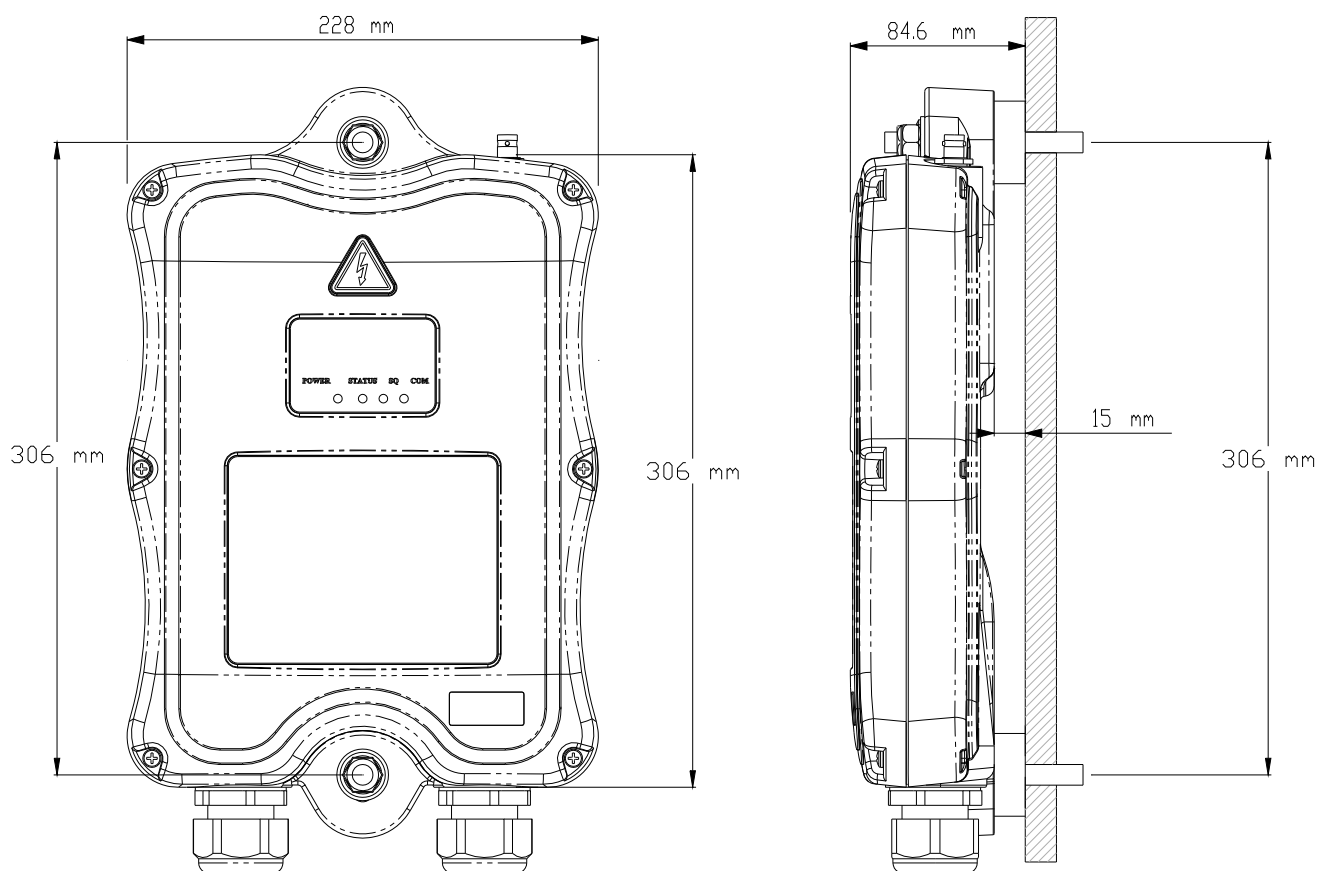

(Fig. 19)

1. For best reception the location of the receiver should be visible to the operator at all time.
2. The location selected should not be exposed to high levels of electric noise. Mounting the receiver next to an unshielded variable frequency drive may cause minor interference. Always locate the receiver as far away from variable frequency drive as possible.
3. Ensure the selected location has adequate space to accommodate the receiver (refer to Fig. 19 on page 32). If an external antenna is used, to avoid the possibility of antenna damage always locate the receiver where the antenna is free from any obstacles from all directions (refer to diagram at right).
4. When installing an external antenna you must connect the SMA jack located inside the receiver and make sure to set the jumper to “EXT” position (refer to diagram below).

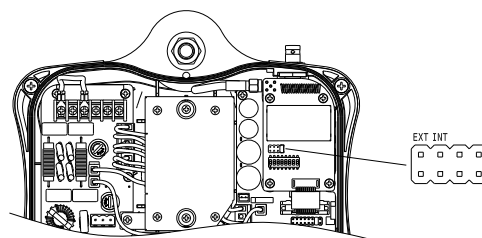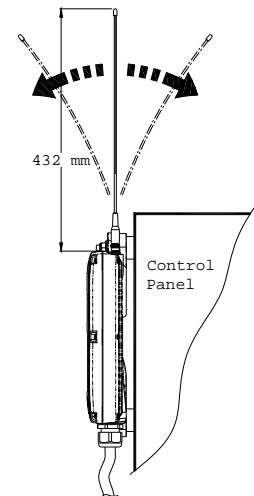

5. For better reception, make sure the receiver is in an upright position.
6. Drill two holes (10mm in diameter) on the control panel or location where the receiver is to be installed (refer to Fig. 19 on page 32).
7. Make sure the two bolts are tightened after installation.
8. For system wiring please refer to page 31.

## D. SYSTEM TESTING


1. Turn on the power source to the receiver and test the MAIN relay output by pressing the red emergency stop button and observe that it properly opens and closes the mainline disconnect contactor.
2. Test the operation of each function to ensure it corresponds to the transmitter direction labels or the pendant it is replacing.
3. Test the limit switches (if any) to see if they are working properly.
4. If your new remote control is replacing an existing pendant, make sure it is completely disconnected and placed in a safe location to prevent unwanted control command.

# 7. Operating Procedure



## A. TRANSMITTER OPERATION

### 1. General Operating Procedure


- a. Reset the red emergency stop button located on the top left hand side of the transmitter handset by rotating it either clockwise or counter clockwise, the red button will pop up.

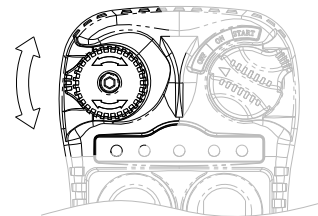

- b. Turn on the transmitter power by inserting the black-colored key into the power key slot located on the top right hand side of the transmitter handset and rotate it clockwise to “On” position.

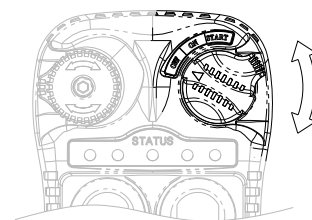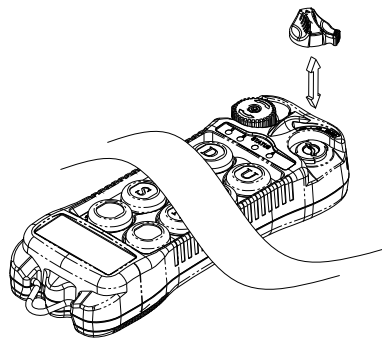

- c. After turning the transmitter power on, check the Status LED on the transmitter handset for any sign of system irregularities (refer to “Status Light Indicators & Warnings” on page 37). If the system is normal the Status LED will light up green for two (2) seconds.
- d. If there are no signs of any system irregularities, then rotate the power key-switch further to START position for up to 1.0 second to activate all transmitter push button functions and as well as the receiver MAIN. Then press any push button on the transmitter to begin operation. Pressing any push button prior to initiating the START command will result in no signal transmitted (blinking orange light).

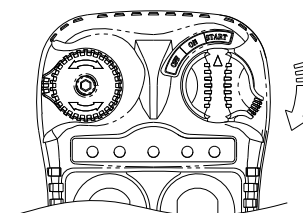

- e. In case of an emergency, press down the red emergency stop button will immediately disconnect the receiver MAIN and as well as the transmitter power. To resume operation, rotate the red button clockwise or counter-clockwise, it will pop up. Then rotate the power key-switch to START position for up to 1.0 second to activate all transmitter push button functions and the receiver MAIN. Please note that every time when you turn the transmitter power off and back on again or after resetting the emergency stop button, all push button functions will be locked to avoid any unintentional controls. For safety, initiating the START command after turning on the transmitter power or after resetting the emergency stop button is strictly required. **The receiver MAIN will also be disconnected temporarily when the receiver encounters strong radio interference or when the operator is controlling the crane or equipment beyond the transmitting range.**
- f. Turn off the transmitter power by rotating the power key counter-clockwise to “Off” position; it will disconnect the transmitter power and the receiver MAIN altogether. Turn it further counter-clockwise to release the key.





## WARNING

**Keep away interference source to make sure performance integrate..**


### 2. A/B Selector Push Button Operating Procedure

Pressing the “Select A/B” push button will toggle between output relay A, B, A+B respectively. There are 4 different types of Select A/B sequence available, please refer to page 11~13 for instructions on how to set Select A/B functions.

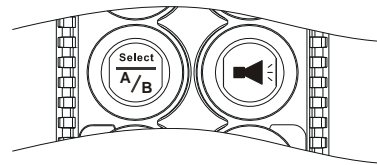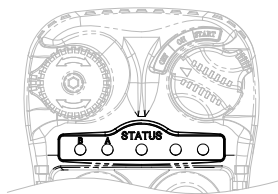


### 3. 3<sup>rd</sup> Speed Push Button Operating Procedure

When a push button is hold at 2<sup>nd</sup> speed, pressing the 3<sup>rd</sup> Speed push button one time will activate the 3<sup>rd</sup> speed output relay (toggled). If the operator wants 2<sup>nd</sup> speed again, just press the 3<sup>rd</sup> Speed push button one more time.

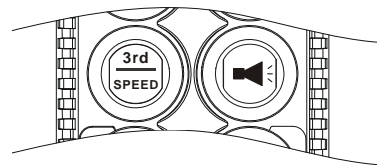


## 4. Pitch & Catch Operating Procedure

To release control of the crane, press the “Pitch” push button. To take over control of the crane, rotate the power key switch to “Catch” position for up to 2 seconds. The 2<sup>nd</sup> operator “can not” take control of the crane unless the 1<sup>st</sup> operator presses the “Pitch” push button (2.0 seconds). If the operator unintentionally presses the “Pitch” push button during operation, just rotate the power key to “Catch” position for up to 2 seconds to regain control again.

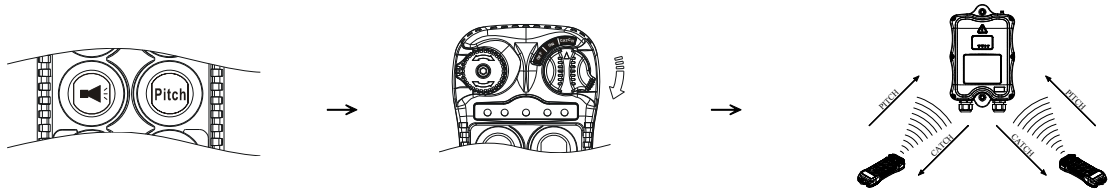


## 5. Automatic Channel Scanning Operating Procedure

After changing transmitter channel (refer to page 9), turn on the transmitter power and rotate the power key switch to “Start” position and hold it there for up to 1.0 minute. Within this 1-minute period the receiver will search (channel 01 ~ channel 62) and lock onto the newly selected transmitter channel automatically. Please note that in order for the receiver to switch to auto-scanning mode, prior to changing the transmitter channel, you must first deactivate the receiver MAIN by shutting off the transmitter power or press down the emergency stop button. Please refer to page 25 if you do not want the receiver to auto-scan all 62 channels.

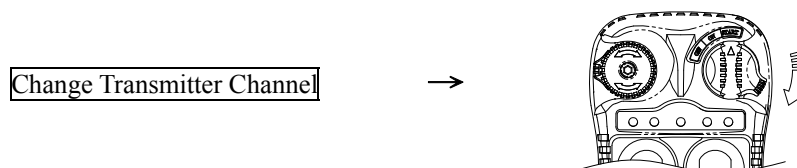

## 6. Changing Transmitter Batteries

Changing transmitter batteries by unscrewing the battery cover located on the backside of the transmitter (refer to Fig. 20 below). During battery installations make sure that the blue ribbon is centered between the two batteries. After changing the batteries also make sure that all screws are tightened to avoid water, moisture, dirt, grease, or other liquid penetration.

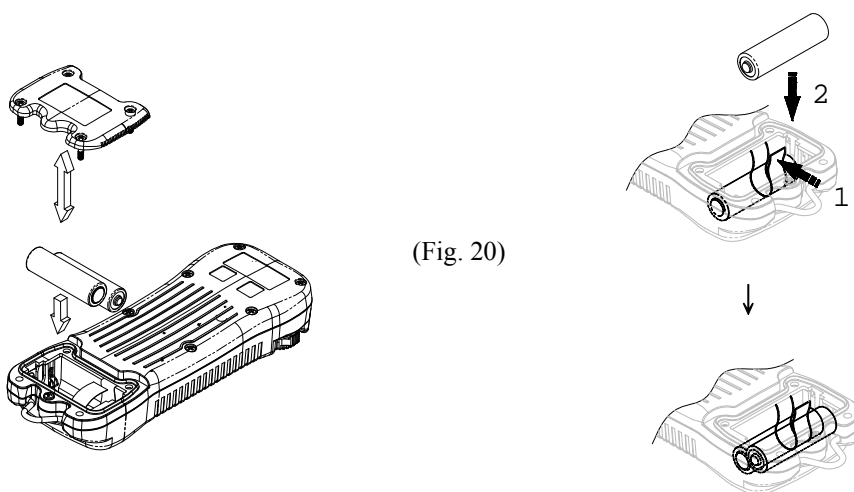

(Fig. 20)

## B. STATUS LIGHT INDICATORS & WARNINGS

### 1. Transmitter STATUS Light Indication

Type	Display Type	Indication
1	Constant red	Voltage below 1.9V at initial power on, transmitter power and receiver MAIN shuts off.
		Voltage below 1.8V during operation, transmitter power and receiver MAIN shuts off.
2	1 red blinks followed by a 2-second pause	Voltage below 1.85V during operation, warning, change batteries suggested.
3	2 red blinks followed by a 2-second pause	The pushbutton is defective after turning on the transmitter power.
4	No light displayed	When defective push button condition occurs (2 red blinks, type 3 above), find out which push button is defective by pressing all the push buttons on the transmitter one at a time. If the push button is in good working order, the LED will not light up when pressed. If the push button is defective the LED will continue to display 2 red blinks when pressed.
5	3 red blinks followed by a 2-second pause	EEPROM error.
6	4 red blinks followed by a 2-second pause	Transmitting error, system can not locked on to the designated channel.
7	Constant green for up to 2 seconds	Transmitter power on with no faults detected.
8	Blinking green	Transmission in progress.
9	Blinking orange	Transmitter push button functions locked.

## 2. Receiver STATUS Light Indication

Type	Display Type (Green & Red)	Indication
1	Fast green blinks	Decoding in process
2	Slow green blinks	Decoding on standby
3	Two red blinks	Receiver MAIN jammed or defective
4	Fast red blinks	Incorrect transmitter serial number/ID code
5	Constant red	Receiver under-voltage, LV output relay activated
6	No light displayed	Decoding microprocessor is defective

## 3. Receiver SQ Light Indication

Type	Display Type (Red)	Indication
1	Fast blinks	Transmission received
2	Completely off	No transmission
3	Blinks intermittently	Other radio interference

## 4. Receiver POWER Light Indication

Type	Display Type (Red)	Indication
1	On	Power to receiver
2	Off	No power to receiver

## 5. Receiver COM Light Indication

Type	Display Type (Red)	Indication
1	On	Power to relay Board
2	Off	No power to relay board

## C. TROUBLE SHOOTING TIPS

<b>Problems</b>	<b>Possible Reasons</b>	<b>Suggestions</b>
<b>No responds when transmitter push button is pressed (Improper startup &amp; settings)</b>	Transmitter low battery power	Check the transmitter battery level.
	Emergency stop button activated prior to startup	Prior to turning on the transmitter power switch make sure that the red emergency stop button is elevated.
	Transmitter push button functions locked	Initiate the Start command by rotating the power key-switch to START position.
	Incorrect system RF channel	Check and make sure that the transmitter handset and receiver unit both have the same channel.
	Incorrect system serial number/ID code	Check and make sure that the transmitter handset and receiver unit both have the same serial number/ID code.
	System out of range	Make sure that the operating distance is within the control range.
<b>No responds when transmitter push button is pressed (Damaged hardware)</b>	Defective transmitting and receiving module	Check the SQ display on the face of the receiver unit. If it does not light up when push button is pressed then either the transmitting or receiving module is defective. First replace the transmitting module. If SQ display still not lid when push button is pressed then go ahead and replace the receiving module.
	Defective encoder board or decoder module	If still no responds, then replace the transmitter encoder board. If still doesn't work then the decoder module is defective.
<b>No AC power to the receiver</b>	Incorrect input voltage	Make sure the source voltage is set correctly.
	Blown fuse	Check for any blown fuse.
	Incorrect wiring	Check input voltage connection.
<b>Outputs do not correspond to transmitter</b>	Incorrect output connection	Check the system wiring again. Please refer to the output contact diagram inside this manual or on the receiver cover.



# 8. System Specifications

Frequency Range	:	433.000 ~ 434.525 MHz
Number of Channels	:	62 channels
Channel Spacing	:	25 KHz
Modulation	:	Digital Frequency Modulation based on Manchester Code, 20bit address, 32bit CRC Parity Check and Hamming Code.
Encoder & Decoder	:	Microprocessor-controlled
Transmitting Range	:	100 Meters / 300 Feet
Hamming Distance	:	6
Frequency Control	:	Synthesized PLL (Phase Lock Loop)
Receiver Type	:	Frequency Auto Scanning
Receiver Sensitivity	:	-116dBm
Spurious Emission	:	-50dB
Antenna Impedance	:	50 ohms
Responding Time	:	40 Milliseconds (average)
Transmitting Power	:	1.0mW
Enclosure Type	:	NEMA-4X
Enclosure Rating	:	IP-66
Output Contact Rating	:	250V @ 8 Amps
Transmitter Operating Voltage	:	DC 3.0V
Receiver Power Consumption	:	22.0 VA
Operating Temperature	:	-25°C ~ 50°C / -13°F ~ 122°F
Transmitter Dimension	:	158mm (L) x 69.0mm (W) x 38mm (H) (4ES/EX) 184mm (L) x 69.0mm (W) x 38mm (H) (8ES/EX) 230mm (L) x 69.0mm (W) x 38mm (H) (12ES/EX)
Receiver Dimension	:	363mm (L) x 228mm (W) x 70mm (H)
Transmitter Weight	:	296g / 10.4oz
Receiver Weight	:	2.5kg / 5.5lb

# CE EU Declaration of Conformity CE

## (EMC, R&TTE, SAFETY & MACHINERY)

***For the following equipment:***

Product : Flex Series Radio Remote Control System  
Multiple Listee Model No. : Flex 4ES/EX, 8ES/EX and 12ES/EX  
Manufacturer's Name : Advanced Radiotech Corporation  
Manufacturer's Address : 1F, 288-1, Hsin Ya Road, Chien Chen District,  
Kaohsiung City, Taiwan

We hereby declare, that all major safety requirements, concerning the CE Mark Directive 2006/42/EC and Low Voltage Directive 2006/95/EC, Electromagnetic Compatibility Directives 2004/108/EC, R&TTE Directive 1999/5/EC are fulfilled, as laid out in the guideline set down by the member states of the EEC Commission.

***The standards relevant for the evaluation of the electrical safety requirements are as follow:***

EMC: EN 301 489-1 + EN 301 489-3  
R&TTE : EN 300 220-2 V2.1.1  
SAFETY : EN 60950:2006+A1+A11+A12  
MACHINERY: EN 60204-32:2008, EN 13557:2003+A1:2008  
EN ISO 13849-1:2008 (PL=d), EN 60529 (IP66)

***Test reports issued by:***

EMC: SGS UK  
R&TTE : SGS UK  
SAFETY : SGS UK  
MACHINERY: SGS UK

***Person responsible for marking this declaration:***



Tom Jou / President

Name and signature of authorized person

## PRODUCT MANUAL SAFETY INFORMATION

Advanced Radiotech Corporation (ARC) offers a broad range of radio remote control product for material handling applications. This manual has been prepared by ARC to provide information and recommendations for the installation, use, operation and service of ARC's material handling products and systems (ARC Products). Anyone who uses, operates, maintains, services, installs or owns ARC Products should know, understand, and follow the instructions and safety recommendations in this manual for ARC Products.

The recommendations in this manual do not take precedence over any of the following requirements relating to cranes, hoists lifting devices or other material handling equipment which use or include ARC Products:

- Instructions, manuals, and safety warnings of the manufacturers of the equipment where the radio system is used.
- Plant safety rules and procedures of the employers and the owners of facilities where the ARC Products are being used.
- Safety standards and practices for the industries in which ARC Products are used.

This manual does not include or address the specific instructions and safety warnings of these manufacturers or any of the other requirements listed above. It is the responsibility of the owners, users and operators of the ARC Products to know, understand and follow all of these requirements. It is the responsibility of the employer to make its employees aware of all of the above listed requirements and to make certain that all operators are properly trained. **No one should use ARC Products prior to becoming familiar with and being trained in these requirements and the instructions and safety recommendations in this manual.**

## WARRANTY INFORMATION

For information on ARC's product warranties, please contact ARC representative nearest to you or visit [www.advanced-radiotech.com](http://www.advanced-radiotech.com).

## FCC WARNINGS and CAUTIONS

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RADIO FREQUENCY INTERFERENCE STATEMENT

**This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:**

- 1) this device may not cause harmful interference, and**
- 2) this device must accept any interference received, including interference that may cause undesired operation.**

**FCC Caution: Any change or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.**