

# Table of contents


---

Package Contents.....	2
Getting started.....	3
Description of the device.....	4
Through the Wizard.....	5
Connecting to a WiFi network.....	6
The Android™ interface.....	8
Getting familiar with Android™ .....	12
Troubleshooting.....	14

For more information, please consult the FAQs of your product on [www.archos.com](http://www.archos.com).  
Make sure to read them before considering any product return.

# Package Contents

---

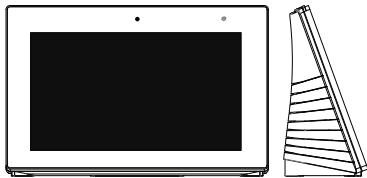


ARCHOS Smart Home Tablet



QSG booklet



Warranty,  
legal & safety booklet

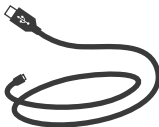


USB cable



Charger

# Getting Started

## Charging

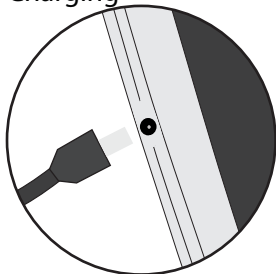

Connect the supplied power cable to the ARCHOS and to a wall outlet. The ARCHOS device will turn on and start charging.



- You can use your ARCHOS whilst it charges.
- Let your device charge completely the first time you use it.
- Use only the supplied charger.

**When your device is completely discharged, you need to charge it for at least 10 minutes before the charging battery icon can be displayed.**

### TIPS:

To receive more complete service, please register your product.  
From a computer, go to [www.archos.com/register](http://www.archos.com/register).

# Description of the device

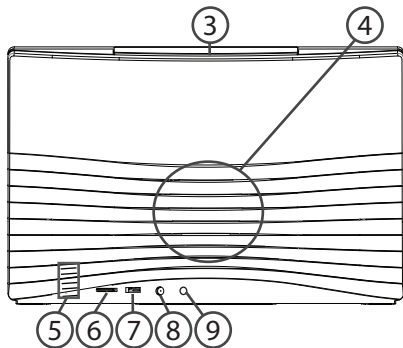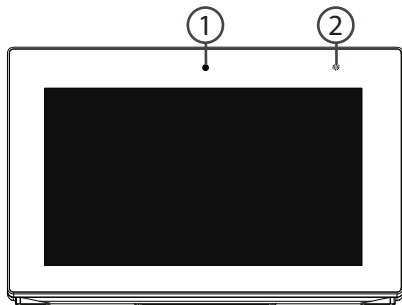

① Webcam

④ Loudspeaker

⑦ Micro-USB port

② Light sensor

⑤ Temperature sensor

⑧ Power connector

③ ON/OFF button

⑥ Micro-SD card slot

⑨ Headphone jack

# Through the Wizard

---

The first time you start up your ARCHOS, the installation wizard will help you set up your device:

- Language
- Date & time
- WiFi connection
- Location service options
- 3rd party apps

**TIPS:**

We recommend that you set up your device in the WiFi zone of the network that you will regularly be using.

# Connectivity to a WiFi Network

CAUTION: Make sure that you are in a WiFi zone.



① Touch and hold the time & battery icons to reveal the status bar. A blue line is displayed.




② Pull the blue line down to display the status dashboard.



③ Touch "WiFi off" in the status dashboard. The WiFi page will be displayed.



④ Slide the WiFi switch to "ON" position.

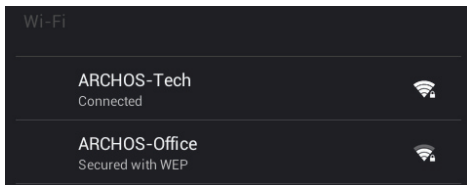

⑤ The ARCHOS will scan for Wifi networks in range. Touch the name of network you want to connect to.

ARCHOS-Office

Signal strength **Good**

Security **WEP**

Password **••••••••••**

Show password

Show advanced options

Cancel Connect

Private networks are shown with a lock icon and will require you to enter your password.

### TIPS:

- When entering a WiFi password, we recommend that you select “Show password” so you can see the characters you are typing. To get the correct WiFi password (or settings) for the network, contact the WiFi network provider. If your WiFi is on and you are in range of a network that you previously connected to, your ARCHOS will automatically attempt to connect to it.
- To keep your WiFi connection ON when the device is on sleep, select the Menu icon in the “WiFi” page. Then, select Advanced > Keep WiFi on during sleep > Always.


# The Android™ Interface





- 
- ① **Android™ apps shortcuts**  
> Touch to start an application.
  - ② **Permanent Android™ apps shortcuts**  
> Touch to start an application
  - ③ **Back button**
  - ④ **Home button**
  - ⑤ **Recent apps buttons**
  - ⑥ **All Apps button**  
> Touch this icon to show all the applications and widgets installed on your ARCHOS. All your downloaded applications are here.
  - ⑦ **Google™ Search**  
> Touch "Google" for text search or touch the microphone icon for voice search.
  - ⑧ **The status bar**  
> Displays notifications and quick settings

# The Android™ Interface

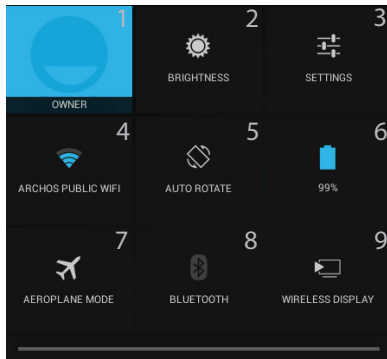

## 3:18 The Quick settings

- 1 Current user<sup>(1)</sup>
- 2 To adjust the screen brightness.
- 3 To access all your settings.
- 4 To turn on/off your WiFi connection.
- 5 To activate/deactivate automatic screen orientation as you turn your ARCHOS.
- 6 Percentage of battery remaining
- 7 To activate/deactivate all wireless connections, especially when flying.
- 8 To turn on/off your Bluetooth connection.
- 9 To enable wireless display<sup>(2)</sup>


<sup>(1)</sup>New multi-user support for tablets lets different users have their own separate, customizable spaces on a single device. Add users in Settings > Device.

<sup>(2)</sup>You can share movies, YouTube videos, and anything that's on your screen on an HDTV. You need to connect a wireless display adapter to any HDMI-enabled TV to mirror what's on your screen quickly and easily.




## The Recent Apps

Opens a list of thumbnail images of apps you've worked with recently:

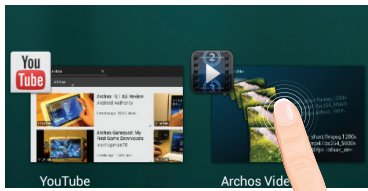

**Touch:** to open an app.

**Hold down:** to display options

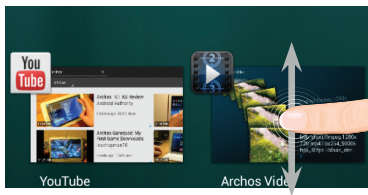


**Swipe up or down:** to close an app.

# Getting familiar with Android™




## The extended home screen:

Navigate between different home screen panels by swiping left and right.

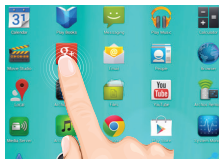

## Moving a home screen item:

Touch and hold your finger onto it until the positioning gridlines appear, then slide it to the desired location, and release your finger.

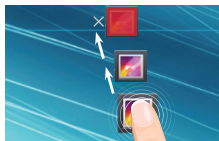

## Removing a home screen item:

Touch and hold it, slide your finger towards the top of the screen and drop it over the Remove icon.



## Uninstalling an item:

From the All apps screens, touch and hold it, slide your finger towards the top of the screen and drop it over Uninstall bin.




### Creating application folders:

Drop one app icon over another on a home screen and the two icons will be combined.




### Widgets:

Touch the All Apps icon on your home screen. Touch Widgets at the top of the screen. From the main Widgets screen, you can move around widgets just as you do for app icons.



### Changing your wallpaper:

Hold your finger on a home screen at an empty location, then choose from the list.

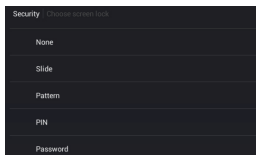

### Locking the touchscreen:

In Settings, scroll down and touch security. Touch Screen lock. Touch the type of lock you would like to use. After you set a lock, a lock screen is displayed whenever your screen wakes up, requesting the pattern, PIN or other specified key.

# Troubleshooting

---

## **If your device is frozen:**

Press the ON/OFF button for 10 seconds or use the Hardware reset. To use the Hardware reset, press the “pinhole reset” button by using a sharp object such as a toothpick.

## **If your device doesn't turn on:**

1. Charge your device for at least 10 minutes.
2. Press the ON/OFF button for 10 seconds or use the Hardware reset. To use the Hardware reset, press the “pinhole reset” button by using a sharp object such as a toothpick.

## **If your device is completely discharged:**

Charge it for at least 10 minutes before it can start.

## **If you want to extend the life of your battery:**

Decrease the screen brightness and turn off the wireless connections if not in use.

## **If your device functioning is too slow:**

Close all apps which are not currently used. Use the System Monitor app.

## **If your WiFi reception is too low:**

Make sure you are not far from the WiFi hotspot.

Update the firmware of the device: <http://www.archos.com/support>.

Reset and redefine your connection parameters.

Contact your WiFi connection provider.

## **If you want to restore your product (forgotten password? erase all your settings?) :**

1. While holding Volume+, press the ON/OFF button to turn on the device.

The Android system recovery is displayed.

2. Use the Volume buttons to scroll and the ON/OFF button to validate.

Select “Wipe data/factory reset” and validate.

Select “Yes -- delete all user data” and validate.

Select “Reboot system now” and validate.

# Troubleshooting

---

## **If your device is frozen:**

Press the ON/OFF button for 10 seconds or use the Hardware reset. To use the Hardware reset, press the “pinhole reset” button by using a sharp object such as a toothpick.

## **If your device doesn't turn on:**

1. Charge your device for at least 10 minutes.
2. Press the ON/OFF button for 10 seconds or use the Hardware reset. To use the Hardware reset, press the “pinhole reset” button by using a sharp object such as a toothpick.

## **If your device is completely discharged:**

Charge it for at least 10 minutes before it can start.

## **If you want to extend the life of your battery:**

Decrease the screen brightness and turn off the wireless connections if not in use.

## **If your device functioning is too slow:**

Close all apps which are not currently used. Use the System Monitor app.

## **If your WiFi reception is too low:**

Make sure you are not far from the WiFi hotspot.

Update the firmware of the device: <http://www.archos.com/support>.

Reset and redefine your connection parameters.

Contact your WiFi connection provider.

## **If you want to restore your product (forgotten password? erase all your settings?) :**

1. While holding Volume+, press the ON/OFF button to turn on the device.

The Android system recovery is displayed.

2. Use the Volume buttons to scroll and the ON/OFF button to validate.

Select “Wipe data/factory reset” and validate.

Select “Yes -- delete all user data” and validate.

Select “Reboot system now” and validate.

# FCC Statements

---

## **Statement:**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

## **Warning:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.