

User's Manual

Argox

**Handheld Bar Code
Scanner**

Model No.: AS-8510

USING AS-8510/8512 RADIO CRADLE

The AS-8510/8512 radio cradle paired with one AS-8510/8512 scanner, builds a Cordless Reading System for the collection, decoding and transmission of barcoded data.

It can be connected to a Host PC through an RS232, Keyboard wedge or USB cable and is suited for a single-cradle layout.

The LEDs signal of the AS-8510/8512 radio cradle status, as described in the following:

BATTERY:

- Green LED blinking: the batter charge is in progress.
- Green LED On: the battery is completely charged.

TRANSMISSION:

- Green LED On: the radio cradle is powered.
- Orange LED blinking: the radio cradle receives data and commands from the Host or the scanner.

CONNECTING AND DISCONNECTING THE RADIO CARDLE INTERFACE CABLE

The radio cradle can be connected to a Host by means of an RS232, Keyboard wedge or USB cable which must be simply plugged into the Host connector, placed on the base of the cradle. In addition the cradle must be connected to an external power supply.

To disconnect the cable, insert a paper clip or other small similar object into the hole at the back of the cradle. Push down on the clip while unplugging the cradle.

Default setting

For each barcode shown as below:

Code Type	Read Enable		Checksum Verification Enable	Checksum Transmission Enable	Code ID
	8510	8512			
UPC-A	V	V	V	V	A
UPC-E	V	V	V	V	E
EAN-13	V	V	V	V	F
EAN-8	V	V	V	V	FF
Code-39	V	V			*
Interleaved 2 of 5	V	V			i
Industrial 2 of 5			-	-	i
Matrix 2 of 5					B
Codabar					%
Code-128	V	V	V		#
Code-93			V two digits		&
Code-11			V One digit		O
MSI/Plessey			V		@
UK/Plessey			V		@
Telepen					S
Standard 2 of 5			V	V	i
China Post					t
Italian					p
Pharmacode.					
Code-16K		V ⁽⁸⁵¹²⁾	-	-	
PDF417		V ⁽⁸⁵¹²⁾	-	-	
EAN UCC			-	-	
Composite					RC

ArgoScan 8510/8512	
Specification	Model 8510 / 8512
Operational	
Light Source	635 nm Visible Red LED
Optical System	2048 pixel CCD (Charge-coupled device)
Depth of Scan Field	Up to 600mm (CODE 39, PSC=90%, 20mils)
Scanning Width	160mm
Scan Speed	400 scans/sec
Resolution	0.1mm(4mils) Code39,PCS=90%
Print Contrast	25% or more
Scanning Angle	Front: 60° Rear: 60° Yaw: 70°
Decode Capability	Autodiscriminates all standard barcodes; Other symbologies can be ordered optionally (2D symbologies for 8512 only)
Beeper Operation	7 tones or no beep
Indicator	Green & Red led
Mechanical	
Length	164 mm
Width-handle	30 mm
Width-head	78 mm
Depth-handle	56 mm
Depth-head	35 mm
Weight	Less than 250g (with a battery)

Case material	ABS (over molded at contact pointed)
Cushion material	Double injection
Cradle interface	RS232, Keyboard wedge, USB
Electrical	
Input Voltage (Cradle)	5 VDC \pm 10% VDC
Power - Operating (Cradle)	5 VDC
Power – Standby (Cradle)	5 VDC
Current – Operating (Cradle)	132 mA
Current – Standby (Cradle)	132 mA
Charge Current (Cradle)	340 mA
Input Voltage (Scanner)	3.4V ~ 4.2V
Power - Operating (Scanner)	3.2V ~ 4.0V
Power – Standby (Scanner)	3.4V ~ 4.2V
Current – Operating (Scanner)	225 mA
Current – Standby (Scanner)	13 mA
Light Level	Up to 70000 Lux
Shock	1.5m drop onto concrete
Contaminants	Seals to resist airborne particulate contaminants (IP42)

Ventilation	None required
Programming	
Programming method	Manual (Reading special barcode) DOS command through RS-232, Windows configuration program
Program upgrade	Enabled by built-in flash memory
Programmable characteristics	Code type selection, check digit selection Decoding option Decoding option Transmitted character delay, Header selection, trailer selection, message suffix, good read beep tone and volume, scanner trigger selection Keyboard emulation type (intermessage delay, keyboard type and keyboard language) Serial interface type (ACK/NAK, Xon/Xoff, RTS/CTS, good read LED control, start/stop bits)

Programming the AS-8510 / 8512

To program the 8510 or 8512, you must scan a series of programming barcode in the correct order. Fold out the back cover of this manual. You will see a table of alphanumeric barcodes, which are used to program the various options presented.

To program each option, you must:

1. Scan the **Program** barcode on the parameter setting part.
2. Enter the option mode by scanning the **Option Bar Code** (also on the Parameter setting part).
3. To the right of the option barcode, the necessary alphanumeric inputs are listed. Scan these alphanumeric entries from the **back fold out** page. To confirm above steps, you must scan the **Finish** barcode on the back fold out page.
4. Once you have finished programming. Scan the **Exit** barcode, listed on the lower right hand corner of each parameter setting part.



Program

Program Barcode

Option Bar Code	Option	Alphanumeric Entry
	Keyboard Wedge	00*
Interface selection	RS-232	01
	Wand emulation	02
	USB	03
	Keyboard/RS-232	04
	Auto detection	
	Reserved	05



Option Barcode



Exit

Exit Barcode

Back Fold Out

Finish barcode

Interface Selection


This decoder built-in scanner comes in one model and supports interfaces such as keyboard wedge, RS232 serial wedge, wand emulation, and the latest USB interface. In most of the cases, simply selecting an appropriate cable with a device code will work for a specific interface.

Interface selection: You can change factory interface default for other type interface. By plugging different cables, setting right interface, then the scanner will be changed to another interface. However, you must make sure which cable you need.

Keyboard/RS232/UBS Auto detection: By setting this function, it will automatically select the Keyboard wedge or RS-232 or UBS interface for user.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Interface selection	Keyboard Wedge	00
	RS-232	01
	Wand emulation	02
		(8110/8210/8150)
	USB	03
	Keyboard /RS232/USB Auto detection	} 04*
	Reserved	
Note: * -Default		



Keyboard wedge


As a keyboard interface, the scanner supports most of the popular PCs and IBM terminals. The installation of the wedge is a fairly simple process without any changes of software or hardware.

Keyboard Type: Select keyboard type connector of your host computer. Scanner must be selected to the appropriate host interface cable converter.



\$%+PRO

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *2AA*	IBM AT, PS/2	00*
Keyboard type	Reserved	01
	Reserved	02
	Reserved	03
	Reserved	04
	Reserved	05
	Reserved	06



%\$\$

Exit

Keyboard wedge

Keyboard Layout: The selecting of keyboard layout supports many country languages other than USA keyboard layout. First you need to confirm country language that you desire. In DOS, using command “keyb” to select the desirable keyboard layout or in WINDOWS entry “Control” then pops “Keyboard” to select country at “language” item. For details, please refer to your DOS or WINDOWS user’s manual.

Keyboard Speed: By selecting, you can change output speed of scanner to match with host computer. Generally, set **00** or **01** in working high speed. If some output characters of barcode have been lost, you may need to set **05** or **06** to match your host keyboard speed.

Function Key: Set **Enable**, scanner can output code as pressing function-key in your application program while the barcode datas contain ASCII value between 01₁₆ to 1F₁₆. Refer to ASCII table.





Numeric Key: The **Keypad** has to be selected if your application program is only keypad numeric code acceptable. So, scanner will output code as press numeric keypad when it read numeric digit. (The keypad is in the right side of keyboard, and Num Lock control key is also on.) If **Alt+Keypad** is selected, Caps Lock and output will be independent.



\$%+PRO

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
------------------------	---------------	---------------------------

 *2AB* Keyboard layout	USA Belgium Danish France Germany Italian Portuguese Spanish Swedish Switzerland UK Latin American Japanese	00* 01 02 03 04 05 06 07 08 09 10 11 12
 *2AC* Keyboard speed	0-8 0 : high clock rate 8 : low clock rate	00-08 01* 03* (8310/8312)
 *2AD* Function key	Disable Enable	00 01*
 *2AE* Numeric key	Alphabetic key Numeric keypad (Num lock state only) Alt+Keypad	00* 01 02



Keyboard wedge

Caps Lock: By selecting "Caps lock" ON or "Caps lock" OFF, scanner can get Caps Lock status.

Power-on simulation: All of the PCs check the keyboard status during power-on selftest. It is recommended to Enable function if you are working without keyboard installation. It simulates keyboard timing and pass keyboard present status to the PC during power-on.





Inter-character delay: This delay is inserted after each data characters transmitted. If the transmission speed is too high, the system may not be able to receive all characters. Adjust it and try out suited delay to make system work properly.

Block transmission delay: It is a delay timer between barcode data output. The feature is used to transfer continually with shorter barcode data or multi-field scanning.



\$%+PRO

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *2AF* Caps lock	Caps lock"ON" Caps lock"OFF"	00 01*
 *2AG* Power-on simulation	Disable Enable	00* 01
 *2AH* Inter-character delay	00-99 msec	00-99 02*
 *2AI* Block transmission delay	00-99 10 msec	00-99 10*



%\$\$

Exit

RS-232

CTS: Clear To Send (Hardware Signal)

RTS: Request To Send (Hardware Signal)

Xon: Transmit On (ASCII Code 11 16)

Xoff: Transmit Off (ASCII Code 13 16)

Flow control:

None-The communication only uses TxD and RxD signals without regard for any hardware or software handshaking protocol.

RTS/CTS-If the scanner wants to send the barcode data to host computer, it will issue the RTS signal first, wait for the CTS signal from the host computer, and then perform the normal data communication. If there is no replied CTS signal from the host computer after the timeout (Response Delay) duration, the scanner will issue a 5 warning beeps.

Xon/Xoff- When the host computer is unable to accept data, it sends a Xoff code to inform the scanner to suspend data transmission, and Xon to continue.

ACK/NAK- When the ACK/NAK protocol is used, the scanner waits for an ACK (acknowledge) or (not acknowledge) from the host computer after data transmission, and will resend in response to a NAK.

Inter-character delay: It is delay time between data character's data output. It is also same as **Inter-char. delay** of keyboard wedge.





Block transmission delay: It is a delay time between barcode data output. It is also same as **Block transmission delay** of keyboard wedge.

Response delay: This delay is used for serial communication of the scanner to waiting for handshaking acknowledgment from the host computer.



3%+PRO

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *3AA* Flow control	None RTS/CTS Xon/Xoff ACK/NAK	00* 01 02 03
 *3AB* Inter-character delay	00-99 (msec)	00-99 00*
 *3AC* Block transmission delay	00-99 (10 msec)	00-99 00*
 *3AD* Response delay	00-99 (100 msec)	00-99 20*







%SS

Exit



\$%+PRO

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *3AE* Baud rate	300 BPS 600 BPS 1200 BPS 2400 BPS 4800 BPS 9600 BPS 19200 BPS 38400 BPS	00 01 02 03 04 05* 06 07
 *3AF* Parity	None Odd Even	00* 01 02
 *3AG* Data bit	8 bits 7 bits	00* 01
 *3AH* Stop bit	One bit Two bits	00* 01



%\$\$

Exit

Scan

Scanning mode:

Good-read off-The trigger button must be pressed to activate scanning. The light source of scanner stops scanning when there is a successful reading or no code is decoded after the **Stand-by duration** elapsed.

Momentary-The trigger button acts as a switch. Press button to activate scanning and release button to stop scanning.

Alternate-The trigger button acts as a toggle switch. Press button to activate or stop scanning.

Timeout off-The trigger button must be pressed to activate scanning, and scanner stops scanning when no code is decoded after the **Stand-by duration** elapsed.

Continue-The scanner always keeps reading, and it does not matter when trigger button is pressed or duration is elapsed.

Double read timeout: If the barcode has been scanned twice, then only the first barcode will be accepted.

Double confirm: If it is enabled, the scanner will require a several times successful decoding to confirm the barcode data. The more confirming times required the more inhibitive miss-reading code will be shown. If you set Double confirm, the Multi field scan Enable function won't be able to work.

Global min./max. code length: Global Minimum and Maximum length can be set to qualify data entry. The length is defined as the actual barcode data length to be sent. Label with length exceeds these limits will be rejected. Make sure that the Minimum length setting is no greater than the Maximum length setting, or otherwise the labels of the symbology will not be readable. In particular, you can set the same value for both Minimum and Maximum reading length to force the fixed length barcode decoded. The values of setting have no effect on certain symbologies with fixed length.


Notes 1): Please set the min/max length if you have special demand for individual barcode.

2): Include the Check sum digits if you want to set Global min/max code length.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
<p>*7AA*</p> <p>Scanning mode</p>	<p>Good-read off</p> <p>Momentary</p> <p>Alternate</p> <p>Timeout off</p> <p>Continue</p> <p>Test only</p>	<p>00</p> <p>01*</p> <p>02</p> <p>03</p> <p>04</p> <p>05</p>
<p>*7AB*</p> <p>Stand-by duration</p>	<p>01-99 (second)</p>	<p>00-99</p> <p>06*</p>
<p>*7AC*</p> <p>Double read timeout</p>	<p>01-99 (10 msec)</p>	<p>01-99</p> <p>50*</p>
<p>*7AD*</p> <p>Double confirm</p>	<p>00-99</p> <p>(00: no double confirm)</p>	<p>00-09</p> <p>00*</p>

 *7AP* Global min. code length	00-63	00-63 04*
--	-------	------------------

Scan



Inverted image scan: Set **Enabled** the scanner will scan both black/white barcode with white/black background. **Exit**

CTS trigger: This operation enabled an external device to control scanning. The CTS trigger is controlled by apply an external trigger signal to the CTS input. When active, this signal causes scanning to begin as the scanner's trigger was depressed.


Power saving: Place the scanner in a idle state during idle priced to optimize power usage.






Position indication: This function can indicate the specific location before scanning. You can also set up the time of indication.



S%+PRO

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *7AG* Global max.code length	00-63	04-63 63*

 *7AH* Inverted image scan	Disable Enable	00* 01
 *7AI* CTS trigger	Disable Enable	00* 01
 *7AJ* Power saving (For 8310/8312)	Disable Enable	00* 01
 *7AK* Position indication	Disable 30 second 60 second 90 second 120 second 150 second 180 second Continue	00* 01 02 03 04 05 06 07
 *7AL* Stand mode selection (For 8310/8312)	LED "on" LED "off"	00* 01



%SS

Exit

Indication

Power on alert: After power-on the scanner it will generate an alert signal to indicate a successful self -test.

LED indication: After each successful reading, the LED above the scanner will light up to indicate a good barcode reading.







Beeper indication: After each successful reading, the scanner will beep buzzer to indicate a good barcode reading, and its **Beep loudness**, **Beep tone freq.** and **Beep tone duration** are adjustable.

Beep loudness/Beep tone freq./Beep tone duration: You can adjust **Beep Loudness**, **Beep tone** and **Beep duration** for a good reading upon favorite usage.



\$%+PRO

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *5AA* Power on alert	Disable Enable	00 01*
 *5AB* LED indication	Disable Enable	00 01*
 *5AC* Beeper indication	Disable Enable	00 01*
 *5AD* Beep loudness	00-07	00-07 07*
 *5AE* Beep tone freq.	00-99 (100Hz)	00-99 26*
 *5AF* Beep tone duration	00-99 (10 msec)	00-99 10*



%SS

Exit

UPCA

Read: Format

Leading Zero	Data Digits (11 Digits)	Check Digit
-----------------	----------------------------	----------------

Check-sum transmission: By setting **Enable**, checks sum will be transmitted.

Truncate leading/ending: The leading or ending digits of barcode data characters can be truncated when these values are set to non-zero. It will beep instead of reading anything when the truncate value is more than the barcode data digits or the value of Truncate Leading is overlapped with that of the Ending. The maximum value of truncate digits is 15.

Code ID setting: **Code ID setting** is a character used to represent the symbol upon a succeeding reading. A **Code ID setting** is prefixed to the data begin or end transmitted if the feature is selected. If you want application to transmit Code ID, you must set Code ID transmission to **Enable** first. Refer to Code ID transmission.

Insertion group selection: The scanner offer one or two insertion group for own symbology. By setting one or two digits to indicate which insertion group you want to insert. You may refer to Character insertion.







Example: Group 2 set 02 or 20.

Group 1 and 4 set 14 or 41.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Read	Disable Enable	00 01*

 *NAB* Check-sum verification	Disable Enable	00 01*
 *NAC* Check-sum transmission	Disable Enable	00 01*
 *NAP* Truncate leading	0-15	00-15 00*
 *NAG* Truncate ending	0-15	00-15 00*
 *NAH* Code ID setting	00-ffH ASCII code	00-ffH < A >*
 *NAL* Insert group selection	00-44	00-44 00*



Exit

UPCA

Supplement digits: The Supplement digits barcode is the supplemental 2 or 5 characters for WPC code.

Format




Leading Zero	Data Digits (11 Digits)	Check Digit	Supplement Digits 2 or 5 or UCC / EAN 128
-----------------	----------------------------	----------------	---

Truncation / Expansion: The leading “0” digits of UPCA data characters can be truncated when the function is enabled.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Supplement digits (For 8110/8150/8210)	None	00*
	2 digits	01
	5 digits	02
	UCC/EAN 128	03
	Auto detection	04

 Supplement digits (For 8310/8312)	None 2 digits 5 digits 2,5 digits UCC/EAN 128 2, UCC/EAN 128 5, UCC/EAN 128 All	00? 01 02 03 04 05 06 07
 Truncation/ Expansion (For 8110/8210)	Disable Enable	00 01*
 Truncation/ Expansion (For 8150/8310/8312)	None Truncate leading zero Expand to EAN13	00 01* 02



Exit

UPCE

Read: Format

Leading Zero	Data Digits (6 Digits)	Check Digits
--------------	------------------------	--------------

Check-sum verification: The checksum of EAN-13 is optional and made as the sum of the numerical value of the data digits.

Check-sum transmission: By setting **Enable**, checks sum will be transmitted.





Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Read	Disable Enable	00 01*
 Check-sum verification	Disable Enable	00 01*

 *OAC* Check-sum transmission	Disable Enable	00 01*
 *OAP* Truncate leading	0-15	00-15 00*
 *OAG* Truncate ending	0-15	00-15 00*
 *OAH* Code ID setting	00-ffH ASCII code	00-ffH < E >*



Exit

UPCE

Insertion group selection: Refer to Insertion group selection of UPCA.

Supplement digits:

Format

Leading Zero	Data Digits (6 Digits)	Check Digit	Supplement Digits 2 or 5 or UCC/EAN 128
--------------	------------------------	-------------	---

Expansion: The expansion function is used only for UPCE and EAN-8 code reading. It extends to 13-digits with “0” digits when the feature is enabled.

Example: Barcode “0123654”

Output: “0012360000057”






UPCE-1: To enable scanner to read UPCE with leading digit

1.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Insert group selection	00-44	00-44 00*
 Supplement digits (For 8110/8150/8210)	None 2 digits 5 digits UCC/EAN 128 Auto detection	00* 01 02 03 04

 Supplement digits (For 8310/8312)	None 2 digits 5 digits 2,5 digits UCC/EAN 128 2, UCC/EAN 128 5, UCC/EAN 128 All	00* 01 02 03 04 05 06 07
 Truncation/Expansion (For 8110/8210)	Disable Enable	00* 01
 Truncation/Expansion (For 8150/8310/8312)	None Truncate leading zero Expand to EAN13 Expand to UPCA	00* 01 02 03
 Expansion	Disable Enable	00* 01
 UPCE-1	Disable Enable	00* 01



Exit

EAN-13

Read: Format

Data Digits (12 Digits)	Check Digits
-------------------------	--------------

Check-sum verification: The checksum of EAN-13 is optional and made as the sum of the numerical value of the data digits.

Check-sum transmission: By setting **Enable**, checks sum will be transmitted.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Read	Disable Enable	00 01*
 Check-sum verification	Disable Enable	00 01*
 Check-sum transmission	Disable Enable	00 01*

 *GAP* Truncate leading	0-15	00-15 00*
 *GAG* Truncate ending	0-15	00-15 00*



Exit

EAN-13

Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.

Supplement digits:

Format

Data Digits (12 Digits)	Check Digits	Supplement Digits 2 or 5 or UCC / EAN 128
----------------------------	-----------------	---

ISBN/ISSN: The ISBN (International Standard Book Number) and ISSN (International Standard Serial Number) are two kinds of barcode for book and magazines. The ISBN is 10 digits with leading “978” and the ISSN is 8 digits with leading “977” of the “EAN-13” symbology.




Example: Barcode “9789572222720” - Output: “9572222724”

Example: Barcode “9771019248004” - Output: “10192484”



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Code ID setting	00-ffH ASCII code	00-ffH < F >*
 Insert group selection	00-44	00-44 00*

 *GAJ* Supplement digits (For 8110/8150/8210)	None 2 digits 5 digits UCC/EAN 128 Auto detection	00* 01 02 03 04
 *GAJ* Supplement digits (For 8310/8312)	None 2 digits 5 digits 2,5 digits UCC/EAN 128 2, UCC/EAN 128 5, UCC/EAN 128 All	00* 01 02 03 04 05 06 07
 *GAL* ISBN/ISSN conversion	Disable Enable	00* 01



Exit

EAN-8

Read: Format

Data Digits (7 Digits)	Check Digits
---------------------------	-----------------

Check-sum verification: The checksum of EAN-8 is optional and made as the sum of the numerical value of the data digits.

Check-sum transmission: By setting **Enable**, checks sum will be transmitted.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.






Insertion group selection: Refer to Insertion group selection of UPCA.



\$%+PRO

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
<p>*FAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00</p> <p>01*</p>
<p>*FAB*</p> <p>Check-sum verification</p>	<p>Disable</p> <p>Enable</p>	<p>00</p> <p>01*</p>

 Check-sum transmission	Disable Enable	00 01*
 Truncate leading	0-15	00-15 00*
 Truncate ending	0-15	00-15 00*
 Code ID setting	Two characters 00-ffH ASCII code	00-ffH, 00-ffH < FF >*
 Insert group selection	00-44	00-44 00*



Exit

EAN-8

Supplement digits: Format

Data Digits (7 Digits)	Check Digits	Supplement Digits 2 or 5 or UCC/EAN 128
---------------------------	-----------------	---




Truncation / Expansion: Refer to Truncate Leading zero of UPCE.

Expansion: Refer to Expansion of UPCE.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Supplement digits (For 8110/ 8150/8210)	None	00*
	2 digits	01
	5 digits	02
	UCC/EAN 128	03
	Auto detection	04
	 Supplement digits (For 8310/8312)	None
2 digits		01
5 digits		02
2,5 digits		03
UCC/EAN 128		04
2, UCC/EAN 128		05
5, UCC/EAN 128		06
All		07

 *FAK* Truncation / Expansion (For 8110/8210)	Disable Enable	00* 01
 *FAK* Truncation / Expansion (For 8150 /8310/8312)	None Truncate leading zero Expand to EAN13	00* 01 02
 *FAL* Expansion	Disable Enable	00* 01



Exit

Code 39

Read: Format

Start “ ”	Data Digits (Variable)	Checksum (Optional)	End “ ”
--------------	----------------------------	------------------------	------------

Check-sum verification: The checksum of Code-39 is optional and made as the sum module 43 of the numerical value of the data digits.

Check-sum transmission: By setting Enable, checksum will be transmitted.

Max./Min. code length: Each symbology has own Max./Min. Code Length. They can be set to qualify data entry. If their Max./Min. Code Length is zero, the Global Min./Max. Code Length is in effect. The length is defined as to the actual barcode data length to be sent. Label with length exceeds these limits will be rejected. Make sure that the Minimum length setting is no greater than the Maximum length setting, or otherwise all the labels of the symbology will not be readable. In particular, you can see the same value for both Minimum and Maximum reading length to force the fixed length barcode decoded.








Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Max. code length	00-64	00-64 00*

 *BAA* Read	Disable Enable	00 01*
 *BAB* Check-sum verification	Disable Enable	00* 01
 *BAC* Check-sum transmission	Disable Enable	00* 01
 *BAE* Min. code length	00-64	00-64 00*
 *BAF* Truncate leading	0-20	00-20 00*
 *BAG* Truncate ending	0-15	00-15 00*
 *BAH* Code ID setting	00-ffH ASCII code	00-ffH <* >



Exit

Code 39

Insertion group selection: Refer to Insertion group selection of UPCA.

Format: The **Full ASCII** Code-39 is an enhanced set of Code-39 that is the data with total of 128 characters to represent **Full ASCII** code. It is combined one of the digits +, %, \$ and/ with one of the alpha digits (A to Z).



Append: This function allows several symbols to be concatenates and be treat as one single data entry. The scanner will not transmit the embedded appending code (space for Code-39). If **Enable** and other symbols were read again with the appended code, then codes will be transmitted without Code ID, Preamble and Prefix. When a symbol was decoded without the appended code, the data will be transmitted without Code ID and Prefix, but the Postamble Suffix codes are appended. This function is used when the first number of code 39 is a space. Example: 123456.

Start/end transmission: The start and end characters of Code-39 are “ ”. You can transmit all data digits including two “ ”.



Program

Option Bar Code	Option	Alphanumeric Entry
 Insert group selection	00-44	00-44 00*

 *BAJ* Format	Standard Full ASCII	00* 01
 *BAK* Append	Disable Enable	00* 01
 *BAM* Start/end transmission	Disable Enable	00* 01



Exit

Interleaved 2 of 5

Read: Format

Data Digits (Variable)	Checksum (Optional)
---------------------------	------------------------

Check-sum verification: The checksum is made as the sum module 10 of the numerical values of all data digits.

Check-sum transmission: By setting **Enable**, checksum will be transmitted.

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Read	Disable Enable	00 01*
 Check-sum verification	Disable Enable	00* 01

 * I A C * Check-sum transmission	Disable Enable	00* 01
 * I A D * Max. code leading	00-64	00-64 00*
 * I A B * Min. code leading	00-64	00-64 00*
 * I A P * Truncate leading	0-15	00-15 00*
 * I A G * Truncate ending	0-15	00-15 00*
 * I A H * Code ID setting	00-ffH ASCII code	00-ffH < i > *
 * I A I * Insert group selection	00-44	00-44 00*



Exit

Industrial 2 of 5

Read: Format

Data Digits (Variable)	Checksum (Optional)
---------------------------	------------------------

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.





Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 HAA Read	Disable Enable	00* 01
 HAD Max. code length	00-64	00-64 00*
 HAB Min. code length	00-64	00-64 00*

 Truncate leading	0-15	00-15 00*
 Truncate ending	0-15	00-15 00*
 Code ID setting	00-ffH ASCII code	00-ffH < i >*
 Insert group selection	00-44	00-44 00*



Exit

Matrix 2 of 5 Eur

Read: Format

Data Digits (Variable)	Checksum (Optional)
---------------------------	------------------------

Checksum Verification: The checksum is made as the sum module 10 of the numerical values of all data digits.

Checksum Transmission: By setting Enable, checksum will be transmitted.

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.





Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00* 01
 Checksum Verification	Disable Enable	00* 01

 *PAC* Checksum Transmission	Disable Enable	00* 01
 *PAD* Max. code length	00-64	00-64 00*
 *PAE* Min. code length	00-64	00-64 00*
 *PAF* Truncate leading	0-15	00-15 00*
 *PAG* Truncate ending	0-15	00-15 00*
 *PAH* Code ID setting	00-ffH ASCII code	00-ffH < B > *
 *PAI* Insert group selection	00-44	00- 44 00*



Exit

Codabar

Read: Format

Start	Data Digits (Variable)	Checksum (Optional)	End
-------	------------------------	---------------------	-----

Checksum Verification: The checksum is made as the sum module 16 of the numerical values of all data digits.

Checksum Transmission: By setting **Enable**, checksum will be transmitted.



Max./Min. code length: Refer to Max./Min. code length of Code-39.







Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable	00* (8150/8210 /8310/8312)
	Enable	01* (8110)
 Checksum Verification	Disable	00*
	Enable	01

 Checksum Transmission	Disable Enable	00* 01
 Max. code length	00-64	00-64 00*
 Min. code length	00-64	00-64 00*
 Truncate leading	0-15	00-15 00*
 Truncate ending	0-15	00-15 00*
 Code ID setting	00-ffH ASCII code	00-ffH < % >*



Exit

Codabar




Insertion group selection: Refer to Insertion group selection of UPCA.

Start/End type: The Codabar has four pairs of Start/End pattern; you may select one pair to match your application.

Start/End Transmission: Refer to Start/End Transmission of Code 39.



Program

Option Bar Code	Option	Alphanumeric Entry
 Insert group selection	00-44	00-44 00*
 Start/End type	ABCD/ABCD abcd/abcd ABCD/TN*E Abcd/tn*e	00* 01 02 03
 Start/End transmission	Disable Enable	00* 01



Exit

Code-128

Read: Format

Data Digits (Variable)	Checksum (Optional)
---------------------------	------------------------

Checksum Verification: The checksum is made as the sum module 103 of all data digits.

Checksum Transmission: By setting Enable, checksum will be transmitted.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00 01*
 Checksum Verification	Disable Enable	00 01*
 Checksum Transmission	Disable Enable	00* 01



Exit

Code-128

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.






Format: The Code-128 can be translated to UCC/EAN-128 format if it starts with FNC1 character. The first FNC1 will be translated to "J C1", and next to be a field separator code as <GS>(1D16).

J C1	Data	<GS>	Data	Checksum
------	------	------	------	----------



Program

Option Bar Code	Option	Alphanumeric Entry
 Max. code length	00-64	00-64 00*
 Min. code length	00-64	00-64 00*

 Truncate leading	0-15	00-15 00*
 Truncate ending	0-15	00-15 00*
 Code ID setting	00-ffH ASCII code	00-ffH < # >*
 Insert group selection	00-44	00-44 00*
 Format	Standard UCC/EAN-128	00* 01



Exit

Code-128




Append: When the function is enabled, it won't show the data immediately if scanner read the barcode includes FNC2 code. It will show all data until it read the barcode, which doesn't have FNC2 code.

UCC/ EAN 128 ID setting: To setting the code ID for UCC/EAN-128 output format.

Field separator code: This feature is only used for UCC/EAN-128 format. This Field separator code means you can reassign second or after a FNC1 for your usage. The default of ASCII code is <GS>(1D₁₆).



Program

Option Bar Code	Option	Alphanumeric Entry
 *DAK* Append	Disable Enable	00* 01
 *DAL* UCC/EAN-128 ID setting	00-ffH ASCII code	00-ffH < # > *
 *DAM* Field separator code	00-ffH ASCII code	00-ffH 1DH*



Exit

Code-93

Read: Format

Data Digits (Variable)	Checksum1 (Optional)	Checksum2 (Optional)
---------------------------	-------------------------	-------------------------

Checksum Verification: The checksum is made as the sum module 47 of the numerical values of all data digits.

Checksum Transmission: By setting Enable, checksum will be transmitted.



Program

Option Bar Code	Option	Alphanumeric Entry
 CAA Read	Disable Enable	00* 01
 CAB Checksum Verification	Disable Enable (two digits)	00 01*
 CAC Checksum Transmission	Disable Enable	00* 01



Exit

Code-93

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.





Code Id setting: Refer to Code ID setting of UPCA.



Insertion group selection: Refer to Insertion group selection of UPCA.



\$%+PRO

Program

Option Bar Code	Option	Alphanumeric Entry
 *CAD* Max. code length	00-64	00-64 00*
 *CAE* Min. code length	00-64	00-64 00*
 *CAF* Truncate leading	0-15	00-15 00*
 *CAG* Truncate ending	0-15	00-15 00*

 *CAH* Code ID setting	00-ffH ASCII code	00-ffH < & > *
 *CAI* Insert group selection	00-44	00-44 00*


Exit

Code-11

Read: Format

Data Digits (Variable)	Checksum1 (Optional)	Checksum2 (Optional)
---------------------------	-------------------------	-------------------------

Checksum Verification: The checksum is presented as the sum module 11 of all data digits.

Checksum Transmission: By setting **Enable**, checksum1 and checksum2 will be transmitted upon your selected checksum verification method.

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.







Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00* 01
 Checksum Verification	Disable One digit Two digits	00 01* 02

 * AAC * Checksum Transmission	Disable Enable	00* 01
 * AAD * Max. code length	00-64	00-64 00*
 * AAE * Min. code length	00-64	00-64 00*
 * AAF * Truncate leading	0-15	00-15 00*
 * AAG * Truncate ending	0-15	00-15 00*
 * AAH * Code ID setting	00-ffH ASCII code	00-ffH < O > *
 * AAI * Insert group selection	00-44	00-44 00*



Exit

MSI/plessey

Read: Format

Data Digits (Variable)	Checksum1 (Optional)	Checksum2 (Optional)
---------------------------	-------------------------	-------------------------

Checksum Verification: The MSI/Plessey has one or two optional checksum digits. The checksum is presented 3 kinds of method **Mod10**, **Mod10/10** and **Mod 11/10**. The checksum1 and checksum2 will be calculated as the sum module 10 or 11 of the data digits.

Checksum Transmission: By setting **Enable**, checksum1 and checksum2 will be transmitted upon your selected checksum verification method.

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.








Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable	00*
	Enable	01
 Checksum Verification	Disable	00* (8110)
	Mod 10	01* (8150/8210 /8310/8312)
	Mod 10/10	02

	Mod 11/10	03
 *KAC* Checksum Transmission	Disable Enable	00* 01
 *KAD* Max. code length	00-64	00-64 00*
 *KAE* Min. code length	00-64	00-64 00*
 *KAF* Truncate leading	0-15	00-15 00*
 *KAG* Truncate ending	0-15	00-15 00*
 *KAH* Code ID setting	00-ffH ASCII code	00-ffH < @ > *
 *KAI* Insert group selection	00-44	00-44 00*



UK/plessey

Read: Format

Data Digits (Variable)	Checksum1+2 (Optional)
---------------------------	---------------------------

Checksum Verification: The UK/Plessey has one or two optional checksum digits. The checksum1 and checksum2 will be calculated as the sum module 10 or 11 of the data digits.

Checksum Transmission: By setting Enable, checksum will be transmitted.

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.








Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00* 01
 Checksum Verification	Disable Enable	00 01*

 *LAC* Checksum Transmission	Disable Enable	00* 01
 *LAD* Max. code length	00-64	00-64 00*
 *LAB* Min. code length	00-64	00-64 00*
 *LAF* Truncate leading	0-15	00-15 00*
 *LAG* Truncate ending	0-15	00-15 00*
 *LAH* Code ID setting	00-ffH ASCII code	00-ffH < @ > *
 *LAI* Insert group selection	00-44	00-44 00*



Exit

Telepen

Read: IATA (International Air Transport Association).

Checksum Verification: The checksum is presented as the sum module 10 or 11 of the data digits.

Checksum Transmission: By setting Enable, checksum will be transmitted.

Max./Min. code length: Refer to Max./Min. code length of Code-39.




Truncate leading/ending: Refer to Truncate leading/ending of UPCA.








Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00* 01
 Checksum Verification	Disable Enable	00* 01
 Checksum Transmission	Disable Enable	00* 01

 Max. code length	00-64	00-64 00*
 Min. code length	00-64	00-64 00*
 Truncate leading	0-15	00-15 00*
 Truncate ending	0-15	00-15 00*
 Code ID setting	00-ffH ASCII code	00-ffH < S >*
 Insert group selection	00-44	00-44 00*
 Format	Numeric only Full ASCII only	00* 01



Exit

Standard 2 of 5

Read: Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

Check-sum verification: The checksum is made as the sum module 10 of the numerical values of all data digits.

Check-sum transmission: By setting **Enable**, checksum will be transmitted.

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00* 01
 Check-sum verification	Disable Enable	00* 01

 *JAC* Check-sum transmission	Disable Enable	00* 01
 *JAD* Max. code length	00-64	00-64 00*
 *JAE* Min. code length	00-64	00-64 00*
 *JAF* Truncate leading	0-15	00-15 00*
 *JAG* Truncate ending	0-15	00-15 00*
 *JAH* Code ID setting	00-ffH ASCII code	00-ffH < i > *
 *JAI* Insert group selection	00-44	00-44 00*



Exit

China Post

Read: Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.





Insertion group selection: Refer to Insertion group selection of UPCA.



\$%+PRO

Program

Option Bar Code	Option	Alphanumeric Entry
<p>*SAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00*</p> <p>01</p>
<p>*SAD*</p> <p>Max. code length</p>	<p>00-64</p>	<p>00-64</p> <p>11*</p>
<p>*SAE*</p> <p>Min. code length</p>	<p>00-64</p>	<p>00-64</p> <p>11*</p>

 Truncate leading	0-15	00-15 00*
 Truncate ending	0-15	00-15 00*
 Code ID setting	00-ffH ASCII code	00-ffH < t >*
 Insert group selection	00-44	01-44 00*



Exit

Italian Pharmacode

Read: Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

Max./Min. code length: Refer to Max./Min. code length of Code-39.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.



Insertion group selection: Refer to Insertion group selection of UPCA.







Leading “A”: If this function is enabled, each prefix of data shall be A.



S%+PRO

Program

Option Bar Code	Option	Alphanumeric Entry
 *WAA* Read	Disable Enable	00* 01
 *WAD* Max. code length	00-64	00-64 12*

 *WAE* Min. code length	00-64	00-64 09*
 *WAF* Truncate leading	0-15	00-15 00*
 *WAG* Truncate ending	0-15	00-15 00*
 *WAH* Code ID setting	00-ffH ASCII code	01-ffH < p >*
 *WAI* Insert group selection	00-44	00-44 00*
 *WAJ* Leading "A"	Disable Enable	00* 01



Exit

Code-16K

Only the 8210 / 8312 can decode Code-16K.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.

Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



\$%+PRO

Program

Option Bar Code	Option	Alphanumeric Entry
<p>*RAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00*</p> <p>01</p>
<p>*RAF*</p> <p>Truncate leading</p>	<p>0-15</p>	<p>00-15</p> <p>00*</p>
<p>*RAG*</p> <p>Truncate ending</p>	<p>0-15</p>	<p>00-15</p> <p>00*</p>
<p>*RAH*</p> <p>Code ID setting</p>	<p>00-ffH ASCII code</p>	<p>00-ffH</p> <p>< >*</p>
<p>*RAI*</p> <p>Insert group selection</p>	<p>00-44</p>	<p>00-44</p> <p>00*</p>



%\$\$

PDF-417




Only the 8512 can decode PDF-417.

Truncate leading/ending: Refer to Truncate leading/ending of UPCA.



\$%+PRO

Program

Option Bar Code	Option	Alphanumeric Entry
 *QAA* Read	Disable Enable	00 01*
 *QAP* Truncate leading	0-15	00-15 00*
 *QAG* Truncate ending	0-15	00-15 00*



%\$\$

Exit

PDF-417

Only the 8512 can decode PDF-417.




Code Id setting: Refer to Code ID setting of UPCA.

Insertion group selection: Refer to Insertion group selection of UPCA.



\$%+PRO

Program

Option Bar Code	Option	Alphanumeric Entry
 *QAH* Code ID setting	00-ffH ASCII code	00-ffH < >*
 *QAI* Insert group selection	00-44	00-44 00*
 *QAJ* Escape sequence transmit	Disable Enable	00* 01



%\$\$

Exit

String setting

Prefix characters: Up to 22 ASCII characters may be sent before data digits.



Prefix	Data Digits	Suffix
--------	-------------	--------

Suffix characters: Up to 22 ASCII characters may be sent after data digits.



\$%+PRO

Program

Option Bar Code	Option	Alphanumeric Entry
 *8AA* Prefix characters setting	None 1-22 characters	00* 00-ffH ASCII code
 *8AB* Suffix characters setting	None 1-22 characters	0D* 00-ffH ASCII code



%\$\$

Exit

String setting

Preamble/ Postamble characters: They are appended to the data automatically when each barcode is decoded.

Example:

Add a prefix/suffix or preamble/postamble for all symbologies. In this example, you are sending a \$ symbol as a prefix for all symbologies.

Steps:

- 1) Scan **Programming** and **Prefix characters setting** barcode.
- 2) Use the ASCII code table to find the value of \$ 24.
- 3) Scan **2** and **4** from the barcode on the fold out back page.
- 4) Scan **Finish** from the barcode on the fold out page.
- 5) Scan **Exit** barcode.

Insert G1/G2/G3/G4 character setting: The scanner offer 4 positions and 4 characters to insert among the symbol.

Example: Barcode "1 2 3 4 5 6".

Output- Barcode "1 2 A B 3 4 C D 5 6".







Steps:

- 1) Scan **Programming** and **Insert G1 characters setting** barcode.
- 2) Use the ASCII code table to find the value of A 41, B 42.
- 3) Scan **4, 1** and **4, 2** from the barcode on the fold out back page.
- 4) Scan **Finish** from the barcode on the fold out page.
- 5) Repeat the same procedure in **Insert G2 characters setting**.
- 6) Scan **Exit** barcode.
- 7) Insert data group 1-4 position. Please refer to Chapter- Transmission, page 65 and in specific barcode that you want to use.



Program

Option Bar Code	Option	Alphanumeric Entry
-----------------	--------	--------------------

 *8AC* Preamble characters setting	None 1-22 characters	00* 00-ffH ASCII code
 *8AD* Postamble characters setting	None 1-22 characters	00* 00-ffH ASCII code
 *8AE* Insert G1 characters setting	None 1-22 characters	00* 00-ffH ASCII code
 *8AF* Insert G2 characters setting	None 1-22 characters	00* 00-ffH ASCII code
 *8AG* Insert G3 characters setting	None 1-22 characters	00* 00-ffH ASCII code
 *8AH* Insert G4 characters setting	None 1-22 characters	00* 00-ffH ASCII code



Transmission

Preamble transmission: By setting **Enable**, Preamble will be appended before the data transmitted.



Postamble transmission: By setting **Enable**, Postamble will be appended after the data is transmitted.


Insert data group 1-4 position: The scanner offers 4 positions to insert among the symbol. The position default value is "00" to indicate no character insertion. Beside, make sure insertion positions are not greater than the symbols; otherwise the insertion data is not effective.

Code ID position: Upon your usage, the transmitting position of Code ID can be selected to place **Before Code Data** or **After Code Data** when it is transmitted.



Program

Option Bar Code	Option	Alphanumeric Entry
 *6AA* Preamble transmission	Disable Enable	00* 01
 *6AB* Postamble transmission	Disable Enable	00* 01

 *6AC* Insert data group 1 position	00-63 (00: no insertion)	00-63 00*
 *6AD* Insert data group 2 position	00-63 (00: no insertion)	00-63 00*
 *6AE* Insert data group 3 position	00-63 (00: no insertion)	00-63 00*
 *6AF* Insert data group 4 position	00-63 (00: no insertion)	00-63 00*
 *6AG* Code ID position	Before code data After code data	00* 01



Exit

Transmission

Code ID transmission: If your application is needed to transmit Code ID, you must set this to Proprietary ID or AIM ID.


Code length transmission: A number of data digits can be transmitted before the code data when **Enable** is selected. The total length of the barcode is the number of barcode data except Truncate Leading/Ending Digits. And the length is a number with two digits.




Code name transmission: This function is to show unknown barcode symbologies that include all readable symbologies of the scanner. When Enable is selected, Code Name will be transmitted before code data, you will know what kind of barcode symbology is.

Case conversion: Under the barcode, you can set the alphabet in either upper case or lower case.



Program

Option Bar Code	Option	Alphanumeric Entry
	Disable	00*
Code ID	Proprietary ID	01
transmission	AIM ID	02


 *6AI* Code length transmission	Disable Enable	00* 01
 *6AJ* Code name transmission	Disable Enable	00* 01
 *6AK* Case conversion	Disable Upper case Lower case *For barcode data only	00* 01 02



Exit

Format of barcode data transmission:

Prefix	Name	Preamble	ID	Code Length	Barcode data	ID	Postamble	Suffix
--------	------	----------	----	-------------	--------------	----	-----------	--------

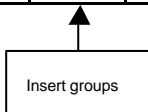

Test Chart

CODABAR-PARA



a154987a

CODE-11 PARA



654215

CODE-128 PARA



258963

CODE-39 PARA



741258

CODE-93 PARA



951263

EAN-13 PARA



7 534539 789813

PDF-417



STANDRAD-25 PARA



65978

CODE-16K



87549

EAN-8 PARA




9456 2156

INDUSTRIAL-25 PARA



04976

UPCE PARA

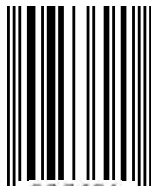

0 095601 1

INTERLEAVED-25 PARA



MATRIX 25 PARA



MSI/PLESSEY PARA



UPCA PARA



UK/PLESSEY PARA



RSS



Micro-PDF



ASCII Code Table

Note:  For keyboard wedge only.

L \ H	0	1	0	1
0	Null		NUL	DLE
1	Up	F1	SOH	DC1
2	Down	F2	STX	DC2
3	Left	F3	ETX	DC3
4	Right	F4	EOT	DC4
5	PgUp	F5	ENQ	NAK
6	PgDn	F6	ACK	SYN
7		F7	BEL	ETB
8	Bs	F8	BS	CAN
9	Tab	F9	HT	EM
A		F10	LF	SUB
B	Home	Esc	VT	ESC
C	End	F11	FF	FS
D	Enter	F12	CR	GS
E	Insert	Ctrl+	SO	RS
F	Delete	Alt+	SI	US

L \ H	2	3	4	5	6	7
0	SP	0	@	P	`	p
1	!	1	A	Q	a	q
2	"	2	B	R	b	r
3	#	3	C	S	c	s
4	\$	4	D	T	d	t
5	%	5	E	U	e	u
6	&	6	F	V	f	v
7	'	7	G	W	g	w
8	(8	H	X	h	x
9)	9	I	Y	i	y
A		:	J	Z	j	z
B	+	;	K	[k	?
C	?	<	L	?	l	?
D	-	=	M]	m	?
E	.	>	N	^	n	?
F	/	?	O	_	o	DEL

Parameter Setting List



\$%+PRO

Program



!BS

Barcode standard parameter setting list

If you wish to display the current configuration of your AS-8110/8150/8210/8310, scanner over the host terminal/computer, scan the Barcode standard parameter setting list bar code.



!BU

Unique parameter list

If you wish to display the unique parameter setting list, scan the unique parameter list bar code



!SY

System parameter setting list

If you wish to display the product information and revision number for your AS-8110/8150/8210/8310 scanner over the host terminal/computer, scan the System parameter setting list bar code.



!ST

String setting list

If you wish to display the string format list, scan the String setting list bar code.



!VR

Firmware version list

If you wish to display the firmware version, scan the Firmware version list.



!IN

WARNING: Default value initialization

If you wish to return the AS-8110/8150/8210/8310 to all the factory default settings, scan the Default value initialization bar code.



%SS

Exit



0

0



1

1



2

2



3

3



4

4



5

5



6

6



7

7



8

8



9

9



A

A



B

B



C

C



D

D



E

E



F

F



%%*

Finish

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement

For cradle

This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

For scanner

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

OPERATION MANUAL

Interface: Please link the applicable interface cable to the PC and the Cradle

POWER: plug in via the Cradle (First link the interface cable to the PC and the Cradle, then switch on the Cradle)

Application: Receiving the code by using the subsidiary application pattern terminating machine (38400-N-8-1).

Connection: After the Scanner Scan the code on the Test Chart, it will then implement the connection of the Cradle. In the meantime,

Scanner: The yellow light glitter means on line. After connected, it will beep three times. Afterwards, it will deliver the code to the PC. If the transmission failed, the red light will be on and beep twice meaning failed.

Cradle: Before linking with the Scanner, the yellow light in on. After linked, the light will turn green.

CHARGE:

Put the Scanner on the Cradle to charge.

The green light is glitter while in charge. After completed charging the light will stay green.

A PARAMETER:

Please refer to the way of parameter settlement.

Table 1: Cradle LED status

	Cradle Power LED
Unlink	The yellow light on
Linking	The green light on
Busy receiving data	The yellow light glitter
Into parameter mode	The green light glitter

	Cradle charger LED
Not in charge	LED off
In charging	The green light glitter
Completing charging	The green light glitter

Table 2: Scanner LED status

	Scanner LED	Beep
Scanner not working	LED Off (Sleep mode)	--
On line	The yellow light glittering	--
Data deliver success	The green light glittering	One short beep
Data deliver failed		One short and one long beeps
Scanner low pressure warning while scanning	The red light glittering	

根據交通部低功率管理辦法規定：

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信規定作業之無線電信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。