





## Your phone





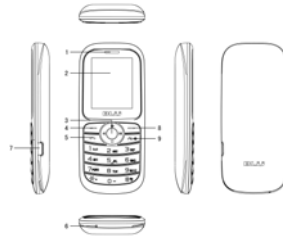

1. Earpiece
2. Screen
3. Navigation keys
4. Left soft key
5. Call/Answer key
6. MIC
7. Charger jack
8. Right soft key
9. End/Power key



## Keys and Functions

Press...	To...
	<ul style="list-style-type: none"><li>• Make a call, Answer a call.</li><li>• Access <b>Dialed calls</b> in standby mode.</li></ul>
	<ul style="list-style-type: none"><li>• Power the phone on or off (by pressing and holding the key for about 3s).</li><li>• End or reject a call.</li><li>• Return to the standby mode.</li></ul>
	<ul style="list-style-type: none"><li>• Access <b>Menu</b> in standby mode.</li><li>• Select a highlighted item.</li></ul>


## Guía del Usuario








Press...	To...
	<ul style="list-style-type: none"><li>• Access <b>Contacts</b> in standby mode.</li><li>• Return to the previous menu.</li></ul>
	<ul style="list-style-type: none"><li>• Press "Middle" to access the phone book</li><li>• Choose the options in the function list.</li></ul>
 	<ul style="list-style-type: none"><li>• Enter numbers, letters, and symbols.</li><li>• Call the voicemail in standby mode (by pressing and holding the <b>1</b> key for about 3s).</li><li>• Speed-dial phone numbers in standby mode (by pressing and holding the desired key <b>2-9</b> for about 3s).</li><li>• Select a submenu item labeled with the corresponding number.</li></ul>

## Guía del Usuario



Press...	To...
	<ul style="list-style-type: none"><li>• Switch the mode between the General and Silent mode (by pressing and holding the key for about 3s).</li><li>• Enter #</li></ul>
	<ul style="list-style-type: none"><li>• Unlock the keypad lock</li></ul>



If the phone cannot be powered on after you press and hold , the battery may run out of power. In that case, charge the phone for about five minutes (during this period, the charging icon may not be displayed on the screen), and then power on the phone again.

Screen Icons	
Icon	Indicates...
	Signal strength.
	New text messages.
	Alarms enabled.
	Battery power level.
	<b>Standard</b> profile activated.
	<b>Meeting</b> profile activated.
	<b>Outdoor</b> profile activated.

## Guía del Usuario

	Headset status
	Missed calls.

### Installing the SIM Card

Before installing the Subscriber Identification Module (SIM) card, ensure that your phone is powered off. When inserting the SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.



---

**Removing the SIM Card**

Before removing the SIM card, ensure that your phone is powered off.



If the phone does not work properly or if crashes occur, you can press and hold the battery reset button on the right side of the SIM card slot until the phone is powered on again.



### Charging the Battery

To charge the battery, do the following:

1. Connect the charger to an alternating current (AC) power socket.
2. Connect the charger to the charger jack on the phone.
3. Wait until the battery is completely charged.

When the battery is being charged, an animated charging icon is displayed on the screen. When the charging icon becomes static, the battery is fully charged.

4. Disconnect the charger from the phone.
5. Disconnect the charger from the AC power socket.

**Warning:**

(1) There may be the risk of explosion if the battery is replaced by the wrong type.

(2) Dispose of used batteries according to the guidelines.

### **Charging**

To plug in the power charger, the charger cable plug at the bottom of the Mobile Phone

Note:

1. It is beneficial to the battery to charge it until full at the first three times.
2. When charging, don't remove or take out off the battery to avoid the battery circuit to burn out.
3. While charging, it is normal that the Mobile Phone and charger will become hot.
4. If the battery is completely empty, it may take a period of time before








the charging icon appears on the display.

Warning: Provides charging temperature range  $-5^{\circ}\text{C}$  to  $55^{\circ}\text{C}$ , over this range, please do not use the charging equipment. And be sure to use the charger provided by the supplier. Use of an unapproved charger may be dangerous and breach of warranty of the equipment approval and terms.





Notice:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

### Working with the Function Menus




1. In standby menu, press left soft key  to enter the **Menu**.
2. Press  to select the desired function menu.
3. Press  or  (**Select**) to access the selected menu.
4. Select a submenu in either of the following ways:  
Press Left /Soft on the direction key to choose the desired submenu.
5. Press left soft key  (**Select**) to display the submenu.
6. Press right soft key  (**Back**) to return to the previous menu or exit the function menu.  
To return directly to the standby mode, press .



## Making a Call

1. In standby mode, enter the phone number.  
To make an international call, press and hold  to enter the plus sign (+), and then enter the country code or region code, area code, and phone number in sequence.  
To dial an extension number, enter the phone number, press a **P**, and then enter the extension number.
  2. Press  to dial the number.
  3. Press  to end the call.
-  1. You can also make a call from call logs, contacts, and messages.  
2. During a call, press up /down on the direction key to adjust the volume.

### Answering a Call

When there is an incoming call, you can do the following:

- Press  to answer it.
- Press  (**Options**), and then select **Accept** to answer it.
- Press  to reject it.

If the **Any key answer** function is enabled, you can press any key except  and  to answer a call.

### Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**1122**) into any numeric string of four to eight digits.


If you forget the phone code, contact your service provider.

### **PIN and PUK**

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks a blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, consult your service provider.

If you enter an incorrect PIN a pre-defined number of consecutive times, the phone prompts you to enter the PUK. If you enter an incorrect PUK a pre-defined number of consecutive times, the SIM card becomes permanently invalid. In that case, contact your service provider for a new SIM card.


### Locking the Keypad

To lock the keypad, press left soft key and  in standby mode for about 3s.

Unlock the keypad, press left soft key and  again in succession.

If the **keypad lock** function is enabled and if the phone is in standby mode for a preset period, the phone locks the keypad automatically.



When the keypad is locked, you can press  to answer a call or make an emergency call.




### Changing the Text Input Modes


The indicator of the current text input mode is displayed in the upper left corner of the screen. You can press options to change the text input mode.

Indicator	Text Input Mode
<b>es</b>	Multi-tap input mode
<b>Abc,abc,ABC</b>	ABC input mode
<b>123</b>	Number input mode



You can press right soft key  (**Clear**) once to delete the last entered character. You can also press and hold right soft key (**Clear**) for about 3s to delete all the entered characters at once.

### Entering a Digit







- In "123" input mode, directly press the number key labeled with the desired digit.
- In multi-tap input mode, press  and enter the number key.

### Video player

Select Multimedia/Video player item in main menu to enter the interface. Press "Option" to play, send, rename, delete, and delete all the files, sort by, and storage location of the operation, help.

### Audio player


Select Multimedia/audio player item in main menu to enter audio player interface. In playing interface, press "List" to enter the list of song, then press "option" to Play, Details, Add to ringtones, Refresh List and Settings.

- To start playing, press  , To pause the playing, press 
- To adjust the volume level, use   key
- To skip to the next song, press 
- To skip to the previous song, press 
- To close the audio player menu and to continue the playback in the background, press the red key on the phone.

### FM Radio

The headset cable functions as an antenna as well. To ensure good reception of radio programs, do not disconnect the headset from the phone or severely bend the headset cable.

To use the FM radio, do the following:

1. Connect a compatible headset to the phone.
2. Select **Menu > Multimedia > FM radio** to launch the FM radio.
3. On the **FM radio** screen, you can do as follows:
  - Press right on the direction key to change the channels.
  - Press down key on the direction key to plug the earphone on or off.
  - Press Up/Down direction key to adjust the volume.
  - Press  (**Options**) to view or set the channel list, search for channels, set a frequency, change the Radio Data System (RDS), or turn off the FM

radio.

### Sound Recorder

Access this menu, it will display the saved files in the list.

Press "option", and the sub menu is:

- Record: begin to record.
- Play: begin to play the selected record file.
- Append: add record to the selected file which should be AMR file.
- Rename: rename the selected file.
- Delete: delete the selected file.
- Delete all files: delete all the record files in the list.
- Settings: set storage and format.
- Use: could be the currently selected audio file, use the User profiles.

- Send: Send the selected record file to MMS and Bluetooth.

### **Warnings and Precautions**

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

#### **Electronic Device**

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

#### **Medical Device**

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

### **Potentially Explosive Atmosphere**

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas

could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

### **Traffic Security**

---



## ***Guía del Usuario***

---

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device

before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

### **Operating Environment**

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.

- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

### **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk

of damage to hearing, lower the headset volume to a safe and comfortable level.

### **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

### **Accessories**

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any

approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

### **Battery and Charger**

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be

short-circuited and may cause injuries and burns on your body.

- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it

may lead to an electric shock, a short circuit of the charger, or a fire.

- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

### **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the

user.

- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the



device.

- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

### **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

### **Certification Information (SAR)**

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of

measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.942 W/kg and when worn on the body, as

---

## ***Guía del Usuario***

described in this user guide, is 0.448 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on FCC ID: YHLBLULINDYB.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

### **FCC Statement**

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## ***Guía del Usuario***

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

