
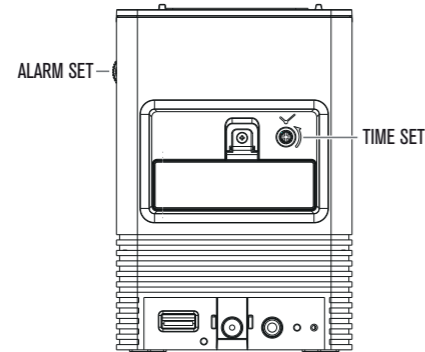


Size: 130x150 mm

SOUNDFREQ® Quick Start Guide **Sound Rise Classic**

Getting to know Sound Rise Classic

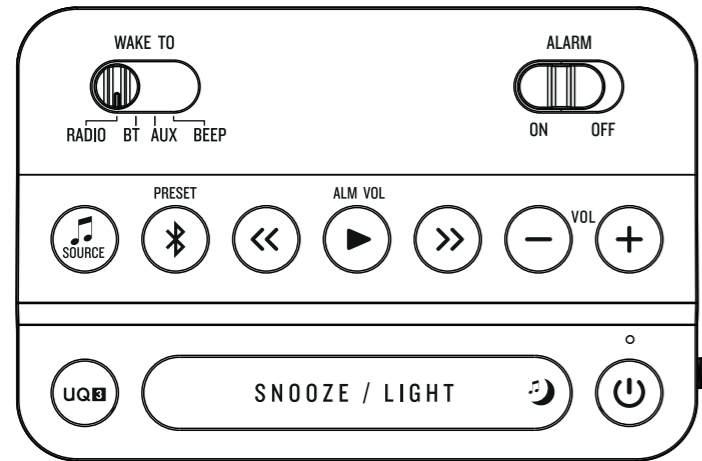


SOUNDFREQ® Quick Start Guide **Sound Rise Classic**



- OFF** Standby mode
- BT** Bluetooth mode
- FM 106.50 MHz** Radio mode
- AUX** Aux mode
- FM/MHz** FM/MHz Displayed when radio is on
- SLEEP** Indicates if Sleep timer is set
- Signal icon** Displayed during volume setting
Flashed when alarm goes off with BEEP sound
- Z** Displayed when alarm is snoozed
- Low battery icon** Displayed when backup battery is low

Setting the Time

Turn the **TIME SET** knob on the back of the unit in the direction of arrow until correct time is shown.

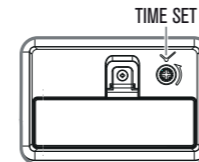

SOUNDFREQ® Quick Start Guide **Sound Rise Classic**

Setting the Alarm

- 1 Turn the **ALARM SET** knob on the side of the unit in the direction of arrow until the desired wakeup alarm time is shown.
- 2 Slide the **ALARM** switch to **ON** position to complete the alarm setting.
- 3 Slide the **WAKE TO** switch to select the alarm sound among **RADIO/BT/AUX/BEEP** modes.

Notes:

- To wake up to music from your phone or other devices, you must first pair Sound Rise Classic.
- To wake up to radio, you must first set the desired radio station.
- When waking up to Bluetooth or AUX IN, Sound Rise Classic will play the current song on your connected device. If your device is not available or not playing back when the alarm goes off, Sound Rise Classic will wake you with the built-in chime after a while.

Setting the Alarm Volume

The default alarm volume is set at maximum. To adjust your desired wakeup alarm volume level, you can





- 1 Press **POWER** button to switch off the unit first.
- 2 Press and hold **ALM VOL** button for 3 seconds to display the current alarm volume level.
- 3 Press "+/-" buttons to adjust to the desired alarm level.
- 4 Press **ALM VOL** button again to confirm.

Notes:

- It is recommended to set the alarm to a higher/maximum volume level on your device and on the clock radio. Please test the alarm sound level to make sure it is loud enough for waking up.
- Do not set the volume too low on your device for alarm wakeup purpose.

Using the Alarm


- 1 When the alarm goes off, slide the **ALARM** switch to turn the alarm off.
- 2 If you prefer to get some more sleep after the alarm goes off, press **SNOOZE / LIGHT** button while alarm is sounding. You can also press the **SNOOZE / LIGHT** button repeatedly to set the snooze duration to 10->20->5 minutes. The alarm sound will be temporarily paused and **Z** will be shown on the display. You can repeat snooze up to 12 times.

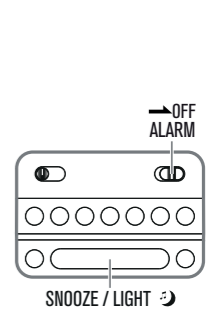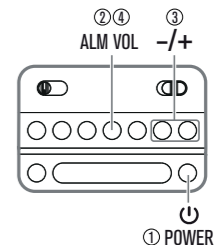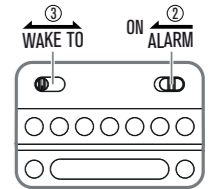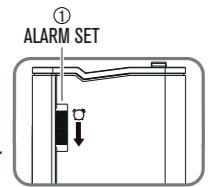

SOUNDFREQ® Quick Start Guide Sound Rise Classic


Using the Speaker

- 1 Plug in the power adaptor (included).
- 2 Insert 1x AA(1.5V) backup battery (included) observing the correct polarity and replace the battery cover.
- 3 Press the **POWER** button to turn the speaker on.
- 4 Press the **SOURCE** button repeatedly to select the audio sources. (The indication of audio source will display on the screen.)
 - FM Radio(FM)
 - Bluetooth(BT)
 - AUX IN(AUX)
- 5 Press "+/-" to set the volume.
- 6 Press the **POWER** button again to turn the audio off.

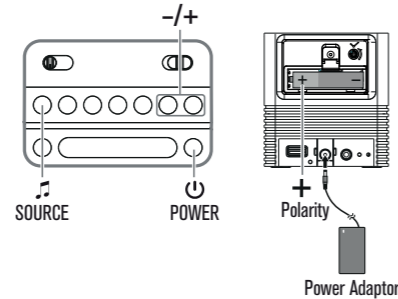


Using the Backlight

Press **SNOOZE / LIGHT** button to momentarily turn the light on the dial on for 5 seconds.

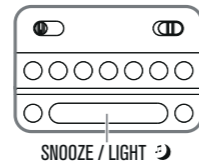

Bluetooth Pairing

- 1 Press the **POWER** button to turn on the unit.
- 2 Press the **SOURCE** button repeatedly until "BT" appears on the display to select Bluetooth mode.
- 3 Press **PAIR** on Sound Rise Classic to start pairing mode. The **BT** indication on Sound Rise Classic's display will flash rapidly.
- 4 On your phone, tablet or computer, open your Bluetooth setting menu to detect available devices. Tap to select "Sound Rise Classic" from the list of devices in Bluetooth settings. On most devices, no password is needed to pair, however, if a password is requested, the default password is "1234".

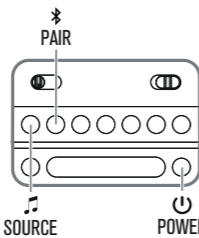


Notes: To pair another new device or disconnect a device that has already been paired, simply press and hold the **PAIR** button on Sound Rise Classic for 3 seconds and "BT" indication will flash rapidly again, and select "Sound Rise Classic" on your new device.

SOUNDFREQ® Quick Start Guide Sound Rise Classic


Listening via Bluetooth

- 1 Press the **POWER** button to turn on the unit.
- 2 Press the **SOURCE** button repeatedly until "BT" appears on the display to select Bluetooth mode.
- 3 You can change the volume by either using the volume buttons on the Sound Rise Classic or changing the volume on your paired device. For max volume, turn both volumes to maximum.
- 4 Use the Play Control buttons on Sound Rise Classic to remotely control your connected devices and to play, pause and skip tracks.

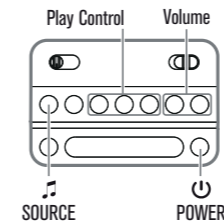

Listening with Radio

- 1 Extend the FM antenna on the back of the unit to full length.
- 2 Press the **POWER** button to turn on the unit.
- 3 Press the **SOURCE** button repeatedly until "FM" appears on the display to select Radio mode.
- 4 Press the <</> buttons to search a desired radio station for listening. (Long press <</> for station scanning.)

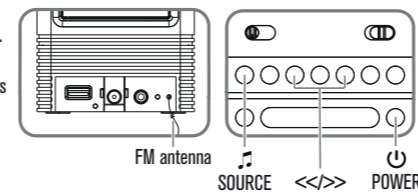


Programming Radio Presets

There are SIX radio presets to save your favorite FM stations. To save a preset:


- 1 Tune to the preferred station.
- 2 Press and hold the **PRESET** button. The preset number will flash "P01".
- 3 Press "+/-" to change the preset number.
- 4 Press **PRESET** button again to save the current station to the preset number selected.
- 5 To select a stored preset station to listen, press ▶ to walk through the stored stations.

Notes: Press **PRESET** button to toggle between the displaying preset station number and the preset station frequency.

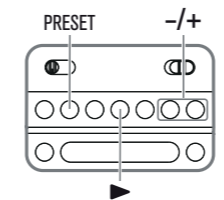


Listening with AUX In

- 1 Connect any device with a standard headphone jack using an Aux In cable (not included) to the AUX IN on the back of Sound Rise Classic.

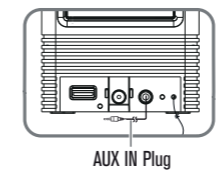

SOUNDFREQ® Quick Start Guide Sound Rise Classic


- 2 Press the **POWER** button to turn on the unit.
- 3 Press the **SOURCE** button repeatedly until "AUX" appears on the display to select Aux In mode.

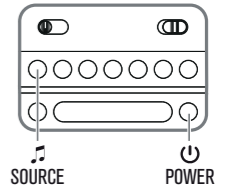

Using the Sleep Timer


Use **SNOOZE / LIGHT** button to set a timer to listen to music while falling asleep.

- 1 Press and hold the **SNOOZE / LIGHT** button for 3 seconds to enter sleep timer. Press repeatedly again to set the timer duration: 15, 30, 60, 90, 120, OFF.
- 2 The "SLEEP" icon will be shown on the display. Tap **SNOOZE / LIGHT** button will show the remaining time after sleep timer is activated.
- 3 To turn the sleep timer off, press and hold the **SNOOZE / LIGHT** button for 3 seconds and "SLEEP" icon will disappear.

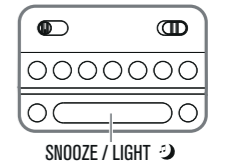

Charging an External Device


You can charge most phones as well as other USB chargeable devices directly from Sound Rise Classic. Simply connect your device to the USB Port on the back of Sound Rise Classic to begin charging.

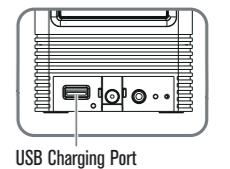

Notes: The maximum charging output of Sound Rise Classic is 5V / 1A.

Using UQ3 Sound Enhancement

Press the **UQ3** button to turn on/off the **UQ3** effect for music enjoyment. The "U ON" will display when **UQ3** is activated. Press **UQ3** button again to deactivate the effect.

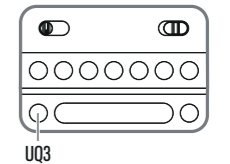

Replacing Battery

When the power of backup battery is low, the low battery indication will flash to indicate the alert of battery replacement. Please replace it immediately to avoid leakage of battery.

