



BS-9100 / BS-9100T

**Backsense®
CAN Radar Object Detection System**

Installation & Operating Guide

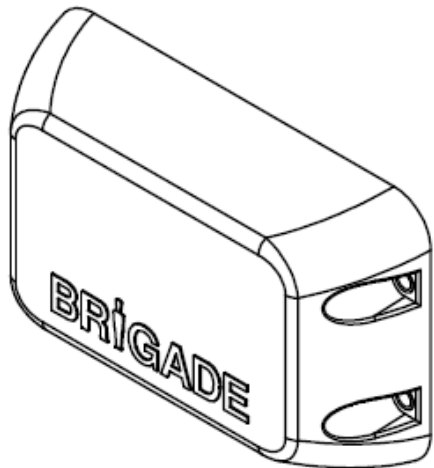


Table of Contents

1	Introduction	3
1.1	Detection Range	3
1.2	Object Detection Capability	3
2	Contents.....	7
2.1	Standard System Contents	7
2.2	Optional items (not included).....	7
3	Object Detection.....	8
3.1	Separate Object Detection	8
3.2	Detected Object Data	8
3.3	Detected Object Position Relative to Sensor	9
4	Hardware Installation.....	10
4.1	Recommended Network Layouts and Limitations	10
4.2	Good Network Arrangement.....	10
4.3	Example 2 (Good), host connection in middle of bus. Bad Network Arrangement ..	11
4.4	Test Site	11
4.5	Sensor Mounting and Location	11
4.6	Cable	12
4.7	Electrical Connections.....	13
4.8	Power Input.....	13
4.9	Recommended Fuse Values	14
5	CAN Bus	15
5.1	Network Parameters	15
5.2	Keep Alive Message	15
5.3	CANbus Base ID	15
5.4	Base ID Configuration	16
5.5	Configuration Message Structure and Examples	17
5.6	Addressing Strategy for Detected Object and Generated Messages.....	17
5.7	Detection Message	18
5.8	Sensor Start-up Messages	19
6	System Host.....	20
6.1	Host Responsibilities.....	20
7	Brigade Backsense CAN Radar Test Tool	21
7.1	PC Interface for BS-9100	21
7.2	PC System Requirements	21
7.3	CANpro – BS-9100 Network connection cable	21
7.4	Software Installation	22
7.5	Backsense CAN Radar Test Tool.....	25
7.6	Backsense Configuration Tool.....	27
7.7	System Errors	35
8	Testing and Maintenance	37
8.1	Operator Instructions.....	37
8.2	Maintenance and Testing	37
9	Specifications	39
10	Mounting Dimensions	41
11	Disclaimer	42

1 Introduction

Brigade's Backsense® uses FMCW (Frequency Modulated Continuous Wave) radar system technology and is designed to detect people and objects in blind spots, significantly reducing collisions. Backsense® detects both stationary and moving objects and works effectively in harsh environments with poor visibility including darkness, smoke, fog and dust.

The Brigade BS-9100 radar sensor features an internal CAN interface for network connectivity, allowing the user to link up to 8 sensors and a network host on a single CAN bus, enabling monitoring of multiple detection areas around the vehicle.

Each Backsense® BS-9100 sensor is capable of detecting and reporting data for up to 16 objects enabling a fully featured system (consisting of 8 sensors) to detect and report up to 128 separate objects.

To ensure the Backsense® system performs to the best of its ability, it is imperative that installation and commissioning is carried out by competent, trained technicians. The installer is responsible for the fitness for purpose of the overall system and must adhere to relevant regulations and legislation.

Operators of the vehicle to which the Brigade Backsense® System is fitted must be made fully aware of how to interpret the system so they will not be distracted by or rely completely on it. Distraction can cause collisions.

The system is intended as an aid only. The operator must still concentrate on operating the vehicle, obeying traffic and local regulations and continuing to use his/her own training, senses and other vehicle aids, such as mirrors, as if the system were not in place. Nothing removes the responsibility of the operator to operate the vehicle in a proper and lawful manner.

1.1 Detection Range

Model Name	Detection Length		Detection Width		Nominal Tolerance	
	[m]	[ft]	[m]	[ft]	[m]	[ft]
BS-9100	0 – 60	0 – 197	0 – 16	0 – 52	±0.25	±1

1.2 Object Detection Capability

Warning

- **There is no detection of objects or part of an object closer than approx. 0.3m to the sensor.**
- Object detection **between approx. 0.3m to 1.3m from the sensor requires a minimum relative speed** of around 2km/h between the object and sensor. The same requirements apply for re-detection of objects after a stationary condition.
- Brigade Backsense® radar beam angle has a 120° horizontal angle out to the maximum designated width and symmetrically perpendicular to the sensor front surface. The vertical angle is 12°.
- All dimensions for detection of objects are nominal and vary significantly depending on many parameters. For more details, see section "1.2.2 Factors Influencing the Detection of Objects".

- An object will cause a detection data transmission in less than 0.15 seconds (for moving objects) and 0.25 seconds (for static objects).
- After turning on power the system takes around 1 second to be active. There is no standby mode.


Notes:

- For distances below 1.3m (detection with relative speed only) or below 0.3m (no detection) the space covered in general by radar systems is very small. In this scenario, Backsense® may not be the most suitable solution and therefore Brigade recommends adding an additional or alternative detection system depending on the vehicle's application. For example, Brigade Backscan® based on ultrasonic sensing technology, offers superior detection at close ranges.
- Brigade Backsense® systems remain unaffected even when multiple sensors are operating in the same area or on the same vehicle. Proximity and overlapping detection areas cause no adverse effect on Backsense's detection properties.


Tip: Brigade Backsense® detection is generally better when there is relative speed between the sensor and the objects and when the direction of approach is perpendicular to the sensor front face.

1.2.1 Detection Pattern

1.2.1.1 Horizontal Pattern

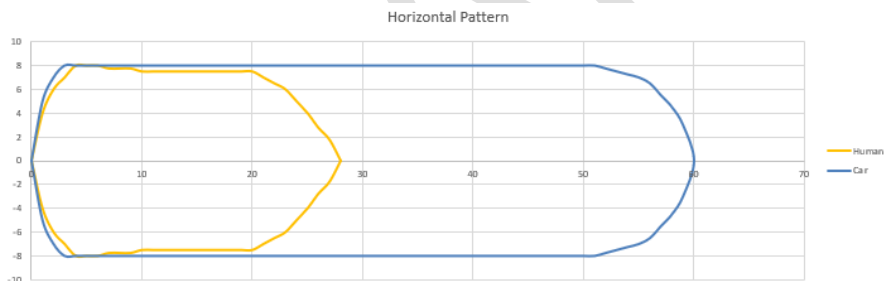

1.2.1.2 Vertical Detection Area

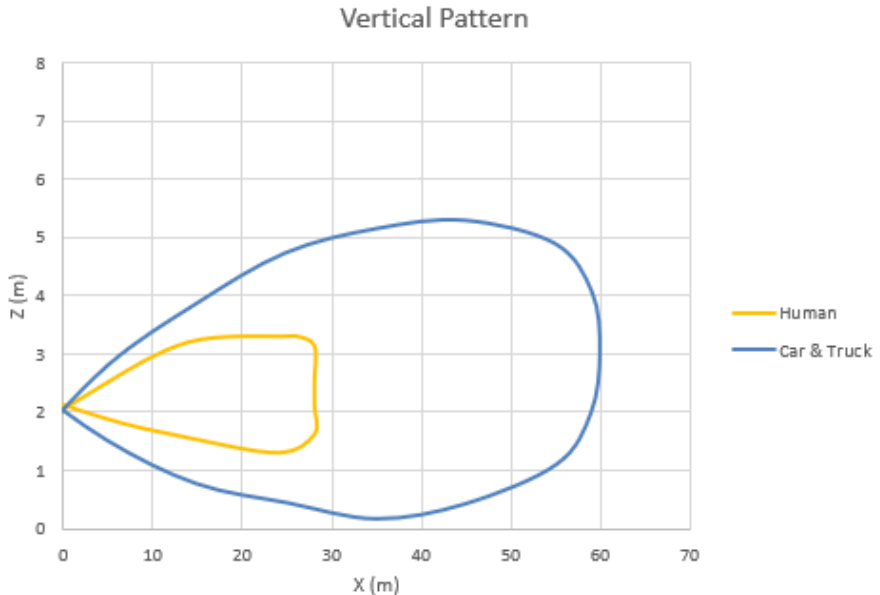

1.2.2 Factors Influencing the Detection of Objects

Brigade Backsense® shares in principle the advantages and limitations of all radar-based systems when compared to other sensing technologies. In general, it can reliably detect most objects in most environmental conditions such as dirt, dust, rain, snow, sun, fog, darkness, acoustic noise, mechanical vibration, electromagnetic noise or similar.

However, there are some occasions when an object could stay undetected. Radar works on the principle of line of sight and relies on some of the electromagnetic energy transmitted by the sensor being reflected from the object to the sensor. If an object does not reflect enough electromagnetic energy back to the sensor it will not be detected.

In the case where there are multiple objects in the detection area at various distances and/or angles, the sensor will detect up to 16 of the closest objects (based on radius), which are the most important for collision avoidance.

The object properties, location and direction are key influences in determining if an object is detected or not. The influencing factors are listed below.


- **Size:** Larger surfaces are detected better than smaller surfaces. If there are small and large objects in the detection area, the smaller object might only register in Detection Zones closer to the sensor.
- **Material:** Metal is detected better than non-metal materials, e.g. wood, plastic.
- **Surface:** A smooth and solid surface is detected better than rough, uneven, porous, fragmented or liquid surfaces, e.g. bushes, brick work, gravel, water.
- **Shape:** A flat object is better detected than a complex shape. Variation in relative location and direction can influence detection significantly.

- **Angle:** An object facing directly towards the sensor (perpendicular, orientation head on to the sensor) is detected better than an object that is located towards the edges of the detection area or at an angle.
- **Distance:** An object closer to the sensor is better detected than one that is further away.
- **Relative speed to sensor:** Detection is better if there is a relative speed between object and sensor.
- **Ground condition:** Objects on flat, mineral material ground are better detected than on rough or metal surfaces.
- **Environmental conditions:** Dense dust or very heavy rain or snowfall will reduce the detection capability.

DRAFT

2 Contents

2.1 Standard System Contents

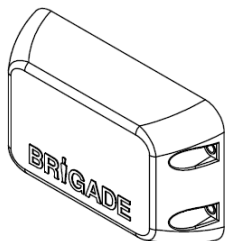


Sensor
BS-9100-S or BS-9100T-S




4x

Sensor Fixing Kit
BS-FIX-02


2.2 Optional items (not included)

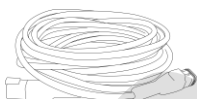


Extension Cables 2m, (6ft) 5m (16ft), 9m
(29ft) or 25m (82ft)
BS-02DCX BS-05DCX or BS-09DCX
BS-25DCSX

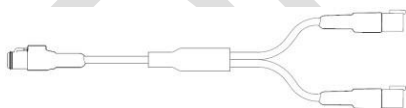

Network Y Cable
BS-00NYC

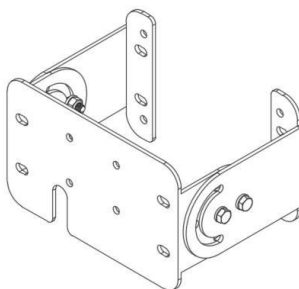

Adjustable Sensor Bracket
BKT-023

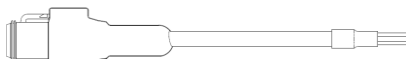

Network Power Input Cable
BS-02PIC



120Ω Network Terminator
BS-00NT

3 Object Detection

3.1 Separate Object Detection

Each Backsense® BS-9100 sensor is capable of detecting and reporting data for up to 16 objects within the limitations detailed in section 1.2. In the event that there are more than 16 objects within the detection area of a particular sensor, only the closest 16 detections will be reported, (based on object radius from sensor)

3.2 Detected Object Data


The BS-9100 will transmit data for each detected object in separate CAN messages. The following detection data will be reported:

Data Definition	Minimum Value	Maximum Value	Description
Polar Radius	0.25m	60.25m	Line of sight distance between object and sensor front face.
Polar Angle	-70° (Left)	+70° (Right)	Angle between object and sensor front face. Position perpendicular to the sensor represents 0°.
Co-ordinates X	0.25m	+60m	Object distance forward from front face of sensor.
Co-ordinates Y	-8m (left)	+8m (Right)	Object distance left or right of sensor position.
Relative Speed	-64KPH	+63.5KPH	Speed difference between sensor and object. Negative value indicates object approaching the sensor. Positive value indicates object leaving the sensor.
Reflected Signal Level	0dB	127dB	Power of reflected radar signal from object.
Object ID	0	15	Object identity. 0 represents closest object to sensor.
Object Appearance Status	0	1	Logic '1' indicates detection of new object. Logic '0' indicates detection of existing object.
Trigger Event	0	4	Similar to CANOpen requirements; this parameter identifies the reason for message transmission. 0 = Keep Alive, 1 = object detection, 2 = future use, 3 = future use.
Detection Flag	0	1	Logic '0' indicates object detection. Logic '1' indicates no object detection.

Further technical details of detection data are available in section 5.7.

3.3 Detected Object Position Relative to Sensor

The image below illustrates the relative position of detected objects with respect to the sensor's front face

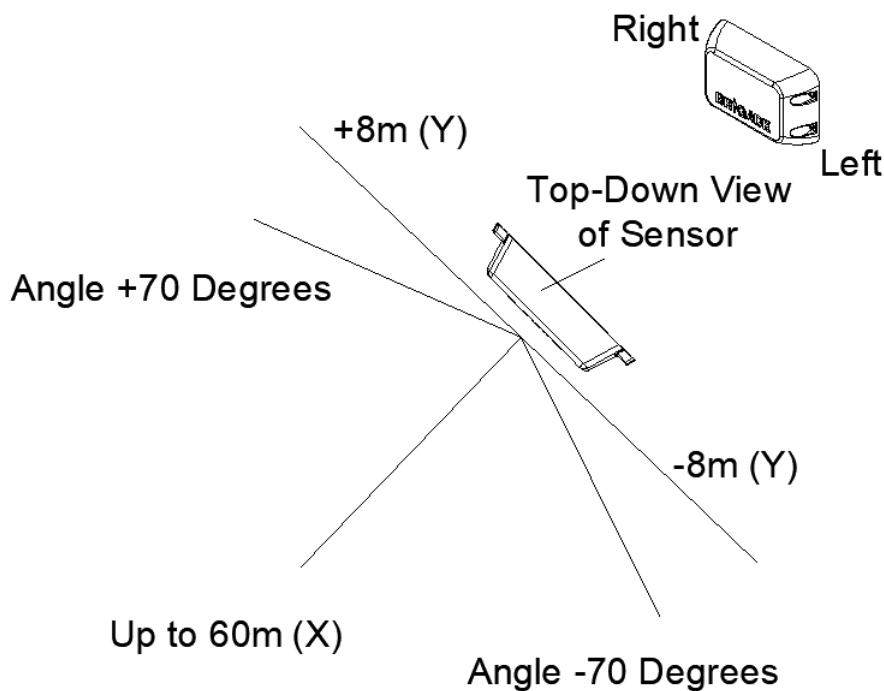

4 Hardware Installation

4.1 Recommended Network Layouts and Limitations


Backsense® BS-9100 Systems installation must adhere to a strict network topology to ensure reliable communications between all sensors and host.

The network topology must represent a bus featuring 120Ω termination at both ends. Sensors must be connected to the bus via Network Y-Cable only. The user must not install any extension cable between the sensor and the Y-Cable. Examples for good and bad network arrangements are show below:


4.2 Good Network Arrangement

Good Network Topology Includes:

- 120Ω Termination at both ends
- Bus Length limited to 30m between terminations
- Power input position balanced depending on the sensor's physical distribution on the bus. This should be optimised to minimise voltage drop over the cable for each sensor.
- No extension cables installed between the sensor and the Y-Cable. Only sensor tail cable to Y-Cable is allowed.

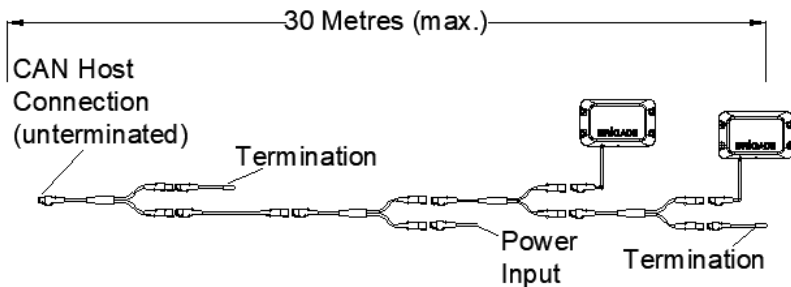

Example 1 (Good), host connection at end of bus

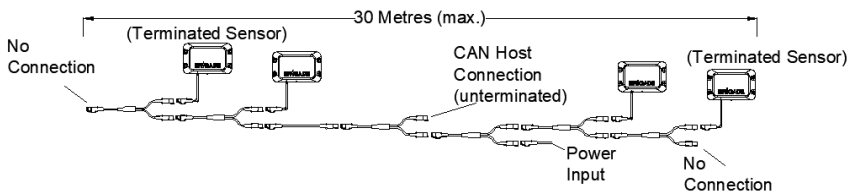


Example 2 (Good), host connection in middle of bus

4.3 Bad Network Arrangement

Bad Network Topology may include:


- Long bus length >30m.
- Non-bus configuration (e.g. star, mesh etc.).
- Power at one end only (resulting in possible voltage drop in cable).
- Termination missing at both ends of network.
- Omission of Network Terminator cable.
- Extension cable between sensor and Y-Cable.
- Connection to more than 8 sensors on single bus.
- Connection to other CAN nodes, (not shown below).

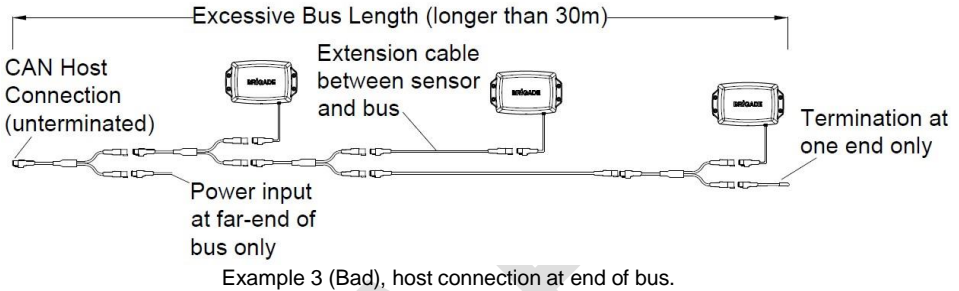

4.4 Test Site

The system test site should be relatively flat without excessive deviation and must be larger than the detection range of each sensor in the intended Backsense® system network. This will enable a basic setup, configuration and testing.

4.5 Sensor Mounting and Location

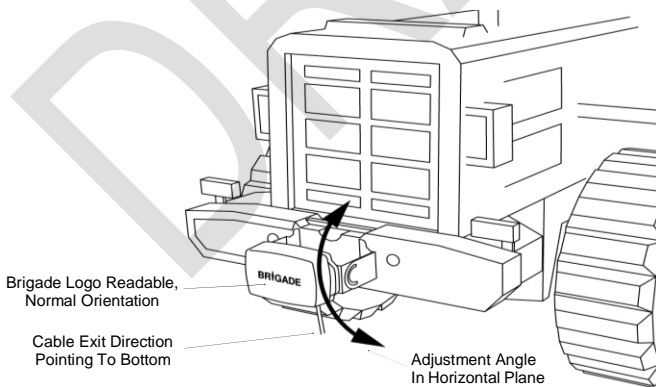

4.5.1 Sensor Direction

Each sensor should be mounted in an upright position with cable exit on the sensor pointing downwards. The Brigade logo on the front of the sensor should be in readable, normal orientation when standing in the required detection area, see image above. The front of the sensor should have line of sight to all areas where objects should be detected.

4.5.2 Sensor Fixing

Each unit is supplied with four M5x30mm screws and four M5 polymer locknuts for mounting purposes. The recommended torque is 6Nm or 50 inch/lbs.

4.5.3 Vehicle Overhang into Detection Area

The vehicle mounting locations should avoid detection of any overhang or vehicle ancillary equipment where possible. Such objects will cause false detections (for exceptions see section "1.2 Object Detection Capability", paragraph "Warning"). The detection area of the Brigade Backsense® radar beam has a 120° horizontal angle to the maximum designated width and a vertical angle of 12°, see section "1.2.1 Detection Pattern" for details.

In the event of unavoidable detection of vehicle body areas, the host system must ignore these detections.

4.5.4 Mounting Angle

Brigade recommends mounting the radar sensors on brackets (available from Brigade, see section 2.2), which can be adjusted for angle in the horizontal plane, enabling performance optimisation. See below for suggested vertical angle vs sensor installation height on the vehicle.

Depending on the vehicle, working environment and typical objects to be detected an adjustment of a few degrees around the suggested values can improve the detection performance or avoid false detection.

Installation height on vehicle (to sensor centre point)		Adjustment angle in upward direction from the horizontal plane
[m]	[in]	[°]
0.3m	12	9
0.5m	20	7
0.7m	28	5
0.9m	35	4
1.1m	43	3
1.3m	51	2
1.5m	59	0


4.6 Cable

Cables should be run in conduit and along suitable cable runs throughout the vehicle. A 24mm hole is required to pass the connectors through.

- Note:
- Allow a reasonable bending radius when folding excess cabling or for the routing of the cable.
 - Avoid tight bends close to the connectors.
 - Avoid pulling on the connector.
 - Ensure all cables are fitted into suitable protective conduit
 - Ensure cabling and connectors are fitted away from sources of excess heat, vibration, movement and water or dirt.

4.7 Electrical Connections

Refer to the vehicle manufacturer or bodybuilder guidelines for installation procedures and connectivity in all applications. The sensor pinout is shown in the table below and connector details given in section9:

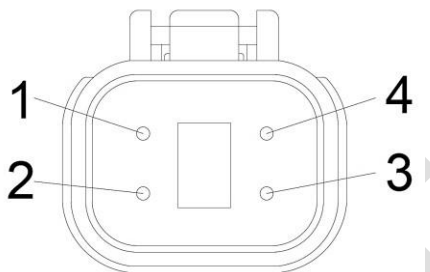

Deutsch Pin	Signal Name	Brigade Wire Colour
1	Ground	Brown
2	CAN High	Green
3	Positive (+12/+24V)	Yellow
4	CAN Low	Blue

4.8 Power Input

Power must be applied to the BS-9100 sensor network via a dedicated Brigade power cable. Only one power input to the system is permitted and must be suitably positioned within the network to ensure that loading from all sensors is balanced and excessive voltage drops are avoided.

The network must be adequately powered under all operating conditions. The installer must verify that any volt drop throughout the network does not cause the supply at the sensor to drop below the minimum recommended value during operation.

A single fuse must be installed per network. Multiple fuses are not permitted. The table in section 4.9 provides power consumption data and fusing recommendations for various network sizes under a range of supply voltages.

4.9 Recommended Fuse Values

Supply Voltage	Network Size (Number of Sensors)	Power Consumption	Steady State Current	Inrush Current	Recommended Fuse Value
12VDC	1	2.8W	0.23A	<0.85A, <20mSec	1A
	2	5.6W	0.46A		1A
	3	8.4W	0.69A		1A
	4	10.7W	0.92A		2A
	5	13W	1.15A		2A
	6	15.3W	1.38A		2A
	7	17.6W	1.61A		2A
	8	19.9W	1.84A		3A
24VDC	1	2.9W	0.12A	<0.45A, <20mSec	1A
	2	5.8W	0.24A		1A
	3	8.7W	0.36A		1A
	4	11.6W	0.48A		1A
	5	14.5W	0.6A		1A
	6	17.4W	0.72A		1A
	7	20.3W	0.84A		2A
	8	23.2W	0.96A		2A

5 CAN Bus

5.1 Network Parameters

The BS-9100 system must operate on an independent CAN bus with no other connections apart from power, terminations and typically one customer-supplied host.

CAN communications parameters from the sensor network are detailed below:

- Complies with CAN 2.0A Base Frame Format (11-bit Identifier)
- Programmable ID range per sensor
- Individual CAN ID for each detected object
- 500Kbits/second Baud Rate (Non-Configurable)
- Maximum of 8 sensors connected to the bus at any time
- Keep Alive message transmitted by sensors when no objects are detected
- Refresh Rate of ~21mSec per detected object message or Keep Alive message
- Intel Standard message format

5.2 Keep Alive Message

The Keep Alive message function provides a regular CAN message from each sensor when there are no objects detected by that sensor, or when the sensor has not been re-configured from the default CAN ID (detailed in section 5.3). The Keep Alive message may be used by the host system to verify that the radar is operational and working correctly during periods of no object detection.

5.3 CANbus Base ID

All BS-9100 sensors are shipped from Brigade with a pre-set Base ID of 0x390. Messages with this ID value do not contain any detection data but do provide a Keep Alive message to the host.

The installer must alter the 0x390 Base ID at system configuration and ensure that each BS-9100 sensor within a network is configured with a different Base ID. Instructions for altering sensor Base ID values are detailed in section 5.4.

The range of permissible Base ID values is given in the table below:

Sensor ID:	1	2	3	4	5	6	7	8
Base ID:	0x310	0x320	0x330	0x340	0x350	0x360	0x370	0x380

It is not permitted to connect sensors together that have the same Base ID. Therefore, during system configuration, the installer must ensure that each sensor's Base ID is programmed whilst only that sensor is connected to the host

5.4 Base ID Configuration

Systems installers may configure sensor base ID values using their own host system, or by use of the Brigade Test tool detailed in section 7. Each BS-9100 sensor within a network must be configured with an individual Base ID. The method for Base ID configuration is simple and involves sending a single configuration message to each individual sensor in the CAN network, using a specific "Configuration ID" for that sensor. The procedure is as follows:

1. Connect one unconfigured sensor (with default Base ID 0x390, which is the default sensor number 0x09) to the network. There must be no other sensors connected to the network during configuration.
2. Apply power to network.
3. Send configuration message (containing the desired sensor number) from host to connected sensor using the connected sensors configuration ID.
4. Disconnect and reconnect power from sensor or network.
5. Monitor the CAN bus and verify that the Base ID for the sensor under configuration has now changed from 0x390 to the Base ID configured in step 3.
6. Repeat from step 1 for next sensor to be configured

The tables below detail the various ID values used in the BS-9100 system.

Current Sensor ID values (Before Configuration)
Base ID and corresponding Configuration ID to be used

Current Base ID	Configuration ID to be used
0x310	0x150
0x320	0x151
0x330	0x152
0x340	0x153
0x350	0x154
0x360	0x155
0x370	0x156
0x380	0x157
0x390	0x158

Resulting Sensor ID values (After Configuration)
Desired Sensor Number and corresponding desired Base ID

Desired (target) Sensor Number	Desired (target) Base ID
0x01	0x310
0x02	0x320
0x03	0x330
0x04	0x340
0x05	0x350
0x06	0x360
0x07	0x370
0x08	0x380
0x09	0x390

5.5 Configuration Message Structure and Examples

Configuration Message Structure

11- Bit CAN ID	Data Byte 0	Data Byte 1	Data Byte 2	Data Byte 3	Data Byte 4	Data Byte 5	Data Byte 6	Data Byte 7
Current Sensor Configuration ID to be used	Sensor Number for desired (target) Base ID	Fixed value 0x00	Fixed value 0x00	Fixed value 0x00	Fixed value 0x00	Fixed value 0x00	Fixed value 0x00	Fixed value 0xFF

Configuration Message Example, Base ID change from 0x390 to 0x310

11- Bit CAN ID	Data Byte 0	Data Byte 1	Data Byte 2	Data Byte 3	Data Byte 4	Data Byte 5	Data Byte 6	Data Byte 7
0x158	0x01	0x00	0x00	0x00	0x00	0x00	0x00	0xFF

Configuration Message Example, Base ID change from 0x320 to 0x330

11- Bit CAN ID	Data Byte 0	Data Byte 1	Data Byte 2	Data Byte 3	Data Byte 4	Data Byte 5	Data Byte 6	Data Byte 7
0x151	0x03	0x00	0x00	0x00	0x00	0x00	0x00	0xFF

5.6 Addressing Strategy for Detected Object and Generated Messages

Each BS-9100 sensor is capable of detecting and reporting data for up to 16 closest objects. Each detected object has an individual message ID whose value is dependent on the proximity of the detected object to the sensor.

Object Proximity to Sensor	Sensor ID Number							
	0x01	0x02	0x03	0x04	0x05	0x06	0x07	0x08
Closest Object	0x310	0x320	0x330	0x340	0x350	0x360	0x370	0x380
2 nd Closest Object	0x311	0x321	0x331	0x341	0x351	0x361	0x371	0x381
3 rd Closest Object	0x312	0x322	0x332	0x342	0x352	0x362	0x372	0x382
4 th Closest Object	0x313	0x323	0x333	0x343	0x353	0x363	0x373	0x383
5 th Closest Object	0x314	0x324	0x334	0x344	0x354	0x364	0x374	0x384
6 th Closest Object	0x315	0x325	0x335	0x345	0x355	0x365	0x375	0x385
7 th Closest Object	0x316	0x326	0x336	0x346	0x356	0x366	0x376	0x386
8 th Closest Object	0x317	0x327	0x337	0x347	0x357	0x367	0x377	0x387
9 th Closest Object	0x318	0x328	0x338	0x348	0x358	0x368	0x378	0x388
10 th Closest Object	0x319	0x329	0x339	0x349	0x359	0x369	0x379	0x389
11 th Closest Object	0x31A	0x32A	0x33A	0x34A	0x35A	0x36A	0x37A	0x38A
12 th Closest Object	0x31B	0x32B	0x33B	0x34B	0x35B	0x36B	0x37B	0x38B
13 th Closest Object	0x31C	0x32C	0x33C	0x34C	0x35C	0x36C	0x37C	0x38C

Object								
14 th Closest Object	0x31D	0x32D	0x33D	0x34D	0x35D	0x36D	0x37D	0x38D
15 th Closest Object	0x31E	0x32E	0x33E	0x34E	0x35E	0x36E	0x37E	0x38E
16 th Closest Object	0x31F	0x32F	0x33F	0x34F	0x35F	0x36F	0x37F	0x38F

5.7 Detection Message

Detection data for each detected object (per sensor) is reported in a single CAN message from the sensor with a message as detailed in section 3.2. Detection location data, relative speed, reflected power level and various detection flags are contained in individual bytes for ease of processing.

The message structure for the data field is detailed in the table below:

Detection Data	Data Field Start		Data Length (No.Bits)	Data Offset	Message Resolution	Physical Value		Byte Value	
	Byte	Bit				Min	Max	Min	Max
Polar Radius Line of sight from sensor to object	0	0	8	0	0.25m	0m	60.25m	0x00	0xF0
Polar Angle Position perpendicular to front face is 0°	1	0	8	-128	1°	-70°	+70°	0x3A	0xC6
Co-ordinates X Distance in front of sensor	2	0	8	0	0.25m	0m	+60m	0x00	0xF0
Co-ordinates Y Distance Left/Right of sensor	3	0	8	-128	0.25m	-8m	+8m	0x60	0xA0
Relative Speed Difference between object & vehicle speeds	4	0	8	-128	0.5KPH	-64KPH	+63.5KPH	0x00	0xFF
Signal Power (dB) Radar signal power reflected from object	5	0	8	0	1	0dB	127dB	0x00	0x7F
Object ID Closest object has lowest ID number	6	5	3	0	1	0	15	N/A	N/A
Object Appearance Status 1 = New detection 0 = Repeated detection	6	4	1	0	N/A	0	1	N/A	N/A
Trigger Event 0 = Keep alive 1 = Object detection 2 = Unprogrammed sensor 3 = Not used	6	1	2	0	1	0	3	N/A	N/A
Not used	6	0	1	N/A	N/A	N/A	N/A	N/A	N/A
Sensor Error 4 0 = No Error 1 = CAN Error	7	7	1	N/A	N/A	0	1	N/A	N/A

Sensor Error 3 0 = No Error 1 = Temperature Error (>135°C)	7	6	1	N/A	N/A	0	1	N/A	N/A
Sensor Error 2 0 = No Error 1 = MMIC Error	7	5	1	N/A	N/A	0	1	N/A	N/A
Sensor Error 1 0 = No Error 1 = Voltage Error	7	4	1	N/A	N/A	0	1	N/A	N/A
Not used	7	2	2	N/A	N/A	N/A	N/A	N/A	N/A
Identification Flag 0 = BS-9000 1 = 77GHz Radar	7	1	1	N/A	N/A	0	1	N/A	N/A
Detection Flag 0 = Valid detection 1 = No detection	7	0	1	0	1	0	1	0x00	0x01

5.8 Sensor Start-up Messages

Each sensor will transmit various messages to the host upon power up. These messages may be used by the host to confirm that the particular sensor in the network has correctly started and is operational.

The transmission of the start-up messages is sufficient to verify that the sensor is operational. Start-up time (from power-on to completion of start-up messages) is detailed in section 9. The content of the start-up message has no functional use for the normal operation of the sensor and provide no information to the user.

The table below details start-up message vs sensor Base ID

	Sensor ID Number								
	0x01	0x02	0x03	0x04	0x05	0x06	0x07	0x08	0x09
Base ID	0x310	0x320	0x330	0x340	0x350	0x360	0x370	0x380	0x390
Start-up Message 1	0x700	0x701	0x702	0x703	0x704	0x705	0x706	0x707	0x708

6 System Host

6.1 Host Responsibilities

BS-9100 systems require connection to a customer-supplied host to receive and utilise object detection messages from the sensor via CAN bus. The host system is responsible for interpreting the detection data detailed in section 5.7 and applying any logic, conditioning, filtering, activation or blind zone settings (e.g. ignoring certain detection under pre-determined conditions) that may be required in the application of the system. These features are not provided by the BS-9100 and detection data output from the sensor is not configurable.

DRAFT

7 Brigade Backsense CAN Radar Test Tool

7.1 PC Interface for BS-9100

As detailed in section 5, the Brigade BS-9100 radar sensors use CAN for all communications to the host system, including configuration and test activities. The Brigade Backsense Test Tool cannot be run without the Sfting Interface being plugged into the PC.

In order for a user to configure and test the system using Brigade's software applications they must first obtain a CANpro USB Interface from the Softing company and install drivers for this interface on their test PC. The interface is not available from Brigade but may be purchased from Softing or their distributors by searching the website at www.softing.com

An image of the CANpro USB Interface is shown below. Note that although other CAN – PC interfaces will connect to the BS-9100 network, only the CANpro USB will work correctly with the Brigade Backsense CAN Radar Test Tool.



7.2 PC System Requirements

The Brigade Backsense CAN Radar Test Tool requires a PC with a USB 2.0 Type-A connector for connection to the CANpro USB interface. A USB cable with USB standard type A plug to B plug should be used and is included with the CANpro USB Interface. The Backsense CAN Radar Test Tool is compatible with Microsoft Windows 7 and above (32-bit or 64-bit version) operating systems.

7.3 CANpro – BS-9100 Network connection cable

Users will require a cable for connection between CANpro interface and BS-9100 sensor network. This cable is not available from Brigade and must be provided by the user. Pinout details are given in the table below. Note that the CANpro interface does not include termination and therefore Brigade Network Terminators will be required in this instance.

CANpro 9-way D-Type Pin Number	Deutsch 4-way Radar Connector	Signal Name
2	4	CAN LOW
7	2	CAN HIGH

7.4 Software Installation

7.4.1 Softing CAN Drivers and Software installation


Once the driver installation file has been downloaded from www.softing.com it should be installed as per standard practice. Screen views of the process are shown below (Note: Layout may vary depending on Softing software version).



Step 1 – Initial installation window




Step 2 – License agreement

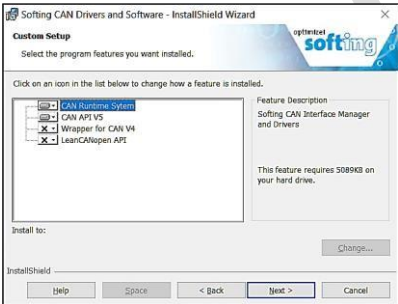

Step 3 – Feature selection



Step 4 – Feature confirmation

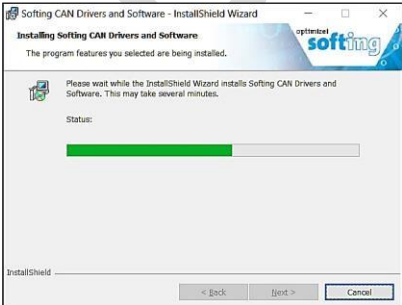

Step 5 – Installation in progress




Step 6 – Installation complete

The application can now be launched from the Start Menu under the heading Softing CAN.


7.4.2 Softing CAN Drivers and Software configuration

Once the setup has been completed, the Softing CAN Interface Manager should be launched.


Once the CAN interface has been connected to the PC, the Softing Interface Manager should automatically detect and list it as a device. The following steps should then be performed to configure the interface for use with the Brigade Backsense CAN Radar Test Tool.

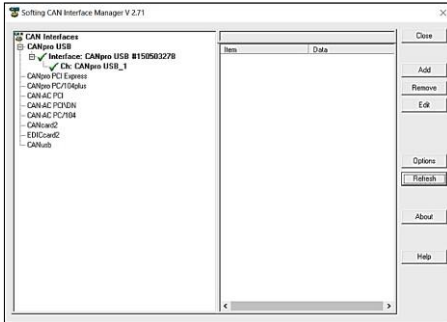


Step 1 – Softing Interface manager shows an interface has been connected, select the CAN interface and select Edit

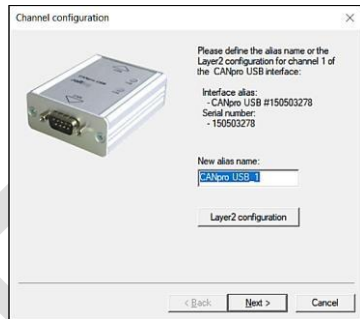

Step 2 – Select Layer 2 configuration

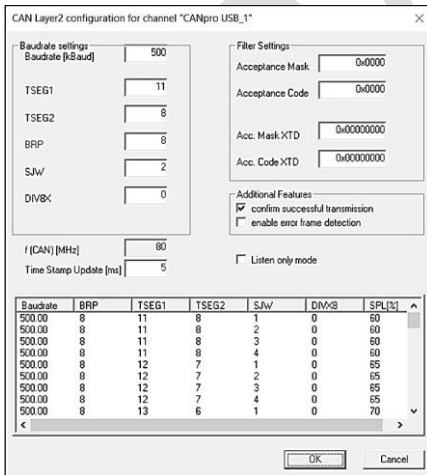

Step 3 – Leave all values as default and confirm the configuration by selecting OK.

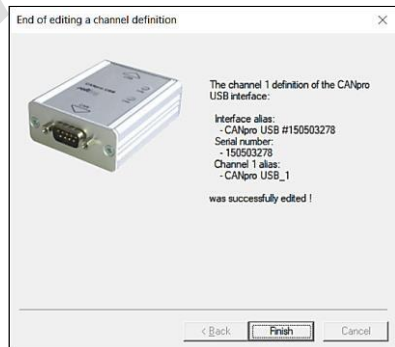


Step 4 – Select Finish to complete the configuration


Once completed, the Backsense CAN Radar Test Tool can be installed, without this application installed the Backsense CAN Radar Test Tool will suffer significant errors.

7.4.3 Backsense CAN Radar Test Tool installation


Once the driver installation file has been downloaded from www.brigade-electronics.com it should be installed as per standard practice. Screen views of the process are shown below (Note: Layout may vary depending on version).

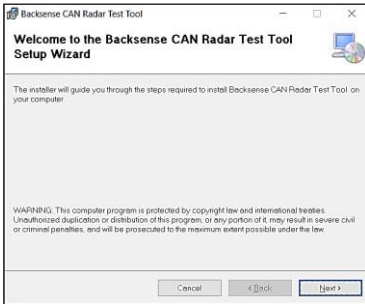


Step 1 – Initial installation window

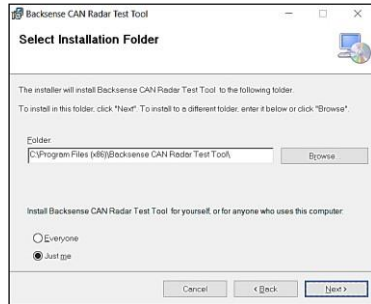


Step 2 – Installation location

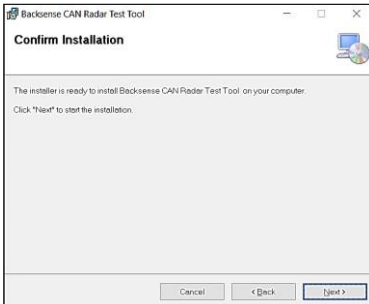

Step 3 – Installation confirmation

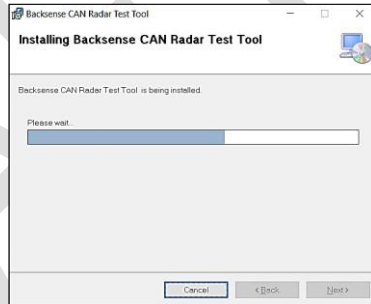

Step 4 – Installation in progress

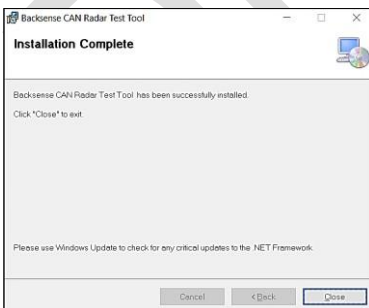

Step 5 – Installation complete

The application can now be launched from the Start Menu under the heading Backsense CAN Radar Test Tool.

7.5 Backsense CAN Radar Test Tool

The Brigade test tool is a windows application that enables users to view all physical detection data from the radar system in real time.

The test tool consists of a main Graphic & Control Window displaying a top-down view of detected objects for one selected sensor as well as a sub window for that sensor's detection data and another sub window displaying detected object positions for all sensors in the network. The Test Tool does not provide any CAN data from the sensor network however the Configuration Tool detailed in section 7.6 enables the user to view live CAN data and configure the Base ID for individual sensors. Each part of the test tool is explained in the following sections. For operating errors, see section 7.7

7.5.1 Graphic & Control Window


The graphic and control window feature a menu bar with the following menus and options:

- File
 - Exit Application
- View
 - Backsense Detection Table – Opens in new sub window.
 - Backsense Network Summary Table – Opens in new sub window.
- Select Sensor – Change sensor selection for top-down detection view and Backsense Detection Table from below list:
 - Sensor ID 0x310.
 - Sensor ID 0x320.
 - Sensor ID 0x330.
 - Sensor ID 0x340.
 - Sensor ID 0x350.
 - Sensor ID 0x360.
 - Sensor ID 0x370.
 - Sensor ID 0x380.
 - Sensor ID 0x390.
 - Refresh – Refreshes the above list of connected sensors.
- Tools
 - Configuration Tool – Opens in new sub window.
- About
 - About Radar Test Tool.

The centre of the Graphic and Control Window displays a 2m grid representing the 60m long, 16m wide detection area for one BS-9100 sensor. A red filled circle at the bottom middle position of the grid represents the sensor location whilst purple triangle hatchings either side of the sensor location represent the area in which objects cannot be detected due to the 120° detection angle.

During operation, detected objects are displayed as small green filled squares within the 60m x 16m detection area. The approximate position of the detected objects may be estimated by referencing their position with respect to the 4m grid lines. Note that the size of all green squares is constant and do not vary according to object size or detection data values.

A Pause/Run button is provided for the user to freeze live detection information on the screen. Note that the user may select which sensor they would like to view from the Select Sensor menu at the top of the screen. By default, the sensor with lowest base ID value is selected. An example of the Graphic and Control Window is shown on the following page.

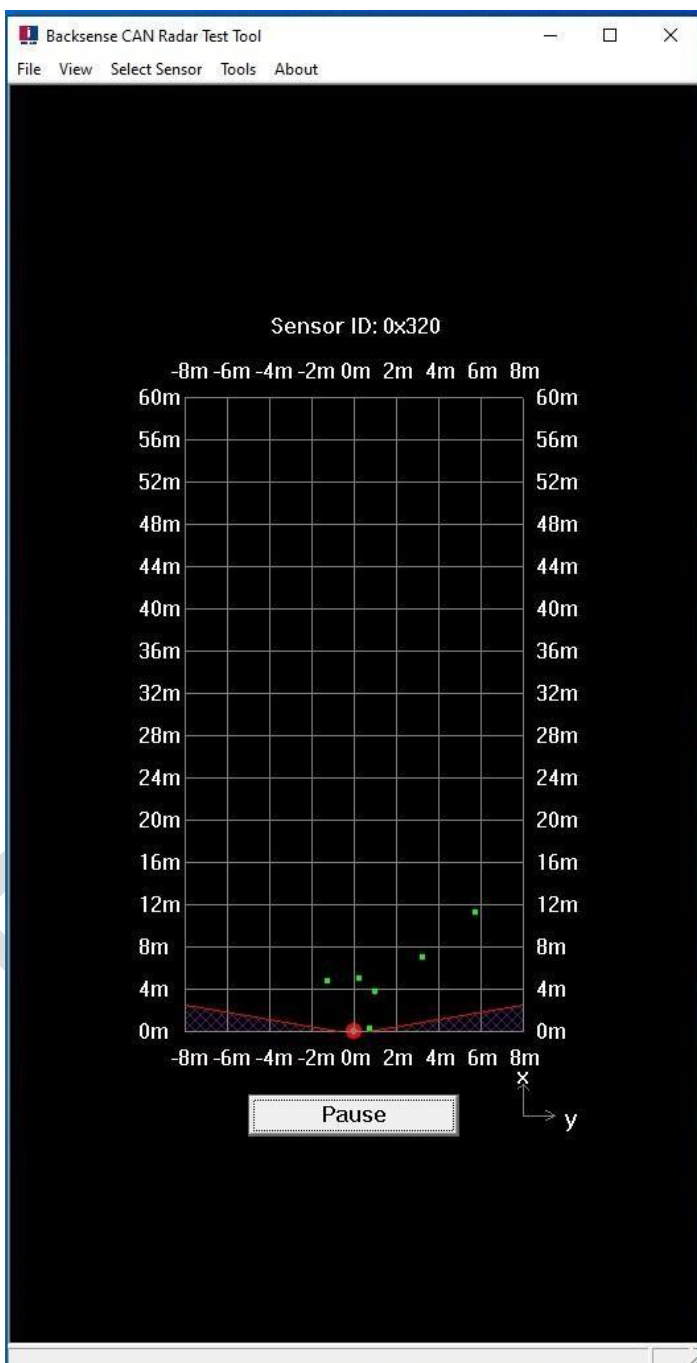

Graphic and Control Window displaying six detected objects for sensor 1 (CAN ID 0x310).

7.5.2 Backsense Detection Table

The Backsense Detection Table is a floating sub window of the Graphic and Control window which displays numerical values for all detection data of up to 16 closest objects detected by the selected sensor.

There is no user interaction available for the Backsense Detection Table. As with the detection grid of the Graphic and Control, the sensor with lowest base ID value is selected by default. An example from the Detection Table is shown below:

Sensor Parameter	Unit	0x320	0x321	0x322	0x323	0x324	0x325	0x326	0x327	0x328	0x329	0x32A	0x32B	0x32C	0x32D	0x32E	0x32F
Object L Distance	m	0.75	4.00	5.00	5.00	7.75	12.75										
Object Angle	Deg	57	15	3	-16	25	27										
X Coordinate	m	0.25	3.75	5.00	4.75	7.00	11.25										
Y Coordinate	m	0.75	1.00	0.25	-1.25	3.25	5.75										
Object Relative Speed	KPH	-2.5	0.0	1.0	-0.5	-0.5	-1.0										
Object Signal Level	dB	81	86	84	86	86	76										
Object Appearance Status	n/a	U	U	U	U	U	U										
Trigger Event	n/a	1	1	1	1	1	1										
Detection Flag	n/a	U	U	U	U	U	U										
Identification Flag	n/a	1															
Voltage Fault	n/a	0															
MMIC Fault	n/a	0															
High Temperature Fault	n/a	0															
CAN Fault	n/a	0															

Backsense Detection Table displaying detection data for six objects from Sensor ID 0x320.

7.5.3 Backsense Network Summary Table

The Backsense Network Summary Table is a floating sub window of the graphic and control window which displays X, Y co-ordinates for up to 16 detected objects of up to 8 connected sensors as per the maximum capability of the system. There is no user interaction available for the Backsense Network Summary Table. As with the detection grid of the Graphic and Control, the sensor with lowest base ID value is selected by default. An example from the Detection Table is shown below:

CAN ID X, Y	Unit	0x300	0x301	0x302	0x303	0x304	0x305	0x306	0x307	0x308	0x309	0x30A	0x30B	0x30C	0x30D	0x30E	0x30F
0x310_X	m																
0x310_Y	m																
0x320_X	m	0.25	3.75	5.00	4.75	7.00	11.25										
0x320_Y	m	0.75	1.00	0.25	-1.25	3.25	5.75										
0x330_X	m																
0x330_Y	m																
0x340_X	m																
0x340_Y	m																
0x350_X	m																
0x350_Y	m																
0x360_X	m																
0x360_Y	m																
0x370_X	m																
0x370_Y	m																
0x380_X	m																
0x380_Y	m																


Backsense Network Summary Table displaying detection data for six objects from Sensor ID 0x02

7.6 Backsense Configuration Tool


The Backsense Configuration Tool is a command line type application that enables the user to perform the following functions within the BS-9100 system:

- Alter CAN ID of each sensor within the permitted range.
- View live CAN data from the entire network.

7.6.1 The Backsense Configuration Tool may be launched from the “Tools” menu within the Backsense CAN Radar Test Tool, as shown below:

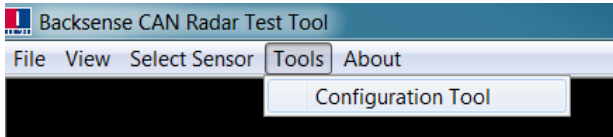


7.6.2 Depending on PC security settings, the following warning may be seen. The user must select “Run” to proceed to the application:

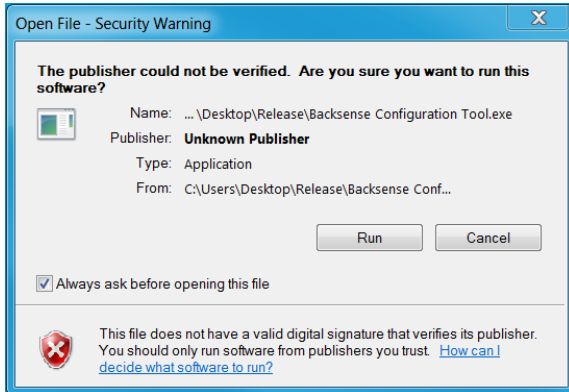

7.6.3 The launch screen of the Backsense Configuration Tool will appear as below. The connected CANpro interface is identified by serial number.

The user must press Return on the keyboard to continue:

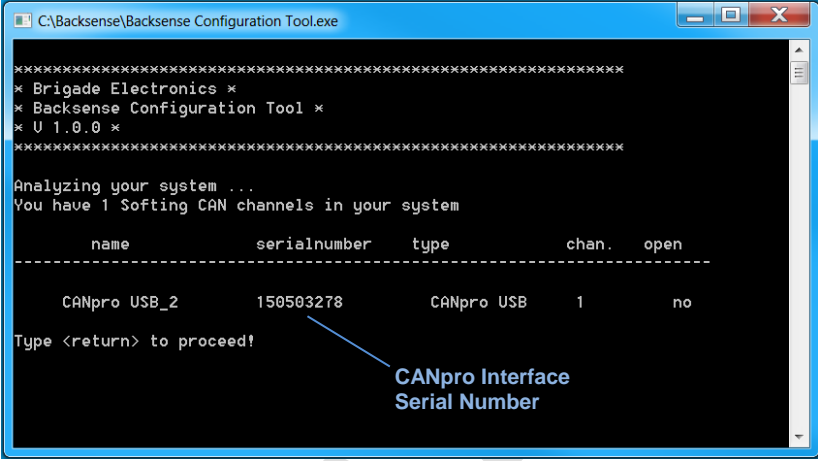

```

C:\Backsense\Backsense Configuration Tool.exe

*****
* Brigade Electronics *
* Backsense Configuration Tool *
* U 1.0.0 *
*****

Analyzing your system ...
You have 1 Softing CAN channels in your system

  name          serialnumber    type          chan.  open
-----
  CANpro USB_2   150503278    CANpro USB     1      no

Type <return> to proceed!

```

CANpro Interface
Serial Number

7.6.4 The Initialisation screen of the Backsense Configuration Tool will appear as below. Command options are displayed on the screen:

The Configuration Tool Command Options are as follows:

- h
 - Display help menu – Configuration Tool Command Options will be re-displayed.
- r
 - Monitor CAN Bus Data – Allows the user to view all CAN data that appears on the bus.
- Space Bar
 - Pause live view of CAN Bus Data.
- s
 - Switch CAN ID for connected sensor – Allows the user to select the sensor ID number that is to be re-configured.
- c
 - Change Boot Code Sensor ID – User must select the desired target sensor ID number that is to be configured for the connected sensor.
- q
 - Exit Configuration Tool application.


Configuration Tool
Command Options

7.6.5 The user may start (or re-start) monitoring of live CAN data from the sensor (or entire Backsense network) by pressing the "R" key on the keyboard. Spacebar may be used to pause live CAN data.

C:\Backsense\Backsense Configuration Tool.exe

RCU	STD	CAN1	Id	341	Dlc8	Data	a 80	a 80 83	26	22	0	T13726937	D	244
RCU	STD	CAN1	Id	342	Dlc8	Data	19 76	18 7c 81	26	42	0	T13726a25	D	238
RCU	STD	CAN1	Id	360	Dlc8	Data	8 80	8 80 80	42	2	0	T13727289	D	2148
RCU	STD	CAN1	Id	361	Dlc8	Data	11 8a	10 83 7d	2b	22	0	T13727378	D	239
RCU	STD	CAN1	Id	362	Dlc8	Data	18 85	18 82 7c	2c	42	0	T13727466	D	238
RCU	STD	CAN1	Id	380	Dlc8	Data	7 80	7 80 81	46	2	0	T13727606	D	416
RCU	STD	CAN1	Id	381	Dlc8	Data	e ad	9 8b 81	2f	22	0	T137276f4	D	238
RCU	STD	CAN1	Id	330	Dlc8	Data	5 7b	5 7f 80	42	2	0	T13727f46	D	2130
RCU	STD	CAN1	Id	331	Dlc8	Data	a 7b	a 7f 81	3a	22	0	T13728035	D	239
RCU	STD	CAN1	Id	332	Dlc8	Data	e 71	e 7b 7b	29	42	0	T13728123	D	238
RCU	STD	CAN1	Id	333	Dlc8	Data	18 80	17 81 80	29	62	0	T13728215	D	242
RCU	STD	CAN1	Id	334	Dlc8	Data	22 80	22 80 8c	29	82	0	T13728309	D	244
RCU	STD	CAN1	Id	370	Dlc8	Data	5 76	5 7f 81	42	2	0	T13729d13	D	6666
RCU	STD	CAN1	Id	371	Dlc8	Data	6 8a	6 81 76	24	22	0	T13729e01	D	238
RCU	STD	CAN1	Id	320	Dlc8	Data	4 8f	4 81 80	47	2	0	T13729ef0	D	239
RCU	STD	CAN1	Id	360	Dlc8	Data	2 7b	2 80 7f	43	2	0	T13729fdb	D	235
RCU	STD	CAN1	Id	321	Dlc8	Data	c 71	c 7c 7e	33	22	0	T1372a0c3	D	232
RCU	STD	CAN1	Id	361	Dlc8	Data	a 85	a 81 7d	35	22	0	T1372a1ac	D	233
RCU	STD	CAN1	Id	372	Dlc8	Data	11 53	c 73 81	21	42	0	T1372a292	D	230

7.6.6 The description for Configuration Tool data is as illustrated below:

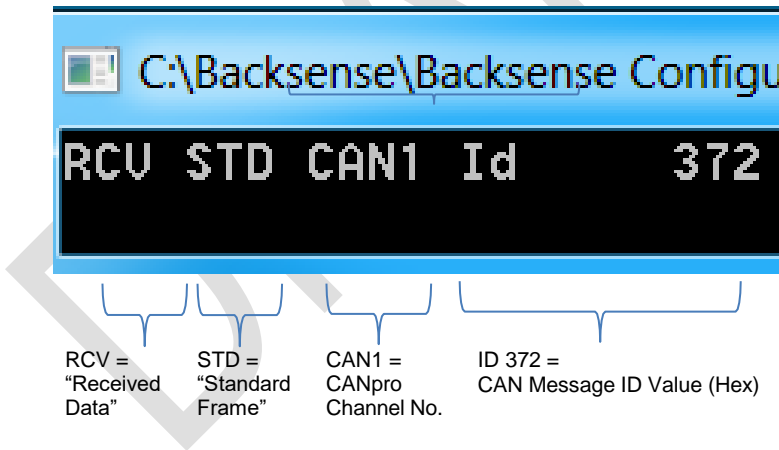



DLC8 = Data
Length Code is
8 Bytes

Data XX XX XX XX XX XX XX XX= Detection Data in Hex format from sensor



T 1372a292 =
Timestamp from launch of
CAN driver (Hex uSec)

D 230 =
Delta time since previous
message (Dec uSec)

7.6.7 Pressing the “S” key on the keyboard will enter sensor ID configuration function as shown below:

The screenshot shows the 'Backsense Configuration Tool.exe' window. The main display area contains a list of CAN data entries, each with a timestamp, ID, and data. Below this list, a selection menu is displayed with the following options:

```

1: SID #1 2: SID #2 3: SID #3 4: SID #4
5: SID #5 6: SID #6 7: SID #7 8: SID #8
9: SID #9

```

An annotation with an arrow points to the '9: SID #9' option, stating: "User presses S key to enter Selection menu of configuration function".

7.6.8 The user must select the sensor to be configured by pressing the number of that sensor on the keyboard. In the example below, only one sensor with Sensor ID 0x09 is connected, (as identified by “390” CAN data). In this instance the user will press “9” on the keyboard.

The screenshot shows the 'Backsense Configuration Tool.exe' window. The main display area contains a list of CAN data entries. Below this list, the same selection menu is displayed as in the previous screenshot. The option '9: SID #9' is now highlighted with a blue box. An annotation with an arrow points to this highlighted option, stating: "User presses 9 key to select sensor 0x09 for ID configuration".

Below the selection menu, the text "Enter 'h' to go back to main manu." is visible.

7.6.9 To re-configure the sensor ID, the user must press “C” on the keyboard as below:

```

C:\Backsense\Backsense Configuration Tool.exe

RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a076053 D 20586
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a07afa4 D 20369
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a08003b D 20567
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a084feb D 20400
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a08a055 D 20586
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a08eff0 D 20379
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a094089 D 20633
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a099021 D 20376
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a09e084 D 20579

1: SID #1 2: SID #2 3: SID #3 4: SID #4
5: SID #5 6: SID #6 7: SID #7 8: SID #8
9: SID #9
Enter 'h' to go back to main manu.
1: SID #1 2: SID #2 3: SID #3 4: SID #4
5: SID #5 6: SID #6 7: SID #7 8: SID #8
9: SID #9
Current sensor is SID #9. Which SID do you want to select:
  
```

User presses C key to enter Change menu of configuration function

7.6.10 The user must select the number for the desired sensor ID. In the example below, the desired ID is 1 therefore the user presses “1” on the keyboard

```

C:\Backsense\Backsense Configuration Tool.exe


RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a084feb D 20400
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a08a055 D 20586
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a08eff0 D 20379
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a094089 D 20633
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a099021 D 20376
RCU STD CAN1 Id 390 D1c8 Data 0 0 0 0 0 0 0 4 1 T2a09e084 D 20579

1: SID #1 2: SID #2 3: SID #3 4: SID #4
5: SID #5 6: SID #6 7: SID #7 8: SID #8
9: SID #9
Enter 'h' to go back to main manu.
1: SID #1 2: SID #2 3: SID #3 4: SID #4
5: SID #5 6: SID #6 7: SID #7 8: SID #8
9: SID #9
Current sensor is SID #9. Which SID do you want to select:
1
Selected SID is 1.
Please reset the radar.
  
```

User presses 1 key to select ID 1 for ID configuration

7.6.11 Now reset the radar (power cycle).

7.6.12 The user may check for correct ID change by monitor live CAN data from the sensor
Pressing the “r” key on the keyboard will start monitoring.

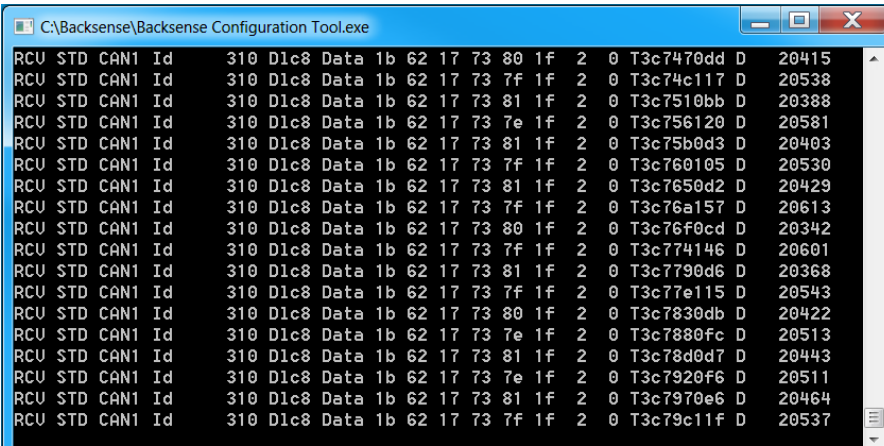

The screenshot shows a window titled "C:\Backsense\Backsense Configuration Tool.exe". The window contains a list of CAN data frames. Each frame is displayed on a single line, with fields separated by spaces. The fields include: RCU STD CAN1 Id, 310 D1c8 Data 1b 62 17 73 80 1f 2 0 T3c7470dd D 20415. The list continues with similar entries, showing a sequence of data frames being received.

RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 80 1f 2 0 T3c7470dd D 20415
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7f 1f 2 0 T3c74c117 D 20538
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 81 1f 2 0 T3c7510bb D 20388
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7e 1f 2 0 T3c756120 D 20581
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 81 1f 2 0 T3c75b0d3 D 20403
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7f 1f 2 0 T3c760105 D 20530
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 81 1f 2 0 T3c7650d2 D 20429
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7f 1f 2 0 T3c76a157 D 20613
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 80 1f 2 0 T3c76f0cd D 20342
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7f 1f 2 0 T3c774146 D 20601
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 81 1f 2 0 T3c7790d6 D 20368
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7f 1f 2 0 T3c77e115 D 20543
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 80 1f 2 0 T3c7830db D 20422
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7e 1f 2 0 T3c7880fc D 20513
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 81 1f 2 0 T3c78d0d7 D 20443
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7e 1f 2 0 T3c7920f6 D 20511
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 81 1f 2 0 T3c7970e6 D 20464
RCU STD CAN1 Id	310 D1c8 Data 1b 62 17 73 7f 1f 2 0 T3c79c11f D 20537

7.6.13 The Backsense Configuration Tool must be closed in order to return to the Backsense CAN Radar Test Tool.

7.7 Application Errors

7.7.1 If receives the below error message when trying to run the Backsense Test Tool, this is because the Softing interface either isn't connected to the PC or is not correctly configured (e.g. drivers not installed etc):

Error message is: 'canchd.dll was not found'

7.8 System Errors

In the event of system error, loss of CAN data from one or more sensors may occur. The user should verify conditions below before suspecting a faulty sensor

- Sensor or extension cable not connected.
Action: Check all connectors are plugged together fully.
- No data connection between sensor and host.
Action: Check for damage on connectors and cables.
- No power connection to sensor.
Action: Check for damage on connectors and cable.
- CAN communication error with sensor.
Cable is routed or system is installed too close to an electric noise source in vehicle.
Action: Try to relocate affected part of the system.

The Brigade Backsense® System cannot self-diagnose potential sensor detection issues caused by the build-up of ice, dirt, mud, heavy rain or immersion in water, which may impede system performance. Therefore, follow section “8 Testing and Maintenance”.

DRAFT

8 Testing and Maintenance

8.1 Operator Instructions

This information is addressed to the operator of the vehicle where a Brigade Backsense® System is installed:

- 1) The Brigade Backsense® is intended as an Object Detection System and should not be relied upon as your primary defence for the safe operation of the vehicle. It is an aid to contribute in conjunction with other established safety programs and procedures to ensure safe operation of the vehicle in relation to surrounding persons and objects. Drivers and operators should not attempt to reconfiguration the Backsense® detection area and this should be strictly done by technically trained operators when the vehicle is stationary.
- 2) Testing and inspection of the system should be carried out in accordance with this manual. The driver or operator is responsible for ensuring the Brigade Backsense® System is working as intended.
- 3) Operators using this equipment are strongly recommended to check the system's proper operation at the beginning of every shift. If this is not possible the system should be assumed as faulty until this can be done.
- 4) Improved safety depends on the proper function of this product in conformance with these instructions. Additional safety can be achieved when the Brigade Backsense® System is used in conjunction with Brigade's camera-monitor systems. This may allow triggering camera views and providing additional vehicle information during manoeuvring. It is necessary to read, understand and follow all instructions received with the Brigade Backsense® System.
- 5) The Brigade Backsense® System for object detection is intended for use on commercial vehicles and machinery equipment. Correct installation of the system requires a good understanding of vehicle electrical systems and procedures along with proficiency in installation.
- 6) Keep these instructions in a safe place and refer to them when maintaining and / or reinstalling the product.

8.2 Maintenance and Testing

This information is addressed to the operator for maintenance and testing of a vehicle with the Brigade Backsense® System installed. This is also to familiarise the operator with the detection area and behaviour of the system. More frequent inspections should be performed in cases where:

- The vehicle is operating in a particularly dirty or harsh environment.
- The operator has reason to suspect the system is not working or has been damaged.

Procedure:

- 1) Clean the sensor housing of any accumulation of dirt, mud, snow, ice or any other debris.
- 2) Visually inspect the sensor or sensors where multiple sensors are installed and verify that they are securely attached to the vehicle and are not damaged.
- 3) Visually inspect the system's cables as well as possible and verify that they are properly secured and not damaged.
- 4) The location of the test should ensure the area in front of the sensor or sensors where multiple sensors are installed are clear of obstacles and larger than the detection range of the installed Brigade Backsense® System.

If any of the following tests fail, follow the Hardware Installation instructions in section 4 and fault finding guidance in section 7.7 or contact Brigade technical support if still in doubt.

For the following tests, the operator requires objects to be placed in the sensor's detection areas or an assistant (to observe the host activity).

- 5) Verify each accuracy of detection distance: Starting from the outside of the detection area, the operator should check several points along the centre line of the detection width down to around 0.4m distance from each sensor. The operator should note down the distance at which host system functions occur and verify that these are in line with the system configuration for this vehicle.
- 6) Close detection behaviour: Verify objects in between 0.3m and 1.3m distance are only detected if they move relative to that sensor.
- 7) Very close detection awareness: Verify objects less than 0.3m from each sensor are not detected.
- 8) Similar to the previous tests the operator should scan all the edges of the detection area according to the installed system or configuration for this vehicle. They should note down the detected locations and check if they match with the detection area set when this Brigade Backsense® System was installed on this vehicle.
- 9) During the test the operator should verify that each detection zone LED on the Backsense display is illuminated, this will ensure the correct distance of the detected object is indicated to the driver.

9 Specifications

Operation Characteristics

Model name	BS-9100
Detection length	60m (197 ft approx.)
Detection width	16m (52ft approx.)
Nominal tolerance	±0.25m / (1ft approx.)
Radar beam angle	Horizontal 140° out to the maximum designated width Vertical 12° (symmetrically perpendicular to sensor front surface)
Distance resolution	0.25m (1ft approx.). Limitations apply, see section "1.2 Object Detection Capability" for details.
Object detection	≤ 0.15second (for moving objects) ≤0.25second (for static objects). Limitations apply, see section "1.2 Object Detection Capability" for details.
Power on to system ready	≤ 2.5 seconds
Maximum simultaneous objects per sensor	16
Maximum sensors per system	8

Communication between Sensor and Host

Physical layer	CAN bus 2.0A Base Frame Format
Protocol layer	Proprietary Protocol (see section 5 for details)
Max. cable length between termination points	30m (98ft approx.)

Sensor Specifications

Transmitter	Frequency Modulated Continuous Wave (FMCW)
Frequency and bandwidth	77GHz
Dimensions (all in mm)	160 x 100 x 40
Connector	Manufacturer Deutsch Part Number DT06-4S-CE06 (female)
Cable length	1.0m / 3ft 3in
Weight	0.34kg (including pigtail cable) ?
Operating temperature	-40°C to +85°C
IP protection	Sensor: IP69K (Protected from dust & strong water jets) Connector: IP68 (Protected from dust & immersion into water)
Vibration	8.3G
Shock	100G all three axes
Mounting	Four 5.2mm diameter holes on 198mm horizontal centres, and 40mm vertical centres. Unit is supplied with M5x30mm screws and M5 polymer locknuts for mounting purposes. Recommended torque is 5.6Nm, (50 inch/lbs approx.).
Bracket	Optional, adjustable for vertical angle. See section 2.2

Electrical Specification

Input Voltage Range	9 to 32 Vdc
Input Current (per sensor)	typ. 0.23A at 12Vdc / typ. 0.12A at 24Vdc
Power Supply Fusing	Dependent upon number of sensors in network. See section 4.9 for details
Vehicle Connections	System supply positive & negative.
Host Connections	CAN High & CAN Low
Voltage Protection	ISO 16750 (over and reverse voltage protection)

Approvals

Product Types

Brigade Backsense Radar Obstacle Detection System

BS-9100, BS-9100T, BS-9100-U, BS-9100T-U, BS-9100-S, BS-9100T-S, BS-9100-U-S, BS-9100T-U-S

Manufacturer and Importer

Brigade Electronics Group PLC

Brigade House, The Mills, Station Road, South Darenth, DA4 9BD, UK

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any change or modifications not expressly approved by the responsible party responsible for compliance could void the user's authority to operate the equipment.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exempts de licence qui sont conformes au (x) RSS (s) exemptés de licence d'Innovation, Sciences et Développement économique Canada. L'opération est soumise aux deux conditions suivantes:

(1) Cet appareil ne doit pas provoquer d'interférences.

(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.


CE

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radar sensor and any human body.

The frequency and the maximum transmitted power in EU are: 76.175–76.925GHz: 15.61 dBm

10 Mounting Dimensions

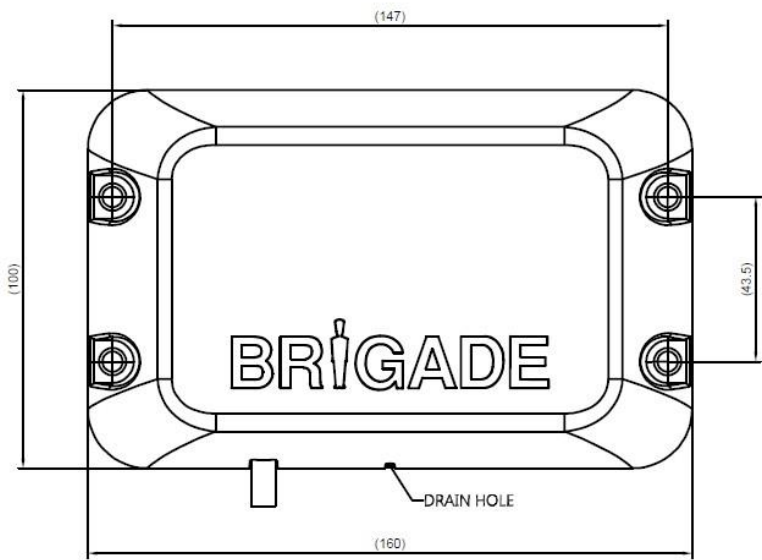

11 Disclaimer

Disclaimer

Radar obstacle detection systems are an invaluable driver aid but do not exempt the driver from taking every normal precaution when conducting a manoeuvre. No liability arising out of the use or failure of the product can in any way be attached to Brigade or to the distributor.

Avertissement

Les systèmes de radar à détection d'obstacle sont une aide précieuse pour le conducteur, mais celui-ci doit toutefois prendre toutes les précautions nécessaires pendant les manœuvres. Brigade ou ses distributeurs n'assument aucune responsabilité résultant de l'utilisation ou d'un défaut du produit.

Haftungsausschluss

Radar basierte Hinderniserkennungssysteme sind für den Fahrer eine unschätzbare Hilfe, ersetzen aber beim Manövrieren keinesfalls die üblichen Vorsichtsmaßnahmen. Für Schäden aufgrund der Verwendung oder eines Defekts dieses Produkts übernehmen Brigade oder der Vertriebshändler keinerlei Haftung.

Condizioni di utilizzo

I sistemi di rilevamento ostacoli radar costituiscono un prezioso ausilio alla guida, ma il conducente deve comunque assicurarsi di prendere tutte le normali precauzioni quando esegue una manovra. Né Brigade né il suo distributore saranno responsabili per eventuali danni di qualsiasi natura causati dall'utilizzo o dal mancato utilizzo del prodotto.

Uwaga

Radarowe systemy wykrywania przeszkód stanowią nieocenione wsparcie dla kierowców i operatorów, ale ich posiadanie nie zwalnia użytkowników z zachowania środków szczególnej ostrożności podczas prowadzenia i wykonywania manewrów. Brigade oraz dystrybutorzy produktów nie mogą ponieść żadnej odpowiedzialności prawnej wynikającej ze skutków użytkowania lub awarii produktu.

Aviso legal

Undue los system's de detección de obstáculos por radar constituyen una valiosa ayuda, no eximen al conductor de tomar todas las precauciones normales al hacer una maniobra. Brigade y sus distribuidores comerciales no se responsabilizan de cualquier daño derivado del uso o de un mal funcionamiento del producto.

Declinación de responsabilidad

Os sistemas radar de detecção de obstáculo são uma ajuda incalculável ao motorista, mas não dispensam o motorista de tomar todas as precauções normais ao realizar uma manobra. Nenhuma responsabilidade decorrente do uso ou falha do produto pode de forma alguma ser atribuída ao Brigade ou ao distribuidor.

Verwerping

Radar obstakel detectiesystemen zijn een waardevolle hulp voor de bestuurder, maar ontheffen hem echter niet van de verplichting om het voertuig zorgvuldig te manoeuvreren. Brigade en zijn distributeurs zijn niet aansprakelijk voor schade door gebruik of het niet functioneren van het product.

Ограничение ответственности

Радарные системы обнаружения препятствий является дополнительным средством помощи водителю, но не освобождает от соблюдения водителем всех необходимых мер предосторожности при совершении маневров. Brigade Electronics или распространители продукции не несут ответственности вытекающей из невозможности эксплуатации или неисправности продукции.

Hatırlatma

Radar Obje Algılama Sistemleri sürücünün önemli bir yardımcısı olmakla birlikte, manevra esnasında sürücü bir kaza olmaması için her türlü önlemi almalıdır. Brigade veya bölgesel dağıtıcıları yapılacak yanlış bir uygulama ve sonucunda oluşabilecek maddi ve/veya manevi kayıplardan sorumlu tutulamaz.

Specifications subject to change. Sous réserve de modification.
technischen Daten vorbehalten. Specifiche soggette a var
sujeitas a cambios. Wijzigingen in specificaties voorbehouden
sujeitas a alterações. Спецификация может изменяться. Specyfikacja te
Özellikler haber vermeksizin değiştirilebilir.



Serial No:	Part No:
------------	----------

DRAFT

