

Cabela's®

ATTENTION

If any components of this unit are broken or the unit does not operate properly, please contact Cabela's Customer Service.

Retail Store Purchases: 1-800-905-2731 (U.S. & Canada)
Catalog and Internet Purchases: 1-800-237-8888
All International: 1-308-234-5555

DO NOT RETURN THE UNIT TO THE STORE
WHERE IT WAS PURCHASED!

SAVE THESE INSTRUCTIONS!

REFER TO THEM OFTEN AND USE THEM TO INSTRUCT OTHERS.



GRINDER

FOOT PEDAL

Model No. 08-0901



Before beginning the assembly, check the package contents for all of the parts.
If you are missing any parts, or if any parts are damaged, contact
Cabela's Customer Service- Retail Store Purchases 1-800-905-2731 (U.S. & Canada) /
Catalog & Internet Purchases: 1-800-237-8888 / All International: 1-308-234-5555

REV041309

! WARNING! Before attaching or detaching the Foot Pedal to the grinder, make sure the **PLUG IS REMOVED FROM THE OUTLET/POWER SOURCE** and the power switch is in the **OFF** position. **ALWAYS** unplug the Foot Pedal and the grinder when not in use. **ALWAYS FOLLOW THE MANUFACTURER'S INSTRUCTIONS AND SAFETY GUIDELINES THE COME WITH THE GRINDER AND THE FOOT PEDAL.**

IMPORTANT SAFETY RULES



READ AND FULLY UNDERSTAND ALL INSTRUCTIONS AND WARNINGS PRIOR TO USING THIS UNIT. YOUR SAFETY IS MOST IMPORTANT! FAILURE TO COMPLY WITH PROCEDURES AND SAFEGUARDS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE. REMEMBER: YOUR PERSONAL SAFETY IS YOUR RESPONSIBILITY!

1. **DO NOT** use the grinder and the **Foot Pedal** without the grinder properly set up in accordance to the manufacturer's guidelines.
2. Using the **Foot Pedal** on grinders without proper point of operation measures and protection can cause serious injury. Follow the grinder's manufacturer safety guidelines. **DO NOT** use the **Foot Pedal** on grinders without proper installation.
3. The **Foot Pedal** should be utilized so that the operator's hands and fingers cannot enter dangerous areas of the grinder. **KEEP FINGERS CLEAR** of the **Auger** and **Cutting Blades AT ALL TIMES. NEVER REACH INTO THE GRINDER,** doing so may cause serious injury. **ALWAYS USE THE PROVIDED STOMPER, NEVER FEED FOOD BY HAND. NEVER** use fingers to scrape food away from the **Grinding Plate** while the **Grinder** is in operation. **SEVERE INJURY MAY RESULT.**
4. **ALWAYS DISCONNECT** grinder and the **Foot Pedal** from power source before servicing, changing accessories, plates or knives or cleaning the unit.
5. Plug the grinder and the **Foot Pedal** into a standard 120 Volt, 60 Hz wall outlet.
6. **DO NOT USE** the grinder and the **Foot Pedal** if the **Power Cord, Plug** or any other parts are damaged. If the **Power Cord, the grinder or the Foot Pedal** are damaged, call Customer Service. **DO NOT ATTEMPT TO REPLACE THE CORD.** Be sure to not allow the **Power Cord** to drape into your work area. Check that all parts are operating properly, and perform the intended functions. Check for alignment of moving parts or any other conditions that may affect the operation. **DO NOT** use extension cords.
7. **NEVER** use any accessories or parts from other manufacturers. Doing so will **VOID YOUR WARRANTY** and may cause fire, electrical shock or injury.
8. **TO PROTECT AGAINST RISK OF ELECTRICAL SHOCK: DO NOT** SUBMERGE THE **GRINDER OR THE FOOT PEDAL INTO WATER OR LIQUID. BE SURE THE GRINDER AND THE FOOT PEDAL ARE DISCONNECTED FROM THE POWER SOURCE BEFORE CLEANING. DO NOT** use near water or liquids.
9. Be sure the **Foot Pedal** is on the, clean, dry floor.
10. Reduce risk of unintentional starting. Make sure the power switch of the grinder is in the "OFF"

position before attaching to the power source.

11. **NEVER LEAVE THE GRINDER AND THE FOOT PEDAL UNATTENDED.** Be safe, **DISCONNECT** the grinder and the **Foot Pedal** from power source before leaving the work area. Close supervision is necessary when any appliance is used near children. This appliance is **NOT** to be used by children.
12. **TIE BACK** loose hair and clothing, and roll up long sleeves before operating the grinder and the **Foot Pedal. REMOVE** ties, rings, watches, bracelets, or other jewelry before operating the grinder and the **Foot Pedal.**
13. Be sure the grinder is on a stable work surface. Be sure all the grinder feet are stable.
14. **ONLY** use the **Foot Pedal** with shoes on. **NEVER** use the **Foot Pedal** with bare or stocking feet.
15. The **Foot Pedal** may become **HOT** during operation. This is normal. **DO NOT** touch the **Foot Pedal** parts during operation or until they cool after use.
16. **ONLY** use the **Foot Pedal** on hard, flame-resistant surfaces. **DO NOT** use the **Foot Pedal** on carpeted surfaces.
17. Keep the area around the **Foot Pedal** clear of all objects to avoid accidental ignition. **NEVER** place an object on the **Foot Pedal** to keep the grinder running. The **Foot Pedal** is intended for intermittent grinding and stuffing.
18. This product is not intended for commercial use. Commercial use will void the warranty.
19. **WEAR EYE PROTECTION.** Wear safety glasses. Everyday eye glasses are not safety glasses. Safety glasses conform to ANSI Z87.1 requirements. Note: approved safety glasses have Z87 printed or stamped on them.
20. **DO NOT** use outdoors.
21. The **Foot Pedal** is intended for use with Grinders **ONLY.**
22. **DO NOT** use the grinder and the **Foot Pedal** while under the influence of drugs, medications or alcohol.
23. **DO NOT** let the **Power Cord** hang over edge of work surface during operation.


SAVE THESE INSTRUCTIONS!

Refer to them often and use them to instruct others.

INSTALLATION

WARNING! Before attaching or detaching the **Foot Pedal** to the grinder, make sure the **PLUG IS REMOVED FROM THE OUTLET/POWER SOURCE** and the power switch is in the **OFF** position. **ALWAYS** unplug the **Foot Pedal** and the grinder when not in use. **ALWAYS FOLLOW THE MANUFACTURER'S INSTRUCTIONS AND SAFETY GUIDELINES THE COME WITH THE GRINDER AND THE FOOT PEDAL.**

1. Be sure the power switch on the grinder is in the 'OFF' position.
2. Plug the power cord on the grinder into the back of the plug on the **Foot Pedal.**
3. Plug the **Foot Pedal** into a 110 Volt electric outlet.
4. Turn the switch grinder switch to the 'ON' position.
5. The grinder will not operate until the **Foot Pedal** is depressed with your foot.
6. To stop the grinder, release the pressure on the **Foot Pedal** by raising your foot.

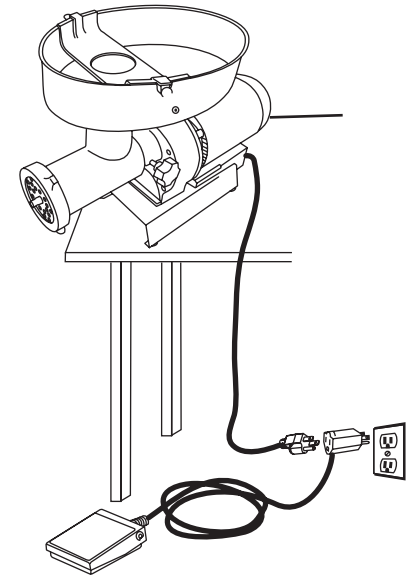

GROUNDING INSTRUCTIONS

GROUNDING

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding type plug to fit the proper grounding-type receptacle. The appliance has a plug that looks like *Figure A*. An adaptor, *Figure B*, should be used for connecting *Figure A* plugs to two-prong receptacles. The grounding tab which extends from the adaptor must be connected to a permanent ground such as a properly grounded outlet box as shown in *Figure C* using a metal screw.

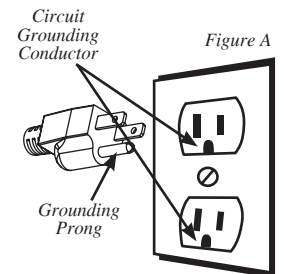


Figure A

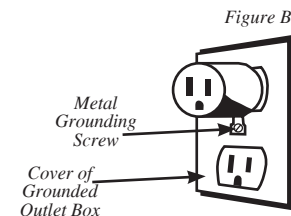


Figure B

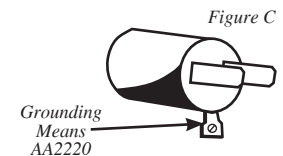


Figure C