


# Front

## WIRELESS SPEAKER

for use with Bluetooth® enabled devices

### WIRELESS Speaker USER MANUAL


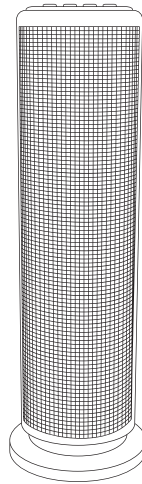


#### Wireless Speaker

For best use of this device we recommend carefully reading this user manual and keeping it for your records.


Package contains

- a. Wireless Speaker
- b. USB charging cable
- c. 3.5mm to 3.5mm audio cable

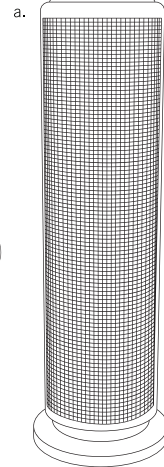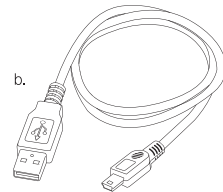

## 1. Guide

### ■ introduction

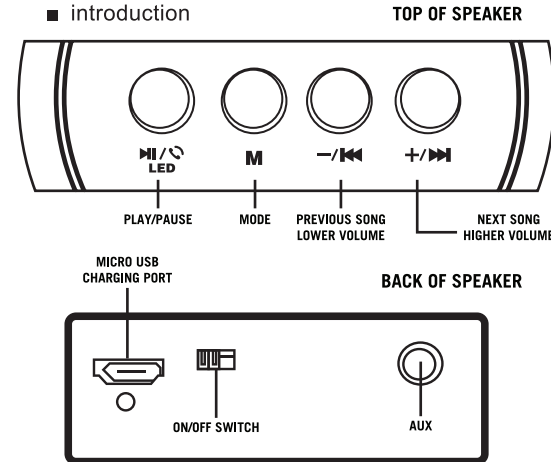

### PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR WIRELESS Speaker KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Your Wireless Speaker has an internal rechargeable battery. Improper usage may result in the Wireless Speaker becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:

1. Do not disassemble, throw away or damage the Wireless Speaker.
2. Store the Wireless Speaker in a dry place, keeping it away from damp corrosive materials and environments such as salt air.
3. Keep the Wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember a closed car acts as a green house allowing the inside temperature to possibly reach over 200F.
4. The Wireless Speaker is not a toy. Please keep it out of the reach of young children.

#### Charging the battery


This device has an internal, rechargeable battery.

1. Plug the charger cable into the Speaker.
2. Connect the charger to a USB power source. The red indicator light will display during charging.
3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the USB power source and the Speaker. The fully charged battery has power for up to 2-3 hours of talk-time or up to 60 hours of standby time. However, the talk and standby times may vary when used with different devices, settings, and environments.

# Back

## 2. Instruction

### ■ Key Function



- 1) To turn on the speaker, switch the ON/OFF button to the ON position in the back of the speaker. To turn off the speaker, switch the ON/OFF button to the OFF position.
- 2) When you turn on the device, the voice prompt will say "the bluetooth device is ready to pair." Activate the Bluetooth™ feature on the phone, and set the phone to search for wireless devices (The speaker will show on your device as VIVITAR SPEAKER.) The voice prompt will confirm that pairing was successful.

#### PLAY/PAUSE BUTTON

- 1) For incoming calls, click once to answer and once to end the call.
- 2) Press and hold for 2 seconds for the light sequences.
- 3) Click once to pause or play music.
- 4) On radio mode (see below) Plug Aux cable as antenna. Click once for frequency auto search, when you find the station that you want, Click one more time to save the station on the Bluetooth speaker, then go to two volume buttons to choose channel you want

#### MODE BUTTON

- 1) Click once for radio mode and once more for Bluetooth mode.

#### PREVIOUS SONG/LOWER VOLUME BUTTON

- 1) Press once for previous song.
- 2) Press and hold for volume down

#### NEXT SONG/HIGHER VOLUME BUTTON

- 1) Press once for next song.
- 2) Press and hold for volume up

\* Note: If the bluetooth is not paired with any device after 8 minutes it will go into "sleep mode". To re-activate wireless speaker switch the button to the OFF position then switch button back to the ON position.

For Auxiliary input plug in the included 3.5mm cable to 3.5mm audio cable to the AUX input in the back of the speaker and the other end of the 3.5mm cable into your music device. A voice prompt will signal that the connection is successful.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for speaking and listening to music.