

CHARGING

- To begin charging your speaker, connect the provided micro-USB cable to the speaker's charging port. Then connect the other end of the cable to your power source. The LED indicator light will turn red to indicate the speaker is charging.
- The red indicator light will turn off once your speaker has fully charged.
- Always disconnect the cable when charging is complete.

WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard

- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Do not expose your speaker to extremely high or low temperatures it can cause malfunction.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

Fall Hazard

Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off of the edge.

CAUTION

- Do not use abrasive cleaners to clean your speaker. It could cause scratches and damage.
- Do not bring your speaker in to contact with any sharp objects. It could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in the user instructions. This may damage the units internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your speaker battery, it is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your speaker. Other chargers may look similar, but using them could result in electric shock and could damage your speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Dispose of the speaker and its battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

SPECIFICATIONS

Model No: SP3278

Working Distance: Approx. 33 ft

Playback Time: 4 Hours

Charge Time: 3 Hours

Speaker Output Power: 5 W x2

Frequency: 100 Hz - 16 KHz

Profile: HSP / HFP / L2CAP/A2DP

Note: Battery life & charging time may vary, based on usage & types of devices used.

SOUTH BEACH

WATER-RESISTANT
WIRELESS SPEAKER
2 IN 1 POWERBANK FUNCTION

PLEASE READ BEFORE USING THIS PRODUCT

CONTENTS


- Bluetooth speaker
- Micro-USB cable
- User manual

FEATURES

- Bluetooth wireless connection
- Built-in rechargeable battery
- Built in microphone for hands-free phone calls
- IPX4 water resistant for indoor and outdoor use

LOCATION OF CONTROLS

1. Power button
2. Next track / Vol +
3. LED indicator
4. Last track / Vol -
5. Music Function
6. Built-in Microphone
7. Multi-Function Button
8. Micro-USB port
9. USB port
10. Audio jack

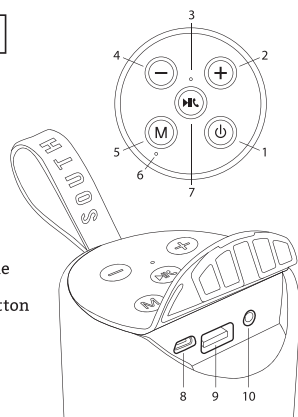

CONTROL PANELS

	POWER BUTTON Speaker ON / OFF: Press and hold (for 3 sec)
	MULTI-FUNCTION BUTTON Play / Pause: Press the button Answer a phone call: Press once End a phone call: Press once
	MUSIC FUNCTION Line in /USB/FM Radio: Press the button to switch between different music functions
	Last Track: Short-press the button Decrease the volume: Long-press the button
	Next Track: Short-press the button. Increase the volume: Long-press the button

BLUETOOTH® CONNECTION

- Power the speaker on by press-and-hold the power button. The speaker will automatically enter pairing mode when powered on.
- Turn on your device's Bluetooth from the Bluetooth menu and select "SB_SP3278" speaker.
- When paired successfully the device will make a tone to confirm the connection has been made.
- Remember to turn the speaker off after each use.

Note: The speaker will reconnect automatically if your device has been paired previously. Depending on your device's type and configuration, manual reconnection may be required each time.

SOUTH BEACH

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Argento SC is under license. All other trademarks and trade names are those of their respective owners.

©2018 Argento SC.
All Rights Reserved. Distributed by Argento SC, New York, NY 10018
Designed in New York, Made in China.
www.argentoscc.com | support@argentoscc.com

SP3278 FCC FRONT

FCC DISCLAIMER:

This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1- This device may not cause harmful interference, and
- 2- This device must accept any interference received, including Interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or on experienced radio/TV technician for help or assistance.

SP3278 FCC BACK

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions;

- 1- This device may not cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

WARNING:

To reduce the risk of electric shock, do not remove cover (or back). Refer servicing to qualified service personnel.