


Cleco®

47BA...B...

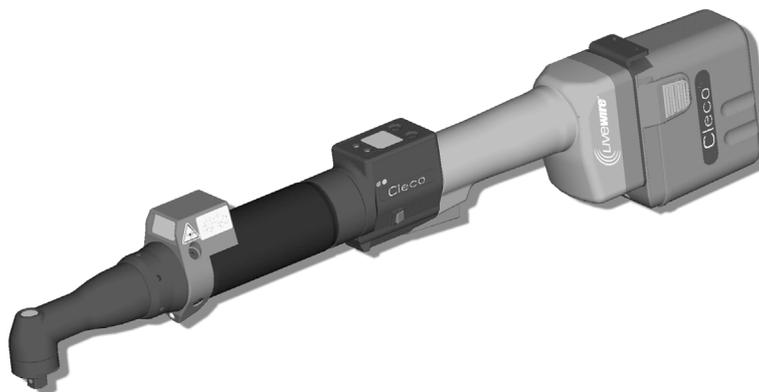

(EN) Cordless EC angle nutrunner



47 B A B ... AM3

Series

47

Power

B – Battery

Tool Style

A – Angle

Feature 1 (Data Transmission)

- IrDA
- F** – RF915MHz
- R** – RF868 MHz
- W** – WLAN: WEP, WPA
- X** – WLAN: WEP, WPA/WPA2, 802.1x

Attachment

AM3 – Square 3/8"

Max. Torque

- 15 – 15 Nm**
- 21 – 21 Nm**
- 28 – 28 Nm**
- 35 – 35 Nm**
- 50 – 50 Nm**

Battery

B – 26 V

Feature 2 (Scanner)

- S – Barcode Scanner**
- None

Retain for future reference!

For additional product information visit our website at <http://www.cooperpowertools.com>

NORTH AMERICA (NA)

Cooper Power Tools
P.O. Box 1410
Lexington, SC 29071-1410

EUROPE (EU)

Cooper Power Tools GmbH & Co. OHG
Postfach 30
D-73461 Westhausen, Germany

For this Instruction Manual

This Instruction Manual is intended for all persons who work with this tool but do not do any programming work.

The Instruction Manual

- provides important notes for safe and effective use.
- describes the function and operation of the cordless EC angle nutrunner.
- serves as a reference work for technical data, service intervals and spare part orders.
- provides information on options.

For more information on the operation of the 47BA with the control electronics see

- programming manual controller TMEB-200, no. P1895E
- programming manual TMEB-COM, no. P1898E for PC application

In the text:

47BA represents all models of the *cordless EC angle nutrunner* as described here.

- refers to required actions.
- refers to lists.

Identification text:

47BA represents all models of the cordless EC angle nutrunner as described here.

→ refers to required actions.

• refers to lists.

kursiv refers menu items, i. e.: *Diagnostics*

<...> refers elements, that have to be selected or deselected, such as buttons or control boxes, i. e.: <F5>

Courier refers names of paths and files are written in Courier font
i. e.: **setup.exe**

\ refers selection of an item from the menu i. e.: *file \ print*

Identification graphic:

← refers a movement in one direction.

↓ refers function and force.

Copyright protection

Cooper Power Tools reserves the right to modify, supplement or improve the document or the product without prior announcement. This document may not be reproduced in any way, shape or form, in full or parts thereof, or copied to another natural or machine readable language or to a data carrier, whether electronic, mechanical, optical or otherwise without the express permission of Cooper Power Tools.

Contents

1	Safety	5
1.1	Warnings and notes	5
1.2	Basic requirements for safe working practices	6
1.3	Operator training	6
1.4	Personal protective equipment	6
1.5	Designated use	7
1.6	Codes and standards	7
1.7	Noise and vibration	8
2	Scope of supply, transport and storage	8
2.1	Items supplied	8
2.2	Transport	9
2.3	Storage	9
3	Product description	10
3.1	General description	10
3.2	Operation and functional elements	11
3.3	System overview – optional accessories	16
4	Before initial operation	17
4.1	Setting up tool holder	17
4.2	Ambient conditions	17
4.3	Charging the battery	17
4.4	Replacing the battery	18
5	First Operation	19
5.1	Carrying out the rundown	19
5.2	Operating status	19
6	LCD display	21
6.1	Result display	21
6.2	Status display	22
6.3	Operating menu	24
6.4	System error messages	32
7	Maintenance	35
7.1	Cleaning instructions	35
7.2	Service schedule	36

7.3	Lubricants	37
7.4	Disassembling gear	37
7.5	Removing angle attachment 935313	38
7.6	Installing angle attachment 935313	39
8	Troubleshooting	41
9	Spare parts	47
9.1	Handle	48
9.2	Servo bar, LCD bar & trigger components	50
9.3	Motor	52
9.4	Gear + angle attachment	54
9.5	Angle attachment 935313	56
9.6	Angle attachment 525943	58
9.7	Tool holder 935290 with IrDA interface port / 935395 without	60
9.8	Fixture order list for angle attachment 935313	62
10	Technical data	63
10.1	Dimensions	63
10.2	Dimensions of tool holder (Optional)	65
10.3	Performance Data	66
10.4	Electrical data	67
11	Service	71
11.1	Recalibration	71
12	Disposal	71

1 Safety

1.1 Warnings and notes

Warning notes are identified by a signal word and a pictogram:

- The signal word describes the severity and the probability of the impending danger.
- The pictogram describes the type of danger.

WARNING!



Indicates a potentially **hazardous** situation which, if not avoided, could result in death or serious injury.

CAUTION!



Indicates a potentially **hazardous** situation which, if not avoided, may result in minor or moderate injury or property and environmental damage. If this warning is not observed, injuries, property or environmental damage may occur.



Class 2 laser product

Class 2 laser scanners use a laser diode that produces a low-power visible light beam that is comparable to a very bright source of light, such as the sun.

Do not look into the laser beam when the laser is on.

Doing so can cause damage to the eyes.

NOTE



General notes

include application tips and useful information but no hazard warnings.

1.2 Basic requirements for safe working practices

You should read all instructions.

Nonobservance of the instructions below may result in electrical shock, burns and serious injuries.

CAUTION! Work area



- Ensure there is enough space in the work area.
- Keep the work area clean.

Electrical safety

- Protect the 47BA from rain and moisture.
- Follow the safety instructions printed on the battery and charger.

Safety of persons

- Ensure a secure standing position. Maintain balance.
- Make sure that the battery is securely installed before operating the 47BA.
- Hold the 47BA tightly in the hand – be prepared for high short-term reaction torques.
- Do not carry the 47BA with the finger on the start button – prevent accidental operation.
- Do not open the battery. Contact with acid will cause injury.
- Do not look into the laser beam of tools with built-in barcode scanners.
- Follow generally valid and local safety and accident prevention rules.

Safe working with and around fastening tools

- Inspect sockets for visible damage and cracks.
Replace damaged sockets immediately.
 - Disconnect the 47BA from the battery before replacing the sockets.
 - Only use sockets for machine-controlled fastening tools.
 - Make sure that the sockets are securely inserted.
-

1.3 Operator training

All operators must be trained and experienced before operating the 47BA.
The 47BA may be repaired by authorized technicians only.

1.4 Personal protective equipment



When working

- Wear the protective goggles to protect against spurting metal splinters.



Danger of injury by being wrapped up in and caught by machinery

- Wear a hairnet.
- Wear close-fitting clothing.
- Do not wear jewelry.

1.5 Designated use

The 47BA is designed exclusively for fastening and releasing threaded fasteners.

The communication with the controller TMEB-200 / TMEB-COM / TMEC is allowed only over the following interface ports:

Types	Communications
All	IrDA interface port of the tool holder, order no. 935290
47BAW... 47BAX...	WLAN standard IEEE 802.11b
47BAR...	868 MHz with base station, order no. 961300 (EU)
47BAF...	915 MHz with base station, order no. 961301 (NA)

- Do not use it in areas where there is a risk of explosion.
- Do not open it or modify it structurally.
- Only use with accessory parts which are approved by the manufacturer (see 3.3 System overview – optional accessories, page 16).
- Do not use as a hammer or for re-bending.

1.6 Codes and standards

It is mandatory that national, state and local codes and standards be followed.

1.6.1 FCC conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1.6.2 Canada conformity

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

1.6.3 EMC

Industrial environment EMC limit class A.

The tool complies with the following EMC standards:

DIN EN 61000-6-4 Emitted interference

DIN EN 61000-6-2 Interference immunity

1.6.4 Data transmission

WLAN

EN 50371:2002

EN 301489-17 V1.2.1

EN 300328 V1.6.1

FCC Part 15.247 / RSS-210

868 MHz

EN 301489-3 V1.4.1

EN 50371:2002

EN 300220 V1.1.1

915 MHz

FCC Part 15.249 / RSS-210

1.6.5 Barcode scanner

- 21CFR1040.10 and 1040.11
except for deviations in accordance with Laser Notice 50 of July 26, 2001.
- EN60825-1:1994+ A1:2002 +A2:2001
- IEC60825-1:1993+A1:1997+A2:2001

1.7 Noise and vibration

Noise level < 60 dB(A) free speed (without load) according to ISO 3744.

Vibration values < 2.5 m/s² according to ISO 5349.

2 Scope of supply, transport and storage

2.1 Items supplied

Check shipment for transit damage and ensure that all items have been supplied:

- 1 47BA
- 1 26 VDC Lithium-ion (Li-ion) interchangeable battery
- 1 Marking foil
- 1 This instruction manual
- 1 Declaration of Conformity
- 1 Factory test certificate for transducers

2.2 Transport

Transport and store the 47BA in the original packaging. The packaging is recyclable.

2.3 Storage

For short-term storage and for protection against damage.

→ Place the 47BA in the tool holder.

For storage longer than 100 hours

→ Disconnect battery from the 47BA.

The battery is discharged by the electronics integrated in the tool.

WARNING!



Danger of explosion from short circuit

- Protect the 47BA and the battery from moisture.
- Do not bring any electrically conducting objects such as paper clips, coins, keys, nails or screws in contact with the battery contacts.
- When storing the battery outside the tool or the battery charger, cover the battery contacts.

Object	Time period	Storage temperature	Supplemental information
47BA without battery	No guideline	-25 °C to +40 °C (-13 to 104 °F)	
Rechargeable battery	Short-term	-30 °C to +45 °C (-22 to 113 °F)	
	Long-term, from 1 year	-30 °C to +30 °C (-22 to 86 °F)	30% – 50% store charged. Recharge after 1 year to prevent deep dis- charging (< 17.5 V).


3 Product description

3.1 General description

- Sturdy, brushless motor with resolver.
Shutoff is torque/angle-controlled.
- LCD display with information on status, torque and angle.
- Green OK and red NOK LED display provides information on the current fastening result.
- LED lighting makes it possible to find the screw point quickly.
- Clockwise/counterclockwise rotation
- Low vibration level
- Servo and fastening electronics are integrated in the 47BA.
- Fastening parameters are set with the TMEB-200 / TMEC controller or a PC.
- Data is transmitted between the controller and tool via infrared (IrDA) or, optionally, via WLAN (IEEE 802.11b), 868 MHz or 915 MHz.
 - Types with wireless transmission:
Parameters and rundown results are transmitted wirelessly.
 - Types without wireless transmission:
Parameters and rundown results are transmitted to the TMEB-200 / TMEC control or to a computer simply by placing the 47BA in the tool holder.
- Optionally, the tools are equipped with a 1D Linear barcode scanner.
- Built-in acoustic signal. The signal is activated after barcodes are scanned. It can also be activated after NOK rundowns for a programmable time.

3.2 Operation and functional elements

This chapter describes operational and functional elements and their tasks in the order of their respective item nos.

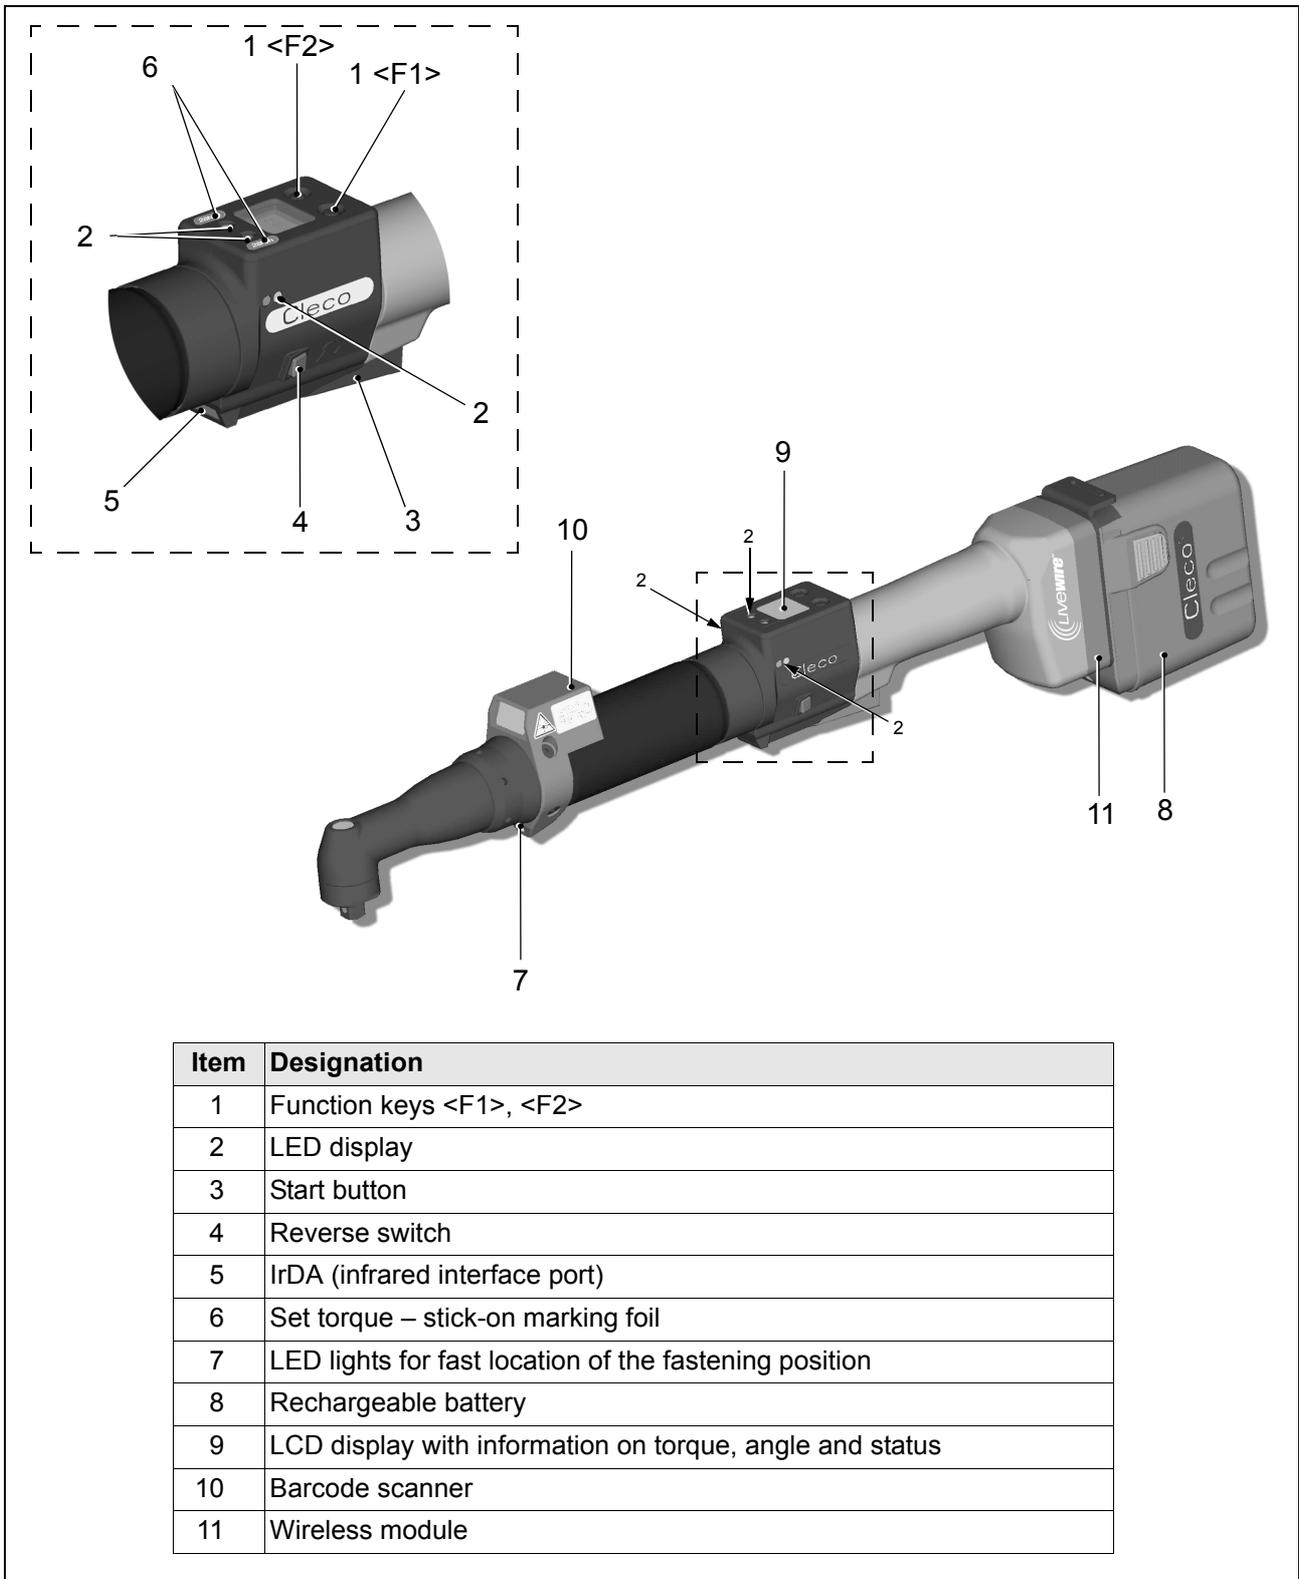

3.2.1 Function keys

Left function key <F1>

- Confirm error message
- Press once.

Programmable: Depending on how the key is programmed, actions can be carried out by pressing it briefly.

- Exit menu
- Press for two seconds.

Right function key <F1>

- Activate menu
- Press until the display shows the *Main menu* (for additional information, refer to 6.3 Operating menu, page 24).
- Select functions, if menu is activated
- Press for two seconds. Alternatively, the start button can be pressed.

3.2.2 LED display

The LED display shows the respective operating status and the result of the last fastening sequence (see 5.2 Operating status, page 19):

LEDs	Operating status	Result after screwing cycle
Steady light Green	Active	OK
Steady light Red	Active	NOK
Flashing light Green – low frequency	Energy saver mode	
Off	Sleep	

If Linking is selected on TMEB-200 / TMEC:

Flashing light Green – high frequency	Active / Settings: Linking	Linking OK
Flashing light Red	Active / Settings: Linking	Linking NOK

Software update

During *Software Update*, the actual programming process is indicated by rapid flashing alternating at irregular intervals between red and green.

NOTE



Do not interrupt programming by removing the battery during this phase.

3.2.3 Start button

The start button has 3 functions (Standard for TMEB-200 / TMEC):

- It activates the LED lighting.
→ Press the start button halfway down and hold it.
- It starts the motor, the LED light goes out.
→ Press the start button all the way down.
- It activates the barcode scanner—only for types of the 47BA...S series.
→ Press the start button all the way down.

3.2.4 Reverse switch

The reverse switch changes the rotation direction of the 47BA:

-  Clockwise rotation – for screwing in screws
Press reverse switch as far as it will go.
When the start button is pressed *Active* appears on the LCD display.
-  Counterclockwise rotation – for loosening or screwing out screws
Press reverse switch as far as it will go.
When the start button is pressed *Left* appears on the LCD display.

3.2.5 IrDA interface port

The 47BA communicates with the TMEB-200 / TMEC controller or a PC (TMEB-COM) via the IrDA interface port. For secure data transmission and for programming the 47BA, place the 47BA in the tool holder with IrDA interface port, Order no. 935290. Data transmission is possible in the *Active*, *Energy saver mode* and *Standby* operating modes, but not possible in *Sleep* (see 5.2 Operating status, page 19).


NOTE



If the data transmission has been interrupted, the 47BA reports *Synch error* on the LCD display. Replace the 47BA in the tool holder. The complete data transmission is acknowledged on the display with *Remain 512*.

3.2.6 Identification – set torque

To identify the set torque on the 47BA, glue the corresponding marking foil to the right and the left of the LCD display.

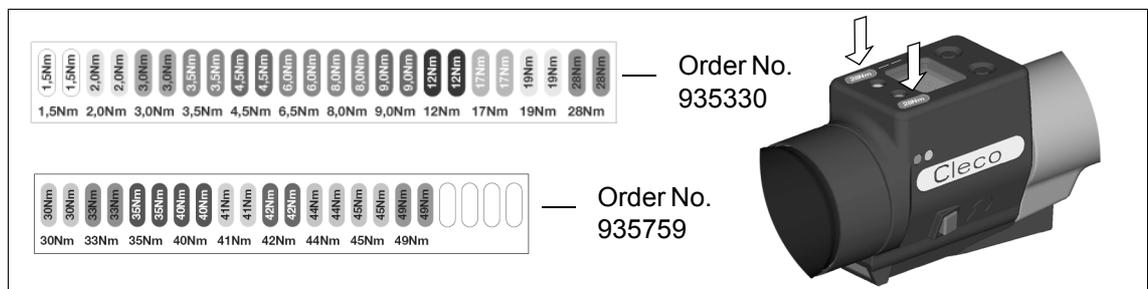

3.2.7 LED lighting

LED lighting make it possible to quickly find the screw point.

3 different activation methods are possible. Define the method by programming the TMEB-200 / TMEB-COM / TMEC correspondingly:

- Activation by pressing the start button halfway down (3.2.3 Start button, page 13).
- Time-controlled beginning at start
- You also have the option of disabling it.

The lighting distance is up to 4.7" (120 mm).

3.2.8 Rechargeable battery

For information on the battery, see

4.3 Charging the battery, page 17

4.4 Replacing the battery, page 18

10.4.1 Battery power supply, page 67.

3.2.9 LCD display

See 6 LCD display, page 21

3.2.10 Barcode scanner

For tools of the 47BA...S series, the built-in barcode scanner is a class 2 laser scanner with a wavelength of 650 nm.

CAUTION!



Eye injury from class 2 laser beam

- Do not look into the laser beam window when the laser is on.
- Repair any damage immediately.
Damage of the optical components can cause laser radiation.
- Modifications to the barcode scanner and procedures not outlined in these operating instructions are strictly prohibited.
- Take defective devices out of operation immediately.

The barcode scanner reads one-dimensional linear barcodes:

Scanning operation	Acoustic signal
• Successful	50 ms long
• Faulty • Not within 3 seconds • <i>Canceled</i> by pressing the start button	3 times in rapid succession

Depending on how the TMEB-200 / TMEB-COM / TMEC is programmed, there are two different operating modes:

Barcode as release for further rundowns

- Press the start button on the tool; this activates the barcode scanner.
The successful scan is acknowledged by an acoustic signal.
- Press the start button on the tool again; this starts the rundown.

If is necessary to read another barcode, proceed as follows.

Barcode not necessary as release for further rundowns

- From the *Scanner* tool menu, select *Read barcode*.
- Press the start button on the tool; this activates the barcode scanner.
The successful scan is acknowledged by an acoustic signal.
- Press the start button on the tool again; this starts the rundown.

Alternative: Assign the *Read barcode* function to the left function key <F1> on the tool.

- Press the left function key <F1> on the tool once.
- Press the start button on the tool again; this activates the barcode scanner.

Programming the barcode scanner is described in the programming manual of the TMEB-200 / TMEB-COM / TMEC.

3.2.11 WLAN interface port

Tools of type 47BAW.../47BAX... are equipped with an IEEE 802.11b standard WLAN interface port in addition to the IrDA interface port. The tool uses this WLAN interface port for continuous communication with the controller. This interface port is used to transmit both the parameters and the rundown results. Data transmission is possible in the *Active*, *Energy saver mode* and *Standby* operating modes, but not possible in *Sleep* (see 5.2 Operating status, page 19). Programming and setting up the WLAN interface port are described in the programming manual of the TMEB-200 / TMEB-COM / TMEC controller.

As the counterpart, an access point that complies with the IEEE 802.11b/g standard is required.

NOTE

After the tool is switched on, it can take up to 25 seconds until the communication via WLAN is active.

3.2.12 868 MHz interface port (EU)

Tools of the type 47BAR... have an 868 MHz interface port in addition to the IrDA interface port. The tool uses this 868 MHz interface port for continuous communication with the controller. This interface port is used to transmit both the parameters and the rundown results. Data transmission is possible in the *Active*, *Energy saver mode* and *Standby* operating modes, but not possible in *Sleep* (see 5.2 Operating status, page 19). Programming and setting up the 868 MHz interface port are described in the programming manual of the TMEB-200 / TMEB-COM / TMEC controller.


The base station, Order no. 961300, is required as the remote station.

3.2.13 915 MHz interface port (NA)

Tools of the type 47BAF... have an 915 MHz interface port in addition to the IrDA interface port. The tool uses this 915 MHz interface port for continuous communication with the controller. This interface port is used to transmit both the parameters and the rundown results. Data transmission is possible in the *Active*, *Energy saver mode* and *Standby* operating modes, but not possible in *Sleep* (see 5.2 Operating status, page 19). Programming and setting up the 915 MHz interface port are described in the programming manual of the TMEB-200 / TMEB-COM / TMEC controller.

The base station 961301 is required as the remote station.

3.3 System overview – optional accessories

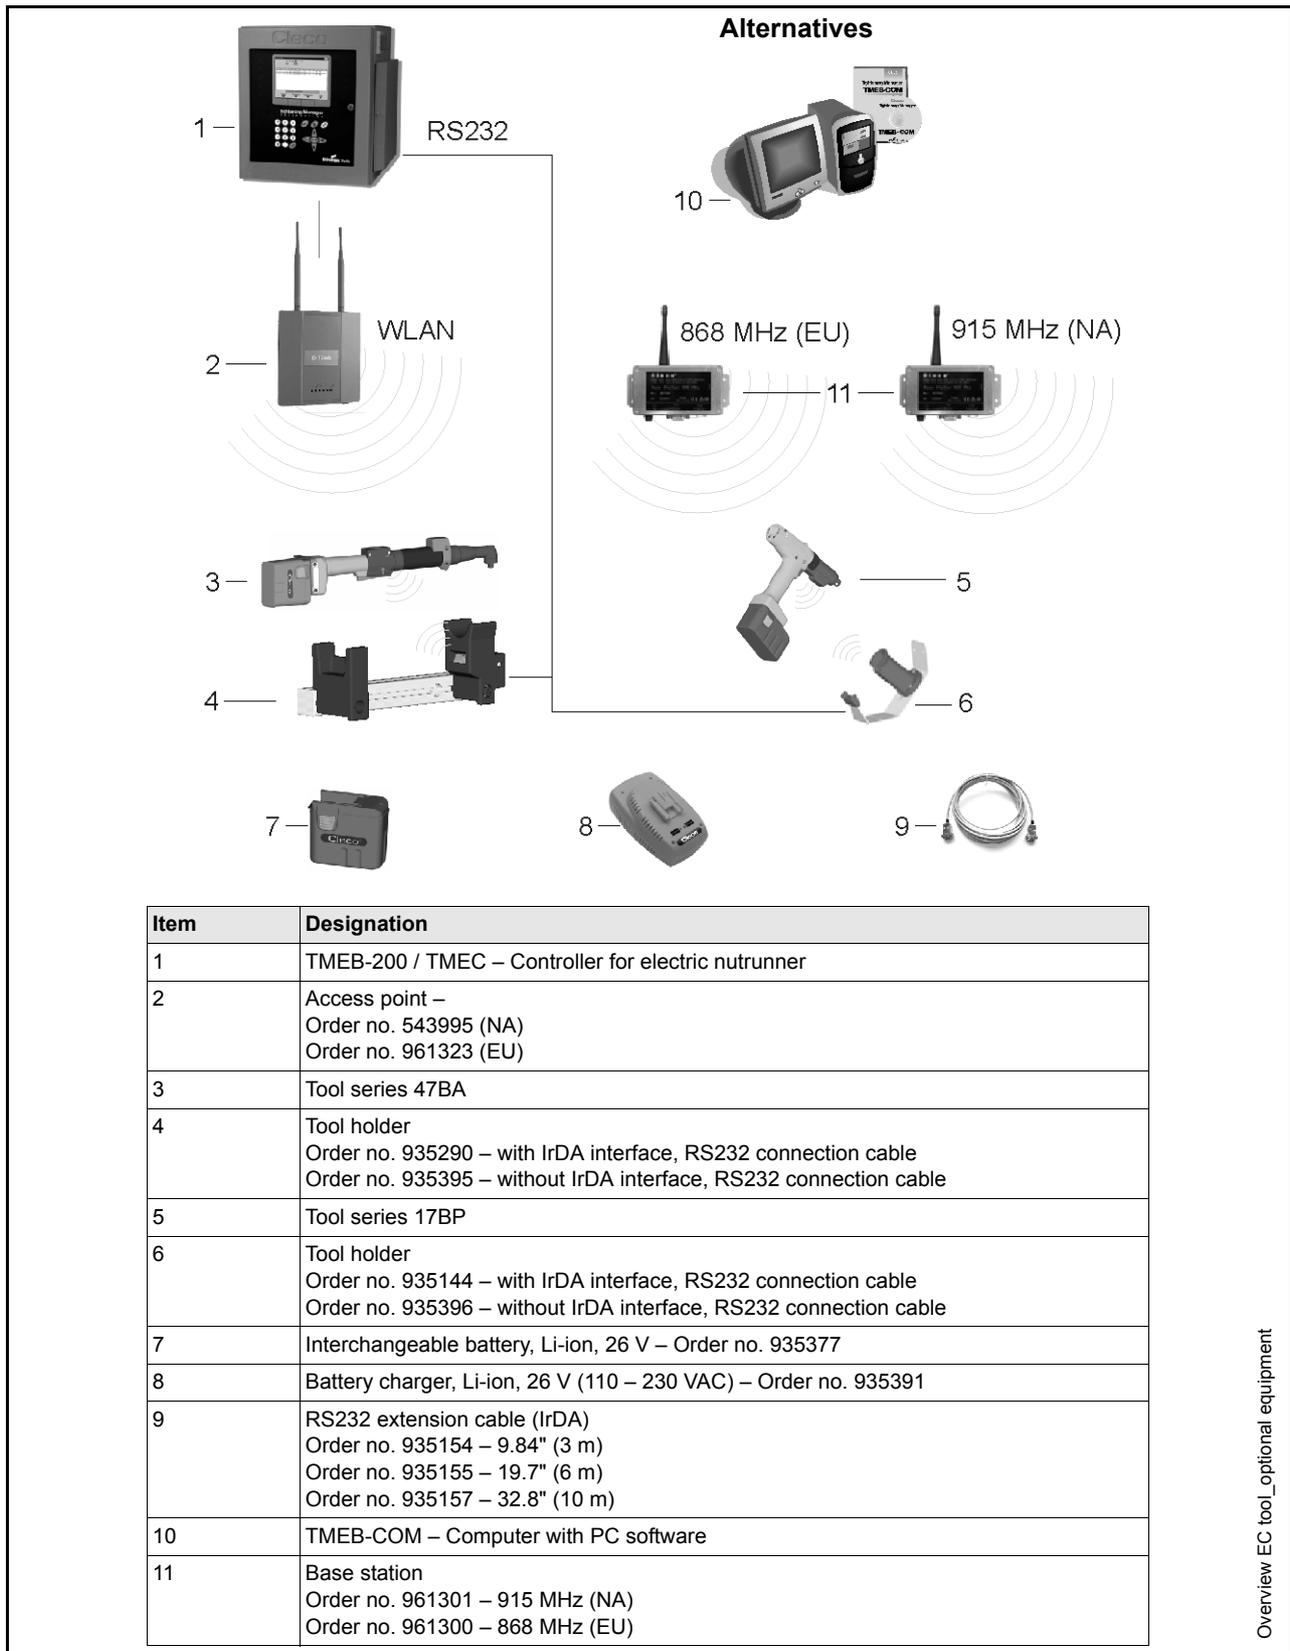

4 Before initial operation

The 47BA has been configured by Cooper Power Tools. A setting for your specific screw joint needs must only be made with the TMEB-200 / TMEC controller or a PC by a qualified person. For more information, refer to the TMEB-200 / TMEB-COM / TMEC programming manual.

4.1 Setting up tool holder

→ Mount the tool holder on a stable base.

For tool holder with IrDA interface port:

- Select the location in such a way that no outside light shines onto the tool holder. This can inhibit data transmission.
- Lay the connection cable in such a way that there is no danger that persons can trip.

4.2 Ambient conditions

Ambient temperature	0 °C (32 °F) to maximum +40° C (+104° F)
Humidity	0 to 80 %, not with dew
Working height	up to 1000 m above sea level

4.3 Charging the battery

Charge fully before first use.

Battery is only partly charged when delivered.

- Fully charge before first use.

WARNING!



Electrical shock, overheating or leakage of corrosive liquid from the battery can occur when using incorrect chargers or batteries.

- Use only original CLECO batteries and chargers. They are designed for use together.


NOTE



With proper use, the battery can be charged at least 800 (60% capacity) times. Here, the following is important:

- Battery charging temperature: 5 °C to +45 °C (+41 °F to +113 °F)
- Follow the safety instructions printed on the battery and charger.
- Fully charge new batteries or those not used for a long time.
- Do not totally discharge the battery (< 17.5 V).
- Protect the battery from impact.
- Keep the charger and battery contacts clean and dry.
- Protect the battery from moisture.
- The battery can remain in the charger when not in use: the self-discharging is very low.
- Replace used batteries and recycle them (see 12 Disposal, page 71.)


4.4 Replacing the battery

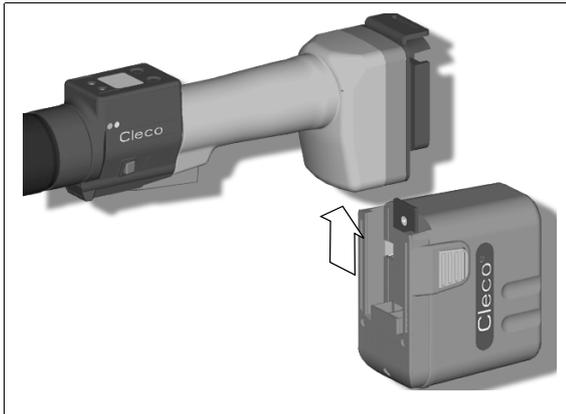

Inserting the battery

- Insert the battery into the tool guide until the catches securely engage.

Fig. 4-1:

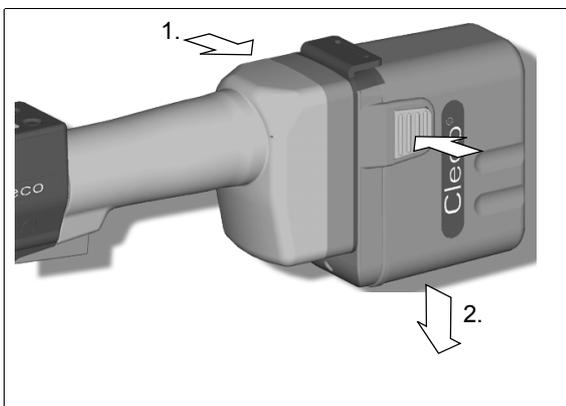

Removing the battery

- Press the catches together and pull the battery out of the handle.

Fig. 4-2:

5 First Operation

5.1 Carrying out the rundown

Make sure that the battery is securely installed before operating the 47BA. The 47BA is now ready for use. After you press and release the start button, the LCD display reads *Ready*.

Types with wireless transmission continuously communicate with the controller. The tool automatically receives the parameters and, when the rundown is complete, automatically sends the rundown results to the control system. Programming and setting up the wireless interface port are described in the programming manual of the TMEB-200 / TMEB-COM / TMEC controller.

Types without wireless transmission must be placed in the tool holder when the rundown is complete. The rundown results are transmitted and shown under the *Run screen* menu item.

5.2 Operating status

The operating modes change in the following order.

The following functions are available depending on the display:

Operating status	LED display	LCD display	Function
Active	Steady light: Red – Rundown NOK Green – Rundown OK	On	Screws Data transmission

Automatic switch to the following after 1 minute idle time:

Energy saver mode	Flashing light Green	Off	Data transmission
-------------------	----------------------	-----	-------------------

Automatic switch to the following after further 10 minutes:

Sleep	Off	Off	Data transmission not possible
-------	-----	-----	--------------------------------

Manual switch from *Sleep* to *Active*:

Press down start button and hold down for approx. 1 second.

To switch off the 47BA manually, pull out the battery.

6 LCD display

The LCD display on the tool is divided into the result display, status display, operating menu and system error messages.

6.1 Result display

OK
T 12.00
A 100

The LCD display consists of a three lines, each with 6 characters, to display the status, torque and angle. The result display is updated after the rundown ends.

First line – result:

OK	Result is OK
NOK	Result is not OK
OFF	Torque transducer offset error
CAL	Torque transducer calibration error
ENC	Angle encoder error
IP	Current overload in output section
IIT	Requested motor output is too high
TMAX	Maximum fastening time exceeded
RC	Rundown canceled by disabled start signal
TS	Depth sensor signal was enabled at start or was subsequently disabled during the rundown (only for 17BP series)
Tq<	Torque too low
Tq>	Torque too high
A<	Angle too low
A>	Angle too high
Error	Error occurred

The status is displayed in alternation with the Application being used.

Second line – Shut-off torque in Nm:

T Final torque

Third line – Shut-off angle in degrees:

A Final angle

OK	☒
T 12.00	
A 100	

For types with wireless transmission, an interrupted data connection to the TMEB-200 / TMEB-COM / TMEC is indicated by the ☒ symbol at the top right of the LCD display.

6.2 Status display

The status display is divided into the "Standard" and "Linking" modes. "Standard" is selected if "Linking" is not enabled on the TMEB-200 / TMEB-COM / TMEC (see **Advanced Application Builder\Linking**). The application is selected at the Run Screen or via the App. selection inputs.

Ready	No other status messages take priority. The tool is ready.
Remain 512	Number of remaining rundowns that can still be carried out until the rundown data memory is full and the rundown data have to be transmitted to the TMEB-200 / TMEB-COM / TMEC.
Emerge Strate	<i>Emergency strategy</i> active. Is displayed if emergency strategy is currently active and with that no communication with TMEB-200/TMEB-COM/TMEC is necessary. On Tool are the latest 512 rundown results stored.
Job comple Sync	All fastening sequences have been completed. → Synchronize the tool with the TMEB-200 / TMEB-COM / TMEC.
No Job Sync	No fastening sequences have been initialized. → Synchronize the tool with the TMEB-200 / TMEB-COM / TMEC.
Parame not set	No fastening sequence parameters have been set. → Check the Application and Tightening group selected on the TMEB-200 / TMEB-COM / TMEC to determine whether the tool settings and process programming have been carried out.
App locked Sync	Application locked. → Synchronize the tool with the TMEB-200 / TMEB-COM / TMEC.
Reject Releas Sync	Reject Release active. The tool has been programmed in Advanced Application Builder\Reject Release . → Depending on the programming, unlock the tool via the external input <i>NOK release</i> or Release on Backoff. To unlock via the external input <i>NOK release</i> , set the external input and synchronize it with the TMEB-200 / TMEB-COM / TMEC.

Sync Error	Error in last data synchronization with the TMEB-200 / TMEB-COM / TMEC. → Synchronize the tool with the TMEB-200 / TMEB-COM / TMEC again.
Tool not Init	Tool has not yet been synchronized with a TMEB-200 / TMEB-COM / TMEC. → Carry out initial synchronization of the tool with the TMEB-200 / TMEB-COM / TMEC.
Input Enable Missin	The <i>Tool Enable</i> input is missing. → Set the <i>Tool Enable</i> input. → Synchronize the tool with the TMEB-200 / TMEB-COM / TMEC. This message can appear only if External Tool Enable has been activated in Advanced Application Builder\System settings .
Need Part ID	Tool disabled since no valid barcode data has been set. → Send the barcode to the TMEB-200 / TMEB-COM / TMEC. → Synchronize the tool with the TMEB-200 / TMEB-COM / TMEC once again.

Additional messages in "Linking" mode

N.Pos1 of 3 Rpl 0	First line: The next position to be fastened. Second line: Number of positions. Third line: Number of repetitions at this position in case of an NOK rundown.
Linkin No Result	Linking has been cancelled without a batch result. Not all of the positions in the tightening group have been programmed. → Check the Application and Tightening group selected on the TMEB-200 / TMEB-COM / TMEC to determine whether the tool settings and process programming have been carried out.
Linkin OK	Linking result OK.
Linkin NOK	Linking result NOK.



Linking disabled.

→ Synchronize the tool with the TMEB-200 / TMEB-COM / TMEC.


6.3 Operating menu

6.3.1 General

The operating menu on the tool is divided into a main menu and submenus. You can navigate through the menus using the two function keys below the LCD display. In the following description, <F1> is used for the left function key and <F2> is used for the right function key. The menu is activated by pressing the right function key, <F2>. The menu can be disabled by configuring appropriate parameter in the controller.


Basic functions:

- <F2>: Activate main menu.
- <F1>: Go to previous menu item.
- <F2>: Go to next menu item.
- Press <F1> longer than 2 seconds to go to the next higher menu level. If the main menu is activated, the system goes into production mode.
- Press the start button or <F2> longer than 2 seconds to activated the highlighted item or execute the highlighted action. Actions that start the tool can be carried out only by pressing the start button.
- If the menu is enabled, no rundowns are possible.
- Each submenu has an entry for *Back*.

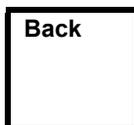

Enables the main menu.

6.3.2 Structure

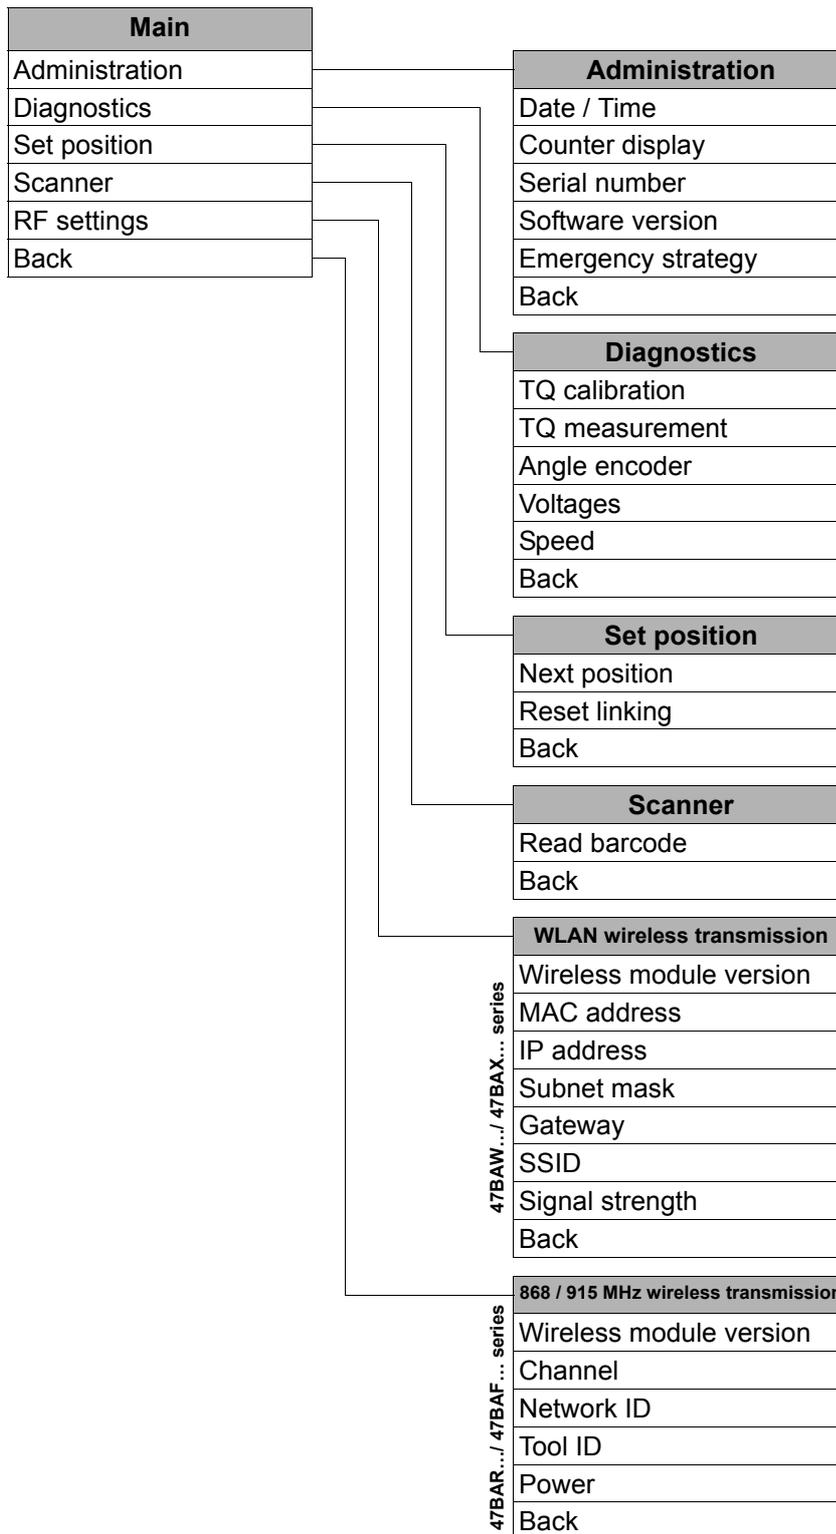

6.3.3 Main menu

>Main Admini strati	<i>Administration</i> – General items such as Date/Time, Counter display, etc.
>Main Diag- nostic	<i>Diagnostics</i> – Diagnostic functions for the tool.
>Main Posi- tion	<i>Position</i> – Selects the position to be used next.
>Main Scan- ner	<i>Scanner</i> – Deletes a previously read barcode and activates a new read cycle.
>Main RF-SET	<i>RF settings</i> – Displays the settings used for wireless transmission.

6.3.4 Administration submenu

Time 07:47 30.09	Date/Time Displays the tool system time. The system time can be displayed in US or European format. → Refer to "Setting the system time on the TMEB-200 / TMEB-COM / TMEC under Administration\Date\Time .
Counte 99 999999	Counter display The tool counter display is incremented after each rundown throughout the service life of the tool. → Refer to "Counter display on the TMEB-200 / TMEB-COM / TMEC under Diagnostics\Tool\Tool Memory .
S/N 000000 245	Serial number Displays the tool serial number. → Refer to "Serial number on the TMEB-200 / TMEB-COM / TMEC under Tool Or Diagnostics\Tool\Tool Memory .

Vers. V1.00. 00	Software version on controller board Displays the installed software version.
-----------------------	---

Servo V:T108 N00015	Software version on servo Displays the installed software version. Displays the installed software version.
---------------------------	---

NOTE

The emergency strategy can be activated only if *Emergency Strategy* has been enabled on the TMEB-200 / TMEB-COM / TMEC under **Advanced Application Builder\System settings**.

Emerge Strate locked	Emergency strategy disabled. → Enable the emergency strategy on the TMEB-200 / TMEB-COM / TMEC under Advanced Application Builder\System settings\Enable emergency strategy .
----------------------------	---

Emerge Strate Off	Emergency strategy off. If it has been enabled on the TMEB-200 / TMEB-COM / TMEC under Advanced Application Builder\System settings\Enable emergency strategy , you can switch the emergency strategy on and off using the tool start button or by pressing <F2> for 2 seconds. The Emergency strategy is disabled automatically when the tool links to the TMEB-200 / TMEB-COM / TMEC
-------------------------	--

Emerge Strate On	Emergency strategy on. If the emergency strategy is enabled and <i>Linking</i> is disabled, the fastening parameters of the last selected Application are used. For <i>Linking</i> operating mode, all steps are used with the corresponding parameters of the last selected Tightening Group. The memory of the tool stores data from up to 512 rundowns. If more rundowns than this are executed while the Emergency strategy is active, the oldest results are always discarded once 512 rundowns have been recorded.
------------------------	--

Emerge Active	<i>Emergency strategy active</i> . Is displayed during fastening.
------------------	---

6.3.5 Diagnostics submenu

Cal OK
K 1.11
O 0.00

TQ calibration

This test function cyclically recalibrates the system with the values used immediately before the start of a rundown. For this, the tool must not be tensioned!

First line: Calibration test and status.

Second line: TQ calibration voltage.

Third line: Offset voltage. If a value lies outside the tolerance range, the corresponding error is displayed.

Value	Rated value	Tolerance
Calibration offset	0 V	± 45 mV
TQ calibration voltage:	1.122 V	± 32 mV

Torque
T 5.57
T 8.23

TQ measurement

In this test function, after the start button is pressed, the same calibration is carried out as immediately before the start of a rundown. For this, the tool must not be tensioned!

Then, the tool starts with speed "0". The torque is continuously measured and displayed until the start button is released.

Second line: Current torque.

Third line: Peak value, highest value since the start button was pressed.

Angle
A 360
OK

Angle encoder

The start button starts the tool at 30% of the maximum speed. After one revolution of the output shaft (nominal angle 360°), measured with the resolver, the tool is stopped. During a fixed dwell time of 200 ms, any further angle pulses occurring are traced. The total result is shown as Actual Angle. If the test run is not terminated by a monitoring criterion and the batch result is greater than or equal to 360 degrees, it is evaluated and displayed as OK. Monitoring criteria are the torque and a monitoring time.

If the torque exceeds 15 % of the calibration value (even during the dwell time), or if the monitoring time of 4 seconds expires, the test run is terminated with a *TQ>* or *TMAX* result. However, you specifically need to check whether the output shaft has actually turned by the value indicated (e. g. by placing a mark on the spindle). If the angle reached by the output shaft does not agree with the value displayed, either the angle factor has been entered incorrectly or the resolver is defective.

Voltage
V26.00
L18.00

Voltages

Second line: Current battery voltage. To ensure high utilization potential, this voltage is monitored continuously during fastening operation. If the voltage drops below limit, a warning output on the tool.

Third line: Programmed value. This can be changed using the TMEB-200 / TMEB-COM / TMEC under τ_{001} .

Speed
Rpm466
T 0.02

Speed

The start button starts the tool at the maximum speed.

Second line: Current output shaft speed.

Third line: Current torque.

Rotational speed measurement is based on the angle information of the resolver.

If you release the start button, the tool stops. As a safety function the torque is monitored by the tool transducer. If it exceeds 15 % of its calibrated value, the speed measurement is terminated.

6.3.6 Set position submenu – only with Linking enabled

<Posit
Change
Positi

Selects the position to be used next.

Select
Positi
2/6

You can skip the position.

You can select the position to be used next using the function keys:

- <F1>: Activate the previous position.
- <F2>: Activate the next position.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

>Posit
Reset
Positi

Reset linking to position 1. The operator could terminate linking.

6.3.7 Scanner submenu – only for types of the 47BA...S series

<Scann
Activa
Scanne

Scanner – Deletes a previously read barcode and activates a new read cycle.

- Press the start button or <F2> longer than 2 seconds.

6.3.8 WLAN wireless transmission submenu – only for types of the 47BAW... / 47BAX... series

The WLAN RF settings submenu shows the settings being used.

If no actions are carried out, the menu is automatically exited after 60 seconds.

Programming the RF settings for WLAN data transmission is described in the programming manual of the TMEB-200 / TMEB-COM / TMEC.

Versio #27173 Dec 1	Displays the installed software version of the wireless module.
MAC 00302e e162f8	MAC address display
IP 010 .122.0 77.110	IP address display
Sub255 .255.2 40.0	Subnet display
Gat010 122.0 61.001	Gateway display
SSID CPT	SSID display. Only the first 12 characters are displayed.
N: 34 S: -60 L: -94	<p>When the start button is pressed, the current wireless signals are displayed.</p> <p>17BPW... / 47BAW...: N = Ratio of signal strength to ambient noise (dB) S = Signal strength (dBm) L = Ambient noise (dBm)</p> <p>17BPX... / 47BAX...: N = Signal strength (%) S = Signal strength (dBm)</p>

6.3.9 868/915 MHz wireless transmission submenu – only for types of the 47BAR..., 47BAF... series

The 868/915 MHz RF settings submenu shows the settings being used. If no actions are carried out, the menu is automatically exited after 60 seconds.

Programming the RF settings is described in the TMEB-200 / TMEB-COM / TMEC programming manual.

Versio
B868
MC-tin

Displays the installed software version of the wireless module.

Chan-
nel
1/3

Displays the radio channel being used and allows you to configure settings.

With 868 MHz, you can select channel 1 – 3.

With 915 MHz, you can select channel 1 – 8.

- <F1>: Activate a lower channel.
- <F2>: Activate a higher channel.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

NOTE



The channel must match the set channel of the base station.

Networ
ID
1/16

Defines the network identification. You can operate no more than 4 tools per network ID.

- <F1>: Activate a lower network ID.
- <F2>: Activate a higher network ID.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

NOTE



The network ID must match the set network ID of the base station.

Tool ID 1/4

Displays the tool ID and allows you to configure settings. You can select a tool ID from 1 – 4.

- <F1>: Activate a lower network ID.
- <F2>: Activate a higher network ID.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

NOTE

Each tool can be used only once for each base station.

Power 25 mW

Displays the transmission power and allows you to configure settings.

- <F1>: Activate a lower transmission power.
- <F2>: Activate a higher transmission power.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

For 868 MHz, the maximum transmission power depends on the selected channel. If channel 1 is selected, you can choose between 1, 5, 10, and 25 mW for the transmission power. If channel 2 or 3 is selected, you can choose either 1 or 5 mW for the transmission power. For 915 MHz, you can choose between 1, 5, 10, and 25 mW.

- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

6.4 System error messages

NOTE

If a error is displayed, fastening is disabled until the error is acknowledged with the left-hand button on the tool. In the event of serious hardware errors, the tool is not enabled again even after the error is acknowledged, and must be returned to the manufacturer for repair.

Servo Error Init

Initialization error in tool servo.

- Remove the battery and then re-insert it. If this does not help:
- Return tool to manufacturer for repair.

Servo Error PWM	Speed specification from the measuring board to the servo is faulty. → Remove the battery and then re-insert it. If this does not help: → Return tool to manufacturer for repair.
Servo Error IIT	Too much power is being demanded from the tool. → Switch the tool off for a time so that it can cool down. → Increase the cycle time, reduce the fastening time or the torque.
Servo Error IOFF	The servo's current sensor is detecting a current offset error. → Return tool to manufacturer for repair.
Servo Error Other	Collective servo error caused by hardware. → Return tool to manufacturer for repair.
Servo Error IP	The current setpoint has been exceeded. There may be a short circuit. → Return tool to manufacturer for repair.
Servo Error Temp >	The servo has overheated. → Switch the tool off for a time so that it can cool down. → Increase the cycle time, reduce the fastening time or the torque.
Servo Error TempM >	The tool motor has overheated. → Switch the tool off for a time so that the motor can cool down. → Increase the cycle time, reduce the fastening time or the torque.
Servo Error Voltage	Operating voltage is outside the admissible range. → Change the battery. If this does not help: → Return tool to manufacturer for repair.
Servo Error Curr >	Current at servo output stage is too high. There may be a short circuit. → Return tool to manufacturer for repair.
Servo Error Angle	Tool angle encoder is sending incorrect signals to the servo amplifier. → Return tool to manufacturer for repair.

Low voltage warning	Warns that battery is running low. → Recharge battery or replace it with one that is already charged.
Tool Error Counter	The rundown counter could not be read or written to. → Return tool to manufacturer for repair.
Tool Error Ident	Tool memory could not be read. → Return tool to manufacturer for repair.
Tool Error Start	Two-stage start button defective. → Return tool to manufacturer for repair.
Transd Ref.V. Error	Transducer reference voltage error. → Return tool to manufacturer for repair.
Trans CAL Error	Transducer calibration voltage error. Tool was not discharged at time of calibration. → Allow tool to discharge and try again. If this does not help: → Return tool to manufacturer for repair.
Trans Off Error	Transducer offset voltage error. Tool was not discharged at time of calibration. → Allow tool to discharge and try again. If this does not help: → Return tool to manufacturer for repair.
Unknow Error	General collective error. → Return tool to manufacturer for repair.

7 Maintenance

7.1 Cleaning instructions

For tools with a built-in barcode scanner, the window must be free of dirt.

- Clean it regularly—or immediately, if it becomes dirty—using a damp cloth and a conventional window cleaner. Do not use acetone for cleaning. A dirty window may make it impossible to read barcodes.

7.2 Service schedule

Regular maintenance reduces operating faults, repair costs and downtime. In addition to the following service plan, implement a safety-related maintenance program that takes the local regulations for repair and maintenance for all operating phases of the tool into account.

CAUTION!



Danger of injury due to unintentional activation
– before service - disconnect the 47BA from the battery.

After ... fastening cycles ¹⁾)	Actions
100.000	<ul style="list-style-type: none"> → Check to ensure the battery adapter, scanner and radio adapter are seated securely. → Check the tool and battery for damage. → Check to ensure scanner window is transparent. → Check to ensure battery contacts are clean. → Check to ensure battery charger is clean. → Check the gearing and angle head for leaks
500,000	<ul style="list-style-type: none"> → Use grease-dissolving agent to clean the angle head and gearing components and then regrease, see 9.4 Gear + angle attachment, page 54. 9.5 Angle attachment 935313, page 56 9.6 Angle attachment 525943, page 58 → Check the angle head and gearing components for wear and replace if necessary. → Check battery guide, locking mechanism and contacts for wear and replace if necessary.
1 million	<ul style="list-style-type: none"> → Use grease-dissolving agent to clean the angle head and gearing components and then regrease, see 9.4 Gear + angle attachment, page 54. 9.5 Angle attachment 935313, page 56 9.6 Angle attachment 525943, page 58 → Check the angle head and gearing components for wear and replace if necessary. → Check battery guide, locking mechanism and contacts for wear and replace if necessary. → Recommendation: Recalibrate tool, see 11.1 Recalibration, page 71.
2.5 million	<ul style="list-style-type: none"> → General overhaul. Send it to Cooper Power Tools.

1) For the number of fastening cycles, refer to the counter display in 6.3.4 Administration submenu, page 26

7.3 Lubricants

For smooth function and a long service life, use of the correct grease types according to the table is essential.

Grease lubricants according to DIN51502 /ISO3498


Order no. 	Packing unit [kg]	DIN 51502				Mobil®			Nye Lubricants, Inc.	Dow Corning
912554	15	G-POH	Aralub FD00	Energrease HTO	GA 0 EP Expa 0	Mobilplex 44	–	Special Gear H	–	
933027	1	KP1K	–	–	–	–	Microlube GL 261	–	–	
912724	1	K-F2K	–	–	elf Multi MoS ₂	–	UNIMOLY GL 82	–		Molykote BR 2
541444	0.8	–	–	–	–	–	–	–	Rheolube 363AX-1	

7.4 Disassembling gear

NOTE




If the 47BA is opened, the warranty is voided. Only specialized technicians should be allowed to open the gear for maintenance reasons.

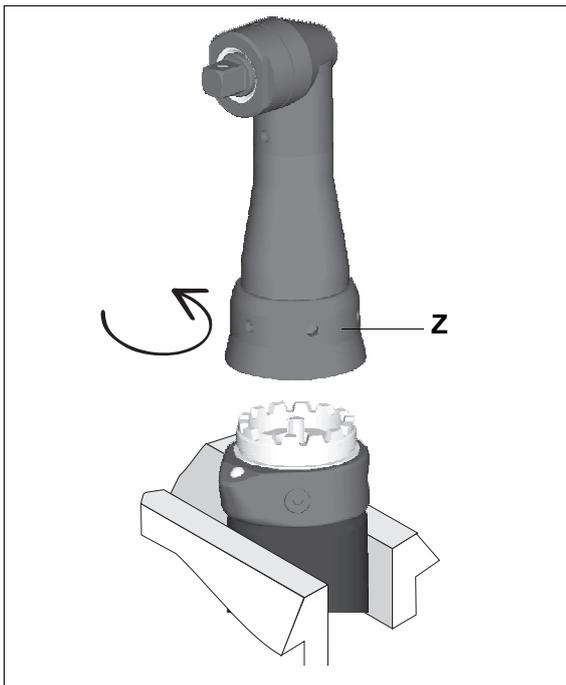

- Carefully tension the 47BA at the contact faces in a vise with plastic jaws (max. 15 mm high).
- Release the Z by turning it counter-clockwise.
Hook wrench, order no. 933336.
- Completely remove angle attachment.
- Pull gear completely off angle attachment.


7.5 Removing angle attachment 935313

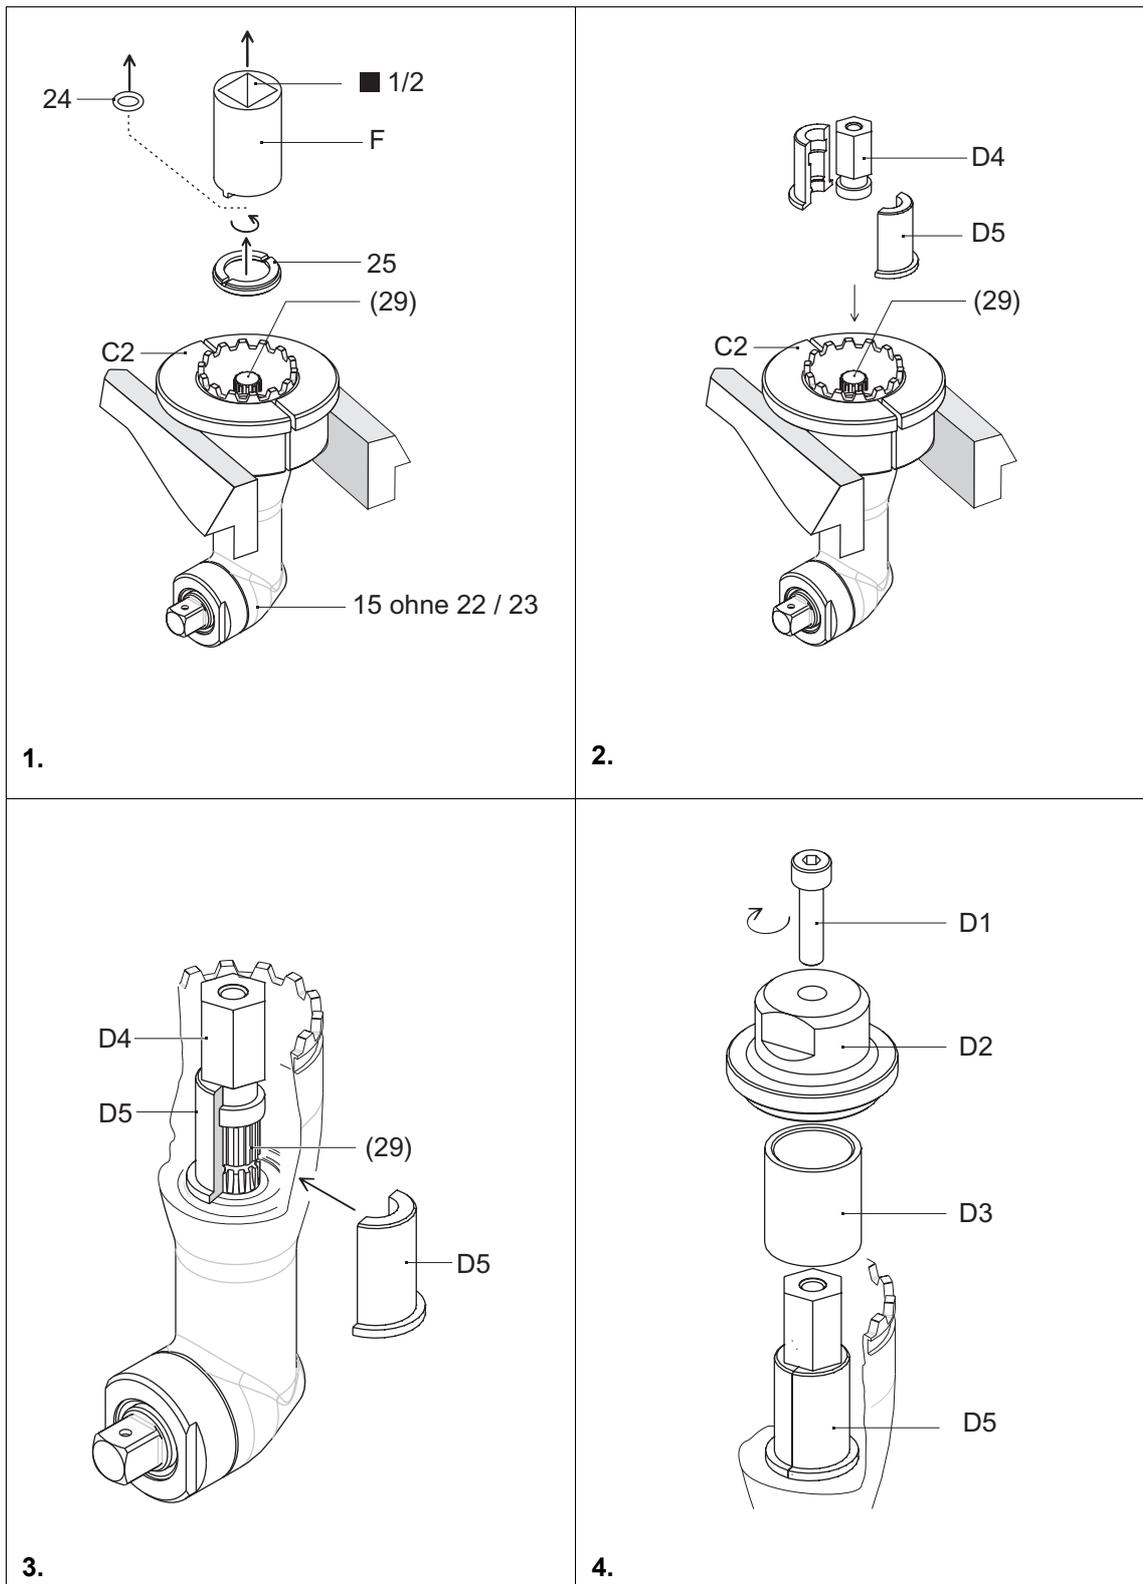


Index: See 9 Spare parts, page 47; 9.8 Fixture order list for angle attachment 935313, page 62

7.6 Installing angle attachment 935313

Drive spindle

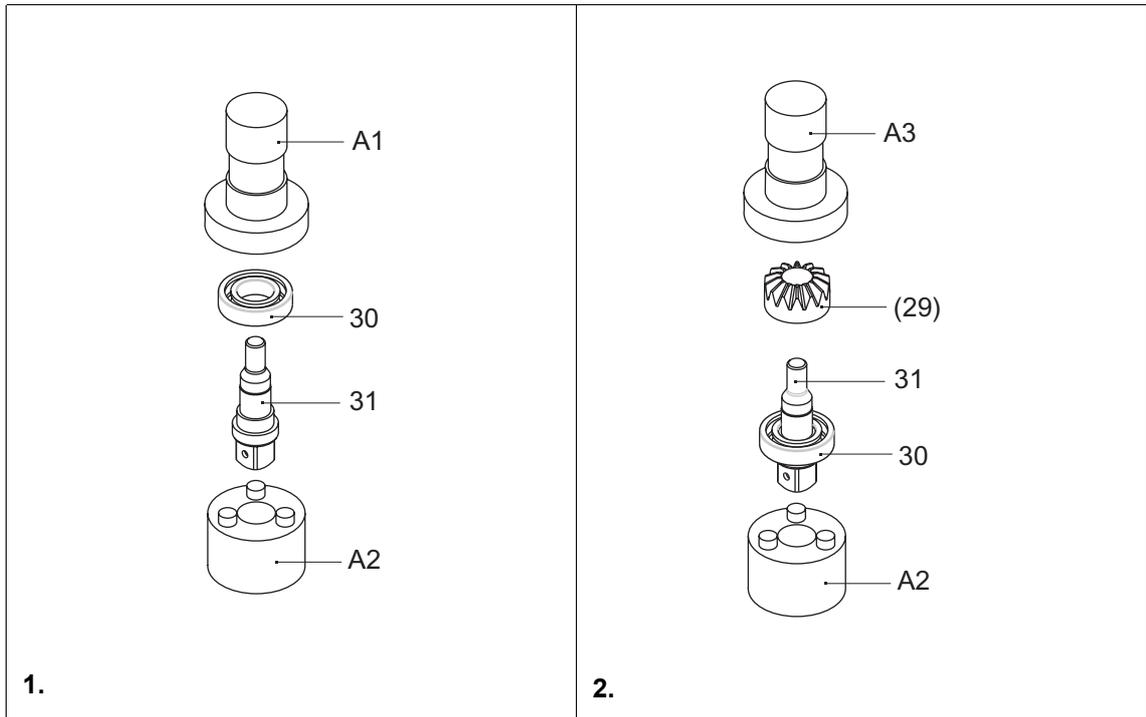


Bevel gear spindle

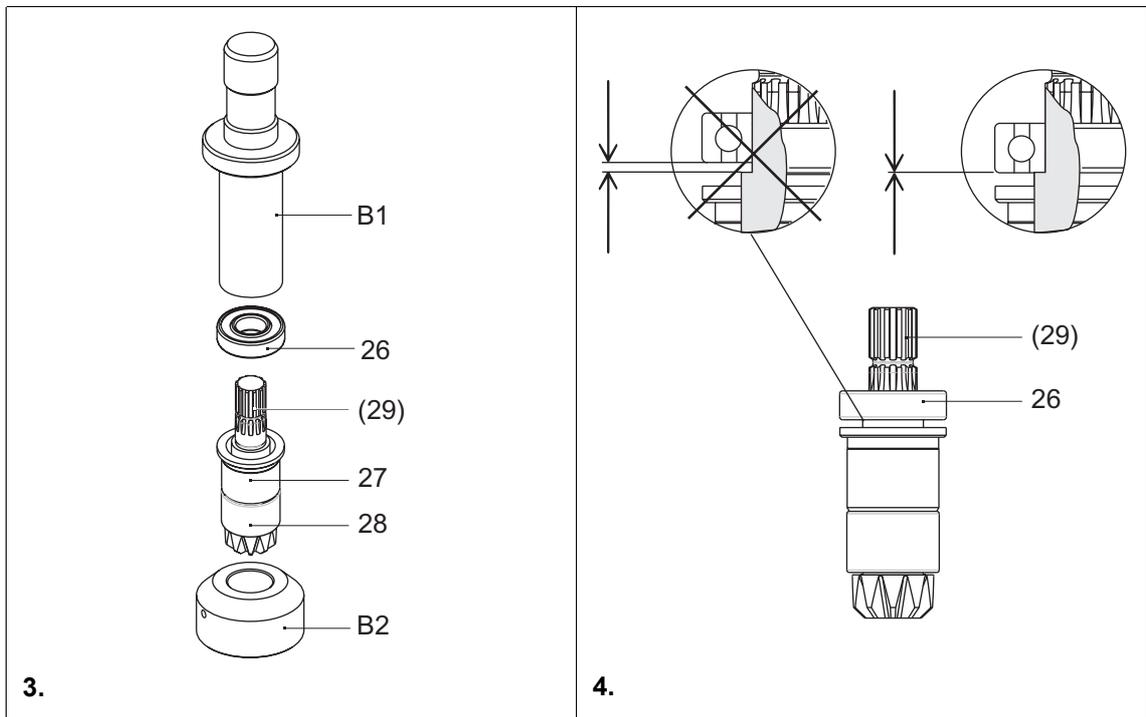

Index: See 9 Spare parts, page 47; 9.8 Fixture order list for angle attachment 935313, page 62

Bevel gear and drive spindle in angle attachment

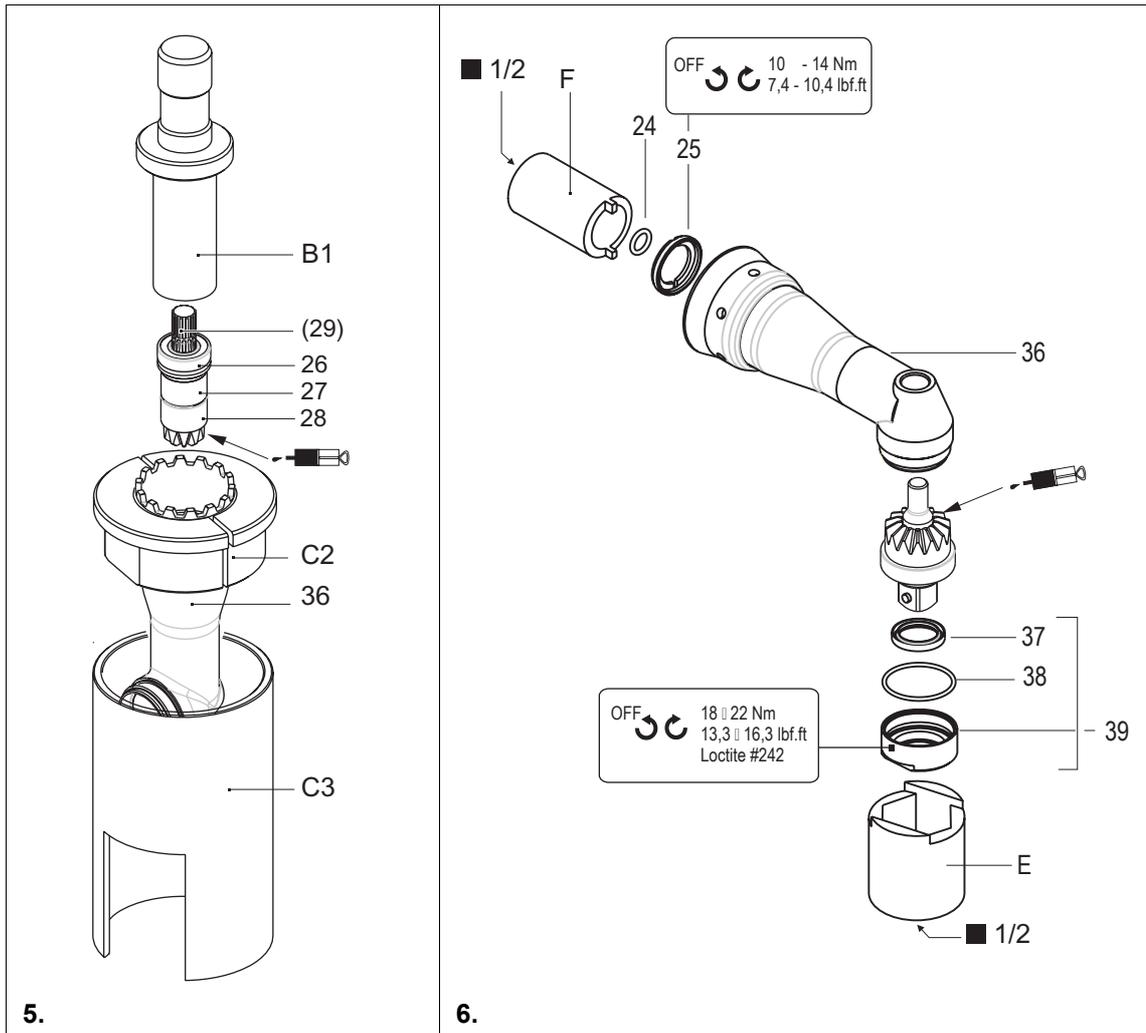

Index: See 9 Spare parts, page 47; 9.8 Fixture order list for angle attachment 935313, page 62

8 Troubleshooting

Problem	Possible cause	Action
General – Tool		
Tool does not start if reverse switch is active.	Backoff speed parameter is set to 0 rpm.	➤ Adjust the backoff speed value in the <i>Standard Application Builder</i> screen of the controller.
Tool light not active.	Deactivated by parameter setting.	➤ Adjust the parameter for <i>Tool light</i> in the <i>Advanced Application Builder/System Settings</i> screen of the controller.
Operating menu of tool not, or only partly, enabled.	Disabled by parameter setting.	➤ Activate the <i>Enable Tool menu</i> parameter in the <i>Advanced Application Builder/System Settings</i> screen of the controller.
Free speed parameter value is not reached.	Battery voltage is too low.	➤ Use a fully charged battery.
Could not reach the expected number of rundowns with one battery charge.	Battery is not fully charged.	➤ Use only fully charged batteries.
	Low voltage warning is not set to minimum value.	➤ In the <i>Tool Setup</i> screen of the controller, set the value for <i>Low Level</i> to 17.5 Volts.
	During tightening sequence, high torque is required, for example with coated screws.	➤ If high torque is required for a longer period of time, e.g. for several turns, then the number of rundowns with one battery charge is significantly reduced.
	Battery has already cycled too often.	➤ After 500 charge cycles the capacity is reduced to about 80%.

Problem	Possible cause	Action
Infrared data communication between controller and tool		
No infrared data communication between controller and tool.	Wrong port is selected for connection with the controller.	➤ Check the port settings for infrared (IRDA) communication in the <i>Communication/Tool</i> screen of the controller. Note: If the settings are changed, it is necessary to press <i>Accept</i> <F1> in order to apply the settings.
	Selected port is used for serial data transmission.	➤ Check that the tool holder is connected to selected port. ➤ In the <i>Communication/Data Transmission</i> screen of the controller, check whether serial data transmission is enabled (the protocol is set to anything except NONE), and whether the same port is being used. If so, select a different port or disable serial data transmission. Check all available tools as necessary. The same port cannot be used for serial data transmission and infrared data communication with the tool.

Problem	Possible cause	Action
WLAN data communication between controller and tool		
No WLAN communication between controller and tool.	IP address of tool is not entered correctly on the controller.	<ul style="list-style-type: none"> ➤ Check in the <i>Communication/Tool</i> screen of the controller that the IP address of the tool is entered in the <i>RF Tool IP</i> field. The IP address of the tool is displayed on the tool in the <i>WLAN RF settings</i> submenu. <p>Note: If the settings are changed, it is necessary to press <i>Accept</i> <F1> in order to apply the settings.</p>
	Tool is not configured with correct WLAN parameter values.	<ul style="list-style-type: none"> ➤ Configure the WLAN settings of the tool in the <i>Communication/Tool</i> screen of the controller via infrared communication.
	WLAN network settings of the controller and the access point differ.	<ul style="list-style-type: none"> ➤ In the <i>Communication/Tool</i> screen of the controller, check that the settings of the access point match the wireless network settings (Network name, Security, Network key).
	MAC address filter of the access point is active.	<ul style="list-style-type: none"> ➤ Add the MAC address of the tool to the address list of the access point. The MAC address of the tool is displayed on the corresponding label above the battery, and in the <i>WLAN RF settings</i> submenu.
	A firewall blocks port 4001.	<ul style="list-style-type: none"> ➤ Reconfigure the firewall so that the specific IP/MAC address of the tool can use port 4001.
	The RF channel at the access point is out of the tool-supported range.	<ul style="list-style-type: none"> ➤ Change the channel setting of the access point to a channel between 1 and 11.
	Tool is already assigned to a different controller.	<ul style="list-style-type: none"> ➤ Check whether any other controller has already established a connection to this tool. That means another controller use same IP address.
WLAN communication partly interrupted.	Distance between access point and tool is too great.	<ul style="list-style-type: none"> ➤ Check the signal strength in the <i>WLAN RF settings</i> submenu of the tool. For stable communication, the first value (N) should be greater than 15. If the value is less than 15, move the access point closer to the tool.
	Tool is also assigned to a different controller.	<ul style="list-style-type: none"> ➤ Check whether this tool (IP address) is assigned to any other controller. If so, delete the assignment on the other controller. A tool can only be assigned to one controller.
	Too much traffic on the wireless network.	<ul style="list-style-type: none"> ➤ Reduce traffic on the wireless network. Deactivate torque plot data transmission.

Problem	Possible cause	Action
868 MHz data communication between controller and tool		
No serial communication is possible between the controller and the base station. (Error displayed after <i>Accept</i> <F1> is pressed in <i>Communication/Tool</i> .)	Wrong serial cable is used.	<ul style="list-style-type: none"> ➤ Use a null modem cable (crossed).
	Wrong port is selected for connection with the controller.	<ul style="list-style-type: none"> ➤ In the <i>Communication/Tool</i> screen of the controller, check the port settings for <i>RF Serial</i>. Note: If the settings are changed, it is necessary to press <i>Accept</i> <F1> in order to apply the settings. ➤ Check that the serial cable is connected to the selected port.
	Selected port is used for serial data transmission.	<ul style="list-style-type: none"> ➤ In the <i>Communication/Data Transmission</i> screen of the controller, check whether serial data transmission is enabled (the protocol is set to anything except NONE), and whether the same port is being used. ➤ If so, select a different port or disable serial data transmission. ➤ Check all available tools as necessary. The same port cannot be used for serial data transmission and data communication with base station tool.
	Power outlet not active.	<ul style="list-style-type: none"> ➤ Check the voltage at the outlet socket where the base station is plugged in for power supply.

Problem	Possible cause	Action
868 MHz data communication between controller and tool		
No Ethernet communication is possible between the controller and the base station. (Error displayed after <i>Accept</i> <F1>) is pressed in <i>Communication/Tool</i> .)	Wrong Ethernet cable is used.	<ul style="list-style-type: none"> ➤ A crossover cable is required if the base station is directly connected to the controller. If the base station is connected to a switch, a standard patch cable is required.
	IP address of the base station is not entered correctly on the controller.	<ul style="list-style-type: none"> ➤ In the <i>Communication/Tool</i> screen of the controller, check that the IP address of the base station is entered in the <i>RF Base station</i> field. If the IP address of the base station is unknown use the <i>Network Enabler Administrator</i> program, which is included with each base station. <p>Note: If the settings are changed, it is necessary to press <i>Accept</i> <F1> in order to apply the settings.</p>
	IP address and subnet mask are not in the same range.	<p>Without network administration, it is necessary for the IP address and subnet mask of the controller to be in the same range as those of the base station.</p> <ul style="list-style-type: none"> ➤ Enter the same subnet mask for both IP addresses and use the same first three numbers for the IP addresses on both the controller and base station. <p>E.g.: IP address controller: 192.168.1.xxx IP address base station: 192.168.1.xxx Subnet mask: 255.255.255.000</p>
	A firewall blocks port 4001.	<ul style="list-style-type: none"> ➤ Reconfigure the firewall so that the specific IP/MAC address of the tool can use port 4001.
	Base station is already connected to a different controller.	<ul style="list-style-type: none"> ➤ Check whether any other controller has already used the same IP address for RF communication (<i>RF Base station</i>).
	Power outlet not active.	<ul style="list-style-type: none"> ➤ Check the voltage at the outlet socket where the base station is plugged in for power supply.
No 868 MHz data communication is possible between controller and tool.	Settings are not configured correctly.	<ul style="list-style-type: none"> ➤ In the <i>Communication/Tool</i> screen of the controller, check that <i>RF settings of the base station</i> correspond to the settings of the tool, which are displayed in the <i>868MHz RF settings</i> submenu of the tool. The settings for <i>Channel</i>, <i>Network ID</i> and <i>Tool ID</i> must match.
	Distance between base station and tool is too great.	<p>If channel 1 is selected, the distance can be up to 98.4 ft (30 m). If channel 2 or 3 is selected, the distance can be up to 32.8 ft (10 m).</p> <ul style="list-style-type: none"> ➤ Increase output power on base station and on the tool, or move the base station closer to the tool.

Problem	Possible cause	Action
868 MHz data communication between controller and tool		
RF communication is partly interrupted.	Distance between base station and tool is too great.	If channel 1 is selected, the distance can be up to 30 m. If channel 2 or 3 is selected, the distance can be up to 10 m. <ul style="list-style-type: none"> ➤ Move the tool close to the base station to check whether communication is successful. If so, increase output power on base station and on the tool, or move the base station closer to the tool.
	Output power is too low.	<ul style="list-style-type: none"> ➤ Increase the output power of the base station and of the tool. If channel 1 is selected, you can choose up to 25 mW for the output power. If channel 2 or 3 is selected, you can choose 1 mW for the output power of the base station and 5 mW for the output power of the tool.
	Too much traffic on the same channel.	<ul style="list-style-type: none"> ➤ Reduce traffic on the wireless network. Deactivate torque plot data transmission.
	Too many tools on the same channel.	<ul style="list-style-type: none"> ➤ Use different channels for different base stations.
	Other 868 MHz devices on the same frequency.	<ul style="list-style-type: none"> ➤ Use a different channel.
Distance for RF communication is too short	Antenna of the base station is not tightened securely.	<ul style="list-style-type: none"> ➤ Manually tighten the base station antenna.
	Output power is too low.	<ul style="list-style-type: none"> ➤ Increase the output power of both the base station and the tool. If channel 1 is selected, you can choose up to 25 mW for the output power. If channel 2 or 3 is selected, you can choose 1 mW for the output power of base station and 5 mW for the output power of the tool.
	Location of the base station bad.	<ul style="list-style-type: none"> ➤ Move the base station to a location where there is an unobstructed line of view between the base station and the tool.

Problem	Possible cause	Action
Barcode scanner on tool		
Barcode scanner does not activate when the start switch is pressed.	Parameter for Part-ID is not set to Enable Interlocked.	<ul style="list-style-type: none"> ➤ In the <i>Communication/Part-ID</i> screen of the controller, check that the Enable parameter is set to Enable Interlocked.
	Barcode has already been read.	<ul style="list-style-type: none"> ➤ Activate a further read cycle in the scanner submenu. ➤ Press the left function key on the tool in order to activate another read cycle. <p>Note: Only available if the parameter for <F1> button on Tool is set to Read barcode in the <i>Advanced Application Builder / System Settings</i> screen of the controller.</p>

Problem	Possible cause	Action
Barcode scanner on tool		
Barcode is not read.	Barcode scanner window is not clean.	➤ Clean the window by using a damp cloth and a conventional window cleaner.
	Barcode type is disabled by parameter setting.	➤ In the <i>Communication/Part-ID</i> screen, check that parameter Barcode Type is set to the appropriate barcode type.


9 Spare parts

Note



Use only original CLECO spare parts. Failure to comply can result in reduced power and increased service requirements. If spare parts not manufactured by us are installed, the tool manufacturer is entitled to deny any warranty claims.

9.1 Handle

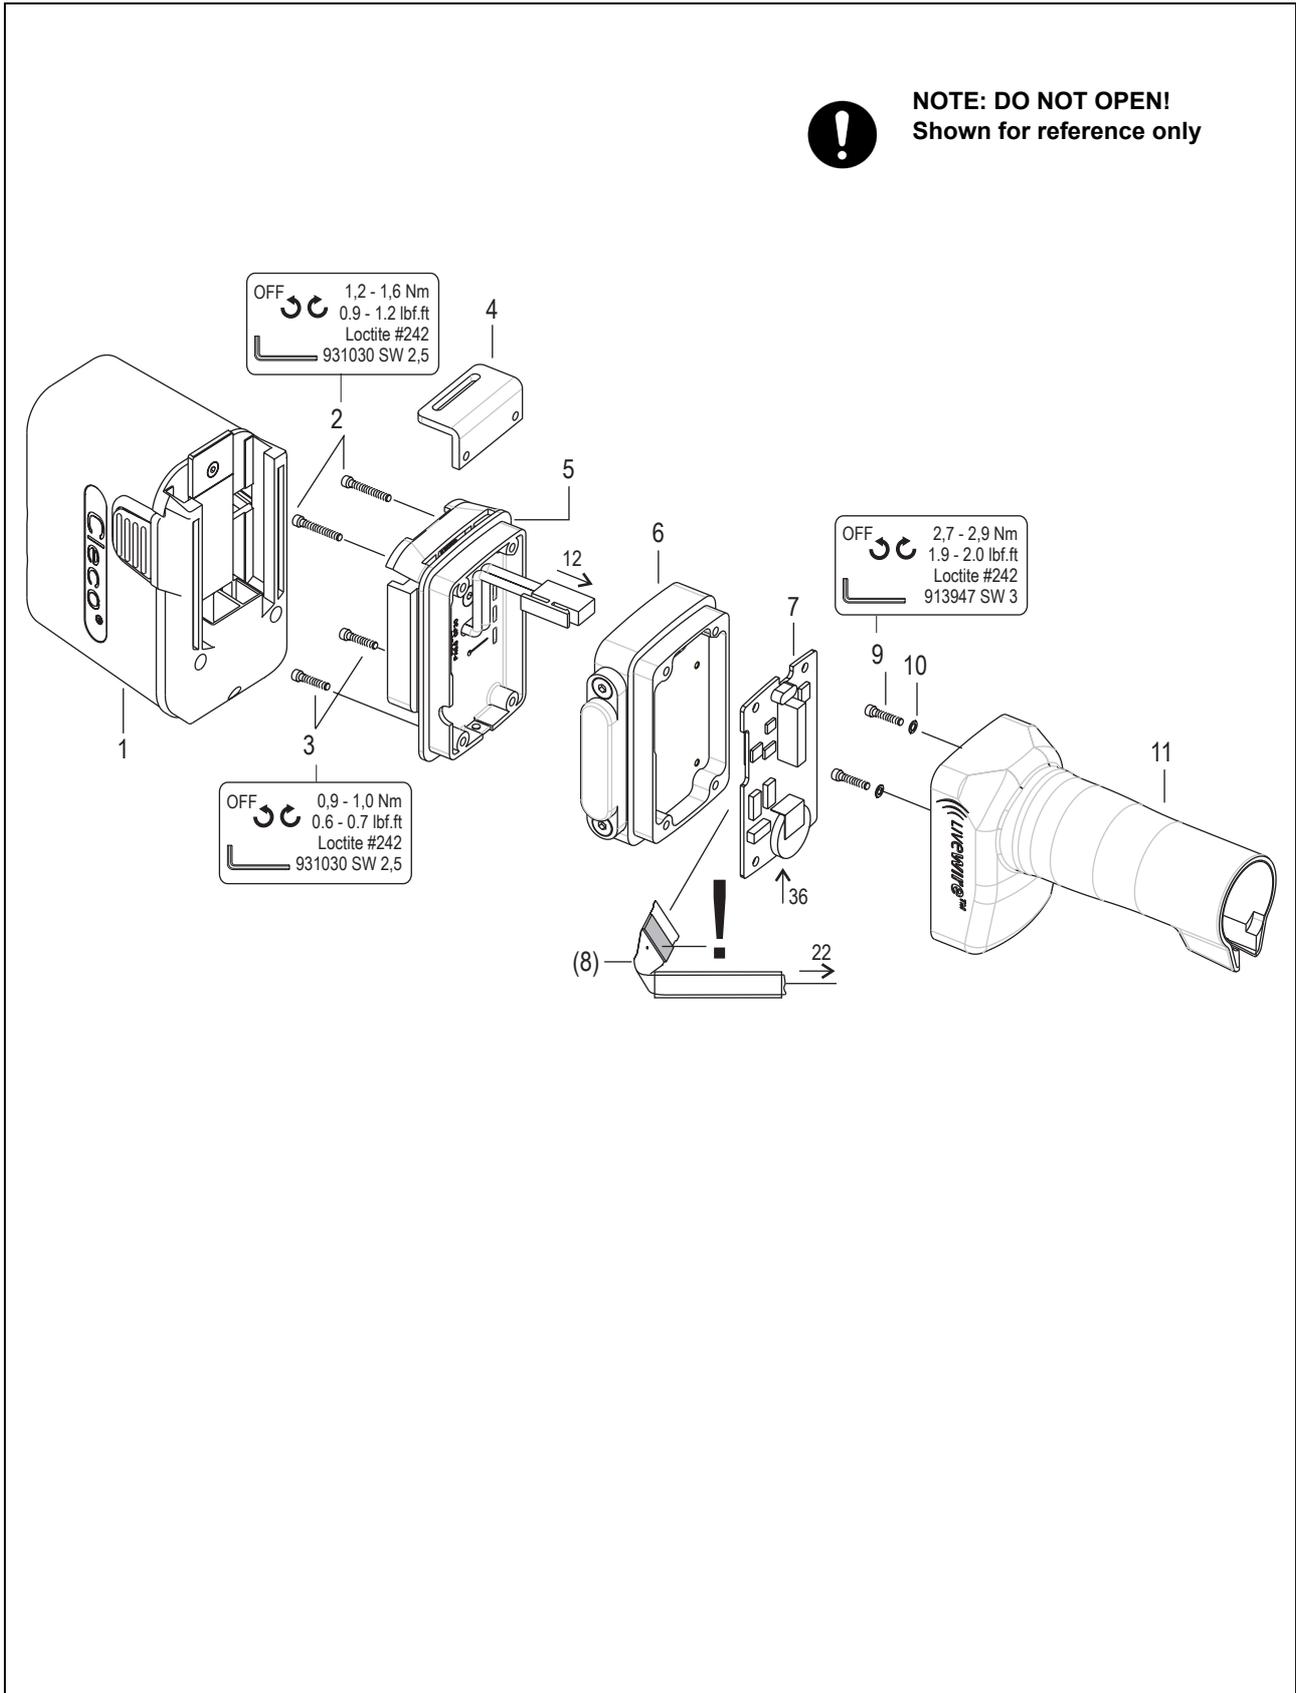



**For information only. These parts are not user serviceable.
Refer to Section 11 Service.**


Index	2)	Description
1	1	accupack
2	2	cap screw
3	2	cap screw
4	1	holding angle
5	1	adapter accu asm.
6	1	adapter asm.
7	1	measuring system asm.
8	1	flat flexible cable asm.
9	2	cap screw
10	2	retaining washer
11	1	handle asm.

2) Quantity

9.2 Servo bar, LCD bar & trigger components



NOTE: DO NOT OPEN!
Shown for reference only

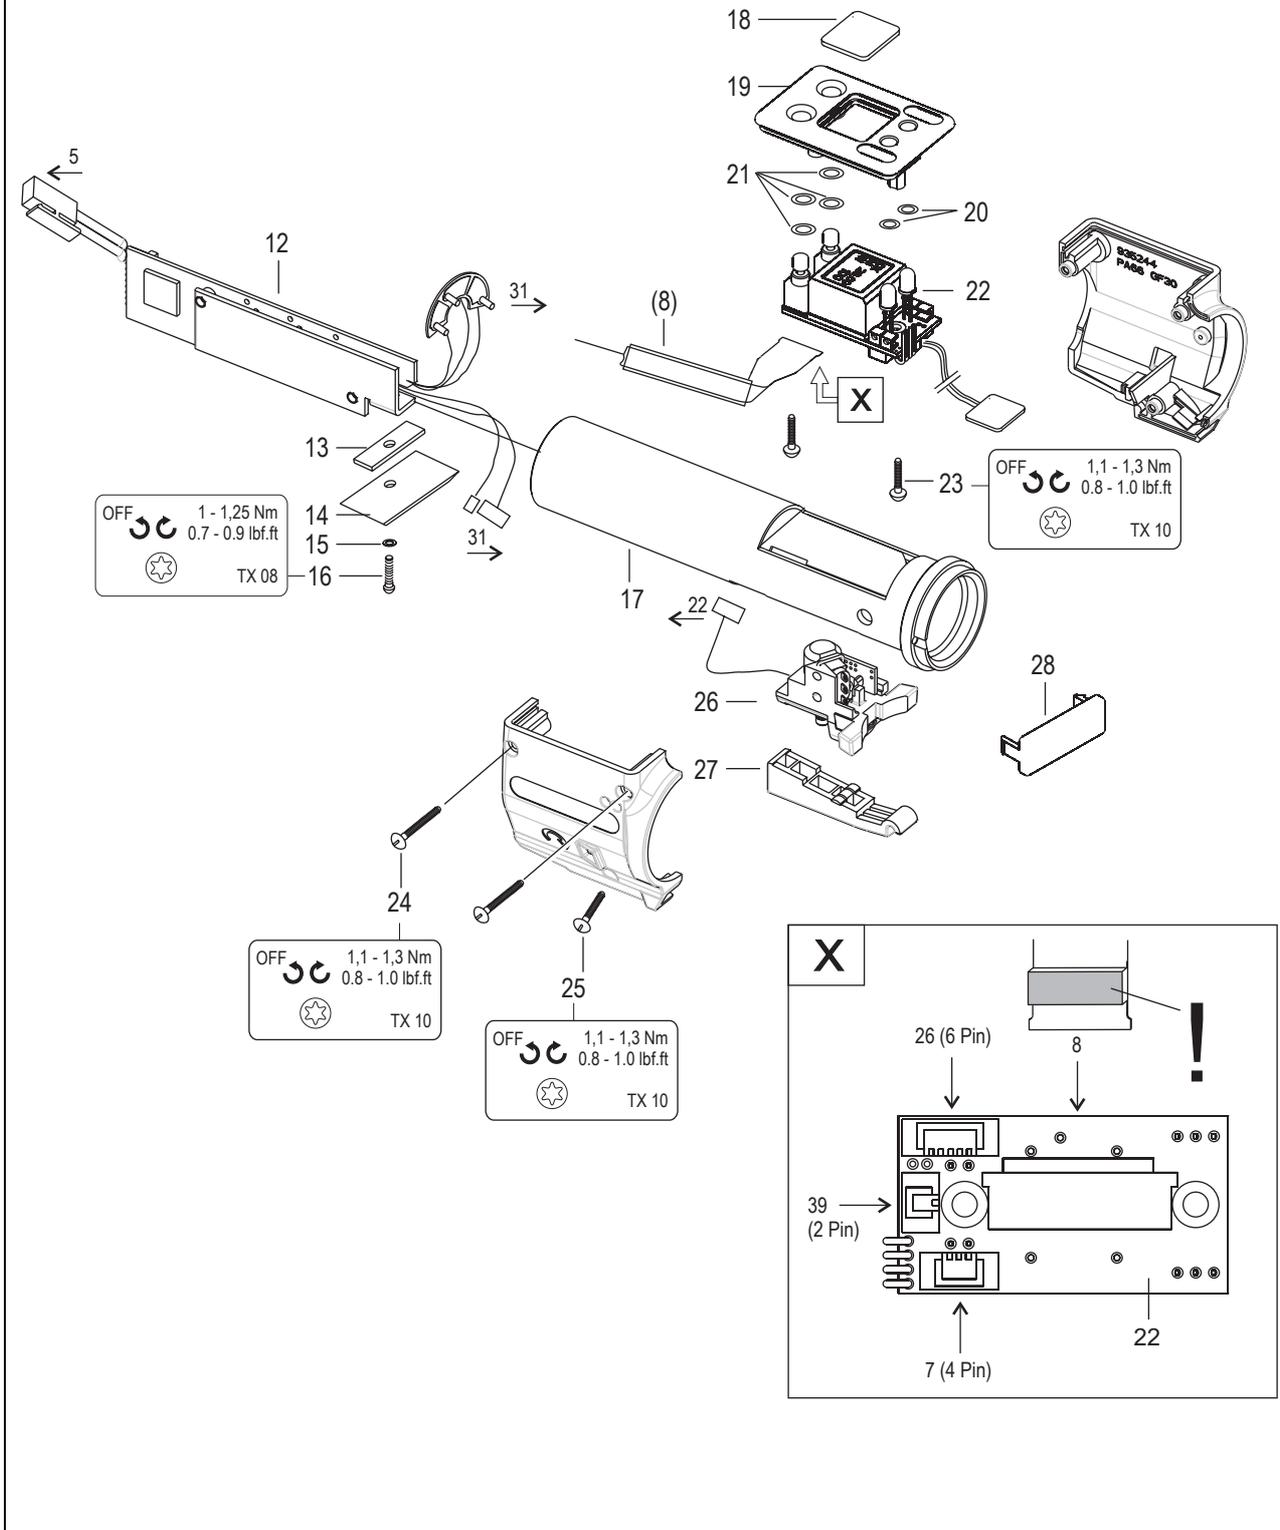



**For information only. These parts are not user serviceable.
Refer to Section 11 Service.**


Index	2)	Description
12	1	servo bar actuator
13	1	plate centre
14	1	plate holding
15	1	retaining washer
16	1	raised countersunk head screw
17	1	handle sleeve asm.
18	1	LCD window
19	1	cover
20	2	o-ring
21	4	o-ring
22	1	card LCD asm.
23	2	raised countersunk head screw
24	2	raised countersunk head screw
25	1	raised countersunk head screw
26	1	switch asm.
27	1	trigger

2) Quantity

9.3 Motor



NOTE: DO NOT OPEN!
Shown for reference only

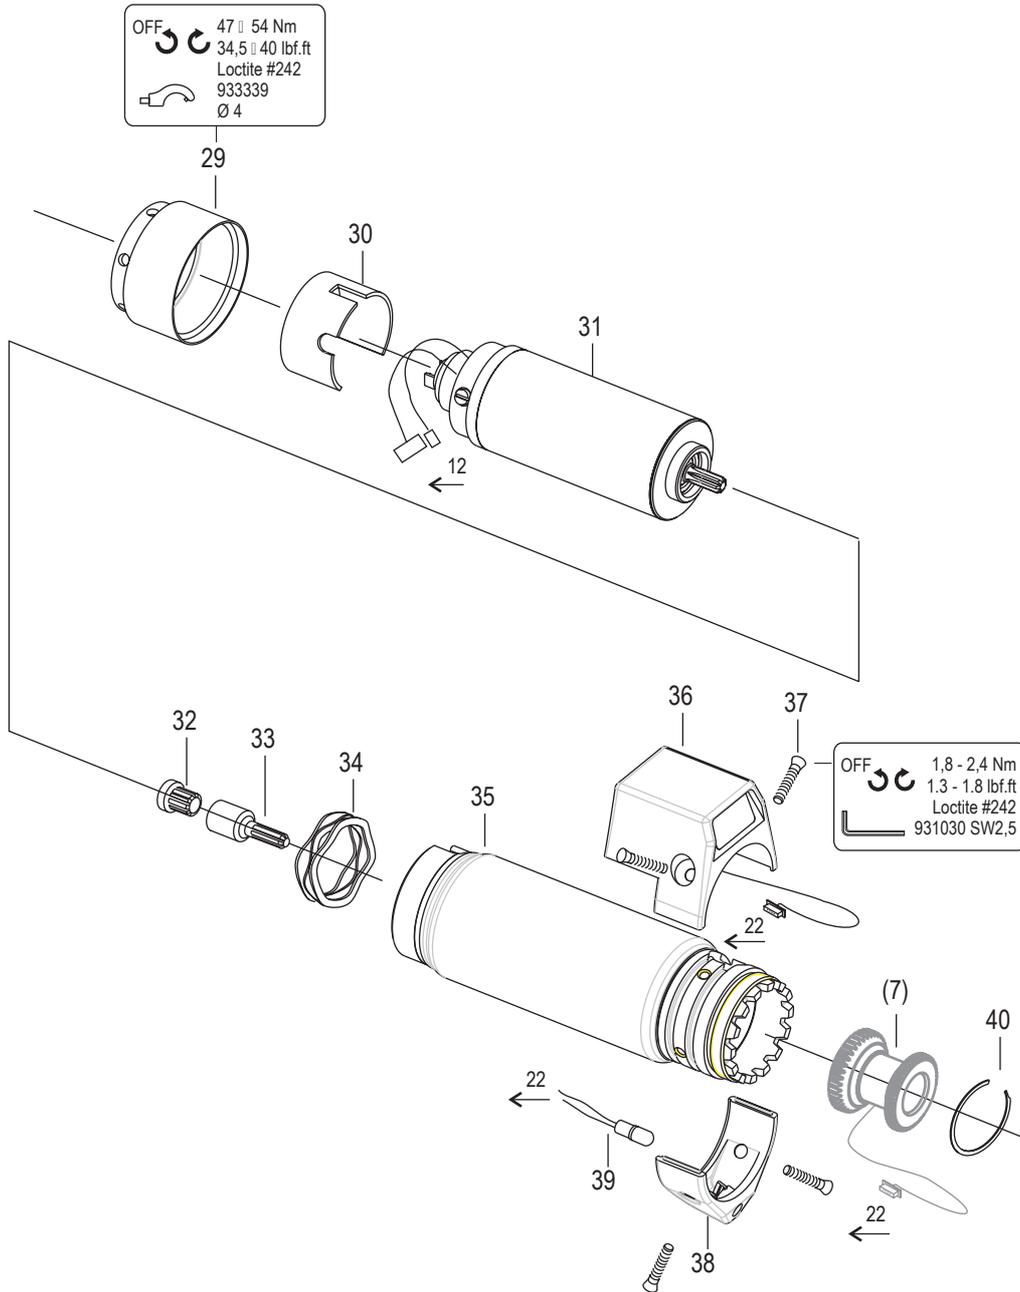



**For information only. These parts are not user serviceable.
Refer to Section 11 Service.**


Index	2)	Description
29	1	union nut
30	1	tension sleeve
31	1	electric motor
32	1	pinion gear
33	1	adapter shaft
34	1	spring washer
35	1	motor housing asm.
36	1	cover segment
37	4	countersunk screw
38	1	light housing
39	1	LED asm.
40	1	circlip

2) Quantity

9.4 Gear + angle attachment

*

Typ	14	4	5	6	8	9	10	11	12	15	16	17
47BA...15AM3	935263	542722	541899	541894	542233	541888	541897	923095	542099	935313	–	–
47BA...21AM3	935262	542722	–	541893	542231	541888	541894	923095	542079	935313	–	–
47BA...28AM3	935261	542722	–	541893	542232	541888	541897	923095	542099	935313	–	–
47BA...35AM3	935261	542722	–	541893	542232	541888	541897	923095	542099	–	935356	525943
47BA...50AM3	935264	935748	–	541893	935754	924066	935749	930228	935751	–	935753	525943

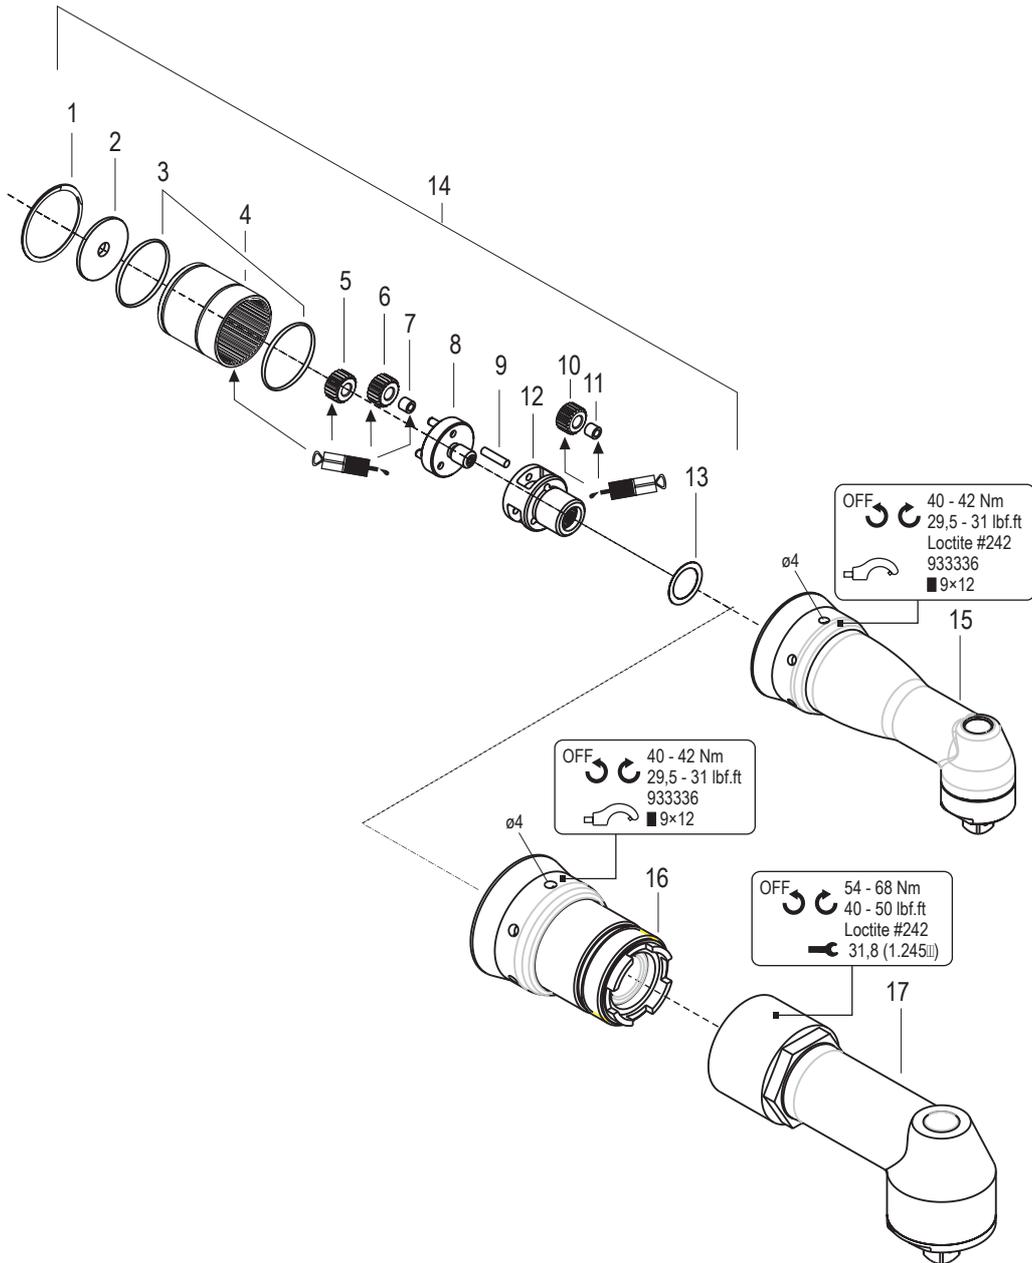

 7.3 Lubricants, page 37

Index	1)	2)	•	Description	3)
1	800116	1		circlip	25,98X0,94 IR
2	541887	1		washer	
3	542724	2		o-ring	28,24X 0,78
4	*	1		gear ring	
5	*	1	1	pinion gear	
6	*	3	6	idler gear	
7	923095	3	6	needle bearing	3,X5,X 7,
8	*	1		planet carrier	
9	*	3	6	needle roller	
10	*	3	6	idler gear	
11	*	3	6	needle bearing	
12	*	1		planet carrier	
13	502983	1		thrust washer	15,88X 28,58X 1,56
14	*	1		gear	
15	*	1		angle attachment	
16	*	1		gear case asm.	
17	*	1		angle attachment	

1) Order no.


2) Quantity

3) Dimensions

• Recommended spare part for every 5 tools

* See table, page 54

9.5 Angle attachment 935313

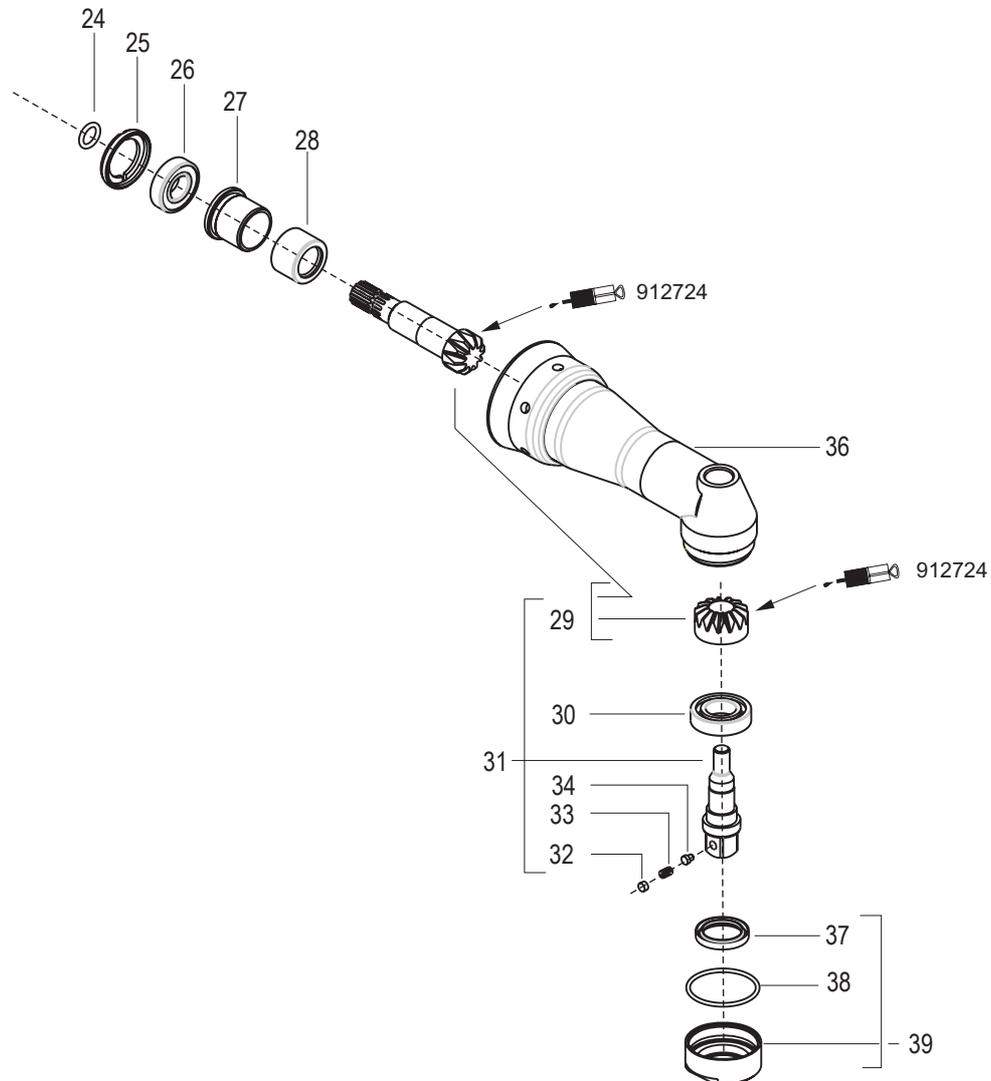

Assembly / disassembly see

7.5 Removing angle attachment 935313, page 38

7.6 Installing angle attachment 935313, page 39


9.8 Fixture order list for angle attachment 935313, page 62

Index	1)	2)	•	Description	3)
24	504970	1		o-ring	7,65X1,78
25	934023	1		threaded ring	
26	934035	1	2	ball bearing	10,X 22,X 6,
27	934021	1		sleeve	
28	934027	1	2	needle bearing	12,7 X 19,05X12,7
29	933792	1		bevel gear set	
30	915064	1		ball bearing	12,X 24,X 6,
31	933892	1	1	drive spindle asm.	
32	26989	1		plug	
33	9D6481	1		compression spring	0,3 X 3,2 X9,2
34	914517	1		pin	
36	935312	1		angle attachment	
37	918163	1		seal shaft	15,X 21,X 3,
38	905084	1		o-ring	26,X1,5
39	929177	1		union nut asm.	

- 1) Order no.
 - 2) Quantity
 - 3) Dimensions
- Recommended spare part for every 5 tools

9.6 Angle attachment 525943

1 Always replace <15> and <16> as a set

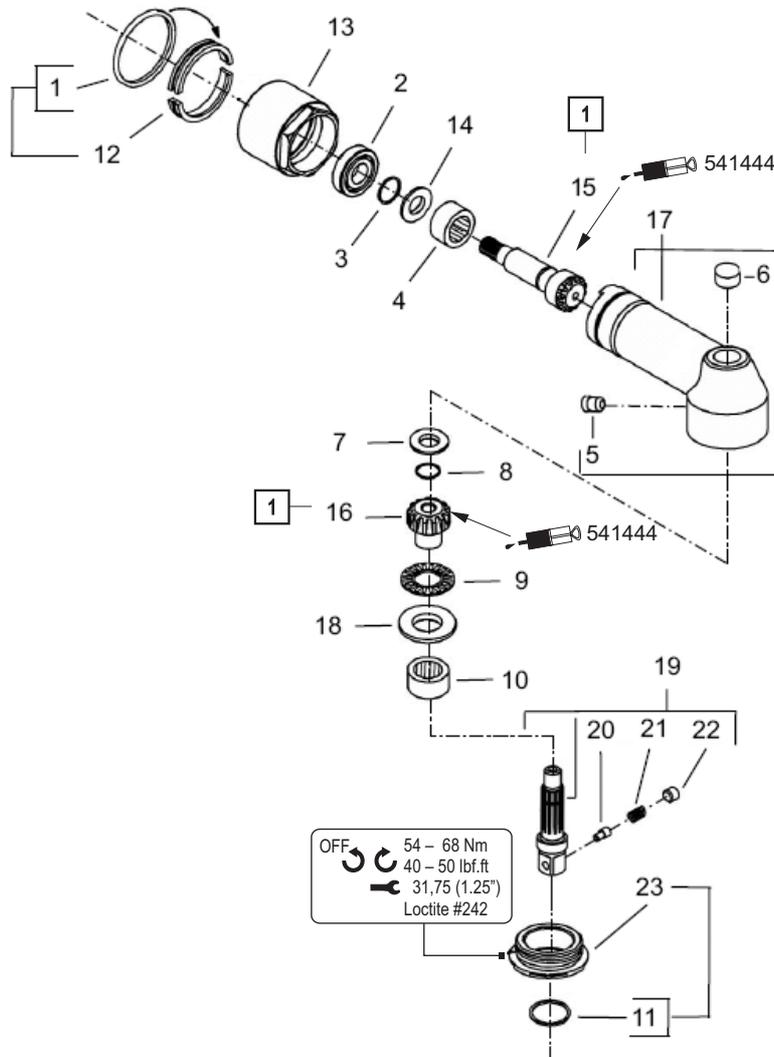


 7.3 Lubricants, page 37

Index	1)	2)	•	Kits	Description	3)
1	526483	1	1		Rubber Band	
2	19469	1	1		Ball Bearing	10, X 26, X 8,
3	250497	1	1		Retaining Ring	
4	526916	1	1		Needle Bearing	15,88X 22,21X15,88
5	27210	1			Grease Fitting	
6	800170	1	1		Needle Bearing	7,94X 12,70X11,10
7	510732	1			Thrust Washer	
8	513000	1	1		Retaining Ring	9,19X0,89 AR
9	259141	1	1		Thrust Bearing	15,93X 28,32X 2,
10	500487	1	1		Needle Bearing	15,88X 20,64X 7,93
11	30573	1	1		Seal	
12	525878	1			Split Ring	
13	525879	1			Lock Nut	
14	541694	1	1		Locking Ring	
15	525819	1	1	K19	Bevel Pinion	
16	510695	1	1	K19	Bevel Gear	
17	525890	1			Angle Housing	
18	510722	1	1		Thrust Washer	16, X 28,6 X 1,56
19	510689	1			Spindle (3/8) "	
20	24499	1		K20	Button	
21	9D6481	1		K20	Spring	
22	26989	1		K20	Plug	
23	510692	1			Retaining Nut	
Repair Kits:						
K19	301580	1			Bevel Gear Kit	
K20	301219	1			Output Spindle Kit	

- 1) Order no.
 - 2) Quantity
 - 3) Dimensions
- Recommended spare part for every 5 tools

9.7 Tool holder 935290 with IrDA interface port / 935395 without

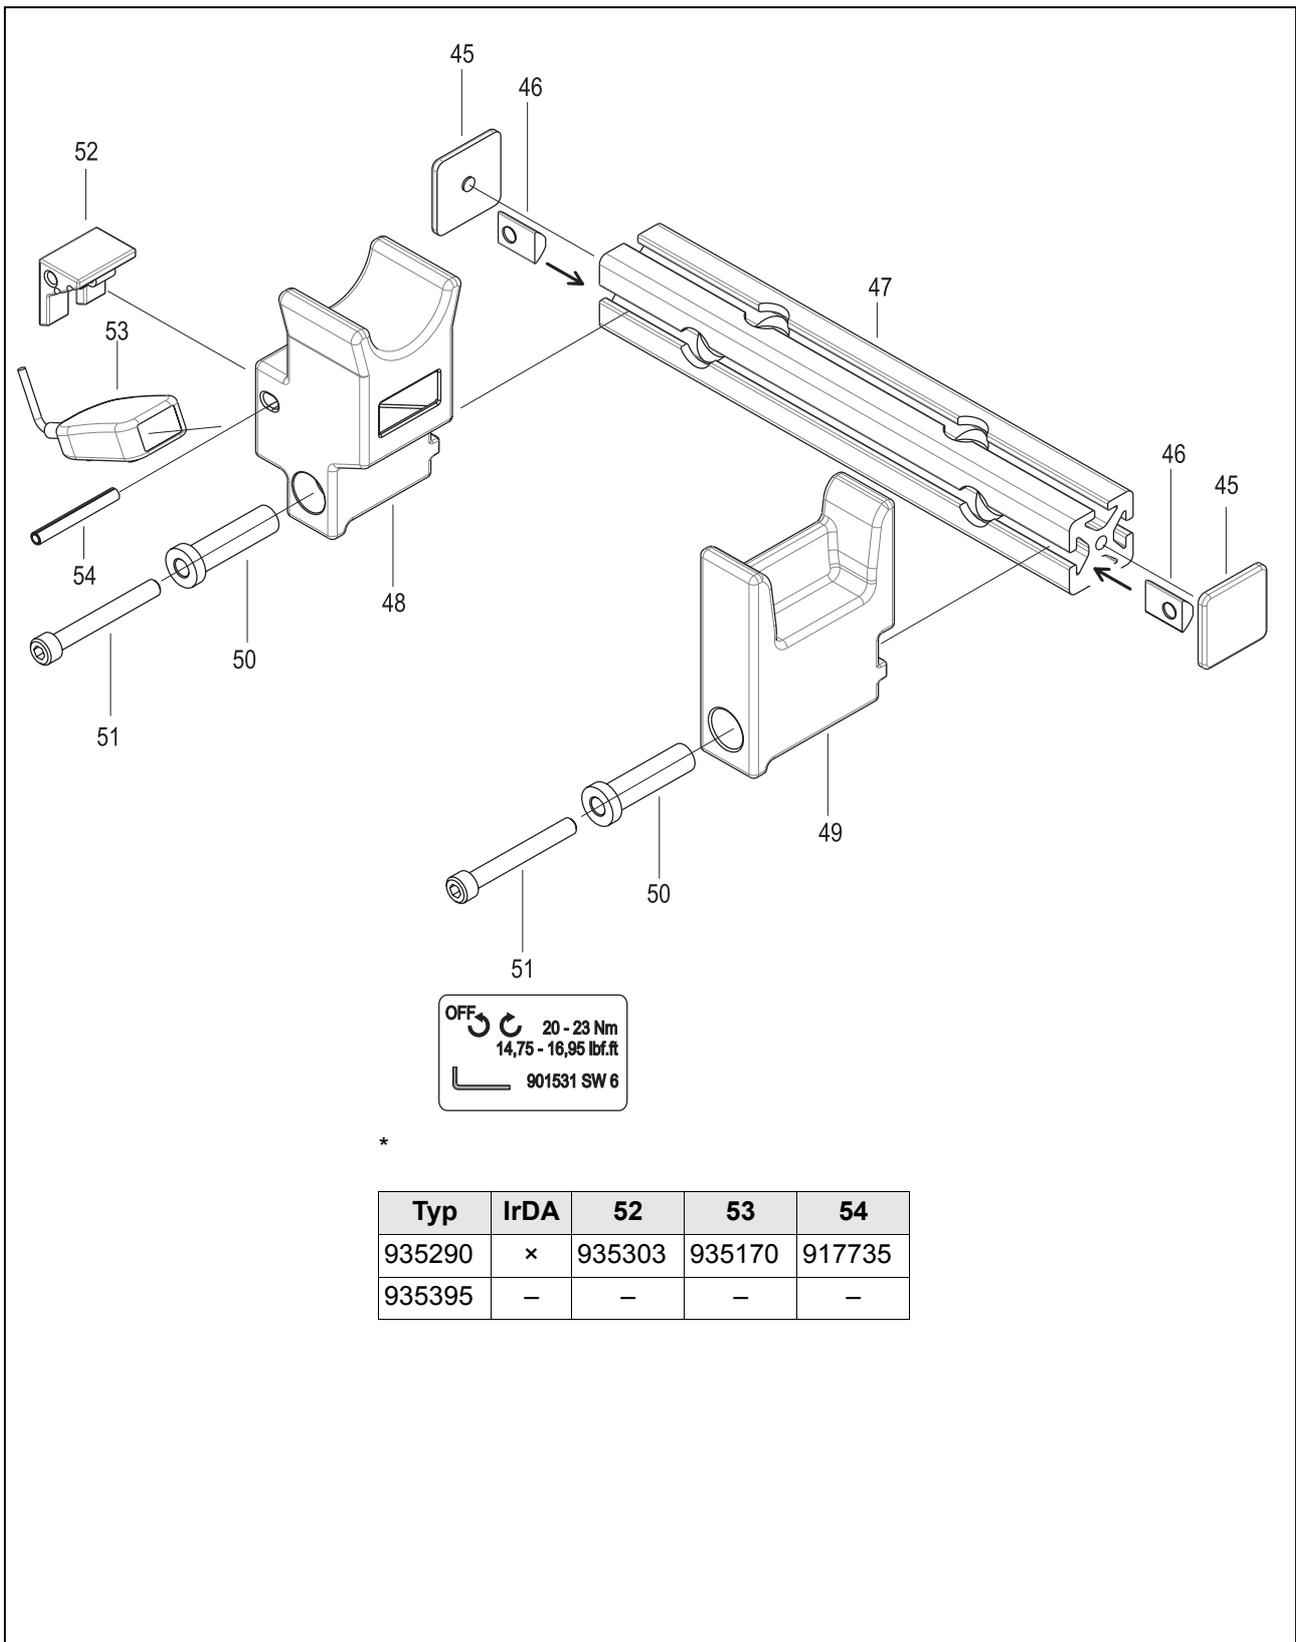

Index	1)	2)	•	Description	3)
45	S900983	2		cap	40,X40,
46	S900418	2		slot nut	M 8
47	935292	1		brace	
48	935293	1		support	
49	935294	1		support	
50	935291	2		plug	
51	902490	2		cap screw	M 8X 65
52	*	1		locking cover	
53	*	1		IrDA-Serial Adapter	
54	*	1		dowel pin	6,X 50,

1) Order no.

2) Quantity



3) Dimensions

• Recommended spare part for every 5 tools

* See table, page 60

9.8 Fixture order list for angle attachment 935313

Index	Order no.	Description
A	933450	Assembly drive spindel
A1	933451	Punch
A2	933453	Base
A3	933452	Punch
B	933454	Assembly bevel gear
B1	933455	Punch
B2	933456	Base
C	933449	Assembly bevel gear in angle attachment
B1	933455	Punch
C2	933463	Semi-monocoque pair
C3	933458	Base
D	933448	Disassembly bevel gear
D1	900009	Cap screw M6×25
D2	933459	Thrust pas
D3	933460	Sleeve
D4	933461	Extraction pin
D5	933462	Semi-monocoque pair
E	933428	Socket wrench insert WAF 24
F	933427	Socket wrench insert D16
–	933336	Hook wrench Tighten angle attachment – gear

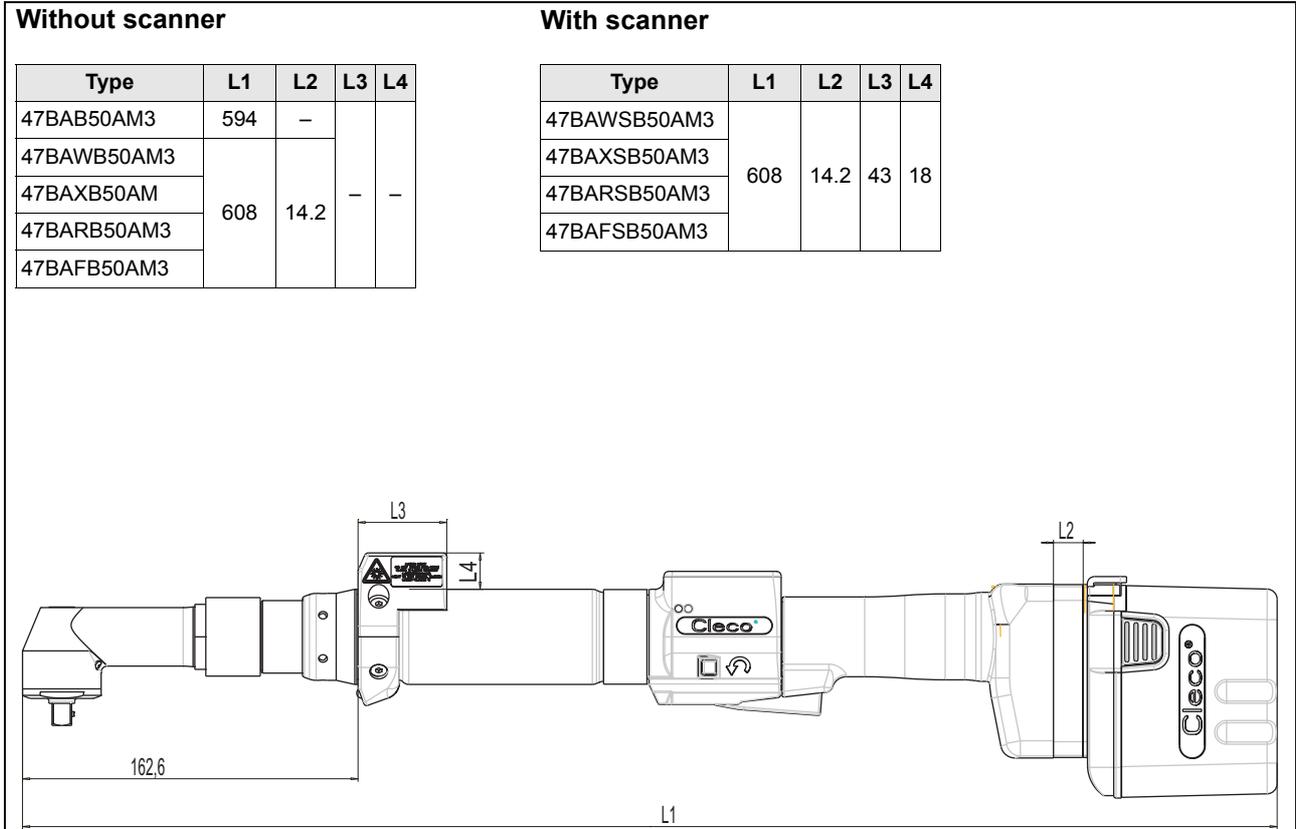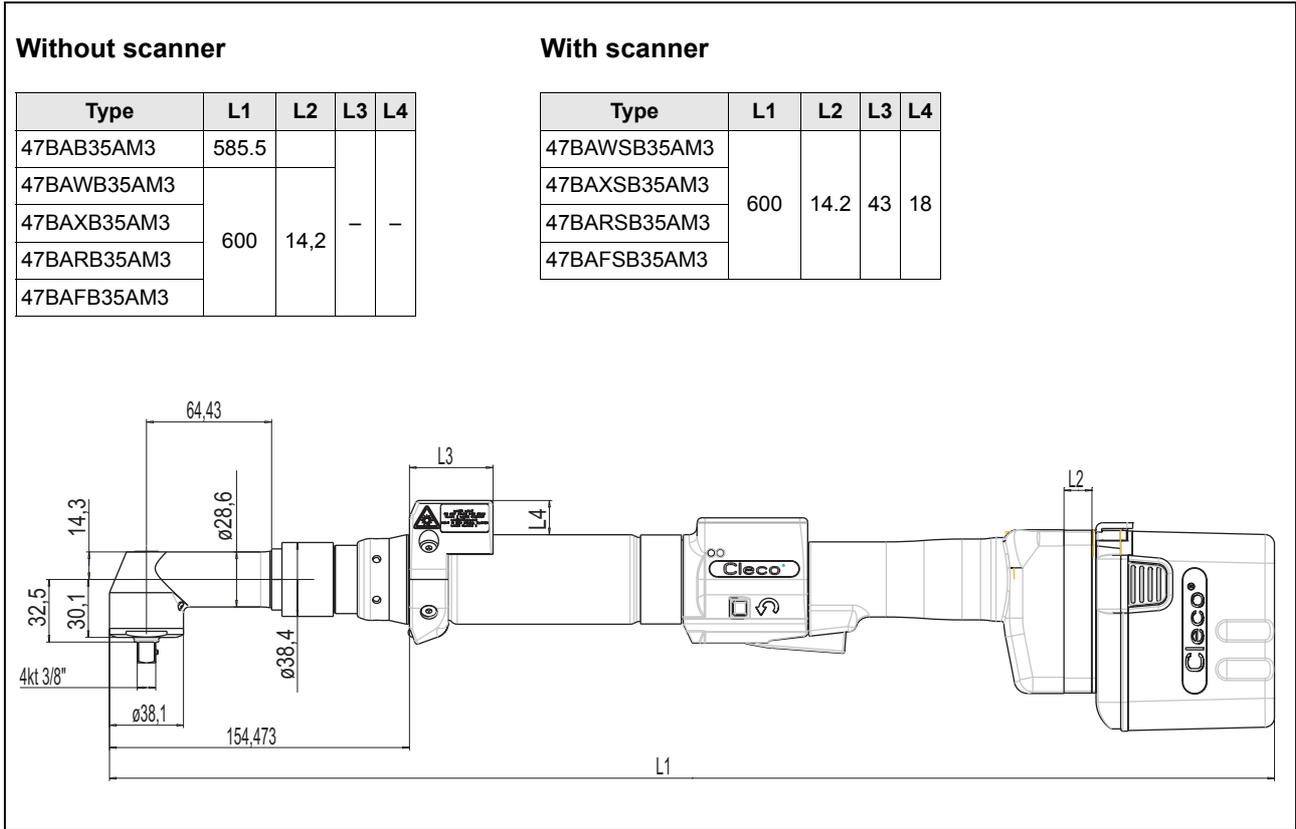

10.2 Dimensions of tool holder (Optional)

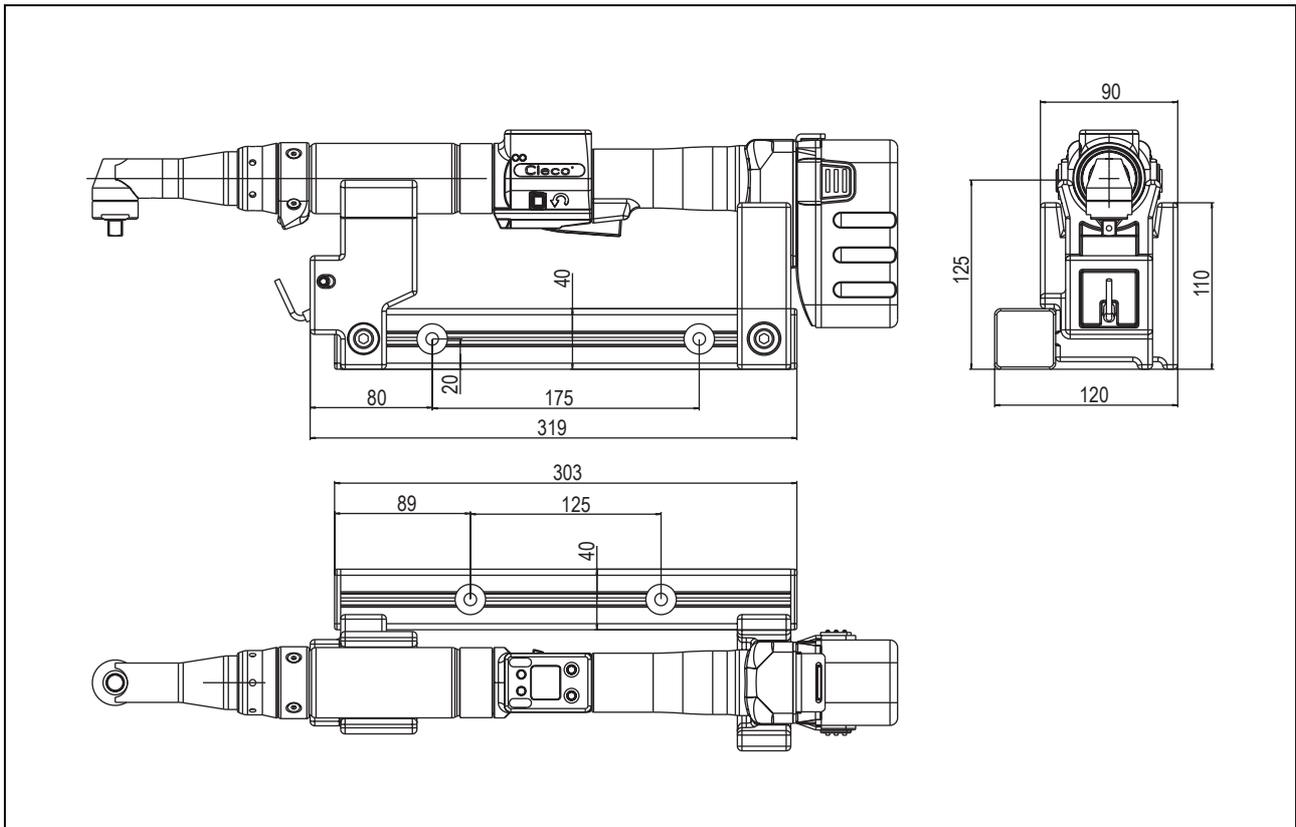


Fig. 10-1: Dimensions of tool holder (mm)

10.3 Performance Data

Type	Recommended torque range		Idling speed	Screw size 8.8	Weight		Calibration data	
	Nm max.	Nm min.			rpm	mm	without Rechargeable battery	with Rechargeable battery
						kg	Nm	¹ degrees
47BAB15AM3	15	5.5	538	M6	1.95	2.42	16.35	1.4464
47BAWB15AM3					2.05	2.52		
47BAXB15AM3								
47BARB15AM3								
47BAFB15AM3					2.10	2.57		
47BAWSB15AM3								
47BAXSB15AM3								
47BARSB15AM3								
47BAFSB15AM3								
47BAB21AM3	21	8	411	M6	1.95	2.42	22.91	1.8941
47BAWB21AM3					2.05	2.52		
47BAXB21AM3								
47BARB21AM3								
47BAFB21AM3					2.10	2.57		
47BAWSB21AM3								
47BAXSB21AM3								
47BARSB21AM3								
47BAFSB21AM3								
47BAB28AM3	28	10	291	M8	1.95	2.42	41.35	2.6727
47BAWB28AM3					2.05	2.52		
47BAXB28AM3								
47BARB28AM3								
47BAFB28AM3					2.10	2.57		
47BAWSB28AM3								
47BAXSB28AM3								
47BARSB28AM3								
47BAFSB28AM3								
47BAB35AM3	35	12	244	M8	2.23	2.70	49.23	3.1817
47BAWB35AM3					2.33	2.80		
47BAXB35AM3								
47BARB35AM3								
47BAFB35AM3					2.38	2.85		
47BAWSB35AM3								
47BAXSB35AM3								
47BARSB35AM3								
47BAFSB35AM3								

Type	Recommended torque range		Idling speed	Screw size 8.8	Weight		Calibration data	
	Nm max.	Nm min.			rpm	mm	without Rechargeable battery	with Rechargeable battery
47BAB50AM3	50	18	182	M10	2.28	2.75	57.17	3.1817
47BAWB50AM3					2.38	2.85		
47BAXB50AM3								
47BARB50AM3								
47BAFB50AM3					2.43	2.90		
47BAWSB50AM3								
47BAXSB50AM3								
47BARSB50AM3								
47BAFSB50AM3								

10.4 Electrical data

Tool

Protection class III as per DIN EN 61140 (VDE 0140-1)

Degree of protection IP40 as per DIN EN 60529 (IEC 60529)

Tool holder

Protection class III as per DIN EN 61140 (VDE 0140-1)

Degree of protection IP40 as per DIN EN 60529 (IEC 60529)

10.4.1 Battery power supply

Features	Data
Battery type	Lithium ion (Li-ion)
Nominal capacity	1,600 mAh
Rated voltage	26 V
Battery self-discharge	approx. 0.3 mA

10.4.2 Output stage servo electronics

Features	Data
Nominal motor phase current	8 A peak value, sine
Rated output	150 VA
Maximum power	500 VA

10.4.3 Control electronics

Features	Data
Rated voltage	26 V
Nominal current in <i>Active</i> operating mode	105 mA
Nominal current in <i>Standby</i> operating mode	95 mA
Nominal current in <i>Power-saving</i> operating mode	55 mA
Nominal current in <i>Sleep</i> operating mode	< 1 mA

10.4.4 IrDA interface port

Features	Data
Supply voltage	5.0 V (4.8 to 5.5 V)
Power consumption	0.30 VA
Maximum current	11 mA
Transmission rate	57.6 Kbps
Parity Bit	None
Data Bit	8 bit
Stop Bit	1 bit
Error check	CRC

10.4.5 Scanner

Features	Data																		
Scan rate	104 scans/sec. ± 12 (bidirectional)																		
Scan angle	47° ± 3 standard / 35° ± 3 reduced																		
Crash resistance	2000 G																		
Ambient light	107,640 lux																		
Decode zone (typical)	<table> <tbody> <tr> <td>4 mil</td> <td>2.54 – 13.97 cm</td> </tr> <tr> <td>5 mil</td> <td>3.18 – 20.32 cm</td> </tr> <tr> <td>7.5 mil</td> <td>3.81 – 33.66 cm</td> </tr> <tr> <td>10 mil</td> <td>3.81 – 44.45 cm</td> </tr> <tr> <td>100%</td> <td>3.81 – 59.69 cm</td> </tr> <tr> <td>15 mil</td> <td>3.81 – 74.93 cm</td> </tr> <tr> <td>20 mil</td> <td>4.45 – 90.17 cm</td> </tr> <tr> <td>40 mil</td> <td>¹⁾ – 101.60 cm</td> </tr> <tr> <td>55 mil</td> <td>¹⁾ – 139.70 cm</td> </tr> </tbody> </table>	4 mil	2.54 – 13.97 cm	5 mil	3.18 – 20.32 cm	7.5 mil	3.81 – 33.66 cm	10 mil	3.81 – 44.45 cm	100%	3.81 – 59.69 cm	15 mil	3.81 – 74.93 cm	20 mil	4.45 – 90.17 cm	40 mil	¹⁾ – 101.60 cm	55 mil	¹⁾ – 139.70 cm
4 mil	2.54 – 13.97 cm																		
5 mil	3.18 – 20.32 cm																		
7.5 mil	3.81 – 33.66 cm																		
10 mil	3.81 – 44.45 cm																		
100%	3.81 – 59.69 cm																		
15 mil	3.81 – 74.93 cm																		
20 mil	4.45 – 90.17 cm																		
40 mil	¹⁾ – 101.60 cm																		
55 mil	¹⁾ – 139.70 cm																		
Laser safety	IEC 60825																		
EMI/RFI	FCC Part 15 Class B EN 55024/CISPR 22 AS 3548 VCCI																		

1) Depending on the width of the barcode

10.4.6 WLAN data transmission

The WLAN data transmission functions may vary depending on the tool configuration.

Series 47BAW...

Features	Data
Standard	IEEE 802.11b
Safety	WEP64, WEP128, WPA
Range	Typically up to 50 m (164' 0.5")
Channels	1 – 11 (2.412 – 2.462 GHz)
Transmission rate	15 dBm typical
Sensitivity	-93 dBm (typ. @ 1 Mbps) -84 dBm (typ. @ 11 Mbps)
Modulation	DSSS/CCK
Standards	EN 300328 EN 60950/2000 EN 301489-1/-17 FCC Part 15

Series 47BAX...

Features	Data
Standard	IEEE 802.11b
Safety	WEP <ul style="list-style-type: none"> • 64/128 bit encryption WPA/WPA2/802.11 <ul style="list-style-type: none"> • 128 bit TKIP/CCMP encryption • 8021.x EAP authentication (LEAP, PEAP, TTLS, GTC, MD5, OTP, PAP, CHAP, MSCHAP, MSCHAPv2, TTLS MSCHAPv2) • Pre-shared key mode (PSK)
Range	Typically up to 50 m (164' 0.5")
Channels	1 – 11 (2.412 – 2.462 GHz)
Transmission rate:	16 dBm typical
Sensitivity	-92 dBm (typ. @ 1 Mbps) -82 dBm (typ. @ 11 Mbps)
Modulation	CCK/DQPSK/DBPSK
Standards	EN 300328 EN 60950 EN 301489-3 FCC Part 15

10.4.7 868 MHz data transmission

Features	Data
Frequency	868 – 870 MHz
Channels	Band 1i (869.4 MHz – 869.65 MHz): 1 Band 1k (869.7 MHz – 870.0 MHz): 2
Modulation	GFSK
Output power	Band 1i (869.4 MHz – 869.65 MHz): 1, 5, 10, 25 mW Band 1k (869.7 MHz – 870.0 MHz): 1, 5 mW
Sensitivity (BER < 10 ⁻³)	-100 dBm
Wireless transmission rate	38.4 kbps
Range	Band 1i (869.4 MHz – 869.65 MHz): up to 30 m (98.4") Band 1k (869.7 MHz – 870.0 MHz): up to 10 m (32.8")

10.4.8 915 MHz data transmission

Features	Data
Frequency	902 – 928 MHz
Channels	8
Modulation	GFSK
Output power	1 – 25 mW 3 – 14 dBm
Sensitivity (BER < 10 ⁻³)	-98 dBm
Wireless transmission rate	38.4 kbps
Range	up to 30 m (98.4")

10.4.9 Torque transducer

Torque is measured by a reaction transducer with expandable measurement strips. The reaction transducer is positioned between the motor and the gears in the handle housing.

Features	Data
Nominal calibration	see 10.3 Performance Data, page 66
Sensitivity	2mV/V
Bridge ohms	1000 Ohm
Precision class	0.5% of final value
Linearity error	+0.25% of final value
Measurement range	-125% to +125% of final value

11 Service

NOTE



If repair is required send the complete 47BA to Cooper Power Tools. A repair is only permitted by Cooper Power Tools authorized personnel. If the tool is opened, the warranty is voided.

11.1 Recalibration

The type-specific calibration data is saved on the integrated screw electronic system in the delivery state of the CLECO tool. If service is required to change the torque transducer, the screw electronic system or if a recalibration is required, please send the CLECO tool to Cooper Power Tools. This will ensure that after the service work, any required calibration data update is carried out properly.

12 Disposal

CAUTION!



Injuries and environmental damage from improper disposal.
Components and auxiliary materials of the tool pose risks to the health and the environment.

- Catch auxiliary materials (oils, greases) when drained and dispose of them properly.
- Separate the components of the packing and dispose of them by segregating them clearly.
- Follow the locally applicable regulations.



Observe generally valid disposal guidelines such as, in Germany, the Electrical and Electronic Equipment Act (ElektroG) and Battery Ordinance (BattV):

- Return the tool and defective/used batteries to your company collection facility or to Cooper Power Tools.
- Do not throw the batteries in household refuse, fire or water.

Sales & Service Centers

DALLAS, TX

**Cooper Power Tools
Sales & Service**
1470 Post & Paddock
Grand Prairie, TX 75050
Phone: (972) 641-9563
Fax: (972) 641-9674

DETROIT, MI

**Cooper Power Tools
Sales & Service**
4121 North Atlantic Blvd.
Auburn Hills, MI 48326
Phone: (248) 391-3700
Fax: (248) 391-6295

HOUSTON, TX

**Cooper Power Tools
Sales & Service**
6550 West Sam Houston
Parkway North, Suite 200
Houston, TX 77041
Phone: (713) 849-2364
Fax: (713) 849-2047

York, PA

**Cooper Power Tools
Sales & Service**
3990 East Market Street,
York, PA. 17402
Phone: (717) 755-2933
ext.2600
Fax: (717) 757-5063

LEXINGTON, SC

**Cooper Power Tools
Sales & Service**
670 Industrial Drive
Lexington, SC 29072
Phone: (803) 951-7510
Outside the U.S.: 010-1-803-951-7510
Custom. Service Phone: 1-800-845-5629
Fax: (803) 996-2400

Seattle, WA

Cooper Power Tools
2865 152nd Ave NE
Redmond, WA 98052
Attn: Brian Roberts
Phone: (425) 497-0479
Fax: (425) 497-0496

BRAZIL

**Cooper Power Tools
Sales & Service**
Av. Liberdade, 4055
Zona Industrial - Iporanga
18087-170 Sorocaba, SP Brazil
Phone: (011) 55 15 238 3929
Fax: (011) 55 15 228 3260

CANADA

**Cooper Power Tools
Sales & Service**
5925 McLaughlin Road
Mississauga, Ontario L5R 1B8
Canada
Phone: (905) 501-4785
Fax: (905) 501-4786

CHINA

**Cooper Electric (Shanghai)
Co.,Ltd**
955 Sheng Li Road
Heqing Pudong
Shanghai, China 201201
China
Phone: +86-21-28994176
28994177
Fax: +86-21-51118446

FRANCE

**Cooper Power Tools SAS
Sales & Service**
Zone Industrielle
B.P. 28
Avenue Maurice Chevalier
77831 Ozoir-la-Ferrière cédex
France
Phone: (33) 01 6443 2200
Fax: (33) 01 6440 1717

GERMANY

**Cooper Power Tools GmbH & Co. OHG
Sales & Service**
Postfach 30
D-73461 Westhausen
Phone: +49 (0) 7363 81-0
Fax: +49 (0) 7363 81-222

MEXICO

**Cooper Power Tools
de México S.A. de C.V.**
Libramiento La Joya No. 1
Bodega No.2
Esq. Politécnico,
Barrio San José
Cuautitlán,
Edo de México C.P. 54870
Phone: (011) 525 5899 9510
Fax: (011) 525 5870 5012

HUNGARIA

Cooper Tools Hungária Kft.
Berkenyefa sor 7
H-9027 Győr
Hungary
Phone: +36-96505-300
Fax: +36-96505-301