

**D-Link *AirPlus Xtreme G*™  
DI-624  
High-Speed 2.4 GHz  
Wireless Router**

**Manual**  
Version 1.06

**D-Link®**  
Building Networks for People

# Contents

Package Contents .....	3
Introduction .....	4
Wireless Basics .....	8
Getting Started .....	11
Using the Configuration Menu .....	12
Networking Basics .....	40
Troubleshooting .....	55
Technical Specifications .....	62
Frequently Asked Questions .....	65
Contacting Technical Support .....	93
Warranty .....	94
Registration .....	97

## Package Contents



### Contents of Package:

- **D-Link AirPlus XTREME G DI-624**  
High-Speed 2.4GHz Wireless Router
- Power Adapter-DC 5V, 3.0A
- Manual and Warranty on CD
- Quick Installation Guide
- Ethernet Cable (All the DI-624's Ethernet ports are Auto-MDIX)

*Note: Using a power supply with a different voltage rating than the one included with the DI-624 will cause damage and void the warranty for this product.*

If any of the above items are missing, please contact your reseller.

### System Requirements for Configuration:

- Ethernet-Based Cable or DSL Modem
- Computers with Windows, Macintosh, or Linux-based operating systems with an installed Ethernet adapter
- Internet Explorer Version 6.0 or Netscape Navigator Version 6.0 and Above

# Introduction

The D-Link *AirPlus Xtreme G* DI-624 High-Speed Wireless Router is an 802.11g high-performance, wireless router that supports high-speed wireless networking at home, at work or in public places.

Unlike most routers, the DI-624 provides data transfers at up to 108 Mbps (compared to the standard 54 Mbps) when used with other D-Link *AirPlus Xtreme G* products. The 802.11g standard is backwards compatible with 802.11b products. This means that you do not need to change your entire network to maintain connectivity. You may sacrifice some of 802.11g's speed when you mix 802.11b and 802.11g devices, but you will not lose the ability to communicate when you incorporate the 802.11g standard into your 802.11b network. You may choose to slowly change your network by gradually replacing the 802.11b devices with 802.11g devices .

In addition to offering faster data transfer speeds when used with other 802.11g products, the DI-624 has the newest, strongest, most advanced security features available today. When used with other 802.11g WPA (WiFi Protected Access) and 802.1x compatible products in a network with a RADIUS server, the security features include:


**WPA: Wi-Fi Protected Access** authorizes and identifies users based on a secret key that changes automatically at a regular interval. **WPA** uses **TKIP (Temporal Key Integrity Protocol)** to change the temporal key every 10,000 packets (a packet is a kind of message transmitted over a network.) This insures much greater security than the standard WEP security. (By contrast, the older WEP encryption required the keys to be changed manually.)

**802.1x: Authentication** is a first line of defense against intrusion. In the Authentication process the server verifies the identity of the client attempting to connect to the network. Unfamiliar clients would be denied access.


For home users that will not incorporate a RADIUS server in their network, the security for the DI-624, used in conjunction with other 802.11g products, will still be much stronger than ever before. Utilizing the **Pre Shared Key mode** of WPA, the DI-624 will obtain a new security key every time it connects to the 802.11g network. You only need to input your encryption information once in the configuration menu. No longer will you have to manually input a new WEP key frequently to ensure security, with the DI-624, you will automatically receive a new key every time you connect, vastly increasing the safety of your communications.

## Connections

All Ethernet Ports (WAN and LAN) are auto MDI/MDIX, meaning you can use either a straight-through or a crossover Ethernet cable.

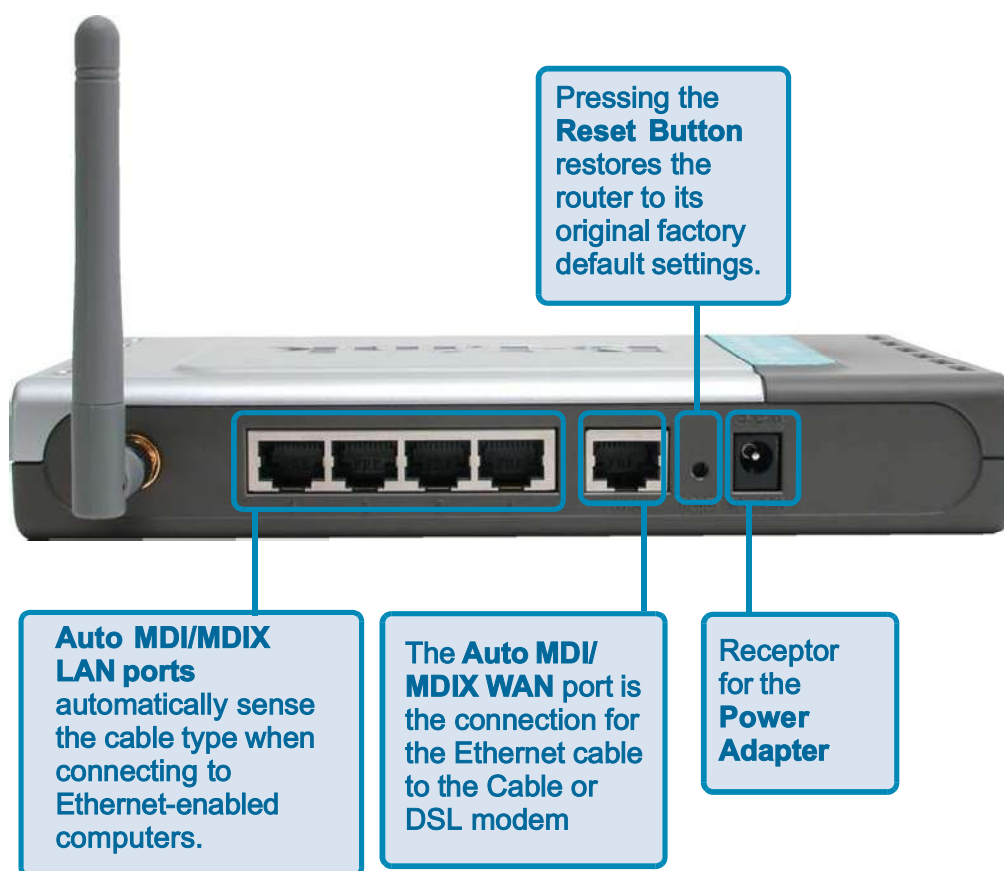

# LEDs

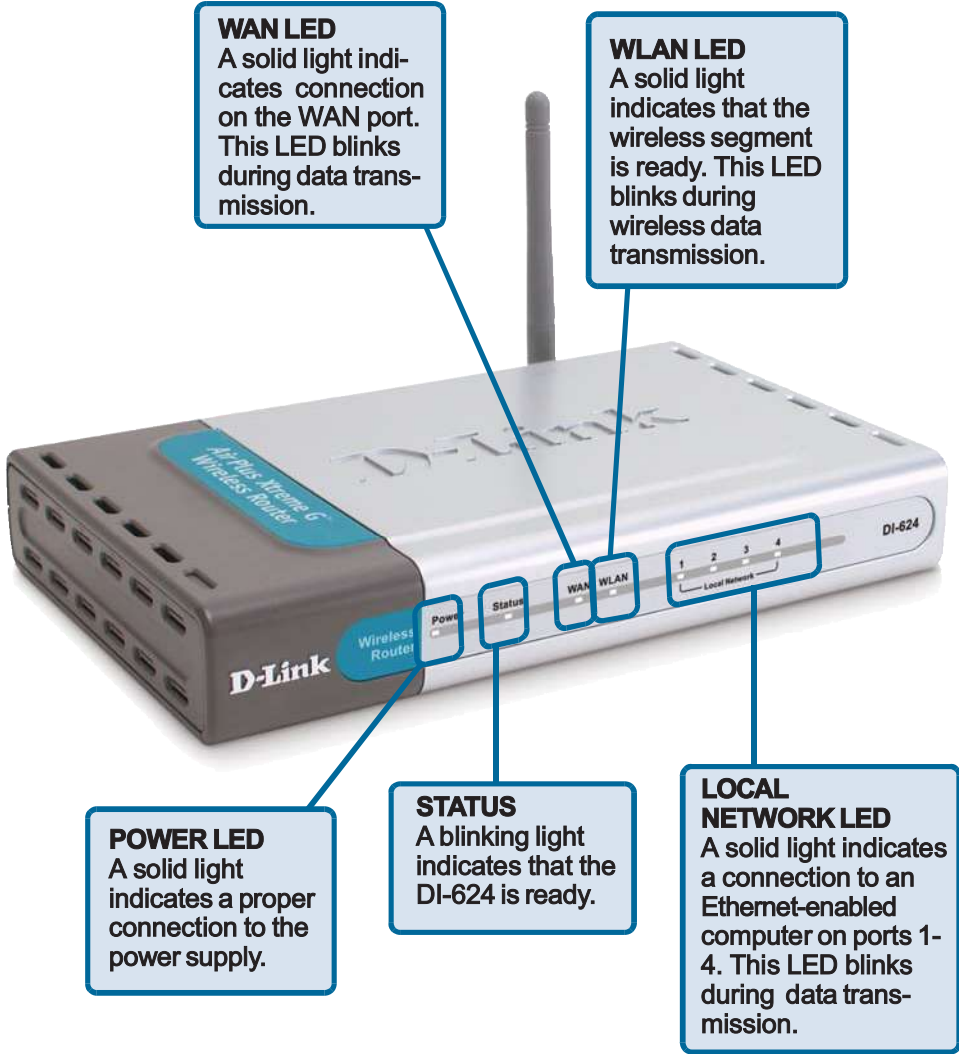

## Features

- Fully compatible with the 802.11g standard to provide a wireless data rate of up to 108Mbps
- Backwards compatible with the 802.11b standard to provide a wireless data rate of up to 11Mbps
- **WPA (Wi Fi Protected Access)** authorizes and identifies users based on a secret key that changes automatically at a regular interval, for example:
  - **TKIP (Temporal Key Integrity Protocol)**, in conjunction with a RADIUS server, changes the temporal key every 10,000 packets, ensuring greater security
  - **Pre Shared Key mode** means that the home user, without a RADIUS server, will obtain a new security key every time the he or she connects to the network, vastly improving the safety of communications on the network
- **802.1x Authentication** in conjunction with the RADIUS server verifies the identity of would be clients
- Utilizes **OFDM technology (Orthogonal Frequency Division Multiplexing)**
- User-friendly configuration and diagnostic utilities
- Operates in the 2.4GHz frequency range
- Connects multiple computers to a Broadband (Cable or DSL) modem to share the Internet connection
- Advanced Firewall features
  - Supports NAT with VPN pass-through, providing added security
  - MAC Filtering
  - IP Filtering
  - URL Filtering
  - Domain Blocking
  - Scheduling
- DHCP server enables all networked computers to automatically receive IP addresses
- Web-based interface for Managing and Configuring
- Access Control to manage users on the network
- Supports special applications that require multiple connections
- Equipped with 4 10/100 Ethernet ports, 1 WAN port, Auto MDI/MDIX

# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. D-Link wireless products will allow you access to the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking brings.

A WLAN is a cellular computer network that transmits and receives data with radio signals instead of wires. WLANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

*People use wireless LAN technology for many different purposes:*

**Mobility** - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

**Low Implementation Costs** – WLANs are easy to set up, manage, change and relocate. Networks that frequently change can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

**Installation and Network Expansion** - Installing a WLAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings. Wireless technology allows the network to go where wires cannot go - even outside the home or office.

**Scalability** – WLANs can be configured in a variety of topologies to meet the needs of specific applications and installations. Configurations are easily changed and range from peer-to-peer networks suitable for a small number of users to larger infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

**Inexpensive Solution** - Wireless network devices are as competitively priced as conventional Ethernet network devices.



## Wireless Basics (*continued*)

### Standards-Based Technology

The DI-624 Wireless Broadband Router utilizes the new **802.11g** standard.

The IEEE **802.11g** standard is an extension of the 802.11b standard. It increases the data rate up to 54Mbps within the 2.4GHz band, utilizing **OFDM technology**.

This means that in most environments, within the specified range of this device, you will be able to transfer large files quickly or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing **OFDM (Orthogonal Frequency Division Multiplexing)** technology. **OFDM** works by splitting the radio signal into multiple smaller sub-signals that are then transmitted simultaneously at different frequencies to the receiver. **OFDM** reduces the amount of **crosstalk** (interference) in signal transmissions.

The DI-624 is backwards compatible with 802.11b devices. This means that if you have an existing 802.11b network, the devices in that network will be compatible with 802.11g devices at speeds of up to 11Mbps in the 2.4GHz range.

## Wireless Basics *(continued)*

### Installation Considerations

The D-Link *AirPlus Xtreme G* DI-624 lets you access your network, using a wireless connection, from virtually anywhere within its operating range. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- 1** Keep the number of walls and ceilings between the DI-624 and other network devices to a minimum - each wall or ceiling can reduce your D-Link wireless product's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
- 2** Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- 3** Building Materials can impede the wireless signal - a solid metal door or aluminum studs may have a negative effect on range. Try to position wireless devices and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
- 4** Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate extreme RF noise.

# Getting Started

## Setting up a Wireless Infrastructure Network



Please remember that **D-Link AirPlus Xtreme G** wireless devices are pre-configured to connect together, right out of the box, with their default settings.

For a typical wireless setup at home (as shown above), please do the following:

- 1** You will need broadband Internet access (a Cable or DSL-subscriber line into your home or office).
- 2** Consult with your Cable or DSL provider for proper installation of the modem.
- 3** Connect the Cable or DSL modem to the DI-624 Wireless Broadband Router (see the printed Quick Installation Guide included with your router.)
- 4** If you are connecting a desktop computer to your network, install the D-Link AirPlus Xtreme G DWL-G520 wireless PCI adapter into an available PCI slot on your desktop computer. You may also install the DWL-520+, or the DWL-520. (See the printed Quick Installation Guide included with the network adapter.)
- 5** Install the D-Link DWL-G650 wireless Cardbus adapter into a laptop computer. (See the printed Quick Installation Guide included with the DWL-G650.)
- 6** Install the D-Link DFE-530TX+ adapter into a desktop computer. The four Ethernet LAN ports of the DI-624 are Auto MDI/MDIX and will work with both Straight-Through and Cross-Over cable. (See the printed Quick Installation Guide included with the DFE-530TX+.)

# Using the Configuration Menu

Whenever you want to configure your network or the DI-624, you can access the Configuration Menu by opening the web-browser and typing in the IP Address of the DI-624. The DI-624 default IP Address is shown at right:

- Open the web browser
- Type in the **IP Address** of the Router (<http://192.168.0.1>)


*Note: if you have changed the default IP Address assigned to the DI-624, make sure to enter the correct IP Address.*

- Type **admin** in the **User Name** field
- Leave the **Password** blank
- Click **OK**



## Home > Wizard

The Home>Wizard screen will appear. Please refer to the *Quick Installation Guide* for more information regarding the Setup Wizard.

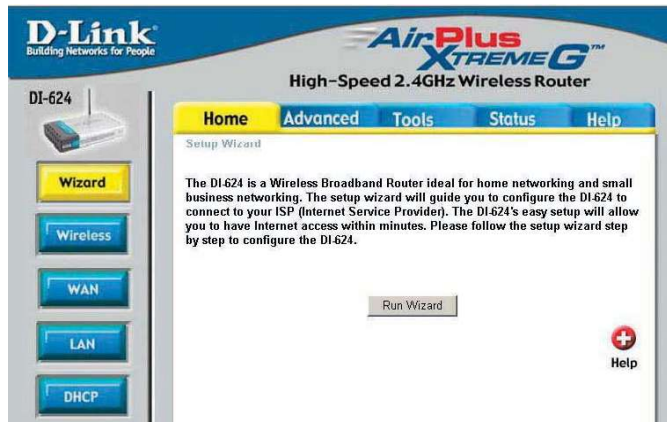

These buttons appear on most of the configuration screens in this section. Please click on the appropriate button at the bottom of each screen after you have made a configuration change.



Apply



Cancel



Help



Restart

Clicking **Apply** will save changes made to the page.

Clicking **Cancel** will clear changes made to the page.

Clicking **Help** will bring up helpful information regarding the page.

Clicking **Restart** will restart the router. (Necessary for some changes.)

## Using the Configuration Menu (continued)

### Home > Wireless

The screenshot shows the configuration interface for a D-Link DI-624 AirPlus Xtreme G High-Speed 2.4GHz Wireless Router. The page is titled "Home > Wireless" and features a navigation menu with "Home", "Advanced", "Tools", "Status", and "Help". The "Wireless Settings" section is active, displaying the following configuration options:

- SSID: default
- Channel: 6
- WEP:  Enabled  Disabled
- WEP Encryption: 64Bit
- Key Type: HEX
- Key1: 0000000000
- Key2: 0000000000
- Key3: 0000000000
- Key4: 0000000000

At the bottom right, there are three icons: a green checkmark, a red X, and a red plus sign, with the labels "Apply", "Cancel", and "Help" respectively.

#### SSID-

Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **default**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

#### Channel-

**6** is the default channel. All devices on the network must share the same channel. *(Note: The wireless adapters will automatically scan and match the wireless setting.)*

#### WEP-

Wired Equivalent Privacy (WEP) is a wireless security protocol for Wireless Local Area Networks (WLAN). WEP provides security by encrypting the data that is sent over the WLAN. Select **Enabled** or **Disabled**. **Disabled** is the default setting. *(Note: If you enable encryption on the DI-624 make sure to also enable encryption on all the wireless clients or wireless connection will not be established.)*

#### WEP Encryption-

Select the level of encryption desired: 64-bit, or 128-bit.

#### Key Type-

Select **HEX** or **ASCII**.

#### Keys 1-4-

Input up to 4 WEP keys; select the one you wish to use.

## Using the Configuration Menu (continued)

### Home > WAN > Dynamic IP Address

The screenshot shows the configuration page for a D-Link AirPlus Xtreme G High-Speed 2.4GHz Wireless Router. The page is titled "Home > WAN > Dynamic IP Address". On the left side, there is a navigation menu with buttons for "Wizard", "Wireless", "WAN" (highlighted in yellow), "LAN", and "DHCP". The main content area is titled "WAN Settings" and contains the following information:

- Dynamic IP Address:** Selected with a radio button. Description: "Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)".
- Static IP Address:** Unselected. Description: "Choose this option to set static IP information provided to you by your ISP."
- PPPoE:** Unselected. Description: "Choose this option if your ISP uses PPPoE. (For most DSL users)".
- Others:** Unselected. Description: "PPTP and BigPond Cable (for Europe use only)".
- Dynamic IP:**
  - Host Name:** Input field containing "DI-624" with "(optional)" to the right.
  - MAC Address:** Input field containing "00 - 03 - 2F - FF - F0 - 86" with "(optional)" to the right. A "Clone MAC Address" button is located to the right of the input field.

At the bottom right of the form, there are three icons: a green checkmark, a red X, and a red plus sign, with the labels "Apply", "Cancel", and "Help" respectively.

#### Dynamic IP Address-

Choose Dynamic IP Address to obtain IP Address information automatically from your ISP. Select this option if your ISP does not give you any IP numbers to use. This option is commonly used for Cable modem services.

#### Host Name-

The Host Name is optional but may be required by some ISPs. The default host name is the device name of the Router and may be changed.

#### MAC Address-

The default MAC Address is set to the WAN's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP.

#### Clone MAC Address-

The default MAC address is set to the WAN's physical interface MAC address on the Broadband Router. You can use the "Clone MAC Address" button to copy the MAC address of the Ethernet Card installed by your ISP and replace the WAN MAC address with the MAC address of the router. It is not recommended that you change the default MAC address unless required by your ISP.

#### Primary/ Secondary DNS Address-

Enter a DNS Address if you do not wish to use the one provided by your ISP.

#### MTU-

Enter an MTU value only if required by your ISP. Otherwise, leave it at the default setting.



## Using the Configuration Menu (continued)

Home > WAN > Static IP Address

The screenshot shows the configuration page for a D-Link DI-624 AirPlus Xtreme G High-Speed 2.4GHz Wireless Router. The page is titled 'Home > WAN > Static IP Address'. On the left side, there is a navigation menu with buttons for 'Wizard', 'Wireless', 'WAN' (highlighted in yellow), 'LAN', and 'DHCP'. The main content area has a tabbed interface with 'Home', 'Advanced', 'Tools', 'Status', and 'Help' tabs. Under the 'Home' tab, the 'WAN Settings' section is active, with the instruction 'Please select the appropriate option to connect to your ISP.' There are four radio button options: 'Dynamic IP Address' (unselected), 'Static IP Address' (selected), 'PPPoE' (unselected), and 'Others' (unselected). The 'Others' option has a sub-option 'PPTP' (unselected) with the note '(for Europe use only)'. Below these options, the 'Static IP' section contains several input fields: 'IP Address' (0.0.0.0), 'Subnet Mask' (0.0.0.0), 'ISP Gateway Address' (0.0.0.0), 'Primary DNS Address' (0.0.0.0), and 'Secondary DNS Address' (0.0.0.0). The 'IP Address' field has a note '(assigned by your ISP)' and the 'Secondary DNS Address' field has a note '(optional)'. At the bottom right of the form are three buttons: 'Apply' (with a green checkmark icon), 'Cancel' (with a red X icon), and 'Help' (with a red plus icon).

**Static IP Address-** Choose Static IP Address if all WAN IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format.

**IP Address-** Input the public IP Address provided by your ISP.

**Subnet Mask-** Input your Subnet mask. (All devices in the network must have the same subnet mask.)

**ISP Gateway Address-** Input the public IP address of the ISP to which you are connecting.

**Primary DNS Address-** Input the primary DNS (Domain Name Server) IP address provided by your ISP.

**Secondary DNS Address-** This is optional.

**MTU-** Enter an MTU value only if required by your ISP. Otherwise, leave it at the default setting.

## Using the Configuration Menu (continued)



Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses a PPPoE connection. Your ISP will provide you with a username and password. This option is typically used for DSL services. Select Dynamic PPPoE to obtain an IP address automatically for your PPPoE connection. Select Static PPPoE to use a static IP address for your PPPoE connection.

### Home > WAN > PPPoE

The screenshot shows the WAN Settings page for a D-Link AirPlus Xtreme G router. The 'WAN' tab is selected. Under 'WAN Settings', the 'Dynamic IP Address' option is selected. Under 'PPPoE', the 'Dynamic PPPoE' option is selected. The form includes fields for User Name, Password, Retype Password, Service Name (optional), IP Address, Primary DNS Address, Secondary DNS Address (optional), Maximum Idle Time (0 Minutes), MTU (1492), and Auto-reconnect (Enabled). Buttons for Apply, Cancel, and Help are at the bottom right.

#### PPPoE-

Choose this option if your ISP uses PPPoE. (Most DSL users will select this option.)

**Dynamic PPPoE-** receive an IP Address automatically from your ISP.

**Static PPPoE-** you have an assigned (static) IP Address.

#### User Name-

Your PPPoE username provided by your ISP.

#### Retype Password-

Re-enter the PPPoE password

#### Service Name-

Enter the Service Name provided by your ISP (optional).

#### IP Address-

This option is only available for Static PPPoE. Enter the static IP Address for the PPPoE connection.

#### Primary DNS Address-

Primary DNS IP address provided by our ISP

#### Secondary DNS Address-

This option is only available for Static PPPoE. Enter the static IP Address for the PPPoE connection.

(Continued on the next page)



## Using the Configuration Menu (continued)

### Home > WAN > PPPoE *continued*


#### MTU-

Maximum Transmission Unit-1492 is the default setting-you may need to change the MTU for optimal performance with your specific ISP.

#### Auto-reconnect-

If enabled, the DI-624 will automatically connect to your ISP after your system is restarted or if the PPPoE connection is dropped.

### Home > LAN

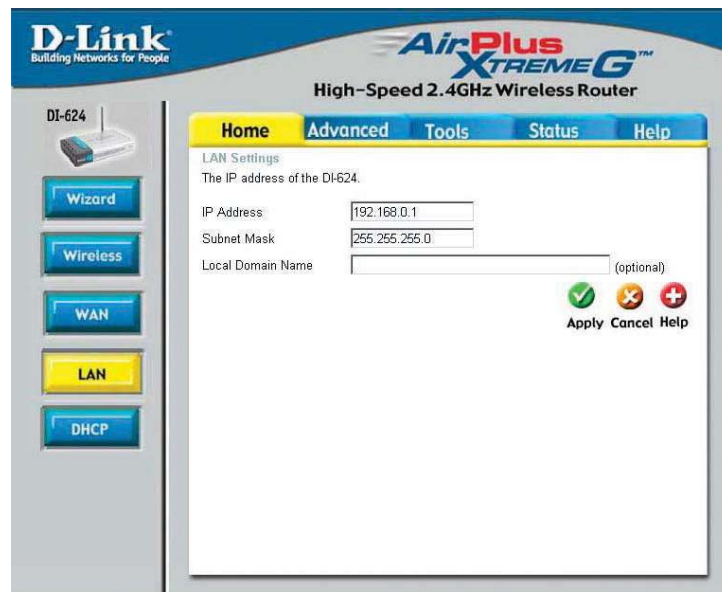

The screenshot shows the configuration interface for a D-Link DI-624 router. The main heading is "AirPlus Xtreme G High-Speed 2.4GHz Wireless Router". The navigation menu includes "Home", "Advanced", "Tools", "Status", and "Help". The "LAN Settings" section is active, showing the IP address of the DI-624. The IP Address field is set to 192.168.0.1, and the Subnet Mask is set to 255.255.255.0. The Local Domain Name field is optional and currently empty. There are three icons (a green checkmark, a red X, and a red plus sign) and buttons for "Apply", "Cancel", and "Help".

LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DI-624. These settings may be referred to as Private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet.

#### IP Address-

The IP address of the LAN interface. The default IP address is: **192.168.0.1**


#### Subnet Mask-

The subnet mask of the LAN interface.  
The default subnet mask is **255.255.255.0**

#### Local Domain-

This field is optional. Enter in the local domain name.

## Using the Configuration Menu (continued)

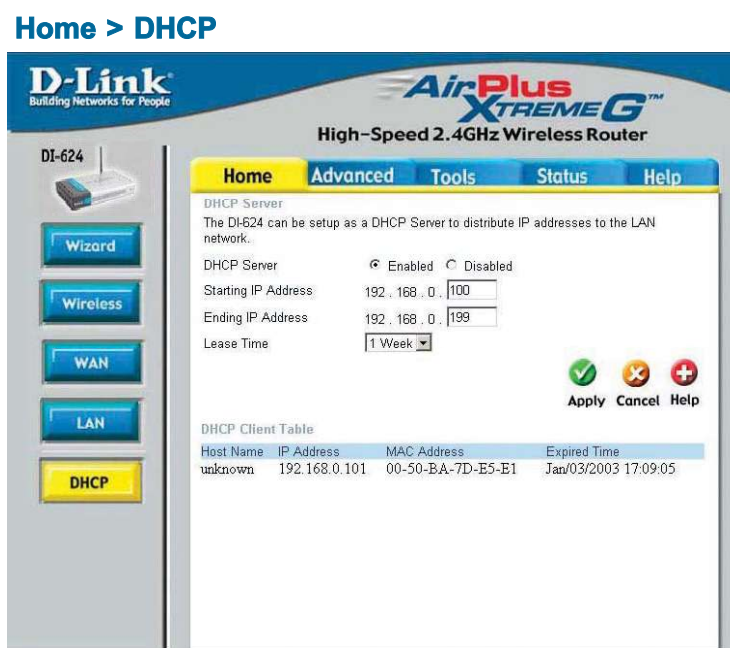

**DHCP** stands for *Dynamic Host Control Protocol*. The DI-624 has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to "Obtain an IP Address Automatically." When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the DI-624. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

**DHCP Server-** Select **Enabled** or **Disabled**. The **default** setting is **Enabled**.

**Starting IP Address-** The starting IP address for the DHCP server's IP assignment

**Ending IP Address-** The ending IP address for the DHCP server's IP assignment

**Lease Time-** The length of time for the IP lease. Enter the Lease time. The default setting is one hour

## Using the Configuration Menu (continued)

### Advanced > Virtual Server

The screenshot shows the D-Link DI-624 configuration interface. The top navigation bar includes 'Home', 'Advanced', 'Tools', 'Status', and 'Help'. The 'Advanced' tab is selected. The 'Virtual Server' section is active, showing a sidebar with buttons for 'Virtual Server', 'Applications', 'Filters', 'Firewall', 'DMZ', and 'Performance'. The main content area is titled 'Virtual Server' and includes a description: 'Virtual Server is used to allow Internet users access to LAN services.' Below this, there are configuration options: 'Enabled' (selected) and 'Disabled' (radio buttons), a 'Name' field with a 'Clear' button, 'Private IP' field, 'Protocol Type' dropdown (set to 'TCP'), 'Private Port' field, 'Public Port' field, and 'Schedule' options: 'Always' (selected) and 'From time' (dropdowns for hour, minute, AM/PM, to, hour, minute, AM/PM, and day). At the bottom, there is a 'Virtual Servers List' table with columns for Name, Private IP, Protocol, and Schedule. The table lists four pre-defined services: Virtual Server FTP, Virtual Server HTTP, Virtual Server HTTPS, and Virtual Server DNS, all with Private IP 0.0.0.0 and Schedule 'always'. Action buttons (Apply, Cancel, Help) are located at the bottom right of the table.

Name	Private IP	Protocol	Schedule
<input type="checkbox"/> Virtual Server FTP	0.0.0.0	TCP 21/21	always
<input type="checkbox"/> Virtual Server HTTP	0.0.0.0	TCP 80/80	always
<input type="checkbox"/> Virtual Server HTTPS	0.0.0.0	TCP 443/443	always
<input type="checkbox"/> Virtual Server DNS	0.0.0.0	UDP 53/53	always

The DI-624 can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network).

The DI-624 firewall feature filters out unrecognized packets to protect your LAN network so all computers networked with the DI-624 are invisible to the outside world. If you wish, you can make some of the LAN computers accessible from the Internet by enabling *Virtual Server*. Depending on the requested service, the DI-624 redirects the external service request to the appropriate server within the LAN network.

The DI-624 is also capable of port-redirection, meaning incoming traffic to a particular port may be redirected to a different port on the server computer.

Each virtual service that is created will be listed at the bottom of the screen in the Virtual Servers List. There are pre-defined virtual services already in the table. You may use them by enabling them and assigning the server IP to use that particular virtual service.

## Using the Configuration Menu (continued)

### Advanced > Virtual Server *continued*

<b>Virtual Server-</b>	Select <b>Enabled</b> or <b>Disabled</b> .
<b>Name-</b>	Enter the name referencing the virtual service.
<b>Private IP-</b>	The server computer in the LAN (Local Area Network) that will be providing the virtual services.
<b>Protocol Type-</b>	The protocol used for the virtual service.
<b>Private Port-</b>	The port number of the service used by the Private IP computer.
<b>Public Port-</b>	The port number on the WAN (Wide Area Network) side that will be used to access the virtual service.
<b>Schedule-</b>	The schedule of time when the virtual service will be enabled. The schedule may be set to <b>Always</b> , which will allow the particular service to always be enabled. If it is set to <b>Time</b> , select the time frame for the service to be enabled. If the system time is outside of the scheduled time, the service will be disabled.

**Example #1:** If you have a Web server that you wanted Internet users to access at all times, you would need to enable it. Web (HTTP) server is on LAN (Local Area Network) computer 192.168.0.25. HTTP uses port 80, TCP.  
Name: Web Server  
Private IP: 192.168.0.25  
Protocol Type: TCP  
Private Port: 80  
Public Port: 80  
Schedule: always

## Using the Configuration Menu (continued)

### Advanced > Virtual Server *continued*

Virtual Servers List				
	Name	Private IP	Protocol	Schedule
<input checked="" type="checkbox"/>	Virtual Server HTTP	192.168.0.25	TCP 80/80	always



Click on this icon to edit the virtual service



Click on this icon to delete the virtual service

#### Example #2:

If you have an FTP server that you wanted Internet users to access by WAN port 2100 and only during the weekends, you would need to enable it as such. FTP server is on LAN computer 192.168.0.30. FTP uses port 21, TCP.

Name: FTP Server  
Private IP: 192.168.0.30  
Protocol Type: TCP  
Private Port: 21  
Public Port: 2100

Schedule: From: 01:00AM to 01:00AM, Sat to Sun

All Internet users who want to access this FTP Server must connect to it from port 2100. This is an example of port redirection and can be useful in cases where there are many of the same servers on the LAN network.

## Using the Configuration Menu (continued)

### Advanced > Applications



Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have difficulties working through NAT (Network Address Translation). Special Applications makes some of these applications work with the DI-624. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic.

The DI-624 provides some predefined applications in the table on the bottom of the web page. Select the application you want to use and enable it.

**Note!** Only one PC can use each Special Application tunnel.

- Name:** This is the name referencing the special application.
- Trigger Port:** This is the port used to trigger the application. It can be either a single port or a range of ports.
- Trigger Type:** This is the protocol used to trigger the special application.
- Public Port:** This is the port number on the WAN side that will be used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.
- Public Type:** This is the protocol used for the special application.

## Using the Configuration Menu (continued)

Advanced > Filters > IP Filters

The screenshot shows the configuration interface for the D-Link DI-624 router. The page is titled "AirPlus Xtreme G High-Speed 2.4GHz Wireless Router". The navigation menu includes Home, Advanced (selected), Tools, Status, and Help. The left sidebar contains buttons for Virtual Server, Applications, Filters (highlighted), Firewall, DMZ, and Performance. The main content area is titled "Filters" and explains that filters are used to allow or deny LAN users from accessing the Internet. It offers four filter types: IP Filters (selected), MAC Filters, URL Blocking, and Domain Blocking. The "IP Filters" section is expanded, showing options to enable or disable the filter, a "Clear" button, and input fields for IP range, port range, and protocol type (set to TCP). A schedule section allows setting the filter to be "Always" active or to follow a specific time and day range. At the bottom, an "IP Filter List" table shows two existing filters: one for TCP ports 20-21 and another for TCP port 80, both scheduled to be active "always".

IP Range	Protocol	Schedule	
*.*.*.*	TCP 20-21	always	
*.*.*.*	TCP 80	always	

Filters are used to deny or allow LAN (Local Area Network) computers from accessing the Internet. The DI-624 can be setup to deny internal computers by their IP or MAC addresses. The DI-624 can also block users from accessing restricted web sites.

### IP Filters:

Use IP Filters to deny LAN IP addresses from accessing the Internet. You can deny specific port numbers or all ports for the specific IP address.

### IP:

The IP address of the LAN computer that will be denied access to the Internet.

### Port:

The single port or port range that will be denied access to the Internet.

### Protocol Type:

Select the protocol type.

### Schedule:

This is the schedule of time when the IP Filter will be enabled.



## Using the Configuration Menu (continued)

### Advanced > Filters > URL Blocking



URL Blocking is used to deny LAN computers from accessing specific web sites by the URL. A URL is a specially formatted text string that defines a location on the Internet. If any part of the URL contains the blocked word, the site will not be accessible and the web page will not display. To use this feature, enter the text string to be blocked and click **Apply**. The text to be blocked will appear in the list. To delete the text, just highlight it and click **Delete**.

**Filters-** Select the filter you wish to use; in this case, **URL Blocking** was chosen.

**URL Blocking-** Select **Enabled** or **Disabled**.

**Keywords-** Block URLs which contain keywords listed below. Enter the keywords in this space.



## Using the Configuration Menu (continued)

Advanced > Filters > MAC Filters

The screenshot shows the configuration interface for a D-Link DI-624 AirPlus Xtreme G High-Speed 2.4GHz Wireless Router. The page is titled "Filters" and contains the following elements:


- Navigation:** Home, Advanced (selected), Tools, Status, Help.
- Filters Section:** "Filters are used to allow or deny LAN users from accessing the Internet." Options include IP Filters, MAC Filters (selected), URL Blocking, and Domain Blocking.
- MAC Filters Section:** "Use MAC address to allow or deny computers access to the network." Options include Disabled MAC Filters, Only allow computers with MAC address listed below to access the network (selected), and Only deny computers with MAC address listed below to access the network.
- Form Fields:** Name: "MACfilter1", MAC Address: "00 - 80 - c0 - a1 - 23 - 65", DHCP Client: "Clone".
- Buttons:** Clear, Apply, Cancel, Help.
- MAC Filter List:** A table with columns for Name and MAC Address.

Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) computers by their MAC addresses from accessing the Network. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

- Filters-** Select the filter you wish to use; in this case, **MAC filters** was chosen.
- MAC Filters-** Choose **Disable** MAC filters; **allow** MAC addresses listed below; or **deny** MAC addresses listed below.
- Name-** Enter the name here.
- MAC Address-** Enter the MAC Address.
- DHCP Client-** Select a DHCP client from the pull-down list; click **Clone** to copy that MAC Address.

## Using the Configuration Menu (continued)

Advanced > Filters > Domain Blocking

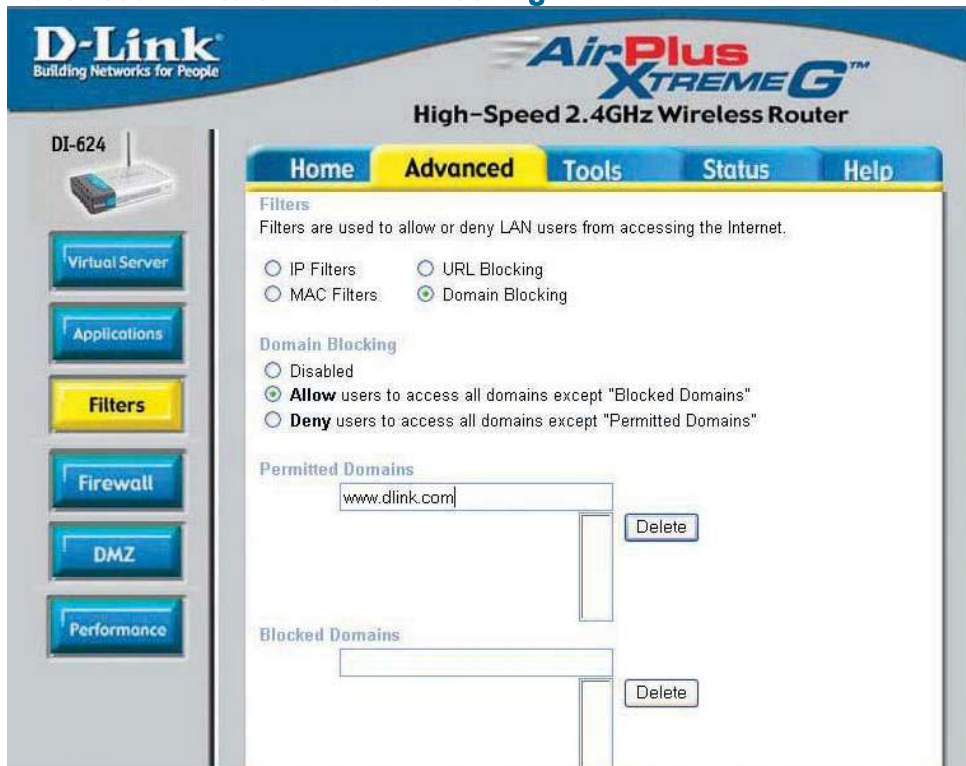

Domain Blocking is used to allow or deny LAN (Local Area Network) computers from accessing specific domains on the Internet. Domain blocking will deny all requests to a specific domain such as http and ftp. It can also allow computers to access specific sites and deny all other sites.

- Filters-** Select the filter you wish to use; in this case, **Domain Blocking** was chosen.
- Domain Blocking-**
  - Disabled-** Select **Disabled** to disable **Domain Blocking**.
  - Allow-** Allows users to access all domains except **Blocked Domains**.
  - Deny-** Denies users access to all domains except **Permitted Domains**.
- Permitted Domains-** Enter the **Permitted Domains** in this field.
- Blocked Domains-** Enter the **Blocked Domains** in this field.

## Using the Configuration Menu (continued)

### Advanced > Firewall

**D-Link**  
Building Networks for People

**AirPlus Xtreme G™**  
High-Speed 2.4GHz Wireless Router

DI-624

Virtual Server  
Applications  
Filters  
**Firewall**  
DMZ  
Performance

Home Advanced Tools Status Help

Firewall Rules  
Firewall Rules can be used to allow or deny traffic from passing through the DI-624.

Enabled  Disabled

Name

Action  Allow  Deny

Source Interface IP Range Start IP Range End Protocol Port Range

Destination \*   TCP  .

Schedule  Always  
 From time 00 : 00 AM to 00 : 00 AM  
day Sun to Sun

Apply Cancel Help

Action	Name	Source	Destination	Protocol
<input checked="" type="checkbox"/>	Allow	Allow to Ping WAN port	WAN,* LAN,192.168.0.1	ICMP,8
<input checked="" type="checkbox"/>	Deny	Default	*,* LAN,*	IP (I),*
<input checked="" type="checkbox"/>	Allow	Default	LAN,* *,*	IP (I),*

**Firewall Rules** is an advanced feature used to deny or allow traffic from passing through the DI-624. It works in the same way as IP Filters with additional settings. You can create more detailed access rules for the DI-624. When virtual services are created and enabled, it will also display in Firewall Rules. Firewall Rules contain all network firewall rules pertaining to IP (Internet Protocol).

In the Firewall Rules List at the bottom of the screen, the priorities of the rules are from top (highest priority) to bottom (lowest priority.)

#### Note:

The DI-624 MAC Address filtering rules have precedence over the Firewall Rules.

**Firewall Rules-** Enable or disable the Firewall

**Name-** Enter the name

**Action-** Allow or Deny


**Source-** Enter the IP Address range

**Destination-** Enter the IP Address range; the Protocol; and the Port Range

**Schedule-** Select Always or enter the Time Range.

## Using the Configuration Menu (continued)

Advanced > DMZ

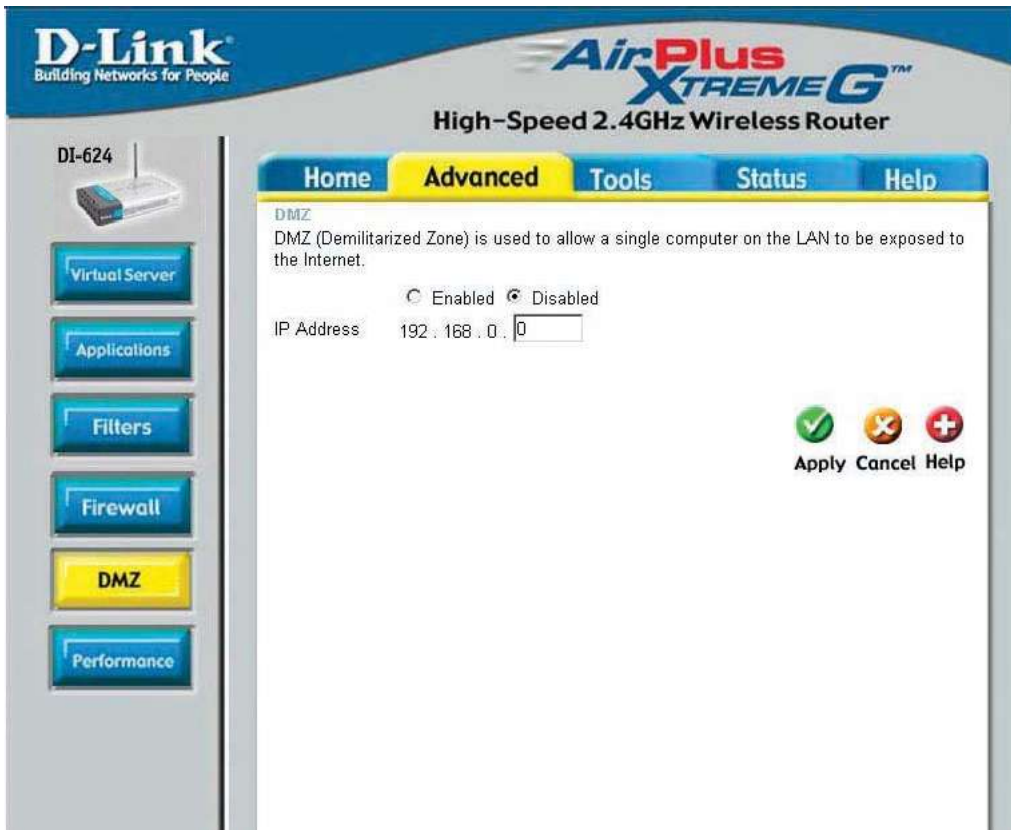

If you have a client PC that cannot run Internet applications properly from behind the DI-624, then you can set the client up for unrestricted Internet access. It allows a computer to be exposed to the Internet. This feature is useful for gaming purposes. Enter the IP address of the internal computer that will be the DMZ host. Adding a client to the DMZ (Demilitarized Zone) may expose your local network to a variety of security risks, so only use this option as a last resort.

**DMZ-** Enable or Disable the DMZ. The DMZ (Demilitarized Zone) allows a single computer to be exposed to the internet. By default the DMZ is disabled.

**IP Address-** Enter the IP Address of the computer to be in the DMZ.

## Using the Configuration Menu (continued)

### Advanced > Performance

#### Wireless Performance-

Displayed in this window are the Wireless Performance features for the Access Point portion of the DI-624.

#### TX Rates-

**Auto** is the default selection. Select from the drop down menu.

The screenshot shows the configuration interface for a D-Link DI-624 router. The page title is "AirPlus Xtreme G High-Speed 2.4GHz Wireless Router". The navigation tabs are "Home", "Advanced", "Tools", "Status", and "Help". The "Advanced" tab is selected, and the "Performance" sub-tab is active. The "Wireless Performance" section is displayed, with a sub-header: "These are the Wireless Performance features for the AP (Access Point) Portion." The settings are as follows:

- TX Rate: Auto (Mbps)
- Beacon interval: 100 (msec, range: 20~1000, default: 100)
- RTS Threshold: 2346 (range: 1~2346, default: 2346)
- Fragmentation: 2346 (range: 256~2346, default: 2346, even number only)
- DTIM interval: 1 (range: 1~255, default: 1)
- Preamble Type:  Short Preamble  Long Preamble
- SSID Broadcast:  Enabled  Disabled
- 802.11g Only Mode:  Enabled  Disabled
- CTS Mode:  None  Always  Auto
- Super G Mode: Super G with Dynamic Turbo (dropdown menu is open showing: Disabled, Super G without Turbo, Super G with Dynamic Turbo, Super G with Static Turbo)

At the bottom right, there are "Apply", "Cancel", and "Help" buttons.

#### Beacon Interval-

Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a value. 100 is the default setting and is recommended.

#### RTS Threshold-

This value should remain at its default setting of 2342. If inconsistent data flow is a problem, only a minor modification should be made.

#### Fragmentation-

The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.

#### DTIM interval-

(Delivery Traffic Indication Message) **3** is the default setting. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

#### Preamble Type-

Select **Short** or **Long Preamble**. The Preamble defines the length of the CRC block (Cyclic Redundancy Check is a common technique for detecting data transmission errors) for communication between the wireless router and the roaming wireless network adapters. *Note: High network traffic areas should use the shorter preamble type.*

#### SSID Broadcast-

Choose **Enabled** to broadcast the SSID across the network. All devices on a network must share the same SSID (Service Set Identifier) to establish communication. Choose **Disabled** if you do not wish to broadcast the SSID over the network.



## Using the Configuration Menu (continued)

### Advanced > Performance (continued)

- 802.11g only mode-** Select this mode to restrict your network to only those devices that employ the 802.11g standard. Enabling this mode will ensure that you maintain the highest connectivity rate, unhampered by any connection to an 802.11b device.
- CTS Mode-** CTS (Clear To Send) is a function used to minimize collisions among wireless devices on a wireless local area network (LAN). CTS will make sure the wireless network is clear before a wireless client attempts to send wireless data. Enabling CTS will add overhead and may lower wireless throughput.
- None-** CTS is typically used in a pure 802.11g environment. If CTS is set to "None" in a mixed mode environment populated by 802.11b clients, wireless collisions may occur frequently.
- Always-** CTS will always be used to make sure the wireless LAN is clear before sending data.
- Auto-** CTS will monitor the wireless network and automatically decide whether to implement CTS based on the amount of traffic and collisions that occurs on the wireless network.
- Super G Mode-** Super G is a group of performance enhancement features that increase end user application throughput in an 802.11g network. Super G is backwards compatible to standard 802.11g devices. For top performance, all wireless devices on the network should be Super G capable. Select either Disabled, Super G without Turbo, Super G with Dynamic Turbo, or Super G with Static Turbo.
- Disabled-** Standard 802.11g support, no enhanced capabilities.
- Super G without Turbo-** Capable of Packet Bursting, FastFrames, Compression, and no Turbo mode.
- Super G with Dynamic Turbo-** Capable of Packet Bursting, FastFrames, Compression, and Dynamic Turbo. This setting is backwards compatible with non-Turbo (legacy) devices. Dynamic Turbo mode is only enabled when all nodes on the wireless network are Super G with Dynamic Turbo enabled.
- Super G with Static Turbo-** Capable of Packet Bursting, FastFrames, Compression, and Static Turbo. This setting is not backwards compatible with non-Turbo (legacy) devices. Static turbo mode is always on and is only enabled when all nodes on the wireless network is Super G with Static Turbo enabled.

## Using the Configuration Menu (continued)

Tools>Admin

The screenshot shows the D-Link DI-624 web management interface. The top navigation bar includes 'Home', 'Advanced', 'Tools', 'Status', and 'Help'. The 'Tools' tab is selected. The main content area is titled 'Administrator Settings' and contains the following sections:

- Administrator Settings:** Administrators can change their login password. This section includes fields for 'New Password' and 'Confirm Password' for the 'Administrator (The Login Name is "admin")'.
- User (The Login name is "user"):** This section includes fields for 'New Password' and 'Confirm Password' for the 'User'.
- Remote Management:** This section includes a radio button to toggle between 'Enabled' and 'Disabled' (currently 'Disabled' is selected), an 'IP Address' field with an asterisk (\*) in it, and a 'Port' dropdown menu set to '8080'.

At the bottom right of the form, there are three icons: a green checkmark, a red 'X', and a red plus sign, with the text 'Apply Cancel Help' below them.

At this page, the DI-624 administrator can change the system password. There are two accounts that can access the Broadband Router's Web-Management interface. They are admin and user. Admin has read/write access while user has read-only access. User can only view the settings but cannot make any changes.

**Administrator-** admin is the **Administrator login name**

**Password-** Enter the password and enter again to confirm

**User-** user is the **User login name**

**Password-** Enter the password and enter again to confirm

**Remote Management-** Remote management allows the DI-624 to be configured from the Internet by a web browser. A username and password is still required to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform **Administrator** tasks. This feature enables you to perform Administrator tasks from the remote (Internet) host.

**IP Address-** The Internet IP address of the computer that has access to the Broadband Router. If you input an asterisk (\*) into this field, then any computer will be able to access the Router. Putting an asterisk (\*) into this field would present a security risk and is not recommended.

**Port-** The port number used to access the Broadband Router.

**Example-** http://x.x.x.x:8080 where x.x.x.x is the WAN IP address of the Broadband Router and 8080 is the port used for the Web-Mangement interface.

## Using the Configuration Menu (continued)

### Tools > Time

The screenshot shows the configuration interface for a D-Link DI-624 router. The page title is "AirPlus Xtreme G High-Speed 2.4GHz Wireless Router". The navigation menu includes Home, Advanced, Tools (selected), Status, and Help. On the left sidebar, there are buttons for Admin, Time (highlighted), System, Firmware, and Misc. The main content area is titled "Time" and contains the following fields:

- Local Time: Dec/27/2002 17:31:51
- Time Zone: (GMT-08:00) Pacific Time (US & Canada) [pull-down menu]
- Default NTP Server: [text input] (optional)
- Set the Time: Year [2002], Month [Dec], Day [27], Hour [17], Minute [31], Second [51], [Set Time button]
- Daylight Saving:  Enabled  Disabled, Start [Jan] [01], End [Jan] [01]

At the bottom right of the form are three buttons: Apply (with a green checkmark icon), Cancel (with a red X icon), and Help (with a red plus icon).

#### Time Zone-

Select the Time Zone from the pull-down menu.

#### Default NTP Server-

NTP is short for *Network Time Protocol*. NTP synchronizes computer clock times in a network of computers. This field is optional.

#### Set the Time-

To manually input the time, enter the values in these fields for the Year, Month, Day, Hour, Minute, and Second. Click **Set Time**.


#### Daylight Saving-

To select Daylight Saving time manually, select **enabled** or **disabled**, and enter a start date and an end date for daylight saving time.



## Using the Configuration Menu (continued)

Tools > System

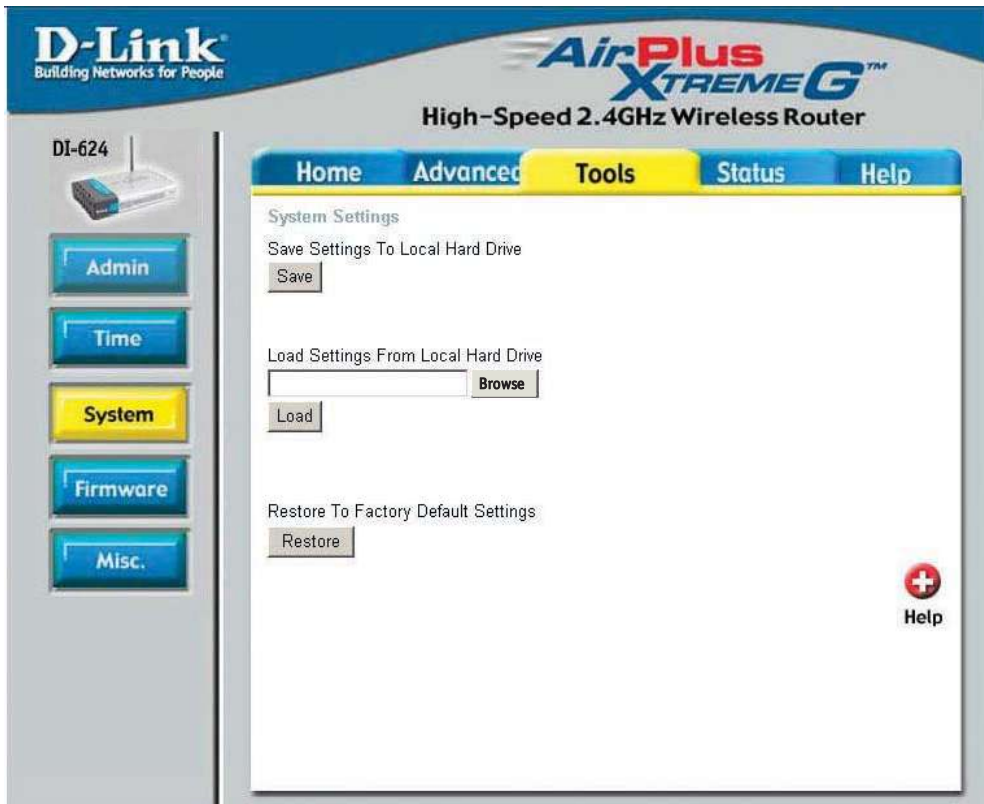

The current system settings can be saved as a file onto the local hard drive. The saved file or any other saved setting file can be loaded back on the Broadband Router. To reload a system settings file, click on **Browse** to browse the local hard drive and locate the system file to be used. You may also reset the Broadband Router back to factory settings by clicking on **Restore**.


**Save Settings to Local Hard Drive-** Click **Save** to save the current settings to the local Hard Drive

**Load Settings from Local Hard Drive-** Click **Browse** to find the settings, then click **Load**

**Restore to Factory Default Settings-** Click **Restore** to restore the factory default settings

## Using the Configuration Menu (continued)

### Tools > Firmware

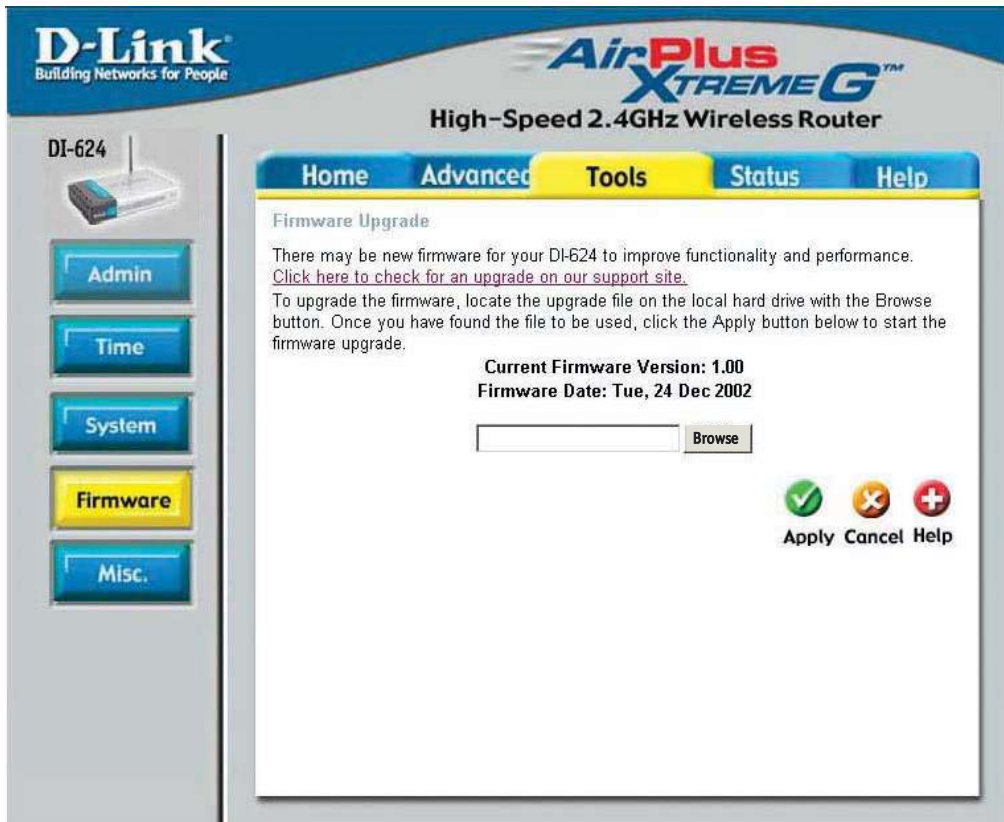

You can upgrade the firmware of the Router here. Make sure the firmware you want to use is on the local hard drive of the computer. Click on **Browse** to browse the local hard drive and locate the firmware to be used for the update. Please check the D-Link support site for firmware updates at <http://support.dlink.com>. You can download firmware upgrades to your hard drive from the D-Link support site.

**Firmware Upgrade-** Click on the link in this screen to find out if there is an updated firmware; if so, download the new firmware to your hard drive.

**Browse-** After you have downloaded the new firmware, click **Browse** in this window to locate the firmware update on your hard drive. Click **Apply** to complete the firmware upgrade.

## Using the Configuration Menu (continued)

### Tools > Misc

#### Ping Test-

The Ping Test is used to send Ping packets to test if a computer is on the Internet. Enter the IP Address that you wish to Ping, and click **Ping**.

#### Restart Device-

Click **Reboot** to restart the DI-624.

#### Block WAN Ping-

If you choose to block WAN Ping, the WAN IP Address of the DI-624 will not respond to pings. Blocking the Ping may provide some extra security from hackers.

*Discard Ping from WAN side-*

Click **Enabled** to block the WAN ping.

The screenshot shows the configuration interface for a D-Link DI-624 router. The page title is "D-Link AirPlus Xtreme G High-Speed 2.4GHz Wireless Router". The navigation menu includes Home, Advanced, Tools, Status, and Help. The "Tools" tab is selected, and the "Misc" sub-tab is active. The "Ping Test" section has a text input field for "Host Name or IP address" and a "Ping" button. The "Reboot Device" section has a "Reboot" button. The "Block WAN Ping" section has a "Discard Ping from WAN side" option with radio buttons for "Enabled" (selected) and "Disabled". Below this are sections for "UPnP Settings" (Enabled/Disabled), "Gaming Mode" (Enabled/Disabled), "VPN Pass Through" (PPTP and IPsec, both Enabled/Disabled), and "Dynamic DNS" (Enabled/Disabled) with fields for Server Address, Host Name, Username, and Password. At the bottom right are "Apply", "Cancel", and "Help" buttons.

#### UPNP-

To use the *Universal Plug and Play* feature click on **Enabled**. UPNP provides compatibility with networking equipment, software and peripherals of the over 400 vendors that cooperate in the Plug and Play forum.

#### Gaming Mode-

Gaming mode allows a form of pass-through for certain Internet Games. If you are using Xbox, Playstation2 or a PC, make sure you are using the latest firmware and Gaming Mode is enabled. To utilize Gaming Mode, click **Enabled**. If you are not using a Gaming application, it is recommended that you **Disable** Gaming Mode.

#### Dynamic DNS-

Dynamic Domain Name System is a method of keeping a domain name linked to a changing IP Address. This is a useful feature since many computers do not use a static IP address.

#### VPN Pass Through-

The DI-624 supports VPN (Virtual Private Network) pass-through for both PPTP (Point-to-Point Tunneling Protocol) and IPsec (IP Security). Once VPN pass-through is enabled, there is no need to open up virtual services. Multiple VPN connections can be made through the DI-624. This is useful when you have many VPN clients on the LAN network.

**PPTP-** select **Enabled** or **Disabled**

**IPSec-** select **Enabled** or **Disabled**

## Using the Configuration Menu (continued)

### Status > Device Info

The screenshot shows the D-Link configuration interface for a DI-624 router. The main content area is titled 'Status > Device Info' and displays the following information:

- Device Information:** Firmware Version: 1.00, Tue, 24 Dec 2002
- LAN:**
  - MAC Address: 00-03-2F-FF-F0-85
  - IP Address: 192.168.0.1
  - Subnet Mask: 255.255.255.0
  - DHCP Server: Enabled
- WAN:**
  - MAC Address: 00-03-2F-FF-F0-86
  - Connection: DHCP Client Connected (with DHCP Release and DHCP Renew buttons)
  - IP Address: 10.80.1.94
  - Subnet Mask: 255.0.0.0
  - Default Gateway: 10.10.10.100
  - DNS: 10.10.10.41 10.10.10.45 192.152.81.1
- Wireless 802.11g:**
  - MAC Address: 00-60-B3-06-00-32
  - SSID: GIGI

This page displays the current information for the DI-624. It will display the LAN, WAN and MAC address information.

If your WAN connection is set up for a **Dynamic IP address** then a **Release** button and a **Renew** button will be displayed. Use *Release* to disconnect from your ISP and use *Renew* to connect to your ISP.

If your WAN connection is set up for **PPPoE**, a **Connect** button and a **Disconnect** button will be displayed. Use *Disconnect* to drop the PPPoE connection and use *Connect* to establish the PPPoE connection.

This window will show the DI-624's working status:

#### WAN

IP Address: WAN/Public IP Address  
Subnet Mask: WAN/Public Subnet Mask  
Gateway: WAN/Public Gateway IP Address  
Domain Name Server: WAN/Public DNS IP Address  
WAN Status: WAN Connection Status

#### LAN

IP Address: LAN/Private IP Address of the DI-624  
Subnet Mask: LAN/Private Subnet Mask of the DI-624

#### Wireless

MAC Address: Displays the MAC address  
SSID: Displays the current SSID  
Channel: Displays the current channel  
WEP: indicates whether WEP is enabled or disabled

## Using the Configuration Menu (continued)

### Status > Log

D-Link Building Networks for People

AirPlus Xtreme G™ High-Speed 2.4GHz Wireless Router

DI-624

Device Info

Log

Stats

Wireless

Home Advanced Tools **Status** Help

View Log  
View Log displays the activities occurring on the DI-624. Click on Log Settings for advance features.

First Page Last Page Previous Next Clear Log Settings Help

page 1 of 1

Time	Message	Source	Destination	Note
Dec/27/2002 17:09:11	DHCP Request success		10.80.1.94	
Dec/27/2002 17:09:11	DHCP Request		10.80.1.94	
Dec/27/2002 17:09:11	DHCP Discover			
Dec/27/2002 17:09:07	System started			
Dec/27/2002 17:09:07	DHCP Discover			

The Broadband Router keeps a running log of events and activities occurring on the Router. If the device is rebooted, the logs are automatically cleared. You may save the log files under Log Settings.

#### View Log-

**First Page** - The first page of the log

**Last Page** - The last page of the log

**Previous** - Moves back one log page

**Next** - Moves forward one log page

**Clear** - Clears the logs completely

**Log Settings** - Brings up the page to configure the log

## Using the Configuration Menu (continued)

Status > Log > Log Settings

The screenshot shows the configuration interface for a D-Link DI-624 AirPlus Xtreme G High-Speed 2.4GHz Wireless Router. The page is titled "Log settings" and includes a sub-header "Logs can be saved by sending it to an admin email address." The interface features a navigation menu with "Home", "Advanced", "Tools", "Status", and "Help". The "Status" tab is active. On the left, there is a sidebar with "Device Info", "Log", "Stats", and "Wireless" buttons. The main content area contains the following fields and options:

- SMTP Server / IP Address:
- Email Address:
- Log Type:
  - System Activity
  - Debug Information
  - Attacks
  - Dropped Packets
  - Notice

At the bottom right, there are three icons: a green checkmark for "Apply", a yellow 'X' for "Cancel", and a red plus sign for "Help".

Not only does the Broadband Router display the logs of activities and events, it can be setup to send these logs to another location.

### SMTP Server/ IP Address -

The address of the SMTP server that will be used to send the logs.

### Email Address -

The email address to which the logs will be sent.  
Click on **Send Mail Now** to send the email.



## Using the Configuration Menu (continued)

### Status > Stats

The screenshot shows the configuration page for a D-Link AirPlus Xtreme G DI-624 High-Speed 2.4GHz Wireless Router. The page is titled "Status > Stats" and displays traffic statistics. The left sidebar contains navigation buttons for "Device Info", "Log", "Stats", and "Wireless". The main content area has tabs for "Home", "Advanced", "Tools", "Status", and "Help". Under the "Status" tab, the "Traffic Statistics" section shows a table of receive and transmit packets for WAN, LAN, and WIRELESS 11g ports. There are "Refresh" and "Reset" buttons, and a "Help" icon.

	Receive	Transmit
WAN	3964 Packets	277 Packets
LAN	1317 Packets	2321 Packets
WIRELESS 11g	963 Packets	0 Packets

The screen above displays the Traffic Statistics. Here you can view the amount of packets that pass through the DI-624 on both the WAN and the LAN ports. The traffic counter will reset if the device is rebooted.

### Status > Wireless

The screenshot shows the configuration page for a D-Link AirPlus Xtreme G DI-624 High-Speed 2.4GHz Wireless Router. The page is titled "Status > Wireless" and displays a list of connected wireless clients. The left sidebar contains navigation buttons for "Device Info", "Log", "Stats", and "Wireless". The main content area has tabs for "Home", "Advanced", "Tools", "Status", and "Help". Under the "Status" tab, the "Connected Wireless Client List" section shows a table with columns for "Connected Time", "MAC Address", and "Mode". There is a "Help" icon.

Connected Time	MAC Address	Mode
----------------	-------------	------

The wireless client table displays a list of current connected wireless clients. This table also displays the connection time and MAC address of the connected wireless client.

Click on **Help** at any time, for more information.

# Networking Basics

## Using the Network Setup Wizard in Windows XP

In this section you will learn how to establish a network at home or work, using **Microsoft Windows XP**.

*Note: Please refer to websites such as <http://www.homenethelp.com> and <http://www.microsoft.com/windows2000> for information about networking computers using Windows 2000, ME or 98.*


Go to **Start>Control Panel>Network Connections**  
Select **Set up a home or small office network**



When this screen appears, **Click Next.**


## Networking Basics

Please follow all the instructions in this window:

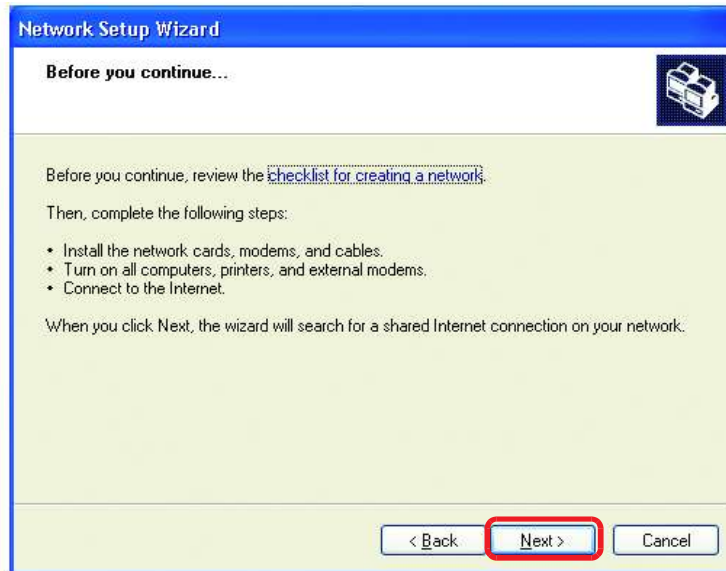

Click **Next**.


In the following window, select the best description of your computer. If your computer connects to the internet through a gateway/router, select the second option as shown.

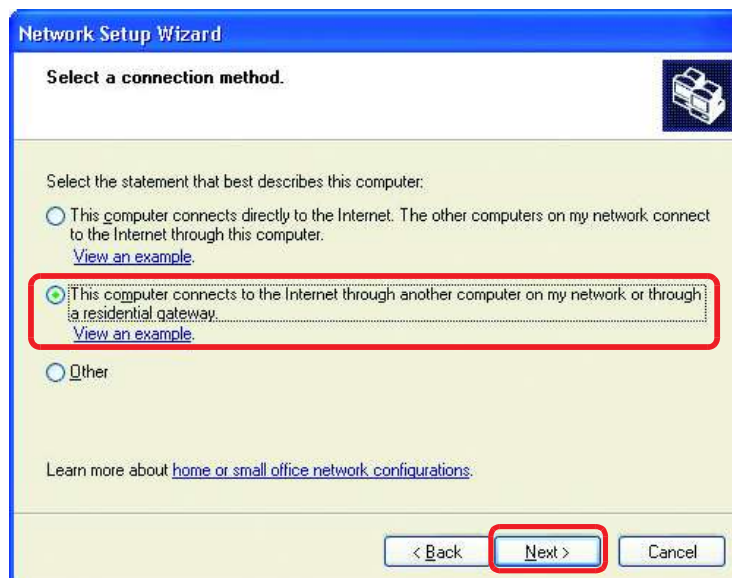

Click **Next**.

## Networking Basics

Enter a **Computer description** and a **Computer name** (optional.)

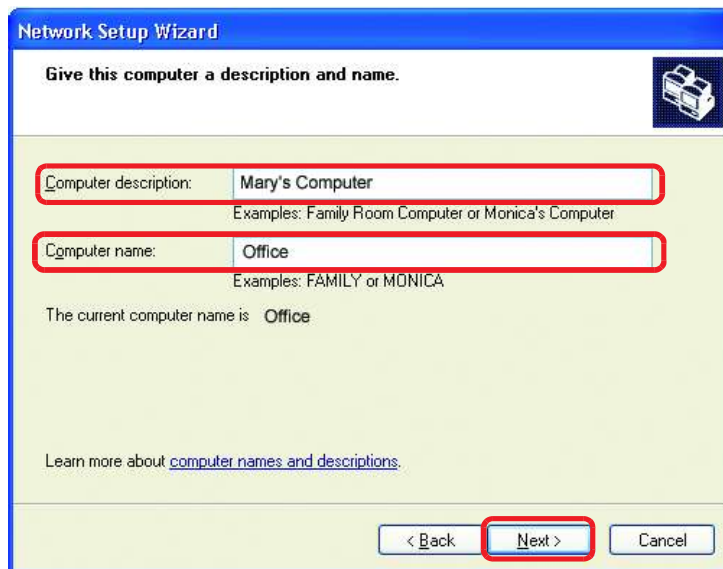

The screenshot shows the 'Network Setup Wizard' window with the title 'Give this computer a description and name.' The window contains two text input fields. The first field is labeled 'Computer description:' and contains the text 'Mary's Computer'. Below it, there is a line of text: 'Examples: Family Room Computer or Monica's Computer'. The second field is labeled 'Computer name:' and contains the text 'Office'. Below it, there is a line of text: 'Examples: FAMILY or MONICA'. Below these fields, there is a line of text: 'The current computer name is Office'. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red rectangle.

Click **Next**.

Enter a **Workgroup** name. All computers on your network should have the same **Workgroup** name.




The screenshot shows the 'Network Setup Wizard' window with the title 'Name your network.' The window contains a text input field labeled 'Workgroup name:' which contains the text 'Accounting'. Below it, there is a line of text: 'Examples: HOME or OFFICE'. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red rectangle.

Click **Next**.


## Networking Basics

Please wait while the **Network Setup Wizard** applies the changes.

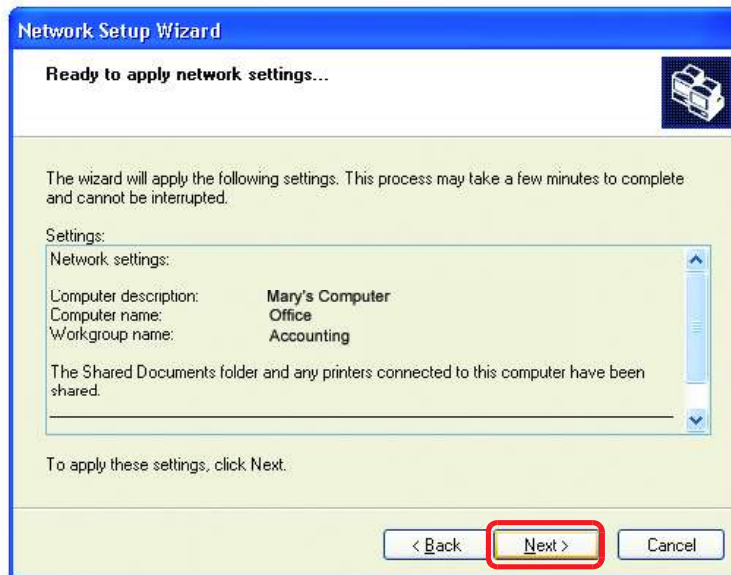


When the changes are complete, click **Next**.

Please wait while the **Network Setup Wizard** configures the computer. This may take a few minutes.

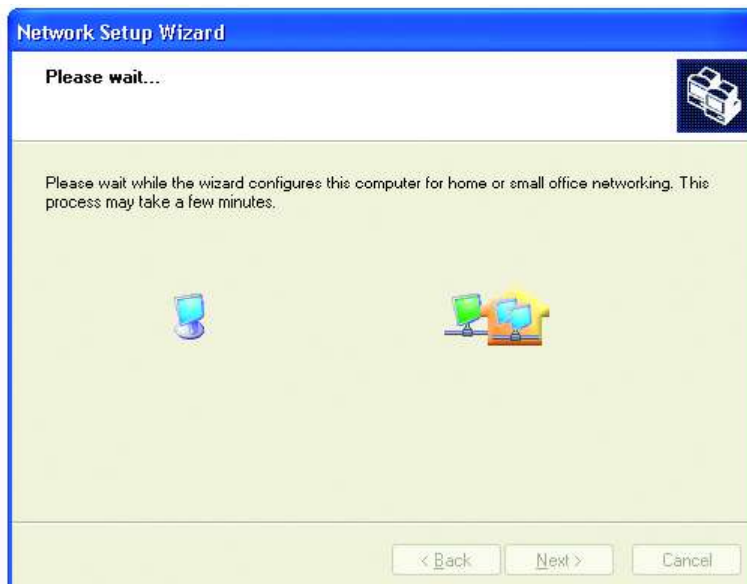

## Networking Basics

In the window below, select the option that fits your needs. In this example, **Create a Network Setup Disk** has been selected. You will run this disk on each of the computers on your network. Click **Next**.

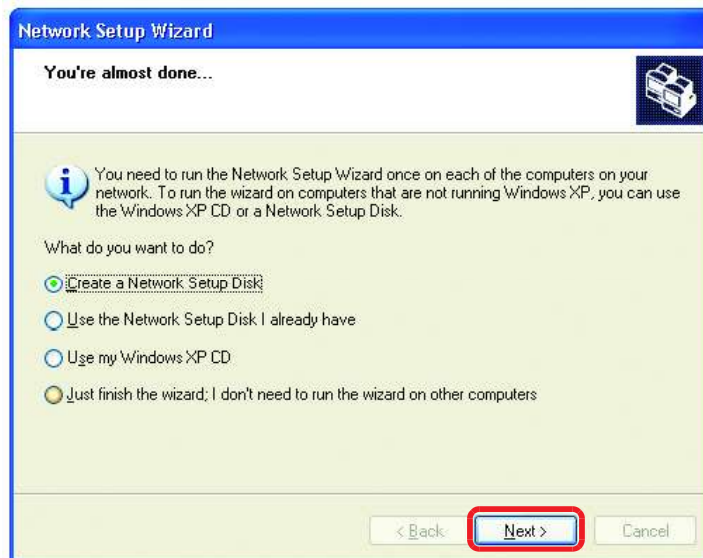

Insert a disk into the Floppy Disk Drive, in this case drive **A**.




Click **Next**.



## Networking Basics




Please read the information under **Here's how** in the screen below. After you complete the **Network Setup Wizard** you will use the **Network Setup Disk** to run the **Network Setup Wizard** once on each of the computers on your network. To continue click **Next**.

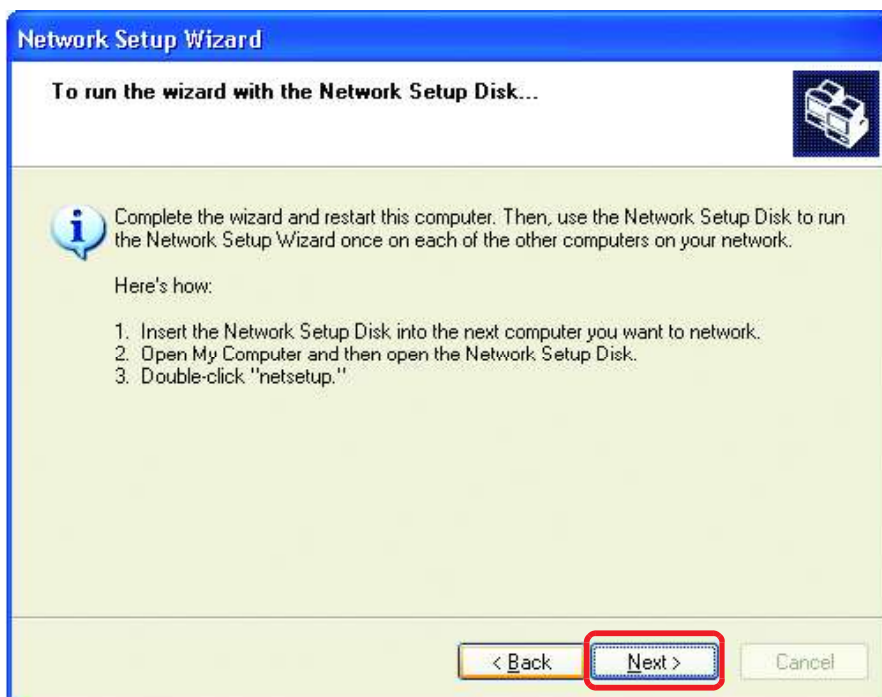

## Networking Basics

Please read the information on this screen, then click **Finish** to complete the **Network Setup Wizard**.

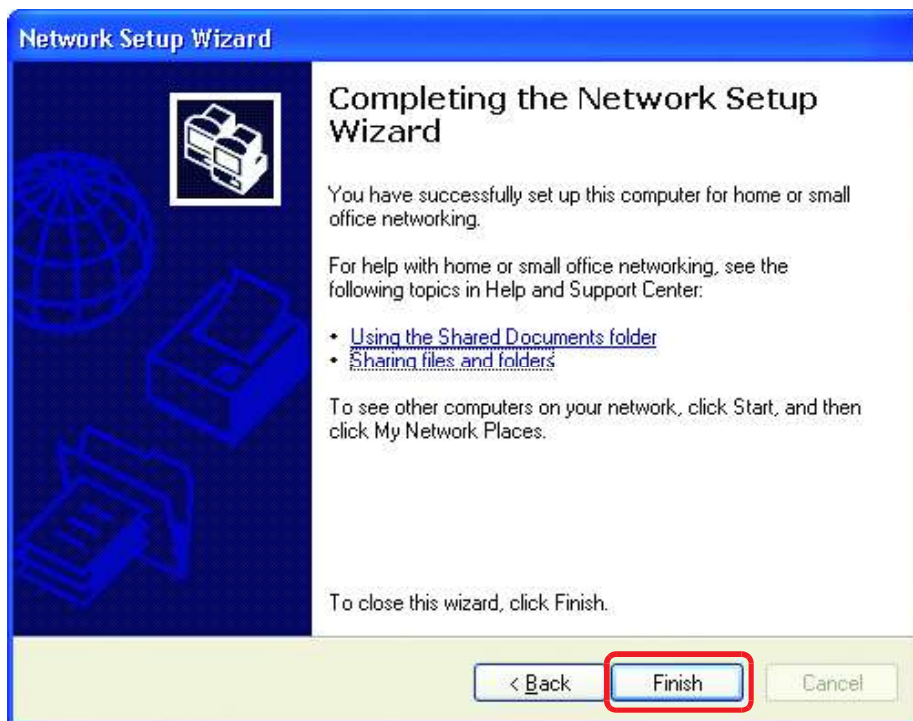

The new settings will take effect when you restart the computer. Click **Yes** to restart the computer.



You have completed configuring this computer. Next, you will need to run the **Network Setup Disk** on all the other computers on your network. After running the **Network Setup Disk** on all your computers, your new wireless network will be ready to use.

## Networking Basics

### Naming your Computer

To name your computer, please follow these directions: In **Windows XP**:


- Click **Start** (in the lower left corner of the screen)
- **Right-click** on **My Computer**
- Select **Properties** and click



- Select the **Computer Name Tab** in the **System Properties** window.

- You may enter a **Computer Description** if you wish; this field is optional.


- To rename the computer and join a domain, Click **Change**.

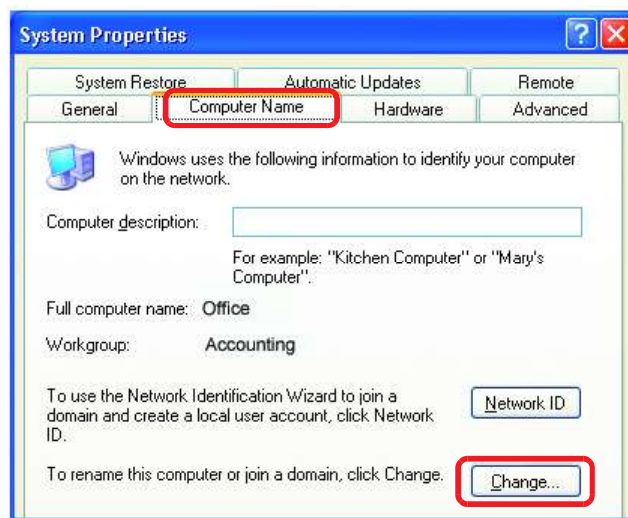

## Networking Basics

### Naming your Computer

- In this window, enter the **Computer name**.
- Select **Workgroup** and enter the name of the **Workgroup**.
- All computers on your network must have the same **Workgroup** name.
- Click **OK**.

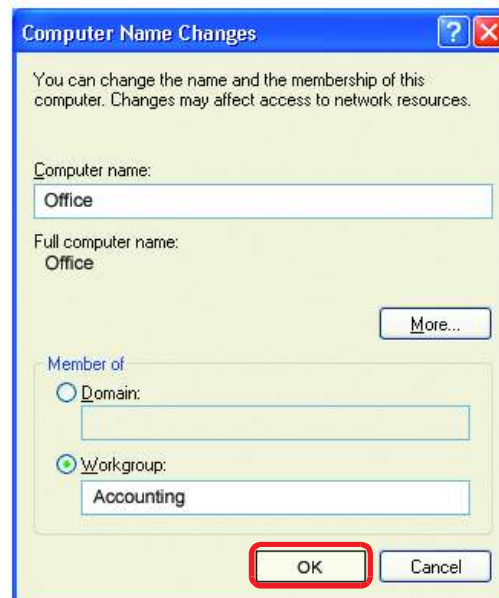

### Checking the IP Address in Windows XP

The wireless adapter-equipped computers in your network must be in the same IP Address range (see Getting Started in this manual for a definition of IP Address Range.) To check on the IP Address of the adapter, please do the following:

- Right-click on the **Local Area Connection icon** in the task bar.
- Click on **Status**.




## Networking Basics

### Checking the IP Address in Windows XP

This window will appear.

- Click the **Support** tab

- Click **Close**

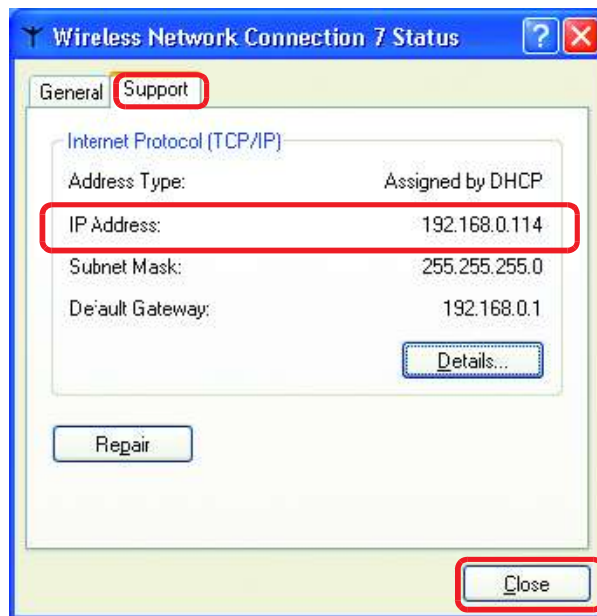

### Assigning a Static IP Address in Windows XP/2000

*Note: Residential Gateways/Broadband Routers will automatically assign IP Addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable Gateway/Router you will not need to assign Static IP Addresses.*

If you are not using a DHCP capable Gateway/Router, or you need to assign a Static IP Address, please follow these instructions:


- Go to **Start**
- Double-click on **Control Panel**



## Networking Basics

### Assigning a Static IP Address in Windows XP/2000

- Double-click on **Network Connections**

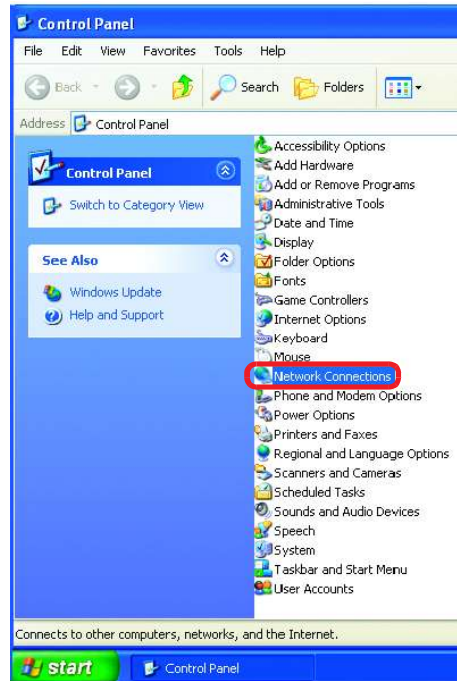

- Right-click on **Local Area Connections**

- Double-click on **Properties**

