USER MANUAL

Model Name: DM302

1

Content

Functions summarize	
Notice	3-4
Understand the model	5
Key definetion·····	5
Main interface ·····	6
Music mode	
Video mode	9
Picture mode·····	
E-book	
Programme ·····	14-15
Record	16
FM radio	17
Explorer	
settings	10
USB disc	
Troubleshooting ·····	
Declare ·····	22

In order to tell you play the player freely as soon as spossible, please read the user

manual carefully. In which including the way to operate, the products specifications $% \left(1\right) =\left(1\right) \left(1\right) \left($ etc.

Functions summarize

- High clear TFT, support 400×240
- Support MP3、WMA、WAV、FLAC and so on Support MPEG-4(AVI)、RMVB、RM directly
- Support JPEG, BMP, GIF picture browse
- Voice record, A-B repeat function
- Power save setting: brightness adjust, user-defined power off time $% \left(1\right) =\left(1\right) \left(1\right)$
- Support auto power off setting, power on setting.
- Support 3D steoro tone effect, Micro soft playFX, user-defined EQ $\,$
- Milti playing mode: once, repeat, all, all repeat, audition, order play
- Support multi-languages
- ${\it Capacitance touch screen}$
- Support FM transmitter
- Position of the menu change by finger moving
- USB2.0 high speed
- Support E-book, bookmark
- $Support\ calculator, calendar,\ watch\ function$
- U-disk, firmware upgrade
- ${\tt Compatible\ systems:\ Windows98/SE/ME/2K/XP}$
- Operate temperature: -5 to 40 centigrade

Notice

This user manual including important safety precautions and the right way to operate. In order to avoid the accident, please read it carefully.


- ullet Do not put the player under high temperature, wet or dusty.
- Avoid it be fallen down or collide fierce, do not let the TFT display be knocked
- Please choose the suitable volume, do not choose too big volume so as not to damage your ears, if you feel un comfortable, please adjust the volume smaller or power off the player
- Charge the player under below conditions:
 - A, battery volume shows empty
 - B_{\star} power off automaticly, power off again quickly after power on
 - C. touch screen no response
- This player is built in rechargeable Li-battery, please charge it for 8 hours for more than three times after you bought it, and charge it after the player run out of battery, so the battery life can be longer
- Battery life is affected by the different volume, difference types of files etc
 - 1. when charge it by USB cable, when the battery volume shows full, the charging has been finished
 - if you use the charger, first use the charger connect to the power, then connect the USB cable to the charger and the player. when the battery volume shows full, the charging has been finished
 - $3.\,$ during the charging, the charger and the player maybe a little high temperature, it is normal phenomenon

注: do not use other charge if it is not the same as the original one. If you want to, please

comfirm it with the whole seller or service team.

- Do not disconnect the player from the computer when it is being formatted or down loading/up loading files, otherwise the programme maybe appears problems.
- Do not disassemble the player yourself, or use the alcohol, thinner or benzene to scrub away the face of the player
- ullet Do not use the play when forbidden, such as on the plane
- Do not use it when you are walking on the street or driving, otherwise maybe cause accident
- \bullet $\,$ Software will cost some capacity. So the capacity available will be less $\,$ than the rated capacity
- Some video maybe not support beyond the chip, please try to change it by the movie converter
- This product is not dampproof or waterproof
- Please do not change the battery if you are not a professional man to fix it, so as
 to avoid the blast

Understand the model

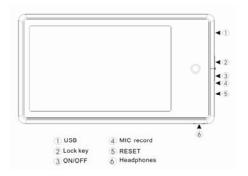

- Key definitions
 (1): USB slot (2): lock button (3): power on/off button (4): MIC slot (5): reset button (6): earphone slot

Main interface:



This interface shows all the functions which the model has. If you want to enter the submenu, you can touch the icon which you need. The position of the icon can be changed by finger.

- 1. power on/off
- Power on: push the power on/off button for 3 seconds
 Power off: puch the power on/off button for 3 seconds again. (the player will be shut down when low battery)
 Puch the lock button, the player will be locked
- 3. connect to the computer and file transfer Connect the USB cable to the computer, then the player can be charged or transfer the files, this player can be used as a U-disk, you can copy the files to the player easily.

System menu

Music playing

After power on the player, you can enter the submenu by touch the music, video, photo, e-book, recorder, explorer, settings, programme, radio

**note: after you copy or delete some music files, please update media library, then enter to the music list, short press the come back to the main interface, then touch the music icon again to play the music

operation

Under play/pause mode, connect the earphone to the player, choose the music from the list, short press the start playing, short press the music pause. You can click the to open the sbmenu, then find the settings you need, the picture is as below:



1. lyric display when the lyric file is available of the song, the lyric will be show automaticly on the screen.

9

2. music play submenu.

Under music playing mode, short press to open the submenu, then you can find some different settings, you can shoose them by touch, the press the icon to

Repeat settings: once, repeat, all, all repeat, intro. Play mode: In order, Shuffle

PlayFX: 3D, Bass, LEQ

EQ Set: normal, MSEQ, Rock, Pop, classic, Bass, Jazz, user EQ, User EQ Setup: you can edit the EQ which you are favorite by the user EQ settings. Volume shades:closed, 1 sec, 2sec, 3sec, 4sec, 5sec

- volume adjust:adjust the volume by touch the crossband under music playing mode.
- 4. pre/next: touch and to change the music.
- $5. \quad \text{Shake to change the music: under music playing mode, you can change the music by shaking} \\$ the player

Video

operation:

enter to the main interface after power on, touch the video icon to get the video list, touch the name of the video then it will start playing. You can touch or to change the video touch this to adjust the volume, touch the to come back to the ${\tt main\ interface}.$

- $1\mbox{,}$ touch the video icon to get the video list, touch the name of the video it will start playing.
- 2. under video playing mode, long press $~\blacktriangleleft~$ or $~\blacktriangleright~$ to speed up or quick move back.
- 3. volume adjust:under video playing mode, touch the to adjust the volume.

 4. When playing the video, touch the top left corner, it will spring out function menu.

- 6. Pre/next change; short press ★and ▶to change the pre/next movie ∘
- 7. Video circumrotate function: under video playing mode, if the model with G-sensor, the video playing will be circumrotate by different motion
- FM Transmitter operation: Select music menu and enter, select music and start play, stay on playing return to main menu

Select setting menu and find the FM transmit submenu, enter the FM transmitter submenu, select the status to be "ON", return back to FM transmitter submenu. Select FM transmit frequency menu and enter, select the audio transmit frequency, press OK

Picture browsing

1. In the main interface, short press the picture icon enter to the picture list, then touch the name of the picture you can browse the pictures, touch the crossband, the pictures will zoom in/zoom out. If the player with G-sensor, the pictures can be circumrotated by different motion. If you want to change the picture, $\,\mathrm{just}\,$ shake the player is ok.

2. Enter to the picture browse setting, there are some options: set desk, set music, set e-book, set recorder, set task, set radio and so on.

Note: This model not support the pictures high than 10 million pixels, if the pixels is high than 10 million pixels, please change the resolution on the computer and browse on the player. If the G-sensor is opening, the pictures will rotate around.

E-book

1. Down load the TEXT files: Connect the player to the computer, then copy the Text files to the player

2. Read E-book:

Touch the E-book icon in the main interface, enter to the E-book list, then touch the name of the file you will start reading. There are two ways to change the page: one is use the finger touch up and down, the other is choose the auto mode in the e-book settings submenu.



Relevant settings menu:


- 3. Page jump: choose the page jump in the submenu which spring out after you touch the settings, enter the number of he page, press the button it will reach the page you need.
- 4. Save bookmark: choose the save bookmark in the submenu, touch the ebook settings icon back to the E-book browsing.
- 5. Load bookmark: choose the pick-up bookmark setting in the submenu, touch the ebook settings too back to the E-book Browsing.
- 6. Del bookmark: choose the delete bookmark in the submenu, touch the back to the E-book Browsing.

- Set font: there are five options in the submenu: Font small, Font mid, soft font, thick font, font big.
- Set color: choose the font color in the submenu then spring out the below submenu: then change the color by the crossband.



9 set backgroud color: Choose the backgroud color in the submenu, then you will see the picture below: then change the color by the crossband 10. Operating mode: flip mode and drag mode

- browsing mode: auto and menu.
- 12. Flip time: five options (10sec, 15sec, 20sec, 25sec, 30sec).

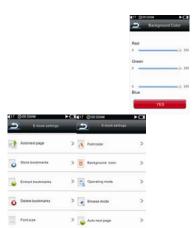

Note: this player support E-book in TXT file, do not support other formats.

Programme: Pictures as below:



- -. Calendar:

 1. Time settings: choose the time settings: then spring out a submenu again, adjust the numbers can change the time you need

 2. Time format: AM/PM 24H
- 2. Imme tormat: AW/FM 24H
 3. Date settings: choose the date settings spring out a submenu, touch the buttons to change the date you need
 4. Date format: year/month/date month/date/year date/month/year

 —. Calculator: choose the calculator then spring out a picture:



Touch the number and the symbol it can calculate.

Games (option)
Choose the slide, spring out the picture below: touch the buttons it can play the game



Record

1. Record

Touch the record icon enter to the record, touch licon to start record, short press to esc and save.



Record settings

Under record mode, touch record Settings
Quality: low rate; high rate
Volume: 1, 2, 3, 4, 5 five options. The higher level, the bigger the volume, we suggest



Note: The recorder files can be played from the music sub menu. If the display shows disc full, it means there is no room to save new record files, please delete some files to release some room.

FM radio:



Enter to the main interface, touch the radio icon, then touch ★or ★ icon to adjust the frequency. (when you use FM radio, please insert the earphone, it as a antenna to get the signal). When you lestening to the FM radio, you can touch the radio settings then you will see a submenu as below:

search by hand, auto search, preset mode, save mode, save channel, delete channel, stereo switch, receive area, Radio_sensitive, FM record



Explorer

- 1. Explorer as a sales point of this model, can help you find the files easily. And help you manage the files.
- Delete files
 Under explorer mode, you can choose your favorite music and movie easily, if you do not like the file, you can touch the top right corner" delete", then it will spring out

Settings:

Enter to the main interface, then touch the settings, you will enter to the below pictures:



Display Settings Light time: 5sec, 10sec, 15sec, 20sec, 30sec, and always on

Brightness:1, 2, 3, 4, 5 five options
Light mode:All Dark, Penumbra.

Desktop: there are three desks available for you to choose

Interface settings:Desk font, Desk font color, title font, title font color, window font, window background color, window font color.

- FM transmitter: Audio transmit frequency (can choose87.50-108.00), audio transmit switch on/off
- Tvout Mode set: PAL50, PAL60, NTSCM
- Key lock time: 10sec.30sec, 5min, 10min, No keylock.
- Autoshut time: 3 min, 5min, 10min, 15min, 20min, no automatic shutdown, total 6 options.
- Timing shutdown: 15min, 30min, 45min, 60min, not shut down, total 5 options.
- Time power on settings: auto power on time, time power on run, power on run mode, total three options
- System settings:

Firmware upgrade: spring out a submenu, remind you whether have new firmware or not, if no new firmware will ${\tt esc}_{\circ}$

System restorable: spring out a window, remind you whether restorable or not System information: spring out a submenu about software version, disk capacity, release date .

lanaguage: Chinese, English, and so on,multi languages。

USB disk

1. USB display mode

This model with USB2.0 slot, high speed up to 3M/S, it is standard U-disk function, compatible with windows 2000 or above system no need drive, after connect to the computer several seconds, the player will show USB connect mode.

2. Charge display mode

If the player low battery. The display shows low battery shut down, then the player power off automaticly. Then it need be charged, if by charger it about 4 hours. After full charge, the battery will shows full on the display.

 $\ensuremath{\mathsf{Trouble}}$ shootings If the play is not working normal, please check the following reasons:

	<u> </u>	
problem	Possible reasons	
Can not power on	Please check whether there is any batteryy? After connect it	
	the computer, whether it will be working or not. If still not	
	owrking, please try it after you reset it. After reset it still	
	not work, please contact the wholeseller.	
freezing	Press the reset button.	
Can not player	Please check whether there is any battery?	
anything	Check whether the volume is in "0", check the earphone connect	
	to the player, check the eaphone slot is clear or not.	
	Check whether the file is damaged. Delete the file and copy it	
	again.	
	Please format the disk on the computer	
Can not down	Make sure the whether the player is connect well to the	
loadthe files	computer.check whether the disk is full.	
	Check whether the USB cable is damaged	

Can not record	Check the disk space and whether it is any battery.
The word is	Choose whether you have chose the right language. Power off it and
confusion	turn it on again
Can not use after	Please upgrade it again on Windows2000 or below below system.
upgrade	

Enterprise standard: SA-QB-2007001 Product standard: GB8898-2001, GB13837-2003, GB17625.1-2003

Notice

The user should make a copy of the files which is on the player. Company will not responsible for the file lose by the wrong operation such as change the hardware, upgrade firmware, repair, change the battery and so on.

NOTE:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.