

Digitrak® F2®

Directional Drilling Locating System

Operator's Manual



DCI Headquarters
19625 62nd Ave. S., Suite B-103
Kent, Washington 98032 USA
Tel 425 251 0559 / 800 288 3610 *Fax* 253 395 2800
E-mail DCI@digital-control.com www.digitrak.com

DCI Europe
Kurmainzer Strasse 56
D-97836 Bischbrunn
Germany
Tel +49(0) 9394 990 990
Fax +49(0) 9394 990 999
DCI.Europe@digital-control.com

DCI India
DTJ 1023, DLF Tower A
Jasola District Center
New Delhi 110 044, India
Tel +91(0) 11 4507 0444
Fax +91(0) 11 4507 0440
DCI.India@digital-control.com

DCI China
No. 41, Lane 500, Xingle Road
Huacao Town, Minhang District
Shanghai P.R.C. 201107
Tel +86(0) 21 6432 5186
Fax +86(0) 21 6432 5187
DCI.China@digital-control.com

DCI Australia
2/9 Frinton Street
Southport, Queensland 4215
Australia
Tel +61(0) 7 5531 4283
Fax +61(0) 7 5531 2617
DCI.Australia@digital-control.com

DCI Russia
420059 Pavlyukhina Street
104, Kazan
Russia
Tel +7 843 277 52 22
Fax +7 843 277 52 07
DCI.Russia@digital-control.com

3-2200-00-D

© 2009-2010 by Digital Control Incorporated. All rights reserved. April 2010.

Trademarks

The DCI logo, CableLink[®], DataLog[®], DigiTrak[®], Eclipse[®], F2[®], MFD[®], SST[®], *target-in-the-box*[®], *Target Steering*[®], and TensiTrak[®] are U.S. registered trademarks and DucTrak[™], F Series[™], FSD[™], FasTrak[™], LT[™], LT2[™], SE[™], SED[™], SuperCell[™], and TeleLock[™] are trademarks of Digital Control Incorporated.

Patents

The DigiTrak[®] F2[®] Locating System is covered by one or more of the following U.S. Patents: 5,337,002; 5,633,589; 5,990,682; 5,990,683; 6,002,258; 6,005,532; 6,008,651; 6,014,026; 6,035,951; 6,047,783; 6,057,687; 6,095,260; 6,160,401; 6,232,780; 6,250,402; 6,396,275; 6,496,008; 6,525,538; 6,593,745; 6,653,837; 6,693,429; 6,756,784; 6,768,307; 6,838,882; 6,924,645; 7,061,244; 7,080,698; 7,154,273; 7,159,672; 7,167,005; 7,176,690; 7,304,479; 7,309,990; 7,345,486. Sale of a DigiTrak[®] F2[®] receiver does not convey a license under any patents covering the DigiTrak[®] transmitter or underground drill housing. Other patents pending.

Limited Warranty

All products manufactured and sold by Digital Control Incorporated (DCI) are subject to the terms of a Limited Warranty. A copy of the Limited Warranty is included at the end of this manual; it can also be obtained by contacting DCI Customer Service, 425-251-0559 or 800-288-3610, or by connecting to DCI's website, www.digitrak.com.

Important Notice

All statements, technical information, and recommendations related to the products of DCI are based on information believed to be reliable, but the accuracy or completeness thereof is not warranted. Before utilizing any DCI product, the user should determine the suitability of the product for its intended use. All statements herein refer to DCI products as delivered by DCI and do not apply to any user customizations not authorized by DCI nor to any third-party products. Nothing herein shall constitute any warranty by DCI nor will anything herein be deemed to modify the terms of DCI's existing Limited Warranty applicable to all DCI products.

FCC Compliance Statement

This device complies with Part 15 of the Rules of the FCC. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. DCI is responsible for FCC compliance in the United States: Digital Control Incorporated, 19625 62nd Ave. S., Suite B-103, Kent, WA 98032; phone 425-251-0559 or 800-288-3610.

Changes or modifications to the DCI equipment not expressly approved and carried out by DCI will void the user's Limited Warranty and the FCC's authorization to operate the equipment.

The user is cautioned to maintain a 20 cm (8 inches) spacing from the product to ensure compliance with FCC requirements.

Table of Contents

SAFETY PRECAUTIONS AND WARNINGS.....	6
DEAR CUSTOMER:.....	8
INTRODUCTION.....	9
RECEIVER.....	11
General Description.....	11
Power On/Off.....	12
Installing and Removing the Battery Pack.....	13
Turning On the Receiver.....	13
Turning Off the Receiver.....	16
Automatic Shutdown.....	16
Trigger Switch.....	16
Audible Tones.....	16
Adjusting Screen Contrast.....	17
Main Menu.....	17
Height-Above-Ground (HAG) Menu.....	18
Turn On HAG.....	19
Turn Off HAG.....	19
Set HAG.....	20
Telemetry Channel Menu.....	21
Calibration Menu.....	22
1-Point Calibration (Above Ground).....	23
2 Point Calibration (In Ground).....	25
Settings Menu.....	27
Depth Units Menu.....	27
Pitch Units Menu.....	28
Roll Offset Menu.....	28
Transmitter Options Menu.....	30
Target Steering Menu.....	30
Turn On Target Steering.....	31
Turn Off Target Steering.....	31
Set Target Depth.....	32
Display Screens.....	33
Locate Mode Screen.....	33
Depth Mode Screen.....	35
Predicted Depth Display Screen.....	35
Standard Receiver Display Screen Symbols.....	Error! Bookmark not defined.
TRANSMITTER.....	37
Types of F2 Transmitters.....	37
Batteries and Power On/Off.....	38
Installing Batteries / Power On.....	38
Transmitter Battery Status.....	39
Sleep Mode (Automatic Shutdown) / Power Off.....	39
Transmitter Housing Requirements.....	39
Temperature Updates and Overheat Indicator.....	41
Transmitter Temperature Warning Tones.....	41
Transmitter Overheat Indicator (Temp Dot).....	42

Table of Contents (Continued)

REMOTE DISPLAY.....	43
General Description.....	43
Power Options.....	44
Connecting the DC Power Cable.....	44
Installing and Removing the Battery Pack or Brace Insert.....	44
Power On/Off.....	45
Keypad.....	45
Audible Tones.....	45
Adjusting Screen Contrast.....	45
Adjusting the Viewing Angle.....	46
Attaching and Removing Visor.....	46
Main Menu.....	47
Contrast Adjustment.....	48
Settings Menu.....	49
Display Screens.....	50
Main Display Screen.....	50
Depth Display Screen.....	50
Predicted Depth Display Screen.....	51
BATTERY CHARGER.....	53
General Description.....	53
AC/DC Power Setup.....	54
Charging a Battery Pack.....	54
Battery Charger LED Indicators.....	54
Warnings and Precautions.....	55
Battery Pack Storage.....	56
LOCATING.....	57
Introduction.....	57
Locate Points (FLP & RLP) and Locate Line (LL).....	58
Effects of Depth, Pitch, and Topography on Distance Between FLP and RLP.....	59
Marking Locate Points.....	60
Display Screens.....	61
Interference: What It Is and How to Check for It.....	63
Conducting a Background Noise Check.....	63
Suggestions for Dealing with Interference.....	64
Standard Method for Locating the Transmitter.....	65
Finding the Front Locate Point (FLP).....	65
Finding the Locate Line (LL).....	67
Finding the RLP to Confirm Transmitter Heading and Position.....	69
Tracking “On-the-Fly”.....	71
Off-Track Locating.....	72
THE TARGET STEERING FUNCTION.....	75
Feasible Target Depth and Positioning the Receiver as a Target.....	75
Programming the Receiver for <i>Target Steering</i>	76
Steering to the Target.....	76
<i>Target Steering</i> in Interference Areas.....	78

Table of Contents (Continued)

APPENDIX A: SYSTEM SPECIFICATIONS AND MAINTENANCE REQUIREMENTS	79
Power Requirements	79
Environmental Requirements	79
General Transmitter Care Instructions	80
APPENDIX B: PROJECTED DEPTH VERSUS ACTUAL DEPTH AND THE FORE/AFT OFFSET	81
APPENDIX C: CALCULATING DEPTH BASED ON DISTANCE BETWEEN FLP AND RLP	87
APPENDIX D: REFERENCE TABLES	89
Depth Increase in Inches (Centimeters) per 10-foot (3-meter) Rod.....	90
Depth Increase in Inches (Centimeters) per 15-foot (4.6-meter) Rod.....	91
APPENDIX E: EU REQUIRED DOCUMENTATION	93
LIMITED WARRANTY	

Safety Precautions and Warnings

Important Note: All operators must read and understand the following Safety Precautions and Warnings and must review this operator's manual before using the DigiTrak[®] F2[®] Locating System.

⚠ Serious injury and death can result if underground drilling equipment makes contact with an underground utility such as a high-voltage electrical cable or a natural gas line.

▽ Substantial property damage and liability can result if underground drilling equipment makes contact with an underground utility such as a telephone, cable TV, fiber-optic, water, or sewer line.

🕒 Work slowdowns and cost overruns can occur if drilling operators do not use the drilling or locating equipment correctly to obtain proper performance.

- Directional drilling operators MUST at all times:
 - Understand the safe and proper operation of drilling and locating equipment, including the use of ground mats and proper grounding procedures.
 - Ensure that all underground utilities have been located, exposed, and marked accurately prior to drilling.
 - Wear protective safety clothing such as dielectric boots, gloves, hard-hats, high-visibility vests, and safety glasses.
 - Locate and track the transmitter in the drill head accurately and correctly during drilling.
 - Comply with state and local governmental regulations (e.g., OSHA).
 - Follow all other safety procedures.
- The DigiTrak F2 system cannot be used to locate utilities.
- Continued exposure of the transmitter to heat, due to frictional heating of the drill head, can cause inaccurate information to be displayed and may permanently damage the transmitter. For more information see the *Transmitter* section of this manual.

⚠ DCI equipment is not explosion-proof and should never be used near flammable or explosive substances.

- The battery charger provided with the DigiTrak F2 system is designed with adequate safeguards to protect you from shock and other hazards when used as specified within this document. If you use the battery charger in a manner not specified by this document, the protection provided may be impaired. Do not attempt to disassemble the battery charger. It contains no user-serviceable parts. The battery charger is not to be installed into caravans, recreational vehicles, or similar vehicles
- Remove the batteries from all system components during shipping and prolonged storage; damage caused by leakage may occur.

Safety Precautions and Warnings (Continued)



BATTERY DISPOSAL: This symbol on equipment indicates that the equipment must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of such equipment by handing it over to a designated collection point for the recycling of batteries or electrical and electronic equipment. If the equipment contains a banned substance, the label will show the pollutant (Cd = Cadmium; Hg = Mercury; Pb = Lead) near this symbol. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service, or the shop where you purchased the equipment.

- Before each drilling run, test the DigiTrak F2 system with the transmitter inside the drill head to confirm that it is operating properly and is providing accurate drill head location and heading information (see the *Receiver* and *Locating* sections) and accurate transmitter depth, pitch, and roll information.
- During drilling, the depth will not be accurate unless:
 - The receiver has been properly calibrated and the calibration has been checked for accuracy so that the receiver shows the correct depth.
 - The transmitter has been located correctly and accurately and the receiver is directly above the transmitter in the drill head underground or at the front locate point.
 - The receiver is kept level and the height-above-ground has been set correctly.
- Always test calibration after you have stopped drilling for any length of time.
- Interference can cause inaccuracies in the measurement of depth and loss of the transmitter's pitch, roll, or heading. You should always perform an electrical interference check prior to drilling.
 - Sources of interference include but are not limited to traffic signal loops, invisible dog fences, cable TV, power lines, fiber-trace lines, metal structures, cathodic protection, telephone lines, cell phones, transmission towers, conductive earth, salt water, rebar, radio frequencies, and other unknown sources of interference.
 - Interference with the operation of the remote display may also occur from other sources operating nearby on the same frequency, such as car rental agencies using their remote check-in modules, other directional drilling locating equipment, etc.
 - Background noise must be minimal and signal strength must be at least 150 points above the background noise during all locating operations.
- Carefully review this manual and be sure you always operate the DigiTrak F2 system properly to obtain accurate depth, pitch, roll, and locate points. If you have any questions about the operation of the system, please call DCI's Customer Service Department at any of the phone numbers provided on the cover, and we will do our best to assist you.

Dear Customer:

Thank you for choosing the DigiTrak[®] F2[®] Locating System. We are proud of the equipment that we have been designing and building in Washington State since 1990. We believe in providing a unique, high-quality product *and* standing behind it with superior customer service and training.

Please take the time to read this entire manual—especially the section on safety. Also, please fill in the product registration card provided with this equipment, and mail it to DCI headquarters or fax it to us at 253-395-2800; you can also complete and submit the form online at our website. We will put you on the Digital Control mailing list and send you product upgrade information and our *FasTrak*[™] newsletter.

Feel free to contact us at any of our global offices listed on the front cover if you have any problems or questions. Our Customer Service Department is available 24 hours a day, 7 days a week to provide assistance.

As the horizontal directional drilling industry grows, we're keeping our eye on the future to develop equipment that will make your job faster and easier. Stay current by visiting our web site on the internet at www.digitrak.com or by giving us a call.

We welcome questions, comments, and ideas.

Digital Control Incorporated
Kent, Washington
2010

Introduction



DigiTrak F2 Locating System

The DigiTrak F2 Locating System is used during horizontal directional drilling operations to locate and track a transmitter installed in the drill head. The system consists of a handheld receiver, a transmitter, a remote display with battery and cable power options, a battery charger system, and three rechargeable F Series battery packs for powering the receiver and remote.

There are six transmitter options for use with the F2 system, including 12-kHz and 19-kHz frequency options and a cable transmitter option. See the *Transmitter* section for more information.


In addition to the basic locating capabilities of directional tracking and depth, the F2 system includes the advanced features of predicted depth, off-track locating, and *Target Steering* to navigate the drill head easily and accurately even when obstacles prevent walkover tracking.

This manual provides information on each F2 system component—the receiver, transmitter, remote display, and battery charger—in separate sections following this *Introduction*. These sections are followed by the *Locating* section, which explains important locating terms and gives step-by-step locating instructions.

The F2 system is programmed to comply with varying global operating requirements. The receiver's regional designation number must match that of the transmitter for proper communication (see *Receiver* and *Transmitter* sections). Also, the receiver's telemetry frequency designation must match that of the remote display (see *Receiver* and *Remote Display* sections).

Appendix A presents the F2 system's power, environmental, and maintenance requirements. *Appendix B* explains how to calculate depth when the transmitter is deep (greater than 15 ft or 4.6 m) and/or at a steep pitch (greater than $\pm 30\%$ or $\pm 17^\circ$). *Appendix C* explains how to calculate the transmitter depth based on the distance between the front and rear locate points and the pitch of the transmitter. *Appendix D* provides calculated depth increases for 10-ft (3-m) and 15-ft (4.6-m) rods depending on pitch. Finally, *Appendix E* contains a list of the radio frequency restrictions for each country in the EU and the required declaration of conformity documents.

Receiver

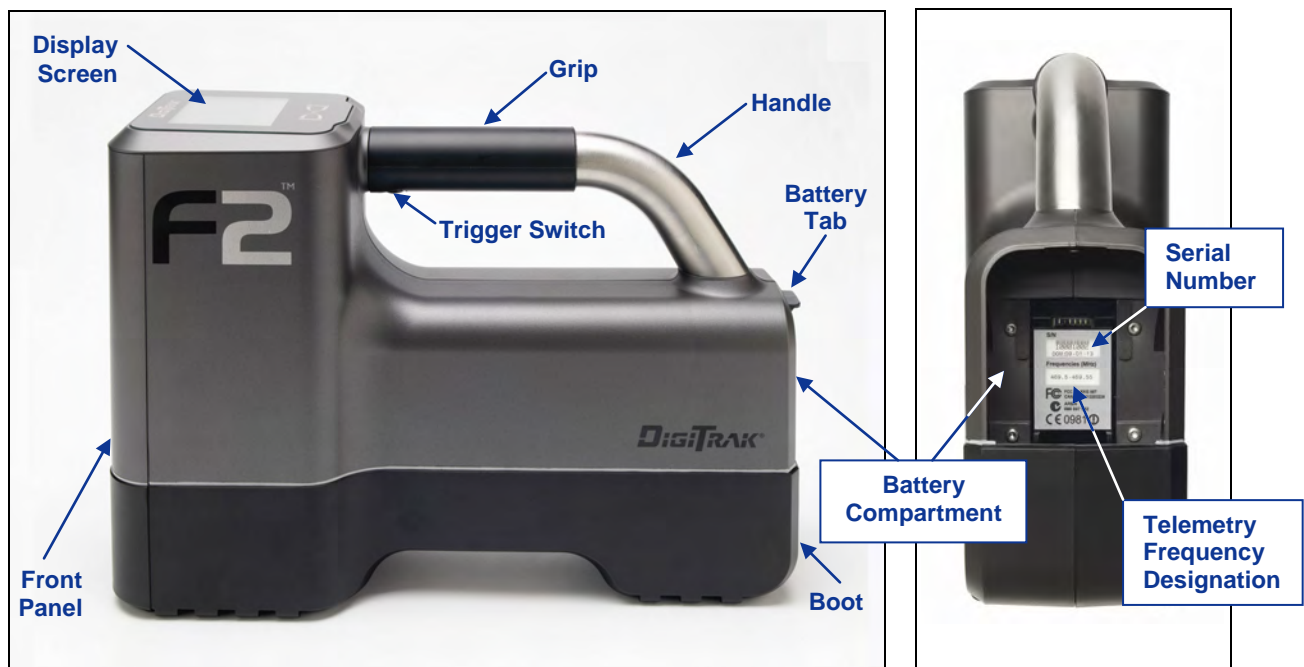

F2 Receiver – Side and Back Views

















General Description

The F2 receiver is a handheld unit used for locating and tracking an F2 transmitter. The receiver converts signals from the transmitter and displays the following information: depth, pitch, roll, temperature, and battery level. The F2 receiver can send this same information to the remote display at the drill rig.

To meet regional requirements and for proper communication, the telemetry frequency designation for the receiver must match that for the remote display. The telemetry frequency designation is identified on the receiver's serial number label, which is located inside the battery compartment (see photo). It must match one of those listed on the remote display's serial number label located on the back of the unit (see *Remote Display* section).

The receiver and transmitter must also meet specific operational requirements for different global regions. A regional designation number is provided in the receiver's software (see figure titled "Receiver Startup Screen" later in this section). This number must match that stamped on the transmitter for proper communication (see *Transmitter* section). In addition, the receiver must be set to the same frequency as the transmitter (see "Settings Menu" later in this section) and be calibrated for use with the selected transmitter (see "Calibration Menu" later in this section).

Standard Receiver Display Screen Symbols

	Transmitter Roll – The transmitter's 12 roll clock positions are represented by the lines at the edge of the circle. The dot aligns with the clock position, and the clock setting appears in the center to indicate the roll of the transmitter. When roll offset is used, the roll position is denoted by a hollow dot in place of the solid dot on the clock face and the letters RO at the bottom right.
	Roll/Pitch Update Meter – The update meter shows the quality of data reception from the transmitter (specifically, data rate). This feature lets you know if you are in an area of interference or are reaching the range limit of the transmitter. On the remote display, the same symbol is used for the telemetry update meter.
	Transmitter Pitch Angle – The number next to this icon on the locating screen indicates the transmitter pitch. It is also the menu selection icon for changing the pitch angle units between percent and degrees.
	Transmitter Signal Strength – The number next to this icon on the locate mode screen indicates the transmitter signal strength. During a calibration failure, an up or down arrow with this icon indicates signal strength is too high or too low, respectively.
	Transmitter Temperature – The number next to this icon shows the temperature of the transmitter (Fahrenheit when depth units are in feet or inches, Celsius when depth units are in meters). An up or down arrow and a change in the thermometer level will accompany a change in temperature. The icon will display steam and flash when the transmitter becomes dangerously hot and must be cooled immediately or it will be damaged.
	Receiver Icon – Indicates the position of the receiver relative to the ground for the HAG function, depth readings, the two-point calibration procedure, and the <i>Target Steering</i> function.
	Ground Level – Represents the ground for the HAG function, depth readings, and the two-point calibration procedure.
	Locating Icon – Represents a bird's-eye view of the receiver. The square at the top of this icon is referred to as the "box" in the terms <i>target-in-the-box</i> and <i>line-in-the-box</i> locating.
	Locate Target – Represents the front and rear locate points (FLP and RLP). When the locate line appears, the locate target will become a solid circle (ball) representing the approximate locate point. See the <i>Locating</i> section for more information.
	Locate Line – Represents the locate line (LL). The LL is found at some location between the front and rear locate points only after a reference point has been obtained. See the <i>Locating</i> section for more information about the locate line.
	Reference Lock – Indicates that a reference signal has been obtained for locating the transmitter. See the <i>Locating</i> section for more information.
	Transmitter Battery/Drill Head – Depicts the remaining battery life of the transmitter when alkaline batteries are used (shown fully charged here). Also used to represent the position of the drill head relative to the receiver in the depth screen.
	Receiver Battery – Depicts the remaining battery life of the receiver (shown 80% full here). Displayed on the main menu screen. When empty, the icon will appear in the locate mode screen and will flash signifying that it is critical to change the battery immediately.
	Target Steering – Allows the <i>Target Steering</i> option to be turned on, off, or programmed to a new target depth.
	Globe Icon – Identifies the regional designation number that appears on the receiver startup screen; must match that on the transmitter battery compartment.
	Trigger Click Prompt – Appears on the calibration screens to indicate that a trigger click is required.

Power On/Off

Installing and Removing the Battery Pack

Insert a fully charged DigiTrak F Series battery pack so that it is flush with the back of the receiver and the tab is securely latched, as shown below. If necessary, push on the battery pack to latch the tab in place.




Inserting Battery Pack

Battery Pack Fully Inserted


Removing Battery Pack

To remove the battery pack, push down on the battery tab and pull it away from the unit until the tab is released.

Check the charge on the battery pack by pushing the battery status button  on the battery pack; the LEDs will illuminate to indicate the amount of charge on the battery. See the *Battery Charger* section for more information on checking, removing, and recharging a battery.


Turning On the Receiver

To turn on the F2 receiver once the battery is properly installed, hold in the trigger for 1 second, and then release it. You will hear a short beep followed by a long beep. The first screen you will see is the warning screen, which will appear every time you turn on the unit.

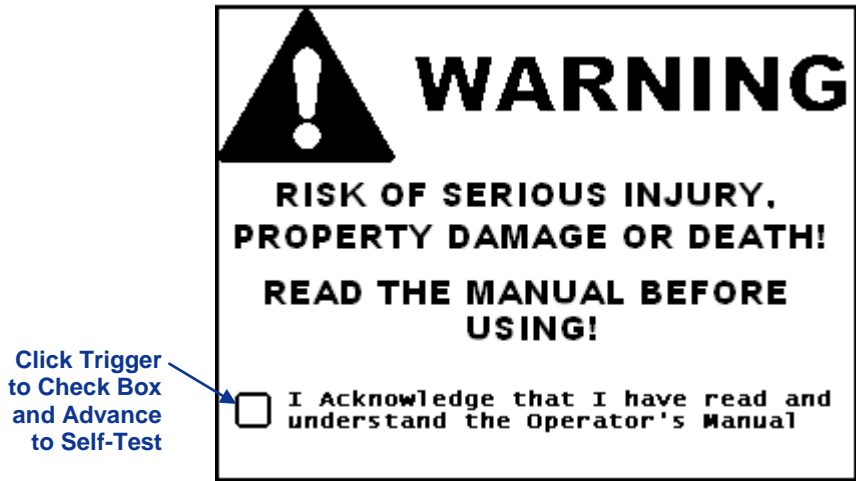


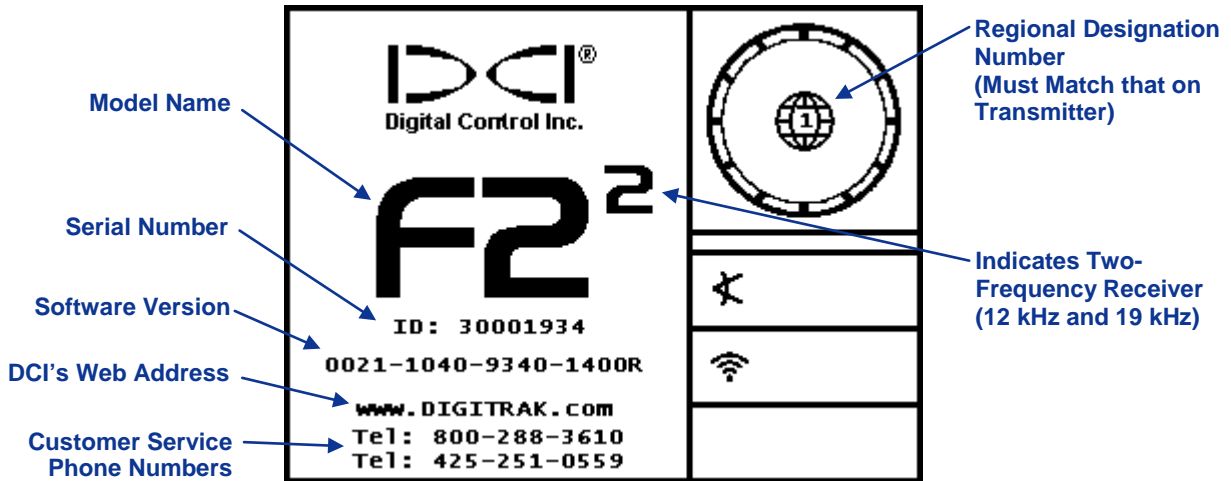
Receiver Warning Screen

The self-test will automatically initiate after the checkmark is displayed in the box. The self-test is performed every time the receiver is powered on. The following screen will display indicating a successful self-test. If a component of the self-test fails, contact DCI Customer Service before proceeding.

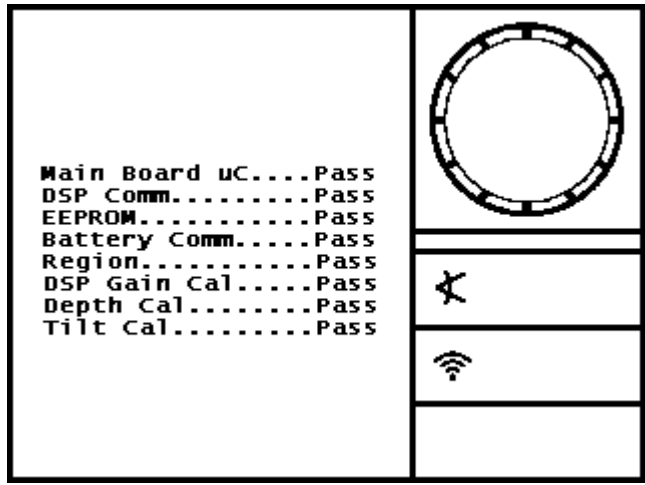


Receiver Self-Test Pass Screen

The startup screen will automatically appear after the self-test, as shown below. Note the regional designation number shown inside the globe icon (); this number must match that shown on the transmitter (see *Transmitter* section).



Receiver Startup Screen

From the startup screen, click the trigger to continue to the locate mode screen. When the receiver is not detecting a transmitter, the screen will appear as shown below. The signal search symbol will display as the receiver searches for the transmitter's signal.

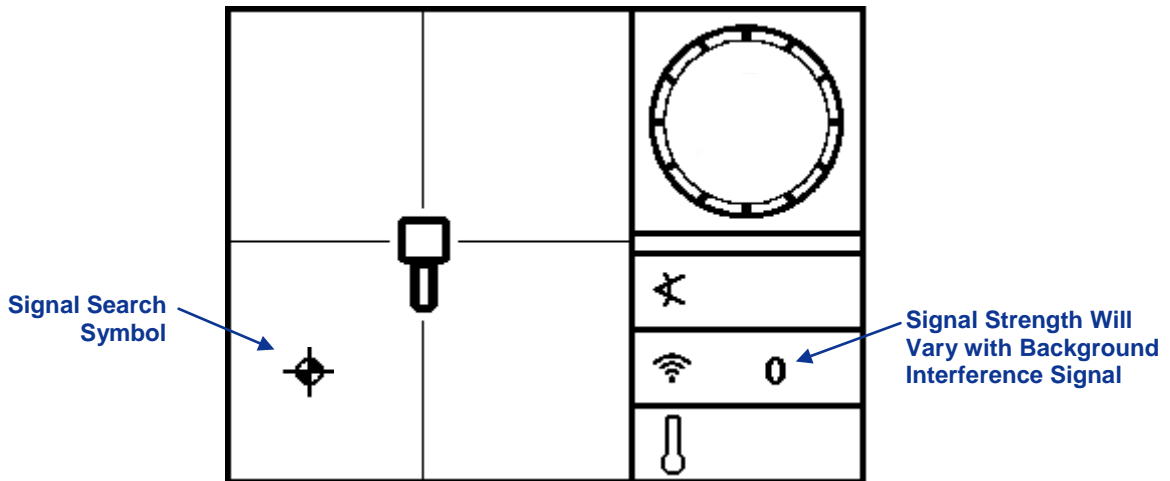


Receiver Locate Mode Screen (No Transmitter)

When the receiver is detecting a transmitter, the locate mode screen provides real-time data about the transmitter's location, temperature, pitch, roll, and signal strength. The standard receiver display screens are discussed further under "Display Screens" later in this section. See the *Locating* section for detailed instructions on locating with the F2 system.

The locate mode screen is the default receiver screen. If the receiver does not sense any trigger action for a period of time, then the display returns to the locate mode screen.

Turning Off the Receiver

To turn off the unit, click the trigger twice to highlight the power icon  in the main menu. Then hold the trigger in for at least 1 full second. You will hear four long tones as the unit turns off.

Automatic Shutdown

The F2 receiver will shut down if no trigger action and no transmitter signal are detected for 15 minutes when the receiver is in locate mode.

Trigger Switch

The F2 receiver operates with a trigger switch located under the handle. The trigger is used to turn on the unit, adjust the screen contrast, access and select menu options, and change the screen view for depth measurements. Clicking the trigger versus holding the trigger will result in different actions.

Click – Quickly pulling and releasing the trigger (in less than 1 second). Clicking the trigger brings up the main menu screen, and then each subsequent click advances through the menu options.

Hold – Holding the trigger in for more than 1 second. Holding the trigger executes menu options, adjusts the screen contrast, selects a menu option, or changes the display view for depth readings.

If the receiver does not sense any trigger action within a few seconds of entering a menu, then the display returns to the locate mode screen.

Audible Tones

The F2 receiver gives audible tones to signal power on/off, menu changes, and the pass/fail status of actions, as summarized below. The receiver also emits tones with transmitter temperature increases (see “Transmitter Temperature Warning Tones” in the *Transmitter* section).

Power On – One short beep followed by a long beep.

Power Off – Four long beeps.

Confirmation Signal – Four short beeps to confirm menu selection has been successfully executed.

Failure Signal – Two long beeps to indicate a problem with the menu item selected. A failure screen will appear. The failure screen will display until the trigger is clicked.


Adjusting Screen Contrast

To make the screen lighter or darker, hold the trigger in with the receiver held vertical and in locate mode (see photo). Release the trigger when the screen contrast is adjusted to the desired level.



Main Menu

The main menu allows you to set the desired depth units, pitch units, roll offset, transmitter options, and height-above-ground (HAG) distance; to select telemetry options; to calibrate the receiver to the transmitter; to use the *Target Steering* function; and to turn off the receiver. To access the main menu, click the trigger once from the locate mode screen. You will see six menu options, with the first one, the HAG option, highlighted for selection.

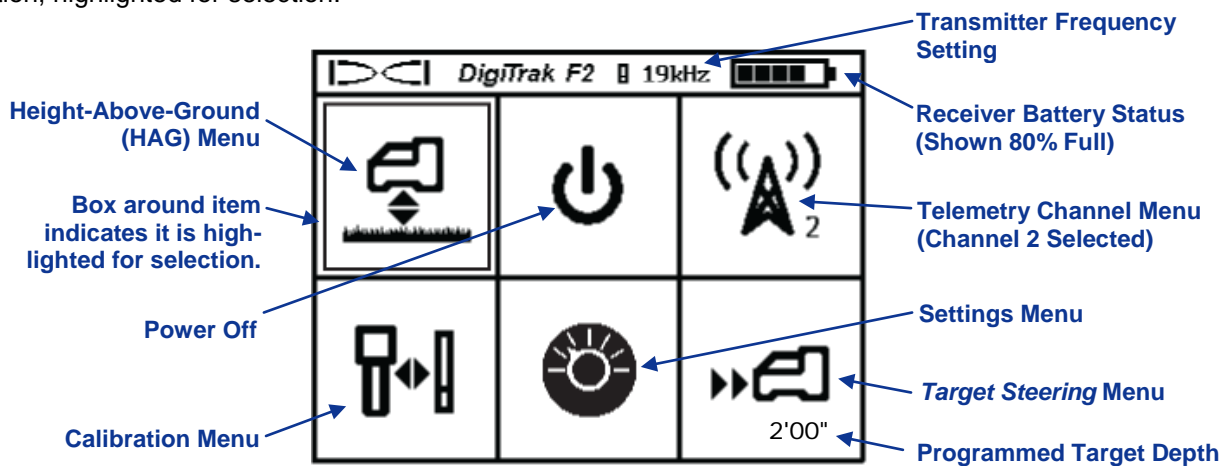







Receiver Main Menu Screen

The main menu screen also displays the receiver battery status (in the top right corner), the transmitter frequency setting (to the left of the battery status), and the current telemetry channel selection (channel 2 is shown in the example above). If the *Target Steering* menu has been programmed with a target depth, you will see that number below the icon, as shown in the figure above. If the main menu is accessed by accident, you can click through all the options to return to the locate mode screen or wait a few seconds for the menu to time out and return to the locate mode screen.

To access a menu option, hold the trigger in with the option highlighted. The table below summarizes the main menu options. Each option is described fully in the subsections following the table.

Receiver Main Menu Options

	<p>Height-Above-Ground (HAG) Menu – Turns on, turns off, or sets the height at which the receiver will be held during depth readings. This feature allows you to take a depth reading without placing the receiver on the ground.</p>
	<p>Power Off – Turns the unit off accompanied by four long tones.</p>
	<p>Telemetry Channel Menu – Changes the telemetry setting (channels 1 through 4) or turns off the telemetry (channel 0). The receiver must be set to the same channel as the remote.</p>
	<p>Calibration Menu – Calibrates the receiver to the transmitter using the above-ground (1-point) method or the below-ground (2-point) method. Calibration is necessary prior to first-time use and before a different transmitter, receiver, or drill head is to be used.</p>
	<p>Settings Menu – Changes the depth units, pitch units, and transmitter options, and activates the roll offset function, which is used when the transmitter's roll position must be compensated to match the drill head's roll position.</p>
	<p>Target Steering Menu – Sets the target depth, turns on the <i>Target Steering</i> function, or returns the display to standard locate mode.</p>

Height-Above-Ground (HAG) Menu




The height-above-ground (HAG) function allows you to program a height measurement into the receiver so that you do not have to set the receiver on the ground for a depth reading. The HAG menu has three options: Turn On, Turn Off, and Set. Set allows you to change the current height setting. Clicking the trigger advances through each option, and holding the trigger in selects the option displayed.

The default setting for the HAG function is off. Until you turn on or set a new HAG, the receiver must be placed on the ground for accurate depth readings. The HAG function automatically shuts off when depth units are changed, when *Target Steering* is used, and during calibration.

Before accessing the HAG menu to turn on or set the HAG, you should measure your desired HAG. To do so, hold the receiver comfortably at your side and measure the distance from the bottom of the receiver to the ground. The available values range from 1–3 ft, 12–36 in., or 30–90 cm. The menu will time out if selections are not made within a few seconds.

Turn On HAG

When the HAG menu is accessed, the first screen that appears shows either the default HAG value (1 ft, 12 in., or 30 cm) or the value that was most recently set.

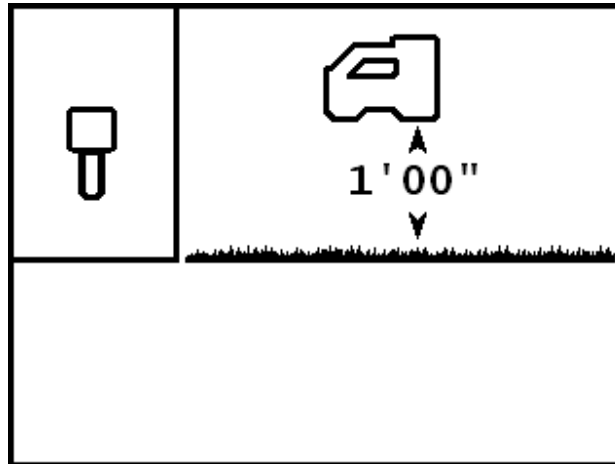


Turn On HAG Screen

To turn on the HAG function using the value displayed, hold in the trigger. You will hear the confirmation signal (four short beeps), and a checkmark will appear next to the setting to indicate the HAG has been successfully turned on. The receiver must be held at this height for accurate depth readings.

If you want to select a different value for the HAG setting or want to turn off the HAG function, click the trigger. You will advance to the turn off HAG screen.

Turn Off HAG

The turn off HAG menu option shows the F2 receiver on the ground.

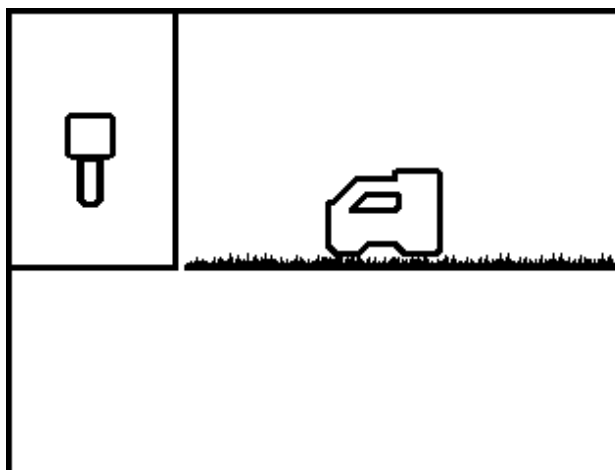


Turn Off HAG Screen

Hold the trigger in to turn off the HAG function. You will hear the confirmation signal, and a checkmark will appear next to the receiver to indicate that the HAG has been successfully turned off. The receiver now must be placed on the ground to obtain accurate depth readings.

If you do not want to turn the HAG function off, click the trigger to advance to the set HAG screen.

Set HAG

The set HAG option allows you to program the height that the receiver will be held above the ground. A question mark will appear in place of the HAG value.

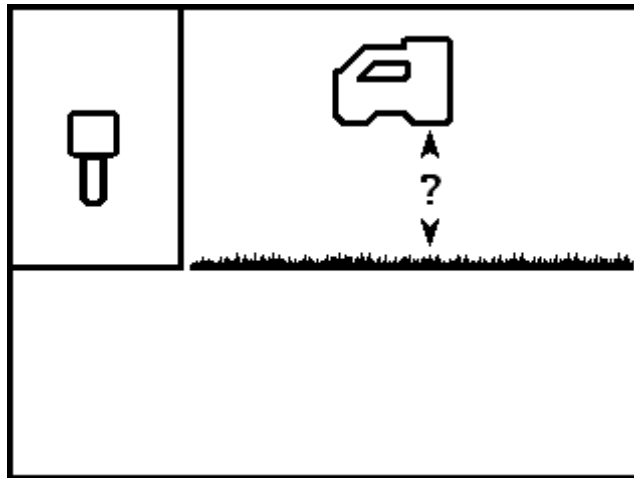

Set HAG Screen

Hold the trigger in to select this option, and the current or default HAG setting will display in place of the question mark.


Click the trigger to scroll through the available height-above-ground values (1–3 ft, 12–36 in., or 30–90 cm). Each click will advance in 1-in. (or 2-cm) increments.

Hold the trigger in when the desired HAG value is displayed. You will hear the confirmation signal, and a checkmark will appear next to the HAG value to indicate that it has been turned on to the value displayed. The receiver must be held at this height during locating for accurate depth measurements.

Telemetry Channel Menu

The telemetry channel menu has five options: no telemetry (channel 0) or telemetry channel 1, 2, 3, or 4. The telemetry channel icon on the main menu (and in the heading above) shows the current channel setting of 2.

When the telemetry channel menu is accessed, the screen will display as shown below, with an arrow next to the current telemetry setting (channel 2 in this example). The receiver must be set to the same telemetry channel as the remote for proper communication.

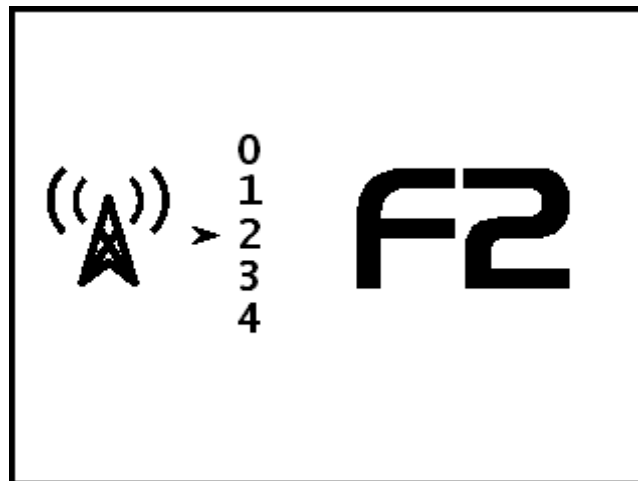

Receiver Telemetry Channel Menu


To change the telemetry channel setting, click the trigger to scroll through the channel options. When the arrow is next to the desired channel, hold the trigger in, and a checkmark will appear in place of the arrow followed by the confirmation signal.

You can verify the telemetry channel by entering the main menu screen and viewing the channel number shown on the telemetry channel menu icon.

In addition to the receiver and remote being set to the same channel, the telemetry frequency designation for the receiver must match that for the remote display. The telemetry frequency designation on the receiver's serial number label must match one of those listed on the remote display's serial number label located on the back of the unit (see "General Description" in *Remote Display* section).

Calibration Menu

The calibration menu allows you to calibrate the receiver to a transmitter with the transmitter above ground (1-point calibration at a distance of 10 ft or 3 m) or below ground (2-point calibration). Calibration is required each time a different transmitter is to be used. When you select the calibration menu, the 1PT CAL option is highlighted for selection as shown below.

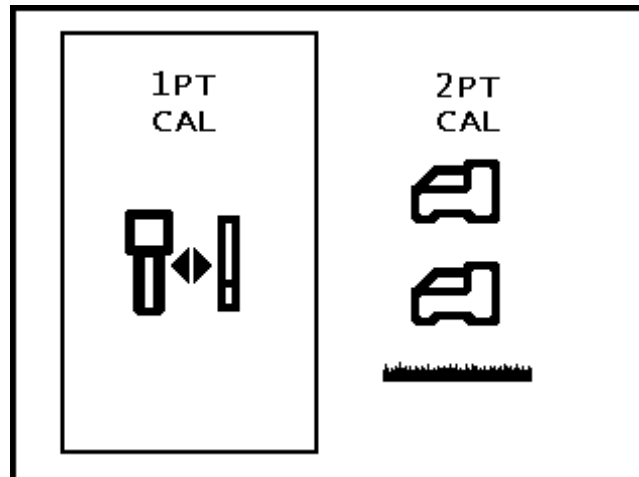

Receiver Calibration Menu

Clicking the trigger will toggle between the 1PT CAL option (the preferred method) and the 2PT CAL option (in-ground calibration). Hold in the trigger when the desired menu item is highlighted or wait about 8–10 seconds to exit the menu.

Do not calibrate if:

- You are within 10 ft (3 m) of metal structures, such as steel pipe, chain-link fence, metal siding, construction equipment, automobiles, etc.
- The receiver is over rebar or underground utilities.
- The receiver is in the vicinity of excessive electrical interference as described in the *Safety Precautions and Warnings* section at the beginning of this manual.
- The transmitter is not turned on or the receiver is not displaying transmitter data. See the *Transmitter* section for information on installing batteries and verifying signal.
- The transmitter is not installed in the housing. See “Transmitter Housing Requirements” in the *Transmitter* section.


1-Point Calibration (Above Ground)



The 1PT CAL procedure is performed with the transmitter turned on and in the drill head, parallel to and level with the receiver at a distance of 10 ft (3 m), as described below. DCI does not recommend calibrating every day, but you should verify the receiver's depth reading daily at several locations using a tape measure.

NOTE: Calibration is necessary prior to first-time use and before a different transmitter, receiver, or drill head is to be used.

The 1-point calibration menu display appears as follows:

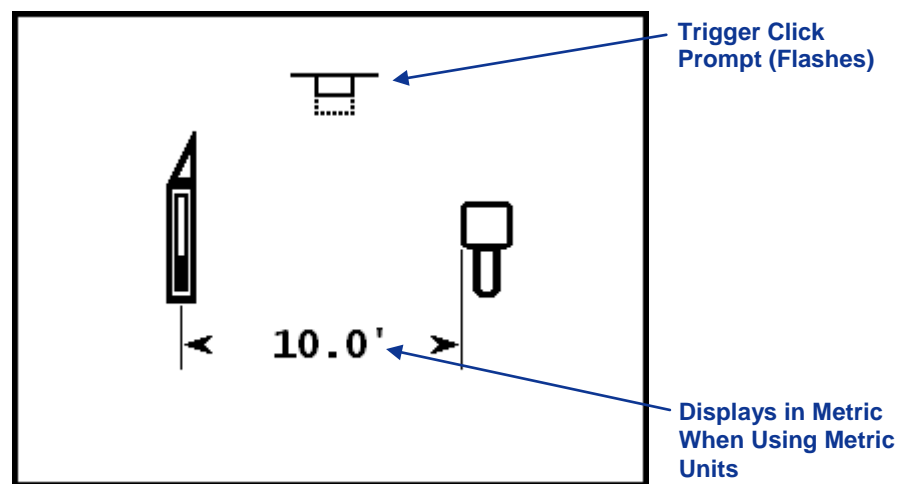


1PT CAL Screen

The above figure shows the calibration setup with the receiver and transmitter situated parallel to and level with each other. The flashing symbol at the top of the screen indicates that you must click the trigger to initiate the calibration. If you wait longer than 15–20 seconds to click the trigger, the operation will end without conducting the calibration procedure.


To calibrate:

1. The receiver must be parallel to and level with the transmitter. It is preferable to conduct the procedure on level ground.
2. Measure 10 ft (3 m) from the center of the transmitter to the inside edge of the receiver as shown above in the 1PT CAL screen.
3. Verify that roll and pitch values are being displayed on the receiver and that a steady signal is being received from the transmitter.
4. Access the 1PT CAL screen and click the trigger to initiate the calibration.
5. A countdown sequence from 5 to 0 will begin on the screen.
6. If the calibration is successful, you will see a checkmark above the transmitter icon as shown below, and you will hear the confirmation signal.

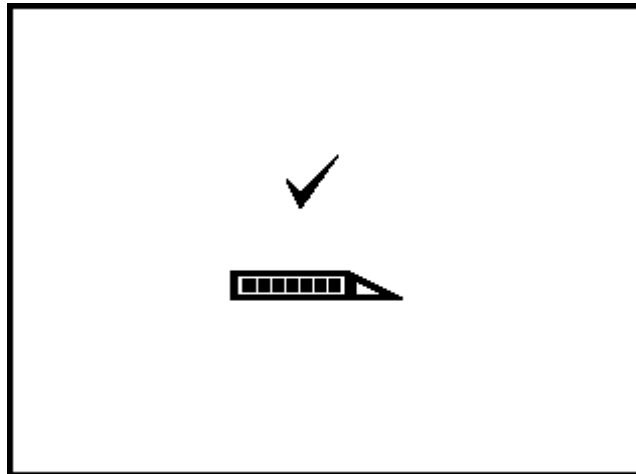



Successful 1PT CAL Screen

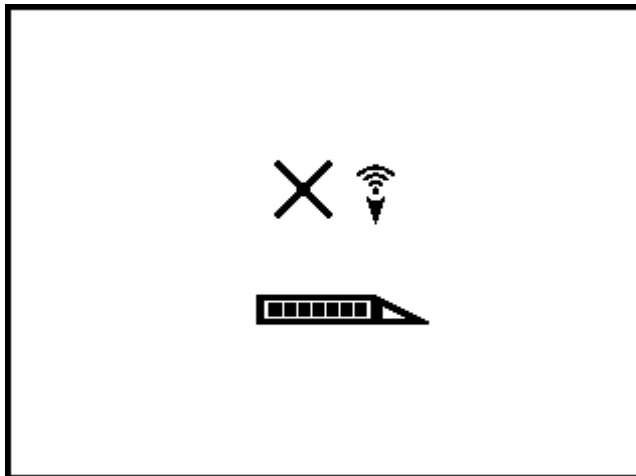If the calibration fails, a failure screen as shown below will appear, and you will hear the failure signal (two long beeps).



1PT CAL Failure Screen (Signal Too Low)

The failure screen will show an X above the transmitter icon followed by a symbol to indicate failure due to low signal strength (), as shown, or high signal strength ().


NOTE: The calibration will fail when the signal from the transmitter is above 950 points or below 300 points.

2 Point Calibration (In Ground)



The 2PT CAL option allows you to calibrate the receiver to the transmitter when it is in the ground. This procedure requires the use of a tape measure. Two-point calibration is rarely needed. If you must calibrate with the transmitter in the ground, use this procedure with caution.


Position the receiver on the ground above an approximately level transmitter. (See the *Locating* section for instructions on how to position the receiver directly over the transmitter.) To start the 2-point calibration procedure, select 2PT CAL from the calibration menu. You will see the following screen.

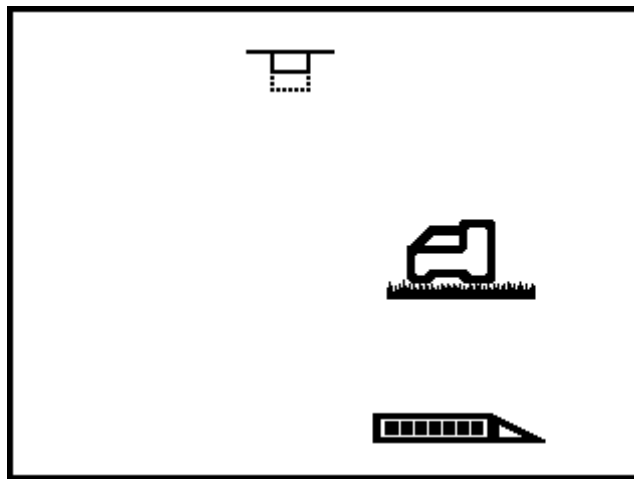

First Point, 2PT CAL

The flashing trigger symbol at the top of the screen indicates that a trigger click is needed to obtain the first point for the 2-point calibration. Click the trigger, and the display will count down from 5 to 0 while the receiver records the first calibration point.

If the signal strength from the transmitter is within the tolerable range (300–950 points), a checkmark will display on the screen and you will hear the confirmation signal, indicating that the first calibration point has been successfully recorded. Then the second 2PT CAL screen appears.

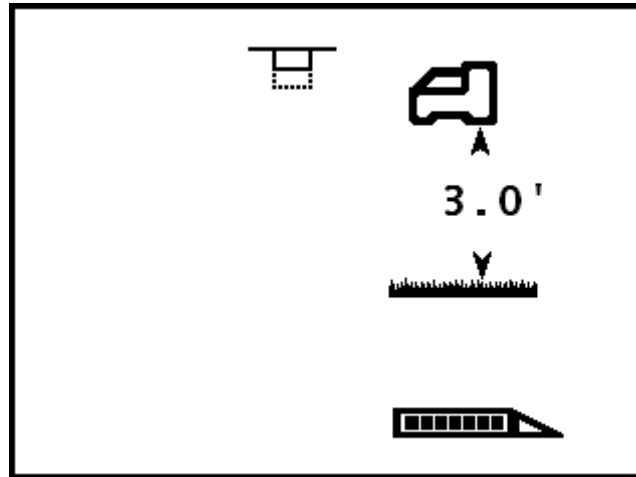


Second Point, 2PT CAL

To record the second calibration point, lift the receiver 3 ft (or 1 m) directly up, keeping it level, and click the trigger. The display will count down from 5 to 0. Do not move the receiver while the display is counting down.

NOTE: The second point screen will display even if the first point fails. After the second point is recorded, an X will appear on the screen, and you will hear the failure signal. You must click the trigger to continue and restart the calibration procedure.

You will see the following screen and hear the confirmation signal when the calibration is complete.

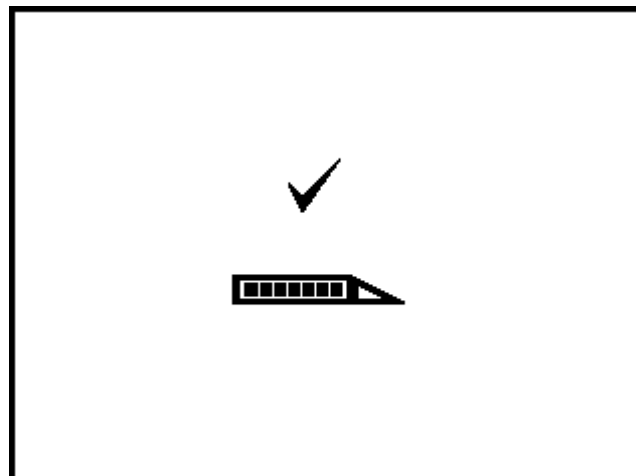


Successful 2PT CAL Screen

After the 2-point calibration procedure has passed, verify the distance between the two calibration points by taking depth measurements at the first point and the second point and then determining the difference between the two values. The difference should be 3 ft \pm 2 in. (or 1 m \pm 5 cm). Repeat these measurements several times as you continue drilling to verify that the depth remains valid as the pitch of the transmitter changes.

Settings Menu



The settings menu allows you to change the depth units, pitch units, and transmitter options and to set a roll offset, which is needed when the transmitter's roll position must be compensated to match the drill head's roll position. When this menu option is selected, the following screen will appear with the depth units option highlighted, as shown below.

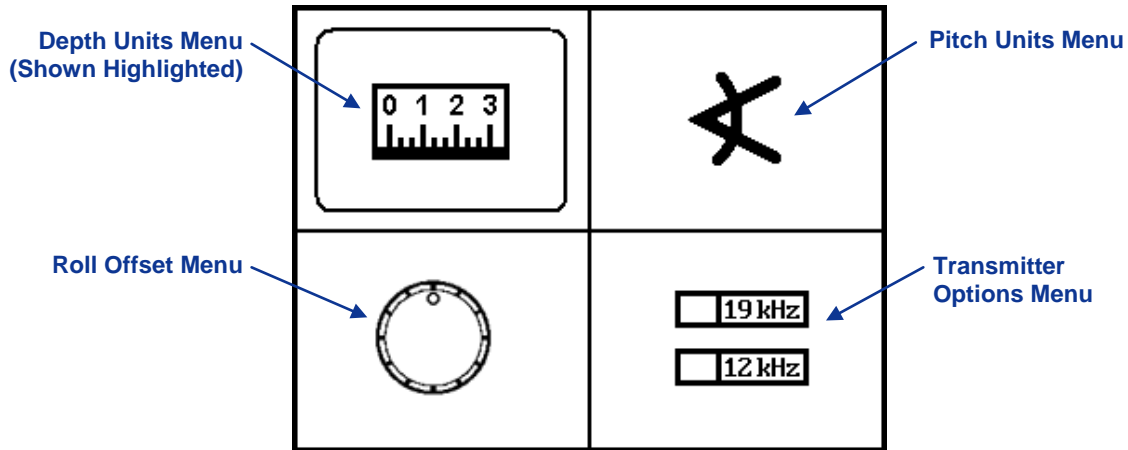


Receiver Settings Menu

Click the trigger to toggle between options, and hold the trigger in when the desired option is highlighted.

Depth Units Menu



The depth units menu displays four options: 000" represents the use of inches only; 0'00" represents the use of both feet and inches; 0.00M represents the use of metric units (meters and centimeters); and 0.00' represents the use of feet only. An arrow points to the current setting, which is feet and inches in the example shown below.

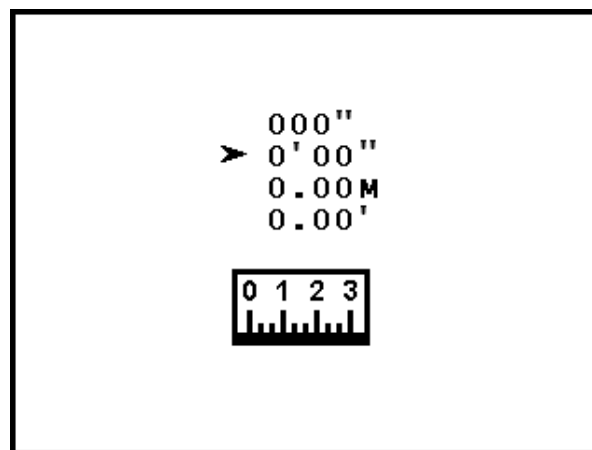


Depth Units Menu

To change the depth units setting, click the trigger to scroll the arrow through the four options. When the arrow is next to the desired setting, hold the trigger in to select it. A checkmark will appear in place of the arrow, and you will hear the confirmation signal.

NOTE: The temperature units are determined by the depth units selected. Celsius (°C) temperature units will display if metric depth units are selected, and Fahrenheit (°F) temperature units will display if English depth units (inches or feet and inches) are selected.

Pitch Units Menu

The pitch units menu displays the two available options: degrees (0.0°) and percent (0.0%). An arrow points to the current setting, which is percent in the example shown below.

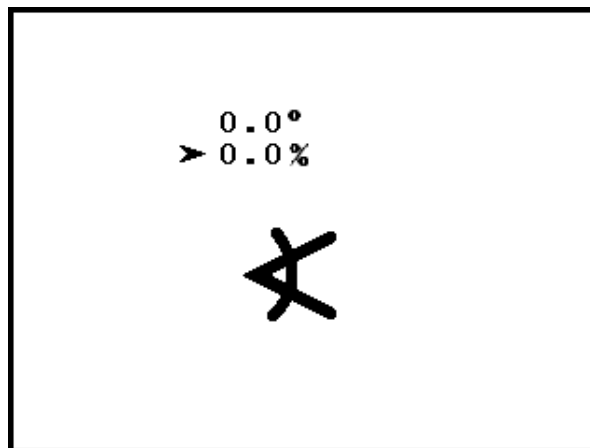


Pitch Units Menu

To change the pitch units setting, click the trigger to toggle between the two options. Hold the trigger in when the arrow is next to the desired option. A checkmark will appear in place of the arrow, and you will hear the confirmation signal.

Roll Offset Menu


The roll offset menu activates or disables the roll offset function, which is used when the drill head (tool) and the housing are two separate pieces and their roll positions do not match when the tool is torqued-up to the housing. The roll offset function is an electronic compensation to match the transmitter's 12 o'clock position to the tool's 12 o'clock position.

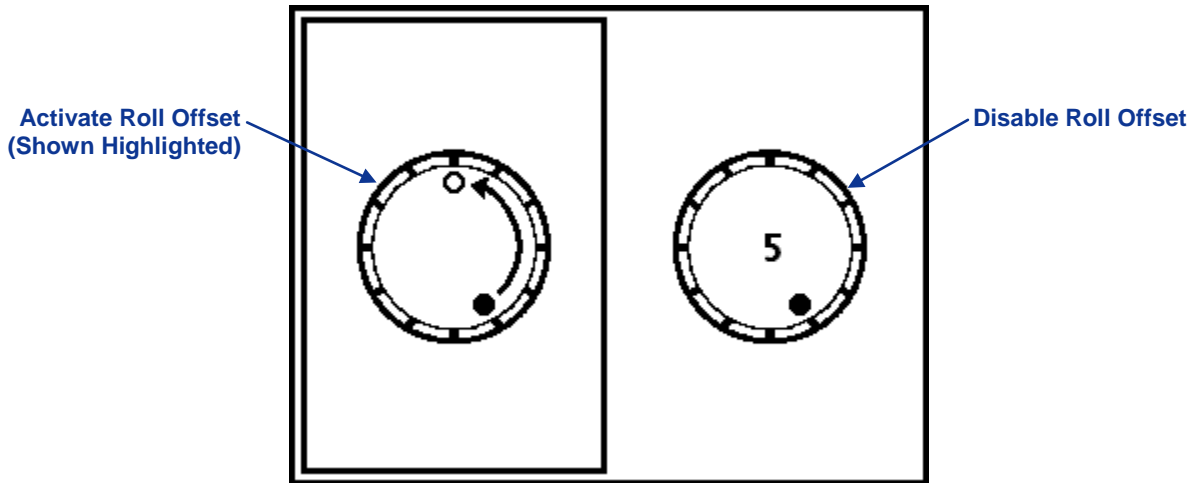

Roll Offset Menu

Click the trigger to toggle between the activate and disable options. Hold the trigger in when the desired option is highlighted.

If you select the activate roll offset option, the following screen will appear.

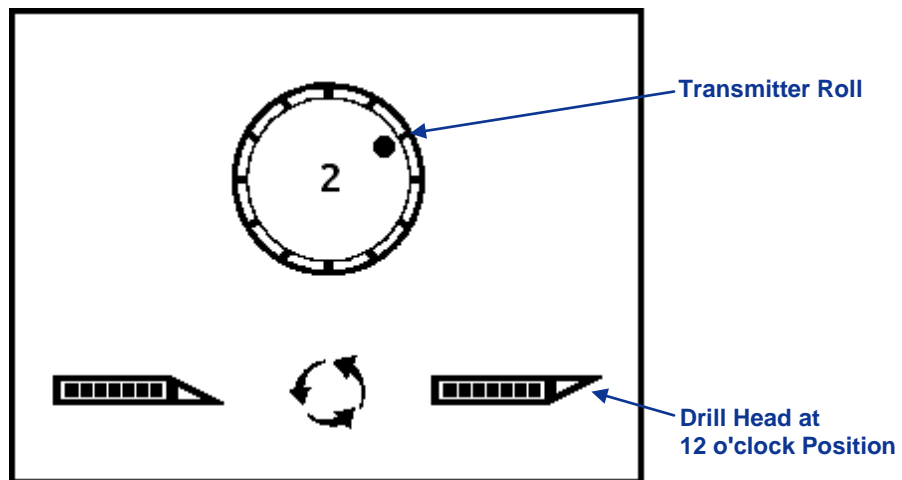


Activate Roll Offset

You must then physically rotate the drill head to its 12 o'clock position, as indicated by the images at the bottom of the screen. Then click the trigger to activate the roll offset and automatically be returned to the locate screen. If you do not click the trigger within a few seconds, you will be returned to the locate screen with no change to the roll offset. Roll offset is denoted by a hollow dot in place of the solid dot on the clock face and the letters "RO" next to the clock on both the receiver and remote displays.

Transmitter Options Menu

The transmitter options menu displays the three transmitter options: 12-kHz battery-powered transmitter, 19-kHz battery-powered transmitter, and 12-kHz cable transmitter (see *Transmitter* section). The current setting, which is for the battery-powered 12-kHz transmitter in the example shown below, is highlighted for selection.

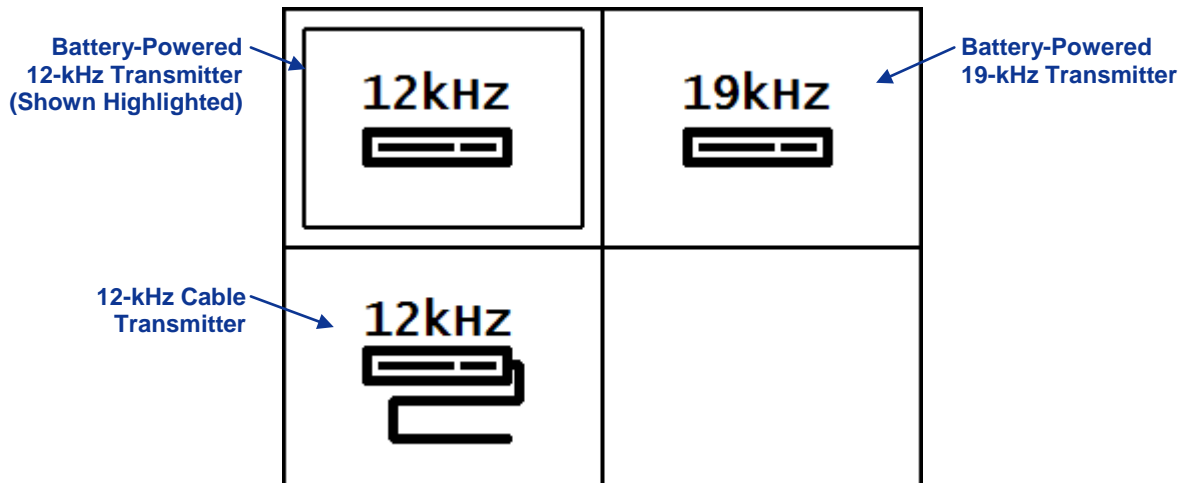

Transmitter Options Menu

Click the trigger to toggle between the three options, and hold the trigger in when the desired option is highlighted. A checkmark will display on the screen, and you will hear the confirmation signal.

NOTE: Calibration is necessary whenever the transmitter option is changed so that the receiver displays depth data correctly.

Target Steering Menu


The *Target Steering* function allows you to place the F2 receiver in front of the drill head to use as a steering target. See *The Target Steering Function* section for detailed information on determining where to place the receiver and how to steer to it. This section gives instructions for using the *Target Steering* menu once a target depth number has been determined.

The target depth number can range from 2–99 ft (0–30 m) for the foot or meter value and from 0–11 in. (0–98 cm) for the inches or centimeters value.

The first screen of the *Target Steering* menu turns on *Target Steering* to the target depth displayed: either the default value (2 ft or 0.50 m) or the value that was most recently set. The second screen turns off the *Target Steering* function and returns you to the standard locate mode screen. The third screen allows you to program the target depth.

Turn On Target Steering

The turn on *Target Steering* screen displays the current or default target depth.

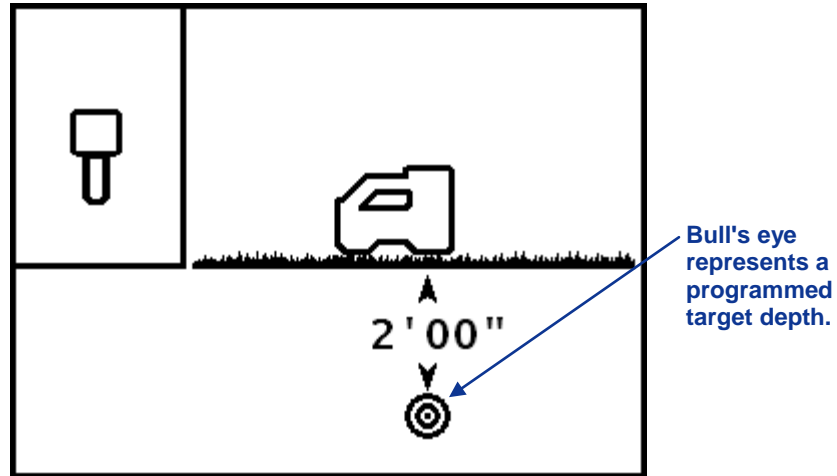


Turn On Target Steering Screen

Hold the trigger in to turn on the *Target Steering* function and set the target depth to the displayed value. A checkmark will appear next to the receiver icon, and you will hear the confirmation signal.

Click the trigger to advance to the turn off *Target Steering* screen.

Turn Off Target Steering

The turn off *Target Steering* screen displays the locating target in the box in both the bird's-eye (overhead) and side views.

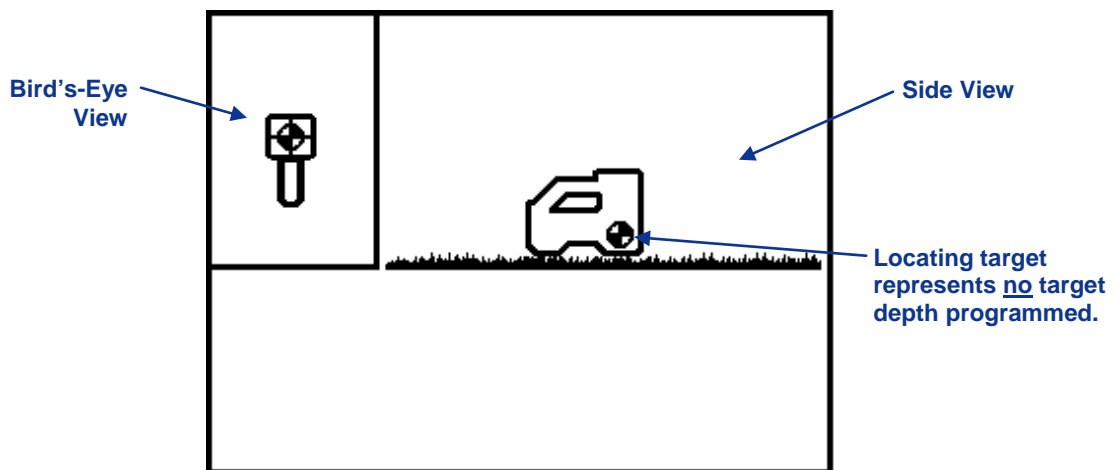


Turn Off Target Steering Screen

To turn off the *Target Steering* function, hold the trigger in to select this option. A checkmark will appear next to the receiver icon, and you will hear the confirmation signal. Then the display will return to the standard locate mode screen.

To advance to the next option without turning off the *Target Steering* function, click the trigger.


Set Target Depth

The set target depth screen is similar to the turn on screen except that a question mark (?) appears in place of the current target depth setting.

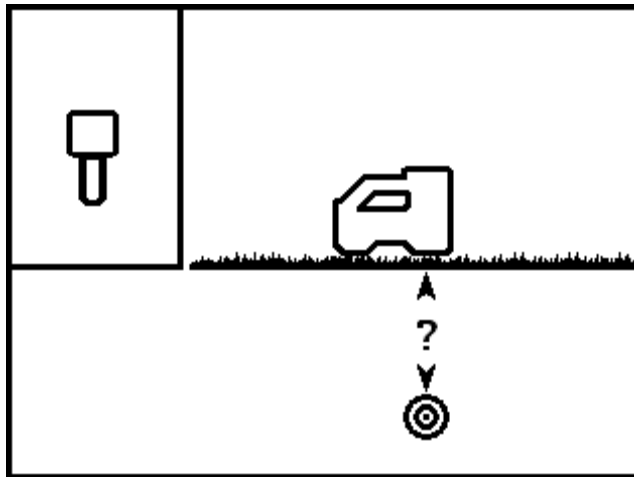


Set Target Depth Screen

Hold the trigger in to select the set target depth option, shown below. At this screen, you can click through the available fields, which are the foot or meter (ft/m) setting, the inches or centimeters (in./cm) setting, and the checkmark (used to confirm the target depth setting).

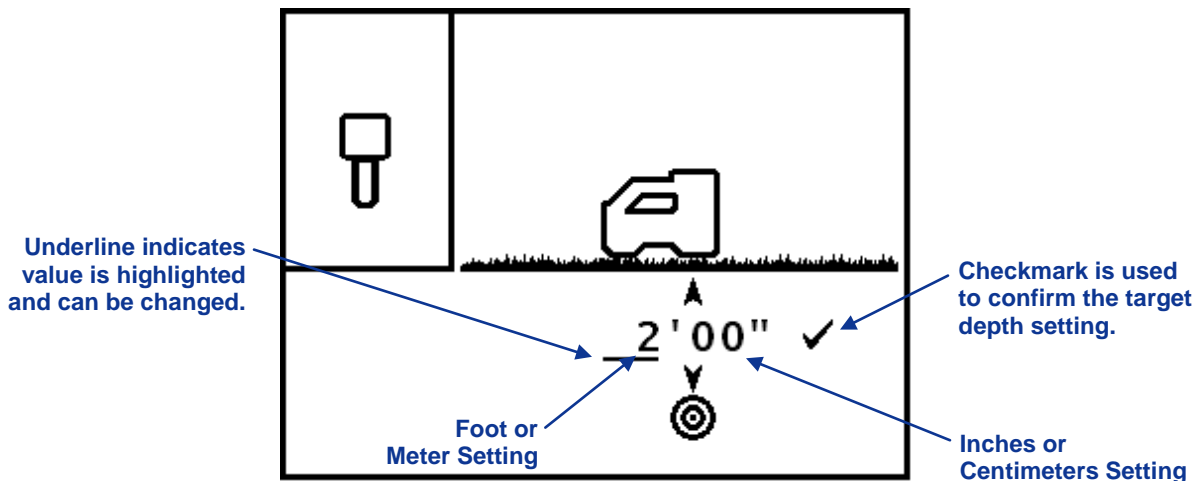

Set Target Depth Value Screen (Foot or Meter Setting Highlighted)

In this example, the line under the number 2 indicates that the ft/m setting is highlighted. To change this setting, hold in the trigger until a box appears around the number 2, as shown below. Once you see the box, click the trigger to increase (in 1-ft or 1-m increments) to the desired number. Once you reach the desired number, hold in the trigger, and the box will turn back into an underline under the ft/m setting.

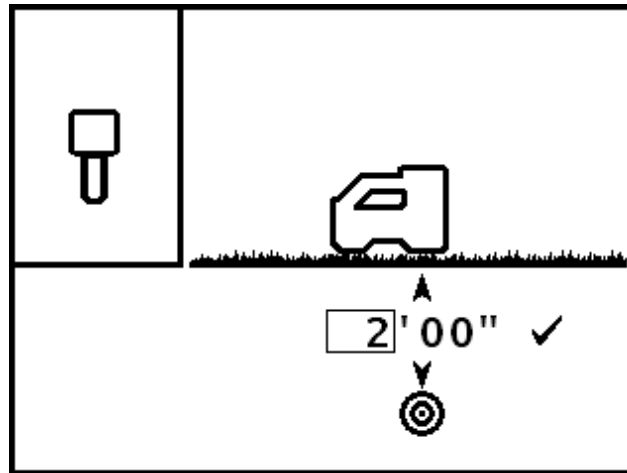

Set Target Depth Value Screen (Foot or Meter Setting Selected)

To change the in./cm setting, click the trigger to move the underline to the in./cm position, and then hold the trigger in until a box surrounds the number. Once you see the box, click the trigger to increase in 1-in. or 2-cm increments. Once you have the desired in./cm setting, hold in the trigger.

NOTE: If you click past 11 in. or 98 cm, then the number in the ft/m setting will automatically increase. Also, if you click past your desired value, you can either click through the maximum values (99 ft or 30 m), or wait about 10 seconds to exit the menu and then reenter the *Target Steering* menu, to start back at the default value (2 ft or 0.50 m).

To set the displayed value as your target depth, click the trigger to move the underline underneath the checkmark and hold the trigger in. A confirmation signal will sound.


For information about how to position the receiver ahead of the tool for target steering, see the *Target Steering Function* section.

Display Screens

The basic receiver displays include the locate mode screen, the depth mode screen, and the predicted depth screen. These are presented below. For more information regarding these screens and for detailed locating instructions, please see the *Locating* section.


Locate Mode Screen

When the receiver is detecting a signal from a transmitter, the locate mode screen provides real-time data about the transmitter's location, temperature, pitch, roll, and signal strength. The roll/pitch meter shows the quality of the signal from the transmitter. The locate mode screen is the default screen setting.

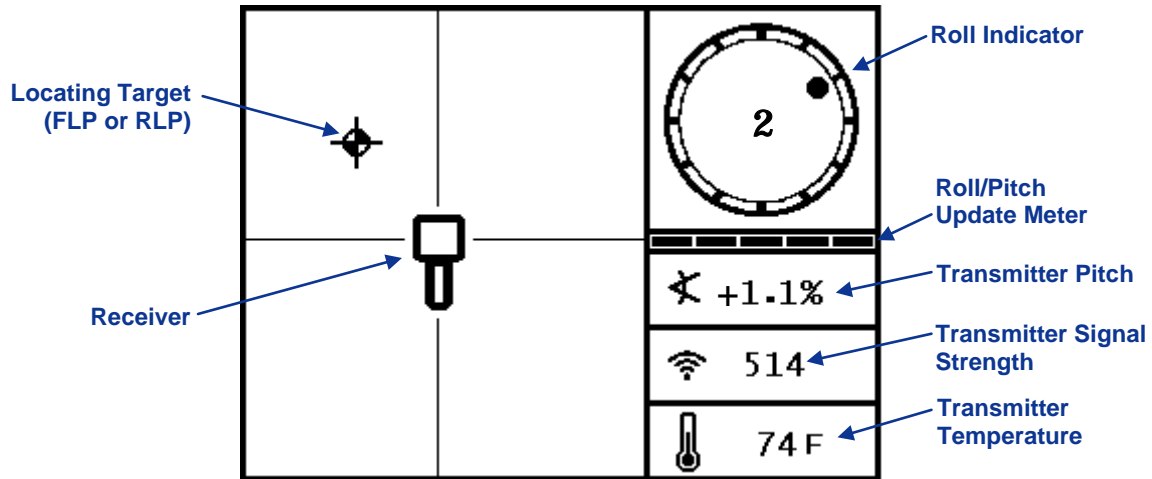


Receiver Locate Mode Screen with Transmitter in Range (Trigger Out)

When the roll offset function is used (an electronic compensation to match the transmitter's 12 o'clock position to the drill head's 12 o'clock position), the roll indicator will have a hollow dot and the letters RO for roll offset at the bottom right, as shown here. For more information on the roll offset, see "Roll Offset Menu" above.

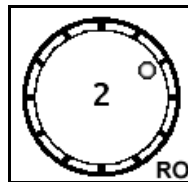

Roll Offset Is Activated


The roll/pitch update meter displays the quantity of roll/pitch data being received from the transmitter. When the meter is empty, no roll/pitch data is being received, and all information will disappear on both the receiver and remote display. Depth and predicted depth readings may still be taken, but the receiver will assume the transmitter has a pitch of zero, as indicated by the following image appearing on the depth or predicted depth mode screen.



Pitch Assumed Zero

Depth Mode Screen


From the locate mode screen, hold in the trigger to access the depth mode screen. This screen shows the battery status of the transmitter. It also provides a depth reading and other data about the position of the transmitter with respect to the receiver.

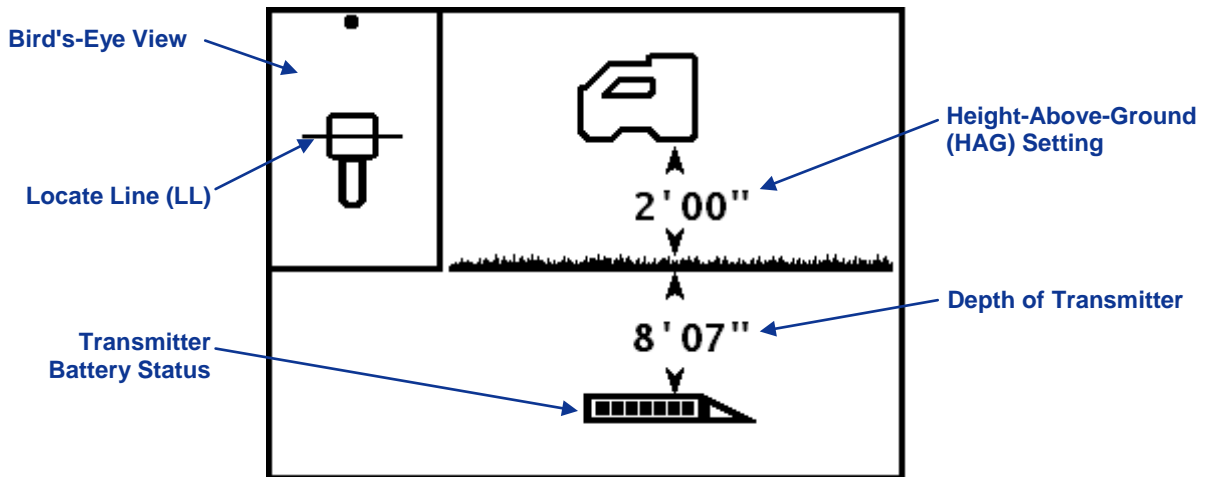

Receiver Depth Mode Screen at LL with HAG on (Trigger In)

Predicted Depth Display Screen

When the receiver is positioned at the front or rear locate point (FLP or RLP) and the trigger is held in, you will see the predicted depth screen. The value for predicted depth and horizontal distance are only valid if the receiver is at the FLP. See the *Locating* section for more information regarding the locate points and positioning the receiver at the locate points.

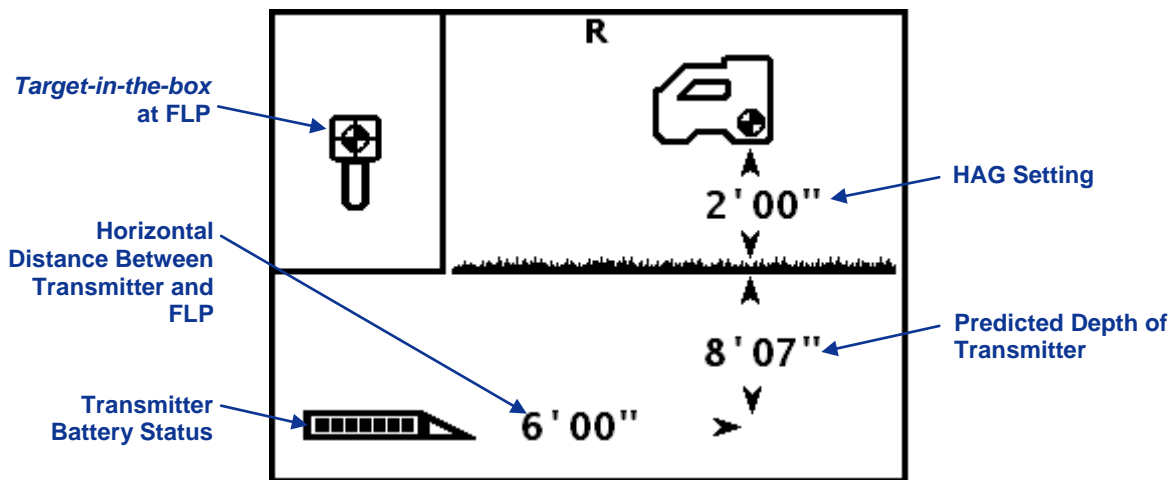

Receiver Predicted Depth Screen at FLP with HAG on (Trigger in)

Notes

Transmitter

Types of F2 Transmitters

DCI manufactures six different transmitters for use with the F2 system: the long-range FX transmitter, in 12-kHz and 19-kHz versions; the extended long-range FXL transmitter, in 12-kHz and 19-kHz versions; the short-range FS transmitter, which is only available with a 12-kHz signal; and the FC cable transmitter, also only available with a 12-kHz signal. All F2 transmitters provide pitch readings in 0.1% or 0.1° increments (from 0% to 100% or 0° to 45°). This section presents information for operating the battery-powered F2 transmitters. For information on operating the FC cable transmitter, see the *DigiTrak Multi-Function Cable Box (MFCB) Operator's Manual*.


The transmitter fits inside the drill housing and emits electromagnetic signals that the F2 receiver “hears”. The receiver converts these signals to display the drill head location, position, and heading on the receiver and remote display screens. Be sure the receiver is calibrated to the transmitter being used and verify depth data before drilling.

The transmitter and receiver must have matching regional designation numbers to ensure that they comply with local operating requirements. The transmitter’s regional designation number is located inside the globe icon (🌐) near the serial number on the FX and FXL battery compartment and on the front end cap of the FS transmitter. This number must match that of your receiver for proper communication (see *Receiver* section).



Long-Range FX Transmitter

The long-range FX transmitter provides a depth range of approximately 65 ft (19.8 m). It measures 15 in. (38.1 cm) long and 1.25 in. (3.175 cm) in diameter. The extended long-range FXL transmitter provides a depth range of approximately 85 ft (25.9 m). It measures 19 in. (48.26 cm) long and 1.25 in. (3.175 cm) in diameter. The 19-kHz transmitters have the same dimensions as the 12-kHz versions, except they are colored black rather than gray.

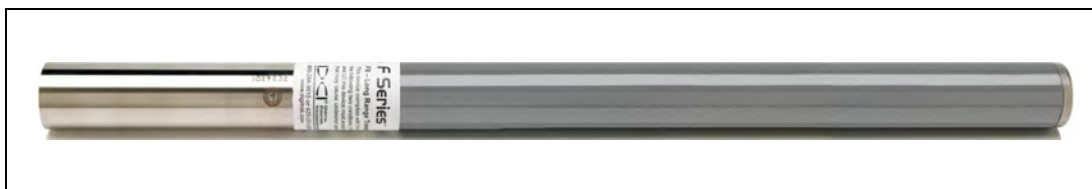

Extended Long-Range FXL Transmitter

The short-range FS transmitter provides a depth range of approximately 15 ft (4.6 m). It measures 8 in. (20.32 cm) long and 1.00 in. (2.54 cm) in diameter.



Short-Range FS Transmitter with Closeup of Front End Cap

The FC cable transmitter provides a depth range of approximately 90 ft (27.4 m). It measures 19 in. (48.26 cm) long and 1.25 in. (3.175 cm) in diameter. This transmitter requires a special rear-load housing with an end plug that allows the transmitter's cable to exit the housing. The end plug requires a compression fitting to seal the transmitter from the drilling fluid. For operational information on the FC cable transmitter, please see the *DigiTrak Multi-Function Cable Box (MFCB) Operator's Manual*.



FC Cable Transmitter

NOTE: The range of any transmitter is largely dependent upon the amount of interference at a job site. The range decreases as interference increases.

Batteries and Power On/Off


The long-range FX transmitter requires two C-cell alkaline batteries or one DCI SuperCell Lithium Battery. The extended long-range FXL requires one DCI SuperCell battery. Do not use alkaline batteries in the FXL transmitter; they would last only a few hours. The short-range FS transmitter requires one AA alkaline battery.

NOTE: Never use damaged or non-DCI lithium batteries. DCI SuperCell batteries are manufactured to military specifications. The use of damaged or lower-quality lithium batteries may damage the transmitter and/or housing and will void the DCI warranty.

Installing Batteries / Power On

The transmitter is powered on once the batteries are installed properly. To install the batteries, first remove the battery cap by rotating it counterclockwise. Then insert the batteries positive terminal first into the battery compartment and replace the battery cap, ensuring that it bottoms out for a proper seal. When

using two C-cell batteries in the FX transmitter, performance is improved by placing a spring between the batteries, as shown below.

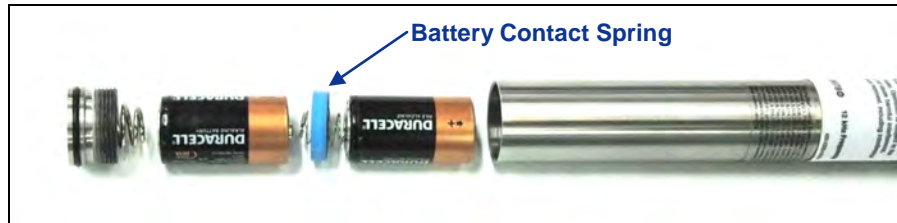

Install Transmitter Batteries with Battery Contact Spring

Use a receiver with a matching regional designation number and the correct transmitter option selected to verify the signal from the transmitter. Roll, pitch, and a stable signal strength reading should be observed on the receiver.

Transmitter Battery Status

When using alkaline batteries, the battery status symbol at the bottom of the receiver's depth mode screen will indicate the battery life remaining. When using a DCI SuperCell battery in the FX or FXL transmitter, the battery status symbol will appear full until just before the battery dies.

NOTE: Because the SuperCell battery will appear full until just before it dies, you must track the hours of use for the SuperCell battery.

Sleep Mode (Automatic Shutdown) / Power Off


F2 transmitters will go into sleep mode and stop transmitting to conserve battery power if they are stationary for longer than 15 minutes. To "wake" the transmitter, rotate the drill string.

A small amount of charge will continue to drain from the batteries while the transmitter is in sleep mode. To conserve battery life, do not leave batteries in the transmitter when they can easily be removed, and always remove batteries when the transmitter is not being used.

Transmitter Housing Requirements


For maximum transmitter range and battery life, the slots in the drill housing must meet minimum length and width requirements and be correctly positioned. DCI recommends at least three slots, each at least 1/16-inch or 0.0625 in. (1.6 mm) wide and equally spaced around the circumference of the housing. For accuracy, slot measurements must be taken from the inside of the housing.

For both the 12-kHz and 19-kHz long-range FX transmitters (15 in./38.1 cm long), the slots must be at least 8.5 in. (21.6 cm) long and begin at least 2 in. (5.1 cm) but not more than 3 in. (7.6 cm) from the front of the transmitter, as shown below.

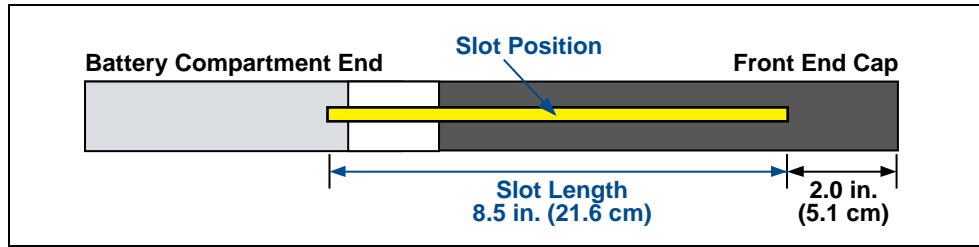


FX Transmitter Housing Slot Requirements

For both the 12-kHz and 19-kHz extended long-range FXL transmitters (19 in./48.26 cm long), the slots must be at least 13 in. (33 cm) long and begin at least 2 in. (5.1 cm) but not more than 3 in. (7.6 cm) from the front of the transmitter, as shown below.

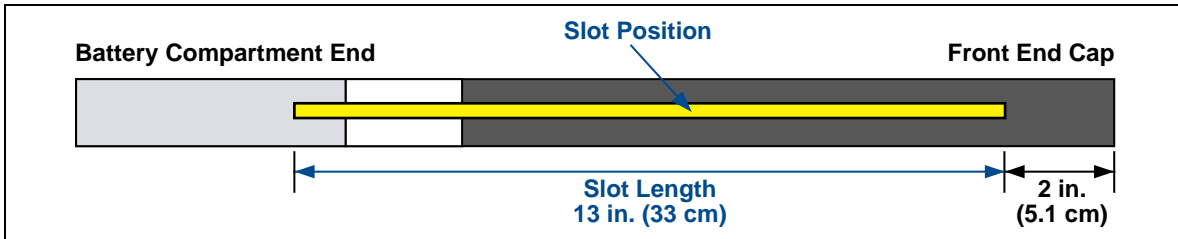


FXL Transmitter Housing Slot Requirements

For the short-range FS transmitter (8 in./20.32 cm long), the slots must be at least 3.75 in. (9.5 cm) long and begin at least 1.25 in. (3.2 cm) from the front or index cap end of the transmitter, as shown below.

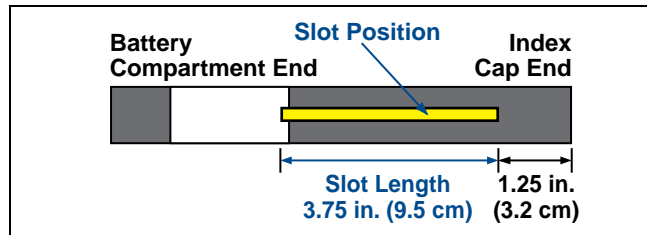

FS Transmitter Housing Slot Requirements

For the FC cable transmitter (19 in./48.26 cm long), the slots must be at least 9 in. (22.9 cm) long and begin at least 2.5 in. (6.4 cm) from the front or index cap end of the transmitter, as shown below.

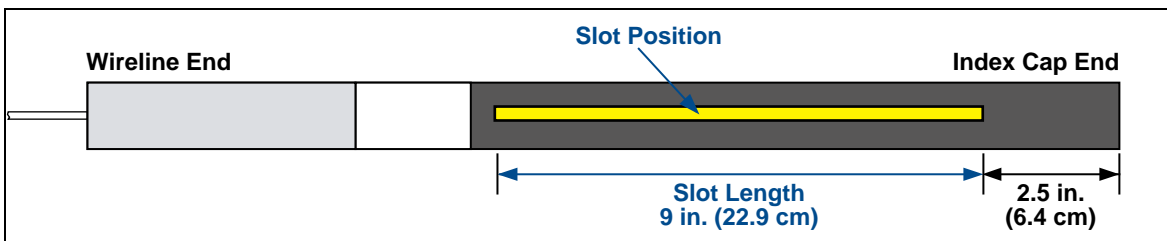


FC Transmitter Housing Slot Requirements


The transmitter must fit snugly in the housing. It may be necessary to wrap the transmitter with tape or O-rings and/or use a housing adapter for larger drill housings. Contact DCI for more information.

The index slot in the front end cap of the transmitter should fit onto the anti-roll pin (key) in the housing for proper alignment of the transmitter in the housing. When the drill head's 12 o'clock position does not match that of the transmitter, use the receiver's roll offset function to display appropriate roll values. See "Roll Offset Menu" in the *Receiver* section.

Temperature Updates and Overheat Indicator

F2 transmitters are equipped with an internal digital thermometer. The internal temperature of the transmitter is sent to the receiver and remote display every 4.4 seconds. This temperature is displayed on the bottom right of the receiver and remote display screens next to the transmitter temperature symbol .

NOTE: Because the digital thermometer is inside the transmitter, temperature increases due to external drilling conditions will take time to transfer to the transmitter. Any increase in temperature should be dealt with quickly to avoid irreversible damage.

Normal drilling temperatures range from 64°F (16°C) to 104°F (40°C). You should suspend drilling when temperatures exceed 95°F (35°C) to permit cooling. Once the temperature reaches 118°F (48°C) the thermometer icon will change to display steam and it will flash: . At this point, the transmitter has become dangerously hot and must be cooled immediately or it will be damaged. The transmitter will shut down at 176°F (80°C).

To cool the transmitter, stop drilling and/or add more drilling fluid.


Transmitter Temperature Warning Tones

The audible tones emitted by the F2 receiver and remote display to indicate increases in the transmitter temperature are summarized in the table below.

Temperature	Warning Tones
Below 61°F (16°C)	No tones for temperature increases.
61–97°F (16–36°C)	Double-beep sequence (beep-beep) for every 4°C increase in temperature.
104–111°F (40–44°C)	Two double-beep sequences (beep-beep, beep-beep) for every 4°C increase in temperature. NOTE: Action is required to cool the transmitter.
118–133°F (48–56°C)	Three double-beep sequences (beep-beep, beep-beep, beep-beep) for every 4°C increase in temperature. NOTE: Cooling is critical to avoid irreversible damage.
Above 140°F (60°C)	Three double-beep sequences every 5 seconds on the remote display, and every 20 seconds on the receiver. NOTE: Warning signifies dangerous drilling conditions; irreversible damage may have already been done.
Above 176°F (80°C)	Transmitter shuts down.
180°F (82°C)	FS and FC transmitter overheat indicator (temp dot) turns black (see below).
220°F (104°C)	FX and FXL transmitter overheat indicator (temp dot) turns black (see below).

Transmitter Overheat Indicator (Temp Dot)

The transmitter has a temperature overheat indicator (temp dot) on the front end cap. The temp dot has an outer yellow ring with a 1/8-inch (3-mm) white dot in the center. The white dot will change color if the transmitter is exposed to excessive heat.

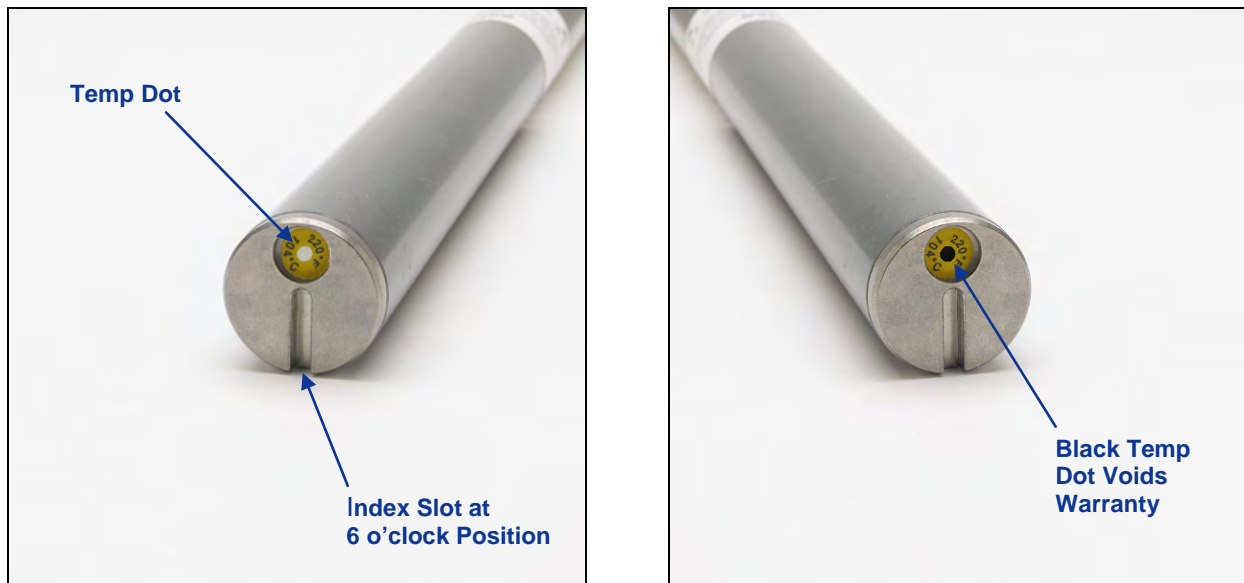

Front End Cap of Transmitter Showing Temp Dot, Index Slot, and Black Temp Dot

If the temp dot changes to silver or gray, then the transmitter has been exposed to heat but not in excess of the specifications. If the temp dot is black, then the transmitter has been exposed to temperatures in excess of 220°F (104°C) for an FX or FXL transmitter and 180°F (82°C) for an FS or FC transmitter and can no longer be used. The DCI warranty will be void for any transmitter that has been overheated (black dot) or had its temp dot removed.

Avoid transmitter overheating by practicing proper drilling techniques. Abrasive soils, clogged jets, inadequate mud flow, and poorly mixed mud are some of the factors that can contribute significantly to the overheating of a transmitter.

Remote Display




DigiTrak F Series Display (FSD)

General Description

The DigiTrak F Series Display (FSD) is a multifunction display that can be used with a variety of DCI receivers. It provides the drill rig operator with information from the receiver about the depth, orientation, and status of the transmitter. The FSD remote can be powered through either a DC cable source or an F Series battery pack.

An external 13 in. (33 cm) telemetry antenna is supplied with your DCI equipment. It mounts onto the remote display to enhance signal reception up to 1800 ft (550 m) with line of sight to the receiver. For bore lengths greater than this or when line of sight is compromised, contact DCI to purchase one of the optional telemetry antennas.

To meet regional requirements and for proper communication, one of the frequency designations shown on the remote's serial number label (see photo to the right) must

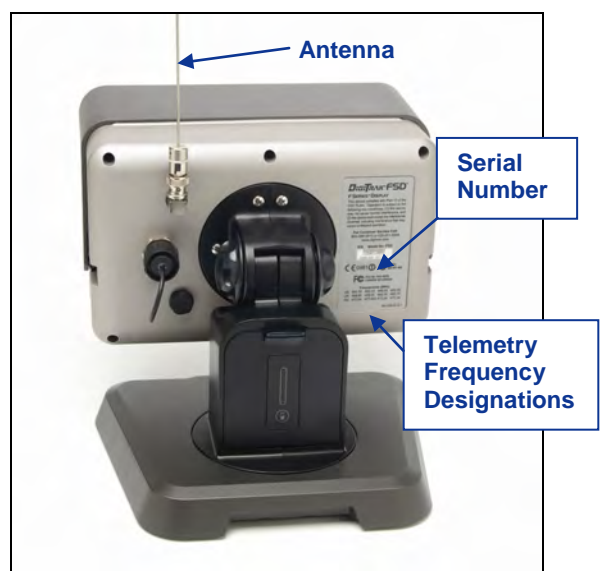

Serial Number Label on Back of FSD

match that shown on the receiver. The receiver's frequency designation is located on the serial number label inside the receiver's battery compartment (see "General Description" discussion in the *Receiver* section).

Power Options


The FSD remote can be powered by either an F Series battery pack or a 14.4 V DC power source using the DC power cable. If both a battery pack and the DC cable are installed, the remote will draw power from the battery until the battery voltage is below the DC source voltage. Install the brace insert as you would the battery when using the DC cable source (see "Installing and Removing the Battery Pack or Brace Insert" below).

Connecting the DC Power Cable

To connect the DC power cable, remove the protective cap from the DC power port on the back of the remote. Then align the four pin holes in the DC cable with the four pins in the DC power port. Push in and rotate the cable connector clockwise until the cable is secure. Install the other end of the DC cable into the DC power source.



DC Power Cable

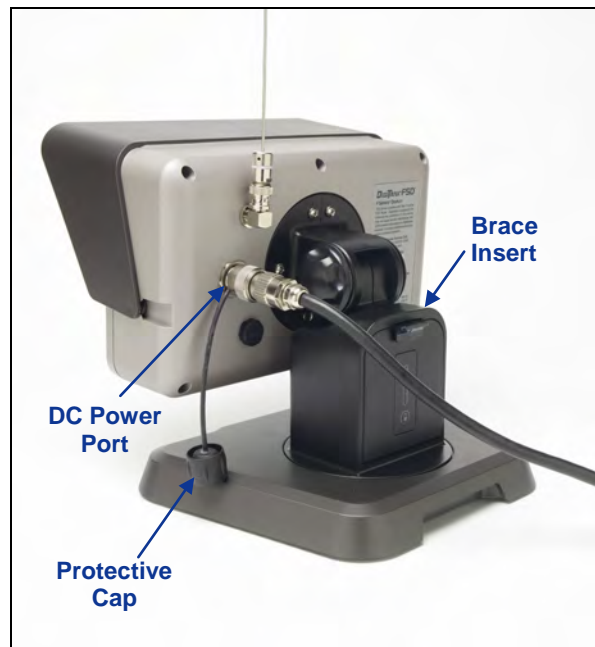

DC Power Cable Installed in FSD Remote

Installing and Removing the Battery Pack or Brace Insert


The F Series battery pack is installed in the FSD remote's battery compartment for battery power. When the remote is powered by a DC cable source, the brace insert must be installed in place of the battery pack. The brace insert is the same size as the battery pack, and it is installed and removed in the same manner as the battery pack.


To install the battery pack or brace insert, with the tab facing up and away from the FSD remote, insert the battery/brace insert into the battery compartment and push it in until the tab latches in place.

To remove the battery pack or brace insert, push down on the battery tab and pull it away from the remote until the tab is released.

Power On/Off


Once you have provided power to the FSD remote, either using the battery pack or a DC power source, then you can operate the unit. The power on and off functions are as follows.

Power On – Press the execute button  for a half-second or more to turn on the FSD unit. You will hear a tone and the main display screen will appear.

Power Off – Push and release the execute button  on the front of the remote to access the main menu screen. Push the button again to highlight the power off menu (see “Main Menu” later in this section), and then hold the button down until the unit turns off.

Keypad

The keypad to the right of the display window is used to operate the FSD remote.

Execute Button – The execute button (curved arrow) turns on the FSD unit and selects a highlighted menu option. It is also used for adjusting contrast and for executing menu options. It functions like the trigger switch on the receiver. 

Direction Buttons – The up/down, left/right arrow buttons are used to navigate through menu options. The down button also can be used to access the main menu from the remote mode (see “Main Menu” later in this section).



Audible Tones

The FSD remote has an internal speaker that emits a tone at startup and emits warning tones when the transmitter temperature increases. See “Transmitter Temperature Warning Tones” in the *Transmitter* section for a complete listing of the warning tones and what they signify.

Adjusting Screen Contrast

There are two ways to adjust the screen contrast. The easiest method is to hold in the execute button while pushing the right arrow (to lighten the display) or the left arrow (to darken the display). The other way is by using the contrast adjustment option in the main menu (see “Main Menu” later in this section).


Adjusting the Viewing Angle

The FSD remote allows you to adjust the viewing angle through a range of 180° left/right, 90° up/down, and 270° about the display's center.

Up/Down – Loosen and squeeze the two knobs on the back of the remote display, then adjust the screen as desired and tighten the knobs. If the knobs are loose, the display will hold its vertical position only until the knobs are squeezed together or the display is vibrated. Thus, DCI recommends tightening the knobs before drilling.



Loosen Display Knobs

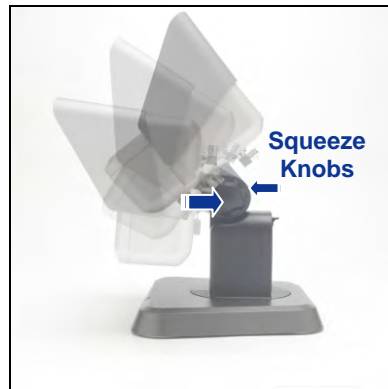

Adjust Viewing Angle



Tighten Display Knobs

Left/Right – When the FSD remote's magnetic base is secure, you can adjust the left-right viewing angle by rotating the display about the base.


Center – With the magnetic base secure, take hold of the display and rotate it to the desired orientation.

Attaching and Removing Visor

The removable visor on the FSD remote shields the screen from environmental conditions such as rain and sun. The visor is held in place by a ridge on the top of the display and channels on the sides of the display.


To install the visor, slide the pegs on the visor along the peg channels on the sides of the display until the visor locks over the ridge.

To remove the visor, push the visor back over the ridge and along the channels.

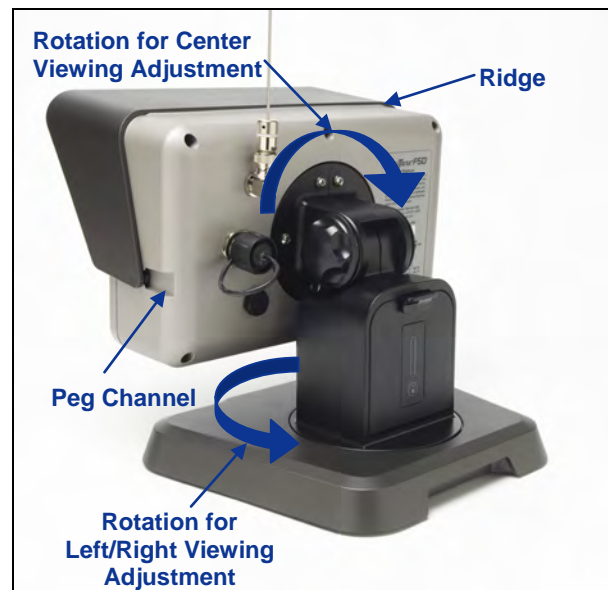

Main Menu

The main menu is accessed by pushing the down arrow button. It displays the menu options with the remote mode option automatically highlighted for selection.

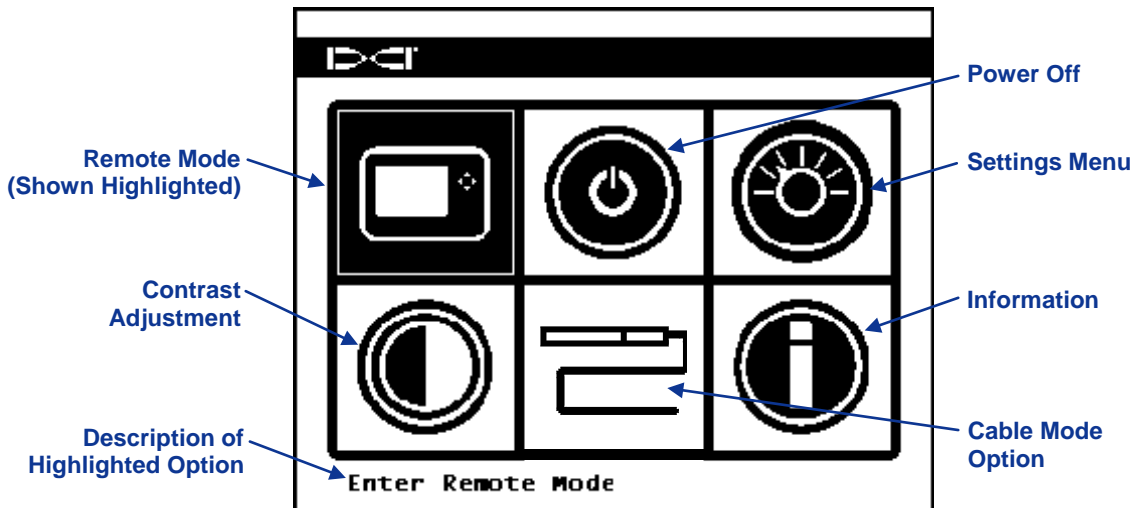

FSD Main Menu Screen

Use the arrow buttons to highlight an option, and press the execute button to select that option. The table below lists the main menu options and the result of selecting each item.


FSD Main Menu Options

	Remote Mode – Puts the FSD unit into remote radio mode. It will then display information from the receiver, including transmitter pitch, roll, temperature, battery status, depth, predicted depth, and <i>Target Steering</i> data.
	Power Off – Turns off the unit with no audible signal.
	Settings Menu – Opens the settings menu allowing you to change telemetry channels, pitch and depth units, and the receiver model. See “Settings Menu” below.
	Contrast Adjustment – Allows you to adjust the screen contrast. See below for instructions.
	Cable Mode Option – Enables use of the FC cable transmitter. Please see the <i>DigiTrak Multi-Function Cable Box (MFCB) Operator's Manual</i> for operating instructions.
	Information – Displays system information such as the software version, serial number, and current settings.

Contrast Adjustment

The screen contrast can be adjusted from the main display screen by holding in the execute button on the keypad and pressing the left or right arrow button for the desired adjustment: left for darker, right for lighter.

You can also adjust the screen contrast by using the contrast adjustment option. When this option is selected from the main menu, the following screen appears.

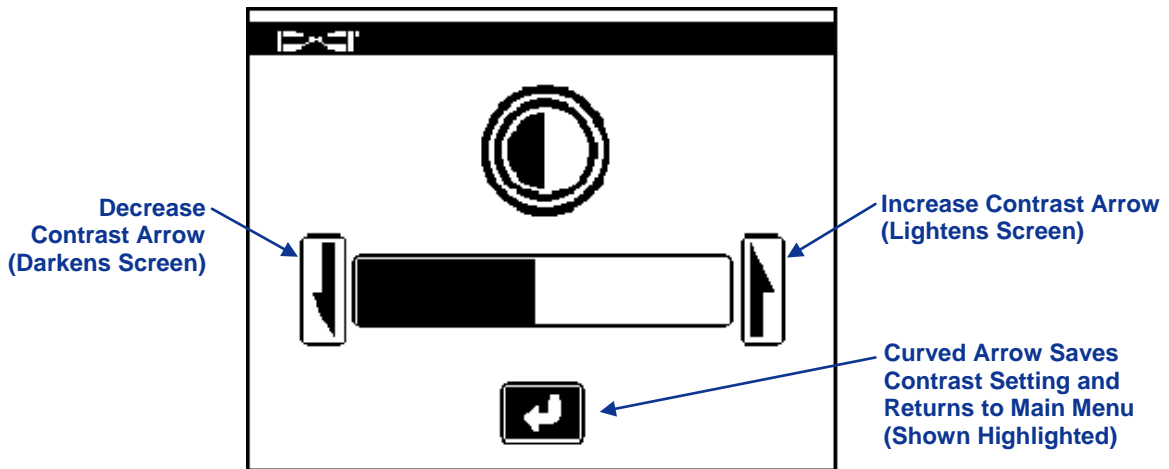


Adjust Screen Contrast

Using the left or right arrow button on the remote, select the desired action: either decrease contrast (left arrow), increase contrast (right arrow), or the curved arrow. Adjust the contrast by pressing the remote's execute button after you have selected the decrease or increase contrast arrow. Each time the execute button is pressed, the contrast will change incrementally. When the contrast is adjusted as desired, use the left/right arrow buttons on the remote to highlight the curved arrow on the screen, and then press the execute button on the keypad to return to the main menu.

Settings Menu

The settings menu, shown below, will appear after selecting the settings menu at the main menu screen.

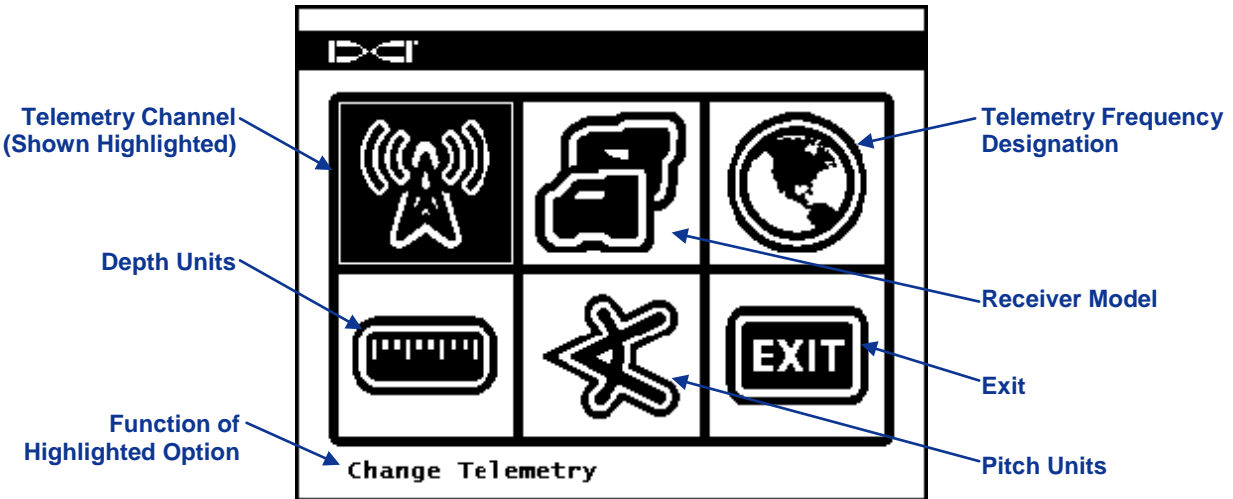

FSD Settings Menu Screen


The table below shows the menu options as they appear on the display with descriptions of their uses. Any changes that are made to the settings will be saved when the FSD unit is turned off. DCI recommends that you program the FSD settings to match the settings on your receiver.


FSD Settings Menu Options

	Telemetry Channel – Opens telemetry channel options: 1, 2, 3, and 4. The remote and the receiver must be set to the same channel and must have the same telemetry frequency designation.
	Receiver Model – Allows you to program the FSD unit to work with an F2, SE, Eclipse, or Mark Series receiver. If a receiver other than the F2 is to be used, see the <i>MFD/FSD Operator's Manual</i> .
	Telemetry Frequency Designation – Opens the telemetry region options. If you must change this setting, call DCI to determine which setting is required in your area and to verify that it matches the receiver frequency.
	Depth Units – Allows you to select distance units as either English or metric. When English units are selected, the temperature will display in degrees Fahrenheit (°F). When metric units are selected, the temperature will display in degrees Celsius (°C).
	Pitch Units – Allows you to select pitch angle units. The options are percent (%) or degree (°).
	Exit – Exits the settings menu and returns to the main menu screen. After a setting is changed, the exit option is automatically highlighted for selection.

Display Screens

Main Display Screen

The main display screen is the default screen you will see after turning on the FSD remote. It shows the transmitter pitch, roll, battery status, and temperature. The main screen also shows the FSD battery status, receiver type, telemetry channel, telemetry update meter, and *Target Steering* data (if active). To exit this screen at any time, press the down arrow  to access menu options.

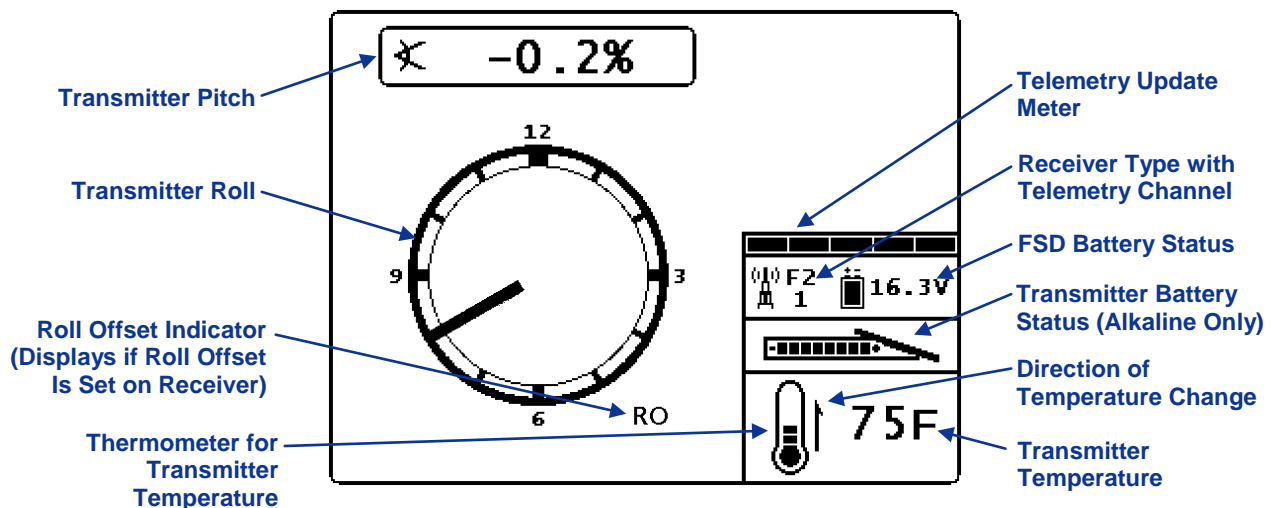

FSD Main Display Screen


The telemetry update meter displays the amount of signal being received. If less data is being received, then fewer bars are shown on the meter. If the meter is decreasing or low, you should pause before making steering decisions to ensure you have correct data. When the meter is empty, no telemetry data is being received and all transmitter information will disappear.

If the roll offset function is set on the receiver (an electronic compensation to match the transmitter's 12 o'clock position to the tool's 12 o'clock position), the letters RO for roll offset will display at the bottom right of the clock circle. For more information, see "Roll Offset Menu" in the *Receiver* section.

Depth Display Screen

The depth or predicted depth of the transmitter can be viewed on the remote display, but only when the receiver is positioned at the locate line (LL) or at the front locate point (FLP) with its trigger held in. See "Locate Points (FLP & RLP) and Locate Line (LL)" in the *Locating* section for information on correctly positioning the receiver.

When the receiver is positioned at the LL with the trigger held in, the FSD display will change to show the depth reading with arrows pointing to the ground and drill head. When the height-above-ground function is turned on, the receiver icon is shown elevated above the ground with the HAG setting displayed. In the figure below you can see that the HAG setting is 1'10" to indicate that the receiver is being held that distance above the ground. For more information on the HAG settings, see "Height-Above-Ground (HAG) Menu" in the *Receiver* section.

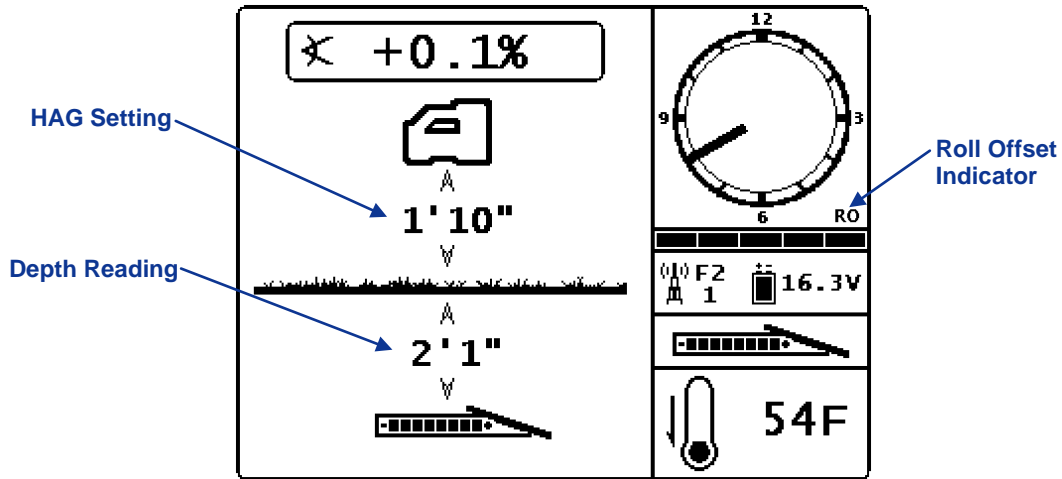


FSD Depth Display at Locate Line with HAG On

The depth will display for 10 seconds after the trigger on the receiver is released, and then the display will return to the main display screen.

When a roll offset is set at the receiver, the letters RO will display at the bottom right of the clock circle on the depth display, as shown above, and on the predicted depth display. For more information, see “Roll Offset Menu” in the *Receiver* section.

Predicted Depth Display Screen


The predicted depth display screen appears when the receiver is positioned at the FLP or the RLP (rear locate point) and the trigger is held in. However, the predicted depth is only valid at the FLP. The predicted depth display will show arrows pointing to the receiver and the predicted depth point ahead of the transmitter. For more information about the predicted depth, see the *Locating* section.

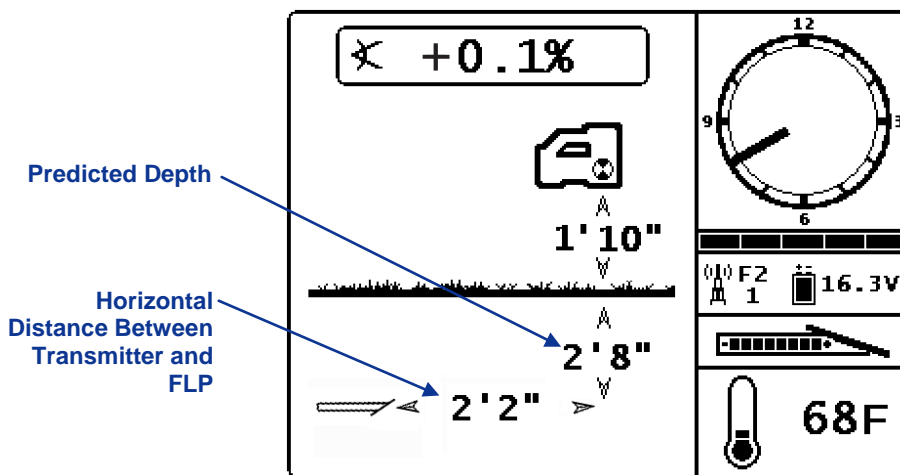

FSD Predicted Depth Display with HAG On

As on the depth display, when a roll offset is set at the receiver, the letters RO will display at the bottom right of the clock circle on the FSD predicted depth display. The example shown above does not have the RO, which indicates that a roll offset has not been set.

When the transmitter pitch information cannot be obtained at the receiver due to range restrictions or interference, the remote will assume the transmitter has a pitch of zero for depth and predicted depth readings. In this case, the remote will show the transmitter pitch as illustrated below.



Pitch Assumed Zero

Battery Charger

General Description




F Series Battery Charger System

The DigiTrak F Series Battery Charger (FBC) system includes AC and DC power cords, an AC adapter, and three rechargeable lithium-ion battery packs. The battery packs are used to power the F2 receiver and the FSD remote. Only F Series battery packs should be used in the F2 system and in the battery charger. Using another type of battery could result in system damage and voiding of the warranty.

The battery charger can operate from AC (100–240 V, 50–60 Hz, 1500 mA max.) or DC (12 V, 5000 mA max.) power sources, and power cords are provided for both. The AC power cord that is shipped with your system is standard to your global area of operation.

A fully charged F Series battery pack will power an F2 receiver for approximately 12 hours or an FSD remote for approximately 14 hours before recharging is necessary. The battery pack can be recharged approximately 400 times before the battery life is reduced by up to 50%.

To check the charge status of the F Series battery pack at any time, press the battery status button below the five LEDs on the battery. Each of the LEDs represents 20% of the battery charge. While charging, the LEDs will flash to show the current charge level. Upon completion of the charge cycle, all five LEDs will illuminate briefly and then turn off.

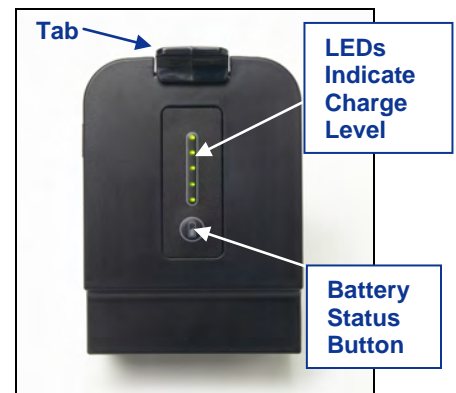


F Series Battery Pack

AC/DC Power Setup

Install either the AC adapter or the DC power cord by inserting the charger plug into the power port of the battery charger (see photo to the right) and then rotating it a quarter turn in either direction to lock it in place.

If using AC power, connect the AC power cord to the AC adapter, then plug the cord into an AC power receptacle (wall outlet). If using the DC power cord, plug it directly into the DC power source. Once powered, the orange LED on the battery charger will begin to flash and the charger will emit a series of tones.

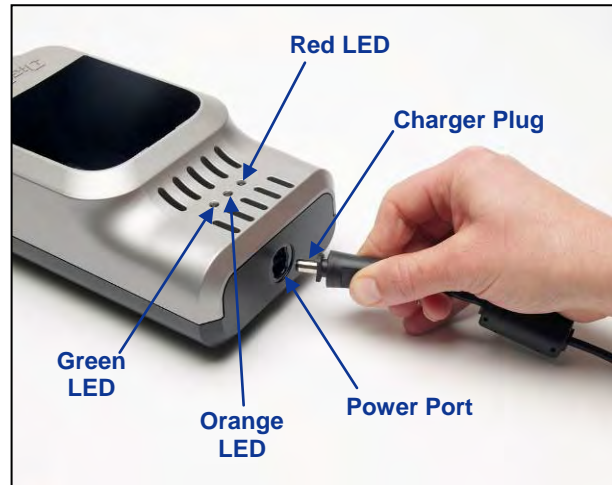

Inserting Charger Plug into Power Port

Charging a Battery Pack

With the battery charger connected to a power source and the orange LED flashing, insert a battery pack into the battery charger. The battery pack will be flush with the battery charger when it is properly inserted. The orange LED will stop flashing and turn solid, and the red LED will illuminate to indicate active charging. Do not try to charge a non-DCI battery pack or an SE NiMH battery pack.

The battery pack is fully charged when the orange LED starts flashing again, the red LED goes off, and the green LED starts flashing.



Battery Charger LED Indicators

The battery charger has three LEDs (red, orange, and green) that are on, off, or flashing, depending on the charging status. The chart below summarizes the charging status indicated by the various LED settings, including the battery's status, where applicable, and the charge time.

LEDs	Charging Status	Battery Status	Charge Time
Flashing Orange	Power supplied to charger and not charging a battery	None installed or fully charged	N/A
Solid Red and Orange	Battery charging	4–16.8 V	<3–8 hr
Flashing Red	Battery or communication fault	Varies	Varies
Solid Green	Battery Installed and receiving trickle charge	16.6–16.8 V	Approaching full charge
Flashing Green	Battery installed and fully charged	16.8–17 V	N/A
Solid Red and Green	Temperature fault (see <i>Appendix A</i> for environmental operating specifications)	Installed	Will not charge

Warnings and Precautions

DCI assumes no liability for problems that occur when you do not follow these warnings and precautions, as well as the general precautions outlined in the *Safety Precautions and Warnings* section.

	<p>WARNING: The charger is designed with adequate safeguards to protect you from shock and other hazards when used as specified within this manual. If you use the charger in a manner not specified by this document, the protection provided by the charger may be impaired. Please read this manual before using the charger.</p>
	<p>WARNING: If you transport the charger in checked baggage, be sure to remove the batteries from the charger before packing it.</p>
<p>Battery Temperature</p>	<ul style="list-style-type: none"> • The temperature of the air around the battery charger should be between +32°F to +95°F (0°C to +35°C). Charging the battery outside this range may increase charge time, harm battery performance, or reduce battery life. • It is important to maintain free airflow around the charger, especially near the top and bottom vents. • If the battery internal temperature is below +32°F (0°C) or above 113°F (+45°C), the charger will not deliver charge current and will indicate a temperature fault.
<p>Battery Voltage</p>	<ul style="list-style-type: none"> • The battery voltage should be in the range of 8 V to 16.8 V when inserted into the charger. • If the battery voltage is above 17 V, the charger will display a flashing red battery fault indicator and will not charge the battery. • If the battery voltage is between 16.8 V and 17 V, the charger will display a charge complete status. • If the battery voltage is between 4 V and 8 V, a small trickle charge current will be applied to bring the battery voltage up to 8 V. If the battery voltage does not increase to above 8 V within 2 minutes, a battery fault will be displayed and charging discontinued.
<p>Charge Time</p>	<ul style="list-style-type: none"> • The charger will fully charge a battery in less than 3 hours if the ambient temperature is inside the operating ambient temperature specification. • If the ambient temperature is above or below the operating ambient temperature range, the charger may eventually charge the battery, but the charge time will be longer than 3 hours. • If charging is not complete inside 8 hours, a battery fault will be displayed and charging discontinued.
<p>Power Input</p>	<p>Use the supplied AC/DC adapter or the cigarette lighter adapter cable to power the charger with DC power in the specified voltage range. Failure to do so could damage the charger, void the warranty, and cause a safety hazard.</p>
<p>User Serviceability</p>	<p>Do not disassemble the charger. It contains no user-serviceable parts.</p>
<p>Liquids</p>	<p>Avoid spilling liquids on the charger. Liquids spilled onto the charger could short circuit it. If liquids are accidentally spilled, send the charger to DCI for repair.</p>
<p>Battery Disposal</p>	<p>All DCI lithium-ion batteries are classified by the federal government as non-hazardous waste and are safe for disposal in the normal municipal waste stream. These batteries, however, do contain recyclable materials and are accepted for recycling by the Rechargeable Battery Recycling Corporation's (RBRC) Battery Recycling Program. Please call 1-800-8-BATTERY or go to the RBRC website at www.rbrc.org for information on recycling your used battery.</p>

Battery Pack Storage

If you plan to store the battery packs for any period of time, please follow the guidelines listed below.

- Do not store the battery pack at temperatures greater than 113°F (45°C).
- Do not store the battery pack in a fully discharged state.
- Do not store the battery pack in the battery charger.
- If the battery pack is going to be stored for an extended period of time, precharge the battery to a charge level of 20% to 30% (two to three LEDs illuminated on the battery pack).

Locating



Locating in High-Interference Area with the F2 Receiver

Introduction

Locating with the F2 system is relatively easy and intuitive, but you must understand some locating basics first. This section describes the locate points and locate line; the geometry of these elements with respect to the transmitter; the display screens encountered during locating; and the proper method for marking locate points once they are found. You are then given the standard locating procedure, including tracking “on-the-fly,” and a method for tracking the transmitter when you cannot walk over it, called off-track locating.


For a detailed explanation of how to track the transmitter when it is steep and deep, please read the information provided in *Appendix B: Projected Depth Versus Actual Depth and the Fore/Aft Offset*.

Locate Points (FLP & RLP) and Locate Line (LL)

The F2 receiver locates the transmitter by detecting three specific places in the transmitter's magnetic field: the locate points and the locate line. The locate points are indistinguishable from one another by the receiver. They represent similar points in the transmitter's field in front of and behind the transmitter. The front locate point (FLP) is ahead of the transmitter, and the rear locate point (RLP) is behind the transmitter. (See *Appendix B* for more information about the transmitter's magnetic field.)

The locate line (LL) extends 90° to the left and right of the transmitter and represents the location of the transmitter between the FLP and RLP.

The most accurate tracking requires the use of all three locations to determine the position, heading, and depth of the transmitter. Aligning the FLP and RLP reveals the heading and left/right position of the transmitter. The LL determines the central position and depth of the transmitter when the receiver is properly aligned between the FLP and RLP. The full procedure for tracking is given later in this section under "Standard Method for Locating the Transmitter."

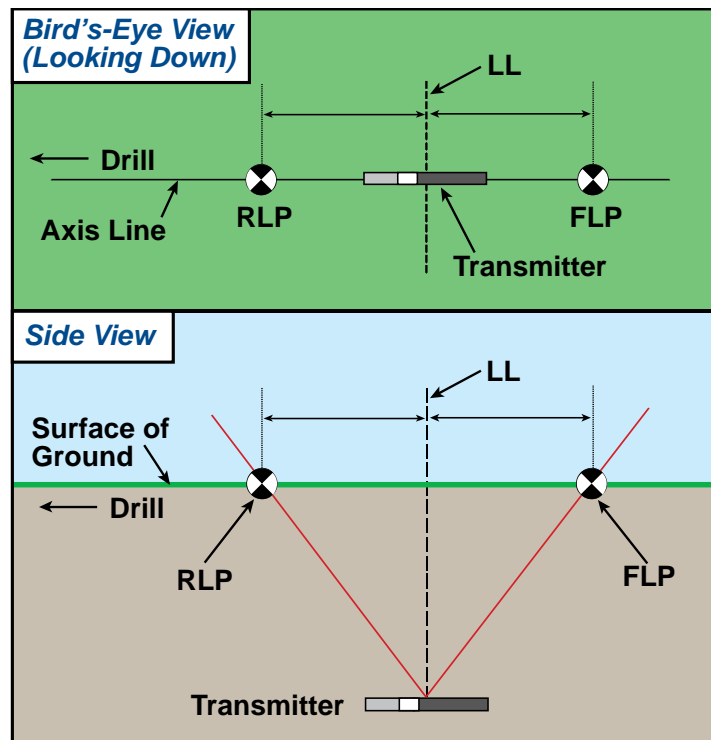

Geometry of FLP, RLP, and LL from Top (Bird's-Eye) and Side Views


Note how the RLP and FLP are equal distances from the LL when the transmitter is level.

NOTE: If the transmitter pitch exceeds $\pm 30\%$ (or $\pm 17^\circ$) and/or the transmitter depth exceeds 15 ft (4.6 m), the position of the locate line will be somewhat ahead of or behind the transmitter's actual position. In these cases, the depth displayed on the receiver is referred to as the projected depth (see *Appendix B* for more information regarding this situation).

Effects of Depth, Pitch, and Topography on Distance Between FLP and RLP

In general, the deeper the transmitter is, the further apart the FLP and RLP will be. The distance between the FLP and RLP with respect to the location of the LL is also a function of the transmitter pitch and topography. (For more information, see *Appendix B*.)

When the transmitter pitch is negative, the FLP will be further from the LL than the RLP (see figure below). When the transmitter pitch is positive, the RLP will be further from the LL than the FLP. If the ground surface or topography slopes significantly, the locations of the FLP and RLP will also be affected with respect to the LL even if the transmitter itself is level.

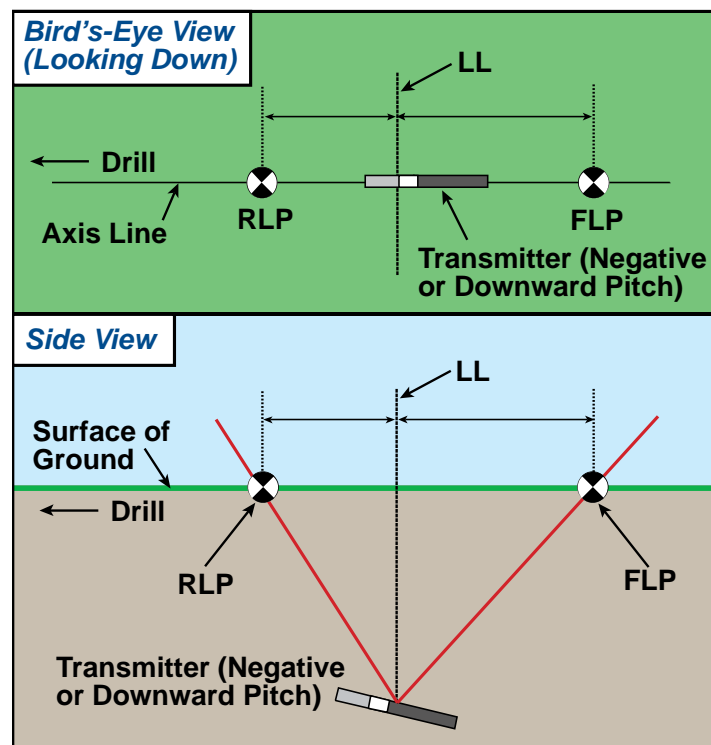

Effect of Pitch on Distance Between FLP, RLP, and LL


Note how the RLP and FLP are at different distances from the LL when the transmitter is at a negative pitch (compare with figure on previous page in which the transmitter is level).

It is possible to calculate depth (for comparison to the receiver's depth reading) using the distance between the locate points and the pitch of the transmitter. For additional information, see *Appendix C: Calculating Depth Based on Distance Between FLP and RLP*.

It is also possible to track the locate line when walkover locating is not possible, such as when surface obstructions exist or interference occurs. For more information about this feature, called off-track locating, see "Off-Track Locating" at the end of this section.

Marking Locate Points

The locate points (FLP and RLP) and the locate line (LL) must be found and accurately marked during the locating procedure. To mark a locate point after you have found it, stand with the receiver level and directly above the locate point. Look down the vertical axis that runs through the center of the display to project a plumb line to the ground (see figure below). The point where this plumb line hits the ground is the location that you should mark.

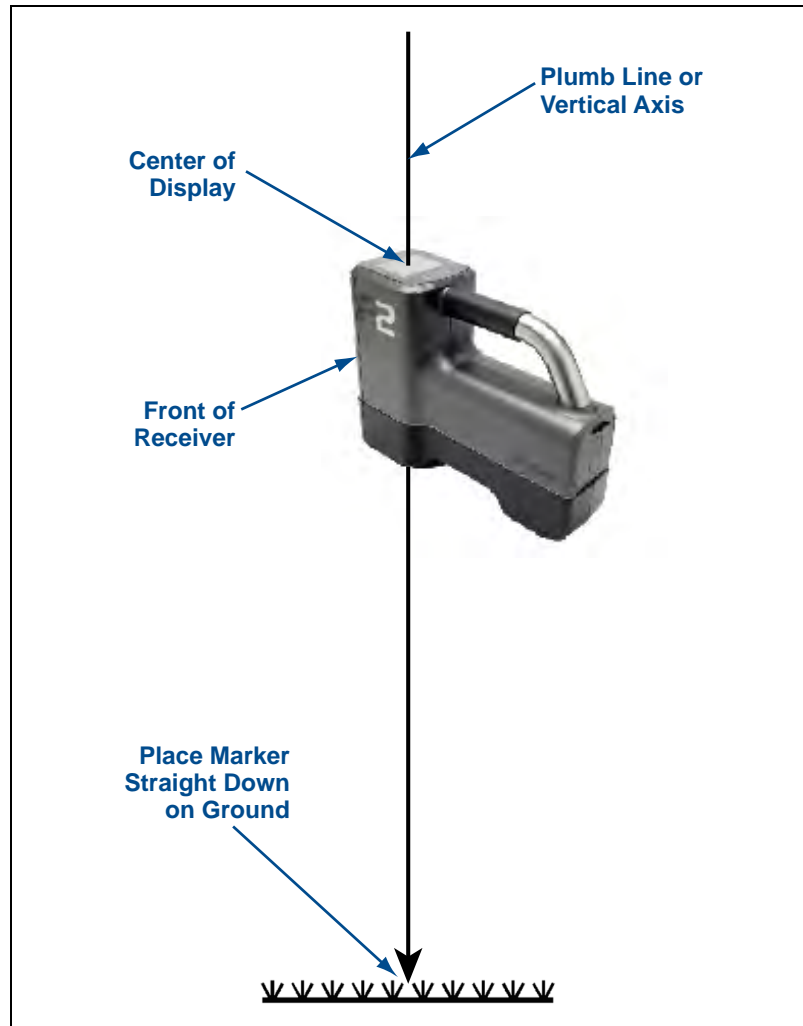


Plumb Line for Marking Locate Points

HANDLING THE RECEIVER

NOTE: It is critical that you hold the receiver correctly to obtain accurate readings. You must **hold the receiver level** at all times and **maintain a constant height-above-ground (HAG) distance** that matches the value set on the receiver (see "Height-Above-Ground (HAG) Menu" in the *Receiver* section).

Display Screens


The locate mode screen on the F2 receiver provides real-time data about the transmitter's temperature, pitch, roll, and signal strength.

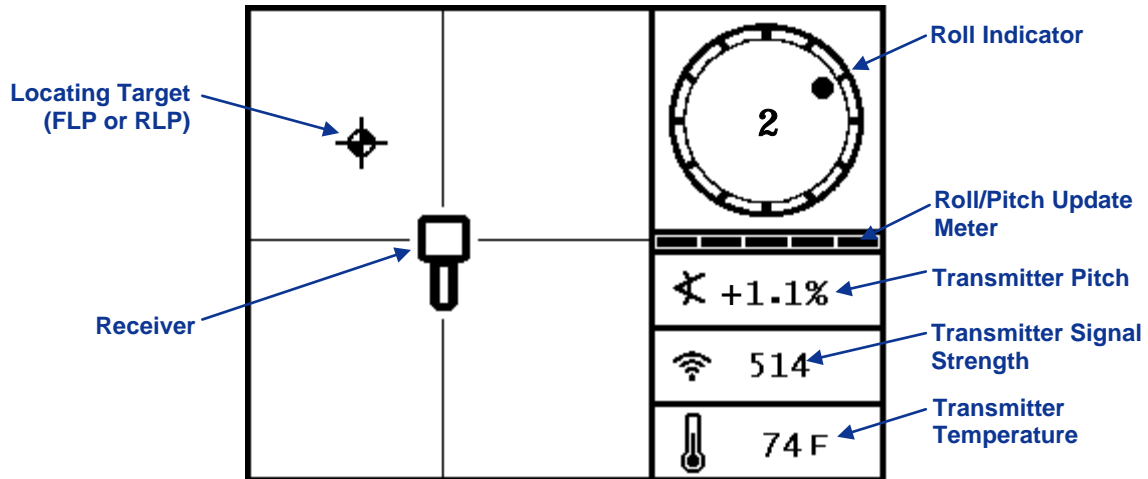

Receiver Locate Mode Screen

When the F2 receiver is positioned at the locate line between the FLP and the RLP and the trigger is held in, you will see the depth mode screen. This screen provides more detailed data about the position of the transmitter with respect to the receiver. It also shows the battery status of the transmitter.


NOTE: The receiver and transmitter must be calibrated together, with the transmitter in the drill housing, before accurate depth data can be displayed. See "Calibration Menu" in the *Receiver* section.

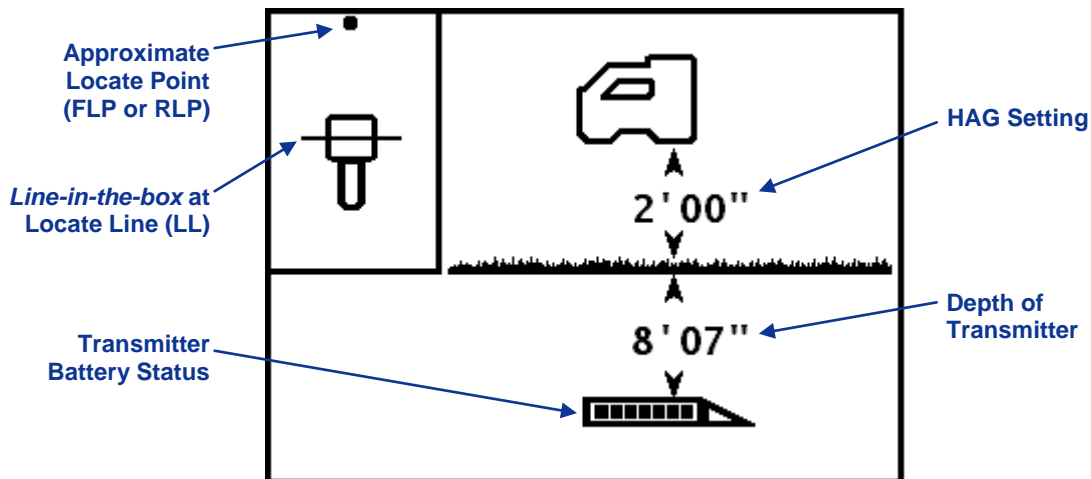

Receiver Depth Mode Screen (at LL with HAG on)


If the HAG is turned off, the receiver will have to be set on the ground for accurate depth readings. In this case, the picture on the depth mode display will show the receiver on the ground.

When the F2 receiver is positioned at one of the locate points and the trigger is held in, you will see the predicted depth screen. The value for predicted depth and horizontal distance are only valid if the receiver is at the FLP. The "R" at the top of the screen denotes that the reference signal is being taken. See "Standard Method for Locating the Transmitter" later in this section for more information on the reference lock and positioning the receiver at the locate points.

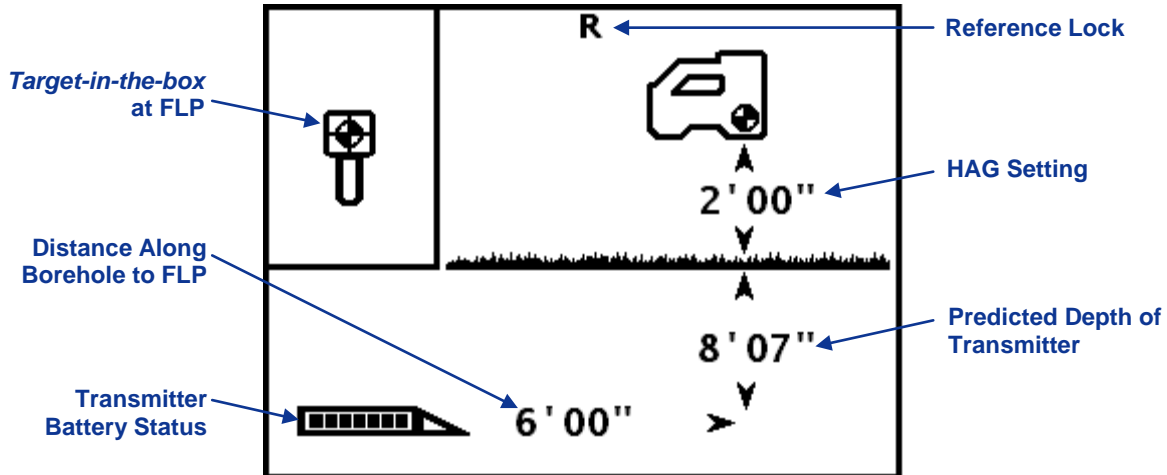

Receiver Predicted Depth Screen (at FLP with HAG on)

The depth screen can be accessed at any time during locating. However, depth and predicted depth data will only be displayed when the receiver is at the locate line and locate points, respectively. The depth screen will display as follows when the receiver is not positioned at a locate point or the locate line.

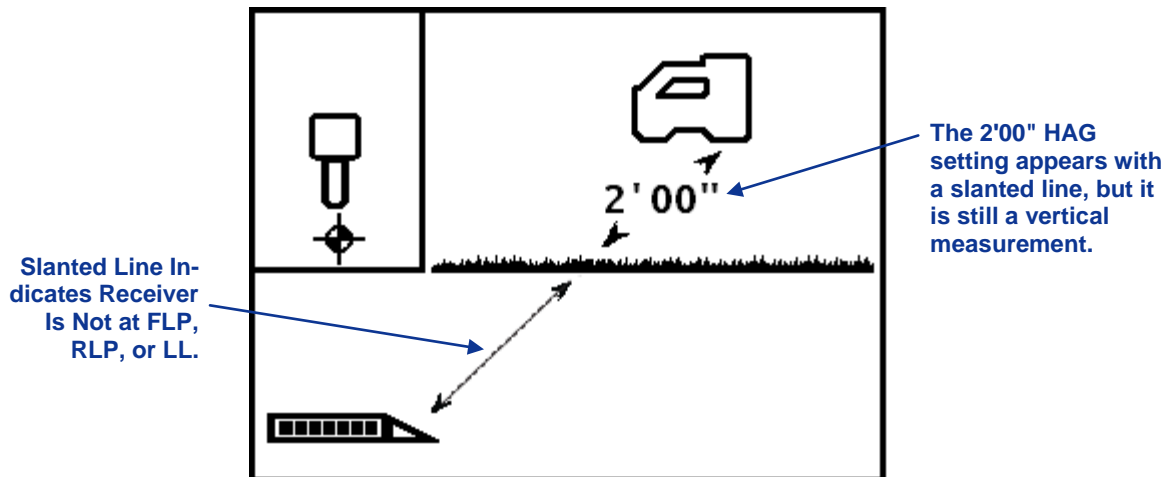

Receiver Depth Screen (when not at the LL or LP)

Interference: What It Is and How to Check for It

Before drilling (preferably before bidding on a project) the interference potential at your site should be evaluated. Interference can reduce the transmitter's range or cause variable readings and possibly result in job slowdowns. Interference comes from two different types of sources: active and passive.


Active interference is also known as electrical interference or background noise and can have varying effects upon the F2 locating equipment. Most electrical devices emit signals that can affect your ability to locate the tool accurately or to get good pitch/roll readings. Some examples of active interference are traffic signal loops, buried dog fences, cathodic protection, radio communications, microwave towers, cable TV, fiber-trace lines, utility data transmissions, security systems, power lines, and phone lines, to name a few. You can conduct a test for the presence of active interference with your F2 system; see "Conducting a Background Noise Check" below.

Passive interference can reduce the amount of signal received from the transmitter, which results in deeper than expected depth readings or a completely blocked signal. Some examples of passive interference are metal objects (such as pipes, rebar, trench plate, chain-link fence, or vehicles). Two other examples of passive interference are saltwater/salt domes and conductive earth, such as iron ore. You cannot conduct a test for the presence of passive interference with your F2 system. Conducting a thorough site investigation prior to drilling is the best method of identifying passive interference sources.

The first step in familiarizing yourself with the interference potential along your intended bore path. The next step is to conduct an electrical interference/background noise check.


Conducting a Background Noise Check

With the transmitter off, power up the receiver and walk the bore path while monitoring the signal strength on the receiver's screen, noting any locations where it changes. A general rule is that the background noise should be at least 150 points less than the transmitter's signal strength when measured at the maximum depth for that bore. In the figure below, the red flag area denotes an increase in background noise.

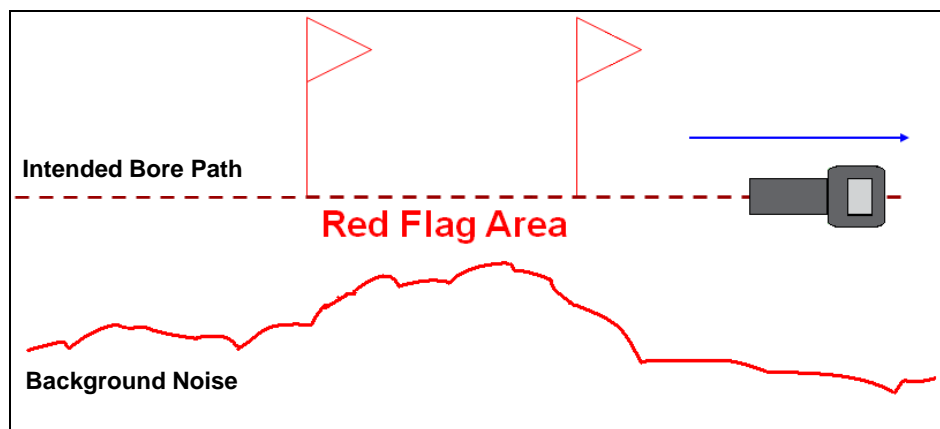

One-Person Background Signal Strength Check (No Transmitter)

At the end of the bore path, have a coworker install batteries in the transmitter to power it up. With the receiver positioned on the intended bore path, have the coworker with the transmitter step off to your side approximately 1.5 times the maximum depth of your intended bore. You will now walk back toward the launch end in tandem, maintaining this distance of 1.5X the max depth while periodically stopping to change the transmitter's pitch and roll orientation to verify the speed and accuracy of these readings on the receiver.

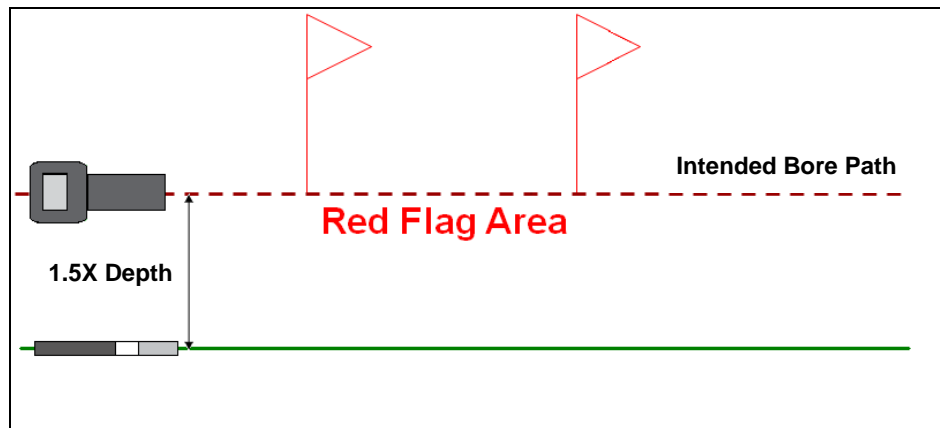

Two-Person Roll/Pitch Test with Transmitter


Suggestions for Dealing with Interference

Every job site warrants an interference/background noise check no matter how remote and interference-free your job site appears to be. If the pitch/roll information becomes erratic or is lost, move the receiver away from the interference source while staying within range of the transmitter. Separation (use of the HAG function) may also help when drilling under metallic objects, because the greater the separation between the receiver and the metal objects, the better the receiver's antenna will read the signal. Another solution is to use a transmitter with a stronger signal strength that may be able to overcome the interference/background noise.


Standard Method for Locating the Transmitter

With the F2 system, you can locate the transmitter *and* its heading while it moves, whether standing in front of it, behind it, or toward the side. You can also locate the transmitter facing either toward or away from the drill rig.

The standard method described in this section guides you to the transmitter while standing out in front of it, facing the drill rig. This is the recommended method for locating. As you continue to drill or as the bore path curves, you may be facing the last marked locate point rather than the drill rig.

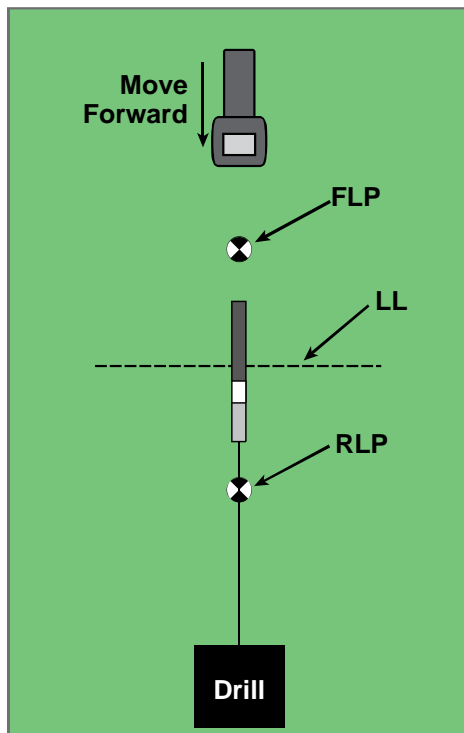

**Setup for
Standard Locating Method**

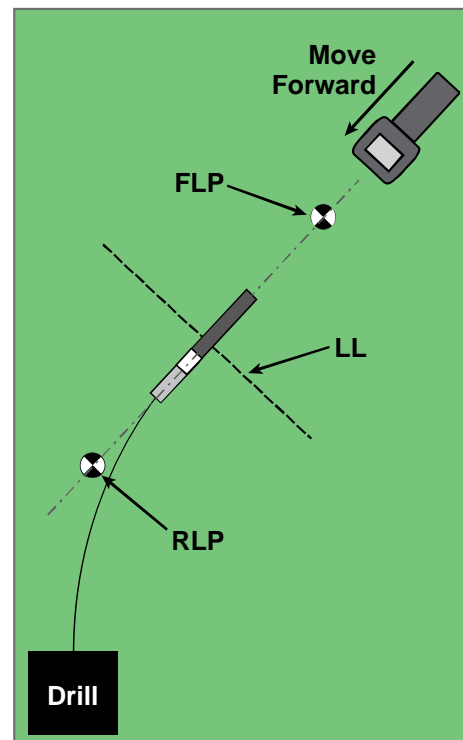

**Standard Locating Method
with a Curved Path**

Depth readings may be taken at the FLP or at the LL. It is necessary to hold the trigger in to view the depth or predicted depth and to send the depth reading to the remote display.


Finding the Front Locate Point (FLP)

The locating procedure described here assumes you are facing the drill with the transmitter below ground and between you and the drill.


1. Start with the receiver on and in locate mode.
2. Stand out in front of the drill head at a distance of approximately one rod length.

NOTE: The FLP will be found further out in front of the drill head as the drill head gets deeper.

3. Holding the receiver level, observe the position of the locating target (⊕) relative to the receiver box on the display. The figures below illustrate what you might see on the display and the actual position of the receiver, transmitter, and locate points. Note that the FLP is ahead of and to the left of the receiver, as shown in the receiver display.

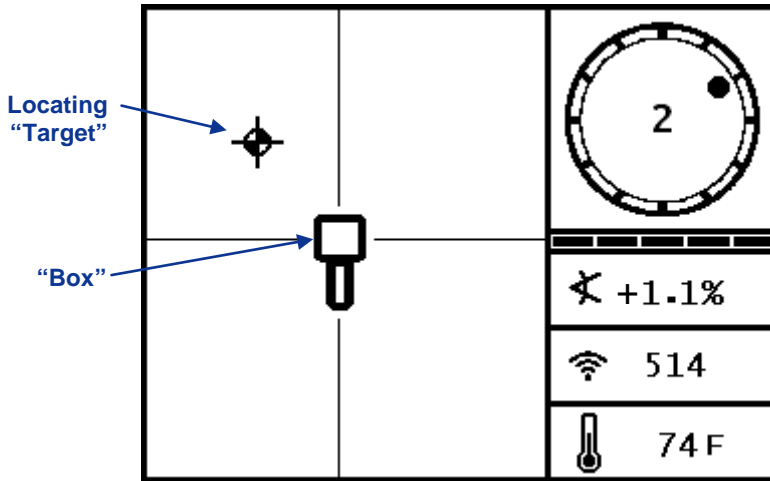


Receiver Locate Mode Screen

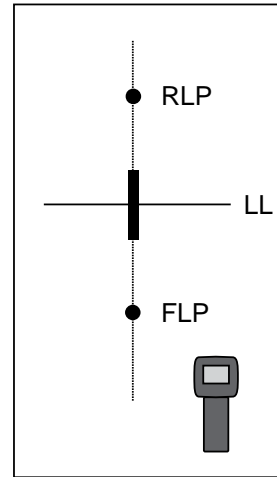


Actual Position of Receiver and Transmitter

4. Walk in the direction indicated by the picture on the screen to center the target in the box, which is forward and to the left in this example.
5. When the target is centered in the box, hold the trigger in for one second so the receiver can get a "lock" on the reference signal. The "R" symbol will appear at the top of the depth screen.

WARNING: Do not hold the trigger in unless you are precisely at the FLP (target centered in box). If you are ahead of the FLP, you will set an incorrect reference that causes a ghost locate line. In this case, you must reference again at the FLP.

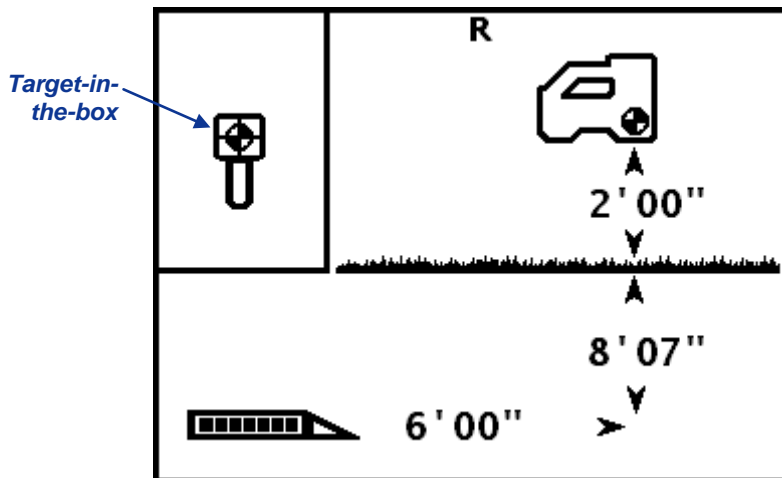

Receiver Depth Mode Screen (at FLP with HAG on)

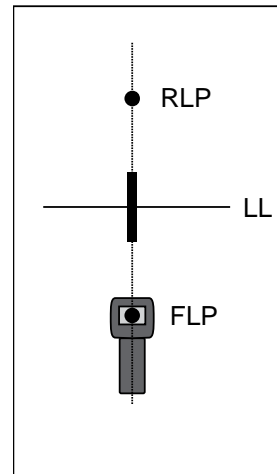

Actual Position of Receiver and Transmitter


The depth value given at the FLP is the depth the transmitter will be at when it reaches its predicted location if no steering adjustments are made.

NOTE: To verify that the signal is balanced through the receiver's antenna, carefully rotate the receiver 360° about the center of the display keeping the receiver level. The locating target should stay centered in the box. If it does not, do not continue to use the receiver and contact DCI's Customer Service Department.

6. Mark the location directly below the receiver's display screen on the ground as the FLP.

Finding the Locate Line (LL)


7. Continue to walk in the direction of the drill or the last known transmitter location. Keep the locating target on the vertical crosshair and observe that the signal strength is increasing.

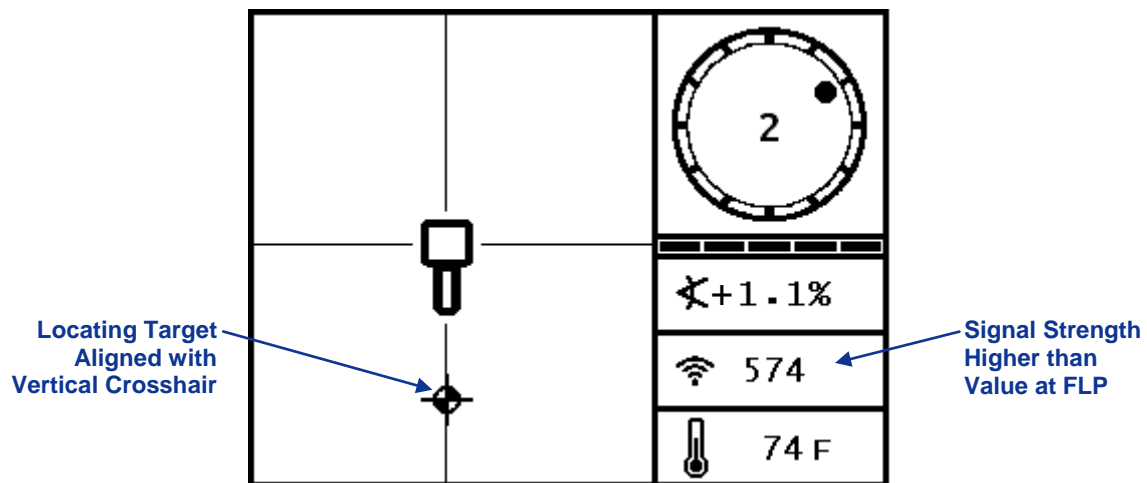

**Receiver Locate Mode Screen
(FLP Behind Receiver, Which Is Moving Toward LL)**


If the signal strength decreases, you may actually have just located the RLP. Position yourself further away from and facing the drill to locate the FLP.

8. When the target reaches the bottom of the screen, the locate line should appear and the target will change to a black ball representing the *approximate* locate point.

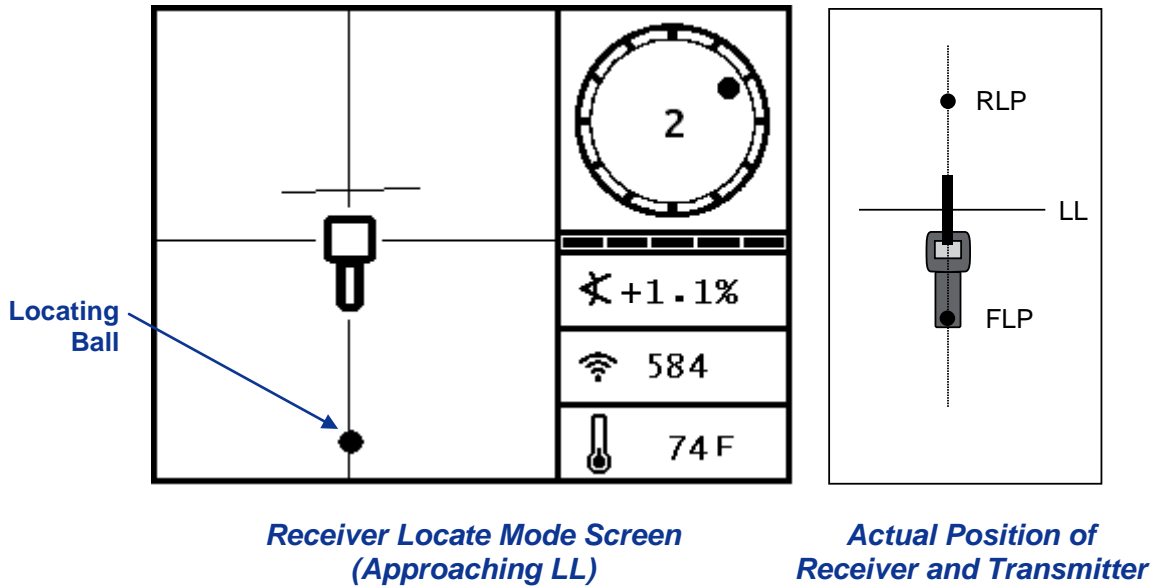

NOTE: The ball is only the approximate position of the locate point. Do not rely on the alignment of the ball with the vertical crosshair to identify the left/right position of the transmitter. The front and rear locate points must be accurately found to determine the transmitter's lateral position (heading) and to take accurate depth readings.

- Position the receiver so that the LL aligns with the horizontal crosshair.

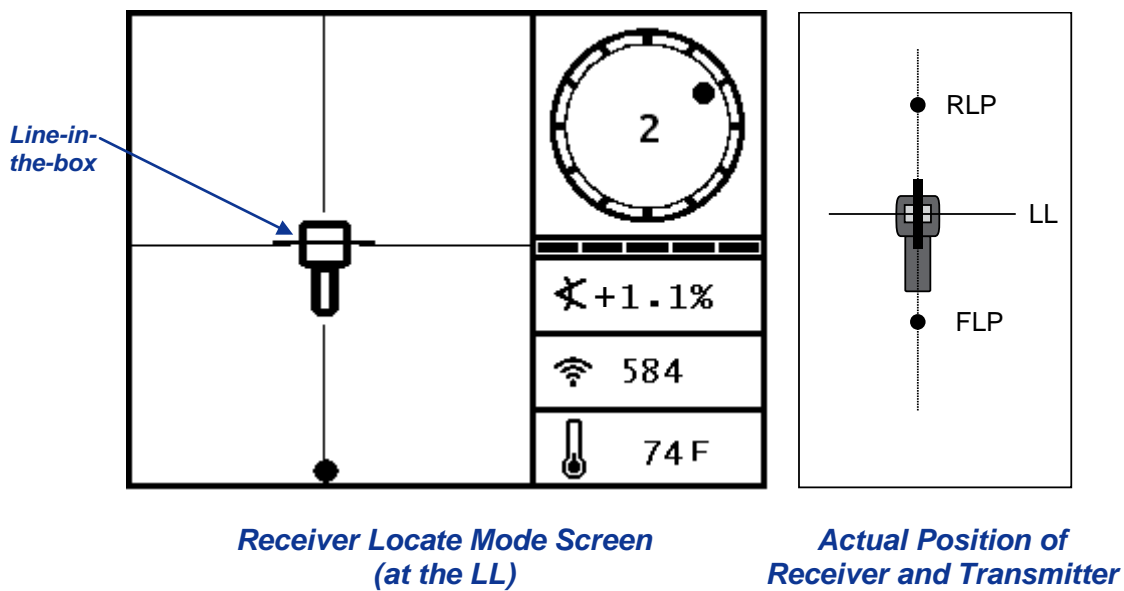

10. Mark the location directly below the receiver's display screen on the ground as the LL. You can take a depth reading here by holding in the trigger. However, to be certain you are directly above the transmitter, and your depth reading is accurate, you should first find the RLP.


NOTE: If the locate line does not appear, move the receiver in a forward/aft direction over where you think the tool is located. You will see the locating target jump from the bottom of the screen to the top (or vice versa). Then hold in the trigger; this should re-reference the receiver to the transmitter's signal and bring up the locate line.

Finding the RLP to Confirm Transmitter Heading and Position

Finding the RLP will allow you to confirm the transmitter's heading and position. Like the FLP, the RLP is represented as a target (⊕) on the receiver display. Once the RLP is found, you will connect the RLP to the FLP with a line that represents the exact heading of the transmitter. The transmitter is located at the point where this line intersects the LL.

Continue the locating procedure as follows:


11. From the LL, facing toward the drill or last transmitter location, walk forward keeping the target aligned on the vertical crosshairs.

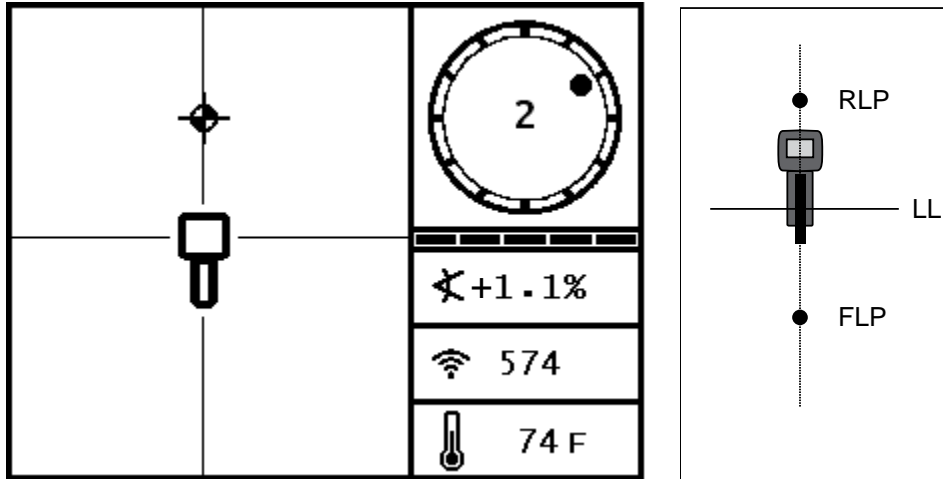

**Receiver Locate Mode Screen
(Approaching RLP from LL)**

**Actual Position of
Receiver and Transmitter**

12. Position the receiver so that the locating target is centered in the box.

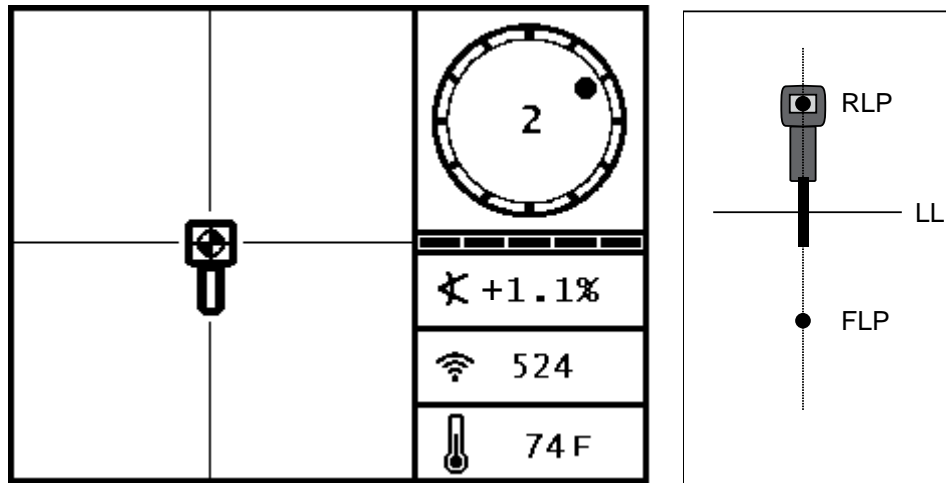


**Receiver Locate Mode Screen
(at RLP)**

**Actual Position of
Receiver and Transmitter**

13. Mark the location directly below the receiver's display screen on the ground as the RLP.
14. Connect the RLP to the FLP with a straight line. This line represents the transmitter's heading. The exact position of the transmitter is located beneath where this line and the LL cross.
15. Position the receiver at the intersection of these lines with the LL passing through the center of the box on the display and hold the trigger in to take a depth reading.

NOTE: To verify the depth reading, turn off the HAG and set the unit on the ground. Take another depth reading. This reading should be very near the depth reading obtained with the HAG on and the receiver lifted.

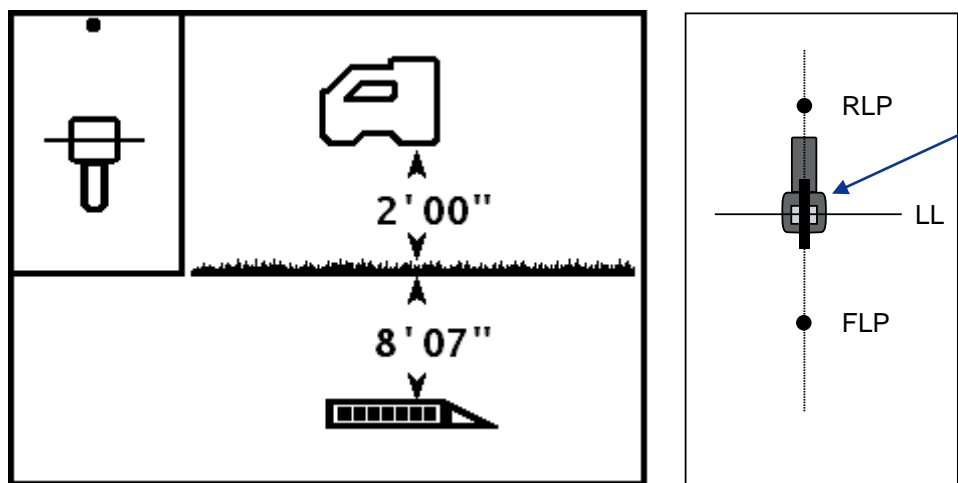


**Receiver Depth Mode Screen
(at LL)**

**Actual Position of
Receiver and Transmitter**


Tracking “On-the-Fly”

If you are running at 0% (0°) pitch over level ground, the predicted depth will be the actual depth. In this case, all locating can be done at the FLP while the tool is moving.

Once the transmitter has been found and its heading is on line, position yourself the distance of one rod length in front of the FLP on the intended bore path with the receiver facing the drill and sitting level on the ground.

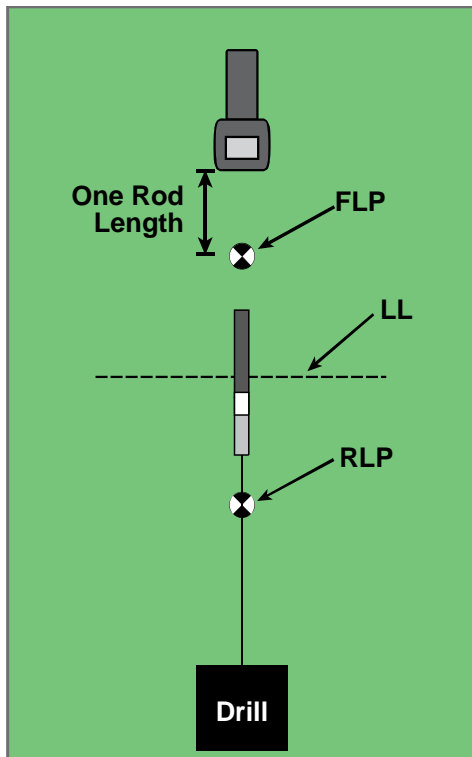


**Tracking “On-the-Fly”
with a Straight Path**

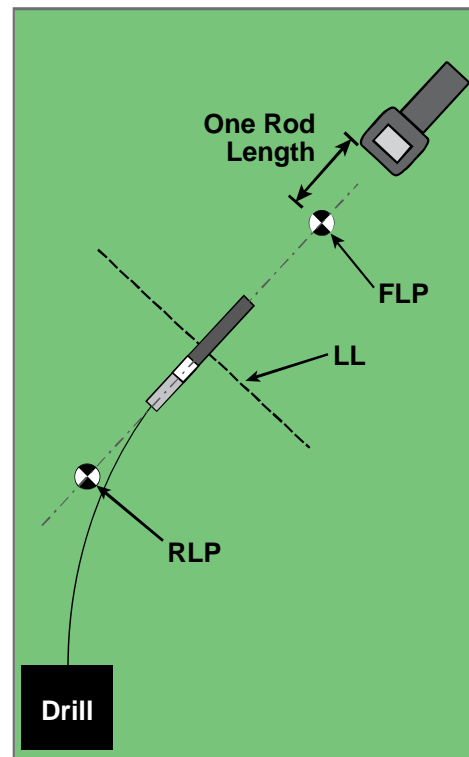

**Tracking “On-the-Fly”
with a Curved Path**

Depth readings may be taken at the FLP or at the LL. It is necessary to hold the trigger in to view the depth or predicted depth and to send the depth reading to the remote display.

WARNING: Do not hold the trigger in unless you are precisely at the FLP (target centered in box). If you are ahead of the FLP, you will set an incorrect reference that causes a ghost locate line. In this case, you must reference again at the FLP.

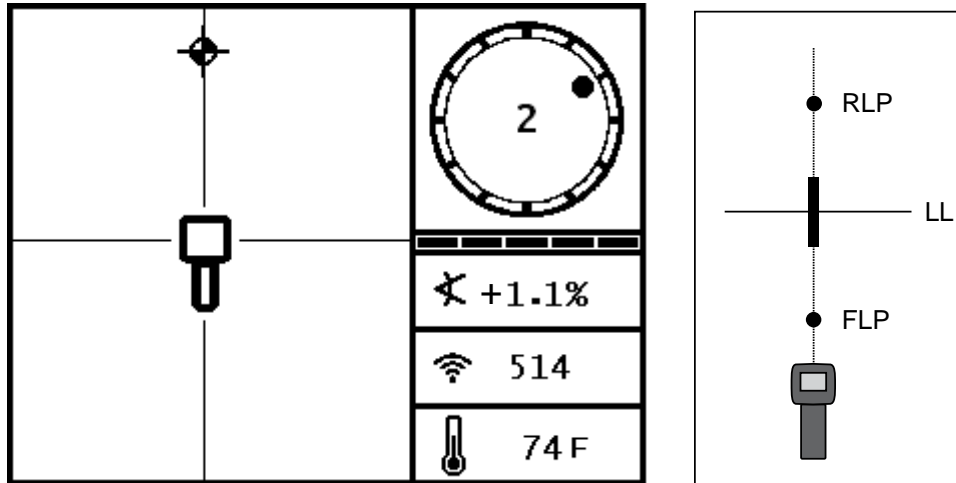

Receiver Screen Tracking "On-the-Fly"

Actual Position of Receiver and Transmitter


As the tool advances, the FLP should travel along the receiver's vertical crosshairs indicating that the tool is still on line. Once the FLP is in the box, hold the trigger in and confirm that the predicted depth reading is as expected.

Off-Track Locating

The off-track locating technique is useful when it is not possible to walk above the transmitter due to a surface obstruction or interference. Using the locate line's perpendicular relationship to the transmitter, it is possible to track the transmitter's heading and also to determine if it is maintaining its intended depth. The off-track locating method is only effective when the pitch of the transmitter matches the pitch of the topography. Ideally, pitch will be 0% (0°) under flat ground.

To explain how the off-track locating method works, we will use the example of an obstruction that is on the intended bore path, as shown in the figure below. The transmitter is about to go under the obstruction.


1. Stop drilling and find the LL of the transmitter by putting the line in the box.
2. While holding the trigger in and keeping the receiver in the same orientation, step to the side of the tool until you reach a predetermined distance (P1) from it. Move the receiver forward and aft until you can see the ball jump from the bottom of the screen to the top of the screen (or vice versa), then mark this location.

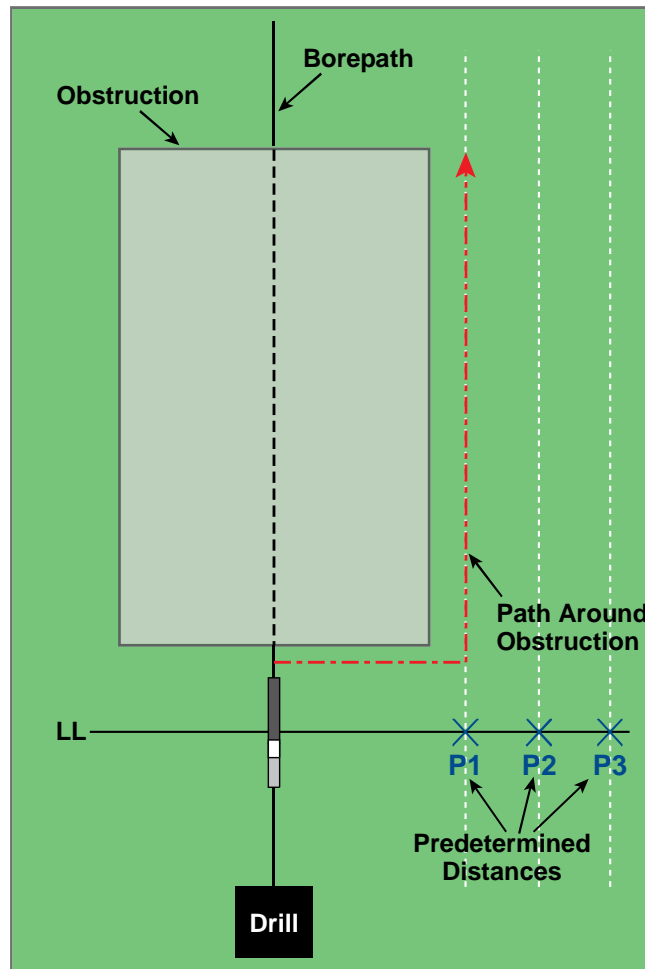

Preparing for Off-Track Locating

3. While still holding the trigger in and keeping the receiver in the same orientation, step to the side of the tool another predetermined distance (P2) further away from it. Move the receiver forward and aft until you can see the ball jump from the bottom of the screen to the top of the screen (or vice versa), then mark this location.
4. While still holding the trigger in and keeping the receiver in the same orientation, step to the side of the tool another predetermined distance (P3) further away from it. Move the receiver forward and aft until you can see the ball jump from the bottom of the screen to the top of the screen (or vice versa), then mark this location.
5. After finding the three locations P1, P2, and P3 to the side of the transmitter, connect these locations with a line. This is the locate line. Because the LL runs perpendicular (at a 90° angle) to the transmitter, it is possible to determine the heading of the tool. By comparing the slant distance or signal strength at the predetermined distances of P1, P2, and P3, as the tool progresses you can verify if the drill head is moving away from or closer to the intended bore path.

- 6. As drilling continues, the tool should be steered to maintain a constant slant distance at each of the points P1, P2, and P3. If the slant distance increases, the tool is moving away; if the slant distance decreases, the tool is moving toward the side position.

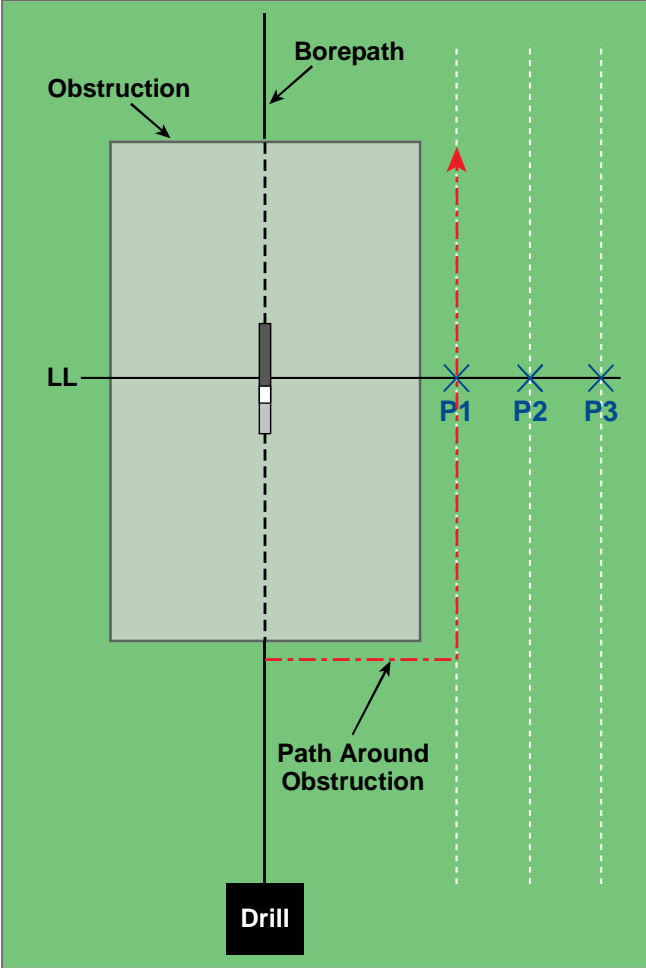

Off-Track Locating

The Target Steering Function

The *Target Steering* function allows the F2 receiver to be placed out ahead of the drill head and used as a steering target. The receiver is positioned on level ground so that it is facing in the same direction as the drilling. To activate the *Target Steering* function, you must program the receiver with the desired target depth number. The drill head can then be guided to a point directly below where the receiver has been placed using the *Target Steering* screen on the remote display.

The F2 system assumes level topography for the most accurate *Target Steering* results. It also assumes a conservative bend radius. Therefore, in situations with significant pitch changes, such as during the launch/exit ends, the up/down steering information on the remote display may not be accurate. In these situations, only the left/right steering information should be considered accurate.

Feasible Target Depth and Positioning the Receiver as a Target

The maximum distance that the receiver can be placed out ahead of the drill head for *Target Steering* is 35 ft (10.7 m). Beyond 35 ft (10.7 m) the up/down distance information becomes less accurate. Over the 35-ft range, starting with the drill head approximately level, the following parameters apply:

- The maximum depth change is approximately 4 ft (1.2 m).
- The maximum pitch change is approximately 14%.

For the most conservative *Target Steering* operation, we assume that the ideal drill path is a circular arc with a radius that accommodates the bend radius of most drill strings and products being installed. As shown in the diagram below, the feasible steering area is limited to the shaded region bounded by the two circular arcs.

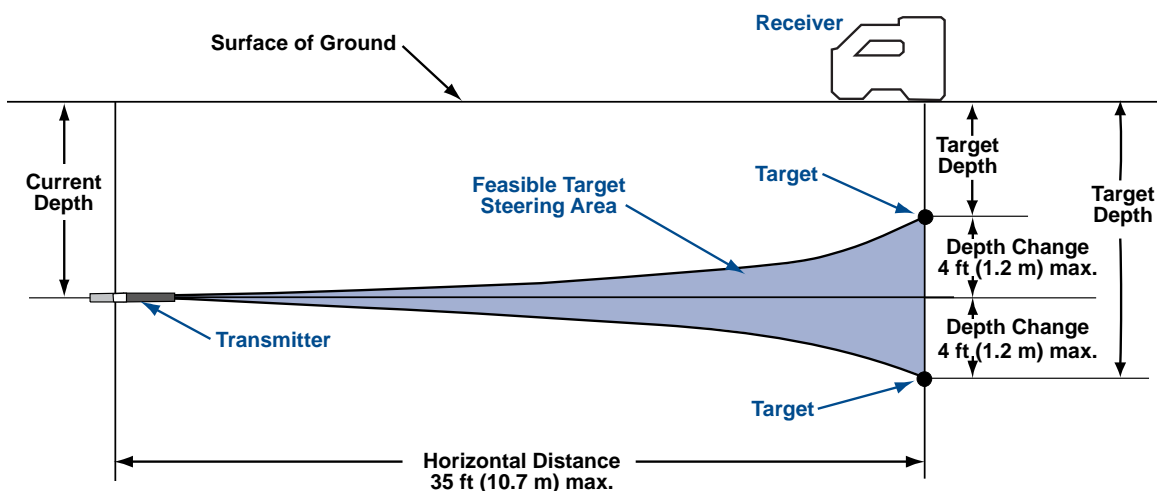


Diagram of Feasible Steering Area


Maximum depth change is approximately 4 ft (1.2 m) over horizontal distance of 35 ft (10.7 m).

The *Target Steering* procedure requires correct placement of the receiver. The receiver must be placed out in front of the transmitter with its back end (where the battery pack is inserted) facing the drill or the last locate points if drilling a curved path. The maximum horizontal distance from the transmitter that the receiver should be placed is approximately 35 ft (10.7 m). Beyond this distance the up/down information becomes less accurate.

Programming the Receiver for *Target Steering*

The receiver must be programmed with the desired target depth number. To program the receiver, see the instructions under “*Target Steering Menu*” in the *Receiver* section.


The figure below shows the receiver’s locate screen with the *Target Steering* distance at the bottom. This number is the horizontal distance that the receiver is from the transmitter. You will use this number to help you position the receiver a maximum distance of 35 ft (10.7 m) ahead of the tool.

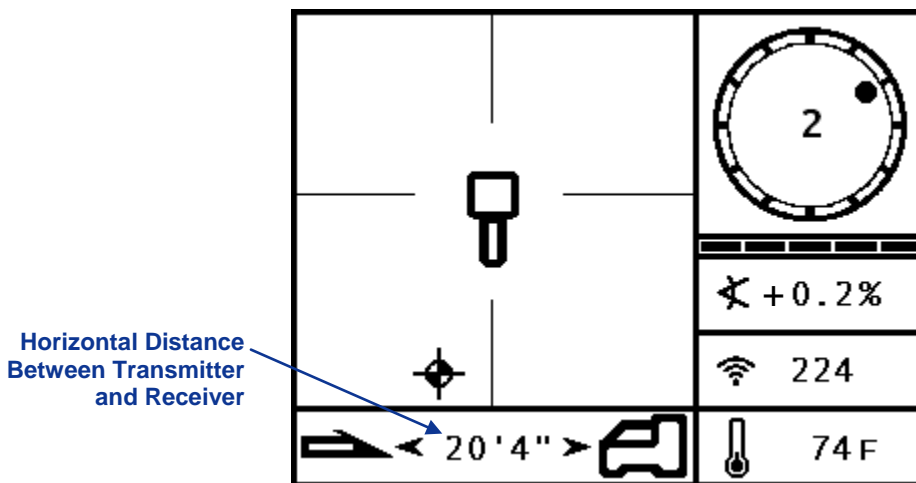

Receiver Screen with Target Depth Programmed

Steering to the Target


Once the target depth number has been entered on the receiver and the receiver has been positioned ahead of the tool as the target, then select remote mode from the remote’s main menu (see “Main Menu” in the *Remote Display* section). You will then see the *Target Steering* screen shown below.

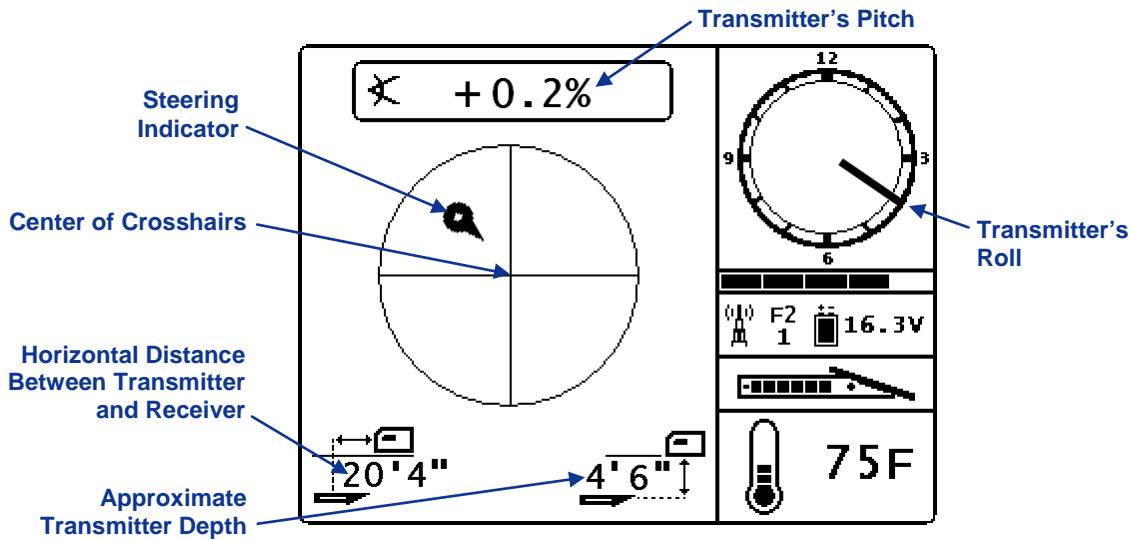

Target Steering on Remote Display

The steering indicator in this case shows that the drill head is to the left and too high for the intended path. The steering indicator should be dead center in the display if you are correctly heading to your programmed target depth. A steering command of 4 o'clock would bring the drill head toward the target. Note that, for quick viewing and interpretation, the pointed end of the steering indicator corresponds to the clock position of the head. The horizontal distance from the drill head to the receiver is indicated at the bottom left part of the display. At the bottom right, the current depth of the drill head is indicated.


A side view of the position of the receiver and of the transmitter is shown below on the left. An end view of the same setup is shown on the right.

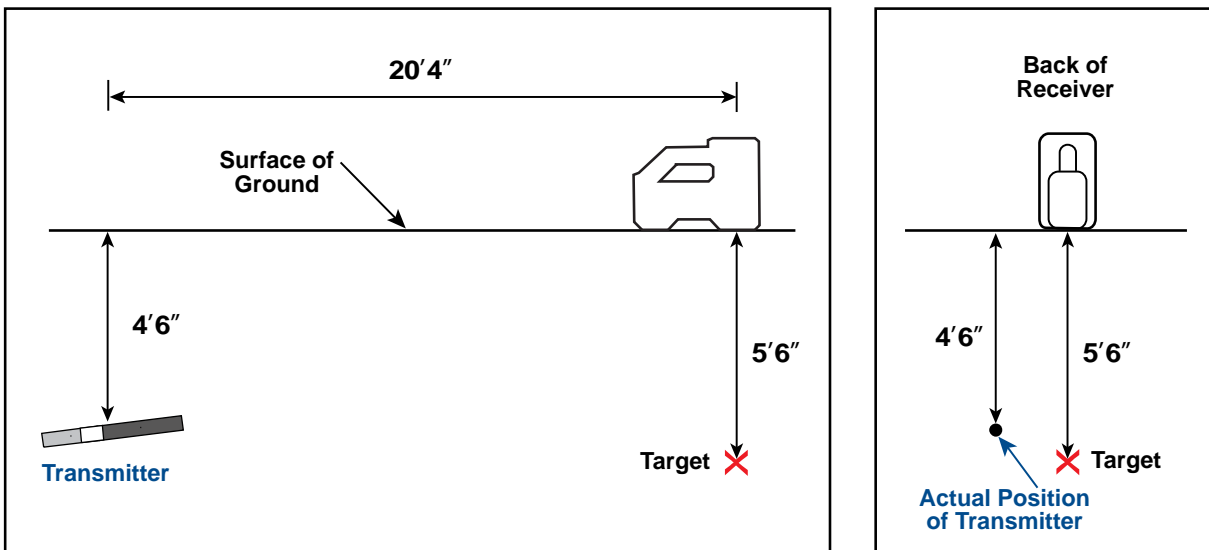

Side and End Views Showing Positions of Receiver, Transmitter, and Target

Target Steering in Interference Areas

In areas of passive and/or active interference, it may be advisable to physically elevate the receiver above the ground. In the example below, the receiver is placed 3 ft (or 1 m) above the ground. To compensate, the target depth value will be set to 8'6" (2.6 m).

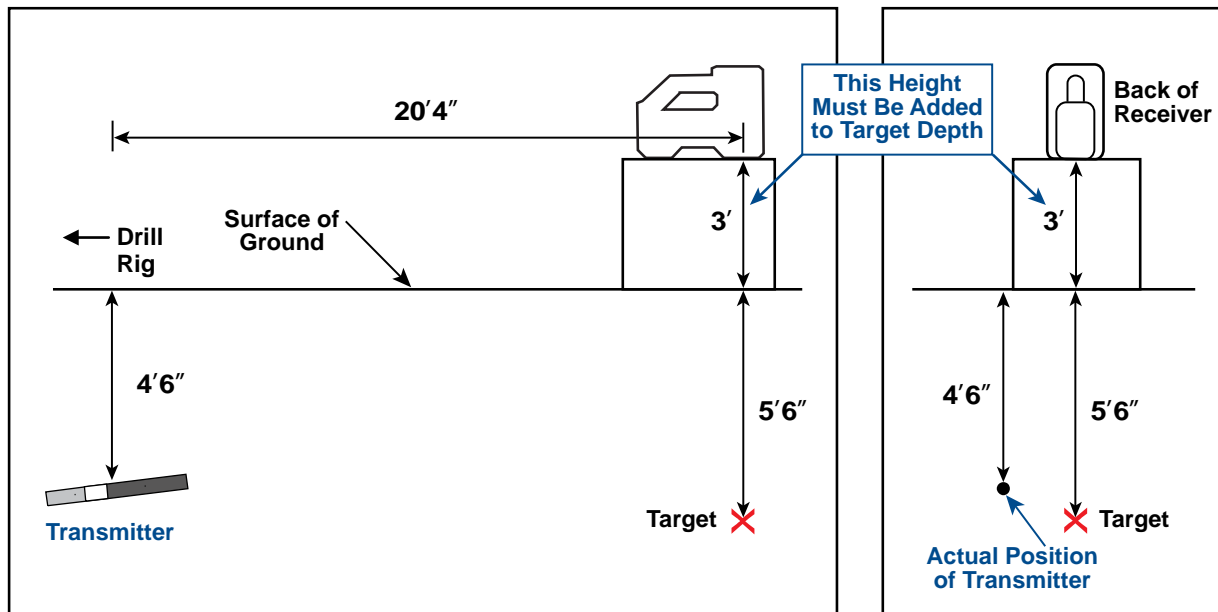

Side and Back End Views of Transmitter, Target, and Raised Receiver

Appendix A: System Specifications and Maintenance Requirements

The power requirements, environmental requirements, and equipment maintenance requirements for the DigiTrak F2 Locating System are listed below.

Power Requirements

Device (Model Number)	Operational Voltage	Operational Current
DigiTrak F2 Receiver (F2R)	14.4 V === (nominal)	300 mA max
DigiTrak F Series Display (FSD)	14.4 V === (nominal)	220 mA max
DigiTrak F Series Battery Charger (FBC)	Input 12 V === (nominal) Output 16.8 V === (nominal)	5000 mA max 1800 mA max
DigiTrak F Series Lithium-Ion Battery Pack (FBP)	14.4 V ===	4250 mA max, 65 Wh
DigiTrak FS Transmitter	1.1–1.6 V ===	400 mA max
DigiTrak FX and FXL Transmitters	2–3.6 V ===	750 mA max

Environmental Requirements

Device	Altitude	Relative Humidity	Operating Temperature
DigiTrak F2 Receiver	<16,404 ft (<5000 m)	<90%	-4° to 140°F (-20° to 60°C)
DigiTrak F Series Display	<16,404 ft (<5000 m)	<90%	-4° to 140°F (-20° to 60°C)
DigiTrak FS Transmitter	<16,404 ft (<5000 m)	<100%	-4° to 180°F (-20° to 82°C)
DigiTrak FX, FXL Transmitters	<16,404 ft (<5000 m)	<100%	-4° to 220°F (-20° to 104°C)
DigiTrak F Series Battery Charger	<13,123 ft (<4000 m)	<99% for 0-10°C <95% for 10-35°C	32° to 95°F (0° to 35°C)
DigiTrak F Series Lithium-Ion Battery Pack	<13,123 ft (<4000 m)	<99% for <10°C <95% for 10-35°C <75% for 35-60°C	-4° to 140°F (-20° to 60°C)

General Transmitter Care Instructions

- Periodically clean the spring and threads inside the battery compartment as well as the spring and threads of the battery cap to ensure a proper power connection with the batteries. An emery cloth or wire brush can be used to remove any oxidation that has built up. Be careful not to damage the battery cap O-ring; remove it while cleaning if necessary. After cleaning, use a conductive lubricant on the battery cap threads to keep the battery cap from binding in the battery compartment.
- Before use, inspect the battery cap O-ring for damage that may allow water to enter the battery compartment. Replace the 2-022 Buna-N70 type O-ring if the one installed becomes damaged.
- Placing tape around the fiberglass tube of the transmitter, if space allows, will keep the fiberglass protected from most corrosive environmental wear.
- Send in the Product Registration Card for the 90-day Limited Warranty.

Appendix B: Projected Depth Versus Actual Depth and the Fore/Aft Offset

What Happens When the Transmitter Is Steep and Deep

The signal field emitted by the transmitter, as shown in Figure B1, consists of a set of elliptical signals or flux lines. The flux lines indicate the position of the transmitter. When the transmitter is level with respect to the ground, you will find that the locate line (LL) is directly over the transmitter, and the depth displayed on the receiver is the actual depth. You will also find that the locate points (FLP and RLP) are at equal distances from the transmitter. The location of the LL is found at the intersection of the ground and the horizontal component of the flux field, and the FLP and RLP are found where the vertical components of the flux field intersect with the ground. Some of the horizontal and vertical components are identified by short yellow lines in Figure B1.

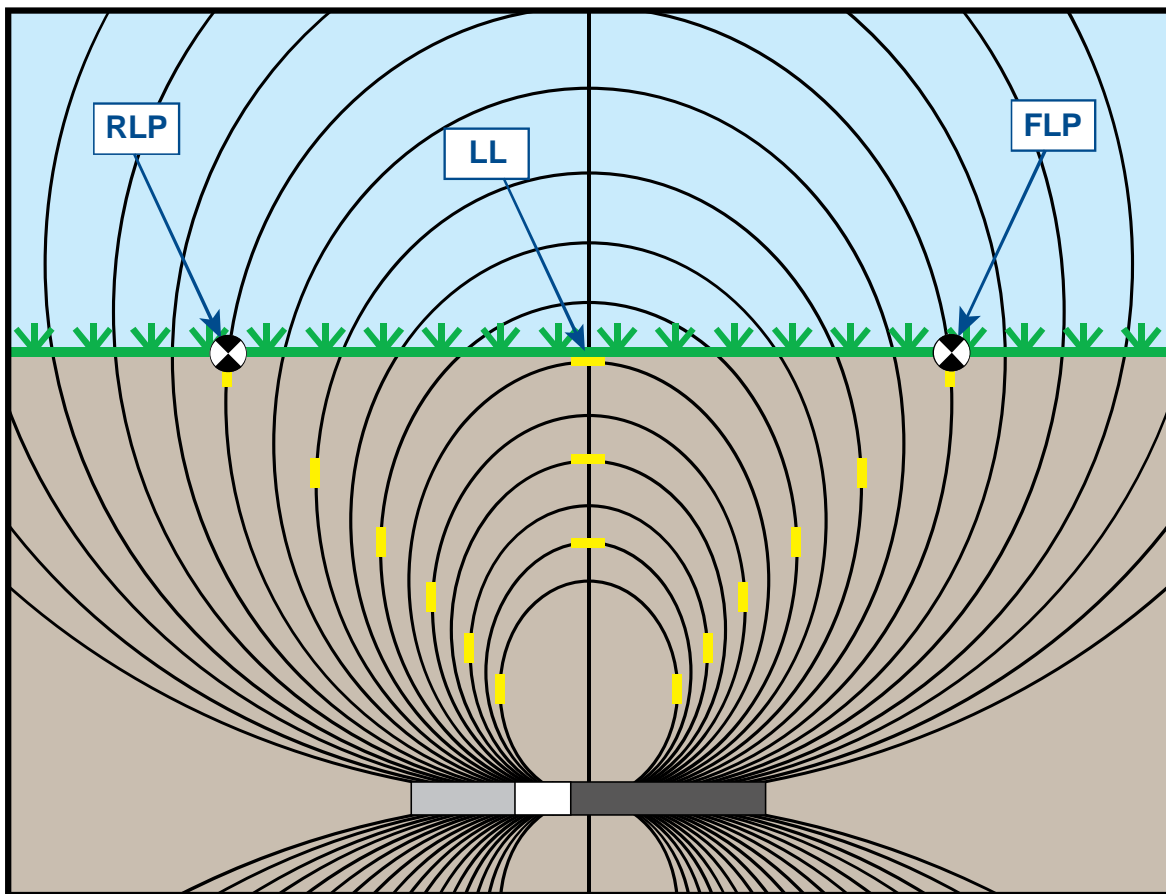


Figure B1. Flux Field and Geometry of FLP, RLP, and LL (side view)

Due to the shape of the transmitter's signal field (flux lines), when it is at a pitch greater than $\pm 30\%$ ($\pm 17^\circ$) and/or a depth of 15 ft (4.6 m) or more, the position of the locate line will be some distance ahead of or behind the transmitter's actual position. In this case, the depth displayed on the receiver becomes what is called the projected depth. The transmitter's distance ahead of or behind the locate line is called the fore/aft offset.

The projected depth and fore/aft offset, shown in Figure B2, must be accounted for when the transmitter is steep and/or deep. See the tables provided later in this appendix (Tables B1 and B2) to determine the actual depth and fore/aft offset when you know the displayed (projected) depth and pitch of the transmitter.

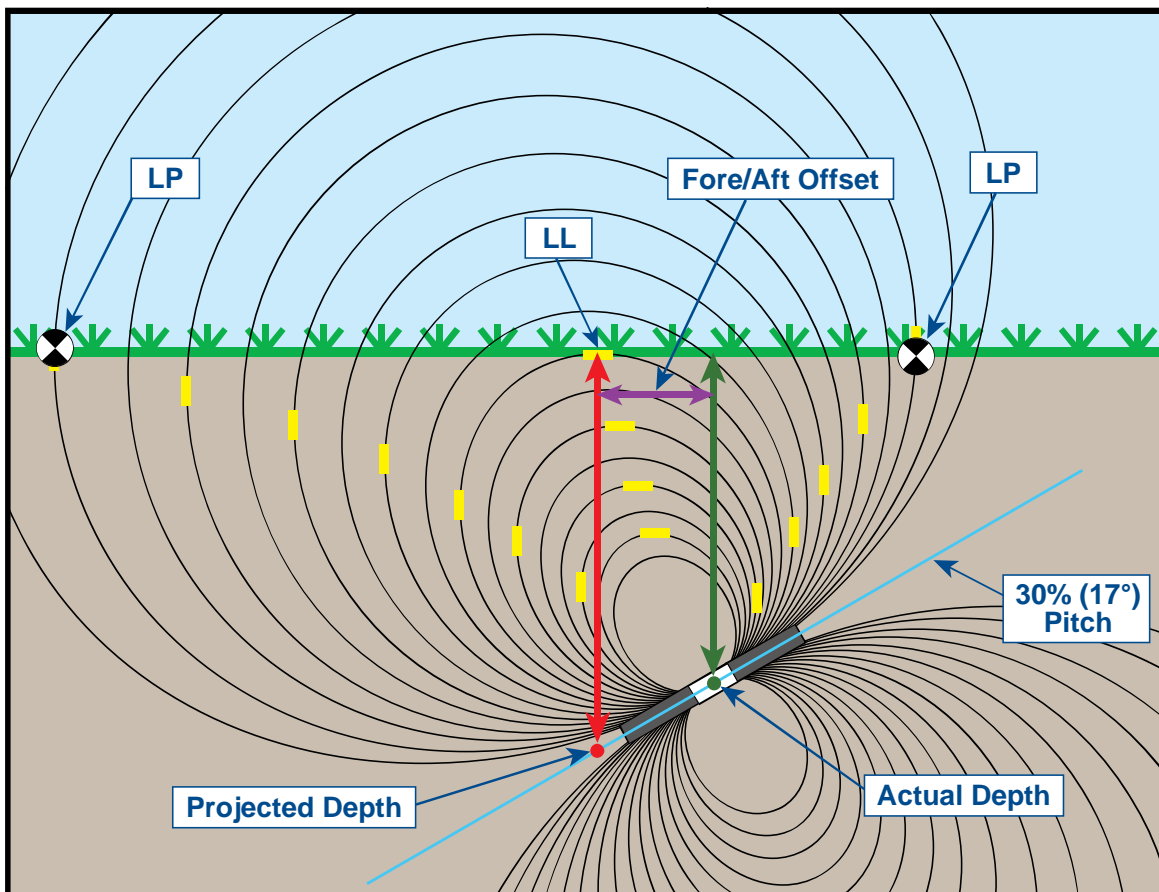


Figure B2. Projected Depth vs. Actual Depth and Fore/Aft Offset When Steep and Deep

Figure B2 above shows a transmitter positioned in a drill string that is meant to illustrate drilling at either a positive or a negative pitch—the pitch is positive if you are drilling left to right, and it is negative if you are drilling right to left. The transmitter's signal field is also pitched at the same angle as the transmitter. The locate line (LL), which is where the depth measurement is taken, is the horizontal component of the transmitter's signal field flux lines. That is, the LL is found where the flux lines are horizontal, as illustrated with short horizontal yellow lines in the figure above.

The locate points (FLP and RLP) are also shown in Figure B2. These points are located at the vertical components of the signal field, as illustrated with short vertical yellow lines in the figure above. Note that the locate points are not the same distance from the LL when the transmitter is pitched. Again, this situation requires compensation for the projected depth and the fore/aft offset.

Using the tables provided below, you can look up the actual depth (Table B1) and the fore/aft offset (Table B2) based on the receiver's depth reading (projected depth) and the transmitter pitch. You can also look up the projected depth (Table B3) if you know the required depth (actual depth) of your installation and you want to find the corresponding projected depth reading that you will see on the receiver during drilling. The final table (Table B4) provides conversion factors for determining the projected depth from the actual depth or the actual depth from the projected depth at various transmitter pitches.

Table B1 lists the projected or displayed depth values (shown in red) in 5 ft (1.52 m) increments in the first column and provides values for the actual depth (shown in green) at different transmitter pitches. For example, if you have a displayed depth of 25 ft (7.62 m) and your transmitter is at a 40% (22°) pitch, then you can see from Table B1 that the actual depth of the transmitter is 22 ft 8 in. (6.91 m).

Table B1. Determining Actual Depth from Displayed (Projected) Depth and Pitch

Pitch → Displayed Depth ↓	±10% (5.7°)	±20% (11°)	±30% (17°)	±40% (22°)	±50% (27°)	±60% (31°)	±75% (37°)	±90% (42°)	±100% (45°)
5' (1.52 m)	5' (1.52 m)	4' 11" (1.50 m)	4' 9" (1.45 m)	4' 6" (1.37 m)	4' 4" (1.32 m)	4' 2" (1.27 m)	3' 10" (1.17 m)	3' 6" (1.07 m)	2' 6" (0.76 m)
10' (3.05 m)	9' 11" (3.02 m)	9' 9" (2.97 m)	9' 5" (2.87 m)	9' 1" (2.77 m)	8' 8" (2.64 m)	8' 3" (2.51 m)	7' 7" (2.31 m)	7' (2.13 m)	5' (1.52 m)
15' (4.57 m)	14' 11" (4.55 m)	14' 8" (4.47 m)	14' 2" (4.32 m)	13' 7" (4.14 m)	13' (3.96 m)	12' 5" (3.78 m)	11' 5" (3.48 m)	10' 6" (3.20 m)	7' 6" (2.29 m)
20' (6.10 m)	19' 11" (6.07 m)	19' 6" (5.94 m)	18' 10" (5.74 m)	18' 1" (5.51 m)	17' 4" (5.28 m)	16' 6" (5.03 m)	15' 3" (4.65 m)	14' (4.27 m)	10' (3.05 m)
25' (7.62 m)	24' 11" (7.59 m)	24' 5" (7.44 m)	23' 7" (7.19 m)	22' 8" (6.91 m)	21' 8" (6.60 m)	20' 8" (6.30 m)	19' (5.79 m)	17' 6" (5.33 m)	12' 6" (3.81 m)
30' (9.14 m)	29' 10" (9.09 m)	29' 3" (8.92 m)	28' 3" (8.61 m)	27' 2" (8.28 m)	26' (7.92 m)	24' 9" (7.54 m)	22' 10" (6.96 m)	21' (6.40 m)	15' (4.57 m)
35' (10.67 m)	34' 10" (10.62 m)	34' 2" (10.41 m)	33' 1" (10.08 m)	31' 8" (9.65 m)	30' 4" (9.25 m)	28' 11" (8.81 m)	26' 8" (8.13 m)	24' 6" (7.47 m)	17' 6" (5.33 m)
40' (12.19 m)	39' 10" (12.14 m)	39' (11.89 m)	37' 9" (11.51 m)	36' 2" (11.02 m)	34' 8" (10.57 m)	33' (10.06 m)	30' 5" (9.27 m)	28' (8.53 m)	20' (6.10 m)
45' (13.72 m)	44' 9" (13.64 m)	43' 11" (13.39 m)	42' 5" (12.93 m)	40' 9" (12.42 m)	39' (11.89 m)	37' 2" (11.33 m)	34' 3" (10.44 m)	31' 7" (9.63 m)	22' 6" (6.86 m)
50' (15.24 m)	49' 9" (15.16 m)	48' 9" (14.86 m)	47' 2" (14.38 m)	45' 3" (13.79 m)	43' 4" (13.21 m)	41' 3" (12.57 m)	38' 1" (11.61 m)	35' 1" (10.69 m)	25' (7.62 m)

Table B2 lists the projected or displayed depth values in 5 ft (1.52 m) increments in the first column and provides values for the fore/aft offset (shown in purple), rounded to the nearest inch (or cm) at different transmitter pitches.

Table B2. Determining Fore/Aft Offset from Displayed (Projected) Depth and Pitch

Pitch→ Displayed Depth ↓	±10% (5.7°)	±20% (11°)	±30% (17°)	±40% (22°)	±50% (27°)	±60% (31°)	±75% (37°)	±90% (42°)	±100% (45°)
5' (1.52 m)	4" (0.10 m)	8" (0.20 m)	11" (0.28 m)	1' 3" (0.38 m)	1' 7" (0.48 m)	1' 9" (0.53 m)	2' 1" (0.64 m)	2' 5" (0.74 m)	2' 6" (0.76 m)
10' (3.05 m)	8" (0.20 m)	1' 4" (0.41 m)	1' 11" (0.58 m)	2' 6" (0.76 m)	3' 1" (0.94 m)	3' 6" (1.07 m)	4' 2" (1.27 m)	4' 9" (1.45 m)	5' (1.52 m)
15' (4.57 m)	1' (0.30 m)	2' (0.61 m)	2' 11" (0.89 m)	3' 9" (1.14 m)	4' 7" (1.40 m)	5' 4" (1.63 m)	6' 3" (1.91 m)	7' 1" (2.16 m)	7' 6" (2.29 m)
20' (6.10 m)	1' 4" (0.41 m)	2' 7" (0.79 m)	3' 10" (1.17 m)	5' (1.52 m)	6' 1" (1.85 m)	7' 1" (2.16 m)	8' 4" (2.54 m)	9' 6" (2.90 m)	10' (3.05 m)
25' (7.62 m)	1' 8" (0.51 m)	3' 3" (0.99 m)	4' 10" (1.47 m)	6' 3" (1.91 m)	7' 7" (2.31 m)	8' 10" (2.69 m)	10' 5" (3.18 m)	11' 10" (3.61 m)	12' 6" (3.81 m)
30' (9.14 m)	2' (0.61 m)	3' 11" (1.19 m)	5' 10" (1.78 m)	7' 6" (2.29 m)	9' 2" (2.79 m)	10' 7" (3.23 m)	12' 6" (3.81 m)	14' 2" (4.32 m)	15' (4.57 m)
35' (10.67 m)	2' 4" (0.71 m)	4' 7" (1.40 m)	6' 9" (2.06 m)	8' 9" (2.67 m)	10' 8" (3.25 m)	12' 5" (3.78 m)	14' 8" (4.47 m)	16' 7" (5.05 m)	17' 6" (5.33 m)
40' (12.19 m)	2' 8" (0.81 m)	5' 3" (0.69 m)	7' 9" (2.36 m)	10' (3.05 m)	12' 2" (3.71 m)	14' 2" (4.32 m)	16' 9" (5.11 m)	18' 11" (5.77 m)	20' (6.10 m)
45' (13.72 m)	3' (0.91 m)	5' 11" (1.80 m)	8' 8" (2.64 m)	11' 4" (3.45 m)	13' 8" (4.17 m)	15' 11" (4.85 m)	18' 10" (5.74 m)	21' 3" (6.48 m)	22' 6" (6.86 m)
50' (15.24 m)	3' 4" (1.02 m)	6' 7" (2.01 m)	9' 4" (2.84 m)	12' 7" (3.84 m)	15' 3" (4.65 m)	17' 8" (5.38 m)	20' 11" (6.38 m)	23' 8" (7.21 m)	25' (7.62 m)

Table B3 lists the actual depths in 5 ft (1.52 m) increments in the first column and provides projected depth values at different transmitter pitches.

Table B3. Determining Projected Depth from Actual Depth and Pitch

Pitch→ Actual Depth ↓	±10% (5.7°)	±20% (11°)	±30% (17°)	±40% (22°)	±50% (27°)	±60% (31°)	±75% (37°)	±90% (42°)	±100% (45°)
5' (1.52 m)	5' (1.52 m)	5' 2" (1.57 m)	5' 3" (1.60 m)	5' 6" (1.68 m)	5' 8" (1.73 m)	5' 11" (1.80 m)	6' 3" (1.91 m)	6' 6" (1.98 m)	7' 6" (2.29 m)
10' (3.05 m)	10' 1" (3.07 m)	10' 3" (3.12 m)	10' 7" (3.23 m)	10' 11" (3.33 m)	11' 4" (3.45 m)	11' 9" (3.58 m)	12' 5" (3.78 m)	13' (3.96 m)	15' (4.57 m)
15' (4.57 m)	15' 1" (4.60 m)	15' 5" (4.70 m)	15' 10" (4.83 m)	16' 5" (5.00 m)	17' (5.18 m)	17' 8" (5.38 m)	18' 7" (5.66 m)	19' 6" (5.94 m)	22' 6" (6.86 m)
20' (6.10 m)	20' 1" (6.12 m)	20' 6" (6.25 m)	21' 2" (6.45 m)	21' 11" (6.68 m)	22' 8" (6.91 m)	23' 6" (7.16 m)	24' 9" (7.54 m)	26' (7.92 m)	30' (9.14 m)
25' (7.62 m)	25' 2" (7.67 m)	25' 8" (7.82 m)	26' 5" (8.05 m)	27' 5" (8.36 m)	28' 4" (8.64 m)	29' 5" (8.97 m)	31' (9.45 m)	32' 6" (9.91 m)	37' 6" (11.43 m)
30' (9.14 m)	30' 2" (9.19 m)	30' 9" (9.37 m)	31' 9" (9.68 m)	32' 10" (10.01 m)	34' (10.36 m)	35' 3" (10.74 m)	37' 2" (11.33 m)	39' (11.89 m)	45' (13.72 m)
35' (10.67 m)	35' 2" (10.72 m)	35' 11" (10.95 m)	37' (11.28 m)	38' 4" (11.68 m)	36' 8" (11.18 m)	41' 2" (12.55 m)	43' 4" (13.21 m)	45' 6" (13.87 m)	52' 6" (16.00 m)
40' (12.19 m)	40' 2" (12.24 m)	41' (12.50 m)	42' 3" (12.88 m)	43' 10" (13.36 m)	45' 4" (13.82 m)	47' (14.33 m)	49' 7" (15.11 m)	52' (15.85 m)	60' (18.29 m)
45' (13.72 m)	45' 3" (13.79 m)	46' 2" (14.07 m)	47' 7" (14.50 m)	49' 3" (15.01 m)	51' (15.54 m)	52' 2" (15.90 m)	55' 9" (16.99 m)	58' 6" (17.83 m)	67' 6" (11.43 m)
50' (15.24 m)	50' 3" (15.32 m)	51' 3" (15.62 m)	52' 10" (16.10 m)	54' 9" (16.69 m)	56' 8" (17.27 m)	58' 9" (17.91 m)	61' 11" (18.87 m)	64' 11" (19.79 m)	75' (22.86 m)

Table B4 allows you to calculate the exact projected depth reading as well as the actual depth using a multiplier. Values for the multiplier, or conversion factor, are provided at different transmitter pitches.

Table B4. Conversion Factors for Calculating Exact Projected Depth or Actual Depth

Pitch →	±10% (5.7°)	±20% (11°)	±30% (17°)	±40% (22°)	±50% (27°)	±60% (31°)	±75% (37°)	±90% (42°)
From Actual to Projected Depth	1.005	1.025	1.06	1.105	1.155	1.212	1.314	1.426
From Projected to Actual Depth	0.995	0.975	0.943	0.905	0.866	0.825	0.761	0.701

For example, referring to Table B4, if you have a required (actual) depth of 24 ft (7.32 m), you can determine the receiver's projected depth reading at a 30% (17°) pitch. You will use the first row of conversion factors (From Actual to Projected Depth) to select the corresponding value for a pitch of 30%, which is 1.06. Multiply this value by the required depth, which is 24, and you will find that your receiver's projected depth reading at the locate line should display as 25 ft 5 in. (7.75 m).

Using the projected depth displayed on your receiver, you can calculate the actual depth of the transmitter using the second row of conversion factors. Select the corresponding conversion factor associated with your pitch value, then multiply that value by the projected depth. For example, if your pitch is 30% and your projected depth reading is 24 ft (7.32 m), then you would multiply 0.943 by 24 to determine that the actual depth of the transmitter is 22.63 ft or 22 ft 8 in. (6.90 m).

Notes

Appendix C: Calculating Depth Based on Distance Between FLP and RLP

It is possible to estimate the transmitter depth should the information displayed on the receiver become unreliable. This is only possible if you know the transmitter pitch and the positions of the front locate point (FLP) and the rear locate point (RLP) and if the ground surface is level.

To estimate the transmitter depth, first measure the distance between the FLP and the RLP. The pitch of the transmitter must also be reliably known. Using the Depth Estimation Table below, find the divider that most closely corresponds to the transmitter pitch. Then use the following formula to estimate the depth:

$$\text{Depth} = \frac{\text{Distance between FLP and RLP}}{\text{Divider}}$$

For example, if the transmitter pitch is 34% (or 18.8°) then the corresponding divider value (from the table) is 1.50. In this example, the distance between the FLP and the RLP is 11.5 ft (3.5 m). The depth would be:

$$\text{Depth} = \frac{11.5 \text{ ft}}{1.50} = 7.66 \text{ ft or approximately } 7.7 \text{ ft (2.35 m)}$$

Table C1. Depth Estimation Table

Pitch (% / °)	Divider	Pitch (% / °)	Divider	Pitch (% / °)	Divider
0 / 0.0	1.41	34 / 18.8	1.50	68 / 34.2	1.74
2 / 1.1	1.41	36 / 19.8	1.51	70 / 35.0	1.76
4 / 2.3	1.42	38 / 20.8	1.52	72 / 35.8	1.78
6 / 3.4	1.42	40 / 21.8	1.54	74 / 36.5	1.80
8 / 4.6	1.42	42 / 22.8	1.55	76 / 37.2	1.82
10 / 5.7	1.42	44 / 23.7	1.56	78 / 38.0	1.84
12 / 6.8	1.43	46 / 24.7	1.57	80 / 38.7	1.85
14 / 8.0	1.43	48 / 25.6	1.59	82 / 39.4	1.87
16 / 9.1	1.43	50 / 26.6	1.60	84 / 40.0	1.89
18 / 10.2	1.44	52 / 27.5	1.62	86 / 40.7	1.91
20 / 11.3	1.45	54 / 28.4	1.63	88 / 41.3	1.93
22 / 11.9	1.45	56 / 29.2	1.64	90 / 42.0	1.96
24 / 13.5	1.46	58 / 30.1	1.66	92 / 42.6	1.98
26 / 14.6	1.47	60 / 31.0	1.68	94 / 43.2	2.00
28 / 15.6	1.48	62 / 31.8	1.69	96 / 43.8	2.02
30 / 16.7	1.48	64 / 32.6	1.71	98 / 44.4	2.04
32 / 17.7	1.49	66 / 33.4	1.73	100 / 45.0	2.06

Notes

Appendix D: Reference Tables

The information and tables contained in this appendix provide further assistance for confirming the position of the transmitter. The following information is provided:

Depth Increase in Inches (Centimeters) per 10-foot (3-meter) Rod

Depth Increase in Inches (Centimeters) per 15-foot (4.6-meter) Rod

Depth Increase in Inches (Centimeters) per 10-foot (3-meter) Rod

Percent	Depth Increase		Percent	Depth Increase
1	1 (2)		28	32 (81)
2	2 (5)		29	33 (84)
3	4 (10)		30	34 (86)
4	5 (13)		31	36 (91)
5	6 (15)		32	37 (94)
6	7 (18)		33	38 (97)
7	8 (20)		34	39 (99)
8	10 (25)		35	40 (102)
9	11 (28)		36	41 (104)
10	12 (30)		37	42 (107)
11	13 (33)		38	43 (109)
12	14 (36)		39	44 (112)
13	15 (38)		40	45 (114)
14	17 (43)		41	46 (117)
15	18 (46)		42	46 (117)
16	19 (48)		43	47 (119)
17	20 (51)		44	48 (122)
18	21 (53)		45	49 (124)
19	22 (56)		46	50 (127)
20	24 (61)		47	51 (130)
21	25 (64)		50	54 (137)
22	26 (66)		55	58 (147)
23	27 (69)		60	62 (157)
24	28 (71)		70	69 (175)
25	29 (74)		80	75 (191)
26	30 (76)		90	80 (203)
27	31 (79)		100	85 (216)

Depth Increase in Inches (Centimeters) per 15-foot (4.6-meter) Rod

Percent	Depth Increase		Percent	Depth Increase
1	2 (5)		28	49 (124)
2	4 (10)		29	50 (127)
3	5 (13)		30	52 (132)
4	7 (18)		31	53 (135)
5	9 (23)		32	55 (140)
6	11 (28)		33	56 (142)
7	13 (33)		34	58 (147)
8	14 (36)		35	59 (150)
9	16 (41)		36	61 (155)
10	18 (46)		37	62 (157)
11	20 (51)		38	64 (163)
12	21 (53)		39	65 (165)
13	23 (58)		40	67 (170)
14	25 (64)		41	68 (173)
15	27 (69)		42	70 (178)
16	28 (71)		43	71 (180)
17	30 (76)		44	72 (183)
18	32 (81)		45	74 (188)
19	34 (86)		46	75 (191)
20	35 (89)		47	77 (196)
21	37 (94)		50	80 (203)
22	39 (99)		55	87 (221)
23	40 (102)		60	93 (236)
24	42 (107)		70	103 (262)
25	44 (112)		80	112 (284)
26	45 (114)		90	120 (305)
27	47 (119)		100	127 (323)

Notes

Appendix E: EU Required Documentation

Declaration of Conformity for F2 System by DCI

Notice of Telemetry Use Restrictions

Declaration of Conformity (DoC)

We, Digital Control Incorporated, 19625 62nd Ave South Suite B103 Kent, WA 98032 USA,

Declare under our own responsibility that the product

DigiTrak F2 System consisting of a receiver (F2R), remote display (FSD), transmitter (FS) or (FX) or (FXL) or (FX 19.2) or (FXL 19.2), battery pack (FBP), and battery charger (FBC)

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The product is in conformity with the following standards and/or other normative documents:

HEALTH & SAFETY (Art. 3(1)(a)): **For F2R,FSD,FBP,FXL,FX FX 19.2,FXL 19.2:** IEC 61010-1:2001, EN62311(section 4)
 Based on LVD DoC : 2006/95/EC **For FBC:** IEC 60335-2-29:2002, IEC 60335-1:2001
For FS: EN 60950-1:2006, EN 62311

EMC (Art. 3(1)(b)): **For F2R, FSD,FX,FXL, FX 19.2,FXL 19.2,FS:** ETSI EN 301 489-01 V1.8.1 (2008), ETSI 301 489-03 V1.4.1 (2002)
 Based on EMC DoC : 2004/108/EC

For FBC: EN 55022:2006 +A1:2007 Class A, EN 61000-3-3:1995 (Amended by A1:2001 and A2:2005), IEC 61000-3-3:2005, EN 61000-3-2:2006, IEC 61000-3-2:2005, EN 55024:1998 (Amended by A1:2001 and A2:2003), IEC 61000-4-6:2008, IEC 61000-4-3:2006 (Amended by A1:2007), IEC 61000-4-2:2008, IEC 61000-4-4:2004, IEC 61000-4-11:2004, IEC 61000-4-5:2005, IEC 61000-4-8:2001

SPECTRUM (Art. 3(2)): **For F2R, FSD:** ETSI EN 300 220-1 V2.1.1 (2006), ETSI EN 300 220-2V2.1.2 (2007)

For FX,FXL,FX 19.2,FXL 19.2 F2R: ETSI EN 300 330-1 V1.5.1 (2006), ETSI EN 300 330-2 V1.3.1 (2006)

For FS: ETSI EN 300 330-1 V1.7.1 (2010-02), ETSI EN 300 330-2 V1.5.1 (2010-02)

For F2R: ETSI EN 301 166-1 V1.3.1 (2008), ETSI EN 301 166-2 V1.2.2 (2008)

Compliance is claimed per reports: From NWEMC of Hillsboro, OR, USA: DIGC0022.1, DIGC0047, DIGC0049, DIGC0051, DIGC0054, DIGC0067, DIGC0071, DIGC0071.1, DIGC0107, DIGC0107.1; From TUV SÜD America, Portland, OR, USA: 231-806497101-200, 231-806497102-000; From EMCC DR. RAŠEK, Ebermannstadt, Germany: EMCC-001910PFB, EMCC-001910PFD, EMCC-001910PFG

Technical file, 555-0001-00-TCF, held by: **Digital Control GmbH**, Kurmainzer Str. 56, D-97836 Bischbrunn, Germany, Tel: +49-9394-990-990

Kent Washington USA, 21 July 2010

(Place, date)



Rudy Zeller, F2 Program Manager

(Name and signature of person responsible)

Unique identification of this DoC: 555-0001-00-DoCE Rev 02

Notice of Telemetry Use Restrictions



DigiTrak F2 receivers and F Series transmitters are classified as Class 2 radio equipment per R&TTE Directive. The following restrictions apply.

Country	Allowed Frequencies (MHz)	Limitations
Austria	458.6, 458.65, 458.7, and 458.75	
Belgium	458.6, 458.65, 458.7, and 458.75	Yes*
Bulgaria	458.6, 458.65, 458.7, and 458.75	
Cyprus	458.6, 458.65, 458.7, and 458.75	
Czech Republic	458.6, 458.65, 458.7, and 458.75	
Denmark	458.6, 458.65, 458.7, and 458.75	
Estonia	449.8, 449.85, 449.9, and 449.95	Yes*
Finland	458.6, 458.65, 458.7, and 458.75	
France	458.6, 458.65, 458.7, and 458.75	
Germany	458.6, 458.65, 458.7, and 458.75	
Greece	458.6, 458.65, 458.7, and 458.75	
Hungary	433.65 and 433.70	Yes*
Iceland	458.6, 458.65, 458.7, and 458.75	
Ireland	458.6, 458.65, 458.7, and 458.75	
Italy	458.6, 458.65, 458.7, and 458.75	Yes*
Latvia	458.6, 458.65, 458.7, and 458.75	Yes*
Liechtenstein	433.65 and 433.70	
Lithuania	458.6, 458.65, 458.7, and 458.75	Yes*
Luxembourg	458.6, 458.65, 458.7, and 458.75	Yes*
Malta	458.6, 458.65, 458.7, and 458.75	Yes*
Netherlands	451.03 and 451.09	Yes*
Norway	458.6, 458.65, 458.7, and 458.75	
Poland	458.6, 458.65, 458.7, and 458.75	
Portugal		Telemetry use not allowed
Romania	458.6, 458.65, 458.7, and 458.75	
Slovak Republic	458.6, 458.65, 458.7, and 458.75	
Slovenia	458.6, 458.65, 458.7, and 458.75	Yes*
Spain	449.8, 449.85, 449.9, and 449.95	
Sweden	458.6, 458.65, 458.7, and 458.75	
Switzerland	433.65 and 433.70	
Turkey	458.6, 458.65, 458.7, and 458.75	
United Kingdom	458.6, 458.65, 458.7, and 458.75	

*Individual user license required – check with your local authority.

There are no restrictions to the use of DigiTrak F Series transmitters that have been identified by DCI. Please check with your local authorities to verify the 12-kHz and 19.2-kHz radio bands are available for use in the region the transmitter is to be used.

Notes

LIMITED WARRANTY

Digital Control Incorporated ("DCI") warrants that when shipped from DCI each DCI Product will conform to DCI's current published specifications in existence at the time of shipment and will be free, for the warranty period ("Warranty Period") described below, from defects in materials and workmanship. The limited warranty described herein ("Limited Warranty") is not transferable, shall extend only to the first end-user ("User") purchasing the DCI Product from either DCI or a dealer expressly authorized by DCI to sell DCI Products ("Authorized DCI Dealer"), and is subject to the following terms, conditions and limitations:

1. A Warranty Period of twelve (12) months shall apply to the following new DCI Products: receivers/locators, remote displays, battery chargers and rechargeable batteries, and DataLog® modules and interfaces. A Warranty Period of ninety (90) days shall apply to all other new DCI Products, including transmitters, accessories, and software programs and modules. Unless otherwise stated by DCI, a Warranty Period of ninety (90) days shall apply to: (a) a used DCI Product sold either by DCI or by an Authorized DCI Dealer who has been expressly authorized by DCI to sell such used DCI Product; and (b) services provided by DCI, including testing, servicing, and repairing an out-of-warranty DCI Product. The Warranty Period shall begin from the later of: (i) the date of shipment of the DCI Product from DCI, or (ii) the date of shipment (or other delivery) of the DCI Product from an Authorized DCI Dealer to User.

2. DCI's sole obligation under this Limited Warranty shall be limited to either repairing, replacing, or adjusting, at DCI's option, a covered DCI Product that has been determined by DCI, after reasonable inspection, to be defective during the foregoing Warranty Period. All warranty inspections, repairs and adjustments must be performed either by DCI or by a warranty claim service authorized in writing by DCI. All warranty claims must include proof of purchase, including proof of purchase date, identifying the DCI Product by serial number.

3. The Limited Warranty shall only be effective if: (i) within fourteen (14) days of receipt of the DCI Product, User mails a fully-completed Warranty Registration Card to DCI; (ii) User makes a reasonable inspection upon first receipt of the DCI Product and immediately notifies DCI of any apparent defect; and (iii) User complies with all of the Warranty Claim Procedures described below.

WHAT IS NOT COVERED

This Limited Warranty excludes all damage, including damage to any DCI Product, due to: failure to follow DCI's user's manual and other DCI instructions; abuse; misuse; neglect; accident; fire; flood; Acts of God; improper applications; connection to incorrect line voltages and improper power sources; use of incorrect fuses; overheating; contact with high voltages or injurious substances; use of batteries or other products or components not manufactured or supplied by DCI; or other events beyond the control of DCI. This Limited Warranty does not apply to any equipment not manufactured or supplied by DCI nor, if applicable, to any damage or loss resulting from use of any DCI Product outside the designated country of use. By accepting a DCI Product and not returning it for a refund within thirty (30) days of purchase, User agrees to the terms of this Limited Warranty, including without limitation the Limitation of Remedies and Liability described below, and agrees to carefully evaluate the suitability of the DCI Product for User's intended use and to thoroughly read and strictly follow all instructions supplied by DCI (including any updated DCI Product information which may be obtained at the above DCI website). In no event shall this Limited Warranty cover any damage arising during shipment of the DCI Product to or from DCI.

User agrees that the following will render the above Limited Warranty void: (i) alteration, removal or tampering with any serial number, identification, instructional, or sealing labels on the DCI Product, or (ii) any unauthorized disassembly, repair or modification of the DCI Product. In no event shall DCI be responsible for the cost of or any damage resulting from any changes, modifications, or repairs to the DCI Product not expressly authorized in writing by DCI, and DCI shall not be responsible for the loss of or damage to the DCI Product or any other equipment while in the possession of any service agency not authorized by DCI.

DCI reserves the right to make changes in design and improvements upon DCI Products from time to time, and User understands that DCI shall have no obligation to upgrade any previously manufactured DCI Product to include any such changes.

THE FOREGOING LIMITED WARRANTY IS DCI'S SOLE WARRANTY AND IS MADE IN PLACE OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY IMPLIED WARRANTY ARISING FROM COURSE OF PERFORMANCE, COURSE OF DEALING, OR USAGE OF TRADE, ALL OF WHICH ARE HEREBY DISCLAIMED AND EXCLUDED. If DCI has substantially complied with the warranty claim procedures described below, such procedures shall constitute User's sole and exclusive remedy for breach of the Limited Warranty.

LIMITATION OF REMEDIES AND LIABILITY

In no event shall DCI or anyone else involved in the creation, production, or delivery of the DCI Product be liable for any damages arising out the use or inability to use the DCI Product, including but not limited to indirect, special, incidental, or consequential damages, or for any cover, loss of information, profit, revenue or use, based upon any claim by User for breach of warranty, breach of contract, negligence, strict liability, or any other legal theory, even if DCI has been advised of the possibility of such damages. In no event shall DCI's liability exceed the amount User has paid for the DCI Product. To the extent that any applicable law does not allow the exclusion or limitation of incidental, consequential or similar damages, the foregoing limitations regarding such damages shall not apply.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This Limited Warranty shall be governed by the laws of the State of Washington.

WARRANTY CLAIM PROCEDURES

1. If you are having problems with your DCI Product, you must first contact the Authorized DCI Dealer where it was purchased. If you are unable to resolve the problem through your Authorized DCI Dealer, contact DCI's Customer Service Department in Kent, Washington, USA at the above telephone number between 6:00 a.m. and 6:00 p.m. Pacific Time and ask to speak with a customer service representative. (The above "800" number is available for use only in the USA and Canada.) Prior to returning any DCI Product to DCI for service, you must obtain a Return Merchandise Authorization (RMA) number. Failure to obtain a RMA may result in delays or return to you of the DCI Product without repair.

2. After contacting a DCI customer service representative by telephone, the representative will attempt to assist you in troubleshooting while you are using the DCI Product during actual field operations. Please have all related equipment available together with a list of all DCI Product serial numbers. It is important that field troubleshooting be conducted because many problems do not result from a defective DCI Product, but instead are due to either operational errors or adverse conditions occurring in the User's drilling environment.

3. If a DCI Product problem is confirmed as a result of field troubleshooting discussions with a DCI customer service representative, the representative will issue a RMA number authorizing the return of the DCI Product and will provide shipping directions. You will be responsible for all shipping costs, including any insurance. If, after receiving the DCI Product and performing diagnostic testing, DCI determines the problem is covered by the Limited Warranty, required repairs and/or adjustments will be made, and a properly functioning DCI Product will be promptly shipped to you. If the problem is not covered by the Limited Warranty, you will be informed of the reason and be provided an estimate of repair costs. If you authorize DCI to service or repair the DCI Product, the work will be promptly performed and the DCI Product will be shipped to you. You will be billed for any costs for testing, repairs and adjustments not covered by the Limited Warranty and for shipping costs. In most cases, repairs are accomplished within 1 to 2 weeks.

4. DCI has a limited supply of loaner equipment available. If loaner equipment is required by you and is available, DCI will attempt to ship loaner equipment to you by overnight delivery for your use while your equipment is being serviced by DCI. DCI will make reasonable efforts to minimize your downtime on warranty claims, limited by circumstances not within DCI's control. If DCI provides you loaner equipment, your equipment must be received by DCI no later than the second business day after your receipt of loaner equipment. You must return the loaner equipment by overnight delivery for receipt by DCI no later than the second business day after your receipt of the repaired DCI Product. Any failure to meet these deadlines will result in a rental charge for use of the loaner equipment for each extra day the return of the loaner equipment to DCI is delayed.