

# Owner's Manual & Safety Instructions

**Save This Manual** Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

17d

**63477**



## **3/4 HP SUBMERSIBLE UTILITY PUMP**



Visit our website at: <http://www.harborfreight.com>  
Email our technical support at: [productsupport@harborfreight.com](mailto:productsupport@harborfreight.com)

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2017 by Harbor Freight Tools®. All rights reserved.  
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.  
Tools required for assembly and service may not be included.

### **⚠ WARNING**

**Read this material before using this product.  
Failure to do so can result in serious injury.  
SAVE THIS MANUAL.**

## Before start-up, note the following:

The Pump must be connected to a Ground Fault Circuit Interrupter (GFCI) protected receptacle which has been installed according to regulations. The receptacle must have a supply voltage of 120 VAC at 60 Hz.

## CAUTION

This Pump has been evaluated for use with water only.

## ⚠WARNING

**IMPORTANT! For your own safety – before starting to run the Pump, please have the following items checked by an expert:**

1. Risk of electric shock – This Pump is supplied with a grounding conductor and grounding-type attachment plug. To reduce the risk of electric shock, be certain that it is connected only to a properly grounded, grounding-type receptacle.
2. Risk of electric shock – This Pump has not been investigated for use in swimming pool areas.
3. The electrical connections must be protected from moisture.
4. If there is danger of flooding, the electrical connections must be taken to higher ground.
5. Circulation of caustic fluids, as well as the circulation of abrasive materials, must be avoided at all costs.
6. The Pump must be protected from frost.
7. The Pump must be protected from running dry.
8. Access by children should also be prevented with appropriate measures.
9.  **To prevent death from electric shock, Pump must be connected only to a GFCI protected outlet.**
10. Do not use an extension cord with this item.
11. **WARNING:** The cord of this product contains lead and/or di (2-ethylhexyl) phthalate (DEHP), chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. (California Health & Safety Code § 25249.5, *et seq.*)
12. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
13. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

## Fluid Type

The Pump is designed for use with water with a maximum temperature of 95° F (35°C). Do not use the Pump for other fluids, especially not fuels, cleaning fluids, or other chemical products.



## Specifications

Electrical Rating	120VAC / 60Hz / 8.5A
Power Cord Length	25'
Maximum Flow @ 0' Head Lift	4400 GPH
Maximum Head Lift @ 0 GPH Flow	40'
Discharge Port	1-1/4" NPT
Discharge Port Adapter	1-1/4" NPT to 3/4" garden hose thread

## Installation

The submersible motor Pump must be installed in a stationary position with either:

- a. A fixed pipeline or
- b. A flexible hose pipe.

## Please note!

1. Do not install the Pump by suspending it unsupported from its delivery pipe or power cord. The Pump must be suspended from the handle or be placed on the bottom of the basin. To ensure that the Pump works properly, keep the bottom free from sludge and dirt of all kinds.
2. If the water level sinks too low, any sludge in the basin will dry out and stop the Pump from starting. To help ensure the Pump will start as required, check the Pump regularly with start-up tests.

## Power Supply

1. The Pump is equipped with a shock-proof plug according to regulations. The Pump is designed to be connected to a 120VAC, 60Hz, Ground Fault Circuit Interrupter (GFCI) protected socket.
2. Make sure that the socket is sufficiently secured and is in excellent condition.
3. When the plug is inserted into the socket, the Pump will start operating.
4.  **WARNING: To prevent death from electric shock, Pump must be connected only to a GFCI protected outlet.**

**WARNING!** If the power cord or plug is damaged, do not use the Pump. The power cord or plug may only be repaired by a certified electrician.

## Areas of use


1. This Pump is designed to pump water only.
2. This Pump is designed to be used for:
  - Removing ground water from basements and outdoor job sites
  - Very high flow
3. This Pump should NOT be used for:
  - Continuous run, fountain/pond water features
  - Basement sump applications
  - Septic or sewage systems
  - Potable water systems
4. This Pump can also be used to transfer water (e.g. household, farming, plumbing).

# Installation Instructions

1. Attach one end of a discharge hose to the discharge port. Place the other end as needed to direct the water discharge at least 3 feet away from the source. Slope the discharge hose downward, away from the source.
2. Place Pump in water.

**DANGER!** Do not use an extension cord with this Pump. Keep plug dry and secured away from water.

3. Plug Power Cord into GFCI protected outlet to start the Pump.

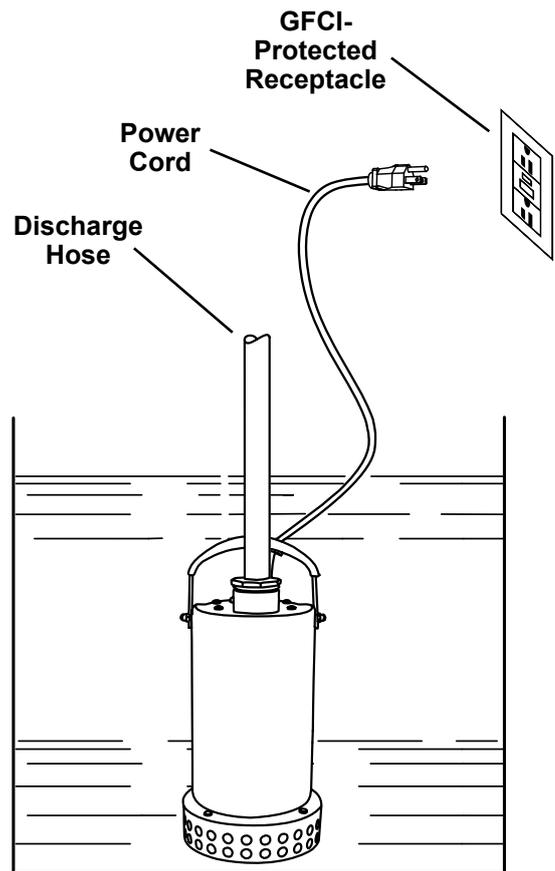

## Operation

After reading these instructions, consider the following points before starting the Pump:

1. Verify that the Pump rests on the floor of the basin, if it is not suspended by the handle.
2. Verify that the discharge pipe is properly connected.
3. Verify that the electrical connection is 120 VAC, 60 Hz.
4. Verify that the electrical socket is GFCI protected and in good condition. Test GFCI protected outlet before use.
5. Verify that water and moisture cannot get near the power supply socket.
6. Verify that the Pump is installed so as to prevent running dry.

**NOTE:** The Pump will not start without 2-1/4" of water.

**⚠️ WARNING**

**TO PREVENT SERIOUS INJURY FROM ACCIDENTAL OPERATION:**  
**Unplug the Pump from its electrical outlet before performing any inspection, maintenance, or cleaning procedures.**

If the Pump is moved during operation, flush it out with clean water after every use.

**Quarterly Maintenance**

The below maintenance must be performed at least once every 3 months under optimal conditions. For frequent use, or dirty areas, more frequent maintenance is required.

1. Clean sludge and debris from the bottom of the basin.
2. Clean sludge/debris from the impeller.
3. Make sure discharge pipe is free from leaks.
4. Make sure check valve is functioning properly.

**Troubleshooting**

<b>Problem</b>	<b>Possible Causes</b>	<b>Possible Solutions</b>
Pump runs, but will not deliver any water.	<ol style="list-style-type: none"> <li>1. Impeller clogged.</li> <li>2. When starting, the water height falls too low.</li> <li>3. Low line voltage.</li> <li>4. Check valve (sold separately) stuck or installed backwards.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean out dirt and debris from impeller.</li> <li>2. There must be at least 2-1/4" deep water for the Pump to operate properly.</li> <li>3. Consult an electrician.</li> <li>4. Remove and examine check valve.</li> </ol>
Pump won't start or run.	<ol style="list-style-type: none"> <li>1. Check power connections and circuits/fuses.</li> <li>2. Water level too low.</li> <li>3. Impeller clogged.</li> <li>4. Defective motor.</li> </ol>	<ol style="list-style-type: none"> <li>1. Consult an electrician.</li> <li>2. Allow water level to rise above 2-1/4", or move Pump to a lower location.</li> <li>3. Clean out Impeller.</li> <li>4. Have a qualified service technician repair or replace.</li> </ol>
Excessive noise or vibration.	<ol style="list-style-type: none"> <li>1. Debris in impeller.</li> <li>2. Discharge hose restricted.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean impeller.</li> <li>2. Clean Pump and discharge hose.</li> </ol>
Pump starts and stops too frequently.	<ol style="list-style-type: none"> <li>1. Water temperature too high.</li> <li>2. Check valve (sold separately) stuck or installed backwards.</li> <li>3. Back flow of water from discharge hose.</li> </ol>	<ol style="list-style-type: none"> <li>1. Do not exceed 95° F (35°C) water temperature.</li> <li>2. Remove and examine check valve.</li> <li>3. Install or inspect check valve (sold separately).</li> </ol>

**⚠️ Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.**

**PLEASE READ THE FOLLOWING CAREFULLY**

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

**Parts List**

Part	Description	Qty.
1	Power Cable	1
3	Self-Tapping Screw	5
4	Main Body Subassembly	1
5	Screw	4
6	O-Ring	2
7	Base Cover	1
8	Cable Sheath	1
9	Cable Guide	1
10	Cable Fastener	2
11	Capacitor 35Uf	1
12	Cable Connector	1
13	Self-Tapping Screw	3
14	Rear Cover	1
14-1	Cable Sheath	1
14-2	Washer	1
14-3	Yellow-Green Wire	1
14-4	Wire Connector	1
14-5	Washer	1
14-6	Screw	1
14-7	Nylon Cap	4
14-8	Tie	1
15	Wave Washer	1
16	Bearing	2

Part	Description	Qty.
17	Rotor	1
18	Stator	1
19	Bushing	1
20	Washer	1
21	Sealing Ring	3
22	Stator Housing	1
23	O-Ring	1
24	Front Cover	1
25	Adjustable Washer	1
26	Impeller	1
27	Nut	1
28	O-Ring	1
29	Pressure Washer	1
30	Self-Tapping Screw	6
31	Bracket	1
32	Positioning Ring	1
33	Gasket	1
34	Inner Base	1
35	Base	1
36	O-Ring	1
37	Self-Tapping Screw	1
38	O-Ring	1
39	Hose Adapter	1


**Record Product's Serial Number Here:** \_\_\_\_\_

**Note:** If product has no serial number, record month and year of purchase instead.

**Note:** Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

**Note:** When ordering parts, specify which model the parts are being ordered for.

# Assembly Diagram

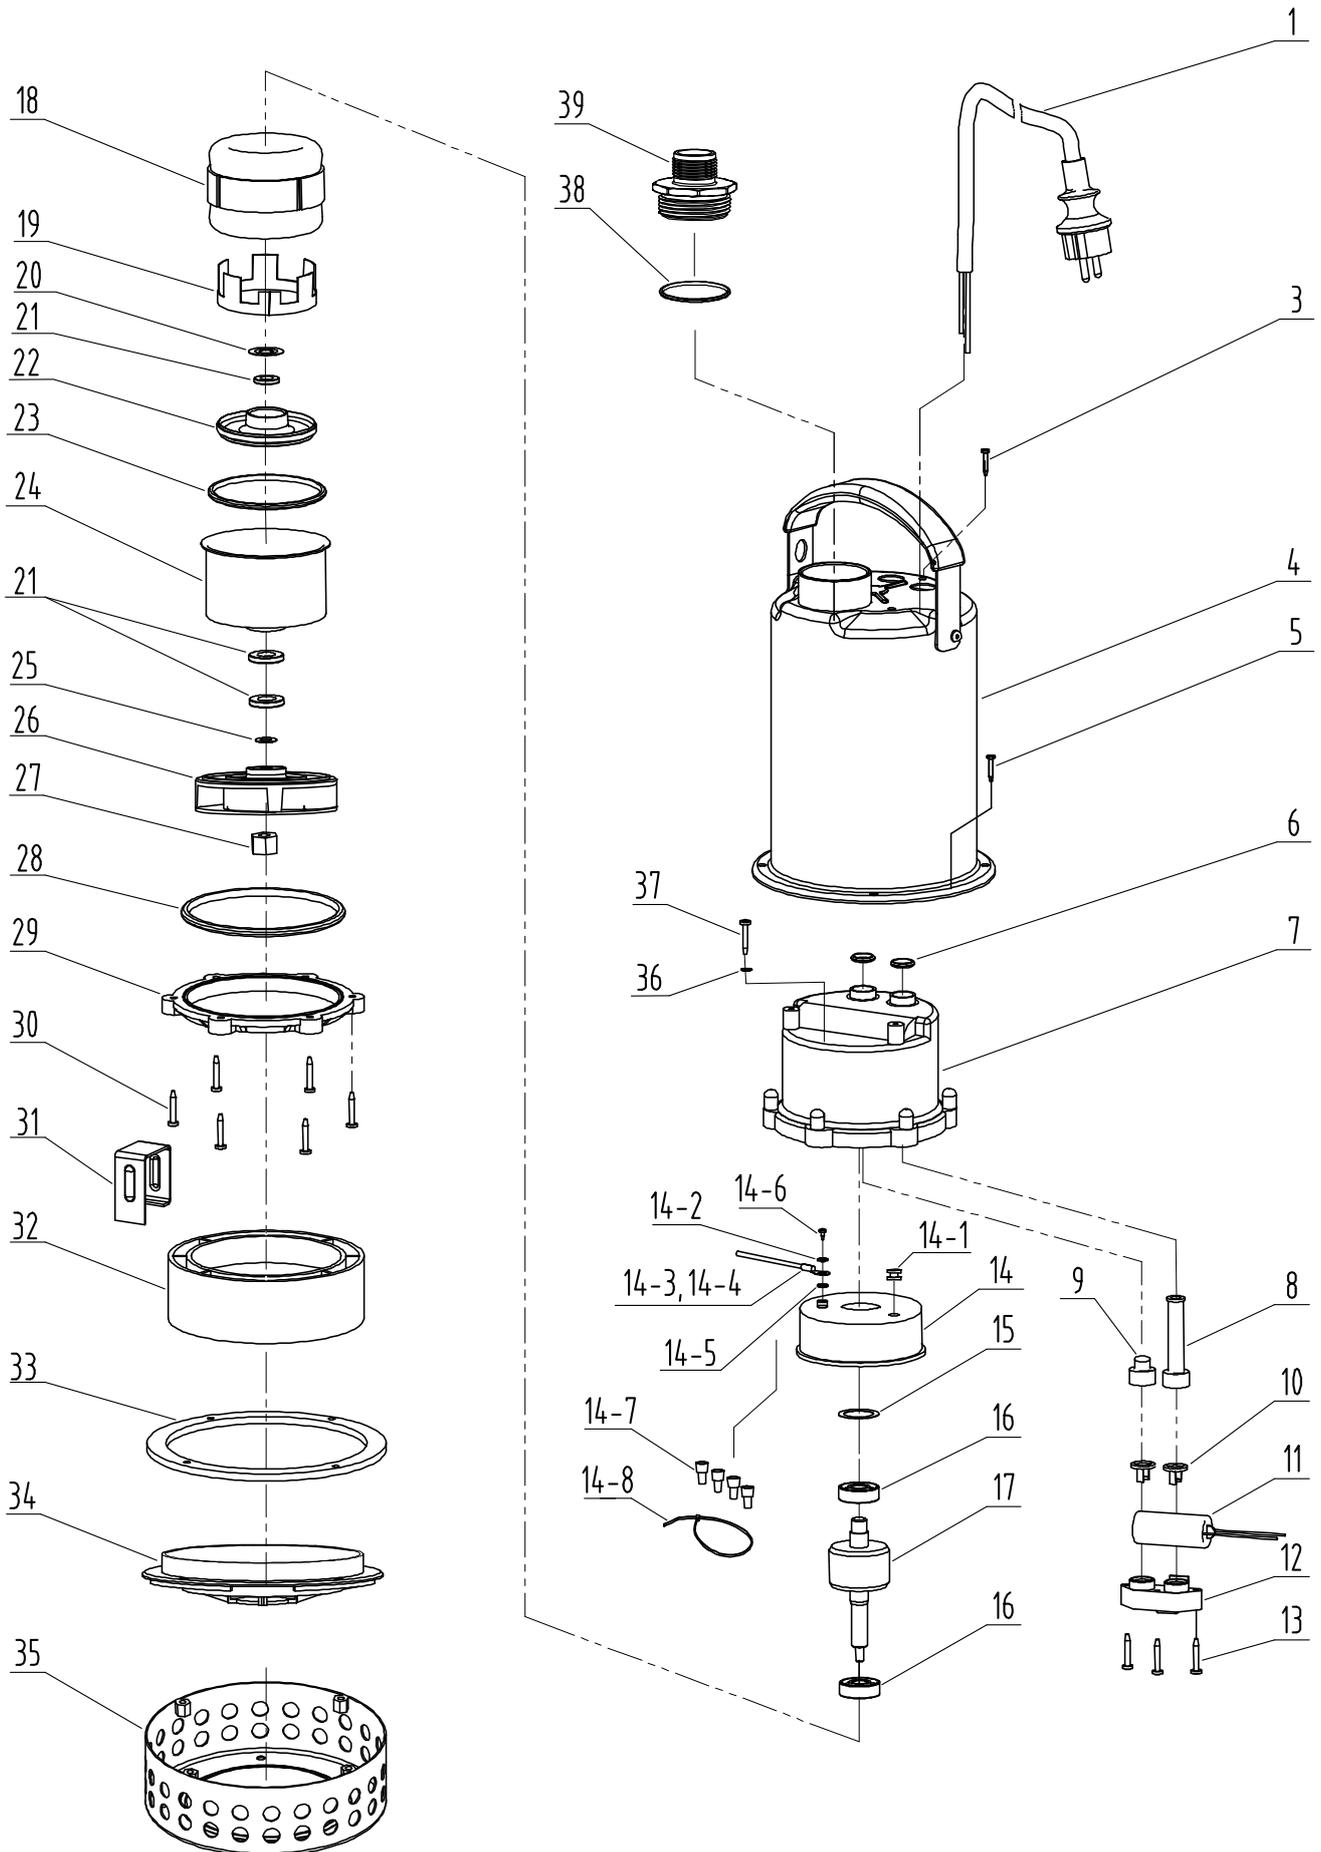

## Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

