Antilles Installation Guide (For EL7) 1.0.0

- 1. Overview
 - Introduction to Antilles
 - Typical cluster deployment
 - Operating environment
 - Supported servers and chassis models
- 2. Prepare the cluster environment
 - Prepare cluster OS and network environment
 - Prepare infrastructure software for nodes
 - Prepare Antilles Repo
 - Prepare python modules Antilles requires
- 3. Install Antilles dependencies
 - Check infrastructure environment
 - Configure environment variables
 - Precheck
 - · List of Antilles dependencies to be installed
 - Install Antilles dependencies
 - Install RabbitMQ
 - Install PostgreSQL
 - Install InfluxDB
 - Install Confluent
 - Configure user authentication
 - Install OpenLDAP-server
 - Install libuser
 - Install OpenLDAP-client
 - Install nss-pam-ldapd
 - Install Gmond GPU plugin
- 4. Install Antilles
 - List of Antilles components to be installed
 - Install Antilles on the management node
 - · Install Antilles on the login node
 - Install Antilles on the compute node
- 5. Configure Antilles
 - Configure the service account
 - · Configure cluster nodes
 - Room information
 - Logic group information
 - Room row information

- Rack information
- Chassis information
- Node information
- Configure Antilles services
 - Infrastructure configuration
 - Database configuration
 - Login configuration
 - Storage configuration
 - Scheduler configuration
 - Alert configuration
 - Confluent configuration
 - User configuration
- Configure Antilles components
 - antilles-vnc-mond
 - antilles-portal
 - antilles-ganglia-mond
 - antilles-icinga-mond
 - antilles-icinga-plugin
 - antilles-confluent-proxy
 - antilles-confluent-mond
- Initialize the system
- Initialize users
- 6. Start and log in to Antilles
 - Start Antilles
 - Log in to Antilles
- Trouble Shooting
 - Change a user's role
 - Resume a user

1. Overview


Introduction to Antilles

Antilles is an infrastructure management software for high-performance computing (HPC). It provides features like cluster management and monitoring, job scheduling and management, cluster user management, account management, and file system management.

With Antilles, users can centralize resource allocation in one supercomputing cluster and carry out HPC jobs. Users can perform operations by logging in to the management system interface with a browser, or by using command lines after logging in to a cluster login node with another Linux shell.

Typical cluster deployment

This Guide is based on the typical cluster deployment that contains management, login, and compute nodes.

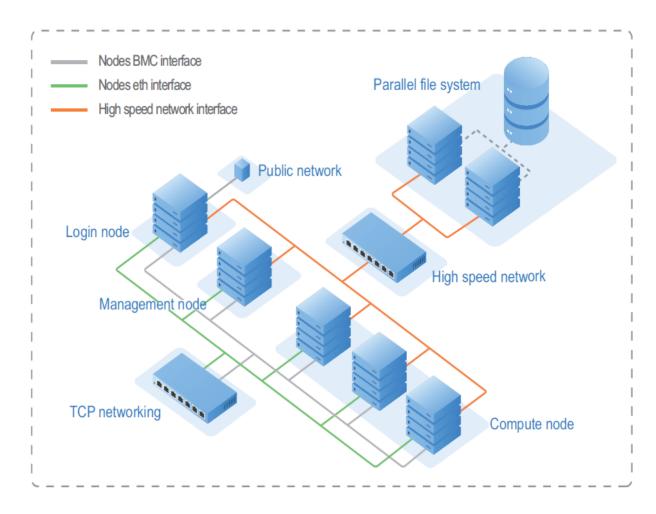

Elements in the cluster are described in the table below.

Element	Description
Management node	Core of the HPC cluster, undertaking primary functions such as cluster management, monitoring, scheduling, strategy management, and user & account management.
Compute node	Completes computing tasks.
Login node	Connects the cluster to the external network or cluster. Users must use the login node to log in and upload application data, develop compilers, and submit scheduled tasks.
Parallel file system	Provides a shared storage function. It is connected to the cluster nodes through a high- speed network. Parallel file system setup is beyond the scope of this Guide. A simple NFS setup is used instead.

Nodes BMC interface	Used to access the node's BMC system.
Nodes eth interface	Used to manage nodes in cluster. It can also be used to transfer computing data.
High speed network interface	Optional. Used to support the parallel file system. It can also be used to transfer computing data.

Note: Antilles also supports the cluster deployment that only contains the management and compute nodes. In this case, all Antilles modules installed on the login node need to be installed on the management node.

Operating environment

Cluster server:

Lenovo ThinkSystem servers

Operating system:

CentOS / Red Hat Enterprise Linux (RHEL) 7.5

Client requirements:

- Hardware: CPU of 2.0 GHz or above, memory of 8 GB or above
- Browser: Chrome (V 62.0 or higher) or Firefox (V 56.0 or higher) recommended
- Display resolution: 1280 x 800 or above

Supported servers and chassis models

Antilles can be installed on certain servers, as listed in the table below.

Product code	Machine type	Product name	Appearance
sd530	7X21	Lenovo ThinkSystem SD530 (0.5U)	
sr630	7X01, 7X02	Lenovo ThinkSystem SR630 (1U)	
sr650	7X05, 7X06	Lenovo ThinkSystem SR650 (2U)	

sd650	7X58	Lenovo ThinkSystem SD650 (1U)	1 20000
sr670	7Y36, 7Y37, 7Y38	Lenovo ThinkSystem SR670 (2U)	

Antilles can be installed on certain chassis models, as listed in the table below.

Product code	Machine type	Model name	Appearance
d2	7X20	D2 Enclosure (2U)	
n1200	5456, 5468, 5469	NeXtScale n1200 (6U)	11 12 9 10 7 8 5 6 3 4 1 2

2. Prepare the cluster environment

Prepare cluster OS and network enviroment

Cluster OS and network should be ready.

Prepare infrastructure software for nodes

Install the cluster infrastructure in accordance with the OHPC installation manual. Necessary software are listed in the table below.

Software name	Component name	Version	Service name	Notes
nfs	nfs-utils	1.3.0	nfs-server	
ntp	ntp	4.2.6	ntpd	

slurm	ohpc-slurm- server	1.3.4	munge, slurmctld	
	ohpc-slurm- client	1.3.4	munge, slurmd	
ganglia	ganglia-gmond- ohpc	3.7.2	gmond	
mpi	openmpi3-gnu7- ohpc	3.0.0		At least one MPI type required. Make sure compute
	mpich-gnu7- ohpc	3.2.1		mpirun directly instead of specifying path to command
	mvapich2-gnu7- ohpc	2.2		mpirun

If GPU node(s) is included in the cluster, CUDA should also be installed on the GPU node(s). Recommended CUDA version is 9.1. Installation reference: https://developer.nvidia.com

Prepare Antilles Repo

Packaging Antilles into RPMs and create repo for installing antilles modules.

Step 1. Download Antilles code from github.

Step 2. Run the following commands to packaging Antilles and create Antilles Repo:

```
cd /path/to/antilles
./packaging_antilles_el7.sh
```

Note: /path/to/antilles should be replaced by the real path where antilles code locate.

After create Antilles repo, distribute the antilles repo file to all nodes which would install antilles.

Prepare python modules Antilles requires

Before installing Antilles packages you should pre install python modules that Antilles packages require. Each of Antilles module has requirements.txt files, you should make sure all the python modules installed and the module's version is conforming to the requirements file.

3. Install Antilles dependencies

Check infrastructure environment

Make sure that the cluster environment is ready.

Configure environment variables

Step 1. Log in to the management node.

Step 2. Run the following commands to configure environment variables for the entire installation process:

```
su root
cd ~
vi antilles_env.local
```

Step 3. Run the following commands to edit the antilles_env.local file:

```
# Management node hostname
sms_name="head"

# IP address of management node in the cluster intranet
sms_ip="192.168.0.1"

# Set the domain name
domain_name="hpc.com"

# Set OpenLDAP domain name
antilles_ldap_domain_name="dc=hpc,dc=com"

# set OpenLDAP domain component
antilles_ldap_domain_component="hpc"
```

Step 4. Save the changes to antilles_env.local.

Step 5. Run the following commands to make the configuration file take effect:

```
chmod 600 antilles_env.local
source antilles_env.local
```

Precheck

Make sure services below already prepared.

Infrastructure Software	Check Command	Notes

nfs	<pre>showmount -e \${sms_ip}</pre>	
slurm	sinfo	
ganglia	gstat -a	
mpi	module list	
cuda	nvidia-smi	required by GPU node
OpenHPC	yum repolist	

List of Antilles dependencies to be installed

Note: In the Installation node column, M stands for "Management node", L stands for "Login node", and C stands for "Compute node".

Software name	Component name	Version	Service name	Installation node	Notes
rabbitmq	rabbitmq-server	3.6.15	rabbitmq- server	М	
postgresql	postgresql-server	9.2.23	postgresql	M	
influxdb	influxdb	1.5.4	influxdb	M	
confluent	confluent	2.0.2	confluent	M	
openIdap	slapd-ssl-config	1.0.0	slapd	M	
	nss-pam-ldapd	0.8.13	nslcd	M, C, L	
	libuser	0.60		M	
	libuser-python	0.60		M	
gmond gpu plugin	gmond-ohpc-gpu- module	1.0.0		С	Required only on the GPU node

Install Antilles dependencies

Install RabbitMQ

Antilles uses RabbitMQ as a message broker.

Install PostgreSQL

Antilles uses PostgreSQL as an object-related database for data storage.

Installation Reference: https://www.postgresql.org/

After installation, run the following commands to configure PostgreSQL:

```
# Stop PostgreSQL on the management node
systemctl stop postgresql

# Initialization and passwords can be changed as needed.
su - postgres
echo <PG_PASSWORD> > /var/tmp/pwfile

# The value for the -U switch on the initdb command ("postgres") is the p
ostgres username.
# Make sure to make note of this, as well as the other usernames and pass
words used during this
# setup as they will be needed during the ico-passwd-tool step later in t
he installation process.
initdb -U postgres --pwfile /var/tmp/pwfile /var/lib/pgsql/data

rm /var/tmp/pwfile
exit

# Starting PostgreSQL
systemctl enable postgresql
systemctl start postgresql
# Create Antilles database
psql -U postgres -c "CREATE DATABASE antilles;"
```

Install InfluxDB

Antilles uses InfluxDB as a time series database for storage monitoring.

Installation Reference: https://www.influxdata.com/

After installation, run the following commands to create InfluxDB users:

```
# Start InfluxDB
systemctl enable influxdb
systemctl start influxdb
```

```
# Enter the InfluxDB shell
# To create an administrator user, please note that the password must be
a string, otherwise the error is reported.
influx
> create database antilles
> use antilles
> create user <INFLUX_USERNAME> with password '<INFLUX_PASSWORD>' with al
l privileges
> exit

# configuration
sed -i '/auth-enabled = false/a\ auth-enabled = true' /etc/influxdb/config.toml

# restart InfluxDB
systemctl restart influxdb
```

Install Confluent

Installtion Reference: https://hpc.lenovo.com/yum/latest/

Run the following commands to configure Confluent:

```
# Start confluent
systemctl enable confluent
systemctl start confluent

# Create confluent count
source /etc/profile
confetty create /users/<CONFLUENT_USERNAME> password=<CONFLUENT_PASSWORD>
```

Configure user authentication

Note: If you have already configured OpenLDAP for the cluster.

Install OpenLDAP-server

OpenLDAP is an open-source version of the lightweight directory access protocol. Antilles recommends using OpenLDAP to manage users; however, it also supports other authentication services compatible with Linux-PAM.

Run the following commands to install OpenLDAP:

```
yum install -y slapd-ssl-config
sed -i "s/dc=hpc,dc=com/${antilles_ldap_domain_name}/" /usr/share/openlda
p-servers/antilles.ldif
sed -i "/dc:/s/hpc/${antilles_ldap_domain_component}/" /usr/share/openlda
p-servers/antilles.ldif
sed -i "s/dc=hpc,dc=com/${antilles_ldap_domain_name}/" /etc/openldap/slap
d.conf
slapadd -v -l /usr/share/openldap-servers/antilles.ldif -f /etc/openldap/
slapd.conf -b ${antilles_ldap_domain_name}
slappasswd
rootpw <ENCRYPT_LDAP_PASSWORD>
chown -R ldap:ldap /var/lib/ldap
chown ldap:ldap /etc/openldap/slapd.conf
vi /etc/sysconfig/slapd
SLAPD_URLS="ldapi:/// ldaps:///"
SLAPD_OPTIONS="-f /etc/openldap/slapd.conf"
systemctl enable slapd
systemctl start slapd
systemctl status slapd
```

Install libuser

The libuser module is a recommended toolkit for OpenLDAP. The installation of this module is optional.

Step 1. Run the following command to install libuser:

```
yum install -y libuser libuser-python
```

Step 2. Run the following commands to configure libuser:

```
vi /etc/libuser.conf
```

```
[import]
login_defs = /etc/login.defs
default_useradd = /etc/default/useradd
[defaults]
crypt_style = sha512
modules = ldap
create_modules = ldap
[userdefaults]
LU_USERNAME = %n
LU_GIDNUMBER = %u
LU_GECOS = %n
LU_HOMEDIRECTORY = /home/%n
LU_SHADOWNAME = %n
LU_SHADOWMAX = 99999
[groupdefaults]
LU_GROUPNAME = %n
[files]
[shadow]
[ldap]
server = ldap://<LDAP_ADDRESS>
basedn = <DOMAIN>
bindtype = simple
[sasl]
```

Install OpenLDAP-client

Run the following commands to install OpenLDAP-client:

```
echo "TLS_REQCERT never" >> /etc/openldap/ldap.conf
```

Then distribute /etc/openldap/ldap.conf to all other nodes.

Install nss-pam-ldapd

nss-pam-ldapd is a name service switching module and pluggable authentication module. Antilles uses this module for user authentication.

Run the following commands to install nss-pam-ldapd **on all nodes**:

```
yum install -y nss-pam-ldapd authconfig
```

```
authconfig --useshadow --usemd5 --enablemkhomedir --disablecache --enable locauthorize --disablesssd --disablesssdauth --enableforcelegacy --enable ldap --enableldapauth --disableldaptls --ldapbasedn=${antilles_ldap_domain_name} --ldapserver="ldap://${sms_name}" --updateall echo "rootpwmoddn uid=admin,${antilles_ldap_domain_name}" >> /etc/nslcd.c onf

# Start management node service systemctl enable nslcd systemctl start nslcd
```

Install Gmond GPU plugin

On all GPU nodes, run the following commands to install Gmond GPU plug-in:

```
yum install -y gmond-ohpc-gpu-module

ls /etc/ganglia/conf.d/*.pyconf|grep -v nvidia|xargs rm

# Start gmond
systemctl restart gmond
```

4. Install Antilles

List of Antilles components to be installed

Note: In the Installation node column, M stands for "Management node", L stands for "Login node", and C stands for "Compute node".

Software name	Component name	Version	Service name	Installation node	Notes
antilles-core	antilles-core	1.0.0	antilles	M	
antilles-portal	antilles-portal	1.0.0		M, L	
antilles-core- extend	antilles- confluent-proxy	1.0.0		М	
	antilles-vnc- proxy	1.0.0		М	
antilles-env	antilles-env	1.0.0		M, L	

antilles monitor	antilles-ganglia- mond	1.0.0	antilles-ganglia- mond	M	Cannot install this software if you install antilles-icinga- mond
	antilles-icinga- mond	1.0.0	antilles-icinga- mond	M	Cannot install this software if you install antilles- ganglia-mond
	antilles-icinga- plugin	1.0.0		M, C, L	Required if you need to install antilles- icinga-mond
	antilles- confluent-mond	1.0.0	antilles- confluent-mond	M	
	antilles-vnc- mond	1.0.0	antilles-vnc- mond	С	Required if you need to run VNC
antilles alarm notification	antilles-sms- agent	1.0.0	antilles-sms- agent	L	Required if you need to send alerts via SMS
	antilles-wechat- agent	1.0.0	antilles-wechat- agent	L	Required if you need to send alerts via WeChat
	antilles-mail- agent	1.0.0	antilles-mail- agent	L	Required if you need to send alerts via e-mails

Install Antilles on the management node

Step 1. Run the following command to install the Antilles module on the management node:

yum install -y antilles-core antilles-confluent-mond antilles-confluent-p
roxy antilles-env

If you need to	Run the following commands:
Use Ganglia for Antilles monitoring (provided that Ganglia is installed on the management node) Note:Antilles can be monitored by either Ganglia or Icinga2. Only one of Ganglia or Icinga2 can be installed.	yum install -y antilles-ganglia-mond
Use Icinga2 for Antilles monitoring (provided that Icinga2 is installed on the management node)	yum install -y antilles-icinga-mond antilles-icinga-plugin
Provide Web service on the management node	yum install -y antilles-portal
Use the VNC component	yum install -y antilles-vnc-proxy

Step 3. Run the following command to restart services:

systemctl restart confluent

Install Antilles on the login node

Step 1. Run the following commands to install the Antilles module **on the login node**:

yum install -y antilles-env

Step 2. Perform the following steps **on the login node** as required:

If you need to	Run the following commands:
Provide Web service on the login node	yum install -y antilles-portal
Use Icinga2 for Antilles monitoring (provided that Icinga2 is installed on the login node)	yum install -y antilles-icinga-plugin
Provide e-mail, SMS, and WeChat services on the login node	<pre># Install email module yum install -y antilles-mail-agent # Install SMS module yum install -y antilles-sms-agent # Install WeChat module yum install -y antilles-wechat-agent</pre>

Install Antilles on the compute node

Run the following command to install the Antilles module on all compute nodes:

```
yum install -y antilles-env
```

If Icinga2 is installed **on all compute nodes**, run the following command:

```
yum install -y antilles-icinga-plugin
```

5. Configure Antilles

Configure the service account

On the management node, use the tool antilles-passwd-tool.

If Icinga2 is not installed, follow the prompt below to enter the username and password for PostgreSQL, InfluxDB and Confluent:

```
antilles-passwd-tool
```

If Icinga2 is installed, follow the prompt below to enter the username and password for PostgreSQL, InfluxDB, Confluent and Icinga2 API:

```
antilles-passwd-tool --icinga
```

Configure cluster nodes

Step 1. Run the following command to import the cluster information to the system:

```
cp /etc/antilles/nodes.csv.example /etc/antilles/nodes.csv
```

Step 2. Run the following command to edit the cluster information file:

```
vi /etc/antilles/nodes.csv
```

Room information

Below is an example of the room information table.

room	name	location_description		
	Shanghai Solution Room	Shanghai Zhangjiang		

Enter one entry of information for the fields **name** and **location_description**.

Logic group information

Managers can use logic groups to divide nodes in the cluster into groups. The logic groups do not impact the use of computer resources or permissions configurations.

Below is an example of the logic group information table.

group	name	
	login	

You need to enter at least one logic group name in the **name** field.

Room row information

Room row refers to the rack order in the room. Enter the information about the rack row where the cluster node is located.

Below is an example of the room row information table.

row	name	index	belonging_room
	row1 1		Shanghai Solution Room

Enter at least one entry of row information in the fields below:

- **name**: row name (must be unique in the same room)
- **index**: row order (must be a positive integer and be unique in the same room)
- belonging_room: name of the room where the row belongs

Rack information

Below is an example of the rack information table.

rack	name	column	belonging_row	
	rack1	1	row1	

Enter at least one entry of rack information in the fields below:

- **name**: rack name (must be unique in the same room)
- column: rack location column (must be a positive integer and be unique in the same row)
- belonging_row: name of the row where the rack belongs

Chassis information

If there is a chassis in the cluster, enter the chassis information.

Below is an example of the chassis information table.

chassis	name	belonging_rack	location_u_in_rack	machine_type	
	chassis1	rack1	7	7X20	

The fields in this table are described as follows:

- name: chassis name (must be unique in the same room)
- belonging_rack: rack location name (must use the name configured in the rack information table)
- **location_u_in_rack**: location of the chassis base in the rack (Unit: U). In a standard cabinet, the value should be between 1 and 42. For example, a chassis base is located at 5U.
- machine_type: chassis type (see Supported servers and chassis models)

Node information

Enter the information about all nodes in the cluster into the node information table. Due to its width, the example node information table is displayed in two split parts.

Part 1:

node	name	nodetype	immip	hostip	machine_type	ipmi_user	ipmi_pwd
	head	head	10.240.212.13	127.0.0.1	7X58		

Part 2:

belonging_service_node	belonging_rack	belonging_chassis	location_u	groups
	rack1		2	login

The fields are described as follows:

- name: node hostname (domain name not needed)
- nodetype: head means management node; login means login node; compute means compute node
- immip: IP address of the node's BMC system

- hostip: IP address of the node on the host network
- machine_type: product name for the node (see Supported servers and chassis models)
- ipmi_user: XCC (BMC) account for the node
- ipmi_pwd: XCC (BMC) password for the node
- **belonging_service_node**: large clusters require setting up a service node to which the node belongs. If there is no service node, leave the field blank
- **belonging_rack**: name of the node location rack (need to add the configured name to the rack information table)
- **belonging_chassis**: name of the node location chassis (leave this field blank if it can be located in any chassis). Configure the chassis name in the chassis information table
- **location_u**: node location. If the node is located in the chassis, enter the slot in the chassis in which the node is located. If the node is located in a rack, enter the location of the node base in the rack (Unit: U)
- **groups**: name of the node location logic group. One node can belong to multiple logic groups. Group names should be separated by ";". Configure the logic group name in the logic group information table

Configure Antilles services

The Antilles service configuration file is located in /etc/antilles.ini. This configuration file controls the operating parameters for various Antilles background service components. You can modify this configuration file as needed.

If you have changed the configuration while Antilles is running, run the following command to restart Antilles before the configuration takes effect:

```
systemctl restart antilles
```

Note: Configurations not mentioned in the instructions in this section can be modified after consulting with service staff. Modifications made without a service consultation could result in a system failure.

Infrastructure configuration

The following part of the infrastructure configuration is modifiable:

```
domain = hpc.com # Cluster domain settings
```

Database configuration

The following parts of the database configuration are modifiable:

```
db_host = 127.0.0.1  # PostgreSQL address
db_port = 5432  # PostgreSQL port
```

```
db_name = antilles  # PostgreSQL database name

influx_host = 127.0.0.1  # InfluxDB address
influx_port = 8086  # InfluxDB port
influx_database = antilles  # InfluxDB database name
```

Login configuration

The following part of the login configuration is modifiable:

```
login_fail_max_chance = 3  # Maximum number of login password error att
empts
```

Attention: If user login failures exceed login_fail_max_chance, the system will suspend this user for 45 minutes. Suspended users cannot log in to the system even with the valid authentication information. Administrators, however, can resume a suspended user with a command line or Web portal. See Resume a user.

Storage configuration

The following part of the storage configuration is modifiable:

```
# Shared storage directory
# If strictly adhering to the shared directory configurations in this doc
ument,
# change to: share_dir = /home
share_dir = /home
```

Scheduler configuration

The following part of the scheduler configuration is modifiable:

```
# The scheduler configuration currently supports Slurm, LSF, and Torque.
Slurm is the default.
scheduler_software = slurm
```

Alert configuration

Note: The configuration in this section is needed only when WeChat, SMS, and e-mail proxy modules are installed for the cluster. You can obtain from https://mp.weixin.qq.com/wiki? t=resource/res_main&id=mp1445241432. The following part of the alert configuration is modifiable:

```
wechat_template_id = <WECHAT_TEMPLATE_ID>  # WeChat notification templat
e ID
sms_agent_url = http://127.0.0.1:18092  # SMS proxy server address
mail_agent_url = http://127.0.0.1:18091  # Email proxy server address
```

Confluent configuration

The following part of the confluent configuration is modifiable:

```
confluent_port = 4005  # Confluent port
```

User configuration

The following part of the user configuration is modifiable:

```
# user
use_libuser = false
```

The default configuration for user_libuser is "false". To change this value, run the following command to set the ldap password:

```
# The command prompts you to enter the LDAP administrator password
# Use the LDAP_PASSWORD you configured in "Install OpenLDAP-server".
antilles setldappasswd
Please input your ldap password:
Please confirm the ldap password:
```

Configure Antilles components

antilles-vnc-mond

Step 1. Create a file named /var/tmp/vnc-mond.ini and run the following commands:

```
[vnc]
url=http://127.0.0.1:18083/session
timeout=30
```

Note: Replace 127.0.0.1 with the actual IP address of the management node.

Step 2. Distribute the configuration file /var/tmp/vnc-mond.ini to all compute nodes, put the file in /etc/antilles/vnc-mond.ini.

antilles-portal

To prevent conflictions, you may need to modify some pathway files for nodes installed with the antilles-portal module, which provides external Web services with different ports.

/etc/nginx/nginx.conf

You can edit /etc/nginx/nginx.conf by changing the port to 8080:

```
listen 8080 default_server;
listen [::]:8080 default_server;
```

If you want to hide the server version information, modify /etc/nginx/nginx.conf by turning off server_tokens:

```
http{
    .....
    sendfile on;
    server_tokens off;
    .....
}
```

/etc/nginx/conf.d/https.conf

You can edit /etc/nginx/conf.d/https.conf by changing the https default port 443 to other ports:

```
listen <port> ssl http2;
```

Note: Ensure that the port is not used by other applications and is not blocked by the firewall.

• /etc/nginx/conf.d/sites-available/antilles.conf

You can edit /etc/nginx/conf.d/sites-available/antilles.conf by replacing the first line to the following content:

```
set $antilles_host 127.0.0.1;
```

Note: If antilles-portal does not run on the management node, you can change 127.0.0.1 to the IP address of the management node.

/etc/antilles/portal.conf

You can edit /etc/antilles/portal.conf by adding custom shortcut links. Refer to /etc/antilles/portal.conf.example for the configuration format.

antilles-ganglia-mond

Note: Skip this section if Ganglia is not deployed in the cluster.

On the management node with the default port, the /etc/antilles/ganglia-mond.conf file shows as follows:

```
influxdb {
    cfg_db_host 127.0.0.1
    cfg_db_port 5432
    cfg_db_name antilles
    host 127.0.0.1
    port 8086
    database antilles
    timeout 10
}
```

Make the following changes to the file:

- Change cfg_db_host 127.0.0.1 and cfg_db_port 5432 to the actual IP address and port number of the PostgreSQL service.
- Change the host 127.0.0.1 and port 8086 to the actual IP address and port number of the InfluxDB service.

antilles-icinga-mond

Note: Skip this section if Icinga2 is not deployed in the cluster.

Edit the file /etc/antilles/icinga-mond.ini:

```
    Section [base]
        Change service = antilles to the actual service name defined in Icinga2 for Antilles.
    Section [icinga]
        Change host = 127.0.0.1 and port = 5665 to the actual Icinga2 API service.
    Section [postgresql]
        Change host = 127.0.0.1 and port = 5432 to the actual PostgreSQL service.
    Section [influxdb]
        Change host = 127.0.0.1 and port = 8086 to the actual InfluxDB service.
```

See the example below:

```
[base]
service = antilles
sample_interval = 15
domain_filter =

[icinga]
host = 127.0.0.1
port = 5665
```

```
timeout = 30

[postgresql]
host = 127.0.0.1
port = 5432
database = antilles

[influxdb]
host = 127.0.0.1
port = 8086
database = antilles
timeout = 30
```

antilles-icinga-plugin

Note: Skip this section if Icinga2 is not installed in the cluster.

If antilles-icinga-plugin is installed in the cluster, Icinga2 should be configured to enable the plugin. Below are examples for how to configure Icinga2:

• Define a new command in the command configuration file of Icinga2:

```
object CheckCommand "antilles-monitor" {
  command = [PluginDir + "/antilles-icinga-plugin"]
  arguments = {
    "-a" = ""
}
}
```

Define a new service in the service configuration file of Icinga2:

```
apply Service "antilles" {
  display_name = "antilles"
  check_command = "antilles-monitor"
  assign where host.address
}
```

Notes:

- For details about how to define the lcinga2 command and service, refer to https://www.icinga.com/docs/icinga2/latest/.
- The "display_name" of the Icinga2 service must be the same as the "service" in the configuration file of antilles-icinga-mond.

antilles-confluent-proxy

The /etc/antilles/confluent-proxy.ini file shows as follows on the management node with the default port:

```
[DEFAULT]
# database
db_host = 127.0.0.1
db_port = 5432
db_name = antilles
```

Make the following changes to the file:

- Change db_host 127.0.0.1 and db_port 5432 to the actual IP address and port number of the PostgreSQL service.
- Change host 127.0.0.1 and port 8086 to the actual IP address and port number of the InfluxDB service.

If there are multiple Confluents in the cluster, configure the [app:main] section as follows:

```
[app:main]
use = cluster-confluent-proxy
```

Note: To change the information about the Confluent user, see Install Confluent. To create or update the user information, see Configure the service account.

antilles-confluent-mond

The /etc/antilles/confluent-mond.ini file shows as follows on the management node with the default port:

```
[database]
db_host = 127.0.0.1
db_port = 5432
db_name = antilles

[influxdb]
host = 127.0.0.1
port = 8086
database = antilles
timeout = 10
```

Make the following changes to the file:

- Change db_host 127.0.0.1 and db_port 5432 to the actual IP address and port number of the PostgreSQL service.
- Change host 127.0.0.1 and port 8086 to the actual IP address and port number of the InfluxDB service.

antilles-wechat-agent

Edit the file /etc/antilles/wechat-agent as follows:

```
#The configurations below should be changed based on the specific environ
ment
appid = <APPID> secret = <SECRET>
```

Note: For more information about <aPPID> and <SECRET>, refer to https://mp.weixin.qq.com/wiki?t=resource/res_main&id=mp1445241432.

Initialize the system

Run the following command to initialize Antilles:

antilles init

Initialize users

Step 1. (Optional) Run the following commands to add an LDAP user with username and password:

```
luseradd <HPC_ADMIN_USERNAME> -P <HPC_ADMIN_PASSWORD>
```

Use the LDAP_PASSWORD you configured in Install OpenLDAP-server.

Step 2. Run the following command to import the user to Antilles:

```
#Import user into Antilles and as admin
antilles user_import -u <HPC_ADMIN_USERNAME> -r admin
```

6. Start and log in to Antilles

Start Antilles

If Ganglia is installed, run the following commands:

```
# If the management node has to provide web service, start Nginx on the m anagement node.

systemctl enable nginx

systemctl start nginx
```

```
# If the login node has to provide web service, start Nginx on the login
    node.
systemctl enable nginx
systemctl start nginx

# Start Antilles-related services
systemctl start antilles-ganglia-mond
systemctl start antilles-confluent-mond

# Start Antilles
systemctl start antilles
```

If Icinga2 is installed, run the following commands:

```
# If the management node has to provide web service, start Nginx on the m
anagement node.
systemctl enable nginx
systemctl start nginx

# If the login node has to provide web service, start Nginx on the login
node.
systemctl enable nginx
systemctl start nginx

# Start Antilles-related services
systemctl start antilles-icinga-mond
systemctl start antilles-confluent-mond

# Start Antilles
systemctl start antilles
```

Log in to Antilles

After the Antilles service is started, you can access Antilles by opening <a href="https://<ip of login">https://<ip of login <a href="https://<ip of login">node>:<port>/ in a Web browser.

Note: Replace port with the port number you set in /etc/nginx/conf.d/https.conf which described in section "antilles-portal".

If the installation is correct, the Antilles login page opens. You can log in using the LDAP account set in "Initialize users".

Trouble Shooting

If you forget the password, you may use the command which antilles supported.

Change a user's role

Run the following commands to change a user's role:

```
antilles user_changerole -u <ROLE_USERNAME> -r admin
```

Parameter interpretation:

- -u Specify the username to modify
- -r Specify the role to be set (admin/operator/user)

Resume a user

Run the following command to resume a user:

```
antilles user_resume <SUSPENDED_USERNAME>
```

Parameter interpretation:

• Directly specify users who need to be resumed