



User Guide

A downloadable, printable guide to your phone's features.

HUAWEI UNION

Table of Contents

Introduction	1
About the User Guide	1
Access Instructions on Phone	1
Launch the Guide	1
Get Started	2
Parts and Functions	2
SIM Card	3
SD Card	5
Insert SD Card	5
Remove SD Card	7
Format SD Card	8
Battery Use	9
Insert the Battery	9
Remove the Battery	10
Charge the Battery	11
Turn Your Phone On and Off	12
Use the Touchscreen	13
Activation and Service	15
Complete the Setup Screens	16
Basic Operations	18
Basics	18
Home Screen and Applications (Apps) List	18
Phone Settings Menu	18
Portrait and Landscape Screen Orientation	18
Capture Screenshots	19
Applications	19
Launch Applications	19
Apps List	20
Phone Number	20
Silent Mode/Airplane Mode	21
Silent Mode	21
Airplane Mode	21
Enter Text	22
Touchscreen Keyboards	22
Android Keyboard	22

Tips for Editing Text	23
Google Account	24
Create a Google Account	24
Sign In to Your Google Account	25
Google Play Store	25
Find and Install an App	26
Request a Refund for a Paid App	26
Update an App	27
Uninstall an App	27
Get Help with Google Play	27
Lock and Unlock Your Screen	28
Update Your Phone	28
Update Your Phone Software	28
Update Your Profile	30
Update Your PRL	30
Your Phone Interface	31
Home Screen Basics	31
Home Screen Layout	31
Extended Home Screens	32
Status Bar and Notification Panel	32
Status Bar	32
Notification Panel	34
Customize the Home Screen	34
Change the Wallpaper	34
Add Shortcuts to the Home Screen	35
Add Widgets to the Home Screen	35
Create a Folder	35
Phone App	37
Place and Answer Calls	37
Call Using the Phone Dialer	37
Call Emergency Numbers	38
Answer Phone Calls	39
In-Call Screen Layout and Operations	40
Place a Call from Contacts	41
Call from Call Logs	41
Optional Services	41
Voicemail Setup	41
Visual Voicemail	42

Set Up Visual Voicemail	42
Review Visual Voicemail	43
Listen to Multiple Voicemail Messages	43
Visual Voicemail Options	44
Configure Visual Voicemail Settings	44
Caller ID Blocking	45
Call Waiting	45
Conference Calling	46
Call Forwarding	46
Call Settings	47
Access Call Settings	47
Call Settings Options	47
TTY Mode	48
Contacts	50
Add a Contact	50
Save a Phone Number	51
View Contacts	51
Edit a Contact	52
Delete a Contact	52
Share a Contact	52
Import Contacts	53
Back Up Contacts	53
Messaging and Internet	55
Text and Multimedia Messaging	55
Send a Text Message	55
Send a Multimedia Message (MMS)	56
Save and Resume a Draft Message	56
New Messages Notification	56
Manage Message Conversations	57
Text and MMS Options	59
Gmail	60
Create and Send a Gmail Message	60
Gmail Composition Options	60
Check Received Gmail Messages	61
Use Gmail Labels	61
Archive Gmail Threads	62
Mute Gmail Threads	62
Delete Gmail Threads	62

Search Gmail Messages	62
Report Spam or Phishing Gmail	62
Add Another Google (Gmail) Account	63
Switching Between Gmail Accounts	63
Email	63
Set Up an Email Account	63
Add an Email Account	64
Add an Exchange ActiveSync Account	64
Compose and Send Email	65
Check Your Email	65
Options When Reviewing Email Messages	66
Delete an Email Account	66
Manage Your Email Inbox	66
Browser	67
Use the Browser	67
Browser Settings	68
Add a Bookmark	68
View Browser History	68
Chrome Browser	69
Camera and Video	70
Take Pictures and Record Videos	70
Take a Picture	70
Launch the Camera From the Gallery	70
Capture Modes	71
Record Videos	72
View Pictures and Videos Using Gallery	73
Edit Pictures	74
Share Pictures and Videos	74
Send Pictures or Videos by Email	74
Send a Picture or Video by Multimedia Message	75
Send Pictures or Videos Using Bluetooth	75
Share Pictures and Videos on Facebook	76
Share Pictures on Flickr	76
Share Pictures on Picasa	77
Share Videos on YouTube	77
Camera Settings	78
Apps and Features	79
Navigation Apps	79

Google Maps	79
Hangouts	79
Google Search	79
Calculator	80
Calendar	80
Add an Event to the Calendar	80
View Calendar Events	81
Sync Calendars	81
Synchronize an Exchange ActiveSync Calendar	82
Clock	82
Set Alarms	83
Additional Clock Features	83
Safe	84
Backup	84
Phone Manager	85
YouTube	86
View YouTube Videos	86
Post a Video to YouTube	86
Google Play Music App	87
Play Music with Google Play	87
Google Play Music Screen Layout	87
Create Playlists in Google Play Music	88
Notepad	88
Connectivity	89
Transfer Files between Your Phone and a Computer	89
File Transfer Tips	89
Transfer Files between the Phone and a Computer	89
Wi-Fi	90
Turn Wi-Fi On and Connect to a Wireless Network	90
Wi-Fi Settings	90
Disconnect Wi-Fi	91
Wi-Fi Direct	91
Bluetooth	91
Bluetooth Information	92
Enable the Bluetooth Feature	92
Pair Bluetooth Devices	92
Connect to a Paired Bluetooth Device	93
Send Information Using Bluetooth	94

Receive Data via Bluetooth	94
Settings	96
Basic Settings	96
Wi-Fi Settings Menu	96
Bluetooth Settings	97
Location Access Settings	98
Data Traffic Management Settings	98
More Settings	99
Display Settings	99
Sound Settings	100
Storage Settings	101
Battery Settings	101
Applications Settings	101
Security Settings	102
Lock Screen Settings	103
Screen Lock	103
Disable the Screen Lock	104
Language & Input Settings	105
Backup and Reset	106
Accounts	107
Date & Time Settings	108
Accessibility Settings	108
About Phone	110
For Assistance	112
Troubleshooting	112
Specifications	113
Boost Account Information and Help	114
Manage Your Account	114
Re-Boost	115
Copyright Information	116
Index	117

Introduction

The following topics describe the basics of using this guide and your new phone.

About the User Guide


Thank you for purchasing your new Huawei Union. The following topics explain how best to use this guide to get the most out of your phone.

Before Using Your Phone

Read the Get Started guide and Important Information booklet that were packaged with your phone thoroughly for proper usage.

Accessible services may be limited by subscription contract conditions.

Descriptions in the User Guide

Note that most descriptions in this guide are based on your phone's setup at the time of purchase. Unless otherwise noted, instructions begin from the phone's home screen, which is displayed by tapping . Some operation descriptions may be simplified.

Screenshots and Key Labels

Screenshots and other illustrations in this user guide may appear differently on your phone. Key labels in the user guide are simplified for description purposes and differ from your phone's display.

Other Notations

In the user guide, the phone may be referred to either as "phone," "device," or "handset." A microSD™ or microSDHC™ card is referred to as an "SD Card" or a "memory card."

Access Instructions on Phone

These topics will help you find help on your new phone and will introduce the basics of using your phone's touchscreen if you are a new user.

Launch the Guide

For the full user guide, go to <http://devicehelp.boostmobile.com/> and search for HUAWEI Union.

Get Started

The following topics give you all the information you need to set up your phone and wireless service the first time.

Parts and Functions


These topics illustrate your phone’s primary parts and key functions.

Note: Your phone's screens and apps layouts are subject to change. This user guide uses sample images only.




Phone Layout

The following illustration outlines your phone’s primary external features and keys.

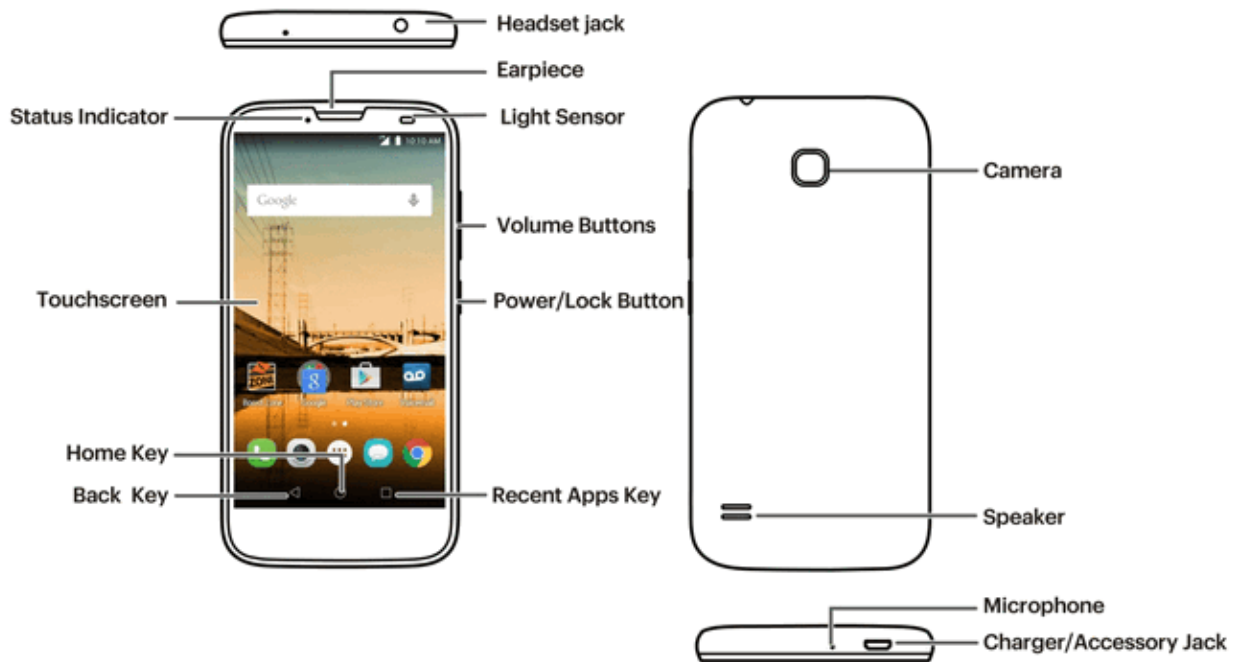Note: Before you start, remove the TP protective film.



Part	Description
Status indicator	Displays a phone notification, charging status, or alert.
Touchscreen	Displays all the information needed to operate your phone, such as the call status, the Contacts list, and the date and time. Also provides one-tap access to all of your features and applications.

Part	Description
Home key 	Returns you to the Home screen.
Back key 	Lets you return to the previous screen, or close a dialog box, options menu, the Notifications panel, or onscreen keyboard.
Recent apps key 	Displays a list of recently used applications.
Power key	Lets you turn the phone on or off or turn the screen on or off, or switch your phone to silent mode, vibration mode, or airplane mode.
Volume key	Allows you to adjust the ringtone or media volume or adjust the voice volume during a call.
Light sensor	Detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call. While talking on the phone, the sensor detects talk activity and locks the keypad to prevent accidental key presses.
Earpiece	Lets you hear the caller and automated prompts.
Headset jack	Allows you to plug in either a stereo headset or an optional headset for convenient, hands-free conversations.
Camera	Lets you take pictures and videos.
Speaker	Lets you hear the different ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
Microphone	Transmits your voice for phone calls or records your voice or ambient sounds for voice recordings and videos.
Micro USB port	Allows you to connect the phone charger or the USB cable (included).

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

SIM Card

The SIM card is an IC card containing phone number and other customer information.

Handling a SIM Card

Keep the following in mind when handling a SIM card.

- Customer is responsible for any damage caused by inserting SIM card in another-brand IC card reader, etc. The company is not responsible in such case.
- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage SIM card.
- See instructions included with SIM card for handling.
- SIM card is the property of the company.


- SIM card is replaceable (at cost) in case of loss/damage.
- Return SIM card to the company when cancelling subscription.
- Returned SIM cards are recycled for environmental purposes.
- Note that SIM card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on SIM card. The company is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your SIM card or phone (SIM card inserted) is lost/stolen. For details, contact Customer Service.
- Always power off phone before inserting/removing SIM card.

Insert a SIM Card

Follow these instructions to insert a SIM card. Remember to power off your phone before inserting a SIM card.


Note: Your phone's SIM card is preinstalled. These instructions are for reference only.

1. Remove the battery cover.

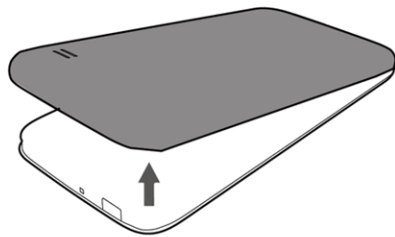


- Lift gently in the direction shown.

2. Insert a SIM card.

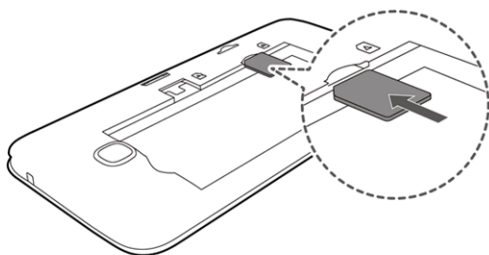


- Insert gently with gold IC chip facing downward.

3. Insert the battery.

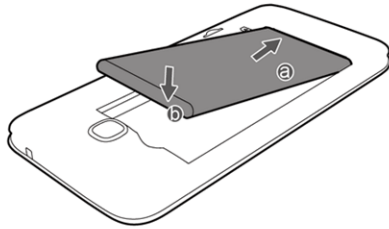

- Angle the edge labeled a (with the contacts) into the bottom end of the battery compartment.
- Push the edge labeled b into the compartment until the battery clicks firmly into place.

4. Attach the battery cover.

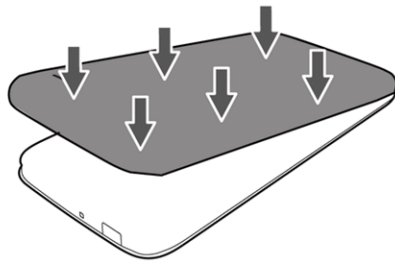

- Make sure all the tabs are secure and there are no gaps around the cover.

SD Card

Your phone supports the use of an optional SD card (not included) to expand its storage capacity. It supports cards up to 32 GB. Some cards may not operate properly with your phone.

! SD Card Cautions

Data: Information stored on SD Card can become lost or changed accidentally or as a result of damage. It is recommended that you keep a separate copy of important data. The company is not responsible for damages from data that is lost or changed.

Reading/Writing Data: Never power off or remove battery while reading or writing data.


Battery Level: A low battery charge may prevent reading/writing to SD Card.

Handling SD Card: Use/store SD Cards away from the reach of infants. May cause choking if swallowed.

Insert SD Card


Follow these steps to insert an optional SD card (not included). Make sure to power your phone off before inserting or removing a SD card.

1. Remove the battery cover.

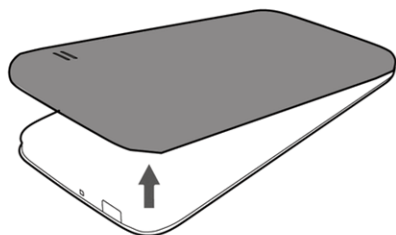


- Lift gently in the direction shown.

2. Insert a SD card.

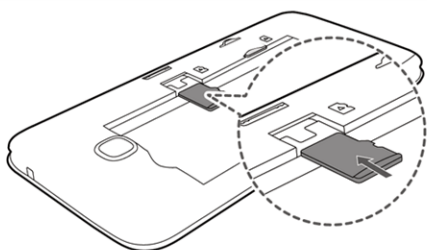


- Insert SD Card all the way gently without bending and with terminals facing down.
- Insert only SD Cards.

3. Insert the battery.

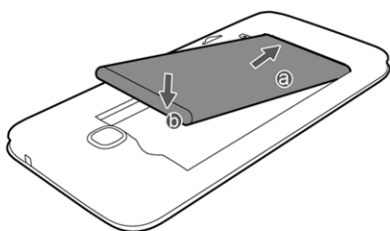

- Angle the edge labeled a (with the contacts) into the bottom end of the battery compartment.

- Push the edge labeled b into the compartment until the battery clicks firmly into place.

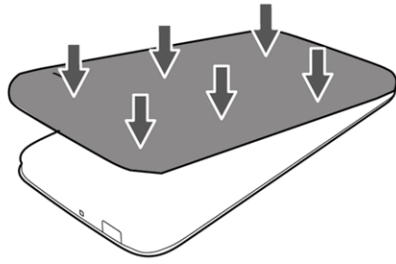


- Make sure all the tabs are secure and there are no gaps around the cover.

Remove SD Card


Follow these instructions to remove an SD card. Always power the phone off before inserting or removing an SD card.

1. Remove the battery cover.

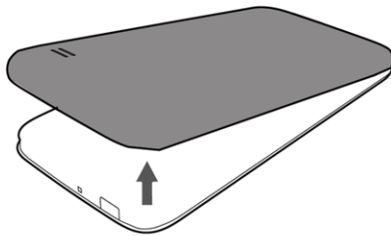


- Lift gently in the direction shown.

2. Remove the battery.

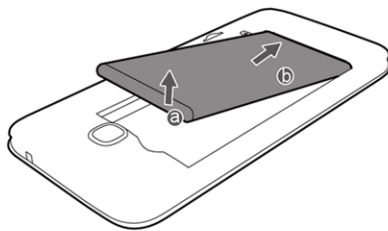


- Lift upward gently as shown.

3. Remove the SD card.

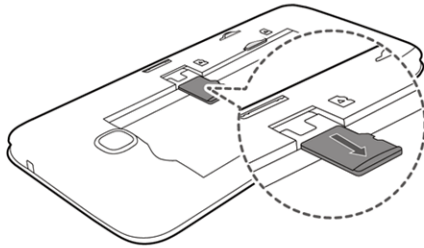


4. Insert the battery.

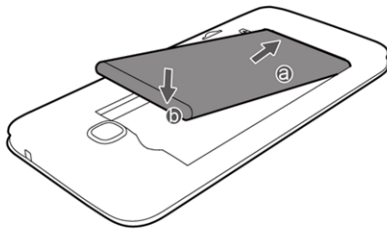

- Angle the edge labeled a (with the contacts) into the bottom end of the battery compartment.
- Push the edge labeled b into the compartment until the battery clicks firmly into place.

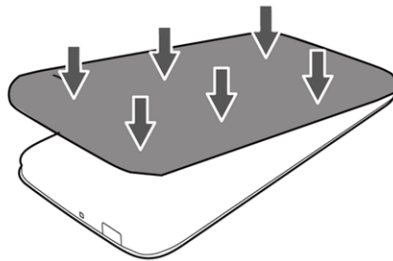

5. Attach the battery cover.



- Make sure all the tabs are secure and there are no gaps around the cover.

Format SD Card

When you insert an optional SD card for the first time, it is recommended that you format it on your phone.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Storage** > **My SD card** > **Erase SD card**.
3. Tap **Erase SD card** again.
4. Tap **Erase everything** to confirm.

- ❖ All data on the SD card is erased, and the card is formatted for use on your phone.

Battery Use

The following topics explain how to insert and remove your phone's battery.

! Battery Cautions

Storage: Avoid storing or leaving battery with no charge remaining. Saved information and settings may become lost or changed, or battery may become unusable. Charge once every six months before storing or leaving unused for a long period.

Bulges: Depending on use, bulges may appear near end of battery life. This does not affect safety.


Replacing Battery: The battery is a consumable item. It needs to be replaced if operating time shortens noticeably. Purchase a new battery.

Cleaning: Clean soiled terminals between battery and phone with a clean, dry cotton swab. Soiled terminals can result in a poor connection and prevent charging, etc.

Insert the Battery


Follow these instructions to insert your phone's battery safely and properly.

1. Remove the battery cover.

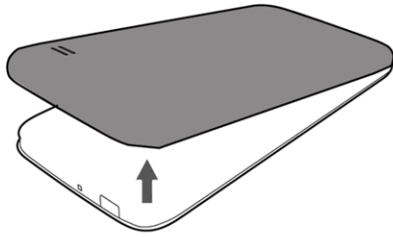


- Lift gently in the direction shown.

2. Insert the battery.

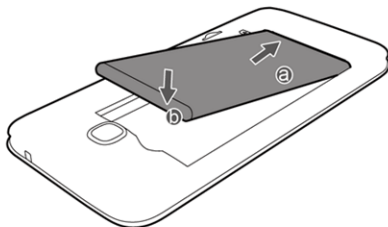

- Align the contacts of the battery with the contacts in the phone.

3. Attach the battery cover.

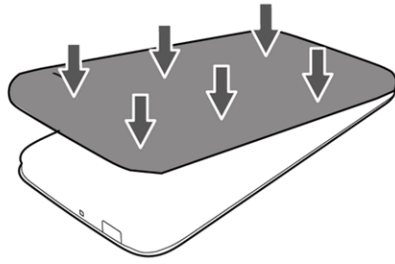


- Make sure all the tabs are secure and there are no gaps around the cover.

Remove the Battery


Follow these instructions to remove your phone's battery. Always power the phone off before removing the battery.

1. Remove the battery cover.

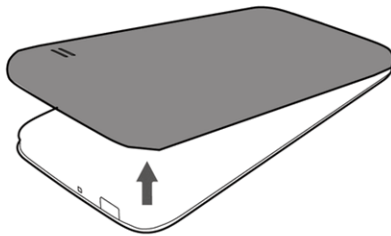


- Lift gently in the direction shown.

2. Remove the battery.

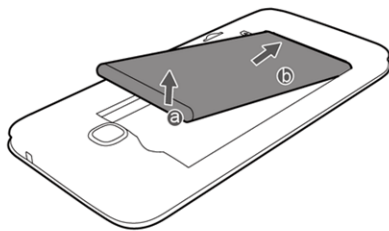

- Lift upward gently as shown.

3. Attach the battery cover.

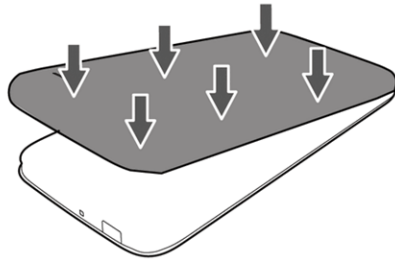


- Make sure all the tabs are secure and there are no gaps around the cover.

Charge the Battery

Follow these instructions to charge your phone's battery using either the included AC adapter or via a USB connection on your computer.

Charge Using the AC Adapter

1. Plug the USB connector into the charger/accessory jack on the bottom of your phone.

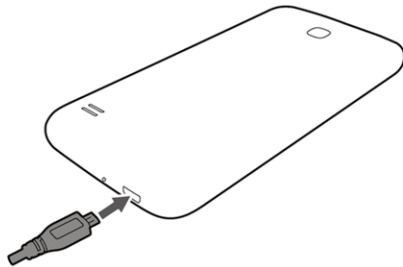


2. Plug the other end of the USB cable into the AC adapter.
3. Plug the AC adapter into an electrical outlet.
 - ❖ The indicator light illuminates when charging starts. The light turns green when the battery is almost full or already full.
4. After charging, disconnect the phone from the charger.
 - Unplug the AC adapter from the outlet, and remove the USB cable from the phone and the AC adapter.

Charge Using a PC Connection

Before using a PC connection to charge your phone, ensure that the computer is turned on. Depending on the type of connection, your phone's battery may not charge.

1. Insert the small end of the USB cord into the charger/accessory jack on the bottom of your phone.

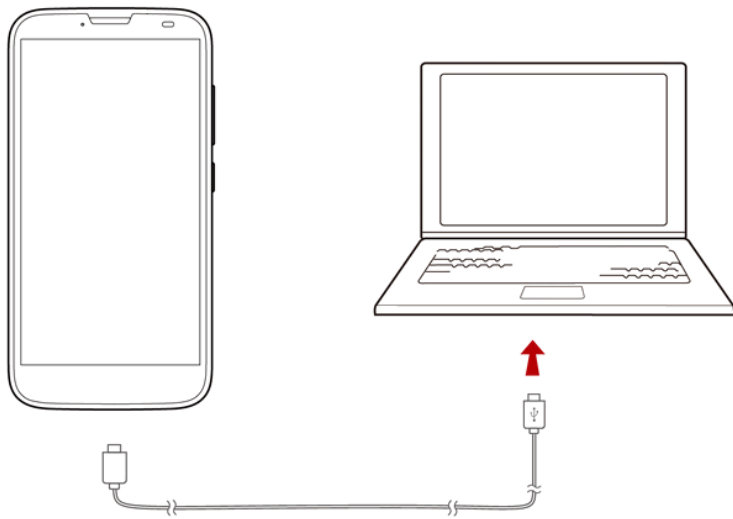

2. Insert the large end of the USB cord into an external USB port on your computer.
3. After charging, remove the USB cable from both the phone and the computer.

Turn Your Phone On and Off

The instructions below explain how to turn your phone on and off.

Turn Your Phone On

- Press and hold the **Power/Lock** button.
- ❖ Your phone will power on. Depending on the settings, you may see the lock screen.
 - See [Lock and Unlock Your Screen](#) and [Screen Lock](#) for information about using the screen lock.
 - The first time you turn the phone on, you will see the startup screens. See [Complete the Setup Screens](#) for details.
 - If your phone is not yet activated, see [Activation and Service](#) for more information.

Turn Your Phone Off

1. Press and hold the **Power/Lock** button to open the phone options menu.
 2. Tap **Power off** to turn the phone off.
- ❖ Your phone will power off.

Your screen remains blank while your phone is off (unless the battery is charging).

Use the Touchscreen

Your phone's touchscreen lets you control actions through a variety of touch gestures.


Tap or Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap or touch them with your finger.



Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.

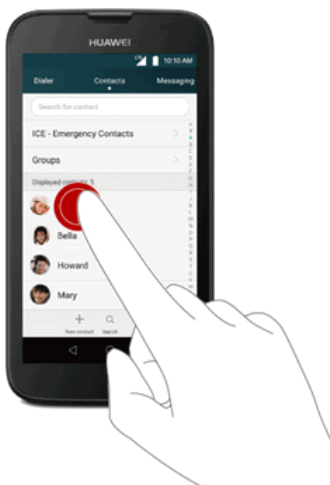

Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.



Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.



Flick

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.



Pinch and Spread

“Pinch” the screen using your thumb and forefinger to zoom out or “spread” the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)



Activation and Service

Before using your phone, you must set up your service with Boost Mobile. You will need your phone’s serial number (MEID), printed on a sticker inside the battery compartment.

For more information about your Boost Mobile account, see [Boost Account Information and Help](#).

Create Your Account and Pick Your Plan

Set up your Boost Mobile account.

1. From your computer, visit boostmobile.com/activate.
2. Enter your phone's MEID and click **start activation process**.
 - Your phone's MEID (serial number) is printed on the sticker located on the back of your phone in the battery compartment. This number can also be found on the bottom panel of the phone's package.
3. Follow the remaining instructions to choose your plan and select a payment method.
4. Follow the activation instructions below and you'll be able to start using your phone.

Note: You can also activate by phone by calling **1-888-BOOST-4U** (1-888-266-7848) from any other phone.

Activate Your Phone

After setting up your account on boostmobile.com, simply turn your device on. Your device is designed to activate automatically. If you are swapping from another Boost Mobile device to a new one, be sure to turn off the old device before swapping the serial number (MEID). Once the MEID swap is complete, turn on the new device and the programming information will be pushed to your device automatically.

You can also start the activation process manually.

- From home, tap **Apps**  > **Settings**  > **Activate this device**.

Complete the Setup Screens

The setup screens help you set up certain features and preferences on your phone. Once your phone has been turned on, you will see a Welcome message. You can then complete the setup process.

Note: You may be able to complete the setup screens before your phone has been activated on your account.

1. From the Welcome screen, select a language and tap **Next** to get started.
 - To skip any section, tap **Next** or **Skip**.

Note: On the Welcome screen, there may also be an **Accessibility** button. If you are visually impaired or hard of hearing, tap **Accessibility** to change the accessibility settings.

2. Follow the onscreen instructions to complete each section. For each topic, you will have the option to skip it and continue to the next screen.

- **Wi-Fi®** – If prompted, follow the prompts to sign in to an available Wi-Fi network. For secured Wi-Fi networks, you will need to enter a password. See [Wi-Fi](#) for more details.
 - **Google (Add your account)** – Tap **Enter your email** and complete the steps to sign in to your current Google Account, or tap **Or create a new account** to set up a new Google Account. Tap **Skip** to skip Google setup. The following options may apply depending on your selection:
 - **Enter your email** – Enter your Gmail address and password and tap **Accept** to agree to the terms of service and privacy policy and sign in to your current Google Account.
 - **Or create a new account** – Follow the instructions to sign up for a new Google Account. There will be screens to enter your first and last names, create an email address (Gmail), create a password, enter recovery information (including a backup email address and recovery question), an option to join Google+, and an option to enable purchases from the Google Play store app. Tap **Next** between each screen.
 - **Set up payment info** – Select billing options for purchases made through Google Play. Select **Remind me later** to skip this step.
 - **Get your apps & data** – If you are using a Google Account you had set up on a previous Android device, you can choose to use that device's backup information to restore backed-up apps, data, system settings, Wi-Fi passwords, etc., from the previous device to your new phone. Tap **Set up as a new device** to skip this step.
 - **Google services** – Select your Google location and service options and then tap **Next**.
 - **Terms and Conditions** – Read any applicable End User License Agreements or Terms and Conditions for using your phone, and tap **Agree** to continue.
 - **Personalize your phone** – If applicable, enter your first and last name and tap **Next**. This information is used by the phone to personalize certain apps.
3. Tap **Finish**. Your setup is now complete. Follow the onscreen instructions to learn about basic tap menu navigation, view tutorials, or just get started.
- ❖ Your phone is now set up for use. If you skipped any part of the setup, you can access additional options through the Apps screen or through Settings.

Note: You do not need to sign up for a Google Account to use your phone. However, to download apps from Google Play, you must link your phone to a Google Account.

Basic Operations



The following topics outline basic features and operations of your phone.

Basics

The following topics offer an overview of your phone's basic operations.

Home Screen and Applications (Apps) List


Most of your phone's operations originate from the home screen or the apps list.

1. From any screen press the **Home** key  to display the home screen.
2. Tap **Apps**  to display the apps list.

For information about using the home screen, see [Home Screen Basics](#).


Select Options and Navigate Screens

Tap icons, onscreen keys, and other items to open or activate the assigned function.

- Tap **Back**  to return to the previous screen.

Recent Applications

You can display a list of recently used applications using the Recent Apps key.

- Tap **Recent Apps**  to view a list of recently used applications.

Phone Settings Menu


You can customize your phone's settings and options through the Settings menu.

- From home, tap **Apps**  > **Settings** .

For more information, see [Settings](#).


Portrait and Landscape Screen Orientation

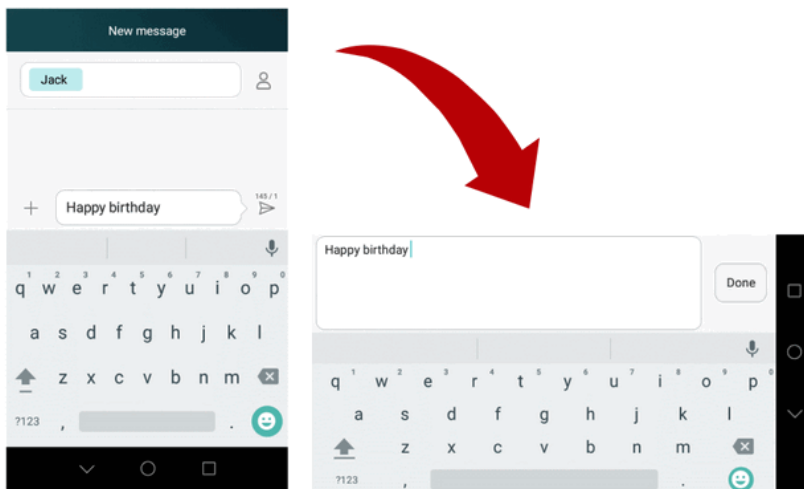

The default orientation for your phone's screen is portrait (vertical), but many apps will change to landscape orientation (widescreen) when you rotate the phone sideways.



Note: Not all screens will adjust for landscape orientation.



Turn Screen Rotation On or Off

1. Pull down the status bar to display the quick settings menu.
2. Tap **Auto-rotate**  to turn the option on or off.
 - You may need to scroll left or right to see the Screen rotation option.

Note: You can also set the rotation option from the main settings menu. From home, tap **Apps**  **>Settings**  **> Display > Auto-rotate** screen.

Capture Screenshots

You can use your phone's power and home keys to capture screenshots.

- Press and hold the **Power/Lock** button and **Volume** down key at the same time to capture a screenshot of the current screen.
- ❖ The current screenshot will be captured and stored in the Screenshots album in the phone's Gallery. From home, tap **Apps**  **> Gallery** .

Applications

The following topics describe how to access the applications (apps) list and launch apps on your phone.

Launch Applications

All installed apps can be accessed and launched from the apps list.

1. From home, tap **Apps** .
















❖ The apps list opens.

2. Tap and app icon to launch the corresponding application.

❖ The application opens.



Apps List

The apps list expands to include any apps you download and install on your phone. The following table outlines the primary apps that have been preinstalled on your phone.

App	Function
 Dialer	Make and answer calls. Your phone supports smart dialing and dialing from your contacts list or call log.
 Contacts	Manage phone numbers, email addresses, and other contact details. You can import contacts from your previous phone.
 Messaging	Send or receive text messages and multimedia messages.
 Browser	Browse Web pages and manage your bookmarks.
 Email	Send or receive emails, and synchronize email accounts.
 Camera	Take photos or shoot videos.
 Gallery	Browse, manage, or edit photos.
 Play Music	Manage your playlists and play songs.
 Files	Manage files and applications on your phone.
 Phone Manager	Run security scans of your phone, filter harassment calls and messages, set application access permissions, and optimize the system.
 Backup	Back up your phone data to prevent data loss.
 Calendar	Manage your personal and work lives on schedule and create event reminders.
 Clock	Add alarms, view world times, and use timers and stopwatches.
 Notepad	Record your thoughts and other useful information.
 Settings	Configure your phone settings.

Phone Number

Follow the instructions below to display your phone's wireless phone number.

1. From home, tap **Apps**  > **Settings**  > **About phone**.
2. Tap **Status**.
 - ❖ You will see the number listed under **My phone number**.

Silent Mode/Airplane Mode

The following topics explain how to use your phone's Silent Mode and Airplane Mode settings.

Silent Mode


Silent mode sets your phone's ringtone, operation sounds, notifications, etc., not to sound to avoid disturbing others around you.

Note: Camera shutter, video start/stop tones, and certain other sounds may still be active during silent mode.

To set silent mode:

1. Press and hold the **Power/Lock** button to display the device options menu.
2. Tap the speaker icon until you see **Silent**.


❖ Your phone is now in silent mode.

Tip: You can also access silent mode through the status bar menu. Drag the status bar down and tap the speaker icon until you see **Silent** .

To restore sound settings:

1. Press and hold the **Power/Lock** button to display the device options menu.
2. Tap the speaker icon until you see **Sound**.

❖ Your phone's sound settings are now restored.


Tip: You can also restore sound through the status bar menu. Drag the status bar down and tap the speaker icon until you see **Sound** .

Airplane Mode

Airplane mode turns off all functions that emit or receive signals, while leaving your phone on so you can use apps that don't require a signal or data.

To turn on airplane mode:

1. Press and hold the **Power/Lock** button to display the device options menu.
2. Tap **Airplane mode**.

❖ Your phone is now in airplane mode. You will see the airplane mode icon  in the status bar.

To turn off airplane mode:

1. Press and hold the **Power/Lock** button to display the device options menu.
2. Tap **Airplane mode**.

❖ Your phone's wireless connection features are now restored.

Enter Text

You can type on your phone using one of the available touchscreen keyboards or Google voice typing.

Touchscreen Keyboards


Your phone offers you Android keyboard for entering text. The keyboard appear automatically onscreen when you tap a text entry field, and they can be used in either portrait or landscape mode. You can also use the Google Voice typing option to enter text using your voice.

Android keyboard lets you use a traditional QWERTY setup to enter text. Additional options expand your ability to enter text faster and more accurately. See [Android Keyboard](#) for details.

Note: Keyboard layouts and options may change depending on where you're using them. For example, if you're entering text to do a Web search, a search icon may be available instead of an enter key.


Android Keyboard

The Android keyboard offers a traditional QWERTY keyboard setup for entering text by tapping keys (like on a computer), along with enhancements and options that allow you to enter text faster and more accurately, such as continuous key input, personalized usage dictionaries, and more.

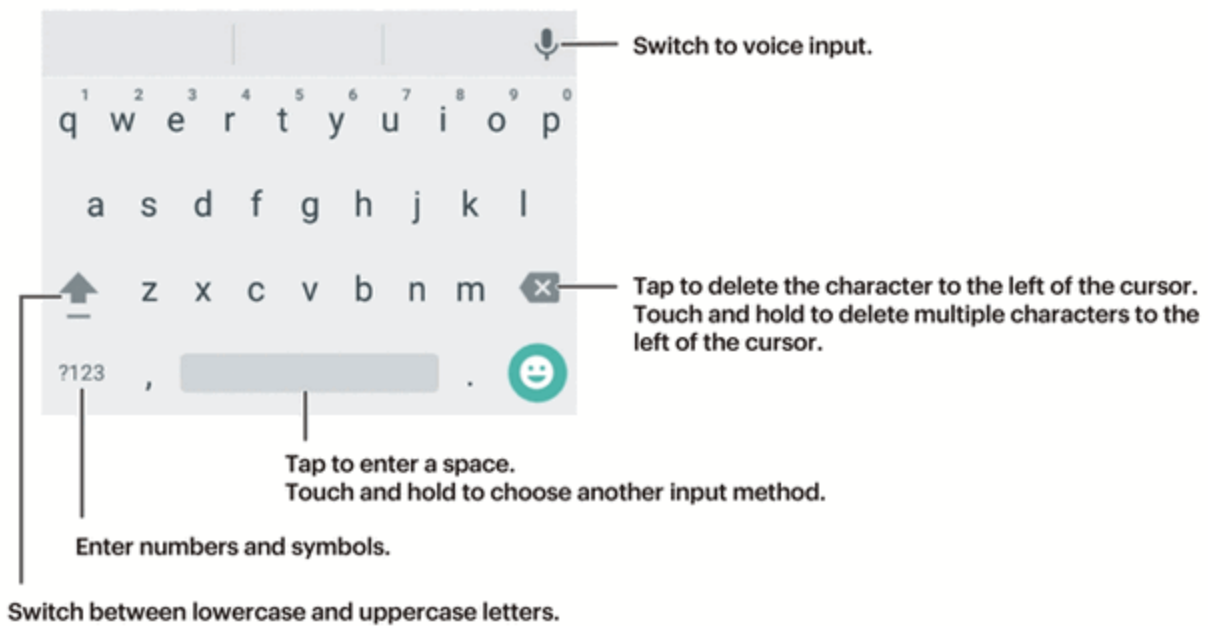


Tips for Editing Text

Your phone gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

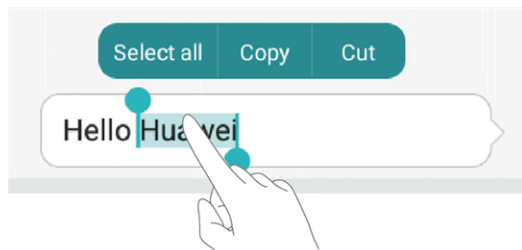

- **Select text:** Touch and hold the text to bring up. Then drag or to select more or less text, or tap **Select all** to select all text in a text box.
- **Copy text:** Select text and tap **Copy**.
- **Cut text:** Select text and tap **Cut**.
- **Paste text:** Touch and hold where you want to insert the text and then tap **Paste**.

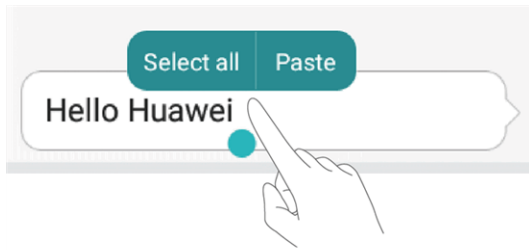

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone's screen is off.

Google Account

You will need a Google Account to access several phone features such as Gmail, Google Maps, Hangouts, and Google Play applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your phone and your online Google Account.

! Google Account Cautions

Be sure not to forget your Google Account ID or password.

Create a Google Account

If you do not already have a Google Account, you can create one online or using your phone.



Note: You can also create and sign into your Google/Gmail account through your phone's Setup application.

Note: Although you need a Gmail account to use certain features of your phone, such as Google Play, you do not need to use Gmail as the default account for your phone.

Create a Google Account Online

1. From a computer, launch a Web browser and navigate to google.com.
2. On the main page, click **Sign-in > Create an account**.
3. Follow the onscreen prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

Create a Google Account Using Your Phone



1. From home, tap **Apps**  > **Settings**  > **Accounts**.
2. Tap **Add account**.
3. Tap **Google** and then tap **Or create a new account**.

4. Follow the onscreen instructions to create your account.

Note: When setting up a new Google Account, either on your phone or online, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your phone.

Sign In to Your Google Account

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.

1. From home, tap **Apps**  > **Settings**  > **Accounts**.
 2. Tap **Google**.
 3. Enter your Gmail username and password, and then tap **Next**.
 4. After your phone connects with the Google servers, select the items you would like to sync with your phone and then tap **Sync now**.
- ❖ You are signed in to your Google Account, and your phone will synchronize the selected items.

Google Play Store

Google Play™ is the place to go to find new Android apps, books, movies, and music for your phone. Choose from a wide variety of free and paid content ranging from productivity apps and games to bestselling books and blockbuster movies and music. When you find what you want, you can easily download and install it on your phone.

To access the Google Play store app, you must first connect to the Internet using your phone's Wi-Fi or mobile data connection and sign in to your Google Account. See [Browser](#) and [Sign In to Your Google Account](#) for details.



Installing Applications

Many different kinds of applications can be installed on your phone from Google Play (provided by Google Inc.). The company is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Important: Our policies often do not apply to third-party applications. Third-party applications may access your personal information or require us to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Find and Install an App

When you install apps from Google Play app and use them on your phone, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your phone. Download and install only apps that you trust.

1. From home, tap **Apps**  > **Play Store** .
2. When you open the Google Play store app for the first time, the Terms of Service window will appear. Tap **Accept** to continue.
3. Browse through the categories (**Apps, Games, Movies & TV, Music, Books, or Newsstand**), find an item you're interested in, and tap the name.
 - Browse through featured apps. Scroll through the list of featured apps when you open Google Play.
 - Tap on the Google Play search bar at the top of the screen, enter the name or type of app you're looking for.
4. Tap an app to read a description about the app and user reviews.
5. Tap **INSTALL** (for free applications) or the price (for paid applications).

Note: If you have not already done so, you will need to set up a payment method to purchase paid apps from Google Play.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your phone. If you agree to the conditions, tap **ACCEPT** (for free apps) or **ACCEPT** and then **BUY** (for paid apps) to begin downloading and installing the app.
 - If you have not already set up a payment method, tap **CONTINUE** and then follow the prompts to arrange payment and complete the purchase.
- ❖ The selected app is downloaded and installed on your phone.

Warning: Read the notification carefully! Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you tap **OK** on this screen, you are responsible for the results of using this item on your phone.




Purchasing Applications

Purchase apps at your own risk. The company is not responsible for any disadvantage resulting for user or third parties.

Request a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your credit card is not charged and the app is uninstalled from your phone.




If you change your mind, you can install the app again, but you can't request a refund a second time.

1. From home, tap **Apps**  > **Play Store** .
2. Tap  > **My Apps**.
3. Tap the app to uninstall for a refund. The details screen for the app opens.
4. Tap **Refund**, and then tap **Yes** to confirm. Your app is uninstalled and the charge is cancelled.

Update an App




Depending on your settings, many apps will update automatically, or you can update apps directly from the Play Store app.

Update an App Directly

1. From home, tap **Apps**  > **Play Store** .
2. Tap  > **My Apps**.
3. Tap the app you want to update, and then tap **UPDATE** > **ACCEPT**.
 - ❖ The app update is downloaded and installed.




Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.

1. From home, tap **Apps**  > **Play Store** .
2. Tap  > **My Apps**.
3. On the Installed screen, tap the app you want to uninstall, and then tap **UNINSTALL** > **OK**.
 - ❖ The app is uninstalled and removed from your phone.

Get Help with Google Play

The Google Play store app offers an online help option if you have questions or want to know more about the app.

1. From home, tap **Apps**  > **Play Store** .
2. Tap  > **Help & Feedback**.
 - ❖ The Web browser will take you to the Google Play Help Web page, where you will find comprehensive, categorized information about Google Play.

Lock and Unlock Your Screen

Your phone allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the **Power/Lock** button. Pressing the **Power/Lock** button again or receiving an incoming call will turn on your phone screen and show the lock screen.

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone's screen is off.

Note: For information on how to adjust the time before the screen turns off, see [Display Settings](#).

Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power/Lock** button.
2. Slide your finger in any direction to unlock the screen.
 - If you have set up a screen lock, you will be prompted to draw the pattern or enter the password or PIN. See [Screen Lock](#).

Update Your Phone

From time to time, updates may become available for your phone. You can download and apply updates through the **Settings > System update** menu.

Software Update Cautions

During update: The phone cannot be used until the software update is complete. It may take time to update your phone's software.

Signal during update: Update your phone where signal reception is good, and do not change location during the update process. Make sure the battery is adequately charged before beginning an update. A weak signal or low battery during an update may cause the update to fail. An update failure may disable the phone.

Other functions during update: Other phone functions cannot be used during a software update.

Update Your Phone Software

You can update your phone's software using the System Update option.

Before Updating Your Phone



Updating your phone may result in a loss of saved data depending on the condition of your phone (malfunctioning, damaged, water seepage, etc.). You must back up all critical information before updating your phone firmware.

Back Up All Data Prior to Update

To back up your Gmail information:

1. From home, tap **Apps**  > **Settings**  > **Accounts** > **Google**.
2. Tap the **Sync-all** to sync your Google Account information.

To back up stored text messages:




1. From home, tap **Apps**  > **Messaging**  .
2. Select the text message from the list to view the message thread.
3. Touch and hold on a portion of the text message from the string. The Message options context menu appears.



Note: You can back up stored text messages by forwarding them to your own phone number. Open the messages after you have updated your firmware.

4. Tap **Forward**.
5. Enter your phone number and tap **Send**.

To back up your Google apps:


Your Google app purchases are reloaded remotely and can be re-installed after the update is applied.

1. From home, tap **Apps**  > **Play Store**  .
2. Tap  > **My Apps** > **ALL** tab.
3. Scroll through the list of previously downloaded Google apps and choose those you wish to reinstall.
4. Follow the onscreen instructions.

As an added precaution, to preserve any data on your SD card, please unmount it from your phone prior to starting the update process. From home, tap **Apps**  > **Settings**  > **Storage** > **Unmount SD card**.



Update Your Phone's Software

Once you have backed up all your data, use the **Update now** option to update your phone's software.

1. From home, tap **Apps**  > **Settings**  > **System update**.
2. Tap **Update Huawei software**.



- ❖ Your phone automatically downloads and installs any available updates. You may be required to power your phone off and back on to complete the software upgrade.

Confirm Your Current Phone Firmware

1. From home, tap **Apps**  > **Settings**  > **System update** > **Update firmware**.
2. Follow the onscreen instructions.

Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your phone.



1. From home, tap **Apps**  > **Settings**  > **System update** > **Update profile**.
2. Follow the onscreen instructions.

- ❖ The phone will download and install the profile update and you will see a confirmation when complete.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

Update Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. From home, tap **Apps**  > **Settings**  > **System update** > **Update PRL**.
2. Follow the onscreen instructions.

- ❖ The phone will download and install the PRL update and you will see a confirmation when complete.

Your Phone Interface


The following topics describe how to use and customize your phone’s home screen, understand the status bar, and use the notifications window.

Home Screen Basics


The home screen is the starting point for your phone’s applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more.

Home Screen Layout

Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

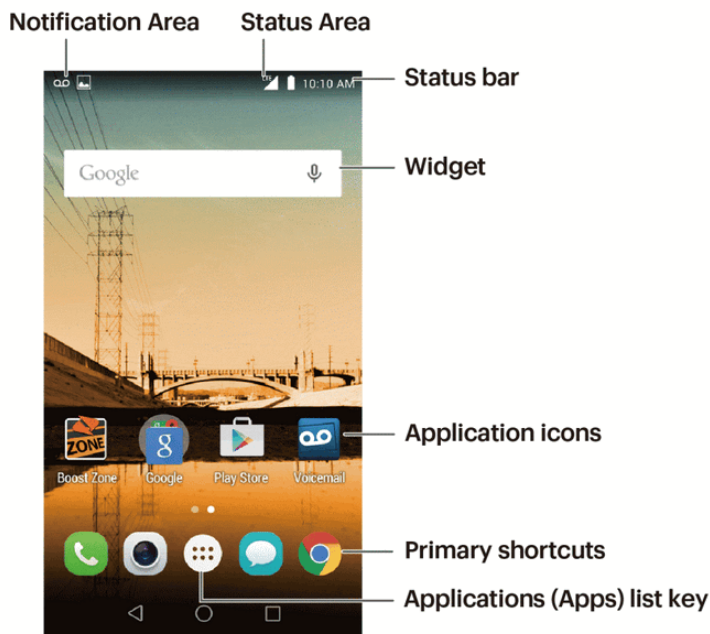


Item	Description
Notification Area	The notification area of the Status Bar (on the left) displays notifications for incoming messages, missed calls, application updates, and more.
Status Area	The status area of the Status Bar (on the right) displays phone and service status information such as signal strength, battery status, Wi-Fi and data connectivity, ringer status, and time.
Status bar	The status bar displays icons to notify you of your phone’s status (on the right side) and notifications (on the left side).
Widget	Widgets are self-contained onscreen apps that reside on your phone’s home screen.

Item	Description
Application icons	Application icons are shortcuts to favorite applications. You can add and remove these shortcuts as you wish.
Primary shortcuts	Primary shortcuts are application shortcuts that appear in the same location on all of your phone's home screens. These are customizable except for the Applications (Apps) shortcut, which remains static.
Applications (Apps) list key 	Tap to open the applications (apps) list. The apps list key is a primary shortcut available from all home screens.

Note: Your phone's home screens cycle through so that you can keep swiping in one direction and make it back to the main home screen. The small circles above the primary shortcuts let you know your current screen position.

Tip: Tap **Home**  to return to the main home screen from any other screen.

Extended Home Screens

In addition to the main home screen, your phone features extended home screens to provide more space for adding icons, widgets, and more. Press **Home**  to display the main home screen and then slide the screen right or left to move from the main screen to an extended screen.







Status Bar and Notification Panel










Your phone's status and notifications are available at a glance at the top of the screen.

Status Bar















The status bar at the top of the home screen provides phone and service status information on the right side and notification alerts on the left. To view the notification panel or access the quick settings menu, pull down the status bar from the top of the screen.






Main Status Icons

Icon	Status
	Bluetooth® active
	GPS active
	Wi-Fi active
	Downloading
	Vibrate
	Network (full signal)

Icon	Status
	No SIM card found
	Network (roaming)
	4G LTE data service
	3G (data service)
	Airplane mode
	Sync active
	Alarm set
	Battery (charging)
	Battery (full charge)

Main Notification Icons

Icon	Notification
	Missed call
	New voicemail
	New email
	New Gmail
	New text or MMS message
	Wi-Fi network available
	Connected to a Wi-Fi network
	Uploading data
	Downloading data
	Upcoming events
	USB connection
	Phone memory full
	Sign-in or synchronization problem
	Synchronizing data

Icon	Notification
	Synchronization failed
	Portable Wi-Fi hotspot on
	More notifications
	Headset plugged in
	USB debugging mode enabled


Notification Panel

Your phone's notifications appear at the left side of the status bar, and you can access the full notification panel by pulling down the status bar. From there, you can check notifications, download updates, open messaging apps, use the quick settings menu, and more.

Open the Notification Panel

- Pull down the status bar. (Slide your finger down from the top of the screen.)
- ❖ The notification panel opens. To check notifications, tap an item in the list.

Close the Notification Panel

- Slide the notification panel up. (Slide your finger up from the bottom of the screen.)
- Tap **Back**  to close the notification panel.

Notification Panel Layout


The notification panel gives you access both to notifications and the quick settings menu.

Swipe down from the status bar to open the notification panel. Swipe left or right to switch between the notification and shortcut tabs.

Customize the Home Screen

Learn how to set the wallpaper and add, move, or remove shortcuts, widgets, and folders from the home screen.



Operations for Rearranging the Home Screen

- **Moving Widgets and Icons:** From home, touch and hold an item and then drag it to the desired location.
- **Deleting Widgets and Icons:** From home, touch and hold an item and then drag it to **Remove** .

Change the Wallpaper

Select and assign your phone's background wallpaper.

1. From home, touch and hold an empty space, and then tap **WALLPAPERS**.

- You can also access the wallpaper menu through settings. Tap **Apps**  > **Settings**  > **Display > Wallpaper**.


2. Tap an option to select the wallpaper.

- **Home screen** to set the background wallpaper for your home screen. Select from **Gallery**, **Wallpapers**, or **Live Wallpapers**.
- **Lock screen** to set the wallpaper for your phone's lock screen. Select from **Gallery** or **Wallpapers**.
- Tap **Random change** switch to make the home screen wallpaper change automatically at periodic intervals.

Note: If you select **Gallery**, you will need to select an album and a picture. Once selected, use the crop tool to resize and position the image and then tap **Done**.

Add Shortcuts to the Home Screen

You can add shortcuts for quick access to favorite apps from the home screen.

1. From home, tap **Apps**  .
2. Touch and hold an app icon.
3. Drag the icon to an empty location on one of the home screens.

❖ The shortcut is added to the home screen.

Add Widgets to the Home Screen

You can add widgets to your phone's home screen. Widgets are self-contained apps that display on a home screen. Unlike a shortcut, the Widget works like as an onscreen application. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Facebook[®] status windows, Gmail and email accounts, and many others.

1. From home, touch and hold an empty space until the phone vibrates.
2. Tap **WIDGETS**.
3. Touch and hold a widget icon.

❖ The icon will disengage and you will see thumbnails of your home screens.

4. Drag the icon to an empty location on one of the home screens.

❖ The widget is added to the home screen.

Create a Folder

You can group home screen shortcuts into folders for convenient access.

- Drag an icon on top of another icon to create a folder containing both applications.

Note: To rename the folder, open the folder and then touch and hold the folder name.

Phone App

The following topics outline the use of your device's phone app to place and receive calls, use voicemail, set up and manage contacts, and more.

Place and Answer Calls

The following topics describe how to directly dial calls, how to answer incoming calls, and how to use the in-call screen options.

Adjust In-Call Volume

- **Adjusting Call Volume:** Press the **Volume** key up or down during the call.

Troubleshooting

Question: Difficulty during call.

Answer 1: It may not be possible to make a call properly in a noisy location.

Answer 2: When calling using Speaker, check the call volume. Raising the call volume may make calling difficult.

Question: Sound pops momentarily during a call.


Answer: Are you changing location while calling? Sound pops when signal is weak and the phone switches to a different area.


Emergency Call Cautions


Emergency calls are restricted in Airplane mode.

Call Using the Phone Dialer

The most “traditional” way to place a call is by using the phone’s dialer screen.

1. From home, tap **Dialer**  to display the phone screen.
2. Tap the number keys on the dialpad to enter the phone number.
 - As you enter digits, Smart Dial searches for contacts that match. If you see the number you want to dial, tap it to place the call immediately without entering the rest of the number.

3. Tap  to call the number.

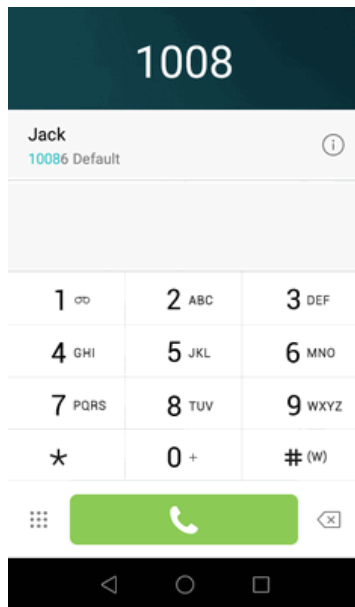

- ❖ The phone dials the number. The call begins when the other party answers.

4. To end the call, tap .

- ❖ The call ends.

Troubleshooting






Question: Call does not connect.

Answer 1: Was the number dialed using the area code? If not, try dialing using the full 10-digit number including the area code.

Answer 2: Are you in an area with poor wireless coverage? Try calling again from another area.

Call Emergency Numbers

You can place calls to 9-1-1 even if the phone's screen is locked or your account is restricted.

1. Unlock the screen. For more information, see [Lock and Unlock Your Screen](#).
2. From home, tap **Dialer** .
3. Tap    .

- ❖ As long as you are in an area covered by wireless service, the emergency call is placed.

Enhanced 9-1-1 (E 9-1-1) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E 9-1-1 emergency location services where available.

When you place an emergency 9-1-1 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 9-1-1 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your phone.



Answer Phone Calls

The following information lets you know how to answer incoming calls, mute the ringer on incoming calls, reject incoming calls, and more.

When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in People, only the default caller ID icon and phone number appear on the Incoming call screen.

Note: If your phone is turned off, all calls automatically go to voicemail.

Answer an Incoming Call


1. When a call arrives, tap  to answer it.
2. To end the call, tap .

Mute the Ringing Sound

To mute the ringer without rejecting the call, you can do any of the following:

- Press the **Volume** button down.
- Place the phone face down on a level surface.

Reject an Incoming Call

- When a call arrives, tap  to reject it.
 - ❖ The ringtone or vibration will stop and call will be sent directly to voicemail.

Reject a Call and Send a Text Message

You can reject an incoming call and automatically send a text message to the caller.

1. When a call arrives, tap .

❖ The ringtone or vibration will stop and you will see a list of preset text messages.

2. Tap one of the messages to send it to the caller.

❖ The selected message will be delivered to the caller.


- You can edit the reject messages through the Call settings menu. From the phone app, tap **Menu** ≡ > **Call settings** > **Reject calls with SMS** and edit the reject messages.

In-Call Screen Layout and Operations




While you're on a call, you will see a number of onscreen options.

In-Call Screen Layout

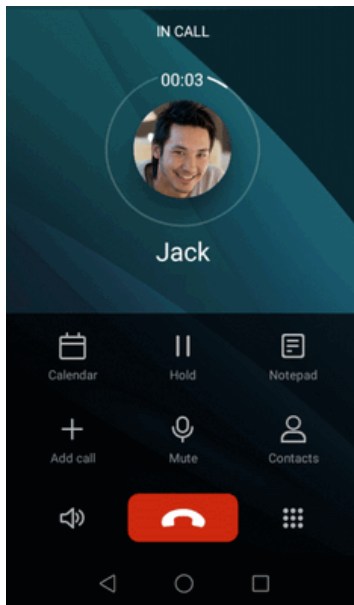Tap options to activate them during a call.



- **Calendar:** View the Calendar.
- **Hold:** Place the current call on hold.
- **Notepad:** View your notes.
- **Add call:** Start a three-way call.
- **Merge calls:** Join two currently active calls (conference).
- **Mute:** Mute the call so that the other party can't hear you.
- **Contacts:** Display your contacts.



-  : Activate the speaker for a hands-free call.
-  : End the current call.
-  : Open the dialer.

Warning: Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Note: The Headset button is activated to show the current call is routed to the connected Bluetooth headset.



Place a Call from Contacts

You can place phone calls directly from entries in your Contacts list.

1. From home, tap **Dialer**  to display the phone app.
2. Tap **Contacts** to display the Contacts list.
3. Tap a contact.
4. Tap the number you want to call.
 - ❖ The phone dials the number. The call begins when the other party answers.
5. To end the call, tap .

Call from Call Logs

The Call logs list lets you quickly place calls to recent incoming, outgoing, or missed numbers.



1. From home, tap **Dialer**  to display the phone app.
2. From the call log, tap the contact or number you want to call.
 - ❖ The phone dials the number. The call begins when the other party answers.
3. To end the call, tap .

Optional Services

The following topics outline additional voice-related services available with your phone, including call services, voicemail, and more.

Voicemail Setup

You should set up your voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. From home, tap **Dialer** .
2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

Visual Voicemail


Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

Set Up Visual Voicemail

Setting up Visual Voicemail follows many of the same procedures as setting up traditional voicemail. You should set up your voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

Note: To set up your traditional voicemail box, see [Voicemail Setup](#).

1. From home, tap **Apps**  > **Voicemail** .

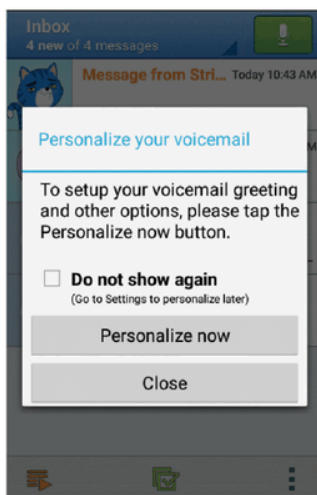

- ❖ You'll see a Personalize your voicemail prompt.
2. Tap **Personalize now** and follow the system prompts to:
 - Create a password (part of standard voicemail).
 - Record your name announcement.
 - Record your greeting.
 3. Tap the Welcome to Voicemail message on the screen to play a brief explanation of the voicemail services.


Important: Voicemail Password – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

4. Tap the Welcome to Voicemail message on the screen to play a brief explanation of the voicemail services.


Review Visual Voicemail

Visual Voicemail lets you easily access and select which messages you want to review.

1. From home, tap **Apps**  > **Voicemail** .

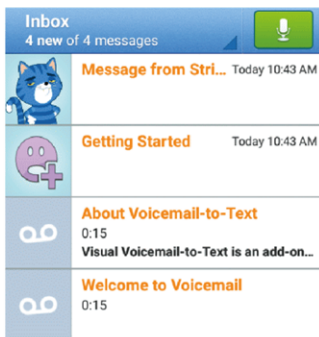

- ❖ You will see the voicemail inbox.
2. Tap a message to review it.

Tip: There are several icons at the bottom of the review screen for maintenance, storage, messaging, and other options. For an explanation of all your options, tap **Menu**  > **Help** > **Visual Voicemail Menu** > **Visual Voicemail Menu**.

Listen to Multiple Voicemail Messages

When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.








1. Listen to the current voicemail message.
2. Swipe your finger left or right to display the next or previous message.

- ❖ The next or previous message will begin playing automatically.

You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you're finished listening to the current one.

Visual Voicemail Options




Your visual voicemail options appear as icons at the bottom of the voicemail review screen.

1. From home, tap **Apps**  > **Voicemail** .
2. Tap a message to review it. The following options are available while reviewing a voicemail message:
 -  **Subscribe**: Subscribe to the premium Voice-to-Text transcription service. (Requires an additional monthly charge.)
 -  **Delete**: Delete selected messages from your current list of available voicemail messages.
 -  **Call**: Call the number the message came from.
 -  **Share**: Share the message.
 -  **Reply**: Reply to the message via text or voice message.

Note: Not all options are available for all messages.

Configure Visual Voicemail Settings




The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. From home, tap **Apps**  > **Voicemail** .
2. Tap **Menu**  > **Settings**.
3. Select an option to change its settings.

Note: Voicemail settings can also be accessed from home by tapping **Dialer**  > **Menu**  > **Call settings** > **Voicemail**.




Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. From home, tap **Apps**  > **Voicemail**  .
2. Tap **Menu**  > **Settings** > **Preferences** > **Personalize voicemail**.
3. Tap **OK** to connect to the voicemail system. Follow the prompts to change your current greeting.






Edit the Display Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name or number attached to your voice messages.

1. From home, tap **Apps**  > **Voicemail**  .
2. Tap **Menu**  > **Settings** > **Display** > **Display name**.
3. Tap the existing identification field and enter a new identifying name or number (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.

Caller ID Blocking

Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.


1. From home, tap **Dialer**  .
2. Tap    .
3. Enter a phone number.
4. Tap  .




 Your caller information will not appear on the recipient's phone.

Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).




To respond to an incoming call while you're on a call:


- Tap  . (This puts the first caller on hold and answers the second call.)
- To end your previous call and accept the new call, tap **End last call**.

Note: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing    before placing your call. Call Waiting is automatically reactivated once you end the call.

Conference Calling

With conference calling, also known as 3-way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. On the Phone screen, enter a number and tap  (or place a call from Log or Contacts).
2. Once you have established the connection, tap  to call the second participant.
 - ❖ This puts the first caller on hold and dials the second number.
3. When you're connected to the second party, tap . Your conference call is now in session.

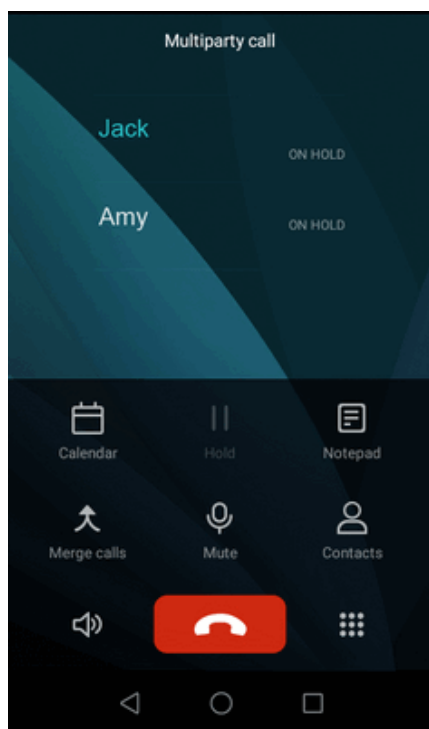

4. To end the three-way call, tap .



Note: If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.



Note: You are charged a higher rate for calls you have forwarded.

To activate Call Forwarding:

1. From home, tap **Dialer** .
2. Tap **Menu**  > **Call settings** > **Call forwarding settings**.
3. Select a forwarding mode.
4. Enter the area code and phone number to which you want your calls forwarded.
5. Tap **Activate**.

❖ You will hear a tone to confirm the activation of Call Forwarding. All calls to your wireless number will be forwarded to the designated phone number.

To deactivate Call Forwarding:

1. From home, tap **Dialer** .
2. Tap **Menu**  > **Call settings** > **Call forwarding settings**.
3. Tap **Deactivate**.



❖ You will hear a tone to confirm the deactivation.

Call Settings

The Call settings menu lets you configure your voicemail options and a number of other settings for the phone application.

Access Call Settings

Follow these instructions to access Call settings.

1. From home, tap **Dialer** .
2. Tap **Menu**  > **Call settings**.

❖ The Call settings menu displays.

Call Settings Options

Use the Call settings menu to adjust the following settings:

Settings	Description
Phone ringtone	Set a phone ringtone.
Vibrate when ringing	Set the phone to vibrate when an incoming call arrives.



Settings	Description
Power button ends call	Set the phone to end calls by pressing the Power/Lock button.
Reject call with SMS	Create or edit messages to reject incoming calls.
Plus code dialing	Set plus code dialing policy.
Voicemail	Configure your voicemail.
Dialer touch tones	Set the phone play a tone when the dialing keypad is tapped.
TTY mode	Enable service on your phone.
Hearing aids	Improve the sound quality of your phone when using hearing aids.
DTMF tones	Set the length of DTMF tones, which are used when pressing the keypad while on a call.
Call forwarding settings	Forward all your incoming calls to another phone number.
Call waiting	Lets you answer another incoming call when you are already in a call and switch between the two calls.

TTY Mode

A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect using a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY Mode on or off:

1. From home, tap **Dialer**  > **Menu**  > **Call settings** > **TTY mode**.
2. Tap **TTY Full**, **TTY HCO**, or **TTY VCO** to turn TTY mode on.

– or –

Tap **TTY Off** to turn TTY mode off.

❖ Your phone's TTY mode is set.

Note: When enabled, TTY mode may impair the audio quality of non-TTY devices connected to the headset jack.

Warning: 9-1-1 Emergency Calling

It is recommended that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 9-1-1 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears

related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Contacts




The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

Contacts Cautions

Information saved in Contacts may be lost or changed if the battery is removed for a long period or left uncharged. Accident or malfunction may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. The company is not responsible for any damages from lost or changed contacts.


Add a Contact

You can add contacts from your phone's Phone application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. From home, tap **Apps**  > **Contacts**  .
 - ❖ You will see the Contacts list.
2. Tap  to add a contact.
3. Select a location to save the contact from the options menu.
4. Enter the contact name, phone number, and other details.
5. If you have multiple account types associated with your phone, select a contact type.
 - Select **Google** if you want to save contacts to your Google Account; these will be synced automatically with your Google Account online.
 - Select **Device** as the sync account if you want your contacts on your phone only; they will not be synced with your Google Account.

Note: To add more phone numbers, email addresses, etc., tap  on the right side of the entry field.

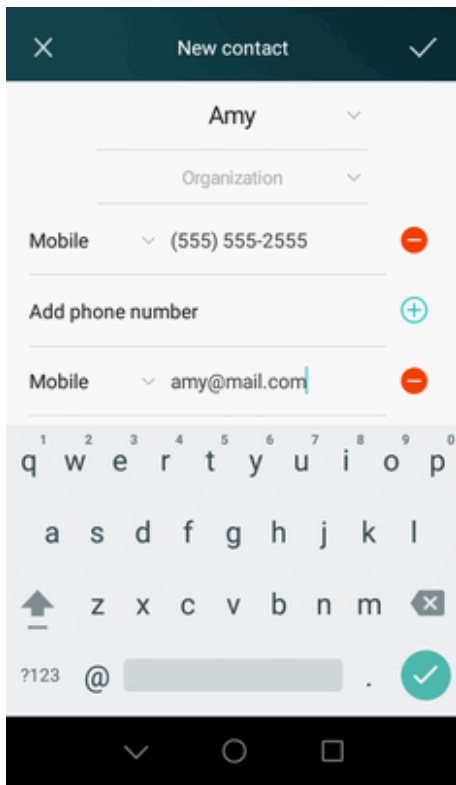

- When you have finished adding information, tap ✓ .



❖ The contact is added.

Save a Phone Number

You can save a phone number to Contacts directly from the phone dialpad.

- From home, tap **Apps**  > **Contacts**  .
- Enter a phone number.
 - To add the number to a new contact, tap **Create new contact**.
 - To add the number to an existing contact, tap **Save to existing contact**.
- Enter the contact name, phone number, and other details if necessary.
- Tap ✓ .

❖ The contact is added.

View Contacts

View a contact's details by displaying a contact entry.

- From home, tap **Apps**  > **Contacts**  .

❖ You will see the Contacts list.

2. Tap a contact to view its details.

Edit a Contact

Once you've added a contact, you can add or edit any of the information in the entry, assign a caller ID picture, customize with a unique ringtone, and more.

1. From home, tap **Apps**  > **Contacts** .

❖ You will see the Contacts list.

2. Tap a contact to view its details.

3. Tap **Edit** .

4. Tap any field you want to change or add. See [Add a Contact](#).

5. Add or edit the information, and then tap .

Note: To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), tap the type to the left of the field.


Note: To add more phone numbers, email addresses, etc., tap  on the right side of the entry field.

Delete a Contact

You can delete a contact from the contacts details page.

1. From home, tap **Apps**  > **Contacts** .

❖ You will see the Contacts list.

2. Tap **Menu**  > **Delete contact**.

3. Tap **Delete**.


Tip: You can also touch and hold the contact from the contact list and then tap **Delete**.

Share a Contact

You can quickly share contacts using Bluetooth, email, Gmail, or text messaging.

1. From home, tap **Apps**  > **Contacts** .

❖ You will see the Contacts list.

2. Tap a contact to display it, and then tap **Share contacts** .

3. In the **Share contacts** menu, select a method:

- **Bluetooth:** Send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.
 - **Drive:** Upload the contact information to Google Drive.
 - **Email:** Send the information as an email attachment. If prompted, select an email account. Address the message, add a subject and a message, and then tap **Send**. See [Compose and Send Email](#) for details on sending email.
 - **Gmail:** Send the information as a Gmail attachment. Address the message, add a subject and a message, and then tap **Send**. See [Create and Send a Gmail Message](#) for details.
 - **Messaging:** Send the information in a text message. Select a contact or enter a wireless phone number or email address, enter any additional information, and then tap **Send**. For more information on text messaging, see [Send a Multimedia Message \(MMS\)](#).
 - **Wi-Fi Direct:** Send the information by Wi-Fi direct.
4. Complete the required steps as prompted for the selected method.
 - ❖ The selected contact will be shared.




Import Contacts

Your phone offers a couple of options for importing contacts from installed SD memory cards or external devices via USB.

Before Importing Contacts from an SD Card

You will need to have installed an SD card with previously backed up contacts information into your phone before you can import contacts. See [SD Card](#) for SD card information.

Import Contacts from an SD Card or USB Storage

1. From home, tap **Apps**  > **Contacts**  .
 - ❖ You will see the Contacts list.
2. Tap **Menu**  > **Import/Export**.
3. Tap **Import from storage**.
4. Select a destination for the imported contacts.
5. Follow the onscreen instructions to complete the import.
 - ❖ The contacts are imported and stored in the selected account.




Back Up Contacts

If you are saving contacts to an account that does not automatically back them up via the Cloud, you can manually back them up to an optional installed SD Card for re-import if needed.

Before Backing Up Contacts to a SD Card

You will need to have installed an SD card with previously backed up contacts information into your phone before you can back up your contacts. See [SD Card](#) for SD card information.

Back Up Contacts to Your SD Card

1. From home, tap **Apps**  > **Contacts**  .
 - ❖ You will see the Contacts list.
2. Tap **Menu**  > **Import/Export**.
3. Tap **Export to storage**.
4. Tap **OK** to confirm the export.
5. Follow the onscreen instructions to complete the export.
 - ❖ The contacts are exported and saved to the installed SD card.

Messaging and Internet

With wireless service and your phone's messaging and data capabilities, you have the opportunity to share information through many different channels and accounts, including Gmail (Google), personal and corporate email, text and multimedia messaging, social networking accounts, and Hangouts.

Text and Multimedia Messaging





With text messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phone.

Multimedia messages, or MMS, can contain text and pictures, recorded voice, audio or video files, picture slideshows, contact cards (vCard), or appointments (vCalendar).

See your service plan for applicable charges for messaging.

Send a Text Message

Quickly compose and send text messages on your phone.







1. From home, tap **Messaging** .
2. On the Messaging screen, tap **New message** .
 - ❖ The Compose screen opens.
3. Fill in one or more recipients. You can:
 - Enter phone numbers directly in the Enter recipient field. If you're sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your contacts list are displayed. Tap a match to enter that number or address directly.
 - Tap the  icon, and then select the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap .
4. Tap the **"Type message"** box and then start composing your message.

Note: A counter appears above the **Send** button () to tell you how many characters you have entered and how many characters are left. Once you go over the 160-character limit, a new message is created but automatically joined into one when received.


5. When done, tap  to send the text message.

Send a Multimedia Message (MMS)



When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, voice recordings, audio or video files, contact cards (vCard), or appointments (vCalendar).

1. From home, tap **Messaging** .
2. On the Messaging screen, tap **New message** . The Compose screen opens.
3. Fill in one or more recipients. You can:
 - Enter phone numbers directly in the Enter recipient field. If you're sending the message to several phone numbers, separate the phone numbers with a comma. As you enter information, any matching phone numbers from your contacts list are displayed. Tap a match to enter that number or address directly.
 - Tap the  icon, and then select the contacts to whom you want to send the message. You can also select contact groups as recipients. When you have selected all the message recipients, tap .
4. Tap the **"Type message"** box, and then start composing your message.
5. Tap  to select an attachment type and then select the attachment you want to add.
6. Tap  to send the MMS message.

Save and Resume a Draft Message


While composing a text or multimedia message, tap **Back**  to automatically save your message as a draft.

To resume composing the message:

1. From home, tap **Messaging** .
2. On the Messaging screen, tap the message to resume editing it.
3. When you finish editing the message, tap .

New Messages Notification

Depending on your notification settings, the phone will play a ringtone, vibrate, or display the message briefly in the status bar when you receive a new text or multimedia message. To change the notification for new text and multimedia messages, see [Text and MMS Options](#) for details.

A new message icon () also appears in the notifications area of the status bar to notify you of a new text or multimedia message. The Messages application icon (if shown on the Home screen) also displays the number of new messages.

- To open the message, pull down the status bar to open the notification panel. Tap the new message to open and read it. For information on reading and replying to messages see [Manage Message Conversations](#).


Manage Message Conversations

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the Messaging screen. Text or MMS conversations let you see exchanged messages (similar to a chat program) with a contact on the screen.

Read a Text Message

- Do one of the following:
 - On the Messaging screen, tap the text message or conversation to open and read it.
 - If you have a new message notification, drag the status bar down to open the notifications window. Tap the new message to open and read it.


To return to the Messaging screen from a conversation, tap **Back** .


Note: To view the details of a particular message, in the conversation, touch and hold the message to open the options menu, and then tap **Menu**  > **View details**.


Note: If a message contains a link to a Web page, tap the message and then tap the link to open it in the Web browser.

Note: If a message contains a phone number, tap the message and then tap the phone number to dial the number or add it to your contacts.

View a Multimedia Message (MMS)



1. From home, tap **Messaging** .
2. On the Messaging screen, tap a multimedia message or conversation to open it.
3. Tap the Download icon to open the attachment.
 - If the attachment is a vCard contact, it is imported to your phone's contacts list. For more information, see [Contacts](#).
 - If the attachment is a vCalendar file, you can choose the calendar where you want to save the event. For information on using Calendar, see [Calendar](#).

4. To save the attachment to device memory or a memory card, tap  at the right side of the message.

Note: When Auto-retrieve in MMS settings is disabled, only the message header is downloaded. To download the entire message, tap  at the right side of the message. For details, see [Text and MMS Options](#).

Note: If you are concerned about the size of your data downloads, check the multimedia message size before you download it.



Reply to a Message

1. From home, tap **Messaging** .
2. On the Messaging screen, tap a conversation to open it.
3. Tap the text box at the bottom of the screen, enter your reply message, and then tap .



Note: To reply to a text message with a multimedia message, open the text message, tap  to select an attachment type and then select images, videos, or other multimedia files. The text message is automatically converted into a multimedia message.

Protect (Lock) a Message

You can lock a message so that it will not be deleted even if you delete the other messages in the conversation.

1. From home, tap **Messaging** .
2. On the Messaging screen, tap a conversation.
3. Touch and hold the message that you want to lock, and then tap **Menu**  > **Lock**.
 - ❖ A lock icon is displayed at the right hand side of the message.

Delete Conversations

1. From home, tap **Messaging** .
2. On the Messaging screen, tap the conversation that you want to delete.
3. Tap **Delete** .
4. When prompted to confirm, tap **Delete**. Any locked messages in the thread will not be deleted unless you select the **Delete locked messages** check box.

Delete a Single Message

1. While viewing a conversation, touch and hold the message that you want to delete.

- If the message is locked, tap **Unlock message** on the options menu and hold the message to display the options menu again.

2. Tap **Delete** .

3. When prompted to confirm, tap **Delete**.



Note: Locked messages will not be deleted, unless you select the **Delete locked messages** check box before confirming the deletion.

View Contact Information from a Message

When you have received a message from someone in your stored contacts, you can tap the contact's picture or icon in the conversation to open a menu of options. Depending on the stored contact information, you can view the contact details, place a phone call or send an email message to the contact, and more.

Text and MMS Options

The messages settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

1. From home, tap **Messaging** .
2. On the Messaging screen, tap **Menu**  > **Settings**.
3. Configure message settings.

Common settings

- **Attach signature:** When enabled, a text signature is automatically added to messages you send.
- **Edit signature:** After enabling signatures, enter a text signature.
- **Common phrases:** Manage the common phrases that be used frequently.

Notification Settings

- **Message preview:** When enabled, a preview of a new message appears in the Status bar with the message notification.
- **Tone:** Select this option if you want the phone to sound when a new text or multimedia message arrives.
- **Vibrate:** Select this option if you want the phone to vibrate when a new text or multimedia message arrives.

Storage Settings

- **Delete old messages:** Automatically delete older messages, except for locked messages, when the set limits are reached.
- **Text message limit:** Choose the maximum number of text messages to store in each conversation. (This does not include locked messages.)
- **Multimedia message limit:** Choose the maximum number of MMS messages to store in each conversation. (This does not include locked messages.)

Gmail





Use Google's Gmail service and your Google Account to send, receive, and manage your Gmail messages. Before using Gmail, you must register a Google (Gmail) Account on your phone. See [Google Account](#) for details.

! Gmail Cautions

Gmail is handled as email from a PC. Restricting email from PCs on your phone prevents your phone from receiving Gmail.





Create and Send a Gmail Message

Use your phone to create and send Gmail messages.

1. From home, tap **Apps**  > **Gmail** .
2. In the inbox, tap **Compose** .
3. Enter the message recipient(s), subject, and message, and then tap **Send** .

Gmail Composition Options

Choose from the options below when composing a Gmail message.


- **Adding Cc/Bcc:** In the To field, tap  to display Cc and Bcc fields.
- **Attaching Pictures or Videos:** In the mail composition window, tap **Attach file** . Locate and tap the picture or video you want to attach.
- **Save as a Draft (Send Later):** While composing your message, tap **More options**  > **Save draft**. The message is saved as a draft for later.
- **Delete Mail Being Composed:** In the mail composition window, tap **More options**  > **Discard** > **DISCARD**.

Note: To view your draft email messages, in the inbox, tap **Menu**  > **Drafts**. To view your sent messages, in the inbox, tap **Menu**  > **Sent**.

Check Received Gmail Messages

Your phone allows you to access, read, and reply to all your Gmail messages.

Open New Gmail Messages

When new Gmail arrives, you will see  in the status bar.



1. Pull down the status bar to display the notification panel.
2. Tap the new message from the notifications window.

❖ The new Gmail message opens.

- If you have two or more new Gmail messages, tapping the notification opens the Gmail inbox.




Open Gmail Messages

You can also read and reply to all your Gmail messages from the Gmail inbox.

1. From home, tap **Apps**  > **Gmail** .
2. Tap the message thread you want to view.




❖ The message thread opens, with the newest message displayed.

Options when Reviewing Gmail Messages

- **Replying to Gmail Messages:** With the Gmail message open, tap , compose your reply message, and tap **Send** .
- To reply to all, tap **Reply all**.
- **Forwarding Gmail Messages:** With the Gmail message open, tap **Forward**, enter a recipient and an additional message, and tap **Send** .

Use Gmail Labels



Gmail saves all mail in one box, but you can add labels that allow you to sort your Gmail conversation threads. For example, when a new thread starts with a received mail, the label "Inbox" is automatically added to the thread. By then adding the label "travel," all threads with "travel" are shown in a list.

1. From home, tap **Apps**  > **Gmail** .
2. Touch and hold a conversation thread to add a checkmark to it, and then tap  > **Move to**.
3. Tap a label for the thread.

❖ The thread is added to the selected label.




Archive Gmail Threads

Remove sent and received Gmail threads so they do not appear in the inbox. When replies arrive for archived threads, they appear in the inbox again.

1. From home, tap **Apps**  > **Gmail** .
 2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **Archive**.
- ❖ The thread is now archived.




Mute Gmail Threads

If registered on a mailing list, there will be threads with always-continuing conversations. For long threads that are not important, mute the threads and they will no longer appear in the inbox. When mail arrives that includes user's address as a recipient or in Cc, mail will again appear in the inbox.

1. From home, tap **Apps**  > **Gmail** .
 2. Touch and hold a conversation thread (or touch the thread's icon/picture) to add a checkmark to it, and then tap **More options**  > **Mute**.
- ❖ The thread is now hidden.





Delete Gmail Threads

If you no longer wish to keep a Gmail conversation thread, you can simply delete it from the inbox.

1. From home, tap **Apps**  > **Gmail** .
2. Touch and hold a conversation thread to add a checkmark to it, and then tap .




Search Gmail Messages

If you need to find a specific message or message thread, you can search Gmail from the inbox.

1. From home, tap **Apps**  > **Gmail** .
 2. Tap .
 3. Enter your search text and tap .
- ❖ The search results appear. Tap a message or thread from the list to display it.


Report Spam or Phishing Gmail

You can report spam or phishing Gmail messages from your phone's Gmail inbox.

1. From home, tap **Apps**  > **Gmail** .
 2. Touch and hold a conversation thread to add a checkmark to it, and then tap **Options**  > **Report spam** or **Report phishing**.
- ❖ The selected message is reported as spam or phishing Gmail.




Add Another Google (Gmail) Account

If you have multiple Gmail accounts you wish to view on your phone, you can add them from the **Settings** > **Accounts** menu.

1. From home, tap **Settings**  > **Accounts**.
 2. Tap **Google**.
 3. Enter your Gmail username and password, and then tap **Next**.
 4. After your phone connects with the Google servers, select the items you would like to sync with your phone and then tap **Sync now**.
- ❖ You are signed in to your Google Account, and you can access both of your Gmail accounts from the Gmail app.

Switching Between Gmail Accounts

If you have more than one Gmail account set up, you can switch between them in the Gmail app.

1. From home, tap **Apps**  > **Gmail** .
 2. Tap .
 3. Tap the account to open the account list.
 4. Select the email account you want to use.
- ❖ The selected account inbox is displayed.

Email

Use the Mail application to send and receive email from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Set Up an Email Account

Your phone supports several types of email accounts and allows you to have multiple email accounts set up at one time.

Before setting up an email account, make sure you have the username (user ID), password, server name, etc., so you can get set up successfully.

1. From home, tap **Apps**  > **Email**  .

❖ A popup window for adding an account appears if no email account has been previously set up.

2. Follow the onscreen instructions to set up your email account.

❖ The email account is set up and you will begin receiving email.

Add an Email Account

You can add several types of personal email accounts, such as POP3 and IMAP accounts, on your phone.

Add an Email Account

You can add email accounts directly from the email app, even if you have another email account set up.

1. From home, tap **Apps**  > **Email**  .

2. Enter your email address and password, and then tap **Next**.

3. Follow the onscreen instructions to configure your account. The system will then automatically connect to the server.

❖ Once your account is set up, **Inbox** will be displayed.

Add an Exchange ActiveSync Account

If you synchronize your phone with your Exchange ActiveSync account, you can read, manage, and send email in the same easy way as with a POP3/IMAP account. However, you can also access some powerful Exchange features.

Important: Before setting up a Microsoft Exchange ActiveSync Account, contact your company's Exchange Server administrator for required account settings information.

1. From home, tap **Apps**  > **Email**  .

2. Tap **Corporate**.

3. Enter the **Email address** and **Password** for the email account and then tap **Manual setup**.





4. Enter the required information:

- **Domain\username:** Enter your network domain and username, separated by “\”.
- **Password:** Enter your network access password (case-sensitive).
- **Exchange server:** Enter your system's Exchange server remote email address. Obtain this information from your company network administrator.

- **Use secure connection (SSL):** Tap to place a checkmark in the box, if your system requires SSL encryption.
 - **Use client certificate:** Tap to place a checkmark in the box, if your system requires certification.
5. Follow the onscreen instructions to configure your account. The system will then automatically connect to the server.
- ❖ Once your Exchange account is set up, **Inbox** will be displayed.








Compose and Send Email

Compose and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.

1. From home, tap **Apps**  > **Email**  .
 - If you want to switch to a different email account, tap the account name at the top of the screen and select another account.
2. Tap **Compose**  .
3. Enter the message recipient(s), subject, and message.
4. Tap  .

Check Your Email








You can also open and read email messages directly from the email inbox. Reading and replying to email on your phone is as simple as on your computer.

1. From home, tap **Apps**  > **Email**  .
2. In **Inbox**, tap  in the upper left corner to select an email account.
3. Tap the email you want to read. Then you can:
 - Tap **Delete**  to delete it.
 - Tap **Reply**  to reply to it.
 - Tap **Reply all**  to replay to all.
 - Tap **Forward**  to replay to all.
 - Swipe left or right on the screen to read the previous or next email.

Tip: In **Inbox**, swipe down to refresh your email list.




Options When Reviewing Email Messages

Choose from the options below when reviewing your email messages.

- **Resetting Mail as Unread:** Tap the check box on the left side of a read message and then tap **Mark unread** .
- **Deleting Email:** Tap the check box on the left side of a message or messages and then tap **Delete** .
- **Syncing Accounts Manually:** Sync sent and received email messages manually at any time regardless of the automatic sync settings. Switch to the account you want to sync and then drag the screen down to refresh the email.
- **Replying to Email Messages:** With an email message open, tap **Reply**  or **Reply all** , compose your reply message, and tap **Send** .
- **Forwarding Email Messages:** With the email message open, tap **Forward** , enter a recipient and an additional message, and tap **Send** .

Delete an Email Account



You can delete an email account from your phone if you no longer wish to receive messages for the account on your phone.

1. From home, tap **Apps**  > **Email** .
 2. Tap **Menu**  > **Settings**.
 3. Select the account you want to remove.
 4. Tap **Remove account** then **OK**.
- ❖ The account is deleted from your phone.

Manage Your Email Inbox

Your email inbox provides management options for viewing, sorting, and deleting your email messages.

View Your Email Inbox


1. From home, tap **Apps**  > **Email** .
2. Tap the email account at the top of the screen to select a different inbox, or tap **Combined view** to see all your email inboxes at once.

Refresh an Email Account


Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.

- In **Inbox**, swipe down to refresh your email list.


Sort Email Messages

1. On the email account inbox, tap **Menu**  > **Sort by**.
2. Select from the options to sort email messages by **Date (latest)**, **Date (oldest)**, **Sender (A to Z)**, **Sender (Z to A)**, **Unread/Read**.

Delete an Email Message

1. On the email account inbox, touch and hold the message you want to delete.
2. On the options menu, tap **Delete** .

Delete Multiple Email Messages

1. On the email account inbox, tap the check box next to the messages you want to delete.
2. Tap **Delete** .

Browser

Your phone's Web browser gives you full access to both mobile and traditional websites on the go, using 3G, 4G, or Wi-Fi data connections.

SSL/TLS



SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are protocols for encrypting sent/received data. While in a screen connected by SSL/TLS, data is encrypted to safely send/receive private information, credit card numbers, corporate secrets, etc., and provide protection against online threats (eavesdropping, falsification, impersonation, etc.).

SSL/TLS Cautions

When opening a secured page, users must decide as their responsibility whether or not to open the page with use of SSL/TLS. [Carrier Name] and the applicable Certification Authorities make no guarantees whatsoever to users regarding security of SSL/TLS.





Use the Browser

Launching the browser is as easy as tapping an icon.

- From home, tap **Apps**  > **Browser**  .
- ❖ The browser opens.
 - The first time you launch Internet, you may be prompted to enter your 10-digit wireless phone number to access the Boost home page.
 - You can also launch the browser by tapping a URL in a text message, email message, or Gmail message.





Browser Settings

Customize your experience with the Internet through the browser settings menu.





1. From home, tap **Apps**  > **Browser**  .
2. Tap  >  , and customize your browser settings.

Add a Bookmark

Bookmark favorite sites using the browser menu options.




1. From home, tap **Apps**  > **Browser**  .
 2. Navigate to the Web page you want to bookmark, and tap **Menu**  > **Add bookmark**.
 3. Check or change the bookmark title, URL, etc., and then tap  .
- ❖ The Web page is added to bookmarks.

Bookmark Options

- **Editing Bookmarks:** From the browser, tap **Menu**  > **Bookmarks & history**, touch and hold a bookmark, tap **Edit bookmark**, edit the bookmark, and then tap  .
- **Deleting Bookmarks:** From the browser, tap **Menu**  > **Bookmarks & history**, touch and hold a bookmark, tap **Delete bookmark**, and then tap **OK**.
- **Show Saved Web Pages:** From the browser, tap **Menu**  > **Bookmarks & history** > **Saved pages**, and then tap a saved page to open it.






View Browser History

Use the browser menu options to view your browsing history.

1. From home, tap **Apps**  > **Browser**  .
2. Tap **Menu**  > **Bookmarks & history**.



- If you don't see **Bookmarks**, pull down the Web page to display the address bar.
3. Tap the **History** tab and then tap an entry.
 - ❖ The Web page opens.

Use tabbed browsing to switch between websites quickly and easily.


1. From home, tap **Apps**  > **Browser** .
2. Tap **Tabs** .
- ❖ The tabs window opens.
 - If you don't see **Tabs** , drag the Web page down to display the address bar.
3. Tap .
- ❖ A new tab appears.
 - To switch tabs, tap one of the available thumbnails in the tabs window.

Chrome Browser

In addition to the default "Internet" Web browser, your phone supports the Chrome mobile Web browser. If you are signed in with a Google Account, the Chrome browser will import all your bookmarks and other Web preferences for use on your phone.

1. From home, tap **Apps**  > **Chrome** .
2. Tap the address bar at the top and enter search words (for a Google search) or a Web address (URL).
 - ❖ The search results appear or a Web page opens.

Chrome Support

- To find on-phone help with Chrome, from Chrome, tap **Menu**  > **Help & Feedback**.
 - ❖ A Web page will open displaying Google help for Chrome.

Tip: For more information, from your computer, visit: google.com/intl/en/chrome/browser/mobile/.

Camera and Video

You can use the camera or video camera to take and share pictures and videos.

Take Pictures and Record Videos

The following topics teach you how to take pictures and record videos with your phone's camera.

! Camera Cautions

If Lens Becomes Dirty: Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

Avoid Exposure to Direct Sunlight: Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.





! Mobile Light Warning

Do not shine Mobile Light close to eyes. Do not look directly at Mobile Light when shining. Do not shine Mobile Light at other people's eyes. May affect eyesight, etc.

Take a Picture





You can take high-resolution pictures using your phone's camera.

Note: If you have an SD card installed, pictures and videos are stored to the SD card. If no card is installed, pictures and videos are saved to your phone's memory.

1. From home, tap **Apps**  > **Camera**  .
2. Aim the camera at your subject and then tap  .
3. Release  to take the picture.
 - ❖ The shutter clicks and the picture is captured and saved to your phone or SD card.








Launch the Camera From the Gallery

The Gallery lets you quickly launch the Camera and take a photo.






1. From home, tap **Apps**  > **Gallery**  .
2. Under **Photos**, swipe down on the albums to display the viewfinder in half screen mode, and then swipe down again to launch the camera.
3. Tap  to take a photo.
4. Tap  **Return** to return to gallery.

Capture Modes





Your phone supports a variety of capture scenarios, such as scenery, portrait, and dynamic. Follow the instructions below to view your phone's capture modes.

1. From home, tap  > **Camera** .
2. Tap  to view the capture modes:
 - **Panorama:** Your phone takes several photos continuously as you pan and stitches them into one complete panoramic shot.
 - **HDR:** Enhance a photo taken under insufficient or excessive lighting conditions.
 - **Watermark:** Add various watermarks to your photos.
 - **Audio note:** You can record a brief audio clip after you take a photo.
 - **Audio control:** Tap  and enable this mode under **Settings**. You can issue voice commands to have your camera take photos for you.
 - **Timer:** Tap  and enable this mode under **Settings** to set a countdown timer for taking a photo.
 - **Touch to capture:** Tap  and enable this mode under **Settings**. Tap the screen to take a photo.
 - **Ultra snapshot:** Tap  and enable this mode under **Settings**. When the screen is off or locked, frame the object you want to capture and press the **Volume** down key twice to take a photo.





Taking a Panoramic Photo

1. From home, tap  > **Camera** .
2. Tap  > **Panorama** to switch to panorama shooting mode.
3. Tap  to start shooting.
4. Follow the onscreen instructions and move your phone slowly to capture multiple photos.
5. Tap  to stop shooting. The camera automatically stitches the photos together to create one panoramic photograph.

Adding Watermarks to Photos

1. From home, tap **Apps**  > **Camera**  .
2. Tap  > **Watermark** to switch to watermark mode.
3. Swipe left or right and select the desired watermark.
4. Drag the watermark to adjust its position.
5. Tap  .







Taking a Photo Using Audio Control

1. From home, tap **Apps**  > **Camera**  .
2. Tap  >  > **Audio control**.
3. Tap **Audio control** to switch to the audio control mode. Then you can:
 - Get your phone to take a photo when you issue a voice command.
 - Get your phone to take a photo when the surrounding noise reaches a certain decibel level.
5. Frame the scene you want to capture. Your phone will take a photo automatically when you issue a voice command or the surrounding noise reaches a certain decibel level.

Record Videos

Record high-quality videos using your phone's video camera.

Note: If you have an SD card installed, pictures and videos are stored to the SD card. If no card is installed, pictures and videos are saved to your phone's memory.

1. From home, tap **Apps**  > **Camera**  .
2. Swipe left to switch to **Video** mode.
3. Tap  to start recording.
4. While recording, tap an object or a position on the screen to focus on it. Tap  to pause recording, and tap  to resume.
5. Tap  to stop recording.
 - ❖ The camera stops recording and the video is captured and saved to your phone or SD card.




View Pictures and Videos Using Gallery

Using the Gallery application, you can view pictures and watch videos that you've taken with your phone's camera, downloaded, or copied onto your storage card or phone memory. You can also take a look at your pictures and your friends' pictures that are on your social networks (Facebook and Flickr only).

For pictures that are on your storage card or phone memory, you can do basic editing such as rotating and cropping. You can also easily assign a picture as your contact picture or wallpaper and share pictures with your friends.

View Pictures and Videos

You can access and view all your stored pictures and videos from your phone's Gallery.

1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
 - To select another album, tap **Back**  to return to the Albums tab.
3. Tap an image to view the picture or video.
 - Tap a picture or video to view it full screen.
 - When viewing pictures and videos, you can touch and hold an image to open a selection menu and choose what to do with the picture or video.

Pictures and Videos: Review Screen

After capturing a picture or video, from the camera screen, tap the thumbnail image at the bottom right corner of the screen to see the item in the review screen. From there, you can access options such as save, view, send, or delete the picture or video.

Pictures and Videos: Options while Viewing

- **Zoom In or Out on a Picture or Video:** Tap the screen twice or pinch the screen to zoom in or out on a picture or video.
- **Viewing Videos:** Use the onscreen controls to play, pause, or stop the video playback.





After selecting an album from the Albums tab, you can browse through the pictures and videos of that album. Tap a picture or video to view it in full screen. By default, the pictures and videos in an album are displayed in grid view.

Note: When viewing pictures, you can touch and hold on a picture or video to open a selection menu and choose what to do with the picture or video.

Edit Pictures






Whether you're browsing pictures in filmstrip or grid view in the Gallery application, you can touch and hold on a picture to open a selection menu and choose to delete the picture, rotate or crop it, and more.

Rotate and Save a Picture

1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the picture you want to rotate.
4. Tap **Edit**  > **Rotate** .

❖ The picture is rotated and saved to the phone or SD card, depending on your settings.

Crop a Picture

1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the picture you want to crop.
4. Tap **Edit**  > **Crop** .
5. To adjust the crop box size, touch and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.
 - To move the crop box to the part of the picture that you want to crop, drag the crop box to the desired size and position.
6. Tap  check mark on the upper right corner of the screen.




❖ The cropped picture is saved in the album as a copy. The original picture remains unedited.

Share Pictures and Videos

The Gallery application lets you send pictures and videos using email or multimedia messages. You can share pictures on your social networks (such as Facebook, Flickr, Picasa, and Twitter) and share videos on YouTube. You can also send them to another phone or your computer using Bluetooth.

Send Pictures or Videos by Email

You can send several pictures, videos, or both in an email or Gmail message. They are added as file attachments in your email. For more information about using email and Gmail, see [Compose and Send Email](#) or [Create and Send a Gmail Message](#).




1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.
4. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
5. Tap **Share**  and then tap **Email** or **Gmail**.
6. Follow onscreen prompts to complete and send the mail.

Note: If you selected **Mail** and you have multiple email accounts, the default email account will be used.

For more information about using email and Gmail, see [Compose and Send Email](#) or [Create and Send a Gmail Message](#).

Send a Picture or Video by Multimedia Message




Multimedia Messaging (MMS) lets you send pictures and videos using your phone's messaging app. Although you can send several pictures or videos in a multimedia message, it may be better to just send one at a time, especially if the files are large in size.

1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.
4. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
5. Tap **Share**  and then tap **Messaging**.
6. Follow the onscreen prompts to complete and send the message.

For more information about sending multimedia messages, see [Send a Multimedia Message \(MMS\)](#).

Send Pictures or Videos Using Bluetooth

You can select several pictures, videos, or both and send them to someone's phone or your computer using Bluetooth.




1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.
4. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
5. Tap **Share**  and then tap **Bluetooth**.
6. Follow the onscreen prompts to complete and send the files.

For more information, see [Bluetooth](#).

Share Pictures and Videos on Facebook

You can share pictures and videos from your phone directly to your Facebook account. You need to be logged in to your Facebook account to upload pictures and videos.



Note: Before you can use Facebook on your phone, you have to download and install the app from Google Play.


1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.
4. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
5. Tap **Share**  and then tap **Facebook**.
6. Add a caption and any other information you want for the photo and post it.

Share Pictures on Flickr

You need to be logged in to your Flickr account to upload pictures.

Note: Before you can use Flickr on your phone, you have to download and install the app from Google Play.

1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.





4. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
5. Tap **Share**  and then tap **Flickr**.
6. Follow the onscreen instructions to add a description for the photo and upload it.

Note: If you are not logged in to your Flickr account, you will be prompted to log in and download the Flickr Downloader application. Follow the onscreen instructions to proceed.

Share Pictures on Picasa



You need to be signed in to a Google Account to upload pictures to the Picasa™ picture organizing service.



Note: Before you can use Picasa on your phone, you have to download and install the app from Google Play.

1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.
4. Tap the pictures or videos you want to share.
 - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
5. Tap **Share**  and then tap **Picasa**.
6. Select the online album where you want to upload the pictures, or tap  to create a new album.
7. Tap **Upload**. You can view the pictures online at picasaweb.google.com.

Share Videos on YouTube

You can share your videos by uploading them to YouTube™. Before you do this, you must create a YouTube account and sign in to that account on your phone.





1. From home, tap **Apps**  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the videos you want to share.
4. Tap the videos you want to share.

- To select multiple videos, touch and hold an image to turn on multiple select. Tap all the videos you want to include.
5. Tap **Share**  and then tap **YouTube**.
 6. Select the account that you want to sign in with.
 7. Enter the prompted information, such as description and tags, and select a privacy option.
 8. Tap  to start the uploading.

Camera Settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

You can configure your camera's settings to fit any situation and event.

1. From home, tap **Apps**  > **Camera** .
2. Tap **Menu**  > .
3. Select your desired settings.

Apps and Features

The following topics detail many of your phone's tools and features such as news services, maps and navigation, calendar, clock, social networking apps, music, memos, and more.

Navigation Apps



Your phone offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

Enable Location Services on Your Phone

To begin using any location-based services, you must enable your phone's location feature. For information about setting your phone's location options, see [Location Access Settings](#).






Google Maps

Use the Google Maps app to determine your location, find directions, browse local businesses and attractions, rate and review places, and more.

1. From home, tap **Apps**  > **Maps**  .
 - If prompted, follow the onscreen instructions to accept terms of use.
2. Enter an address, city, facility name, etc., and then tap a candidate in the results list.
 - ❖ A map of the specified location opens.

Hangouts



Hangouts is Google's instant messaging service. Use to communicate with other Hangout users, and also use video calling. Log in to a Google account beforehand (see [Google Account](#)).



1. From home, tap **Apps**  > **Hangouts**  .
2. Tap  to start a new Hangout.
3. Type a name, email, number, or circle, or select a contact from the list.
4. Type  to start a message chat or tap  to start a video chat.

Note: You can use Hangouts as your phone's default messaging app, or as a standalone IM app. If you set Hangouts as the default messaging app, the Messages app will be disabled.

Google Search



Search information saved on the phone and in phone applications as well as on the Internet.

1. From home, tap the Google search bar or tap **Apps**  > **Google**  .

- If confirmation appears, follow onscreen instructions.
 - If a description for Google Now appears, tap **Next** and read information. Tap **Enable** on the last page if you want to use Google Now.
2. Enter the keywords you want to find, and then tap  .
 - ❖ Search results appear.
 - To search by voice, tap  in the search bar and speak your search terms.

Calculator

Your phone's convenient built-in calculator lets you perform basic mathematical equations.



1. From home, tap **Apps**  > **Calculator**  .
2. Tap onscreen keys for calculations.
 - ❖ Calculation results appear.

Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your phone's Calendar stays in sync with your Calendar on the Web, Exchange ActiveSync calendar, Google Calendar, and Outlook calendar.





In order to sync with your Google calendar, you must sign in to a Google account on your phone. See [Google Account](#).

Calendar Operations

1. From home, tap **Apps**  > **Calendar**  .
2. On the **Calendar** screen, you can:
 - Select **Month**, **Week**, and **Day** to switch between the month, week, and day views.
 - In month, week, or day view, swipe left or right to change the month, week, or day that is displayed.

Add an Event to the Calendar

Add events to your calendar directly from the Calendar application.





1. From home, tap **Apps**  > **Calendar** .
 2. Tap **New event** .
 3. Enter an event title, start date/time, end date/time, etc., and then tap .
- ❖ The event is added to your calendar.

Selecting a Calendar

- If you have more than one calendar, select a calendar in which to add events:
 - Select **My Calendar** to create an event that will appear only on your phone.
 - Select your Google Account to create a Google Calendar event. If you have several Google Calendars on the Web, select one in which to add your event.
 - You can create multiple Google Calendars only in Google Calendar on the Web. After creating them in Google Calendar on the Web, you'll be able to see them in the Calendar application on your phone. For more information about creating and managing multiple Google Calendars, visit the Google website: calendar.google.com.
 - If you have synchronized your phone with an Exchange ActiveSync account or Outlook on your computer, you can also select these calendars.
 - Select **PC Sync** to create an Outlook Calendar event to sync with your computer.
 - Select **Exchange** to create an Exchange ActiveSync calendar event.





View Calendar Events

You can display the Calendar in daily, weekly, monthly, or agenda view. To change the Calendar view, tap the **Year**, **Month**, **Week**, **Day**, **Agenda**, or **Task** tabs along the side.

1. From home, tap **Apps**  > **Calendar** .
2. Tap a date and then tap an event.
 - ❖ The event details appear.
 - In event details, tap **Edit**  to edit the event.
 - Tap **Delete**  and follow the prompts.



Sync Calendars

You can select which calendars you'd like to sync on your phone, along with what types of information you want to sync.

1. From home, tap **Apps**  > **Calendar** .
2. Tap **Menu**  > **Calendars to display**.
3. Select sync options by tapping the sliders next to each display option.
4. Tap **Menu**  > **Calendars to sync**.
 - ❖ The selected calendars sync.

Synchronize an Exchange ActiveSync Calendar

If you have set up a Microsoft Exchange ActiveSync account on your phone, you can also synchronize Exchange ActiveSync calendar events on your phone. Calendar events on your Exchange ActiveSync will also show in Calendar if you chose to synchronize with the Exchange ActiveSync Server.

1. From home, tap **Apps**  > **Settings**  > **Accounts** > **Corporate**.
2. Tap the account you want to synchronize.
 - To confirm your sync settings, tap the switch next to **Sync Calendar** to turn it on.
3. Tap **Sync now**.

Note: For information about adding an account, see [Add an Exchange ActiveSync Account](#).

Clock




Your phone has a clock app that lets you set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your phone as a desk clock.

Checking the Time

You can check the phone any time on your phone. The current time displays in the upper right corner of the status bar. Many widgets and lock screens also display the time and provide options for how time is displayed.

Setting Date and Time






Your phone automatically receives the current date and time from the wireless network. You can set the date by hand by overriding the default setting.

1. From home, tap **Apps**  > **Clock** .
2. Tap **World clock** tab.
3. Tap **Settings**  > **Date & time**.

4. Tap the switch next to **Automatic date & time** to turn it off.
5. Tap **Set time** and select a time.
6. Tap **OK**.

Set Alarms

Set multiple alarms using your phone's Clock app.

1. From home, tap **Apps**  > **Clock**  .
 2. Tap the **Alarm** tab and then tap **Add**  .
 3. Set the alarm options, including time, days, repeat pattern, alarm type, alarm tone, and volume, and then tap  .
-  The alarm is set.


Additional Clock Features

Your phone's clock app provides additional useful features including world clock, stopwatch, and timer functions. All features are available from the clock app display.

- From home, tap **Apps**  > **Clock**  .



World Clock

The world clock lets you keep track of the current time in multiple cities around the globe.

1. From the clock app, tap **World Clock**.
2. Tap **Add**  and select a city.
3. Repeat to add multiple cities.




Stopwatch

The stopwatch lets you time events down to the hundredth of a second.

1. From the clock app, tap **Stopwatch**.
2. Tap **Start**  to begin timing.
3. Tap **Pause**  to stop timing.
 - Additional options include Lap to keep track of laps, Restart to continue timing, and Reset to reset the stopwatch to zero.

Timer



The timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From the clock app, tap **Timer**.
2. Drag the red dot to set the timer.
3. Tap **Start**  to begin the timer.
4. Tap **Pause**  to stop timing.
5. Tap **Reset**  to clear the timer.



Safe

The safe helps you secure important files and protects your privacy.

Enable the Safe World Clock

1. From home, tap **Apps**  > **Files** .
2. Under **Categories** or **Local**, tap **Safe**.
3. Tap **Enable**.
4. Follow the onscreen instructions to enter your password and set up the security question, and then tap **Done**.



Add Files to the Safe

1. From home, tap **Apps**  > **Files** .
2. Under **Categories** or **Local**, tap **Safe**.
3. Enter the password, and then tap **Done**.
4. Tap **Add**.
5. Follow the onscreen instructions and select which files you want to add to the safe.
6. Tap **Add** to add the selected files to the safe.

Backup



The safe helps you secure important files and protects your privacy.

Back Up Data to Local Storage

1. From home, tap **Apps**  > **Backup** .
2. Tap **New backup**.
3. Select the data you want to back up, and then follow the onscreen instructions to perform the backup.

❖ By default, backup data is saved to the **HuaweiBackup** folder in Files.

Restore Data from Local Storage

1. From home, tap **Apps**  > **Backup**  .
2. Select the data you want to restore.
3. If the backup file is encrypted, follow the onscreen instructions to enter your password, and then tap **OK**.
4. Select the data you want to restore, and then tap **Restore**.

Phone Manager

Phone Manager is Huawei's unique system management application that lets you better protect and manage your phone. With Phone Manager, you can:



- Scan for problems and clean system trash to optimize your system.
- Enable power saving mode to maximize your phone's standby time.
- Block unwanted calls, messages, and notifications.

Optimize the System

Use the Wi-Fi settings menu to manually set your Wi-Fi connection options.

- Tap **Scan** or **Touch to scan**. You can view your phone's running status, clean system trash, optimize the system, and eliminate security threats.
- Tap **Phone accelerator** to display running applications and close those that are not needed.
- Tap **Storage cleaner** to scan the cache, clean system trash, and remove infrequently-used applications, installation packages and trash.

Power Saving



1. From home, tap **Apps**  > **Phone Manager**  .
2. Tap **Power saving** to check your phone's power consumption and extend your phone's standby time. You can switch to difference power saving modes as required.

Harassment Filter



From home, tap **Apps**  > **Phone Manager**  . Then you can:

- Tap **Harassment filter** to set a blacklist and whitelist to block unwanted messages and calls.
- Tap **Notification center** to block unwanted push notifications from the specified applications.
- Enable **Do not disturb**. Your phone will ring only when you receive calls from allowed contacts. Tones and vibrations for other calls, messages, and notifications will be disabled.

Security and Privacy

1. From home, tap **Apps**  > **Phone Manager**  .
2. Tap **App lock** to enable app lock and set the password for accessing locked applications.

Manage Data Usage



1. From home, tap **Apps**  > **Phone Manager**  .
2. Tap **Traffic manager** to configure data plan limits and warnings, and view detailed data usage information.

YouTube

View videos uploaded to YouTube and upload your own videos to your YouTube account.





View YouTube Videos

You can use the YouTube app to view videos on YouTube even if you aren't signed in to a YouTube account.

1. From home, tap **Apps**  > **YouTube**  .
 - If you're prompted to provide confirmation to use the site, follow the onscreen instructions to continue.
2. Search through the YouTube channels and tap a video you want to see.
 - ❖ The video plays on your phone screen.
 - Tap the screen to pause or resume play while watching.

Post a Video to YouTube

You can post videos to your YouTube account from your phone. Before posting, you must set up a YouTube account and sign in to it on your phone.

1. From home, tap **Apps**  > **YouTube**  .
2. Tap  > **Uploads**.
3. Select a video to upload.
 - Enter a title, description, and tags, and select a privacy setting.
4. Tap  .
 - ❖ The video is uploaded to your YouTube channel.

Google Play Music App



The Google Play Music app lets you browse, shop, and play back songs purchased from Google Play as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Play Music library and instantly ready to play via streaming or download.

For more information about Google Play Music, visit play.google.com/about/music.

Note: For information about loading music onto your phone, see [Transfer Files Between Your Phone and a Computer](#).


Play Music with Google Play

Use the Google Play Music app to listen to all your music on your phone. Compatible music file formats include *.mp3, *.mid, *.amr, *.awb, *.3gp, *.mp4, *.m4a, *.aac, *.wav, *.ogg, *.flac, *.mkv.

1. From home, tap **Apps**  > **Play Music** .
2. Flick the screen left or right to select a library category such as Artist or Albums.
3. Tap an item from the category window and then tap a song.

Google Play Music Screen Layout

The following diagram outlines the main features of the Play Music app player screen.

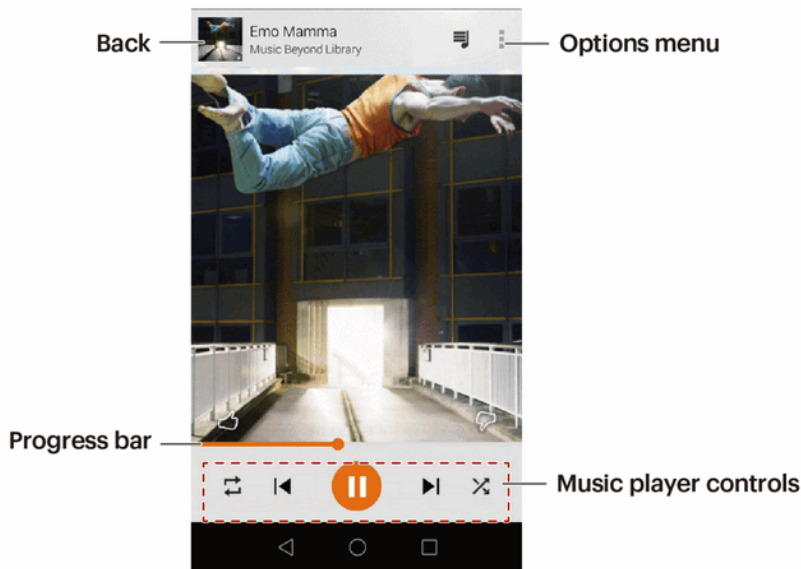





Feature	Description
Back	Tap the thumbnail to return to the song list.

Feature	Description
Progress bar	Drag the slider to control the playback.
Music player controls	Use the buttons here to control the playback.
Options menu	View the information about the album or song.

Create Playlists in Google Play Music

Organize music into playlists to fit every occasion.




1. From home, tap **Apps**  > **Play Music** .
2. Flick the screen left or right and select a library category such as Artist or Albums.
3. Tap  next to an item from the category window and then tap **Add to playlist**.
4. Tap **New playlist**.
5. Enter a name and tap **CREATE PLAYLIST**.
 - ❖ The playlist is created.
6. Return to the library view and select Albums or Songs.
7. Tap  next to an item and then tap **Add to playlist**.
 - ❖ The song or album is added to the playlist. Repeat to add more items to the playlist.

Adding Currently Playing Music to a Playlist

- From the player view, tap  > **Add to playlist**.
 - ❖ The music is added to the playlist.

Notepad

Use your phone's notepad app to save text, memos, lists, and more.

1. From home, tap **Apps**  > **Notepad** .
2. Tap **New note** and then enter your note's content.
3. Tap .
 - ❖ Once the note is saved, you can also follow the onscreen instructions to share or delete the note, or add it to your favorites.

Connectivity

The following topics address your phone’s connectivity options, including USB file transfer and tethering, Wi-Fi, Bluetooth, IR connectivity, and more.

Transfer Files between Your Phone and a Computer

You can use the supplied USB connector to connect your phone directly to your computer and transfer music, pictures, and other content files.

For example, if you have a music album stored on your computer that you want to listen to on your phone with any of the music apps, just attach your phone to the computer and copy the files to the music folder.

File Transfer Tips

- If you want to save data to an SD card on your phone, make sure the SD card is installed and active. See [SD Card](#).
- Avoid removing the battery or SD card while transferring data.
- Data exchange may use the methods outlined in the following table:

Method	Description
Photos	Read, manage, and transfer multimedia files in your phone storage.
Files	Read, manage, and transfer files in your phone storage.
USB drive	If you have a SD card installed, you can use your phone as a USB storage device, read data on the SD card, and transfer data to and from a computer.

Transfer Files between the Phone and a Computer

1. Connect your phone to your computer using the supplied USB/charging cable.
 - Insert the larger end of the cable to the charger/accessory jack at the bottom of the phone.
 - Insert the USB end of the cable into an available USB port on your computer. You may need to remove the USB cable from the charging head to access it.
2. Pull down the status bar to display the notification panel. Select either **Photos** or **Files**.
 - ❖ Any drivers required will be installed automatically on the computer.
3. Once the drivers are installed, double-click the new drive icon that appears on your computer to view the images stored on your phone.
4. Select a folder (for example, **Music** for songs and albums) and copy files to it from your computer.
5. When you are done, disconnect your phone from your computer.

- ❖ The transferred files are now saved to your phone or SD card.



Wi-Fi


Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point or "hotspot."

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

Turn Wi-Fi On and Connect to a Wireless Network

Use the wireless and networks setting menu to enable your phone's Wi-Fi radio and connect to an available Wi-Fi network.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the Wi-Fi slider to turn Wi-Fi on.
 - To disable Wi-Fi, tap the slider again.
4. Tap a Wi-Fi network to connect, enter the password (if it's not an open network), and then tap **Connect**.



- ❖ Your phone is connected to the Wi-Fi network. You will see () in the status bar.
 - The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
 - Entering a password is not required if an access point is not security protected.


Note: The next time your phone connects to a previously accessed secured wireless network, you will not be prompted to enter the password again, unless you reset your phone to its factory default settings or you instruct the phone to forget the network.

Note: Wi-Fi networks are self-discoverable, which means no additional steps are required for your phone to connect to a Wi-Fi network. It may be necessary to provide a user name and password for certain closed wireless networks.

Wi-Fi Settings



Use the Wi-Fi settings menu to manually set your Wi-Fi connection options.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the Wi-Fi slider to turn Wi-Fi on.
 - To disable Wi-Fi, tap the slider again.

4. Tap **Menu**  > **Advanced settings**.
5. Configure your Wi-Fi settings.
 - ❖ Your Wi-Fi settings changes are saved.

Disconnect Wi-Fi



You may wish to disconnect from a connected Wi-Fi network without turning Wi-Fi off.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the name of the connected access point and then tap **Forget**.

- ❖ Wi-Fi is disconnected.
 - After disconnecting from an access point, you may need to re-enter the password to reconnect.

Wi-Fi Direct

Use Wi-Fi Direct to connect directly to other Wi-Fi Direct devices simply via Wi-Fi, without an access point or via the Internet.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the Wi-Fi slider to turn Wi-Fi on.
4. Tap **Wi-Fi direct**.
 - Wi-Fi Direct and Wi-Fi are unavailable at the same time.
5. Tap a device with which to connect.
 - If connected via Wi-Fi, you will see a confirmation. Follow the onscreen instructions.
6. Accept the connection on the other device.
 - If a connection is not accepted after a certain period, the connection request is cancelled.
 - To stop a connection, tap the connected device and then tap **OK**.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

Bluetooth Hints

Question: Can't use Bluetooth?

Answer: Is your phone in airplane mode? Bluetooth is unavailable in airplane mode.

Bluetooth Function Cautions

Information may not appear correctly on connected devices depending on the transferred data.

Bluetooth Information

Bluetooth is a technology that enables wireless connection with PCs, Bluetooth devices with hands-free features, etc.



Function	Description
Audio output	Listen to music, etc., wirelessly.
Hands-free calls	Call hands-free, using Bluetooth-capable hands-free devices and headsets.
Data exchange	Exchange data with Bluetooth devices.

Enable the Bluetooth Feature

Use the settings menu to enable or disable your phone's Bluetooth capabilities.

- Wireless connection to all Bluetooth functions is not guaranteed for the phone.
- The phone may not connect properly depending on the other device.
- Noise may be experienced with wireless calls and hands-free calls depending on the conditions.

To enable Bluetooth

1. From home, tap **Apps**  > **Settings** .
2. Tap **Bluetooth**.
3. Tap the slider to turn Bluetooth on.
 - To disable Bluetooth, tap the slider again.

Tip: You can also turn Bluetooth on or off with the toggle menu in the notifications window. Drag the status bar down to display the notifications window and then tap **Bluetooth** to turn Bluetooth on or off.



Note: Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless phone is prohibited, such as aboard an aircraft and in hospitals.

Pair Bluetooth Devices


Search for and pair nearby Bluetooth devices. Registered Bluetooth devices can be connected simply.

- Enable the Bluetooth function on the Bluetooth devices being paired beforehand.

To pair Bluetooth devices:



1. From home, tap **Apps**  > **Settings** .
2. Tap **Bluetooth**.
 - Nearby devices appear in the “Available devices” list.
 - If a target device is not detected, tap **Scan** to search again.
3. Tap a device from the “Available devices” list, and follow the onscreen instructions to pair with the device.
 - Methods to accept a Bluetooth connection differ depending on the devices used.


Unpairing from a Paired Device

1. From the Bluetooth settings menu, tap **Settings**  next to the paired device you wish to unpair.
2. Tap **Unpair**.
 - ❖ The device is unpaired from your phone. To make another connection with the device, you will need to pair again.

Connect to a Paired Bluetooth Device

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It’s the same procedure to set up stereo audio and hands-free devices.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Bluetooth**.
 - Paired Bluetooth devices appear in the “Paired devices” list.
3. Tap a device from the “Paired devices” list.

The pairing and connection status is displayed below the device’s name in the Bluetooth devices section. When the device is connected to your phone, the Bluetooth paired icon  is displayed in the status bar. Depending on the type of device you have connected, you can then start using the headset or car kit to listen to music or make and receive phone calls.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Send Information Using Bluetooth

You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or notebook computer.




Types of Data You Can Send via Bluetooth

You can send the following types of information, depending on the device you are sending to:

- Images and videos
- Calendar events
- Contacts
- Audio files

In the instructions below, Contacts data is being used as an example.

Sending Contacts Data via Bluetooth

1. From home, tap **Apps**  > **Contacts**  .
 - ❖ You will see the Contacts list.
2. Tap a contact to send.
3. Tap **Share contacts**  > **Bluetooth**.
4. Tap a paired device to receive the data.
 - If you see a message to confirm, follow the onscreen instructions.

Receive Data via Bluetooth

Your phone is capable of receiving a wide variety of file types with Bluetooth, including pictures, music tracks, and documents such as PDFs.

1. When another device attempts to send a file to your phone via Bluetooth, you will see a request to accept the file.
2. Tap **Accept**.
 - When your phone receives a file, you will see a notification. To open the file immediately, pull down the status bar to display the notification panel, and then tap the notification.
 - When you open a received file, what happens next depends on the file type:
 - Media files and documents are usually opened directly in a compatible application. For example, if you open a music track, it starts playing in the Music application.

- For a vCalendar file, select the calendar where you want to save the event, and then tap **Import**. The vCalendar is added to your Calendar events. (For more information on using the Calendar, see [Calendar](#).)
- For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your contacts list.

Settings

The following topics provide an overview of items you can change using your phone's **Settings** menus.



Basic Settings

From the home screen, tap **Apps**  > **Settings**  to access your phone's settings menu.

The table below outlines the top-level settings categories.

Category	Description
Wi-Fi	Enable and set Wi-Fi options.
Bluetooth	Enable Bluetooth connections.
Data traffic management	Check your phone's data usage.
Location access	Select your phone's location access options.
More	Set additional wireless and network functions.
Display	Set wallpaper, brightness, etc.
Sound	Set ringtone, operation tones, etc.
Screen lock & passwords	Set your phone's lock screen options.
Accessibility	Set accessibility options such as screen magnification, hearing aid compatibility, etc.



Access Settings

1. From home, tap **Apps**  > **Settings** .
2. Select settings.
 - ❖ Settings are made and applied.

Wi-Fi Settings Menu

The Wi-Fi settings menu lets you turn Wi-Fi on or off, set up and connect to available Wi-Fi networks, and configure advanced Wi-Fi options.





For more information about Wi-Fi settings, see [Wi-Fi](#).

1. From home, tap **Apps**  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the Wi-Fi slider to turn Wi-Fi on.
 - To disable Wi-Fi, tap the slider again.

4. Tap a Wi-Fi network, enter the password, and tap **Connect**.
5. Configure your Wi-Fi settings.
 - ❖ Your Wi-Fi settings changes are saved.
 - The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
 - Entering a password is not required if an access point is not security protected.



Advanced Wi-Fi Settings


The advanced Wi-Fi settings menu lets you set up and manage wireless access points.

- **Enable Notification when Open Networks Are Available:** From Wi-Fi settings, tap **Menu**  > **Advanced Settings** > **Network notification**.
 - The setting is available when Wi-Fi is turned on.
 - Tap **Network notification** to turn the option on or off.
- **Set Timing for Pausing a Connection:** From Wi-Fi settings, tap **Menu**  > **Advanced Settings** > **Keep Wi-Fi on during sleep** and then select a setting.
- **Check MAC Address:** From Wi-Fi settings, tap **Menu**  > **Advanced Settings**.
 - MAC Address appears below “MAC Address.”
- **Check IP Address:** From Wi-Fi settings, tap **Menu**  > **Advanced Settings**.
 - IP Address appears below “IP Address.”

Bluetooth Settings

Your phone's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your phone's Bluetooth usage, see [Bluetooth](#).

1. From home, tap **Apps**  > **Settings** .
2. Tap **Bluetooth**.
3. From the Bluetooth screen, configure these settings:
 - Tap **Turn on Bluetooth** to turn Bluetooth On or Off.
 - Tap **Visibility** to enable or disable visibility to other Bluetooth devices. When your device is visible, other devices can find your devices during a scan. Your device remains visible for the period of time set in the Visibility timeout setting.
 - Tap **Device name** to rename the phone name.

- Tap **Search** to search for visible Bluetooth devices. After searching, tap a device to pair with it.
- Tap **Menu**  > **Visibility timeout** to set the length of time your device is visible to other devices when you turn on visibility.

Location Access Settings

Your Location Services settings menu lets you select how your phone determines its location (using the wireless networks, GPS satellites, both, or neither).



Location Settings Overview

Your Location settings menu allows you to configure the following options.



Location Setting	Description
Access my location	Enable or disable your phone's location services.
Location mode	Select a locating method: High accuracy, Power saving, or GPS only.

Enable Location Services

Before using any features that require location assistance, you must enable your phone's location services.



1. From home, tap **Apps**  > **Settings** .
2. Tap **Location access**.
3. Tap **Access my location**.
 - ❖ Your phone's location services are enabled.
 - If you see a confirmation, follow the onscreen instructions to connect.

Access Location Settings

1. From home, tap **Apps**  > **Settings** .
2. Tap **Location access**.
3. Configure the desired settings.
 - ❖ Your location settings are applied and saved.

Data Traffic Management Settings

Your phone's data usage control function lets you check and control your data usage.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Data traffic management**.
3. From the Bluetooth screen, configure these settings:
 - Tap **Package settings** to set the data usage limits.
 - Tap **Traffic use ranking** to view the data usage daily or monthly.
 - Tap **Networked apps** to view the networked applications on your phone.



More Settings

The More settings menu provides access to additional wireless and network options, such as mobile networks, VPN, roaming, and more.

More Settings Options

Setting	Description
Airplane mode	Disable all settings that emit or receive signals. Phone stays powered on.
Mobile networks	Set a network mode, etc.
VPN	Add a Virtual Private Network (VPN).
Emergency Alerts	Set Emergency alerts.

Access More Settings Options

1. From home, tap **Apps**  > **Settings** .
2. Under **Wireless & networks**, tap **More**.
3. Set items.
 - ❖ Your settings are saved and implemented.

Display Settings

Adjusting your phone's display settings not only helps you see what you want, it can also help increase battery life.



Display Settings Overview


The sound settings menu allows you to configure the following options:

Display Setting	Description
Wallpaper	Set a wallpaper.
Font size	Set font size for display.

Display Setting	Description
Daydream	Enable or disable the screen saver. If this function is enabled, the screen saver will run automatically while your phone is being charged.
Indicator light	Enable or disable the blinking indicator when you receive notifications.
Display carrier name	Enable or disable your carrier name in the status bar.
Display network speed	Display or hide the current network speed.
Brightness	Set the display brightness.
Sleep	Set when your screen turns off. When idle for a specified period, the screen locks automatically to save battery power.
Auto rotate screen	Set whether your screen auto-rotates. If this function is turned on, your screen's orientation will change automatically with the way you hold your phone when you perform certain actions, such as browsing a Web page, viewing a picture, or writing a message.

Access Display Settings

1. From home, tap **Apps**  > **Settings** .
2. Tap **Display**.
3. Set your display options.

 Your display settings are saved and applied.

Sound Settings

The sound settings menu lets you control your phone's audio, from ringtones and alerts to tap tones and notifications.



Sound Settings Overview

The sound settings menu allows you to configure the following options:

Sound Setting	Description
Volume	Set volume for ringtones, alarms, system features, etc.
Silent mode	Set silent mode.
Vibrate in silent mode	Enable or disable vibration when your phone is in silent mode.
Vibrate Type	Set vibration type.
Phone ringtone	Set your phone's default ringtone.
Vibrate when ringing	Enable or disable vibration when your phone rings.
Default notification tone	Set a tone for default phone notifications.
Dial pad touch tones	Enable tones for phone dialer screen.
Touch sounds	Set tone options for screen tapes.

Sound Setting	Description
Screen lock sound	Set a tone when locking/unlocking the screen.
Screenshot tone	Set a tone when taking a screenshot.
Vibrate on touch	Enable vibration when tapping the screen.
Emergency tone	Set a tone for incoming emergency alerts.



Access Sound Settings

1. From home, tap **Apps**  > **Settings**  .
2. Tap **Sound**.
3. Set your sound options.

❖ Your sound settings are saved and applied.

Storage Settings



The storage settings menu lets you manage internal storage on your phone and provides menu choices for an optional SD card (not included).

1. From home, tap **Apps**  > **Settings**  .
2. Tap **Storage**.
3. Check or tap items.

❖ Review your storage settings.

Battery Settings

Monitor your phone's battery usage through this settings menu. View which functions are consuming your battery's charge and at what percentage.

1. From home, tap **Apps**  > **Settings**  .
2. Tap **Battery**.
3. Tap items to view details.

❖ Check your battery condition and access additional options.

Applications Settings



Check installed applications and running applications.

Applications Settings Overview

Items that can be checked in the Apps settings menu are the following.

Apps Setting	Description
Downloaded	Check downloaded apps.
On SD Card	Check apps on your optional installed SD card.
Running	Check running apps.
All	Check all apps.

Access Apps Settings

- From home, tap **Apps**  > **Settings** .
- Tap **Manage apps**.
- Tap items to view details.
 - ❖ Check your application settings condition and access additional options.
 - Depending on the app and its location, you may be able to force the app closed, uninstall or disable the app, clear cache and data, and more.

Security Settings

The Security settings menus let you set encryption options, password visibility, administrator settings, and credential storage options.



Security Settings Overview

Many security settings are dependent on Screen lock settings, SIM lock settings, etc. The following table outlines the main settings available through the Security settings menu:

Security Setting	Description
Encrypt phone	Encrypt all data on your phone.
Set up SIM card lock	Set your SIM card PIN.
Show passwords	Toggle to show or hide passwords when entering form data.
Device administrators	View or turn off device administrators.
Unknown sources	Allow or deny installation of apps from sources other than the Google Play Store app.
Allow HiSuite to use HDB	Enable or disable connecting your phone with computer.
Revoke HiSuite to use HDB	Revoke all HiSuite connection authorizations you have granted.
Storage type	Display storage type.
Trusted credentials	Display trusted CA certificates.
Install from SD card	Install certificates from SD card.
Clear credentials	Remove all certificates.
Trusted agents	View or deactivate trusted agents.
Apps with usage access	Set app access restriction.
Screen lock	Set your phone to be unlocked before using it.

Access Security Settings

Before using any features that require location assistance, you must enable your phone's location services.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Security**.
3. Set your security options.
 - ❖ Your security settings are applied and saved.

Lock Screen Settings

The lock screen settings let you set your method for unlocking your phone, customize lock screen options, determine whether to show pop-up tips for unlocking the phone, and enter your owner information to be displayed on the lock screen.

Screen Lock



You can increase the security of your phone by creating a screen lock. When enabled, you have to draw the correct unlock pattern on the screen, enter the correct PIN, or enter the correct password to unlock the phone's control keys, buttons, and touchscreen.

In order from least secure to most secure, the available screen lock options are:

- None
- Pattern
- PIN
- Password

Important: To protect your phone and data from unauthorized access, it is recommended that you use the highest security level available (Password protection). It is also recommended you frequently change your password to ensure the safety of your phone and personal data.

Access Screen Lock Settings

1. From home, tap **Apps**  > **Settings** .
2. Tap **Screen lock & passwords**.
3. Tap **Password**.

Use a Screen Unlock Pattern

1. From the Screen lock settings menu, tap **Pattern**.
2. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.
3. Tap **Continue**.
4. When prompted, draw the screen unlock pattern again, and then tap **Confirm**.
5. Enter a backup PIN, tap **Continue**, re-enter the PIN, and tap **OK** to save your screen unlock pattern.
 - If you fail to draw the correct unlock pattern on the screen after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Use a Screen Unlock PIN

1. From the Screen lock settings menu, tap **PIN**.
2. Enter a PIN, tap **Continue**, re-enter your PIN, and tap **OK** to save the setting.
 - If you fail to enter the correct PIN after five attempts, you will be prompted to wait for 30 seconds before you can try again.



Use a Screen Unlock Password

1. From the Screen lock settings menu, tap **Password**.
2. Enter a password, tap **Continue**, and then enter your password again and tap **OK** to save the setting.
 - If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Important: To protect your phone and data from unauthorized access, it is recommended that you use the screen unlock password (highest security). It is also recommended that you frequently change your password to ensure the safety of your phone and personal data.

Disable the Screen Lock

Follow the instructions below to turn off your current screen lock.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Screen lock & passwords**.
3. Tap **Password**.
4. Draw your unlock screen pattern, enter your PIN, or enter your password.

❖ The screen lock is disabled.

- If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Language & Input Settings



Your phone's language and input settings let you select a language for the phone's menus and keyboards, select and configure keyboard settings, configure speech input settings, and set your phone's mouse/trackpad options.

Language and Input Settings Overview

You can set the following options in the Language and input settings menu:

Language and Input Setting	Description
Language & region	Set the language for your display and menus.
Default keyboard	Set the default method for entering text.
Android keyboard	Set Android keyboard options.
Google voice typing	Set options for Google Voice text entry.
Spelling correction	Enable spelling correction when entering text.
Voice input	Set your voice search options.
Text-to-speech output	Set text-to-speech options.
Pointer speed	Set the speed of the pointer for a mouse/trackpad.

Access Language and Input Setting Options

1. From home, tap **Apps**  > **Settings** .
2. Tap **Language & input**.
3. Set options.

❖ The language and input settings are applied and saved.



Language and Input Options

Some of the language and input options are detailed below.

- **Set the Display Language:** From the Language and input settings menu, tap **Language & region** and then tap a language to assign it.
- **Set Input Method:** From the Language and input setting menu, tap **Default keyboard** and then tap an input method.
- **Enable Voice Input:** From the Language and input settings menu, tap **Google voice typing** to toggle the option on or off.

Set Voice Output when Using Voice Search: From the Language and input settings menu, tap **Voice input**, tap a settings option, and follow the onscreen instructions.

- **Set Output for Text-to-Speech Output:** From the Language and input settings menu, tap **Text-to-speech output**, tap a settings option, and follow the onscreen instructions.
- **Set Speed of Pointer for Mouse/Trackpad:** From the Language and input settings menu, tap **Pointer speed**, drag the bar to adjust the speed, and tap **OK**.

1. From home, tap **Apps**  > **Settings**  > **Language & region**.
2. Tap an available language (**English** or **Español**).

Backup and Reset

Your phone's **Backup and reset** menu lets you back up your phone's data and settings to Google servers before resetting your phone to the original factory settings. The Factory data reset erases all data from the phone's application storage, including:

- Your Google Account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications



Backup and Reset Overview

The following options are available in the Back up and reset menu:



Backup and Reset Option	Description
Back up my data	Enable backup for application data, Wi-Fi passwords, and other settings to Google servers.
Backup account	Select the account used to back up data.
Automatic restore	When reinstalling an application, backed up settings and data will be restored.
Factory data reset	Reset all settings and delete all data on phone.

- Performing a factory data reset erases all data on the phone. It is recommended that you back up important data before performing a factory data reset.
- Erased information cannot be restored. Only erase data after you are sure you have saved everything you need.

Access Backup and Reset Options

1. From home, tap **Apps**  > **Settings** .
2. Tap **Backup & reset**.
3. Set options.
 - ❖ The backup and reset settings are applied and saved.
 - If you're performing a Factory Data Reset, follow the prompts to confirm the data removal. The phone will erase all data and reboot.

Factory Data Reset



Tip: Before performing a factory data reset on your phone, you may want to unmount an installed SD memory card to avoid losing any data you may have stored on it. From home, tap **Apps**  > **Settings**  > **Storage** > **Unmount SD card** to unmount the storage card.

1. From the Backup and reset menu, tap **Factory data reset**.
2. Read the factory data reset information page and tap **Reset phone**.
3. Tap **Reset phone**.
 - ❖ Your phone will power down and reset itself, which may take up to 10 minutes.
 - Once the phone has reset, it will run through the Hands Free Activation and update processes again. When finished, you will see the Welcome screen and Setup application. See [Complete the Setup Screens](#) to start over.



Accounts

The Accounts settings menu lets you add and manage all your email, social networking, and picture and video sharing accounts.

Set Up a New Account

1. From home, tap **Apps**  > **Settings** .
2. Tap **Accounts** > **Add account**.
3. Tap an account type and then follow the onscreen instructions to add the required account information, and then tap **Done**.
 - ❖ The account is added to the accounts list.

Manage Existing Accounts

1. From home, tap **Apps**  > **Settings** .
2. Tap **Accounts**, and then tap the account you want to set.
3. Set your account settings, and then tap **Done**.

❖ The account options are updated.

Date & Time Settings



Use the date and time settings menu either to automatically use the network-provided date and time or manually set these values, as well as select time and date format options.

Date and Time Overview

The following date and time options may be configured:



Date and Time Option	Description
Automatic date & time	Set the date and time automatically via the connected wireless network.
Set date	Set the date manually (only available when Automatic date and time option is disabled).
Set time	Set the time manually (only available when Automatic date and time option is disabled).
Automatic time zone	Use the network time zone or set the time zone manually.
Select time zone	Set the time zone manually (only when Automatic time zone is disabled)
Use 24-hour format	Enable or disable 24-hour format.
Select date format	Set the date display format.
Dual clocks	Display dual clocks on the lock screen when roaming.

Access Date and Time Options

1. From home, tap **Apps**  > **Settings** .
 2. Tap **Date & time**.
 3. Set available date and time options.
- ❖ Your date and time settings are applied and saved.



Accessibility Settings

The Accessibility menu lets you enable and manage accessibility-related applications.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Accessibility**.
3. Set available accessibility options.
 - ❖ Your accessibility settings are applied and saved.



Service

Displays the services installed for Accessibilities use.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Accessibility**.
3. Under **Service**, set the following options as you want.
 - **TalkBack**: Tap the **TalkBack** switch (at the upper-right corner of the screen) to enable or disable it. After you enable **TalkBack** and **Explore by touch**, you can use different gestures to operate your phone.
 - **Switch Access**: Tap the **Switch Access** switch (at the upper-right corner of the screen) to enable or disable it. **Switch Access** allows you to control your phone using configurable key combination.

System



Allows you to configure the following system options.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Accessibility**.
3. Under **System**, set the following options as you want.
 - **Captions**: Tap the **Captions** switch to enable or disable it. Follow the onscreen instructions to configure the **Language**, **Text size**, and **Caption style**.
 - **Magnification gestures**: Tap the **Magnification gestures** switch (at the upper-right corner of the screen) to enable or disable it. After you enable this function, you can zoom in and out by triple-touching the screen.
 - **Power button ends call**: Tap the switch next to **Power button ends call** to enable or disable it. After you enable this function, you can end voice calls by pressing the Power/Lock button.
 - **Press volume button to answer**: Tap the switch next to **Press volume button to answer** to enable or disable it. After you enable this function, you can answer voice calls by pressing the Volume button.

- **Speak passwords:** Tap the switch next to **Speak passwords** to enable or disable it. Enable this function to allow voice confirmation of characters when inputting passwords.
- **Accessibility shortcut:** Tap the **Accessibility shortcut** switch (at the upper-right corner of the screen) to enable or disable it. After you enable this function, you can open accessibility options quickly on any screen.
- **Text-to-speech output:** Text-to-speech output provides audible readout of text, for example, the contents of text messages, and the Caller ID for incoming calls.
- **Touch & hold delay:** Configure the delay interval.
- **Persisten Notification:** Tap the **Persisten Notification** switch (at the upper-right corner of the screen) to enable or disable it. Enable this function to alert sound repeatedly when there are unread notifications.



Display

Allows you to configure the display options.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Accessibility**.
3. Under **Display**, tap **Color correction** to configure it.

Hearing

Allows you to configure the following hearing options.

1. From home, tap **Apps**  > **Settings** .
2. Tap **Accessibility**.
3. Under **Hearing**, set the following options as you want.
 - **Sound balance:** Allows you to manually adjust the sound direction.
 - **Mono audio:** Tap the switch next to **Mono audio** to enable or disable it. After you enable this function, you can change the sound to Stereo or Mono.
 - **Disable all sounds:** Tap the switch next to **Disable all sounds** to enable or disable it. Enable this function to turn off all sounds.

About Phone



The about phone menu lets you access important phone information, search for and apply updates, and view legal and safety information.

About Phone Overview

The following About Phone items may be reviewed or set:

About Phone Item	Description
Model number	Check the phone's model number.
Build number	Check the current phone's build number.
CPU	Check the current phone's CPU.
RAM	Check the current phone's RAM.
Internal storage	Check the current phone's internal storage.
Resolution	Check the current phone's resolution.
Android version	Check the Android version number.
Baseband version	Check the phone's baseband version.
Kernel version	Check the phone's kernel version.
Status	Check your phone's status.
Legal information	Check copyright information, terms of use, etc.

Access About Phone Options

1. From home, tap **Apps**  > **Settings** .
2. Tap **About Phone**.
3. Select or view available options.
 - ❖ Your phone information is displayed.

For Assistance

The following topics address areas of support for your phone, including troubleshooting, specifications, account information, warranty information, and customer service contact information.

Troubleshooting

Check the questions and answers below for troubleshooting solutions for common phone issues.

Check Here First

Question: Phone freezes/operation is unstable.

Answer: Turn the phone on again. If you are unable to turn the phone off, remove and replace the Battery, and then turn the phone on again. Data that was being edited is erased after your phone is powered on again.

Question: Operation is unstable after a new application was installed.

Answer: The newly installed application may be the cause. Uninstall the application in Safe mode. See [Uninstall an App](#). To turn the phone on in Safe mode:

- To enable the Safe mode, with the phone turned off, press the **Power/Lock** button and then press and hold the **Volume** down key until the device starts up.
 - After turning the phone on in Safe mode, "Safe Mode" appears at lower left.
 - After restarting in Safe mode, your phone can be powered on as usual.
 - Before turning the phone on in Safe mode, it is recommended that you back up important data.
 - By powering the phone on in Safe mode, added widgets may be deleted.

Question: Cannot use phone, mail, or Internet.

Answer 1: Check whether you are where signal is weak or out of service area.

Answer 2: Power the phone on again.


Answer 3: Is the phone in Airplane mode? To check that Airplane mode is cancelled:

- From home, tap **Apps**  > **Settings**  , under **Wireless & networks** tap **More** > **Airplane mode**.

Answer 4: Is data communication disabled? To check that data communication is enabled:

- From home, tap **Apps**  > **Settings**  > **Data traffic management**.

Answer 5: Is a disabled access point set? To reset to initial settings:

- From home, tap **Apps**  > **Settings** , under **Wireless & networks** tap **More** > **Mobile networks** > **Access Point Names** > **Menu**  > **Reset to default**.

Question: Battery level goes down quickly.

Answer: Are you where signal is weak or have been out of service area for a long period? Calling where signal is weak or being out of service area uses a lot of Battery.

Question: Cannot install applications.

Answer: Applications cannot be installed with only a little free space on the phone or SD card. To check free space, see [Storage Settings](#). Applications not supported by your phone cannot be installed.

Question: Cannot unlock screen.

Answer: Power the phone on again. If you are unable to turn the phone off, remove and replace the Battery, and then power the phone on again. Data that was being edited is erased after the phone is powered on again.

Specifications

The following tables list your phone's and battery's specifications.

Phone Specifications

Item	Description
Weight	Battery installed: Approx. 153 g
Continuous Talk Time	3G: Approx. 12 hours GSM: Approx. 16 hours
Continuous Standby Time	3G: Approx. 300 hours GSM: Approx. 300 hours
Charging Time	Approx. 2.5 hours
Dimensions (H x W x D)	Approx. 136 x 67.9 x 9.9 mm
Maximum Output	CDMA: 24 W WCDMA: 23.5 W GSM LB: 32.5 W GSM HB: 29.5 W
Communication Speed	LTE Category 4: Up to 150.8 Mbps downlink/up to 51.0 Mbps uplink

Battery Specifications

Item	Description
Voltage	3.8 V
Type	Lithium-ion
Capacity	2000 mAh
Dimensions (D x W x H)	Approx. 4.5 (max 4.7) x 41.5 x 83.5 mm

Boost Account Information and Help

Find out about managing your account online and on your phone, buying additional minutes for your plan, and getting help.

For more information about your Boost Mobile account, as well as other Boost Mobile services, visit us at: boostmobile.com.

Manage Your Account

Access information about your account. You can:













- Check your minutes.
- Re-Boost[®] (add money to your account).
- Change plans.
- And more.

From Your Phone

Access account information and other self-service tools from BoostZone.

- From home, tap **Apps**  > **BoostZone** .

You can also dial directly for access to certain information:

- Dial     (#BAL) to check account balance.
- Dial     (#ADD) to make a payment.
- Dial     to launch BoostZone or call Boost Customer Care (depending on your Settings) to get answers to other questions.

From Your Computer

- Visit boostmobile.com, click **My Account**, and log in with your wireless phone number and account PIN.

From Any Other Phone

- Boost Customer Care: **1-888-BOOST-4U** (1-888-266-7848).

Re-Boost

Boost Mobile makes it easy to add money to your account. You decide exactly how and where you want to pay. Keep your account active by using your phone and adding money to your account.

Pay with Cash

Find an Authorized Re-Boost Retailer near you. Pick up a Re-Boost Card or recharge for as low as \$10 at the register, where available.

Pay Anytime with a Credit/Debit Card

Dial (#ADD) to add money from your phone or visit **My Account** at boostmobile.com to do it online. Securely register your credit/debit card with Boost for more convenient one-time payments or to set up easy Auto Re-Boost payments.

Set Up Worry-Free Payments with Auto Re-BoostSM

It's the easiest way to make sure your account stays on and active. Use a credit card, debit card or bank account—whatever's best for you.

Visit boostmobile.com/reboost to get the details on all your Re-Boost options.

Copyright Information

©2015 Boost Worldwide, Inc. All rights reserved.



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android™ is a trademark of Google Inc.

LTE is a trade mark of ETSI.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

To better understand how we protect your personal information, please see the privacy policy at <http://consumer.huawei.com/privacy-policy>.

Index

3
3-way Calling 46

A

About Phone 110
Accessibility Settings 108
Accessory Jack 3
Accounts
 Add new 107
 Manage 108
 Settings 107
Activation and Service 15
Airplane Mode 21
Alarm 83
Android Keyboard 22, 105
Answer a Call 39
Apps
 Find and install 26
 Launch 19
 List 20
 Request refunds 26
 Uninstall 27
 Update 27
Apps and Features 79
Apps Settings 101
Auto Rotate Screen 100

B

Back Key 3
Back Up and Reset 106
Backup 84
Basic Operations 18
Battery
 Charge 11
 Insert 9
 Remove 10
 Settings 101
 Use 9
Bluetooth 91
 Connect 93
 Pair devices 92
 Receive information 94
 Send information 94
 Settings 97
 Share pictures and videos 75
 Turn on or off 92

Bluetooth Information 92
Bookmark 68
Boost Account Information and Help 114
Brightness 100
Browser 67
 Bookmark 68
 History 68
 Launch connection 67
 Settings 68

C

Calculator 80
Calendar 80
 Add event 80
 Sync 81
 Sync Exchange ActiveSync calendar 82
 View events 81
Call Forwarding 46
Call Logs
 Make call from 41
Call Settings
 Access 47
 Options 47
Call Waiting 45
Caller ID Blocking 45
Camera
 Launch from Gallery 70
 Settings 78
 Take a picture 70
Camera and Video 70
Capture Modes 71
Capture Screenshots 19
Car Kit
 Connect 93
Charger/Accessory Jack 3
Chrome 69
Clock 82
 Additional features 83
 Set alarm 83
 Stopwatch 83
 Timer 83
 World Clock 83
Conference Calling 46
Connectivity 89
Contacts 50
 Add contact 50
 Back up 53
 Delete 52

- Edit 52
- Import 53
- Make call from 41
- Save a phone number 51
- Share 52
- View 51

D

- Data traffic Management Settings 98
- Date & Time Settings 108
- Device Administrators 102
- Display Settings 99
- Drag 14

E

- Edit Pictures 74
- Editing Text 23
- Email 63
 - Add account 64
 - Add Exchange ActiveSync account 64
 - Compose and send 65
 - Delete account 66
 - Manage inbox 66
 - Options when reviewing messages 66
 - Setup 63
 - Share pictures and videos 74
 - View and reply 65
- Emergency Numbers 38
- Encrypt Device 102
- Enhanced 9-1-1 (E 9-1-1) 39
- Enter Text 22
- Exchange ActiveSync
 - Add account 64
- Extended Home Screen 32

F

- Factory Data Reset 107
- Files
 - Transfer between phone and computer 89
- Flick 15
- Folders 35
- Font
 - Size 99
- For Assistance 112

G

- Gallery
 - View pictures and videos 73
- Get Started 2

- Gmail 60
 - Add another account 63
 - Archive threads 62
 - Composition Options 60
 - Create account 24
 - Create and send message 60
 - Delete threads 62
 - Labels 61
 - Mute threads 62
 - New messages 61
 - Read and reply 61
 - Read messages 61
 - Report phishing 62
 - Report spam 62
 - Search messages 62
 - Share pictures and videos 74
 - Switch accounts 63

- Google
 - Chrome 69
 - Create account 24
 - Hangouts 79
- Google Account 24
 - Sign in 25
- Google Maps 79
- Google Play
 - Find and install apps 26
 - Help 27
 - Store 25
- Google Play Music 87
 - Create playlists 88
 - Play music 87
 - Screen layout 87
- Google Search 79
- Google Voice Typing 105
- GPS Satellites 98

H

- Hangouts 79
- Headset
 - Connect 93
- Headset Jack 3
- Home Screen
 - Add Folders 35
 - Add Shortcuts 35
 - Add Widgets 35
 - Basics 31
 - Customize 34
 - Extended 32
 - Layout 31
- Home Screen and Apps List 18

I

Import Contacts 53
 In-Call Screen Layout and Operations 40
 Incoming Call
 Answer 39
 Reject 39
 Input Settings 105
 Internet 55

K

Keyboard
 Default settings 105
 Touchscreen 22

L

Language 105
 Language Settings 105
 Location
 GPS satellites 98
 Wireless networks 98
 Location Services 98
 Lock Screen Settings 103

M

Manage Your Account 114
 Maps 79
 Messaging 55
 MMS
 Options 59
 Send messages 56
 More Settings 99
 Multimedia Messaging
 Share pictures and videos 75
 Music
 Google Play Music 87

N

Navigation
 Google Maps 79
 Navigation Apps 79
 Notepad 88
 Notification Icons 33
 Notification Panel 34
 Notifications 33

O

Optional Services 41

P

Phone
 Dialer 37
 Parts and functions 2
 Phone Calls 37
 Answer 39
 Emergency numbers 38
 Place and Answer 37
 Using Call Logs 41
 Using contacts 41
 Using phone keypad 37
 Phone Interface 31
 Phone Layout (illustration) 2
 Phone Manager 85
 Phone Number 20
 Save to contacts 51
 Phone Settings Menu 18
 Phone Update
 PRL 30
 Profile 30
 Software 28
 Picasa
 Share pictures 77
 Pictures
 Crop 74
 Rotate 74
 Share on Flickr 76
 Share via Bluetooth 75
 Share via messaging 75
 Take with camera 70
 View 73
 Pictures and Videos
 Share on Facebook 76
 Share via email 74
 Pictures
 Share via Picasa 77
 Pinch 15
 Play Music 87
 Play Store 25
 Find and install apps 26
 Pointer Speed 105
 Power Key 3
 Power Off 12
 Power On 12
 PRL Update 30

R

Re-Boost 115
 Reject Incoming Call 39
 Ringtone 100

S

- Safe 84
- Save a Phone Number 51
- Screen Lock 103
 - Disable 104
- Screen Orientation
 - Portrait and Landscape 18
- Screen Rotation 100
- Screen Unlock Password 104
- Screen Unlock Pattern 104
- Screen Unlock PIN 104
- SD Card 5
 - Format 8
 - Insert 5
 - Remove 7
- Security Settings 102
- Settings 96
 - Overview 96
- Setup Screens 16
- Share
 - Contacts 52
- Silent Mode 21, 100
- SIM Card 3
- Slide 14
- Sound Settings 100
- Speaker 3
- Specifications 113
- Spread 15
- Status Bar 32
- Status Icons 32
- Stopwatch 83
- Storage
 - Settings 101
- Swipe 14

T

- Take Pictures and Record Videos 70
- Tap 13
- Text-to-Speech 105
- Text and Multimedia Messaging 55
- Text Editing 23
- Text Entry 22
- Text Messaging
 - Conversations 57
 - Draft messages 56
 - Notifications 56
 - Options 59
 - Send messages 55
- Timer 83
- Touch 13
- Touch and Hold 13

- Touchscreen 13
 - Keyboard 22
 - Turn off 28
 - Turn on 28
- Troubleshooting 112
- TTY Mode 48
- Turn Device Off 12
- Turn Device On 12
- Typing 22

U

- Update Your Phone 28

V

- Video Camera
 - Record video 72
- Videos
 - Record 72
 - Share via Bluetooth 75
 - Share via messaging 75
 - Share via YouTube 77
 - View 73
- Visual Voicemail 42
 - Listen to multiple messages 43
 - Options 44
 - Review 43
 - Set up 42
 - Settings 44
- Voice Search 105
- Voicemail
 - Display name 45
 - Greeting 44
 - Setup 41
- Volume 100
 - Key 3

W

- Wallpaper 34, 99
- Web
 - Launch connection 67
- Wi-Fi 90
 - Disconnect 91
 - Settings 90
 - Settings menu 96
 - Turn on and connect 90
- Wi-Fi Direct 91
- Widgets 35
- World Clock 83

Y

- YouTube 86
 - Post a video 86
 - Share videos 77
 - View videos 86

Z

- Zoom 15