
Copyright 2010 © Embedded Artists AB

Getting Started With Linux on the LPC3250 OEM Board

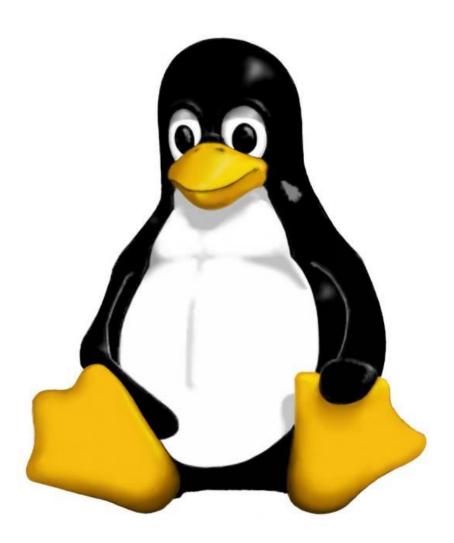



Embedded Artists AB

Södra Promenaden 51 SE-211 38 Malmö Sweden

info@EmbeddedArtists.com http://www.EmbeddedArtists.com

Copyright 2010 © Embedded Artists AB. All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Embedded Artists AB.

Disclaimer

Embedded Artists AB makes no representation or warranties with respect to the contents hereof and specifically disclaims any implied warranties or merchantability or fitness for any particular purpose. Information in this publication is subject to change without notice and does not represent a commitment on the part of Embedded Artists AB.

Feedback

We appreciate any feedback you may have for improvements on this document. Please send your comments to support@EmbeddedArtists.com.

Trademarks

All brand and product names mentioned herein are trademarks, services marks, registered trademarks, or registered service marks of their respective owners and should be treated as such.

Table of Contents

1	Introduction	5
1.1	Organization of this Document	5
1.2	Conventions in This Book	5
2	Getting Started	6
2.1	Introduction	
2.1	Preparation and Setting up the Board	
2.3	Load the u-boot From MMC/SD Card	
2.4	Load the u-boot From UART	
2.5	Boot the u-boot	
2.6	Load the Root File System and Linux Kernel	10
3	Using the Linux Target Image Builder	13
3.1	Introduction	13
3.2	Setup an Ubuntu 9.04 Distribution	13
3.2.	1 Download and Start the VMware Appliance	13
3.2.2	2 Customize Ubuntu	14
3.2.3	3 Install Necessary Packages	15
3.2.4		
3.2.		
3.3	Install LTIB and Build the Images	
3.4	Add Additional Packages	20
3.5	Useful Linux Commands	20
3.5.	1 Obtain IP Address	20
3.6	Hello World Application	21
4	Universal Boot Loader - u-boot	22
4.1	Introduction	22
4.2	Console / Environment	22
4.2.	1 Commands	22
4.2.2	2 Network Related Variables	23
4.2.3	3 Boot Related Variables	23
4.3	Booting Options	23
4.3.	1 Kernel from USB Memory Stick	23
4.3.2	2 Kernel from TFTP Server	24
4.3.3	3 Kernel Stored in NAND Flash	24
4.3.4		
4.3.	•	
4.3.0		
4.4	Use DHCP	
4.5	Known Problems	
4.5.		
4.5.2	2 Unable to Boot Because of Bad Blocks	29

5 I	Peripherals and Drivers	30
5.1	Introduction	30
5.2	Display	30
5.2.1	Hardware	30
5.2.2	Device Driver and Configuration	30
5.2.3	Usage	30
5.2.4	Add and Use the fby Application	30
5.3	Touch Screen	31
5.3.1	Hardware	31
5.3.2	Device Driver and Configuration	31
5.3.3	Usage	32
5.4	Network	32
5.4.1	Hardware	32
5.4.2	Device Driver and Configuration	32
5.4.3	Usage	32
5.5	Memory Card	34
5.5.1	Hardware	34
5.5.2	Device Driver and Configuration	34
5.5.3	Usage	34
5.6	USB Host	34
5.6.1	Hardware	34
5.6.2	Device Driver and Configuration	34
5.6.3	Usage	34
5.7	LEDs and Buttons	35
5.7.1	Hardware	35
5.7.2	3	
5.7.3	Usage	35
5.8	NAND Flash	36
5.8.1	Hardware	36
5.8.2	Device Driver and Configuration	37
5.8.3	Usage	37

1 Introduction

This document provides you with step-by-step instructions to get Linux up-and-running on the LPC3250 OEM Board / LPC3250 Developer's Kit. The instructions cover everything from building the bootloader, kernel, root file system to transfer the built software to the target board.

Additional documentation you might need is.

- LPC3250 OEM Board User's Manual This document is available for download at Embedded Artists support site.
- Kickstart and Stage 1 Loader The LPC3250 OEM board has been preprogrammed with the Kickstart and Stage 1 Loader (S1L). This document gives an introduction to these loaders. Please note that the document has been written by NXP with a different LPC3250 Development board in mind. Not all information is relevant for Embedded Artists LPC3250 OEM Board. The document is found in the sample application package (CDL) that can be downloaded from Embedded Artists support site. The location of the document within the package is software/csps/lpc32xx/bsps/ea3250/docs/lpc32xx_bl.pdf.

1.1 Organization of this Document

- Chapter 2 Getting Started
 This chapter describes how you quickly get Linux up-and-running on the LPC3250 OEM Board using prebuilt u-boot, Linux kernel and root file system images.
- Chapter 3 Using the Linux Target Image Builder
 This chapter describes how the Linux Target Image Builder (LTIB) is setup and used on a Fedora 11 and Ubuntu 9.04 distribution.
- Chapter 4 Universal Boot Loader u-boot
 This chapter describes the u-boot and how to use different booting options.
- Chapter 5 Peripherals and Drivers

 This chapter describes some of the peripherals and drivers that are available on the LPC3250

 OEM Board.

1.2 Conventions in This Book

A number of conventions have been used throughout the book to help the reader better understand the content of the book.

Constant width text - is used for file system paths and command, utility and tool names.

\$ This field illustrates user input in a terminal running on the development workstation, i.e., on the workstation where you edit, configure and build Linux

This field illustrates user input on the target hardware, i.e., input given to the terminal attached to the LPC3250 OEM Board

This field is used to illustrate example code or excerpt from a document.

2 Getting Started

2.1 Introduction

This chapter describes how you get-up-and running with prebuilt images of the u-boot, Linux kernel and root file system. Necessary images can be downloaded from Embedded Artists support site or you can follow the instructions in chapter 3 to build the images yourself.

- u-boot.bin The Universal Bootloader, known as u-boot for short.
- uImage The Linux kernel image.
- rootfs.jffs2 A JFFS2 formatted root file system to be stored in NAND flash.

Besides the images you will also need a **USB memory stick** and an **MMC/SD card** (if you select to load the u-boot from a MMC/SD card) in order to follow the instructions below. A **terminal application** is also required as an interface towards the board. These instructions will be using the *Tera Term* terminal application.

2.2 Preparation and Setting up the Board

In this section you will setup the board and boot into the Stage 1 boot loader (S1L) where it will then be possible to load the u-boot.

- 1. Copy the u-boot.bin file to the root directory in a FAT formatted MMC/SD card.
- 2. Copy the uImage and rootfs.jffs files to the root directory of a USB memory stick.
- 3. Insert the MMC/SD card in the MMC/SD card slot on the QVGA Base board, see Figure 1.
- 4. Insert the USB memory stick in the USB A connector, see Figure 1.
- 5. Connect the USB cable that came with the board to the USB mini-B connector marked UART #0, see Figure 1. Also make sure that the cable is connected to your computer.
- The board will now power up. Follow the instructions in the User's Manual for the LPC3250
 OEM Board to install necessary FTDI USB drivers and identify which COM port that was
 assigned to the board.
- 7. Start your terminal application and connect to the COM port associated with the board.

Note: Make sure the automatic ISP jumpers (marked RST and P2.10 on the base board) are **open**. If not it's possible that a terminal application resets the board. In Figure 1 the jumpers are closed.

- Reset the board by pressing the Reset button. The S1L bootloader will boot, see Figure 2 to see what it looks like in Tera Term.
- You are now ready to continue to the next section and load the u-boot.

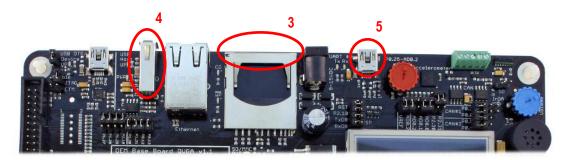


Figure 1 Top Part of the QVGA Base Board

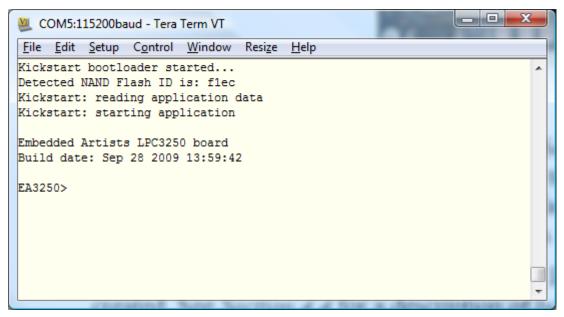


Figure 2 S1L Bootloader Console

2.3 Load the u-boot From MMC/SD Card

In this section you will load the u-boot from the memory card and store it in the NAND flash on the target board.

Make sure you have followed the instructions in section 2.2 and that you have output in your terminal application similar to the output shown in Figure 2.

If you don't have access to an MMC/SD card go to section 2.4 and load the u-boot from UART instead.

1. Load the u-boot.bin file from the MMC/SD card to SDRAM at address 0x83fa0000.

EA3250> load blk u-boot.bin raw 0x83fa0000

2. Save the image to the NAND flash.

EA3250> nsave

3. Setup the S1L bootloader to automatically load the u-boot.

EA3250> aboot flash raw 0x83fa0000

4. Set the boot delay to 2 seconds (the system prompt must be set at the same time).

EA3250> prompt EA3250> 2

2.4 Load the u-boot From UART

In this section you will load the u-boot from UART and store it in the NAND flash on the target board.

Make sure you have followed the instructions in section 2.2 and that you have output in your terminal application similar to the output shown in Figure 2.

1. Tell S1L to load from the UART to SDRAM at address 0x83fa0000.

EA3250> load term raw 0x83fa0000

- 2. In Tera Term Select the File → Send File menu alternative.
- Locate and select your u-boot.bin file. Make sure the "Binary" option is selected, see Figure 3.
 A dialog will appear showing the progress when you have clicked the "Open" button, see Figure 4.
- 4. When the file has been transferred send a Break sequence with ALT-b to get back to the EA3250> prompt.
- 5. Save the image to the NAND flash.

EA3250> nsave

Setup the S1L bootloader in order to automatically load the u-boot.

EA3250> aboot flash raw 0x83fa0000

7. Set the boot delay to 2 seconds (the system prompt must be set at the same time).

EA3250> prompt EA3250> 2

8. You are now ready to boot the u-boot.

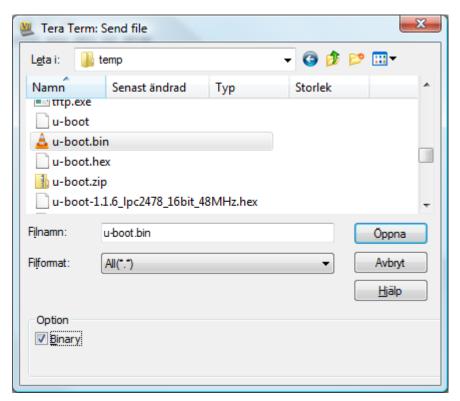


Figure 3 Send File via Tera Term

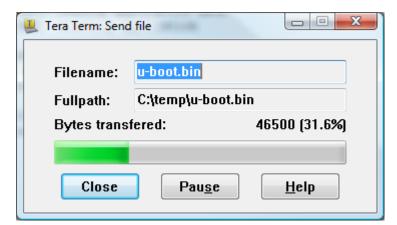


Figure 4 Transfer progress in Tera Term

2.5 Boot the u-boot

The u-boot has been loaded to the target and saved in the NAND flash. It is now time to boot and setup the u-boot.

1. Issue the boot command to start u-boot.

```
EA3250> boot
```

2. The u-boot will now start and you will see something similar to the output below. **Hit any key** to stop the u-boot from auto booting.

```
U-Boot 2009.03-rc1 (Sep 27 2009 - 14:27:25)

DRAM: 64 MB
NAND: 128 MiB
```

```
*** Warning - bad CRC or NAND, using default environment

In: serial
Out: serial
Err: serial
Hit any key to stop autoboot: 0
uboot>
```

- 3. There is no need to worry about the warning message. It just means that the u-boot environment hasn't been saved to persistent storage (NAND flash).
- 4. Enter print in the u-boot console to see the u-boot environment. Only a portion of the variables are displayed below.

```
uboot> print
bootargs=
bootcmd=run mtdboot
...
ethaddr=00:1a:f1:00:00:00
ipaddr=192.168.5.234
serverip=192.168.5.88
rootpath=/home/user/ltib/rootfs
...
```

5. In order to test the network functionality in Linux you need to change the ipaddr variable to an IP address that is valid on your network. In this example we assume that 192.168.0.100 is valid on your network (change it to an address that really is valid on your network).

```
uboot> setenv ipaddr 192.168.0.100
```

6. Now save your changes done to the environment. This will also remove the warning message from step 2.

```
uboot> saveenv
```

7. Continue to the next section where you will load the root file system and Linux kernel.

2.6 Load the Root File System and Linux Kernel

In this section you will load the root file system (rootfs.jffs2) from the USB memory stick and store it in NAND flash. You will then also load the Linux kernel (uImage) from the USB memory stick and boot the kernel.

Note: If you have problems loading the images from the USB memory stick go to section 4.5.1 for a possible solution.

1. The default u-boot environment has been prepared with a variable named update_fs which will load the root file system and store it in NAND flash. The content of the update fs variable is explained in section 4.3.5, for now just run the command.

```
uboot> run update_fs
...
```

```
NAND write: device 0 offset 0x500000, size 0x400000 4194304 bytes written: OK
```

2. When the root file system has been stored in NAND Flash it is time to load and boot the Linux kernel. A variable named mtdboot is available in the default environment. This variable will setup the boot arguments to use a root file system in NAND flash (in an MTD partition), load the kernel and then boot it. The content of the mtdboot variable is explained in section 4.3.5. Run the command:

```
uboot> run mtdboot
```

3. There will be a lot of output in the terminal application when the kernel boots. Only a portion has been included below.

```
## Booting kernel from Legacy Image at 80100000 \dots
   Image Name: Linux-2.6.27.8
   Image Type: ARM Linux Kernel Image (uncompressed)
Data Size: 1602272 Bytes = 1.5 MB
   Load Address: 80008000
   Entry Point: 80008000
   Verifying Checksum ... OK
   Loading Kernel Image ... OK
Starting kernel ...
Uncompressing
Linux.....
done, booting the kernel.
ÿLinux version 2.6.27.8 (user@bagvapp) (gcc version 3.4.5) #1 PREEMPT Mon Sep 28
09:51:45 CEST 2009
CPU: ARM926EJ-S [41069264] revision 4 (ARMv5TEJ), cr=00053177
Machine: Embedded Artists LPC3250 OEM board with the LPC3250 Microcontroller
Memory policy: ECC disabled, Data cache writeback
CPU0: D VIVT write-back cache
CPUO: I cache: 32768 bytes, associativity 4, 32 byte lines, 256 sets
CPUO: D cache: 32768 bytes, associativity 4, 32 byte lines, 256 sets
Built 1 zonelists in Zone order, mobility grouping on. Total pages: 16256 Kernel command line: root=/dev/mtdblock3 rw rootfstype=jffs2 ip=192.168.5.234
ea_ethaddr=00:1a:f1:00:00:00 console=ttyS0,115200n8
. . .
mmc0: host does not support reading read-only switch. assuming write-enable.
mmc0: new SD card at address e624
mmcblk0: mmc0:e624 SU256 247040KiB
mmcblk0: p1
IP-Config: Guessing netmask 255.255.255.0
IP-Config: Complete:
     device=eth0, addr=192.168.5.234, mask=255.255.255.0, gw=255.255.255.255,
     host=192.168.5.234, domain=, nis-domain=(none),
     bootserver=255.255.255.255, rootserver=255.255.255.255, rootpath=
VFS: Mounted root (jffs2 filesystem).
Freeing init memory: 100K
init started: BusyBox v1.11.2 ()
starting pid 296, tty '': '/etc/rc.d/rcS'
Mounting /proc and /sys
Setting the hostname to nxp
Mounting filesystems
scsi 0:0:0:0: Direct-Access
                                SanDisk Cruzer
                                                             8.02 PQ: 0 ANSI: 0 CCS
sd 0:0:0:0: [sda] 15704063 512-byte hardware sectors (8040 MB)
sd 0:0:0:0: [sda] Write Protect is off
sd 0:0:0:0: [sda] Assuming drive cache: write through
sd 0:0:0:0: [sda] 15704063 512-byte hardware sectors (8040 MB)
```

```
sd 0:0:0:0: [sda] Write Protect is off
sd 0:0:0:0: [sda] Assuming drive cache: write through
sda: sdal
sd 0:0:0:0: [sda] Attached SCSI removable disk
scsi 0:0:0:1: CD-ROM SanDisk Cruzer 8.02 PQ: 0 ANSI: 0
mount: mounting usbfs on /proc/bus/usb failed: No such file or directory
Starting syslogd and klogd
Running sysctl
Setting up networking on loopback device:
Setting up networking on eth0:
/etc/rc.d/init.d/network: line 149: udhcpc: not found
Starting inetd:
Starting the boa webserver:
starting pid 359, tty '': '-/bin/sh'
[root@nxp /]#
```

4. Linux is now up-and-running.

3 Using the Linux Target Image Builder

3.1 Introduction

The Linux Target Image Builder (LTIB) system will be used to build the u-boot, Linux kernel and root file system. LTIB ease the build and deployment process of several components needed in a Linux system. Besides the bootloader and kernel a lot of needed utilities, modules and libraries are included and will be configured and built automatically by LTIB. For more information about LTIB, go to http://ltib.org.

This chapter describes how you install LTIB and all necessary packages in a Linux distribution (setting up Ubuntu 9.04 is explained). It will be explained how you can download the Linux distributions as VMware virtual appliances and run it in a VMware Player.

Even though you are an experienced user and don't intend to run Ubuntu 9.04 you will find information about, for example, packages that are needed by LTIB.

3.2 Setup an Ubuntu 9.04 Distribution

If you are an experienced Linux user and already have your own Debian distribution (or another Linux distribution) you can skip this section and go to either section 3.2.3 to see which packages that needs to be installed or go directly to section 3.3 for instructions of how to install LTIB.

3.2.1 Download and Start the VMware Appliance

- 1. Download Ubuntu 9.04 as a VMware appliance from http://chrysaor.info/?page=ubuntu. When writing this document it was packed in a tar-gz compressed file named ubuntu904desktop.tgz.
- 2. You can use 7-Zip to unpack the file. This utility can be downloaded from http://www.7-zip.org.
- 3. In order to use the VMware appliance you need to install VMware Player. Download it from http://www.vmware.com/products/player/ and follow the instructions to install the player.
- 4. Unpack the ubuntu904desktop.tgz file in a location of your choice.
- 5. Now double-click the ubuntu904desktop.vmx file to start the VMware Player. If vmx files haven't been associated with VMware Player you can start VMware Player manually and then select the Open command and locate the vmx file.
- 6. When Ubuntu has started you will see a Login dialog where you can choose which user to login, see Figure 5. Enter "user" (without quotation marks) as the user and "chrysaor.info" as the password.

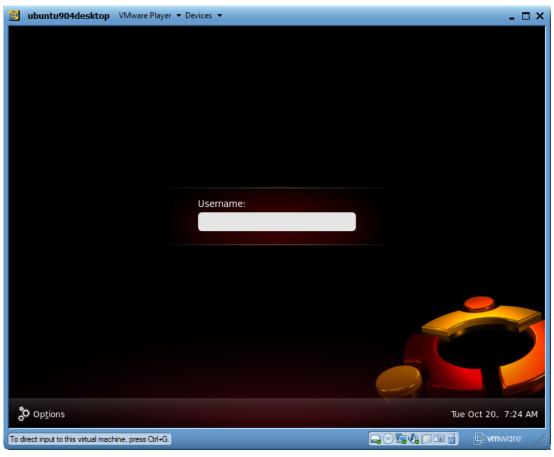


Figure 5 Ubuntu Login Screen

3.2.2 Customize Ubuntu

- 1. By default the keyboard layout is a US Layout. If you have a different keyboard layout change it by following these instructions.
 - a. Go to the System \rightarrow Preferences \rightarrow Keyboard menu.
 - b. Click on the Layouts tab.
 - c. Click the "Add" button.
 - d. Select your keyboard layout (country) and click the "Add" button.
 - e. Select which layout to be the default layout. You can also remove the layouts you don't intend to use.
 - f. Click the "Close" button.
- 2. If you would like to change the password for the user "user", use the passwd command.
 - Open a terminal application (note the same kind of application as Tera Term) from Applications → Accessories → Terminal.
 - b. Run the passwd command as illustrated below and enter the password of your choice when asked for it (note that when using sudo you might first be asked for the current password which is "chrysaor.info" without the quotation marks).

\$ sudo passwd user

3. Make sure you have network access by activating the network device in VMware Player. It should be connected and of type "Bridged" as can be seen in Figure 6.



Figure 6 Activate Network Device

- 4. The user "user" has been added to the admin group which by default has been given administrative rights in the sudoers file. LTIB requires additional rights to be added for this user; more specifically a password may not be requested when using the rpm command.
 - a. Start the visudo tool to edit the sudoers file.

\$ sudo visudo

b. At the end of the file add the following line.

user ALL=(ALL) NOPASSWD:/usr/bin/rpm, /opt/ltib/usr/bin/rpm

- c. Press CTRL+X to exit the file. Choose 'Y' to save the changes.
- 5. A terminal application is used often and it is therefore convenient to add shortcuts on the desktop and panel for the terminal application.
 - a. Go to Applications → Accessories.
 - b. Right-click on Terminal and select "Add this launcher to panel".
 - c. Right-click again on the Terminal and select "Add this launcher to desktop".
- 6. Change screen resolution. The default resolution is quite low. Change it like this:
 - a. Go to System → Preferences → Display.
 - b. Select the Resolution you want.
 - c. Click the Apply button.

3.2.3 Install Necessary Packages

LTIB will require a number of packages to be installed in your Linux distribution before you can actually use LTIB. If these packages haven't been installed LTIB will usually complain and list the packages that are missing. LTIB could also fail without listing any package. The instructions below install the packages that are missing in the Ubuntu distribution we are using.

Please note that we don't display the output and progress of an installation of a package in the instructions below. You will, for example, be asked if it is ok to download a package. Answer 'y' on these questions.

1. Install a CVS client in order to checkout LTIB files.

\$ sudo apt-get install cvs

A few other packages are also needed by LTIB

```
$ sudo apt-get install rpm
$ sudo apt-get install libncurses5-dev
$ sudo apt-get install m4
$ sudo apt-get install bison
$ sudo apt-get install tcl
```

3.2.4 Setup a TFTP Server

This section describes how you setup a TFTP server in Fedora and makes it accessible from other computers on your network. The TFTP server can be used to transfer files to the target board, for example, download the kernel image by the u-boot.

1. Install a TFTP server.

```
$ sudo apt-get install tftpd
```

2. Open the configuration file.

```
$ sudo gedit /etc/inetd.conf
```

3. Modify (or add if it is missing) the tftp line so that it looks like below. The last part of the line is where the TFTP server will have its root directory. We set this to /home/user (note that it is all in one row).

```
tftp dgram udp wait nobody /usr/sbin/tcpd /usr/sbin/in.tftpd /home/user
```

Restart inetd.

```
$ sudo /etc/init.d/openbsd-inetd restart
```

The TFTP server is now ready to be used.

3.2.5 Setup an NFS Server

An NFS (network file system) mounted root file system is quite convenient to use during development of a Linux system. The actual root file system will then be located on the development computer and not on the target board, but the target board gets access to the file system using the NFS protocol.

Install the NFS server.

```
$ sudo apt-get install portmap nfs-kernel-server
```

2. Add the following line to the /etc/exports file (note that it is only one line). Also note that if you are not using the 192.168.x.x network (IP addresses in this address range) you need to change this part of the line.

```
$ sudo gedit /etc/exports
```

```
/home/user/ltib/rootfs 192.168.0.0/255.255.0.0(rw,no_root_squash,no_subtree_check,sync)
```

After setting up the /etc/exports, export the shares.

\$ sudo exportfs -ra

3.3 Install LTIB and Build the Images

This section describes how you install LTIB, selects the configuration applicable for the Embedded Artists LPC3250 OEM Board and starts the build process where the u-boot, Linux kernel and root file system will be built.

- Open a web browser and go to http://ltib.org.
- 2. Click on the Download link in the left menu (below the Resources title).
- 3. In the "Quick install" section you will find a link to the netinstall.txt file. Right-click on this file and save it in your home directory (/home/user).
- 4. Open up a terminal application and run the netinstall script.

```
$ cd /home/user
$ perl netinstall.txt
```

- Select 'Y' to continue the installation.
- 6. Click Enter to use the default installation directory.
- 7. When LTIB files have been downloaded change directory.

```
$ cd ltib
```

Now start the LTIB configuration. The first time you run the configuration it will take quite a long time since a lot of packages must be downloaded.

```
$ ./ltib
```

9. After a while a configuration menu will appear, see Figure 7. Hit Enter to select Platform.

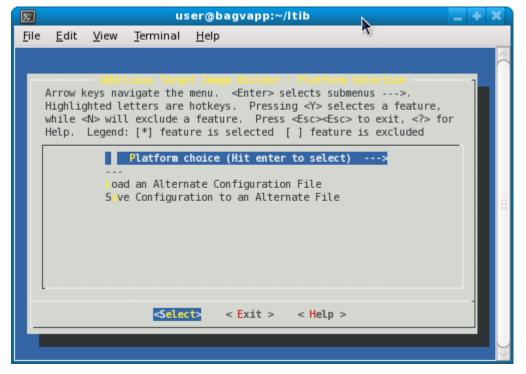


Figure 7 LTIB Platform Selections Menu

10. In the "platform choice" menu select "Embedded Artists LPC3250 OEM Board with the NXP LPC32XX SoC".

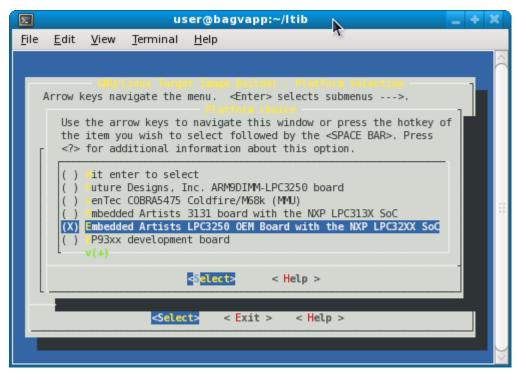


Figure 8 LTIB Platform Choice Menu

- 11. Click the "Exit" button.
- 12. Select "Yes" when asked to save the configuration.
- 13. A new configuration menu will appear, see Figure 9. For now just click the Exit button and go with the default configuration.

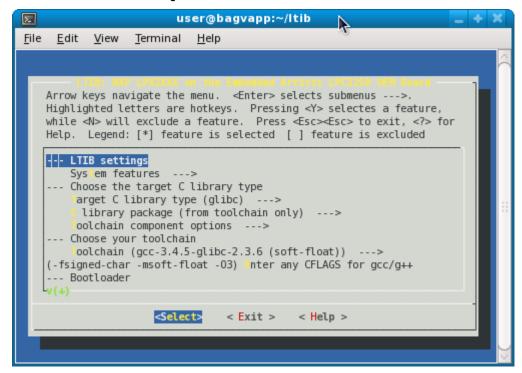


Figure 9 LTIB Platform Configuration Menu

- 14. Select "Yes" when asked to save the configuration. LTIB will now download necessary packages, build u-boot, build the Linux kernel and create a root file system.
- 15. If everything builds successfully you will have something similar to the example below in your terminal.

```
...
Filesystem stats, including padding:

Total size = 9160k
Total number of files = 455

Started: Wed Sep 30 15:39:38 2009
Ended: Wed Sep 30 15:46:01 2009
Elapsed: 383 seconds

Build Succeeded
```

16. You will find the Linux kernel and u-boot images in the boot directory.

```
/home/user/ltib/rootfs/boot/uImage
/home/user/ltib/rootfs/boot/u-boot.bin
```

17. The JFFS2 formatted root file system image will be located in the ltib directory.

```
/home/user/ltib/rootfs.jffs2
```

18. The complete root file system is located in the following directory.

```
/home/user/ltib/rootfs/
```

19. Copy the images to the /home/user directory ensuring that they are accessible by the TFTP server.

```
$ cp /home/user/ltib/rootfs/boot/uImage /home/user
$ cp /home/user/ltib/rootfs/boot/u-boot.bin /home/user
$ cp /home/user/ltib/rootfs.jffs2 /home/user
```

20. To be able to use the touch screen the device table file must be altered. By default this file does not enable the input/eventX device files. You can skip this step and instead create the device files in runtime. Go to section 5.3 if you would like to do it in runtime. Open the device_table.txt file (it is assumed that your current directory is /home/user/ltib).

```
$ gedit bin/device_table.txt
```

21. Locate the line starting with "#/dev/input/event" and uncomment that line

```
# Input
#/dev/input/mice
/dev/input/event
```

22. Save the file and then force a recompile of the root file system.

```
$ ./ltib -p dev -f
```

23. You are now ready to deploy your Linux system to the target board. Chapter 2 describes a way of deploying the system using a USB memory stick. Chapter 4 describes the u-boot in more detail and also presents more booting options.

3.4 Add Additional Packages

A small subset of the packages that are available in LTIB has been selected in the default configuration. If you would like to add more packages follow these instructions.

1. Run the Itib script with the configure option.

```
$ cd /home/user/ltib
$ ./ltib --configure
```

- 2. The LTIB configuration menu will appear, see Figure 9. Go to the "Package List" option and hit the Enter key (or click Select button).
- 3. You will now see a long list of packages. Scroll down to the packages you would like to include and select those packages.
- 4. Click the Exit button.
- 5. Click the Exit button.
- 6. Select "Yes" when asked to save the configuration.
- LTIB will now compile the selected package and copy it (application or library) to the root file system.

Please note that all the available packages have not been tested with the Linux port for the LPC3250 OEM Board. The build might even fail if components are missing.

3.5 Useful Linux Commands

3.5.1 Obtain IP Address

The IP address of your Linux host can be obtained by using the ifconfig command.

```
$ sudo ifconfig
         Link encap: Ethernet HWaddr 00:0c:29:40:d2:db
eth1
         inet addr:192.168.5.58 Bcast:192.168.5.255 Mask:255.255.255.0
         inet6 addr: fe80::20c:29ff:fe40:d2db/64 Scope:Link
         UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
         RX packets:732443 errors:0 dropped:0 overruns:0 frame:0
         TX packets:202445 errors:0 dropped:0 overruns:0 carrier:0
         collisions:0 txqueuelen:1000
         RX bytes:418384275 (418.3 MB)
                                       TX bytes:57386301 (57.3 MB)
         Interrupt:19 Base address:0x2024
10
         Link encap:Local Loopback
         inet addr:127.0.0.1 Mask:255.0.0.0
         inet6 addr: ::1/128 Scope:Host
         UP LOOPBACK RUNNING MTU:16436 Metric:1
         RX packets:78 errors:0 dropped:0 overruns:0 frame:0
         TX packets:78 errors:0 dropped:0 overruns:0 carrier:0
         collisions:0 txqueuelen:0
         RX bytes:6040 (6.0 KB) TX bytes:6040 (6.0 KB)
```

3.6 Hello World Application

As a first step to application development in Linux you can try to use and modify the existing Hello World application. Follow the steps below to access, modify and build the Hello World application.

1. Unpack and prepare the Hello World package

```
$ cd /home/user/ltib
$ ./ltib - p helloworld -m prep
```

2. Go to the directory where the Hello World application is available and open the source code.

```
$ cd rpm/BUILD/helloworld-1.1
$ gedit hello.c
```

3. Change the printf statement.

```
printf("hello world from EA\n")
```

- 4. Add the Hello World application to the list of packages that will be included in your Linux system. Follow the instructions in section 3.4 and choose the package named "hello world".
- When the build has finished successfully transfer the root file system to the target board (with an NFS mounted file system the application will be available directly after the build has finished).

```
# hello
hello world from EA
```

4 Universal Boot Loader - u-boot

4.1 Introduction

The Universal Boot Loader also known as Das U-boot or u-boot for short is an open-source boot loader that supports a wide range of different architectures such as ARM, PowerPC, XScale, x86, MIPS, Coldfire, 68k, and MicroBlaze. Many board configurations have been made available, for each architecture, by an active community. The u-boot boot loader has actually become the most widely used boot loader on ARM based systems.

Besides supporting a wide range of architectures the u-boot also supports a wide range of booting options. Below is a list of some of these booting options:

- From Flash memory (for example NOR or NAND)
- From a USB mass storage device
- From an MMC/SD memory card
- From a harddisk or CDROM
- Using Ethernet: TFTP, BOOTP, DHCP or NFS
- Using a serial connection

A booting option means a location from where the u-boot searches for the kernel image to load. If a MMC/SD card has been selected the u-boot will initialize the memory card controller and try to read the image(s) from that device.

4.2 Console / Environment

The u-boot supports a command line interface usually accessed via a terminal application, such as Tera Term. The terminal application is connected to the serial port associated with the development board. The command line interface allow you to manually type in boot commands or update the environment variables that can later be used as boot options.

4.2.1 Commands

It is possible to discover which commands are available by using the help command.

```
uboot> help
```

When issuing the help command a list of all the available commands will be presented. These commands are the ones that have been selected to be supported when configuring the u-boot. If more information is needed about a specific command type help followed by the name of the command. The example below gives you more information about the setenv command.

```
uboot> help setenv
```

Below is a list of some of the commands used to modify, list and execute variables in the u-boot environment.

- printenv This command will print the u-boot environment.
- seteny This command is used to set the value of a variable. If the variable doesn't exist when calling seteny it will be created. If calling seteny on a variable, but not specifying a value the variable will be deleted.
- saveenv This command will save any changes done to the environment and must be called after setenv has been used in order for the changes to be saved persistently.

run – execute the commands found in an environment variable.

Below are examples of the commands described above.

```
uboot> setenv serverip 192.168.0.110
uboot> saveenv
uboot> run mtdboot
```

4.2.2 Network Related Variables

The u-boot environment contains a number of variables that are network related, i.e., related to communication over a network. Make sure these variables are correctly setup for your network.

- ethaddr Specifies the Ethernet/MAC address that will be assigned to the development board. The address will also be forwarded to the Linux kernel via the ea_ethaddr argument in the boot argument list, sections 4.3.4, 4.3.5 and 4.3.6 contain example of its usage. Make sure your board gets a unique address.
- ipaddr Specifies the IP address that will be assigned to the development board. The
 address will be forwarded to the Linux kernel via the ip argument in the boot argument list,
 sections 4.3.4, 4.3.5 and 4.3.6 contain example of its usage. Make sure this address is a valid
 and unique address on your network. If you would like to use dynamically assigned IP
 addresses see section 4.4.
- serverip This variable specifies the IP address of the TFTP server used when
 downloading images using TFTP. Set it to the IP address of the computer running your TFTP
 server. See section 3.5.1 for how to obtain the IP address in a Linux distribution.
- netmask Defines a mask used to divide your network into subnets. On most office and home networks the netmask is set to 255.255.255.0 which means that the 3 first octets of the IP address is fixed while the last can vary.

4.2.3 Boot Related Variables

The variables listed below are all related to the boot process.

- bootargs This variable contains the boot arguments sent to the Linux kernel. It usually contains settings for the console and where to find the root file system.
- bootemd This variable contains the boot command(s) that will be run during auto booting.
- bootdelay This variable defines the delay in seconds until an autoboot will take place.
 Autoboot can be cancelled by hitting any key during boot.

4.3 Booting Options

Setting up a booting option means specifying from which source the Linux kernel should be loaded as well as specifing where to find the root file system.

4.3.1 Kernel from USB Memory Stick

Most computers today have a USB connection and most operating systems support USB and have device drivers for USB mass storage devices. This makes it simple to use a USB memory stick to transfer boot images from the development computer to the development board.

For this purpose the usb and fatload commands are used to access the memory stick and transfer the images to the development board. In the default environment there is a variable named loadkernel usb which illustrates how to load the kernel from a USB memory stick.

Note: If you have problems loading the images from the USB memory stick, please go to section 4.5.1 and see if that solution solves your problem.

```
loadkernel usb=usb start; fatload usb 0 $(loadaddr) uImage; usb stop
```

- 1. First the USB interface must be initialized with the usb start command.
- 2. Using the fatload command the kernel image (uImage) is then loaded via the USB interface, device 0 and to the load address specified by the loadaddr variable.
- 3. The final step is to stop the USB interface.

If you would like to load the kernel from a USB memory stick make sure that the <code>loadkernel</code> variable contains the content of the <code>loadkernel</code> usb variable.

```
uboot> setenv loadkernel $(loadkernel_usb)
uboot> saveenv
```

4 3 2 Kernel from TFTP Server

During development of the Linux kernel it is convenient to use the Trivial File Transfer Protocol (TFTP) to download a newly created kernel. The development cycle will be much shorter compared to when you would need to copy the kernel image to, for example, a USB memory stick.

The tftpboot command is used when downloading images from a TFTP server. Before using this command you have to make sure the network related variables described in section 4.2.2 are correctly setup for your network. In the default environment there is a variable named loadkernel_tftp which illustrates how to load the kernel from a TFTP server.

```
loadkernel_tftp=tftpboot $(loadaddr) uImage
```

If you would like to load the kernel from a TFTP server make sure that the <code>loadkernel</code> variable contains the content of the <code>loadkernel</code> <code>tftp</code> variable.

```
uboot> setenv loadkernel $(loadkernel_tftp)
uboot> saveenv
```

4.3.3 Kernel Stored in NAND Flash

The LPC3250 OEM Board comes with a large NAND flash that can host the Linux kernel for fast access without the need for a USB memory stick or network access.

Before the kernel can be loaded from NAND flash the NAND flash must be updated with the kernel. For this purpose the default environment has been setup with a variable named update kernel.

```
update_kernel=run loadkernel; nand erase $(nand_kernel_off)
$(nand_kernel_sz); nand write.jffs2 $(loadaddr) $(nand_kernel_off)
$(nand_kernel_sz)
```

- The loadkernel variable is used by the update_kernel variable to load the kernel to SDRAM (address given by loadaddr). Section 4.3.1 and section 4.3.2 describe how the loadkernel variable can be setup to load the kernel from either a USB memory stick or a TFTP server.
- The second step is to erase the part of the NAND flash that will be used to store the kernel.
 The offset into the NAND flash as well as the maximum size of the kernel is given by the variables nand_kernel_off and nand_kernel_sz.
- The last step is to write the kernel image to NAND flash.

In the default environment there is a variable named <code>loadkernel_nand</code> which illustrates how to load the kernel from NAND flash.

```
loadkernel nand=nboot.jffs2 $(loadaddr) 0x0 $(nand kernel off)
```

1. The nboot command is used to load the kernel from NAND device 0x0 and offset nand kernel off to SDRAM at address loadaddr.

If you would like to load the kernel from NAND flash make sure that the loadkernel variable contains the content of the loadkernel nand variable.

```
uboot> setenv loadkernel $(loadkernel_nand) uboot> saveenv
```

4.3.4 Root File System NFS Mounted

During the development phase of your Linux system it is convenient to be able to easily update the root file system without having to transfer the file system to the development board. Using NFS (Network File System) will allow you to do this.

- 1. Make sure you have NFS setup on your development computer as described in section 3.2.5.
- 2. Set the rootpath variable in the u-boot environment to point to the location of your exported root file system directory.

```
rootpath=/home/user/ltib/rootfs
```

3. Use the nfsboot variable to boot Linux. This variable will setup the bootargs variable in a way where Linux use an NFS mounted root file system.

```
nfsboot=setenv bootargs root=/dev/nfs rw nfsroot=$(serverip):$(rootpath)
ip=$(ipaddr) ea_ethaddr=$(ethaddr) console=ttyS0,115200n8;run
loadkernel;bootm $(loadaddr)
```

4.3.5 Root File System in NAND Flash

The root file system can be stored in the large NAND flash available on the LPC3250 OEM Board. This is typically the place where the root file system will be placed after the development phase, allowing the Linux system to be more stand-alone.

 The first step is to update the NAND flash with the root file system. Two variables have been setup to load the root file system from either a TFTP server or from a USB memory stick. If you have problems loading the file system image from a USB memory stick, please read section 4.5.1 to see if this solves your problem.

```
loadrootfs_tftp=tftpboot $(loadaddr) rootfs.jffs2
loadrootfs_usb=usb start;fatload usb 0 $(loadaddr) rootfs.jffs2;usb stop
```

2. Set the loadrootfs variable to the content of either the loadrootfs_tftp or loadrootfs usb variable as in the example below.

```
uboot> setenv loadrootfs $(loadrootfs_usb)
uboot> saveenv
```

3. The update_fs variable has been setup to update the NAND flash with the root file system. First the loadrootfs variable will be used to load the root file system to SDRAM. Then

the NAND flash will be erased at the offset specified by nand_rootfs_off and size specified by nand_rootfs_sz. The last step is to write the file system to the NAND flash.

```
update_fs=run loadrootfs; nand erase $(nand_rootfs_off)
$(nand_rootfs_sz); nand write.jffs2 $(loadaddr) $(nand_rootfs_off)
$(nand_rootfs_sz)
```

4. To actually update the NAND flash run the update fs variable.

```
uboot> run update_fs
```

5. Use the mtdboot variable to boot Linux. This variable will setup the bootargs variable in a way where Linux looks for the root file system in NAND flash. See section 5.8.2 for an explanation of how the NAND flash is partitioned.

```
mtdboot=setenv bootargs root=/dev/mtdblock3 rw rootfstype=jffs2
ip=$(ipaddr) ea_ethaddr=$(ethaddr) console=ttyS0,115200n8; run
loadkernel;bootm $(loadaddr)
```

4.3.6 Root File System on MMC/SD Card

This section describes how you can put the root file system on an MMC/SD card.

1. Insert an MMC/SD card on your development computer. It will most likely be auto mounted and you now need to discover which device file it has been associated with. First try using the mount command. In the example below we see a file system mounted on /media/disk using device file /dev/sde1 (this might be different for you). You can try to remove the card and see if this mount point is removed to be sure this is your memory card.

```
$ sudo mount
...
/dev/sdel on /media/disk type vfat
```

2. You can also use <code>dmesg</code> to locate the device file being used. In the log below we see that <code>sde1</code> (this might be different for you) is used. We also see that the size of the memory card is about 500 MB which is correct for our card.

```
$ sudo dmesg
...
[171217.515649] sd 3:0:0:3: [sde] Write Protect is off
[171217.515654] sd 3:0:0:3: [sde] Mode Sense: 23 00 00 00
[171217.515657] sd 3:0:0:3: [sde] Assuming drive cache: write through
[171217.521167] sd 3:0:0:3: [sde] 990976 512-byte hardware sectors: (507 MB/483 MiB)
[171217.528650] sd 3:0:0:3: [sde] Write Protect is off
[171217.528653] sd 3:0:0:3: [sde] Mode Sense: 23 00 00 00
[171217.528655] sd 3:0:0:3: [sde] Assuming drive cache: write through
[171217.528713] sde: sde1
```

3. Un-mount the memory card.

```
$ sudo umount /dev/sde1
```

Run fdisk to edit the partition table on the memory card.

```
$ sudo fdisk /dev/sde1
```

5. List the existing partition table using the p option.

```
Command (m for help): p
```

- 6. Use the d option to delete all partitions on the memory card.
- 7. Create a new partition using the n option.
- 8. Select p to create a primary partition.
- 9. Select 1 for partition number.
- 10. Use default value for the first cylinder by hitting the Enter key.
- 11. Use default value for last cylinder by hitting the Enter key.
- 12. Select w to write the new partition table to the memory card.
- 13. Format the memory card to an ext2 file system.

```
$ sudo mkfs.ext2 /dev/sde1
```

14. Mount the memory card when it has been formatted.

```
$ sudo mkdir /mnt/mmc
$ sudo mount -t auto /dev/sde1 /mnt/mmc
```

15. Copy the root file system to the memory card.

```
$ sudo cp R /home/user/ltib/rootfs/* /mnt/mmc
```

16. Un-mount the memory card, remove it from the development computer and insert it in the development board.

```
$ sudo umount /dev/sde1
```

17. Boot into the u-boot console and add an mmcboot variable.

```
uboot> uboot> setenv mmcboot setenv bootargs root=/dev/mmcblk0p1
ip=\$(ipaddr) ea_ethaddr=\$(ethaddr) console=ttyS0,115200n8\;run
loadkernel\;bootm \$(loadaddr)
```

18. Run the mmcboot variable

```
uboot> run mmcboot
```

4.4 Use DHCP

If you don't want to or are able to assign a static IP address to the target board you can instead use dynamically assigned IP addresses by using the DHCP protocol. Please note that a DHCP server must be available on your network.

In the u-boot you need to exchange the tftpboot command for the dhcp command to load the images using DHCP. For the Linux kernel you need to set the ip argument to dhcp instead of using a static IP address.

1. Boot into the u-boot console and change the ipaddr variable to dhcp.

```
uboot> setenv ipaddr dhcp
```

2. Change the loadkernel tftp and loadrootfs tftp variables.

```
uboot> setenv loadkernel_tftp dhcp $(loadaddr) uImage
uboot> setenv loadrootfs_tftp dhcp $(loadaddr) rootfs.jffs2
```

3. Update the loadkernel and loadrootfs variables.

```
uboot> setenv loadkernel $(loadkernel_tftp)
uboot> setenv loadrootfs $(loadrootfs_tftp)
uboot> saveenv
```

Boot Linux.

```
uboot> run bootcmd
```

4.5 Known Problems

4.5.1 Unable to Access USB Memory Stick

For some USB memory sticks you might need to specify which partition to use, not only which device to use when invoking the fatload command. If this is the case for your memory stick and you are using the default variables in the u-boot environment you need to update two variables; loadkernel usb and loadrootfs usb.

In the example below the <code>loadkernel_usb</code> and the <code>loadrootfs_usb</code> variables are updated to specify partition 0 on device 0. Please note how the backslash character needs to be used before the semicolon when updating a variable.

```
uboot> setenv loadkernel_usb usb start\;fatload usb 0:0 $(loadaddr)
uImage\; usb stop
uboot> setenv loadrootfs_usb usb start\;fatload usb 0:0 $(loadaddr)
rootfs.jffs2\; usb stop
uboot> saveenv
```

You also need to make sure to update the loadkernel and loadrootfs variables.

```
uboot> setenv loadkernel $(loadkernel_usb)
uboot> setenv loadrootfs $(loadrootfs_usb)
uboot> saveenv
```

4.5.2 Unable to Boot Because of Bad Blocks

A NAND flash is organized into several blocks where each block is divided into several pages. Already when a NAND flash is delivered from the manufacturer it can contain blocks with one or more invalid bits. These blocks are considered to be unusable and therefore marked as bad. As an example the NAND flash used on the LPC3250 OEM Board is manufactured by Samsung and the only guarantee they give is that block 0 is always okay and that the number of bad blocks is at most 20.

Bad blocks can also occur over time as worn-out blocks.

In the default u-boot environment there is a variable called <code>loadkernel_nand</code> which is using the <code>nboot</code> command when loading the Linux kernel. This command doesn't handle bad blocks and will fail with a read and CRC error when trying to load the kernel if there is a bad block in the kernel partition.

Instead of using the nboot command the nand read command can be used which will skip a bad block and continue to read on the next valid block.

Update the loadkernel nand variable to use nand read command.

```
uboot> setenv loadkernel_nand nand read.jffs2 $(loadaddr)
$(nand_kernel_off) $(nand_kernel_sz)\;bootm $(loadaddr)
uboot> saveenv
```

5 Peripherals and Drivers

5.1 Introduction

This chapter describes some of the peripherals on the LPC3250 OEM Board, their drivers and how to use the peripherals from within Linux.

5.2 Display

5.2.1 Hardware

A 3.2 inch QVGA color TFT LCD display is mounted on the QVGA Base Board together with a Solomon Systech SSD1289 LCD controller. The SSD1289 is attached to the SPI bus. The LPC3250 also has an embedded LCD controller which is compatible with the ARM PrimeCell PL110.

Both the SSD1289 and LPC3250 LCD controllers will be used. The SSD1289 will be used for initial initialization of the display after a power-cycle of the display.

5.2.2 Device Driver and Configuration

The ARM PrimeCell PL110 device driver contains the majority of the code for the display and is located here in the source tree: /drivers/video/amba-clcd.c.

The usage of the SSD1289 controller is located in the board specific file: /arch/mach-lpc32xx/board-ea3250.c. More specifically the clcd_enable callback will initialize the display using the SSD1289 controller.

The configuration options below are related to the display functionality.

Configuration	Description
CONFIG_FB	Enable frame buffer support
CONFIG_FB_ARMCLCD	Enable the PL110 driver

5.2.3 Usage

The frame buffer is exposed to user space as a device file called /dev/fb0. It can be used directly by an application to output graphics onto the display, for example, by memory mapping the file. A more common way is to use a graphical API such as Microwindows, DirectFB or SDL instead.

By default, functionality called "console on framebuffer" and "Bootup Logo" has been enabled. This means that you should see the Linux penguin in the top left corner of the display when you boot the board.

You can also use the applications described in the touch screen section, see 5.3.3 to see usage of the display.

5.2.4 Add and Use the fby Application

The fbv application allows displaying images on a frame buffer. Supported image formats include png, jpeg and bmp.

1. In your Linux distribution (for example Fedora 11 or Ubuntu 9.04) go to the Itib directory.

\$ cd /home/user/ltib

2. Run the Itib script with the configure option.

\$./ltib --configure

- 3. The LTIB configuration menu will appear, see Figure 9. Go to the "Package List" option and hit the Enter key (or click Select button).
- 4. You will now see a long list of packages. Scroll down to the option called fbv and press Spacebar on your keyboard to select the package.
- 5. Click the Exit button.
- Click the Exit button.
- 7. Select "Yes" when asked to save the configuration.
- LTIB will now compile the selected package and copy it (the application) to the root file system.
- 9. Copy a picture to the root file system. Here we assume that you have an image named pic.png in your home folder (/home/user/pic.png).

\$ sudo cp /home/user/pic.png /home/user/ltib/rootfs/home/user

- 10. If you have an NFS mounted root file system the fbv application and picture will be accessible from your Linux system.
- 11. Before displaying the image on the screen, make sure the display is enabled. It might have been disabled for power save reasons.
- # echo 0 > /sys/class/graphics/fb0/blank
- 12. Display the image on the LCD screen.
- # fbv /home/user/pic.png

5.3 Touch Screen

5.3.1 Hardware

The touch screen controller mounted on the QVGA Base Board is a Texas Instruments TSC2046 which is a next-generation version to the ADS7846 controller. The TSC2046 is compatible with the ADS7846.

The TSC2046 controller is a low-voltage controller connected to the **SPI bus** with low power consumption and high speed (up to 125 kHz).

There is an embedded touch screen controller on the LPC3250 microcontroller, but that isn't used with the Embedded Artists LPC3250 OEM Board.

5.3.2 Device Driver and Configuration

A driver for the ADS7846 is integrated in the kernel and located here in the source tree:

/drivers/input/touchscreen/ads7846.c.

The following configuration options are related to the touch screen functionality.

Configuration	Description
CONFIG_INPUT_TOUCHSCREEN	Enable touch screen support
CONFIG_TOUCHSCREEN_ADS7846	Enable the ADS7846/TSC2046 driver

5.3.3 Usage

These instructions show how to use the touch screen through the tslib library. Tslib is an abstraction layer for touch screen panel events, as well as a filter stack for the manipulation of those events, for more information visit the tslib website: http://tslib.berlios.de/.

1. The /dev/input/event0 device node must be available. If it isn't it can be created by using the mknod utility.

```
# mknod /dev/input/event0 c 13 64
```

2. In the default configuration of the root file system tslib is included as well as calibration and test applications. Run the calibration application.

```
# ts_calibrate
```

3. When you have calibrated the screen you can test the touch screen with the ts_test application.

```
# ts_test
```

5.4 Network

5.4.1 Hardware

The LPC3250 has an Ethernet interface with a full featured 10 Mbps or 100 Mbps Ethernet MAC (Media Access Controller). On the Embedded Artists LPC3250 OEM Board the Ethernet block in the LPC3250 is connected to the off-chip National Semiconductor DP83848 Ethernet PHY via the RMII interface.

5.4.2 Device Driver and Configuration

The driver for the LPC3250 MII/RMII Ethernet interface is located here in the source tree: /drivers/net/lpc32xx mii.c.

The following configuration options are related to the network functionality.

Configuration	Description
CONFIG_NET	Enable networking support in the kernel
CONFIG_LPC32XX_MII	Enable support for the LPC3250 MII/RMII interface

5.4.3 Usage

The Ethernet driver isn't used directly from user space applications. Instead the driver is used by the networking subsystem in the kernel and applications use a high-level interface such as a socket API.

In the Embedded Artists configuration the networking interface is initialized at start-up and given its IP address from the u-boot bootloader as a boot argument (the ip argument). You can check the IP address by using the ifconfig command. In the example you can see that the IP address assigned to the board is 192.168.5.234.

```
# ifconfig
eth0    Link encap:Ethernet HWaddr 00:1A:F1:00:00:00
    inet addr:192.168.5.234 Bcast:192.168.5.255

Mask:255.255.255.0
    UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
    RX packets:2405 errors:0 dropped:0 overruns:0 frame:0
```

```
TX packets:1131 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:1000
RX bytes:2829202 (2.6 MiB) TX bytes:190332 (185.8 KiB)
Interrupt:29

lo Link encap:Local Loopback inet addr:127.0.0.1 Mask:255.0.0.0
UP LOOPBACK RUNNING MTU:16436 Metric:1
RX packets:0 errors:0 dropped:0 overruns:0 frame:0
TX packets:0 errors:0 dropped:0 overruns:0 carrier:0 collisions:0 txqueuelen:0
RX bytes:0 (0.0 B) TX bytes:0 (0.0 B)
```

The Boa web server has been enabled in the default configuration and will be started when the kernel boots. Use a web browser and enter the boards IP address in the address field of the browser to access the web server, see Figure 10.



Figure 10 Example webpage loaded from the LPC3250 OEM Board

Boa's document directory is located in /var/www/html in the root file system.

5.5 Memory Card

5.5.1 Hardware

The LPC3250 has a Secure Digital (SD) interface that conforms to the SD Memory Card Specification Version 1.01. The MMC/SD card interface on the LCP3250 is compatible with the ARM PrimeCell MMCI PL180/1.

5.5.2 Device Driver and Configuration

The driver for the LPC3250 MMC/SD card interface is located here in the source tree:

/drivers/mmc/host/mmci.c.

The following configuration options are related to the MMC/SD card functionality.

Configuration	Description
CONFIG_MMC	Enable MMC/SD card support
CONFIG_MMC_ARMMMCI	Enable support for the ARM AMBA PrimeCell PL180/1 driver.

5.5.3 Usage

Insert an MMC/SD card in the MMC/SD card connector on the QVGA Base Board and then mount the card. In the instructions below it is assumed that the memory card is FAT formatted.

```
# mount -t vfat /dev/mmcblk0p1 /mnt/rwfs
```

You can now access the file system on the memory card by visiting the /mnt/rwfs directory.

```
# cd /mnt/rwfs
# ls
```

5.6 USB Host

5.6.1 Hardware

The LPC3250 has an Open Host Controller Interface (OHCI) compliant USB host controller.

5.6.2 Device Driver and Configuration

The driver for the LPC3250 OHCI controller is located here in the source tree:

/drivers/usb/host/ohci-pnx4008.c.

The following configuration options are related to the USB OCHI functionality.

Configuration	Description
CONFIG_USB_SUPPORT	Enable core support for USB
CONFIG_USB_OHCI_HCD	Enable OHCI HCD support
CONFIG_ARCH_LPC32XX	If this configuration flag is set the pnx4008 OHCI driver will be enabled.

5.6.3 Usage

One use-case of using USB host on an embedded system is to attach a USB memory stick to the system and thereby adding a read-writable file system.

1. Attach a USB memory stick to the USB A connector on the base board. You will see output in the console similar to the example below.

```
usb 1-1: new full speed USB device using usb-ohci and address 2
usb 1-1: configuration #1 chosen from 1 choice
scsi0 : SCSI emulation for USB Mass Storage devices
scsi 0:0:0:0: Direct-Access SanDisk Cruzer
                                                        8.02 PQ:
0 ANSI: 0 CCS
sd 0:0:0:0: [sda] 15704063 512-byte hardware sectors (8040 MB)
sd 0:0:0:0: [sda] Write Protect is off
sd 0:0:0:0: [sda] Assuming drive cache: write through
sd 0:0:0:0: [sda] 15704063 512-byte hardware sectors (8040 MB)
sd 0:0:0:0: [sda] Write Protect is off
sd 0:0:0:0: [sda] Assuming drive cache: write through
sda: sda1
sd 0:0:0:0: [sda] Attached SCSI removable disk
scsi 0:0:0:1: CD-ROM
                               SanDisk Cruzer
                                                         8.02 PO:
0 ANSI: 0
```

- 2. As can be seen in the log the USB memory stick is available on sda1, more specifically /dev/sda1.
- 3. Mount the memory stick.

```
# mount -t vfat /dev/sda1 /mnt/rwfs
```

4. You can now access the file system.

```
# cd /mnt/rwfs
# ls
```

5.7 LEDs and Buttons

5.7.1 Hardware

Most of the LEDs and buttons on the base board are connected to the PCA9532 device. The NXP Semiconductor PCA9532 device is a 16-bit I²C I/O Expander.

5.7.2 Device Driver and Configuration

The driver for the PCA9532 is located here in the source tree:

/drivers/i2c/chips/pca9532.c.

The following configuration options are related to the I2C and PCA9532 functionality.

Configuration	Description
CONFIG_I2C	Enable I2C support in the kernel
CONFIG_I2C_PNX	Enable the LPC3250 I2C interface
CONFIG_MACH_LPC32XX_I2C0_ENABLE	Enable I2C0
CONFIG_SENSORS_PCA9532	Enable support for the PCA9532 I2C device

5.7.3 Usage

The PCA9532 has a number of files exposed at the following location in the file system: /sys/bus/i2c/devices/0-0060/. The files in the list below are accessible and each file represent a register in the PCA9532.

File	Description

input0	This file reflects the state of the device pins (inputs 0 to 7). Writing to this file will have no effect.
input1	This file reflects the state of the device pins (inputs 8 to 15). Writing to this file will have no effect.
ls0	LED select 0 controls LED (output pin) 0 – 3.
ls1	LED select 1 controls LED (output pin) 4 – 7.
ls2	LED select 2 controls LED (output pin) 8 – 11.
ls3	LED select 3 controls LED (output pin) 12 – 15.
psc0	The PSC0 register is used to program the period of the PWM0 output.
psc1	The PSC1 register is used to program the period of the PWM1 output.
pwm0	The PWM0 register determines the duty cycle of BLINK0. The outputs are LOW (LED on) when the count is less than the value in PWM0 and HIGH (LED off) when it is greater. If the value is set to 0 the output is always HIGH.
pwm1	The PWM1 register determines the duty cycle of BLINK1. The outputs are LOW (LED on) when the count is less than the value in PWM1 and HIGH (LED off) when it is greater. If the value is set to 0 the output is always HIGH.

For more details about the PCA9532 registers look at the data sheet. Below are some examples of how to access the files (it is assumed that the current working directory is the /sys/bus/i2c/devices/0-0060/ directory).

Turn on LED1 on the QVGA Base board:

```
# echo 1 > 1s2
```

Turn off LED1 and turn on LED2 on the QVGA Base board:

```
# echo 4 > 1s2
```

Check the state of the device pins (connected to the LEDs):

```
# cat input1
253
```

Please note the value 253 which is the same as the binary value 11111101, i.e., bit 1 has the value 0 all others have the value 1. A LED is turned on when an output is LOW so the value 253 means that device pin 9 (note that input1 is used) is low and since this pin is connected to LED2 this LED is lit. The schematics for the QVGA Base board illustrate how the PCA9532 is connected.

5.8 NAND Flash

5.8.1 Hardware

The LPC3250 OEM Board is equipped with a 1 Gbit NAND Flash memory from Samsung. The part number for the memory is K9F1G08U0A.

The LPC3250 microcontroller has two NAND Flash controllers, one multi-level controller (MLC) and one single level controller (SLC).

5.8.2 Device Driver and Configuration

The driver for the LPC3250 SLC NAND driver is located here in the source tree:

/drivers/mtd/nand/lpc32xx_nand.c.

The NAND MTD partitions are setup in the board specific file (/arch/arm/mach-lpc32xx/board-ea3250.c) and have the following layout. The kickstart, S1L and u-boot are all setup as one MTD partition in Linux.

Block	Offset	Size	Description
0	0x00000000	128 K	Kickstart Bootloader
1-2	0x00020000	256 K	S1L Bootloader
3-6	0x00060000	512 K	u-boot
7	0x000E0000	128 K	u-boot environment
8-39	0x00100000	4 M	Linux kernel
40-80	0x00500000	5 M	Root File system
81-	0x00A00000		

The following configuration options are related to the NAND flash functionality.

Configuration	Description
CONFIG_MTD	Enable Memory Technology Device (MTD) support
CONFIG_MTD_NAND	Enable NAND device support
CONFIG_MTD_NAND_SLC_LPC32XX	Enable support for the LPC3250 SLC NAND driver

5.8.3 Usage

One way of using the NAND flash is to store the root file system and kernel image in an MTD partition, see section 4.3.3 and section 4.3.5 for more information.