


QM_CYCLONE10_10CL006 DB

USER MANUAL(QUARTUS 17.0)

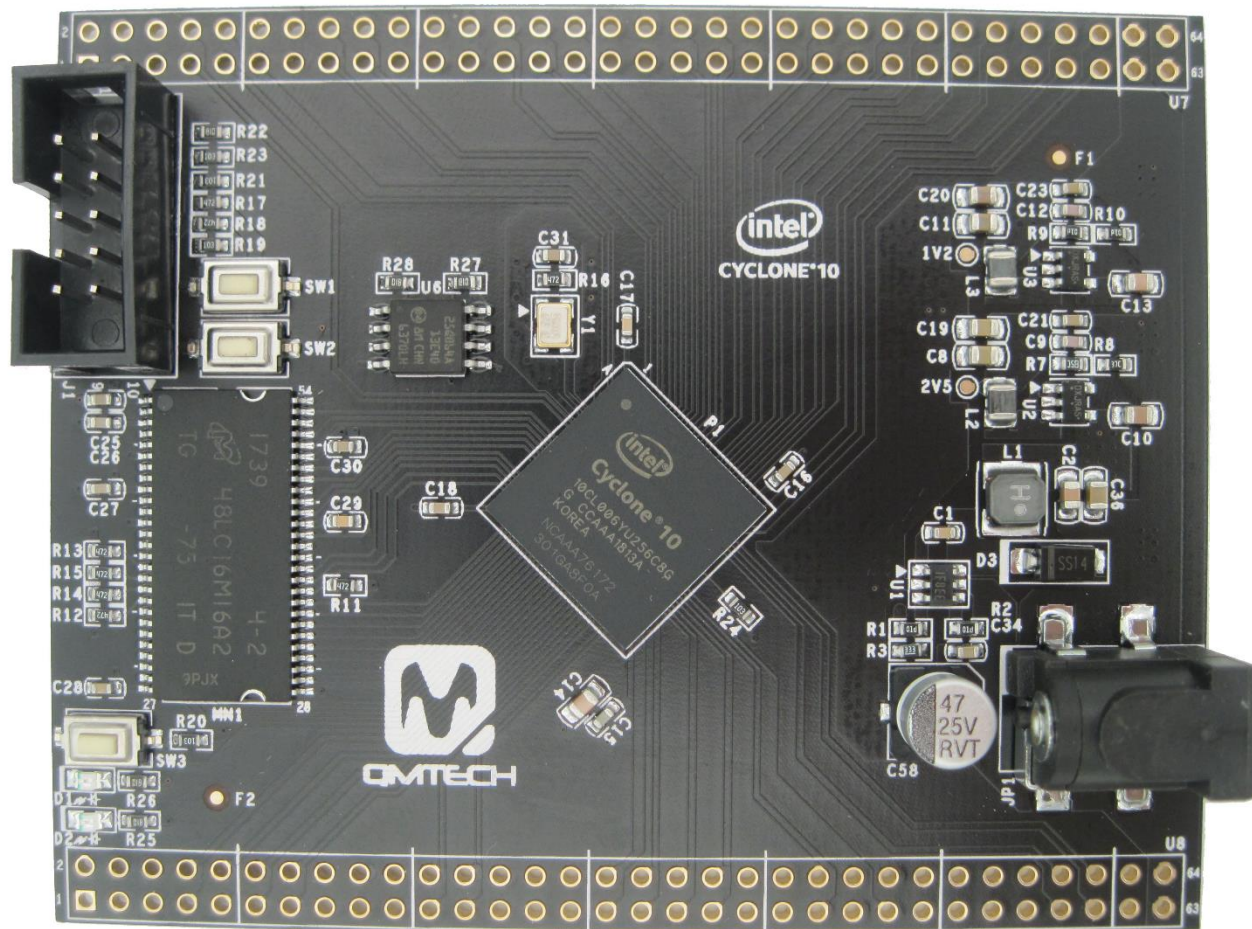

Preface

The QMTECH® Cyclone 10 Core Board uses Intel® (Altera) 10CL006 device to demonstrate the industry's lowest system cost and power, along with performance levels that make the device family ideal for differentiating your high-volume applications. All Intel® Cyclone® 10 LP FPGAs require only two core power supplies for operation, simplifying your power distribution network and saving you board costs, board space, and design time. The flexibility of the Intel® Cyclone® 10 LP FPGA enables you to design in a smaller, lower cost device, lowering your total system costs.

Users could visit QMTECH official website from here: <http://www.chinaqmtech.com/>

Table of Contents


1.	QUARTUS PRIME 17.0 INSTALLATION.....	3
2.	FPGA PROJECT COMPILE, *.SOF DOWNLOAD AND *.JIC PROGRAM... 7	
2.1	CREATE NEW PROJECT	7
2.2	COMPILE THE PROJECT	12
2.3	PIN ASSIGNMENT	13
2.4	DOWNLOAD *.SOF INTO FPGA	15
2.5	PROGRAM *.JIC INTO SPI FLASH	18
3.	SIGNALTAP II LOGIC ANALYZER.....	22
4.	REFERENCE.....	26
5.	REVISION	27

上海勤谋电子科技有限公司

1. Quartus Prime 17.0 Installation

The revolutionary Intel® Quartus® Prime Design Software includes everything you need to design for Intel® FPGAs, SoCs, and CPLDs from design entry and synthesis to optimization, verification, and simulation. Dramatically increased capabilities on devices with multi-million logic elements are providing designers with the ideal platform to meet next-generation design opportunities.

The Intel® Quartus® Prime Software design flow comprises of the following high-level steps:

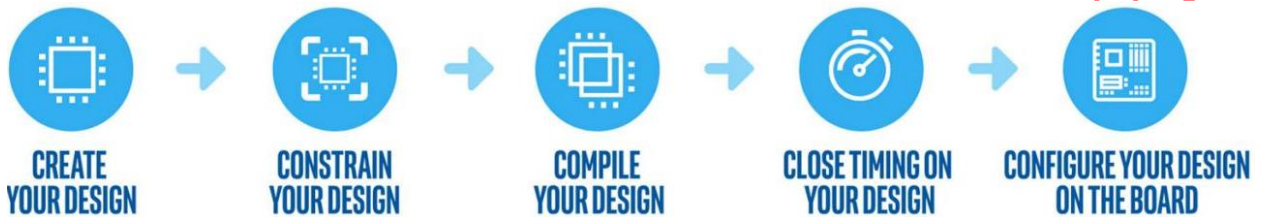

The Quartus Prime software version 17.0 supports the following device families: Stratix IV, Stratix V, Arria II, Arria V, Arria V GZ, Arria 10, Cyclone 10 LP, Cyclone IV, Cyclone V, MAX II, MAX V, and MAX 10 FPGA. Below image shows the startup UI of Quartus II Prime 17.0:


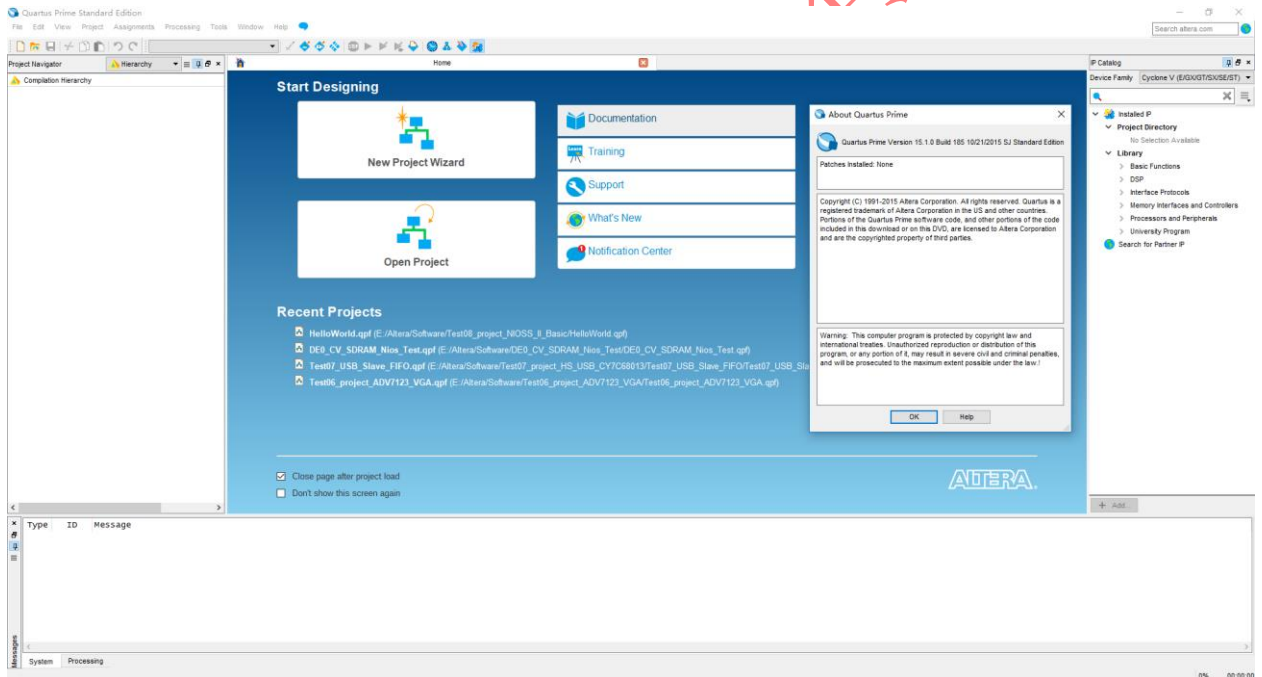


Figure 1-1. Quartus II Prime 17.0

After the Quartus II Prime 17.0 is correctly installed, users still need to install the device package from Intel official website. Below lists the download center address:

<https://www.intel.com/content/www/us/en/programmable/downloads/download-center.html>

In the Intel Download Center website, select the tab of 'Select by Device' and then all the available device packages will be listed as below image. The device used in this user manual is Cyclone10 LP series and the detailed chip part number is 10CL006YU256C8G, so please download the device package for Quartus II 17.0: cyclone10lp-17.0.0.595.qdz.

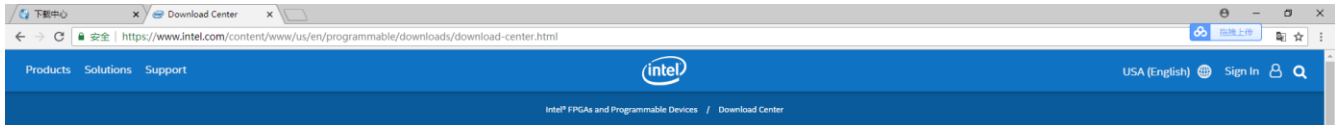

Download Center

Get the complete suite of Intel® design tools

- Design Software
- Embedded Software
- Archives
- Licensing
- Programming Software
- Drivers
- Board System Design
- Board Layout and Test
- Legacy Software

Software Selector

Select by Version | Select by Device | Select by Software

Devices

- Stratix Series
- Arria Series
- Cyclone Series
- Cyclone 10 LP**
- Cyclone
- Cyclone IV E
- Cyclone IV GX
- Cyclone IV

Quartus Edition	Version Listing
Standard Edition	18.0
	17.0
Lite Edition	18.0
	17.1
	17.0

Three Intel® Quartus® Prime Software Editions to Meet Your System Design Requirements

Which Edition of the Intel® Quartus® Prime software supports my device?

Pro Edition ^{1,2,3}	Standard Edition ^{1,2}	Lite Edition ^{1,4}
Paid license required	Paid license required	FREE, no license required
The Intel® Quartus® Prime Pro Edition software supports the advanced features in Intel's next-generation FPGAs and SoCs with the Intel Stratix® 10, Intel Arria® 10 and	The Intel Quartus Prime Standard Edition software includes extensive support for earlier device families in addition to the Intel Cyclone 10 LP device family.	The Intel Quartus Prime Lite Edition software supports Intel's low-cost FPGA device families.

Figure 1-2. Download Device Package

Open Quartus II 17.0, Click Tools → Install Device and then select the downloaded device package:

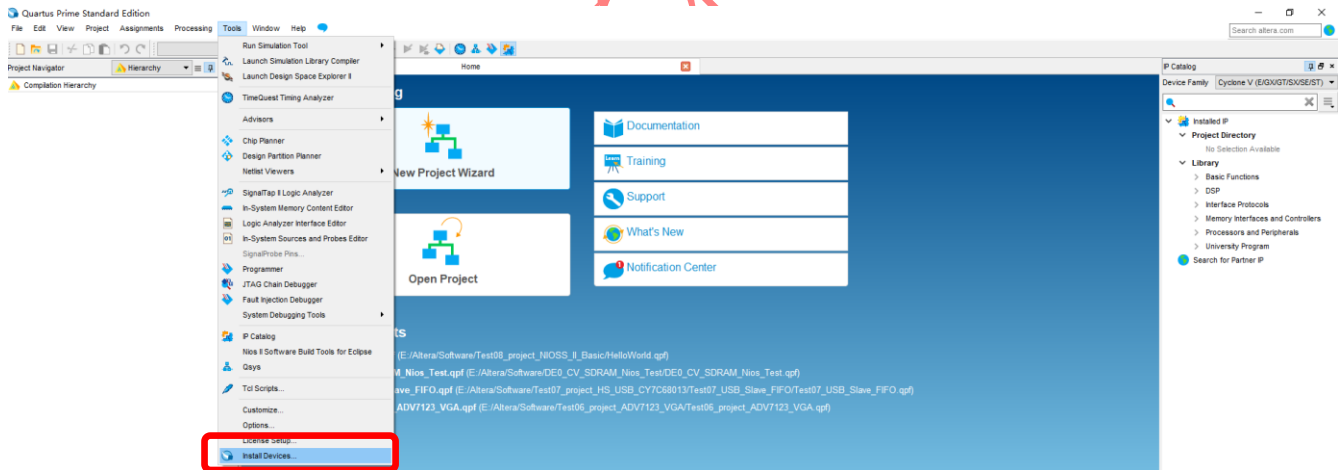


Figure 1-3. Install Device Package

Below window will pop up and click Next:

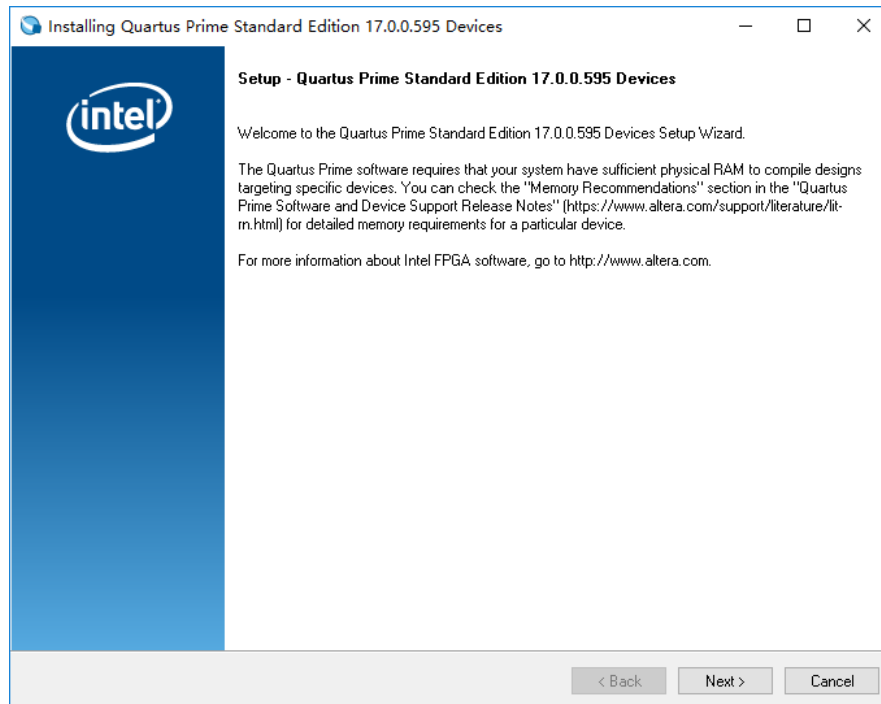


Figure 1-4. Install Device Package

Choose the Download Directory where contains the cyclone10lp-17.0.0.595.qdz file:

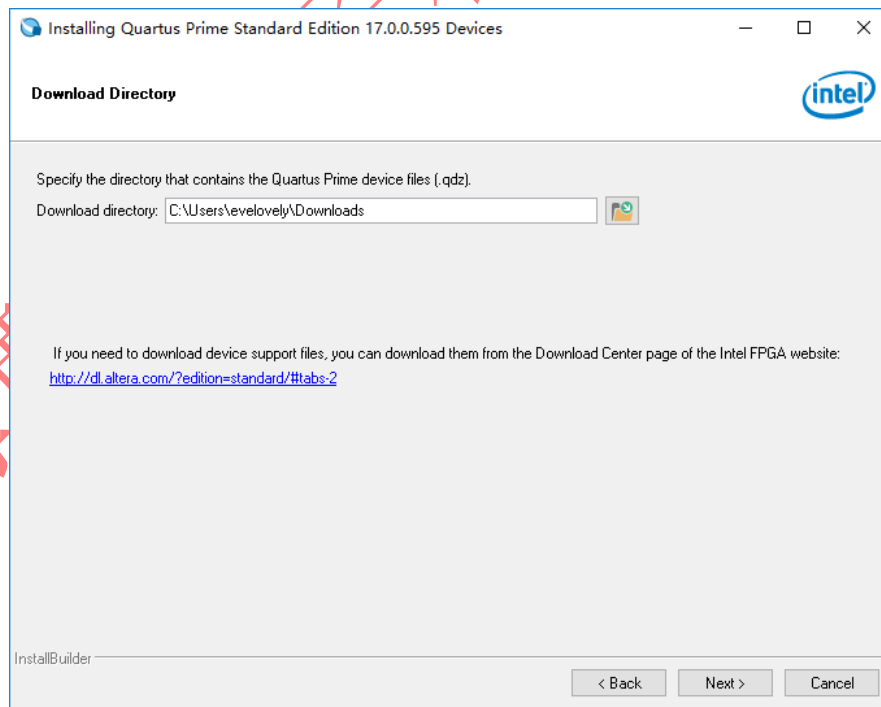


Figure 1-5. Choose Device Package

Choose the device package needs to be installed and click Next:

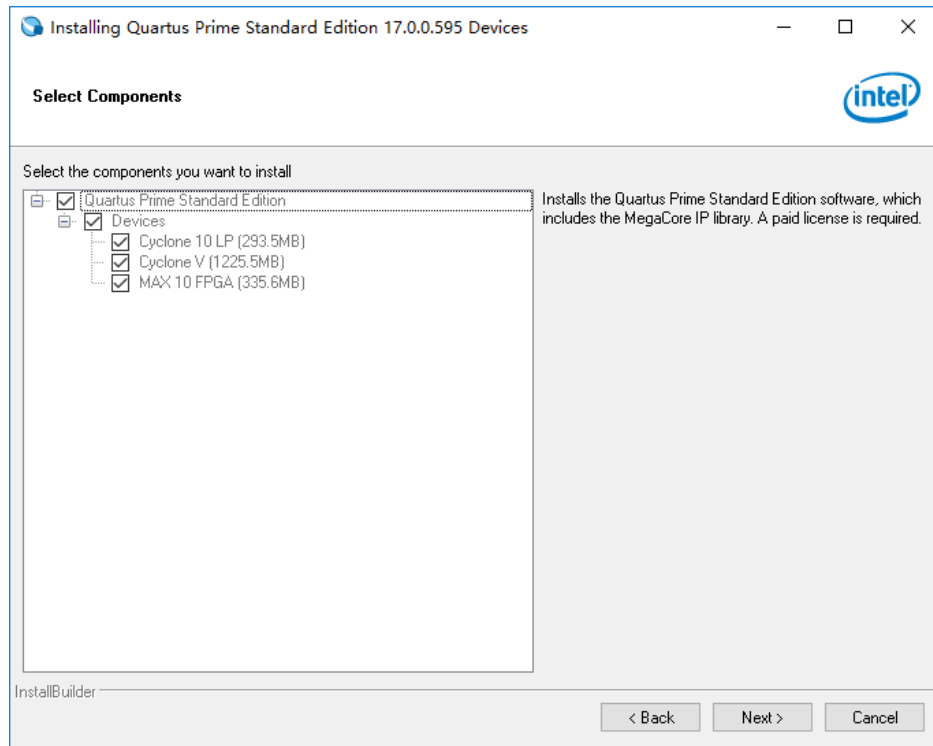


Figure 1-6. Install the Device Package

User could also install the device package by using Quartus II Prime 17.0 Device Installer directly:

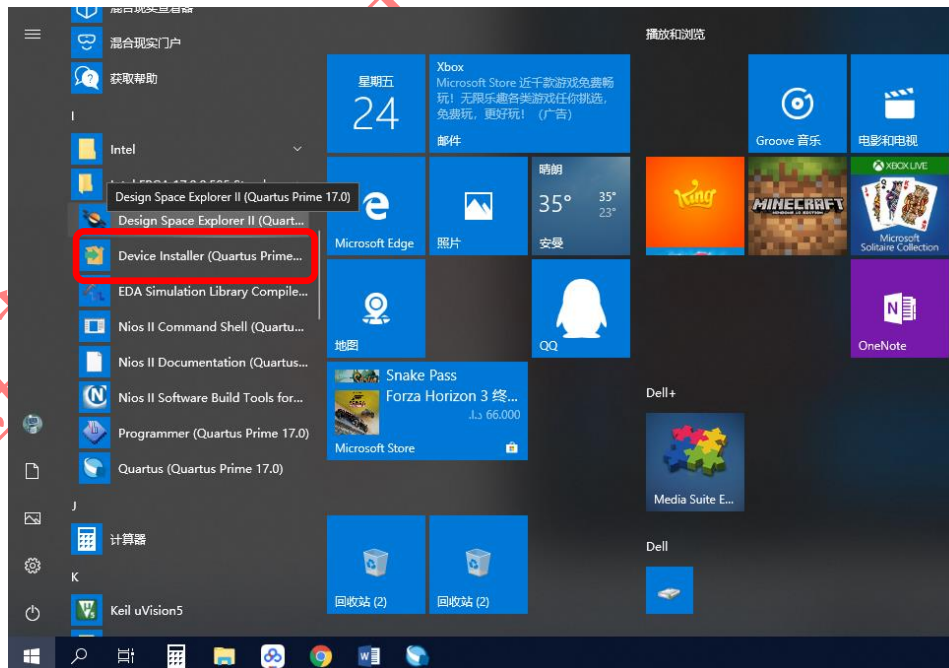


Figure 1-7. Device Installer

2. FPGA Project Compile, *.sof Download and *.jic Program

2.1 Create New Project

Click **【File】** → **【New Project Wizard...】** to create a new project:

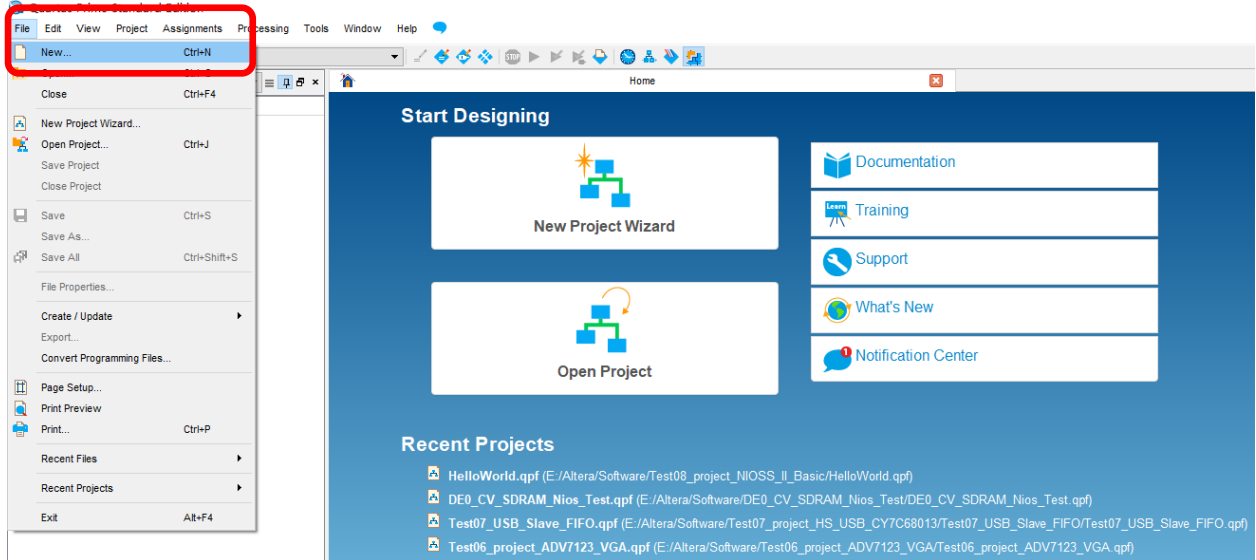


Figure 2-1. Create New Project

Choose **【New Quartus Prime Project】** :

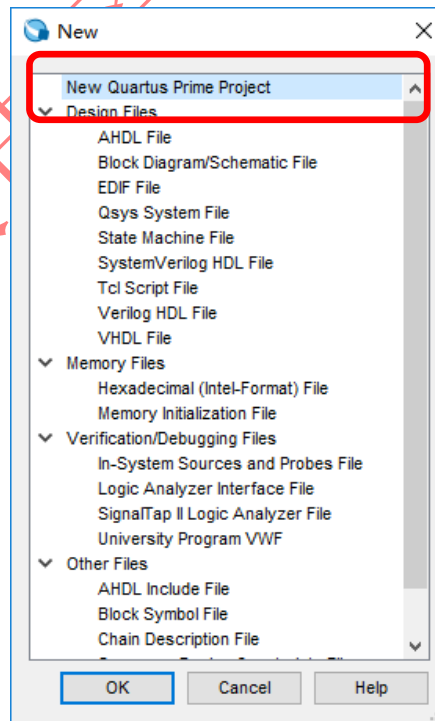


Figure 2-2. New Quartus Prime Project

In below 【New Project Wizard】 page, choose Next:

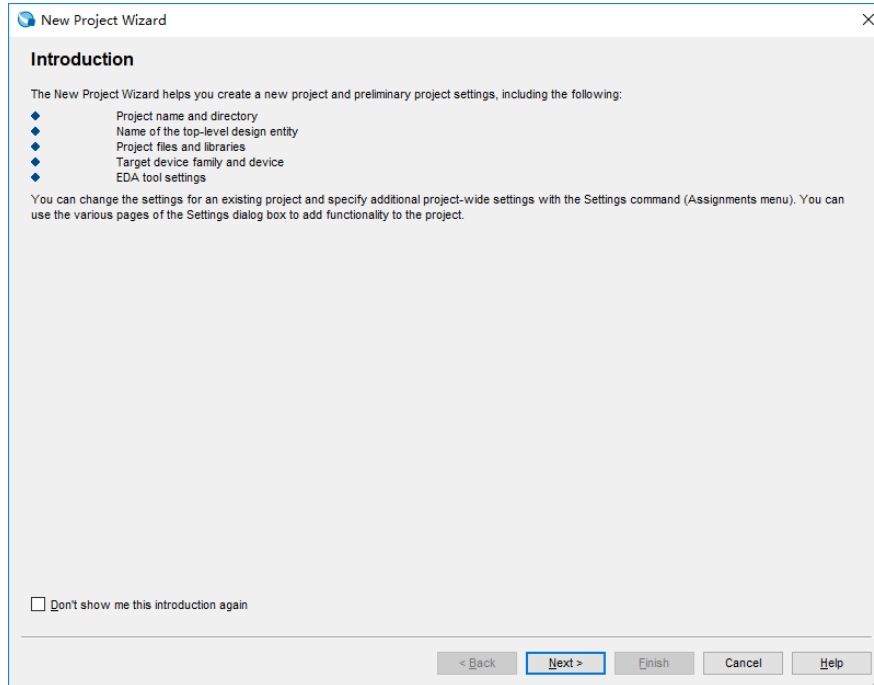


Figure 2-3. New Project Wizard

Set the target working folder below 【What is the working directory for this project?】. Set the new project name below 【What is the name of this project?】. And finally set the example project name: Test01_Project_LED shown as below.

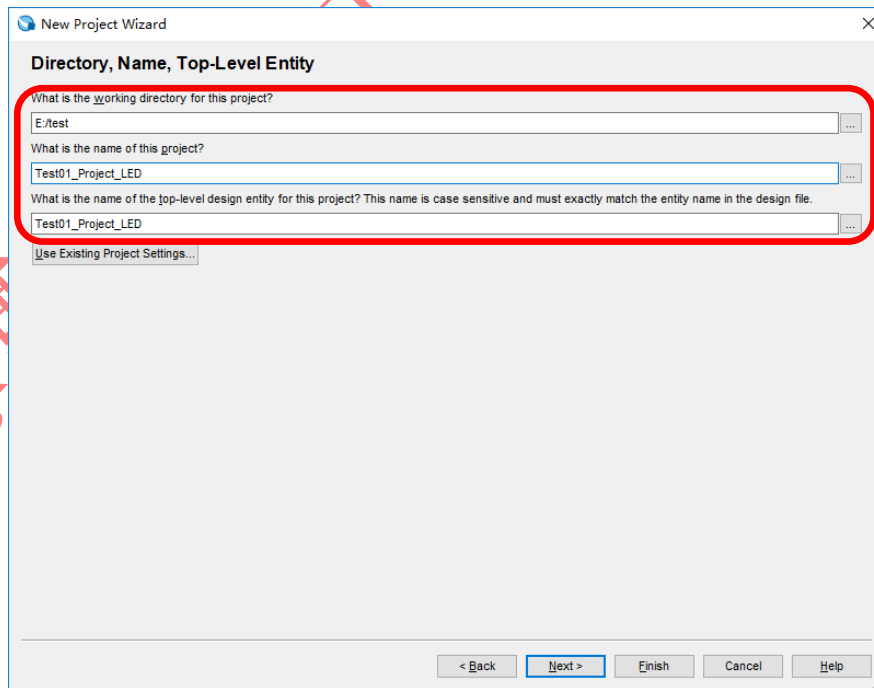


Figure 2-4. Set Working Directory and Project Name

Select **【Empty Project】** and then click Next:

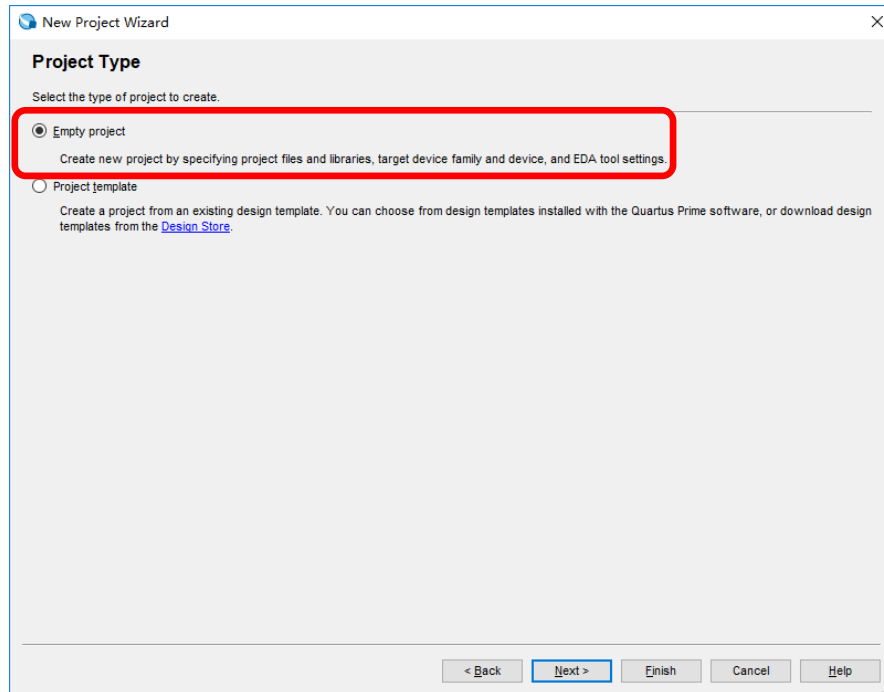


Figure 2-5. Create Empty Project

If user already has some source code, please add all these necessary files in this step:

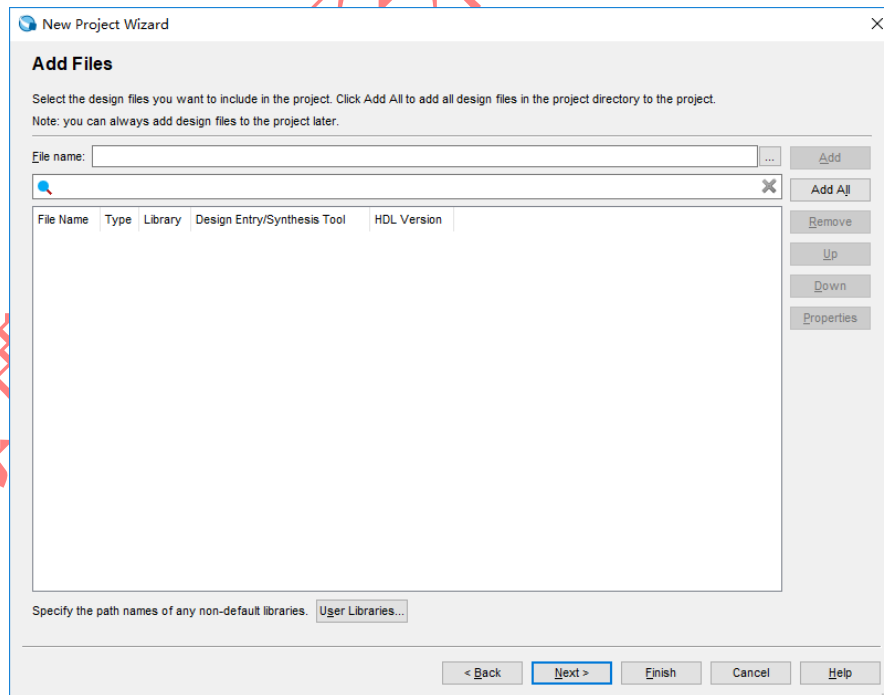


Figure 2-6. Add Source Code

Choose the FPGA Chip number: 10CL006YU256C8G

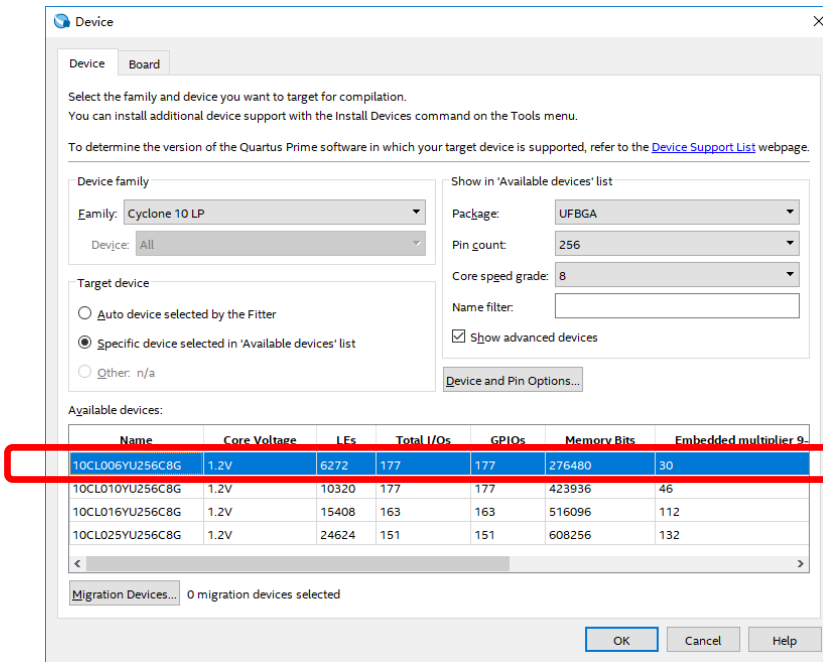


Figure 2-7. Select Device

Summary page will be shown and click **【Finish】** if there's nothing needs to be changed:

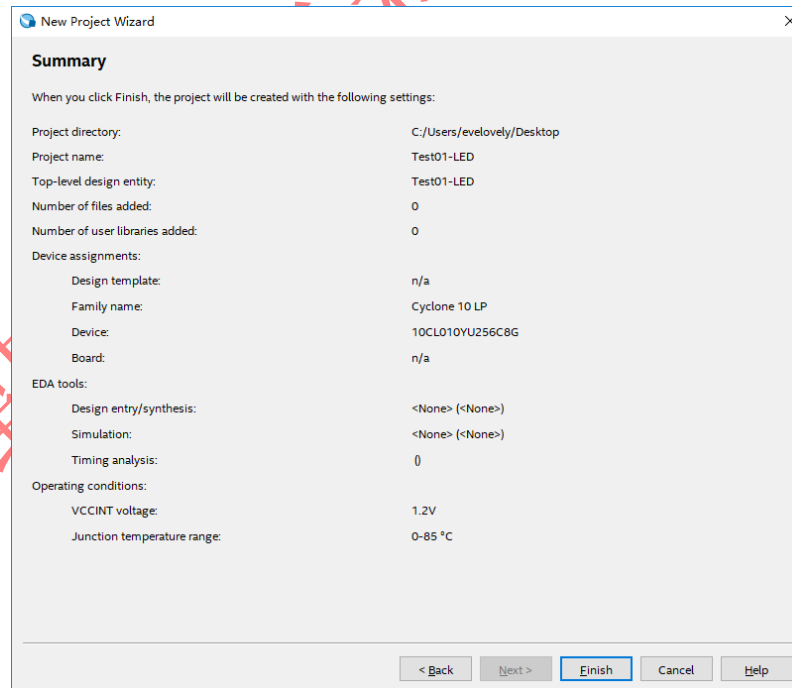


Figure 2-8. Project Summary Page

After the Empty Project created, below image will be shown:

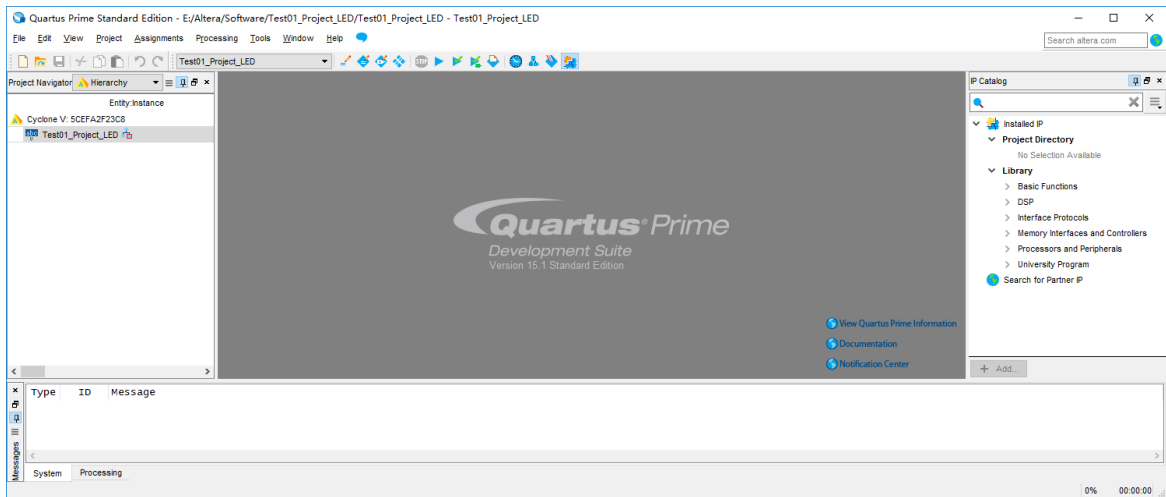


Table 2-1. Empty Project

Users may add example source file Test01_Project_LED.v into this Empty Project shown as below:

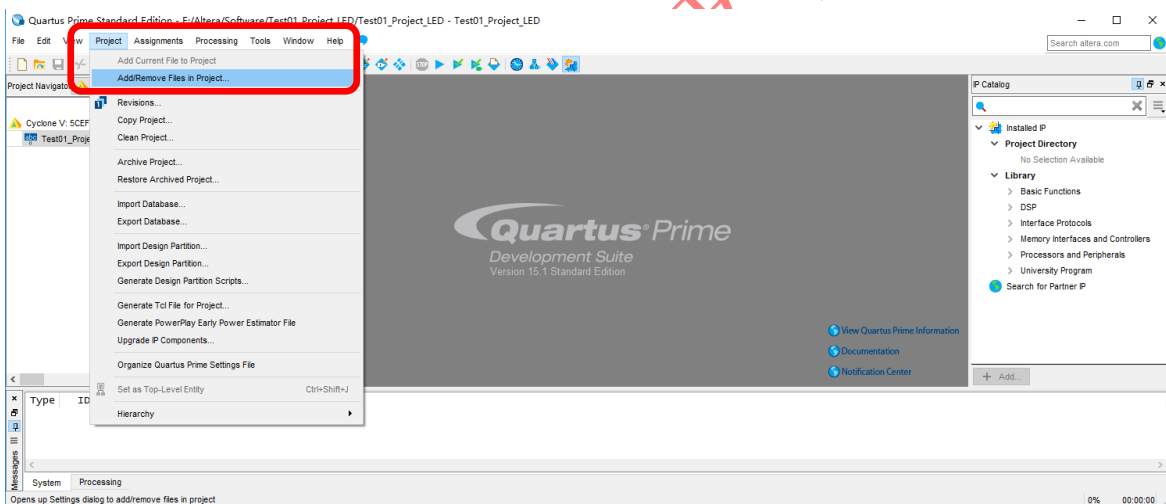


Table 2-2. Add Source File

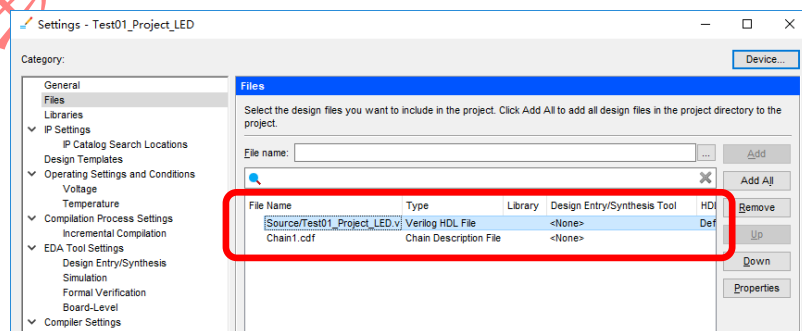


Table 2-3. Add Source File

After the newly added source file loaded into project, user can view the source code shown as below:

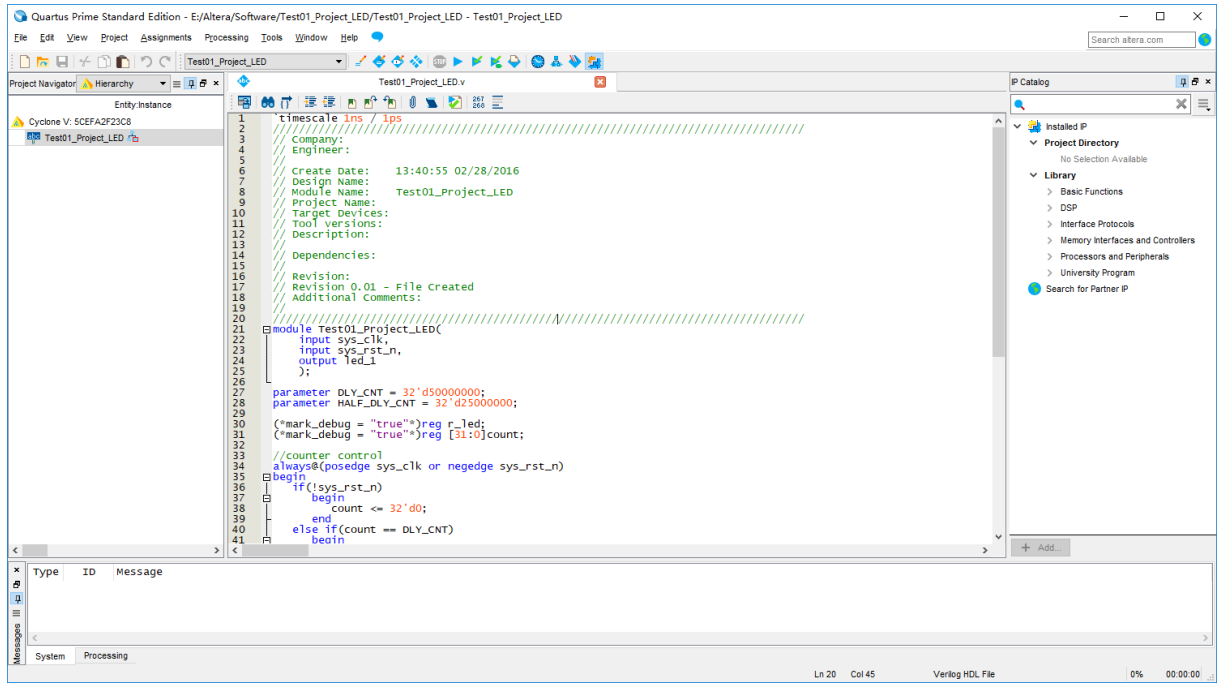


Figure 2-9. View of Source Code

2.2 Compile the Project

Users could use the button **Start Compilation – Ctrl + L** shown in below image to compile the project:

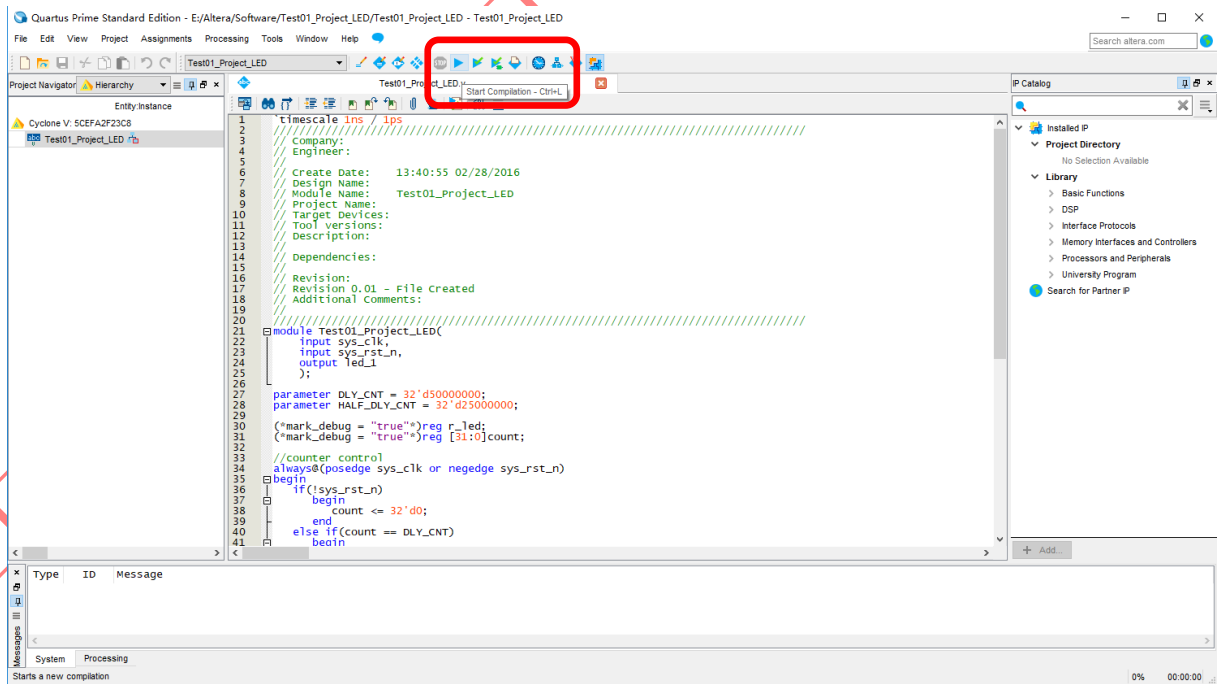


Figure 2-10. Compilation

There will be compilation report after the compile finished, in which shows the info like logical element resource usage, how many PLLs are used, etc. Below image shows an example Compilation Report:

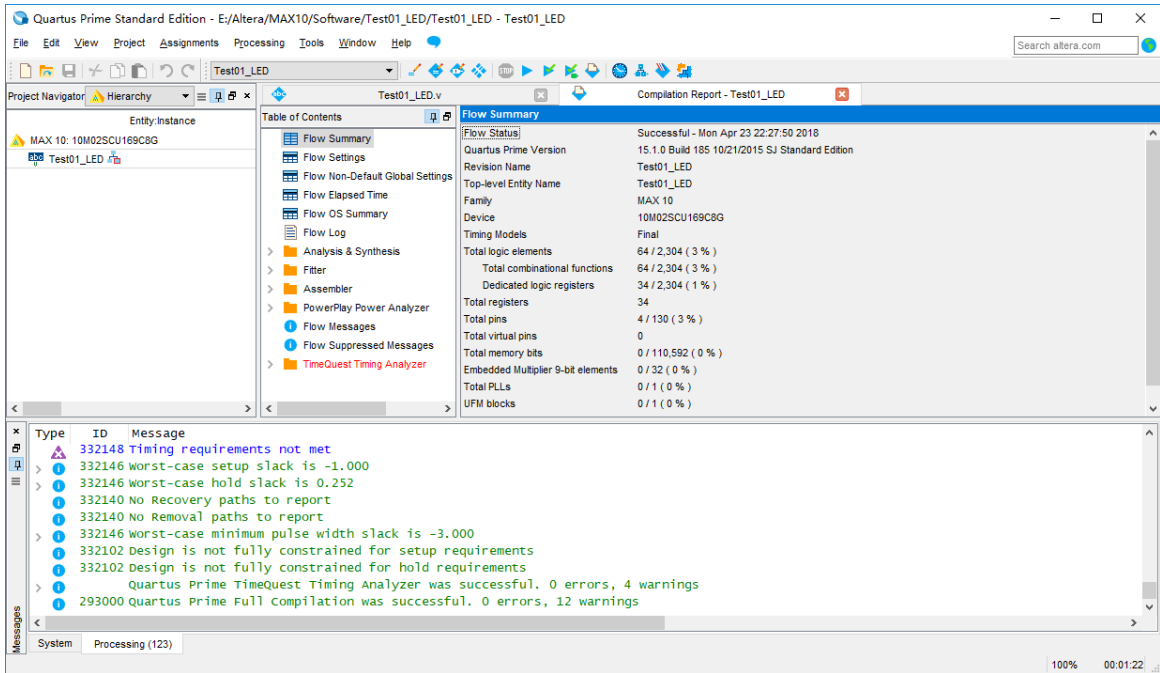


Figure 2-11. Compilation Report

2.3 PIN Assignment

There are several ways to assign the Pins for the example project. Method 1: Choose **Assignment** → **Pin Planner** :

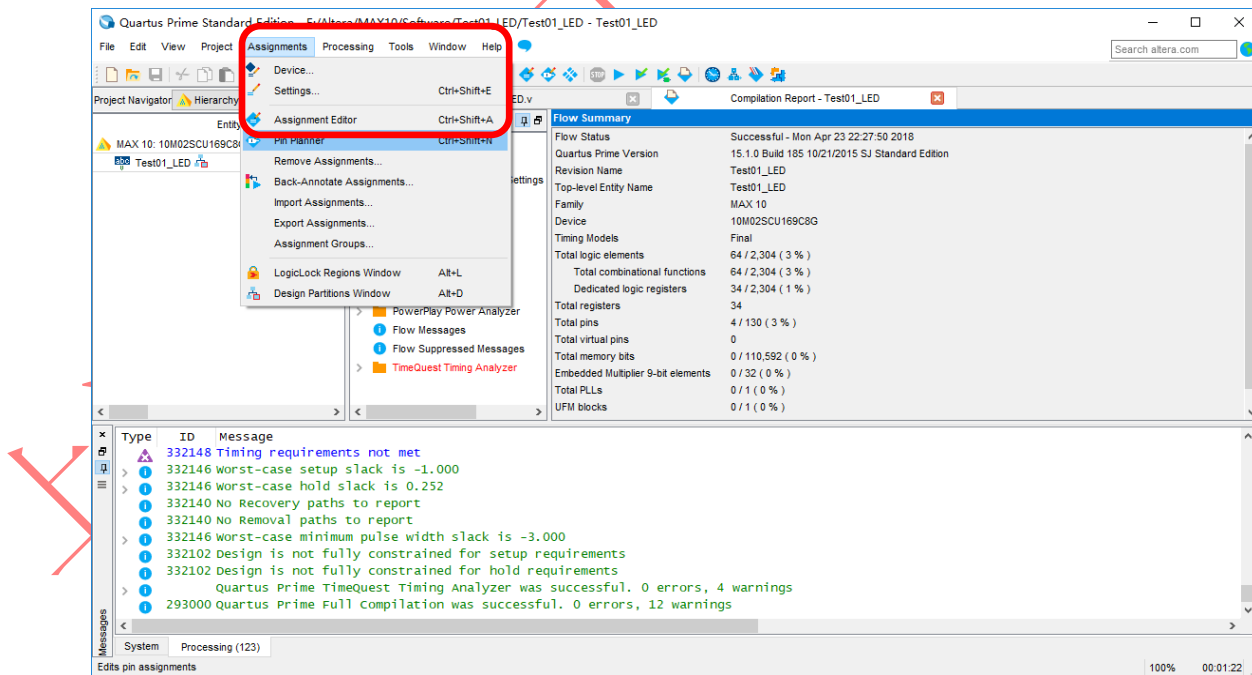


Figure 2-12. Pin Planner

Below image shows PIN settings for this test example:

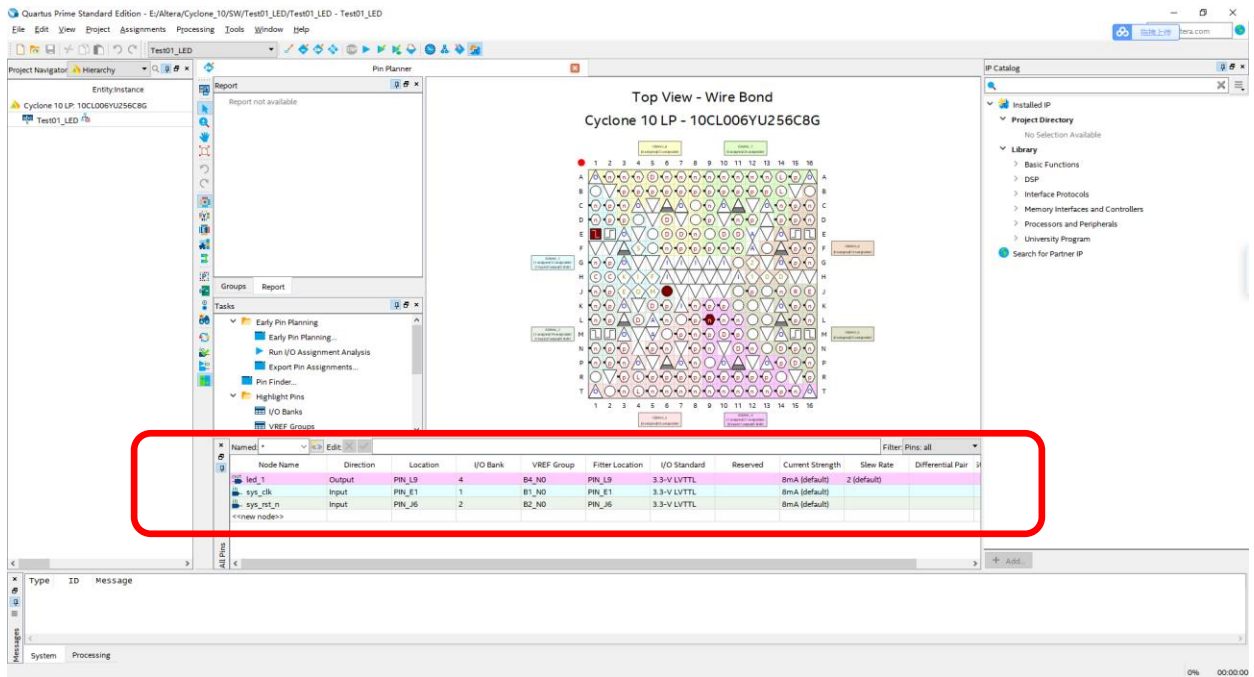


Figure 2-13. PIN Assignment

Method 2: Prepare a *.csv file from other project, then use 【Assignment】 → 【Import Assignment】 to import the existing *.csv file to allocate the Pin assignment:

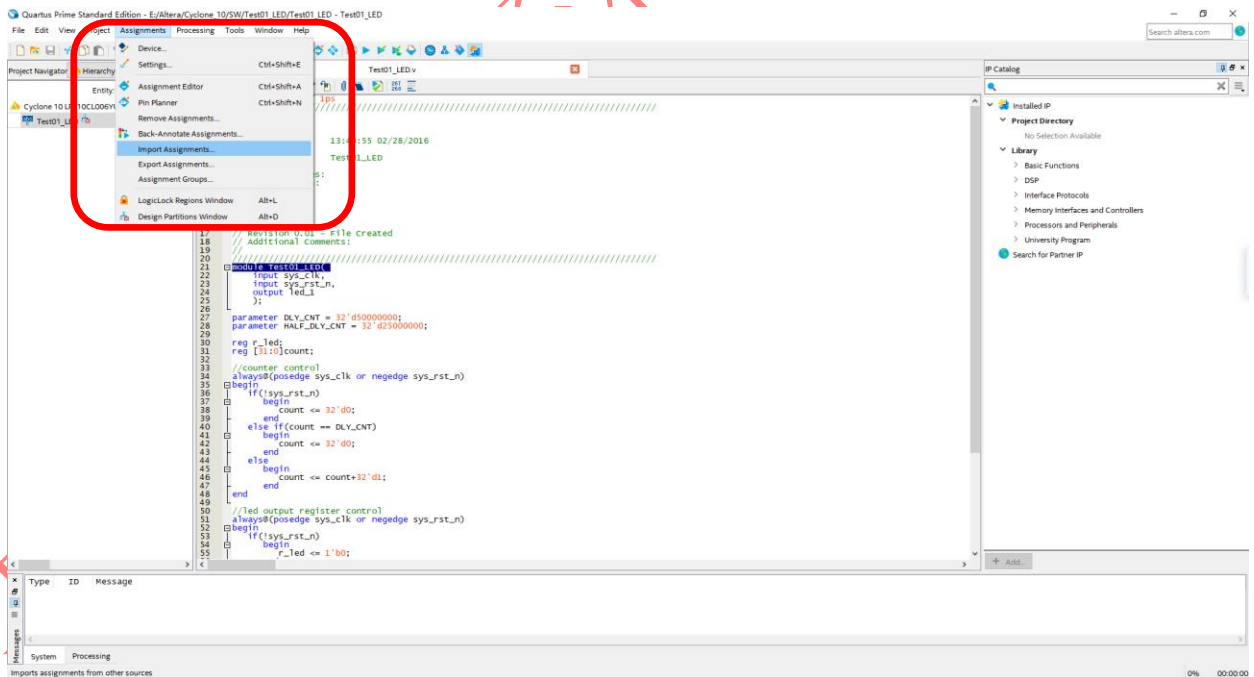


Figure 2-14. Import Assignment

2.4 Download *.sof into FPGA

After the test example correctly compiled, the Quartus will generate a *.sof file which could be directly loaded into FPGA to check whether implemented functions perform as expected. User could use **【Tools】** → **【Programmer】** to start a new download:

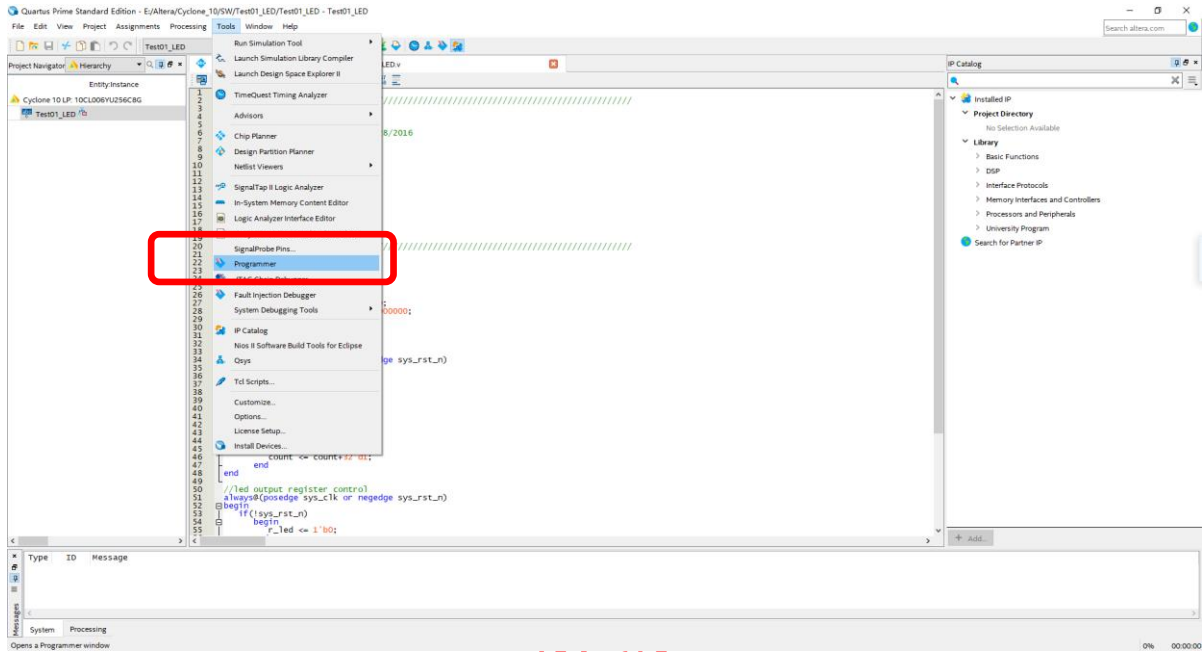


Figure 2-15. Programmer

Make sure the USB Blaster's cable are correctly connected to FPGA's JTAG port before using Programmer to download *.sof file. Then click **【Auto Detect】** to check the hardware setup is okay or not:

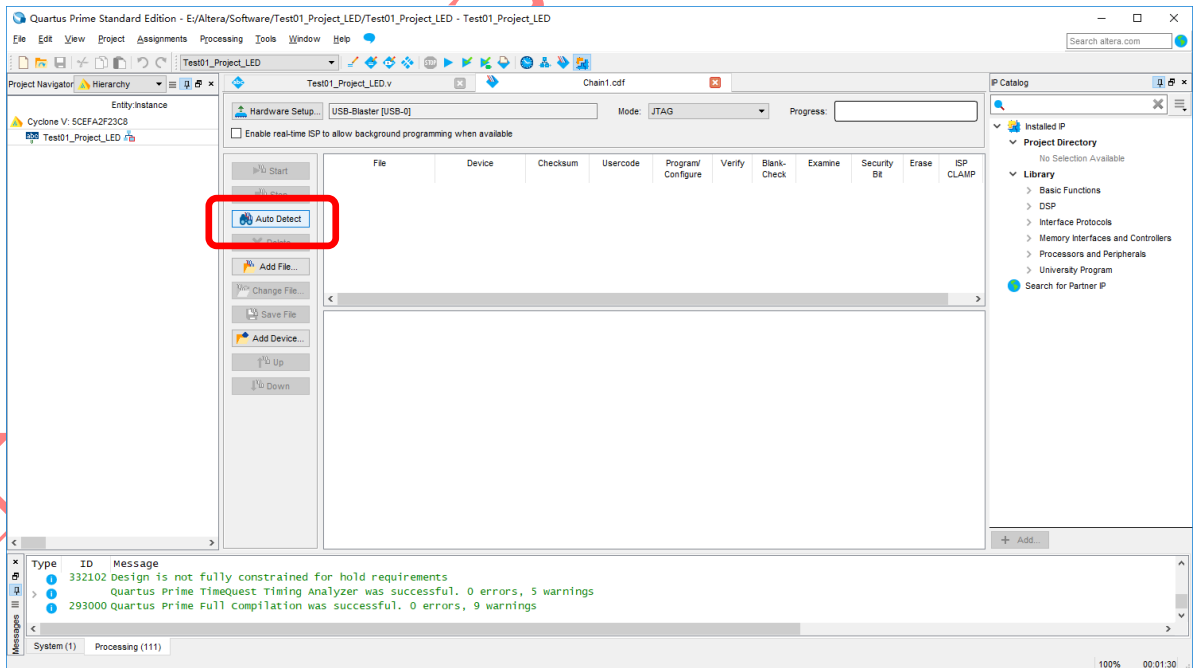


Figure 2-16. JTAG Setup

Below image shows the FPGA has been detected by the Programmer:

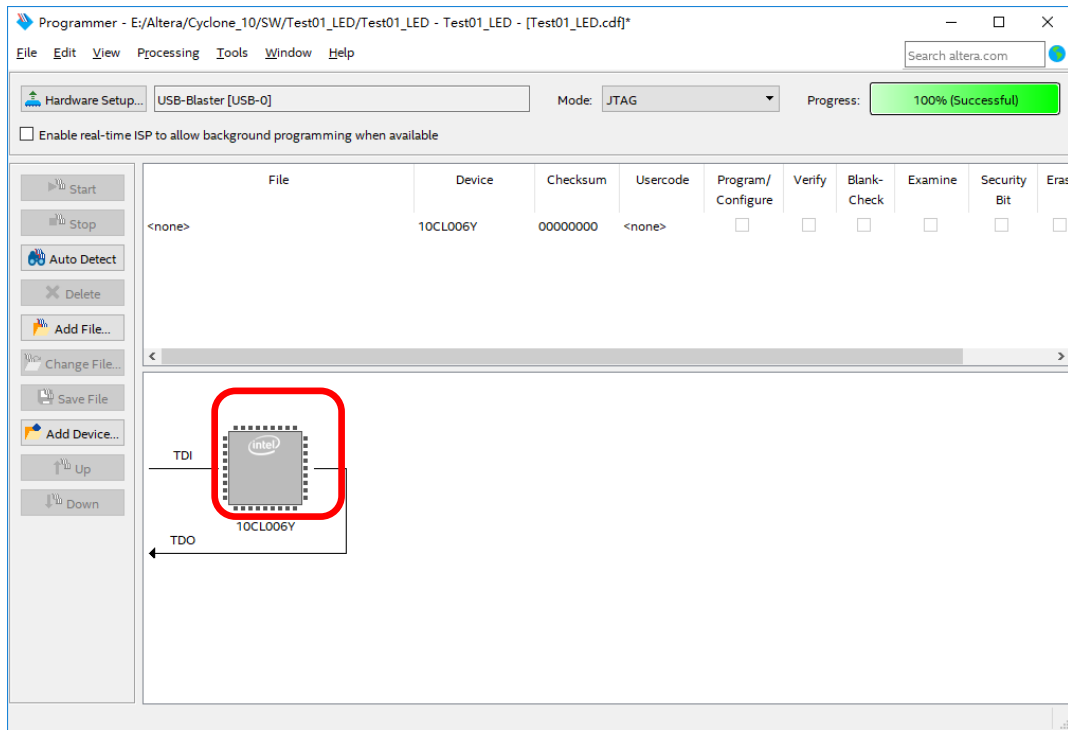


Figure 2-17. Detect FPGA

Users click **None** column to choose the *.sof file to be loaded into FPGA.

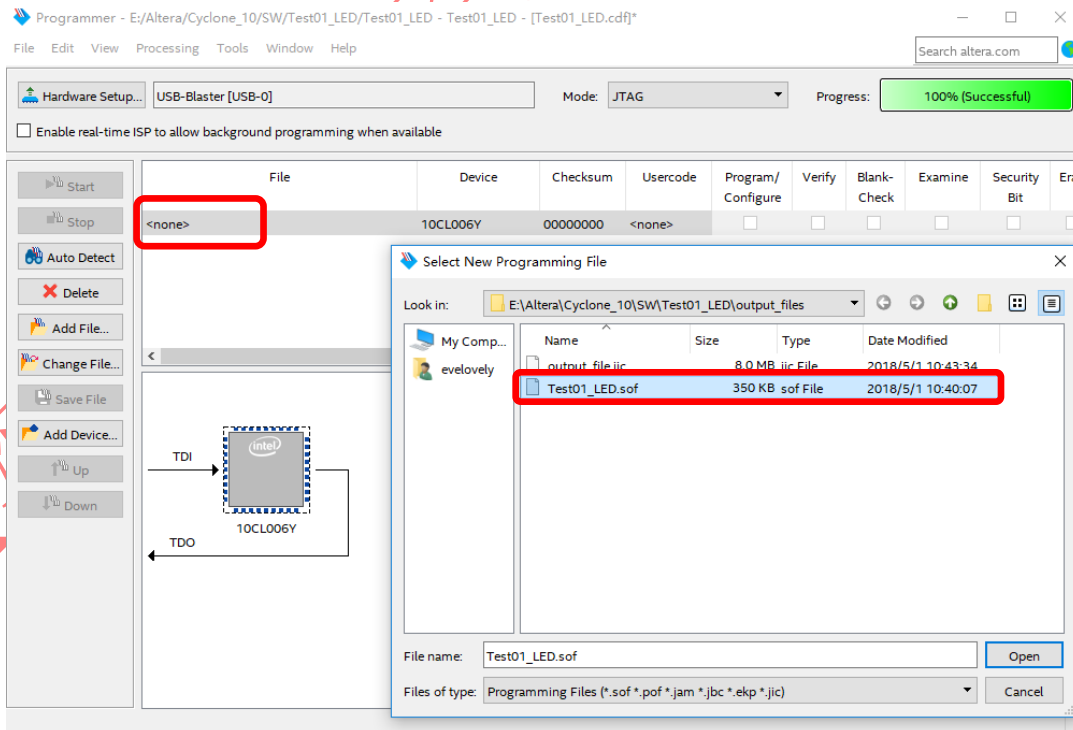


Figure 2-18. Choose *.sof File

Then toggle **【Program/Configure】** and click the **【Start】** button to start a new program:

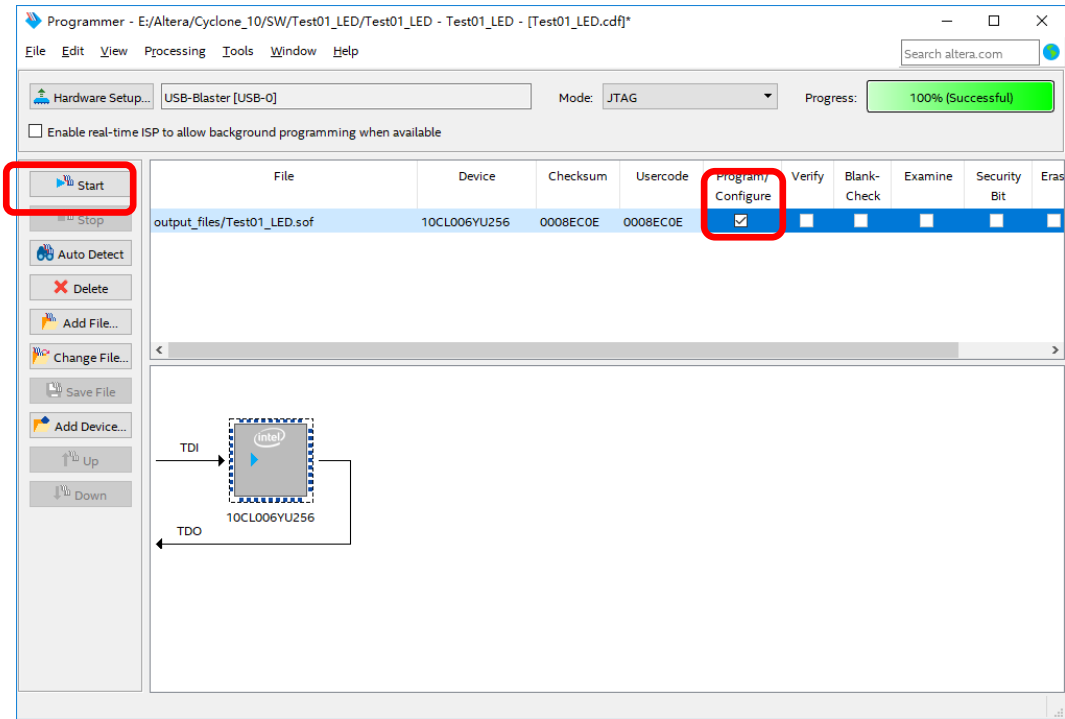


Figure 2-19. Program *.sof

If the *.sof file is correctly programmed, the Progress bar will show info like: **100%(Successful)**. Then users could check whether the LEDs on FPGA board blinking or not.

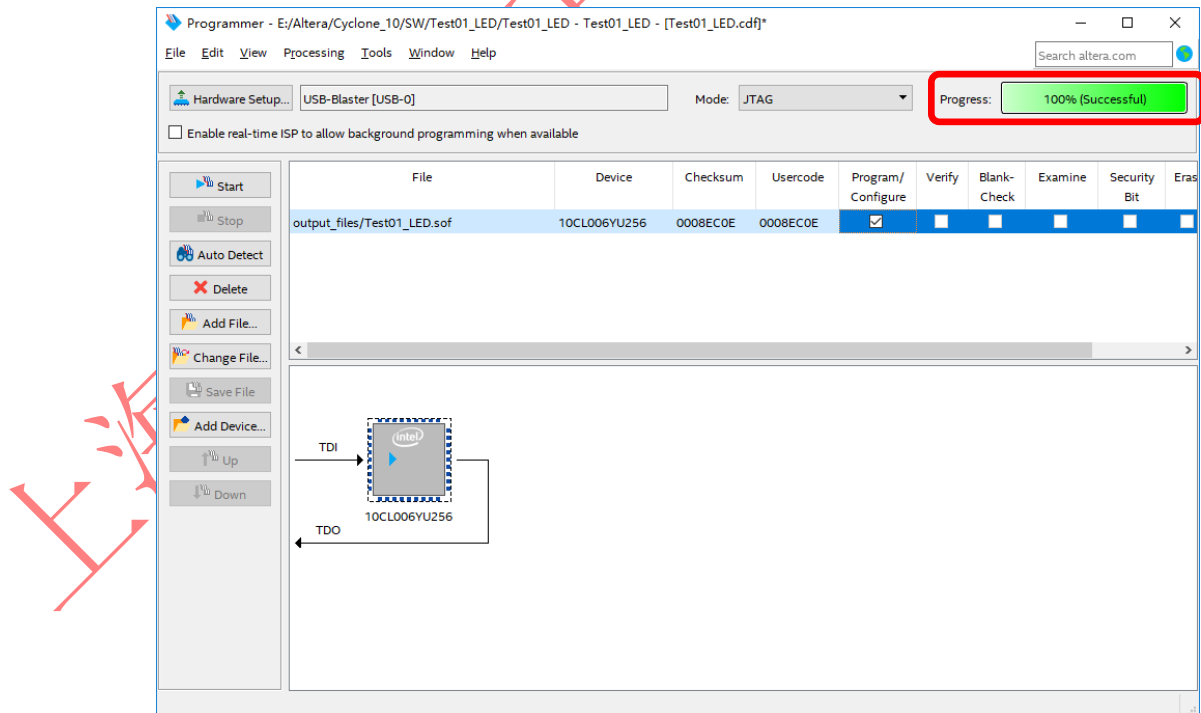


Figure 2-20. Program Successful

2.5 Program *.jic into SPI Flash

QM_CYCLONE10_10CL006 core board has mounted an external SPI Flash with 8MB capacity. The hardware design chooses Active Serial x 1 method to make the FPGA could boot up from external SPI Flash after power on. In this section, it describes how to program eternal SPI Flash through JTAG port. The SPI Flash is non-volatile device which means the programmed *.jic file will never lose its content after power down.

The SPI Flash programming file *.jic is converted by *.sof file described in previous chapter. So make sure *.sof could be correctly running on FPGA before performing below steps. Step1: choose the Quartus II Prime 15.1file convert tool by click **【File】** → **【Convert Programming File】** :

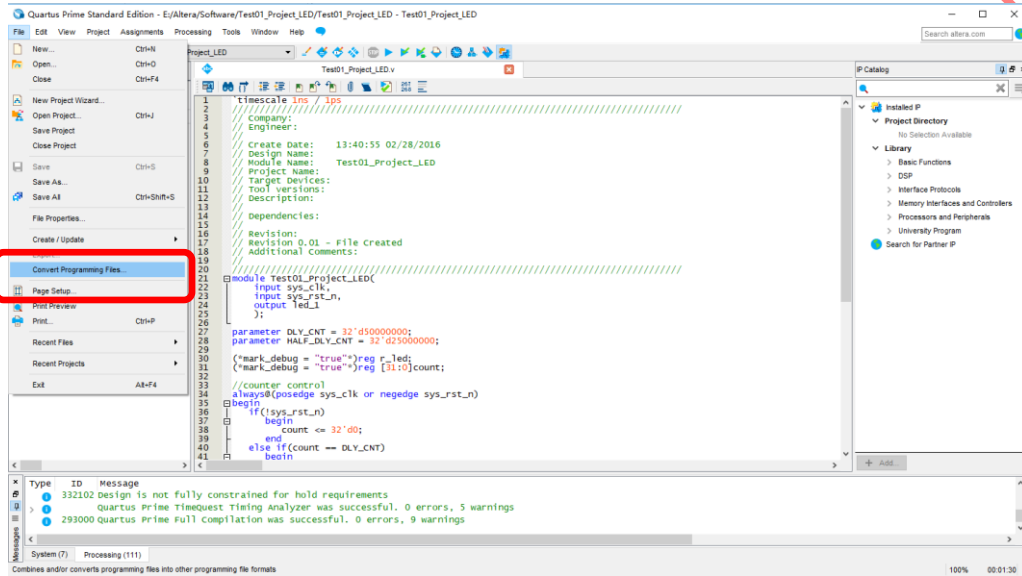


Figure 2-21. Convert Programming File Tool

Change the settings following below figure: choose EPCQ64, generated file name output_file.jic, etc.

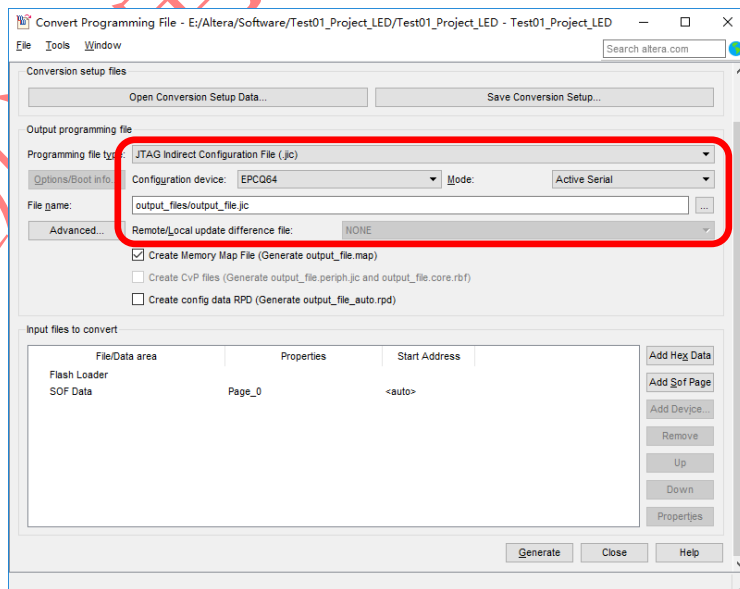


Figure 2-22. Configure Convert Programming File Tool

Click the **【Advanced...】** option, and set these below two options in the red rectangle in Disable status:

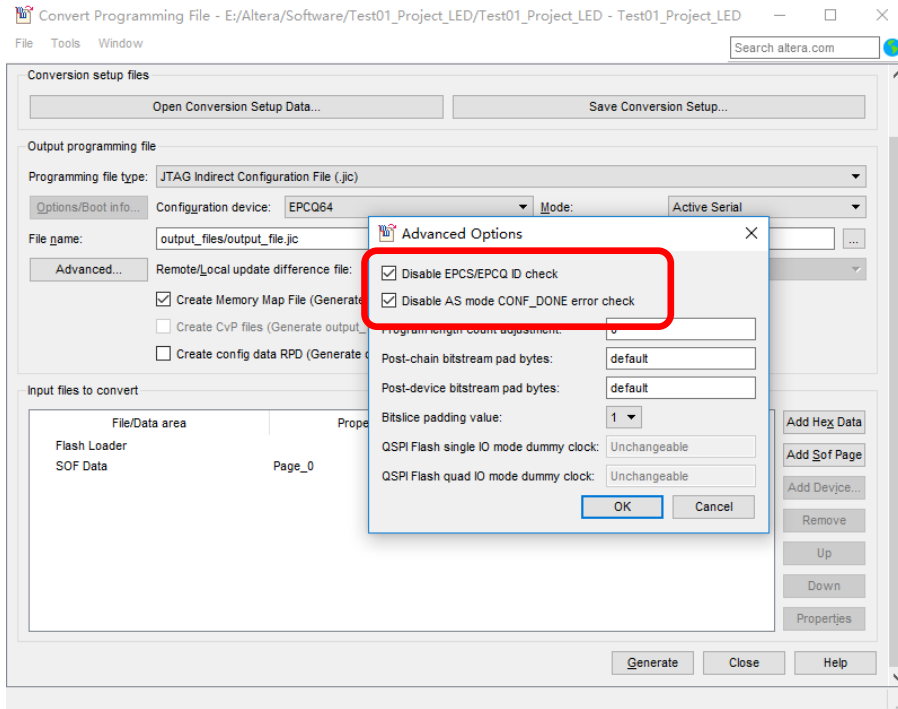


Figure 2-23. Advanced Options

Select **【Flash Loader】** and then click **【Add Device】** button:

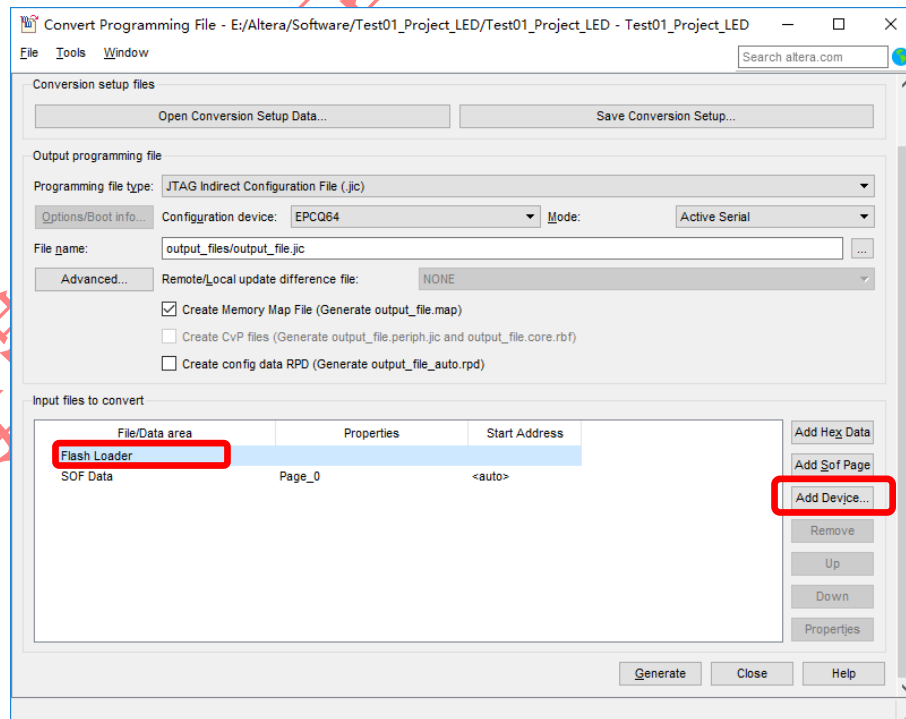


Figure 2-24. Flash Loader

Choose the target Flash Loader device: 10CL006Y:

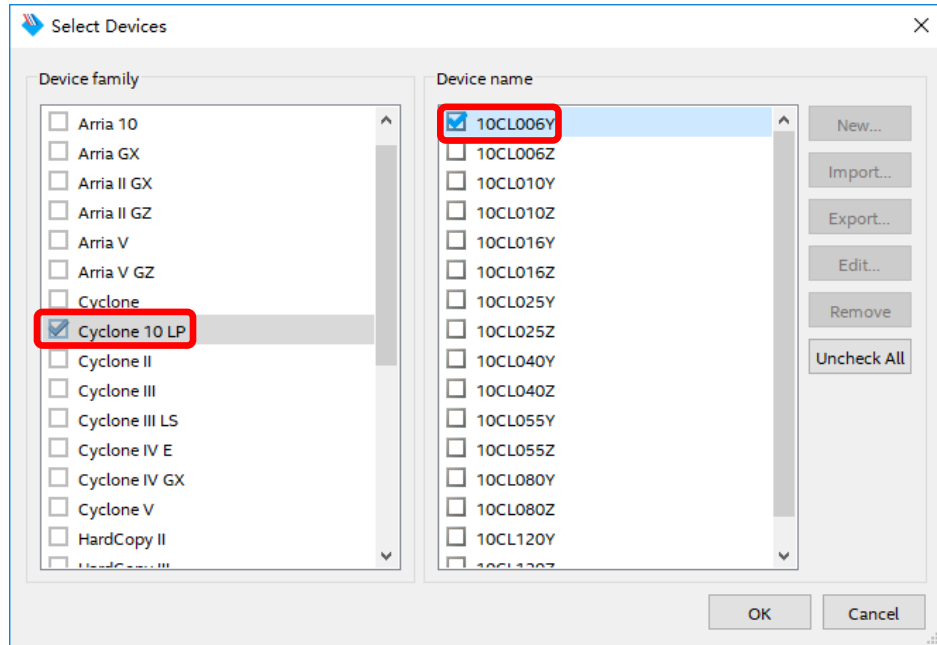


Figure 2-25. Flash Loader for 10CL006Y

Select **【SOF Data】** and then choose **【Add File...】** to add the verified *.sof file. And then click **【Generate】** to generate the output_file.jic file:

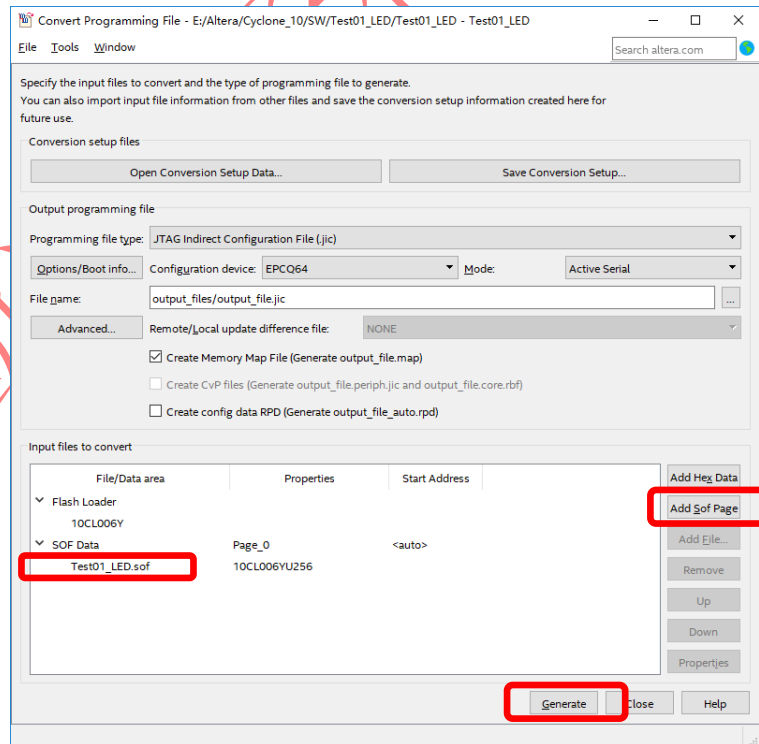


Figure 2-26. Generate *.jic File

After the output_file.jic correctly generated, run the **【Tools】** → **【Programmer】** . And then click **【Add File...】** to choose the output_file.jic.

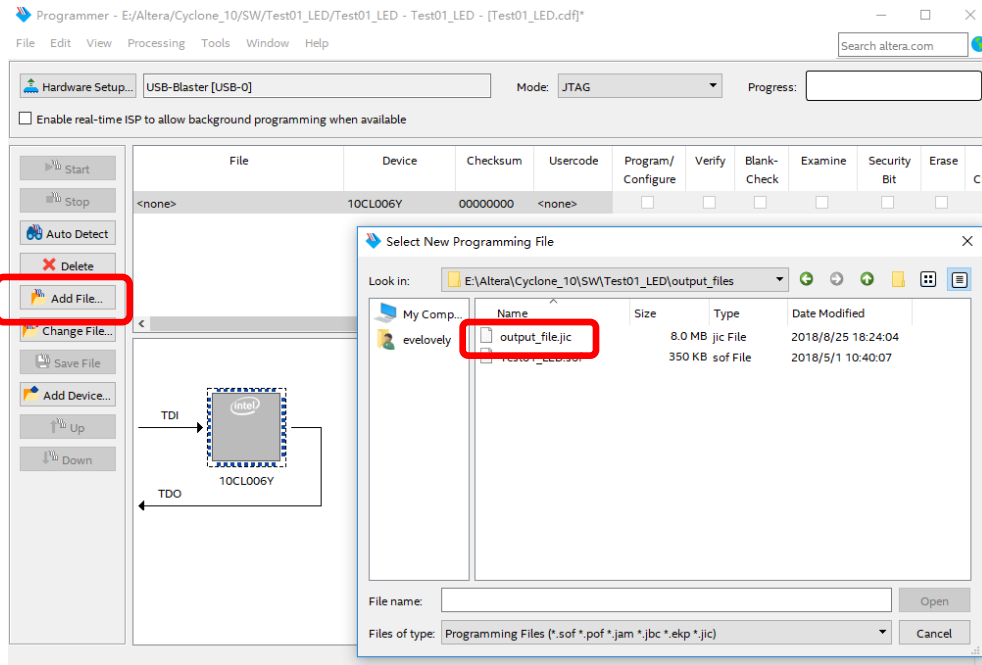


Figure 2-27. Choose *.jic File

Toggle **【Program/Configure】** and then click **【Start】** button to program the external SPI Flash. Program status will be shown in the **【Progress】** bar. After the *.jic correctly programmed, user may repower on the board to check whether the FPGA could boot from external SPI Flash.

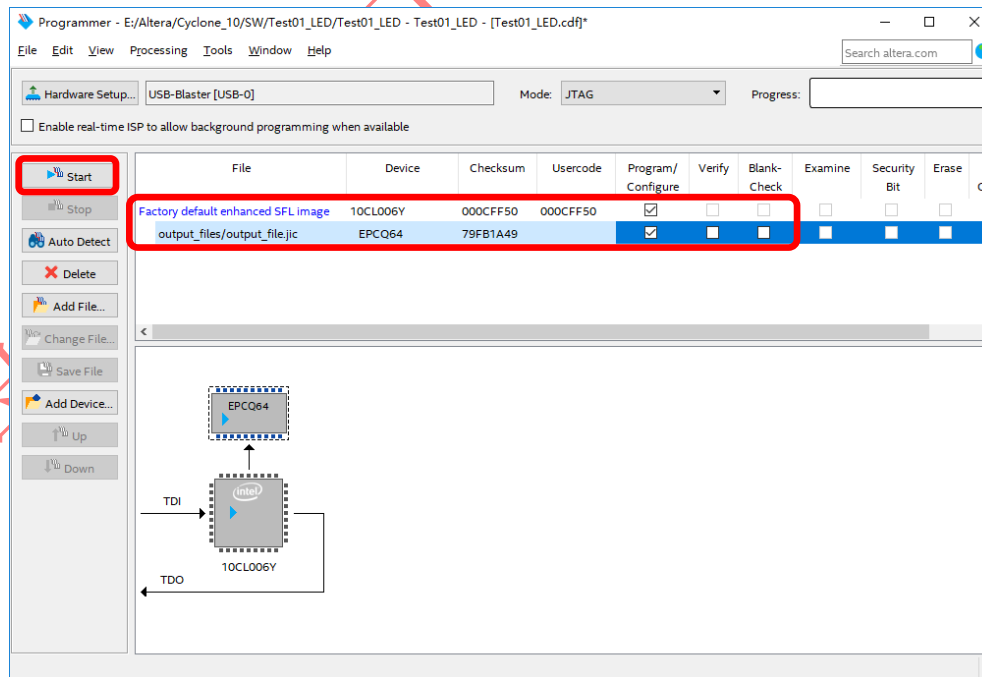


Figure 2-28. Program *.jic

3. SignalTap II Logic Analyzer

The SignalTap II Embedded Logic Analyzer is a system-level debugging tool that captures and displays signals in circuits designed for implementation in Intel's FPGAs. The user is expected to have access to a computer that has Quartus II 17.0 software installed. The detailed example in this chapter was obtained using Quartus II version 17.0, but newer versions of the software can also be used.

After successfully compiling the Test04_SDRAM project and setting pin assignments, select SignalTap II Logic Analyzer from the tools dropdown menu (as shown below). Ensure the JTAG programmer (USB Byte Blaster) is connected between the board and the computer.

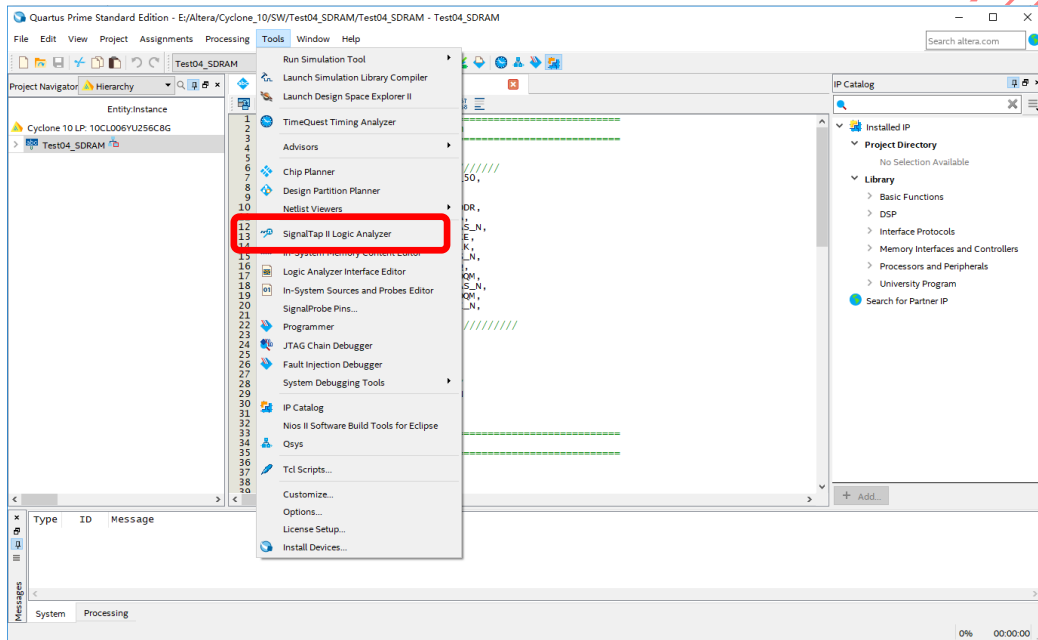


Figure 3-1. Open SignalTap II Logic Analyzer

Below image shows the UI of the SignalTap II:

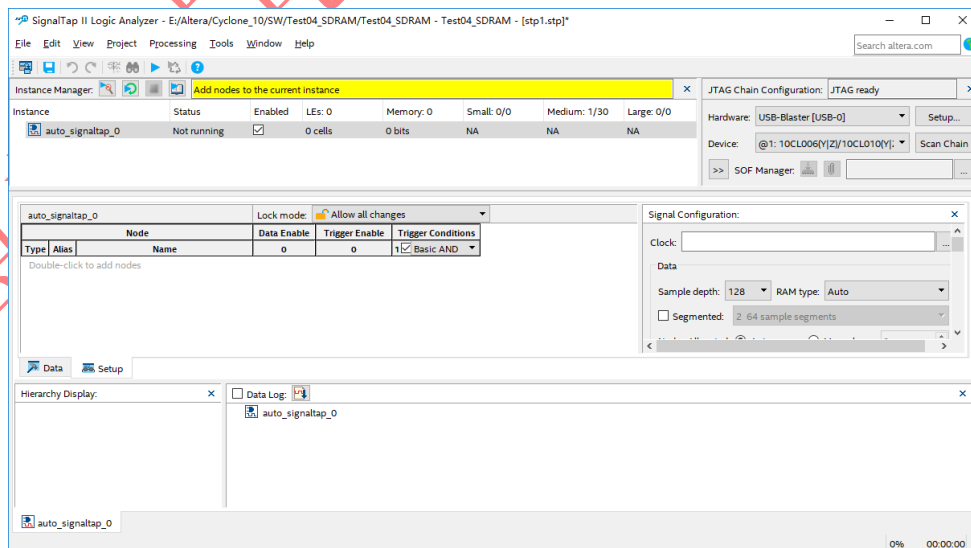


Figure 3-2. SignalTap II Logic Analyzer UI

Below image shows the settings of the Test04_SDRAM example project:

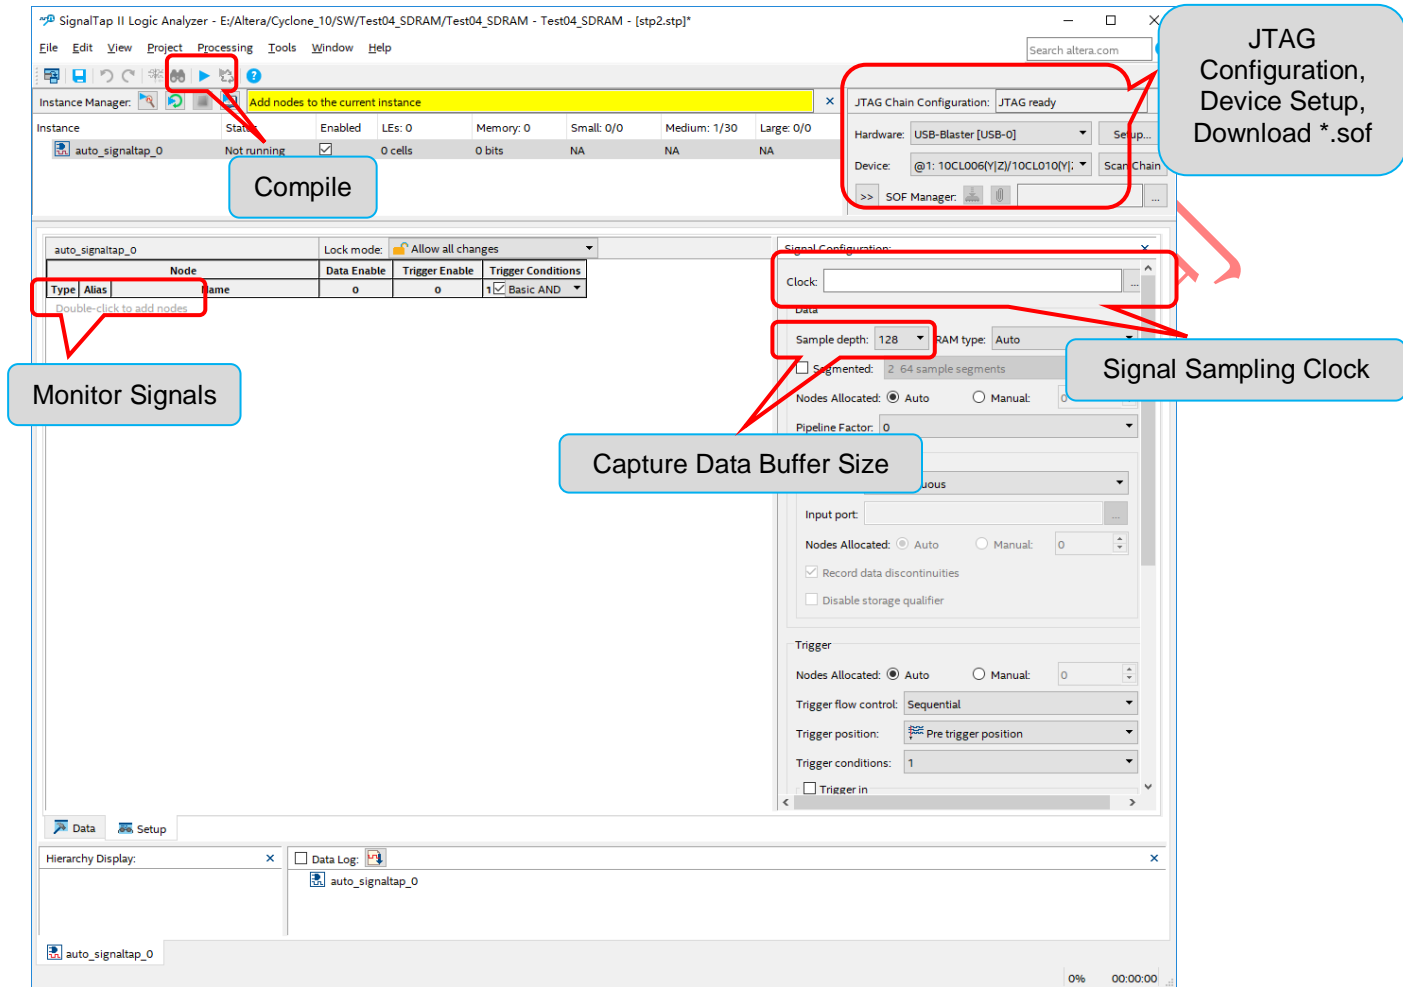


Figure 3-3. SignalTap II Logic Analyzer Main Window

Double click the **【Node】** column shown in the above image. Below window will pop up and user clicks the **【List】** button to add the signals need to be monitored:

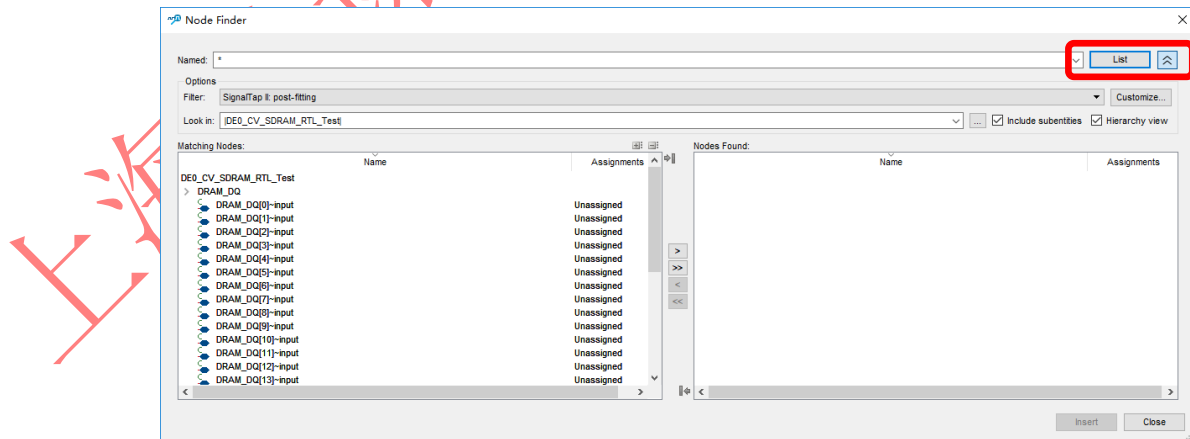


Figure 3-4. Set Capturing Signals

All the signals added in the above step will be displayed in the **【setup】** page. Please also select the signal sampling clock **【DRAM_CLK】** :

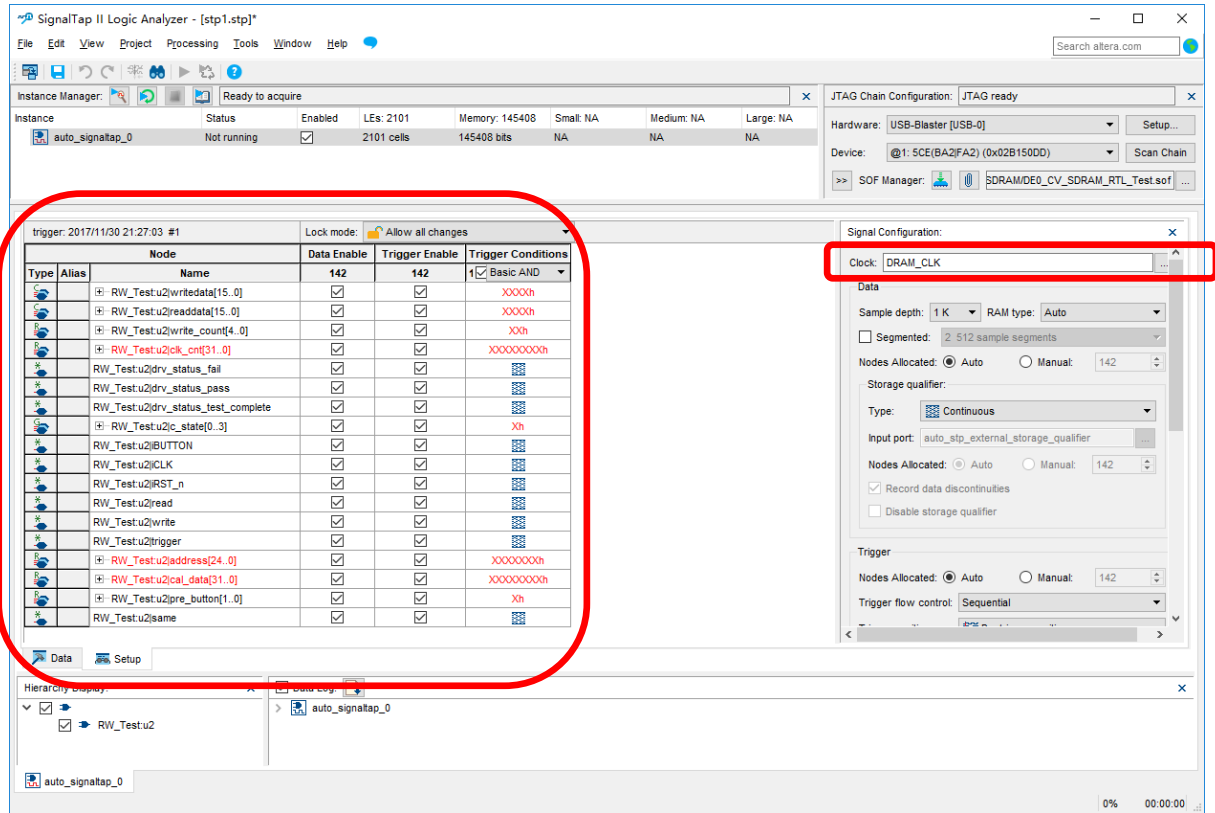


Figure 3-5. Sampling Signals and Clocks

User needs to click the **【Compile】** button shown in the below image to recompile the whole project. Then user may download the newly compiled *.sof into FPGA.

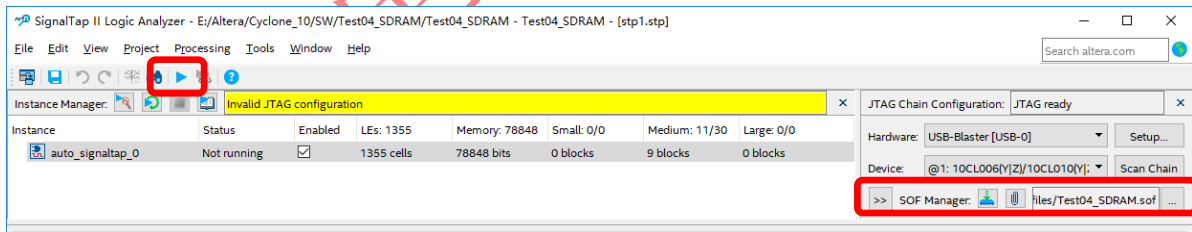


Figure 3-6. Compile the SignalTap II Project

User could click the button **【AutoRun Analysis】** or button **【Run Analysis】** to start the waveform capture:

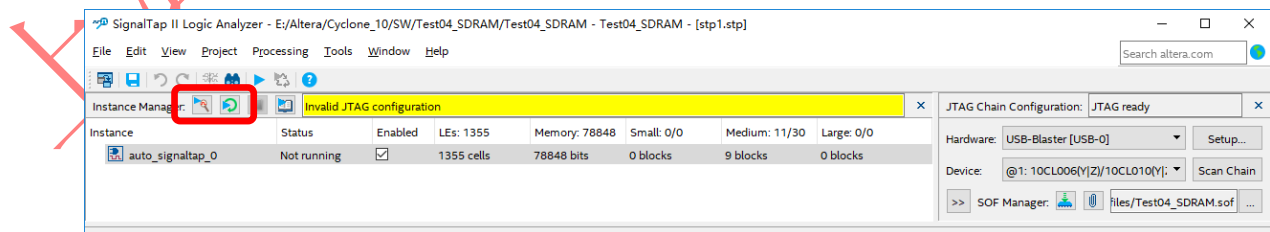


Figure 3-7. Start Capture

Below two images show the SDRAM data write and SDRAM data read:

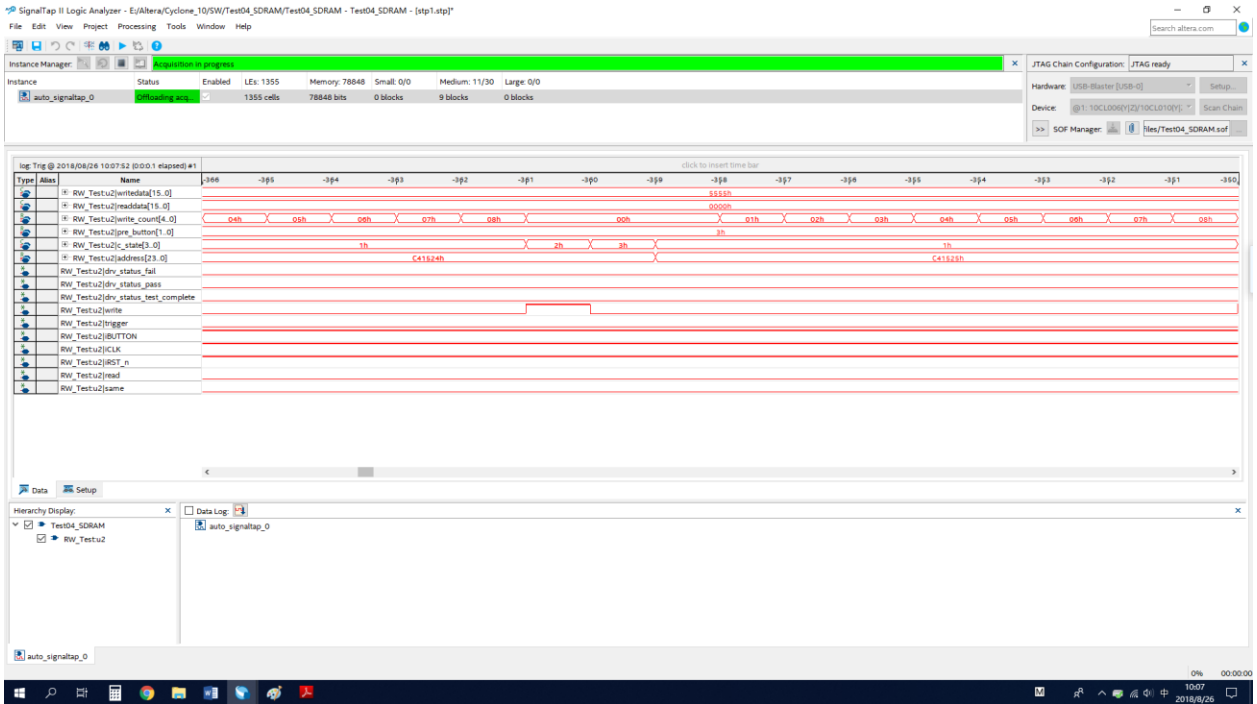


Figure 3-8. Waveform for Writing Data into SDRAM

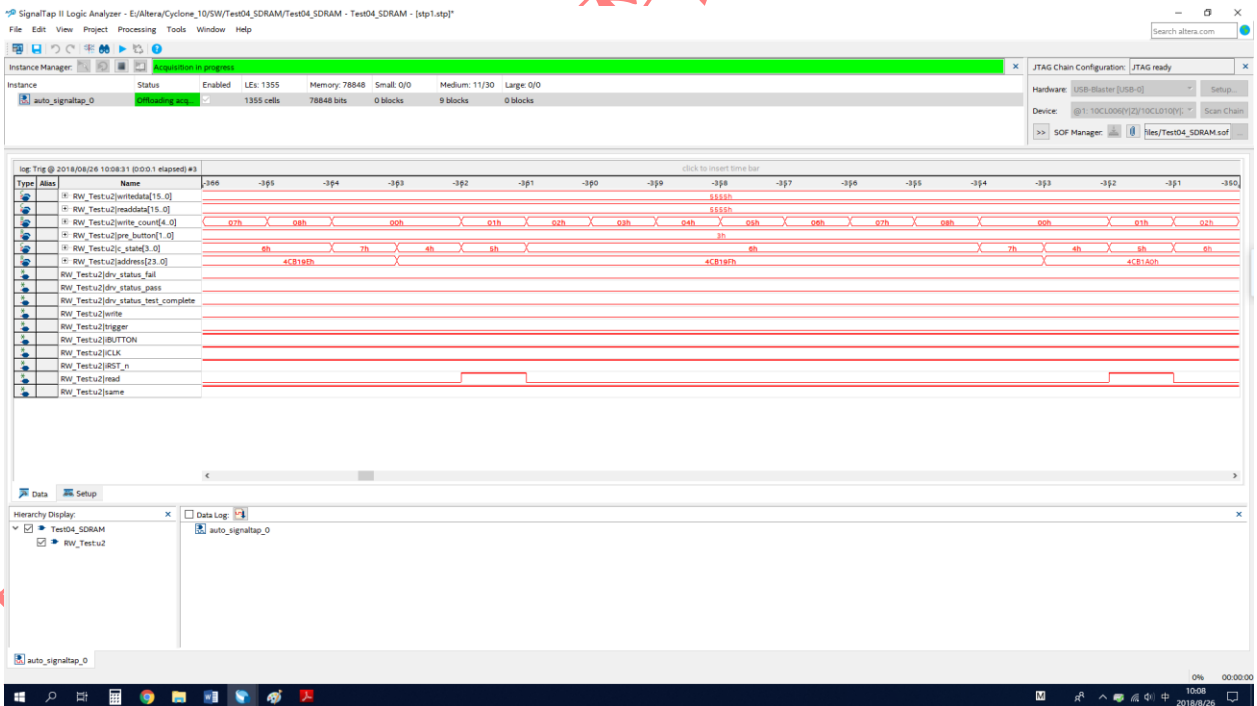


Figure 3-9. Waveform for Reading Data from SDRAM

4. Reference

- [1] 10cl006-sdram-v01.pdf
- [2] c10lp-51002.pdf
- [3] c10lp-51003.pdf
- [4] pcg-01021.pdf
- [5] cyclone-10-lp-product-table.pdf
- [6] an800.pdf
- [7] aib-01029.pdf

上海勤谋电子科技有限公司

5. Revision

Doc. Rev.	Date	Comments
0.1	30/12/2018	Initial Version.
1.0	11/01/2019	Formal Release.

上海勤谋电子科技有限公司