



SRP-F310/312
Command Manual

Rev. 1.00

<http://www.bixelon.com>

■ Contents

1. Notice.....3

2. Control Commands List in Alphanumeric Order.....4

 2-1 Command Description Items6

 2-2 Details of Control Commands7

1. Notice

This document contains proprietary information of BIXOLON Corporation and its affiliates. You may utilize the information solely for the purpose of facilitating authorized sales and service of, or developing software and similar products for authorized use with, BIXOLON products, provided that such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the prior written permission of BIXOLON Corporation. BIXOLON has no liability for loss or damage arising from or relating to your use of or reliance on the information in the document.

We at BIXOLON maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. In following, product specifications and/or user manual content may be changed without prior notice.

2. Control Commands List in Alphanumeric Order

No.	Command	Function
1	HT	Horizontal tab
2	LF	Print and line feed
3	FF	Form feed (in page mode)
4	CR	Print and carriage return
5	CAN	Cancel the print data in page mode
6	DLE EOT	Transmit real-time status
7	DLE DC4	Generate pulse at real-time
8	ESC FF	Print data in page mode
9	ESC SP	Set the character right space
10	ESC !	Set print mode
11	ESC \$	Set absolute print position
12	ESC %	Select/cancel user-defined character set
13	ESC &	Define user-defined character set
14	ESC *	Specify bit image mode
15	ESC -	Turn underline mode on/off
16	ESC 2	Select default line spacing
17	ESC 3	Set line spacing
18	ESC =	Select peripheral device
19	ESC ?	Cancel user-defined characters
20	ESC @	Initialize printer
21	ESC D	Set horizontal tab positions
22	ESC E	Turn emphasized mode on/off
23	ESC G	Turn double-strike mode on/off
24	ESC J	Print and feed paper
25	ESC L	Select page mode

No.	Command	Function
26	ESC M	Select character font/ MSR card read
27	ESC R	Specify an international character set
28	ESC S	Select standard mode
29	ESC T	Select print direction in page mode
30	ESC V	Turn 90° clockwise rotation mode on/off
31	ESC W	Set print area in page mode
32	ESC \	Set relative print position
33	ESC a	Set position alignment
34	ESC d	Print and feed n lines
35	ESC i	Partial cut
36	ESC m	Partial cut
37	ESC p	Generate pulse
38	ESC t	Select character code table
39	ESC v	Transmit paper sensor status
40	ESC {	Turn upside-down print mode on/off
41	FS p	Print NV bit image
42	FS q	Define NV bit image
43	GS !	Select character size
44	GS \$	Set absolute vertical print position in page mode
45	GS (A	Execute test print
46	GS (E	Set NV user memory area
47	GS (L GS 8 L	Select graphics data
48	GS (N	Select character color
49	GS (k	Specify and print the symbol
50	GS *	Define downloaded bit image

No.	Command	Function
51	GS /	Print downloaded bit image
52	GS :	Start/end macro definition
53	GS B	Turn white/black reverse print mode on/off
54	GS H	Select print position of HRI characters
55	GS I	Transmit printer ID
56	GS L	Set left margin
57	GS V	Select cut mode and executes a partial cut
58	GS W	Set print area width
59	GS ^	Execute macro
60	GS a	Enable/disable Last Status Back (LSB)
61	GS f	Select font for HRI characters
62	GS h	Set bar code height
63	GS k	Print bar code
64	GS r	Transmit status
65	GS v 0	Print raster bit image
66	GS w	Set bar code width
67	BS F W	Download customized font
68	BS F R	Read customized font
69	BS F C	Clear customized font
70	BS F I	Transmit customized font information
71	BS M	Select device font type
72	BS V	Select cut mode and executes a partial/full cut
73	BS W D	Define watermark image
74	BS W E	Select Watermark image
75	BS ^ T	Set Last Status Back(LSB) time

No.	Command	Function
76	BS DC1 % (fn = 1)	Select BIL(bixelon Interactive Linker) function
77	BS DC1 % (fn = 3)	Select reverse printing function

2-1 Command Description Items

Command

Function:	Command function outline
Code:	Command format expressed in ASCII, hexadecimal, and decimal codes
Range:	Argument value (Setting range) for the command
Default:	Initial argument value for the command
Description:	Detailed command function description
Remarks:	Additional information about using the command
Differences:	Variations depending on the printer model

2-2 Details of Control Commands

HT

Function : Horizontal tab

Code :

ASCII	HT
Hex	09
Decimal	9

Range: None

Default: None

Description : This command moves the print position to the next horizontal tab position. If the next horizontal tab position is not specified, this command will be void.

Remarks :

- The horizontal tab position is set by <ESC> D.
- With the underline mode turned on, the underline printing is not applied to the tab space created by this command.

Differences: None

LF**Function:** Print and line feed

Code:	ASCII	LF
	Hex	0A
	Decimal	10

Range: None**Default:** None

Description: This command prints the data in the print buffer and feeds one line based on the current set line spacing in standard mode.

Remarks: ■ In page mode, the printer does not perform actual printing, but moving only the print position to the next line.

Differences: None

FF

Function : Form feed (in page mode)

Code :

ASCII	FF
Hex	0C
Decimal	12

Range: None

Default: None

Description : This commands prints all data collected in the printer buffer In page mode. After completion of printing, the printer is returned to standard mode.if the printer receive next data then the printer buffer is evacuated.

Remarks :

- The printer is returned to standard mode after completion of printing.
- After being printed, all of the existing data in the printer buffer is not evacuated and the print position changes to the beginning of the line.
- This command works in page mode enabled by ESC L or FS L.
- This command is only effective in standard mode.
- If the paper is positioned at the print starting position, this command is ignored, not performing actual paper feeding operation.

Differences: None

CR

Function: Print and carriage return

Code:	ASCII	CR
	Hex	0D
	Decimal	13

Range: None

Default: None

Description: This command prints the data. With auto line feed enabled, it performs printing and one line feeding same as LF.

Remarks:

- Auto line feed is only enabled using the memory switch.
- Auto line feed is turned on by setting memory switch 5-4.

Differences: None

CAN

Function: Cancel the print data in page mode

Code:

ASCII	CAN
Hex	18
Decimal	24

Range: None

Default: None

Description: This command clears the receive buffer and print buffers in page mode.

Remarks: ■ This command is effective only in page mode that is set by ESC L.

Differences: None

DLE EOT

Function: Transmit real-time status

Code:	ASCII	DLE	EOT	n
	Hex	10	04	n
	Decimal	16	4	n

Range: $1 \leq n \leq 4$

Default: None

Description: This command enables commands to be operable in real-time.
This command transmits the printer-related status specified by n as follows:

n	Function
1	Transmit printer status
2	Transmit off-line status
3	Transmit error status
4	Transmit paper roll sensor status

■ Printer transmits the following status

n=1: Printer status

Bit	Binary	Hex	Decimal	Status
0	0	00	0	Not used. Fixed to Off
1	1	02	2	Not used. Fixed to On
2	0	00	0	Drawer kick-out connector pin 3 is LOW
	1	04	4	Drawer kick-out connector pin 3 is HIGH
3	0	00	0	Online
	1	08	8	Offline
4	1	10	16	Not used. Fixed to On
5	0	00	0	Not used. Fixed to Off

Bit	Binary	Hex	Decimal	Status
6	0	00	0	Not used. Fixed to Off
7	0	00	0	Not used. Fixed to Off

n=2: Off-line status

Bit	Off/On	Hex	Decimal	Status
0	Off	00	0	Fixed
1	On	02	2	Fixed
2	Off	00	0	Cover is closed
	On	04	4	Cover is open
3	Off	00	0	Paper is not being fed by using the paper FEED button
	On	08	8	Paper is being fed by the paper FEED button
4	On	10	16	Fixed
5	Off	00	0	No paper-end stop
	On	20	32	Printing is being stopped
6	Off	00	0	No error
	On	40	64	Error has occurred
7	Off	00	0	Fixed

n=3: Error status

Bit	Binary	Hex	Decimal	Status
0	0	00	0	Not used. Fixed to Off
1	1	02	2	Not used. Fixed to On
2	0	00	0	Not used. Fixed to Off
3	0	00	0	No autocutter error
	1	08	8	Autocutter error occurred
4	1	10	16	Not used. Fixed to On
5	0	00	0	Not used. Fixed to Off
6	0	00	0	Not used. Fixed to Off
7	0	00	0	Not used. Fixed to Off

n=4: paper sensor status

Bit	Binary	Hex	Decimal	Status
0	0	00	0	Not used. Fixed to Off
1	1	02	2	Not used. Fixed to On
2,3	00	00	0	Paper near end sensor: paper adequate
	11	0C	12	Paper near end sensor: paper near end
4	1	10	16	Not used. Fixed to On
5,6	00	00	0	Paper end sensor: paper present
	11	60	96	Paper end sensor: paper not present
7	0	00	0	Not used. Fixed to Off

- Remarks:**
- the status is transmitted to the host upon being requested that can check the printer operational condition with it and takes appropriate measures accordingly.
 - The real time command is stored into the receive buffer and executed with higher priority than other commands.

Differences: None

DLE DC4

Function: Generate pulse at real-time

Code:

ASCII	DLE	DC4	n	m	t
Hex	10	14	n	m	t
Decimal	16	20	n	m	t

Range: $n = 1, m=0,1, 1 \leq t \leq 8$

Default: None

Description: ■ Output the pulse specified by t to connector pin m as following:

m	Connector pin
0	Drawer kick-out connector pin 2
1	Drawer kick-out connector pin 5

■ This command generates the drive pulse to connector pin m with pulse width defined by t as following:

- Drawer kick-out connector pin 2 is selected with m=0 while pin 5 chosen for m=1.
- Pulse ON time is [t x100 ms] and OFF time [t x100 ms].

Remarks: ■ Upon receiving this command, the printer outputs the drive pulse to the specified connector pin.
 ■ The real time command is stored into the receive buffer and executed with higher priority than other commands.

Differences: None

ESC FF

Function : Print data in page mode

Code :

ASCII	ESC	FF
Hex	1B	0C
Decimal	27	12

Range: None

Default: None

Description : This command prints the data in the print buffer collectively in page mode.

Remarks :

- This command is effective only in page mode that is selected by ESC L.
- After printing, the data in the print buffer and setting values are not cleared.
- The printer can print the data in the print buffer repeatedly using this command.
- The printer returns to standard mode by ESC S or ESC @.

Differences: None

ESC SP

Function: Set the character right space

Code:

ASCII	ESC	SP	n
Hex	1B	20	n
Decimal	27	32	n

Range: $0 \leq n \leq 255$

Default: $n = 0$

Description: ■ This command sets the size of space to right of character.
 • Right space = $n \times$ [horizontal motion units].

Remarks: ■ In a double width mode, the right space will be doubled.
 ■ Horizontal motion unit varies depending the printer model.

Differences: Horizontal motion unit:

- **SRP-F310:**
0.141mm(1/180 inch)
- **SRP-F312:**
0.125mm(1/203 inch)

ESC !

Function: Set print mode

Code:

ASCII	ESC	!	n
Hex	1B	21	n
Decimal	27	33	n

Range: $0 \leq n \leq 255$

Default: n = 0

Description: This command selects print mode(s) with bits having following meanings.

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Character font A selected
	On	01	1	Character font B selected
1,2	Off	00	0	Reserved
3	Off	00	0	Emphasized mode not selected
	On	08	8	Emphasized mode selected
4	Off	00	0	Double-height mode not selected
	On	10	16	Double-height mode selected
5	Off	00	0	Double-width mode not selected
	On	20	32	Double-width mode selected
6	Off	00	0	Reserved
7	Off	00	0	Underline mode not selected

Remarks:

- As alternative to this command, ESC M, ESC E and ESC – can be used for the selection for character font, emphasized mode and underline mode respectively.
- The entire character print width is underlined, but the space skipped by HT is not.
- If both double width and double height are selected, the characters will be quadrupled.

Differences: None

ESC \$

Function: Set absolute print position

Code:

ASCII	ESC	\$	nL	nH
Hex	1B	24	nL	nH
Decimal	27	36	nL	nH

Range: $0 \leq (nL + nH \times 256) \leq 65535$ ($0 \leq nH \leq 255$, $0 \leq nL \leq 255$)

Default: None

Description: This command specifies the next print starting position in reference to the left edge of the print area. The printing start position is calculated using $(nL + nH \times 256) \times$ (vertical or horizontal motion units).

Remarks:

- Any setting values that go beyond the printable area is ignored.
- In standard mode, the horizontal motion unit is used for the calculation.
- In page mode, the horizontal motion unit is applied when printing start position is defined to the upper right or lower right of print area using ESC T, otherwise, the vertical motion unit is used.

Differences: Horizontal motion unit:

- **SRP-F310:** 0.141mm(1/180 inch)
- **SRP-F312:** 0.125mm(1/203 inch)

ESC %

Function: Select/cancel user-defined character set

Code:	ASCII	ESC	%	n
	Hex	1B	25	n
	Decimal	27	37	n

Range: $0 \leq n \leq 255$

Default: $n = 0$

Description: ■ This command selects/deselects user-defined character set that is downloaded by user. To make it valid, the least significant bit should be defined like following.

- When $n=0$, the user-defined character set is deselected.
- When $n=1$, the user-defined character set is selected.

Remarks: ■ The resident character set is enabled and used right after canceling the user defined character set.

Differences: None

ESC &

Function: Define user-defined character set

Code:

ASCII	ESC	&	y	c1	c2	[x1	d1 ... d(y × x1)]...	[xk	d1 ... d(y × xk)]
Hex	1B	26	y	c1	c2	[x1	d1 ... d(y × x1)]...	[xk	d1 ... d(y × xk)]
Decimal	27	38	y	c1	c2	[x1	d1 ... d(y × x1)]...	[xk	d1 ... d(y × xk)]

Range:

$y = 3$
 $32 \leq c1 \leq c2 \leq 126$
 $0 \leq x \leq 12$ (Font A)
 $0 \leq x \leq 9$ (Font B)
 $0 \leq d \leq 255$
 $k = c2 - c1 + 1$

Default: None

Description:

- This command defines user-defined characters for character codes in a designated range from the start character code, c1 to the end character code, c2.
 - y denotes the number of bytes in the vertical direction, x the number of dots in the horizontal direction, and d the dot data for the user-defined characters.

Remarks:

- Alphanumeric characters (20H (decimal 32) to 7EH (decimal 126)) are definable.
- Once user defined characters are defined, they remain available until they are redefined; ESC ? or ESC @ is executed; the printer is reset.
- The following shows the relationship between the definition data and printing result with downloaded character consisting of 9x7 dots.

d1	d3	d5	d7	d9	d11	d13	MSB
d2	d4	d6	d8	d10	d12	d14	LSB
							MSB
							LSB

Differences: None

ESC *

Function: Specify bit image mode

Code:	ASCII	ESC	*	m	nL	nH	d1...dk
	Hex	1B	2A	m	nL	nH	d1...dk
	Decimal	27	42	m	nL	nH	d1...dk

Range: m = 0, 1, 32, 33
 $0 \leq nL \leq 255$
 $0 \leq nH \leq 3$
 $0 \leq d \leq 255$
 $k = nL + nH \times 256$ [in case of m = 0, 1]
 $k = (nL + nH \times 256) \times 3$ [in case of m = 32, 33]

Default: None

Description: ■ This command specifies the bit image for the mode m as to the number of dots specified by nL and nH.
 • d specifies the bit image data with 1 for printed data and 0 for not printed.
 • k denotes the number of horizontal dots.

Remarks: ■ If the bit image data being entered is beyond the number of dots to be printed, the surplus will be discarded.
 ■ If the value of m is beyond the conditions, the subsequent data after m will be treated as normal data.

Differences: ■ SRP-F310:

DPI : Dots per Inch (25.4mm)

m	Mode	Number of dots in vertical direction	Vertical dot density (DPI)	Horizontal dot density (DPI)	Number of bytes (k)
0	8-dot single-density	8	60	90	$nL + nH \times 256$
1	8-dot double-density	8	60	180	$nL + nH \times 256$
32	24-dot single-density	24	180	90	$(nL + nH \times 256) \times 3$
33	24-dot double-density	24	180	180	$(nL + nH \times 256) \times 3$

■ SRP-F312:

DPI : Dots per Inch (25.4mm)

m	Mode	Number of dots in vertical direction	Vertical dot density (DPI)	Horizontal dot density (DPI)	Number of bytes (k)
0	8-dot single-density	8	203/3	203/2	$nL + nH \times 256$
1	8-dot double-density	8	203/3	203	$nL + nH \times 256$
32	24-dot single-density	24	203	203/2	$(nL + nH \times 256) \times 3$
33	24-dot double-density	24	203	203	$(nL + nH \times 256) \times 3$

ESC –

Function: Turn underline mode on/off

Code:	ASCII	ESC	-	n
	Hex	1B	2D	n
	Decimal	27	45	n

Range: $0 \leq n \leq 2, 48 \leq n \leq 50$

Default: n = 0

Description: ■ This command enables the print data following it to be printer out underlined.
 • The underline mode varied depending on the following values of n:

n	Function
0,48	Turns off underline mode
1,49	Turns on underline mode, set at 1-dot thick
2,50	Turns on underline mode, set at 2-dot thick

Remarks: ■ The spaces generated by horizontal tab are not underlined.
 ■ Using bit 7 of ESC !, the underline mode can be activated/deactivated as well.

Differences: None

ESC 2

Function: Select default line spacing

Code:

ASCII	ESC	2
Hex	1B	32
Decimal	27	50

Range: None

Default: None

Description: This command sets the default line spacing. The default line spacing is approximately 3.75 mm, which is equivalent to 30 dots.

Remarks:

- The line spacing can be set independently in standard mode and in page mode.
- The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: Default line spacing:

- **SRP-F310:** 4.23 mm (30 dots)
- **SRP-F312:** 3.75 mm (30 dots)

ESC 3

Function: Set line spacing

Code:	ASCII	ESC	3	n
	Hex	1B	33	n
	Decimal	27	51	n

Range: $0 \leq n \leq 255$

Default: Corresponding to the default line spacing defined by ESC 2

Description: ■ This command sets the line spacing using a following rule.
 • Line spacing = $n \times (\text{vertical or horizontal motion units})$

Remarks: ■ With standard mode selected, the vertical motion unit is used.
 ■ In page mode, the horizontal motion unit is applied when printing start position is defined to the upper right or lower right of print area using ESC T, otherwise, the vertical motion unit is used.
 ■ The line spacing is settable independently for each of standard and page modes.

Differences: Vertical or horizontal motion unit and maximum line spacing settable:

Model	Vertical unit	Horizontal unit	Max line spacing
SRP-F310	0.0705mm (1/360 inch)	0.141mm (1/180 inch)	17.98mm
SRP-F312	0.0625mm (1/406 inches)	0.125mm (1/203 inches)	15.937mm

ESC =

Function: Select peripheral device

Code:	ASCII	ESC	=	n
	Hex	1B	3D	n
	Decimal	27	61	n

Range: $1 \leq n \leq 3$

Default: None

Description: This command selects the device to which the host computer communicates according to n as follows:

n	Function
1	Enables the printer
2	Disables the printer
3	Enables the printer

Remarks:

- The printer discards all of the received data commands with the exception of ESC = and real-time commands while being disabled.
- The normal operation will be resumed by ESC @, power cycling or printer reset.
- If LSB is activated when the printer is disabled by this command, the status is transmitted to the host at a preset interval.

Differences: None

ESC ?

Function: Cancel user-defined characters

Code:	ASCII	ESC	?	n
	Hex	1B	3F	n
	Decimal	27	63	n

Range: $32 \leq n \leq 126$

Default: None

Description: This command removes user-defined character specified by character code n.

Remarks:

- In place of the deleted user-defined character, the corresponding resident character is printed.
- The user-defined characters for each font can be deleted independently.

Differences: None

ESC @

Function: Initialize printer

Code:

ASCII	ESC	@
Hex	1B	40
Decimal	27	64

Range: None

Default: None

Description: This command cancels conditions previously set and initializes the printer to the conditions having existed at power on.

Remarks:

- The data in the printer buffer is cleared.
- The settings of DIP switch are not re-read.
- The data in the receive buffer is not discarded.
- All of the settings such as print mode and line feed are cleared.
- NV graphics and NV user memory are not cleared.
- In page mode, this command removes the data in print areas, restores the initial settings and returns to standard mode.

Differences: None

ESC D

Function: Set horizontal tab position

Code:	ASCII	ESC	D	n1...nk	NUL
	Hex	1B	44	n1...nk	00
	Decimal	27	68	n1...nk	0

Range: $1 \leq n \leq 255$, $0 \leq k \leq 32$

Default: $n = 8, 16, 24, 32, 40, \dots, 232, 240, 248$

Description:

- This command sets the horizontal tab position.
 - n defines the number of columns from the beginning of the line to the horizontal tab setting.
 - k denotes the number of horizontal tab positions to be set.
 - The horizontal tab position is stored as a value of [character width x n] measured from the beginning of the line.

Remarks:

- The data [n]k signifying the set position is transmitted in the ascending order and ends with a NUL code.
- ESC D NUL cancels all horizontal tab positions.
- Tab position is set at the value of [character width x n] from the beginning of the line.
- The character width includes the space to the right of the character, and it will be twice the normal character when the double width characters are selected.
- If the data [n]k is equal to or smaller than the preceding data [n]k-1, the horizontal tab setting has been completed.
- Up to 32 horizontal tabs can be set, the data exceeding this limit is processed as normal ones.
- Even if the character width is changed after setting the horizontal tab positions, the horizontal tab positions remain unchanged.

Differences: None

ESC E

Function: Turn emphasized mode on / off

Code:	ASCII	ESC	E	n
	Hex	1B	45	n
	Decimal	27	69	n

Range: $0 \leq n \leq 255$

Default: $n = 0$

Description: ■ This command turns emphasized mode on or off by toggling the least significant bit of n like following.

- When the LSB of n is 0, emphasized mode is turned off.
- When the LSB of n is 1, emphasized mode is turned on.

Remarks: ■ The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

ESC G

Function: Turn double-strike mode on/off

Code:	ASCII	ESC	G	n
	Hex	1B	47	n
	Decimal	27	71	n

Range: $0 \leq n \leq 255$

Default: $n = 0$

Description: ■ This command turns double-strike mode on or off by toggling the least significant bit of n like following.

- When the LSB of n is 0, emphasized mode is turned off.
- When the LSB of n is 1, emphasized mode is turned on.

Remarks: ■ The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

ESC J

Function: Print and feed paper

Code:

ASCII	ESC	J	n
Hex	1B	4A	n
Decimal	27	74	n

Range: $0 \leq n \leq 255$

Default: None

Description: This command prints the data in the print buffer and feeds the paper [n X vertical motion unit].

Remarks:

- The maximum feed amount available varies depending on the printer model.
- With standard mode selected, the vertical motion unit is used.
- In page mode, the horizontal motion unit is applied when printing start position is defined to the upper right or lower right of print area using ESC T, otherwise, the vertical motion unit is used.
- When used in page mode, this command moves only the print position, not executing actual printing.

Differences: Vertical motion unit and maximum feed amount:

Model	Vertical unit	Max feed amount
SRP-F310	0.0705mm (1/360 inch)	17.98mm
SRP-F312	0.0625mm (1/406 inches)	15.937mm

ESC L

Function: Select page mode

Code:

ASCII	ESC	L
Hex	1B	4C
Decimal	27	76

Range: None

Default: None

Description: This command switches from standard mode to page mode.

Remarks:

- For printing in page mode, ESC T defines the print direction and starting position that is within the print area specified by ESC W.
- The conditions by the following commands are defined independently in standard mode and page mode.
 - ESC SP, ESC 2, and ESC 3
- The following commands are not activated in page mode.
 - ESC L, FS q, GS (A, GS (E, GS T
- The following commands are not effective in page mode. The conditions set by these commands in page mode are available when the printer returns to standard mode.
 - ESC V, ESC a, ESC {, GS L, and GS W
- The printer resumes standard mode by the use of ESC S, FF, and ESC@.
- In page mode, the command, FF, prompts printing the data in the printer buffer collectively. LF, CR, ESC J, and ESC d just move the print position, not performing actual printing.

Differences: None

ESC M

Function: Select character font

Code:

ASCII	ESC	M	n
Hex	1B	4D	n
Decimal	27	77	n

Range: n = 0, 1, 48, 49

Default: n = 0

Description: This command selects only-byte character fonts using n as following.

n	Function
0, 48	Character font A selected
1, 49	Character font B selected

Remarks:

- The printer model has its own configuration of Font A and B.
- The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

ESC R

Function: Specify international character set

Code:	ASCII	ESC	R	n
	Hex	1B	52	n
	Decimal	27	82	n

Range: $0 \leq n \leq 13$

Default: n = 0

Description: This command specifies international characters according to n values.

n	Character set	n	Character set
0	U.S.A	7	Spain I
1	France	9	Norway
2	Germany	10	Denmark II
3	U.K	11	Spain II
4	Denmark I	12	Latin America
5	Sweden	13	Korea
6	Italy		

Remarks: ■ The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

ESC S

Function: Select standard mode

Code:	ASCII	ESC	S
	Hex	1B	53
	Decimal	27	83

Range: None

Default: None

Description: This command enables standard mode.

Remarks:

- The data in the printer buffer is cleared and the setting by ESC W returns to the default.
- The conditions by the following commands are defined independently in standard mode and page mode.
 - ESC SP, ESC 2, and ESC 3
- In standard mode, CAN, ESC FF and GS \$ are ignored.

Differences: None

ESC T

Function: Select print direction in page mode

Code:	ASCII	ESC	T	n
	Hex	1B	54	n
	Decimal	27	84	n

Range: $0 \leq n \leq 3$, $48 \leq n \leq 51$

Default: $n = 0$

Description: This command selects the print direction and starting position in page mode.

n	Print Direction	Starting Position
0,48	Left right	Upper left
1,49	Bottom to top	Lower left
2,50	Right left	Lower right
3,51	Top bottom	Upper right

- Remarks:**
- The print direction set by this command is not effective in standard mode.
 - If this command is processed in standard mode, the setting by this command is effective when the printer changes to page mode.
 - Depending on the print starting position set by this command, the horizontal motion unit or vertical motion unit is used for the following commands.
 - When the starting position is the upper left or lower right of the print area; ESC SP, ESC \$, ESC \ use the horizontal motion unit and ESC 3, ESC J, GS \$ the vertical motion unit.
 - When the starting position is the upper right or lower left of the print area; ; ESC SP, ESC \$, ESC \ use the vertical motion unit and ESC 3, ESC J, GS \$ the horizontal motion unit.
 - The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

ESC V

Function: Turn 90°clockwise rotation mode on/off

Code:

ASCII	ESC	V	n
Hex	1B	56	n
Decimal	27	86	n

Range: $0 \leq n \leq 2$, $48 \leq n \leq 50$

Default: $n = 0$

Description:

- This command turns 90° clockwise rotation mode on/off in standard mode according to the value of n as following
 - When the value of n is equal to 0 or 48, 90°clockwise rotation mode is turned off.
 - When the value of n is equal to 1, 2, 48, or 50, 90°clockwise rotation mode is turned on.

Remarks:

- In underline mode, the underline printing for 90° clockwise rotated characters does not work, and the relationship between vertical and horizontal directions is reversed.
- The 90° clockwise rotation mode is not effective in page mode.
- If set in page mode, the 90° clockwise rotation mode has effect after the printer returns to standard mode.
- The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

ESC W

Function: Set print area in page mode

Code:	ASCII	ESC	W	xL	xH	yL	yH	dxL	dxH	dyL	dyH
	Hex	1B	57	xL	xH	yL	yH	dxL	dxH	dyL	dyH
	Decimal	27	87	xL	xH	yL	yH	dxL	dxH	dyL	dyH

Range: $0 \leq (xL + xH \times 256) \leq 65535$ ($0 \leq xL \leq 255$, $0 \leq xH \leq 255$)
 $0 \leq (yL + yH \times 256) \leq 65535$ ($0 \leq yL \leq 255$, $0 \leq yH \leq 255$)
 $1 \leq (dxL + dxH \times 256) \leq 65535$ ($0 \leq dxL \leq 255$, $0 \leq dxH \leq 255$)
 $1 \leq (dyL + dyH \times 256) \leq 65535$ ($0 \leq dyL \leq 255$, $0 \leq dyH \leq 255$)

Default: ■ **SRP-F310:**

- When a paper width of 80mm{3.15"} is selected:
 $(xL + xH \times 256) = 0$ ($xL=0$, $xH=0$)
 $(yL + yH \times 256) = 0$ ($yL=0$, $yH=0$)
 $(dxL + dxH \times 256) = 512$ ($dxL=0$, $dxH=2$)
 $(dyL + dyH \times 256) = 1662$ ($dyL=126$, $dyH=6$)

■ **SRP-F312:**

- When a paper width of 80mm{3.15"} is selected:
 $(xL + xH \times 256) = 0$ ($xL=0$, $xH=0$)
 $(yL + yH \times 256) = 0$ ($yL=0$, $yH=0$)
 $(dxL + dxH \times 256) = 576$ ($dxL=64$, $dxH=2$)
 $(dyL + dyH \times 256) = 1662$ ($dyL=126$, $dyH=6$)

Description: ■ This command set the position and the size of the printing area in page mode as following.

- Horizontal starting position = $[(xL + xH \times 256) \times (\text{horizontal motion units})]$
- Vertical starting position = $[(yL + yH \times 256) \times (\text{vertical motion units})]$
- Horizontal printing area width = $[(dxL + dxH \times 256) \times (\text{horizontal motion units})]$
- Vertical printing area width = $[(dyL + dyH \times 256) \times (\text{vertical motion units})]$

Remarks:

- The horizontal and vertical starting positions are out of the printable area, this command is canceled and the following data is processed as normal data.
- If (Horizontal starting position + Horizontal printing area width) is beyond the printable area, the Horizontal printing area width is set to (Horizontal printing area - Horizontal starting position).
- If (Vertical starting position + Vertical printing area width) is beyond the printable area, the Vertical printing area width is set to (Vertical printing area - Vertical starting position).
- This command is not effective in standard mode. If this command is processed in standard mode, the setting by this command is effective when the printer returns to page mode.
- The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences:

The maximum printable area(Max horizontal printable area, Max vertical printable area):

Model	Max horizontal printable area	Max vertical printable area
SRP-F310	72.2mm(512dots)	234.3mm(1662dots)
SRP-F312	72mm(576dots)	207.75mm(1662dots)

ESC \

Function: Set relative print position

Code:	ASCII	ESC	\	nL	nH
	Hex	1B	5C	nL	nH
	Decimal	27	92	nL	nH

Range: $0 \leq (nL + nH \times 256) \leq 65535$ ($0 \leq nL \leq 255$, $0 \leq nH \leq 255$)

Default: None

Description:

- This command sets the print starting position based on the current position to $[(nL + nH \times 256) \times \text{horizontal or vertical motion unit}]$.
 - The print starting position is moved to $(nL + nH \times 256)$ in the right direction based on the current position.

Remarks:

- The printer ignores any setting that exceeds the print area.
- When the print area has been exceeded, this command is ignored.
- With standard mode selected, the vertical motion unit is used.
- In page mode, the horizontal motion unit is applied when printing start position is defined to the upper right or lower right of print area using ESC T, otherwise, the vertical motion unit is used.
- Even if the underline mode is turned on, the space skipped by this command is not printed underlined.

Differences: None

ESC a

Function: Set position alignment

Code:

ASCII	ESC	a	n
Hex	1B	61	n
Decimal	27	97	n

Range: $0 \leq n \leq 2$, $48 \leq n \leq 50$

Default: $n = 0$

Description: This command specifies position alignment for all data in one line in standard mode, using n as follows:

n	Alignment
0, 48	Left alignment
1, 49	Center alignment
2, 50	Right alignment

Remarks:

- This command is not effective in page mode. If this command is processed in page mode, the setting by this command becomes effective when the printer returns to standard mode.
- The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

ESC d

Function: Print and feed n lines

Code:

ASCII	ESC	d	n
Hex	1B	64	n
Decimal	27	100	n

Range: $0 \leq n \leq 255$

Default: None

Description: This command feeds the paper by n lines after printing the data in the print buffer.

Remarks:

- The per-line paper feed amount is based on the value set by the line spacing related commands, ESC 2 and ESC 3.
- In page mode, this command moves only the print position, not performing actual print.
- If the feed amount set is beyond the maximum feed amount, the feed amount will be set to the maximum feed amount automatically.

Differences: None

ESC i**Function:** Partial cut**Code:**

ASCII	ESC	i
Hex	1B	69
Decimal	27	105

Range: None**Default:** None**Description:** This command executes a partial cut of the paper with one point left uncut.**Remarks:** ■ The same partial cut as this command is executed using ESC m and GS V.**Differences:** ■ This command is effective for the printer equipped with an autocutter.
■ Autocutter operation should be enabled by setting the autocutter control DIP switch.
■ If the autocutter control DIP switch of the printer not equipped with autocutter is set, the printer does not operate, displaying the error signal by LED.

ESC m**Function:** Partial cut**Code:**

ASCII	ESC	m
Hex	1B	6D
Decimal	27	109

Range: None**Default:** None**Description:** This command executes a partial cut of the paper with one point left uncut.**Remarks:** ■ The same partial cut as this command is executed using ESC i and GS V.

Differences:

- This command is effective for the printer equipped with an autocutter.
- Autocutter operation should be enabled by setting the autocutter control DIP switch.
- If the autocutter control DIP switch of the printer not equipped with autocutter is set, the printer does not operate, displaying the error signal by LED.

ESC p

Function: Generate pulse

Code:

ASCII	ESC	p	m	t1	t2
Hex	1B	70	m	t1	t2
Decimal	27	112	m	t1	t2

Range: m = 0, 1, 48, 49
 $0 \leq t1 \leq 255, 0 \leq t2 \leq 255$

Default: None

Description: This command outputs the signals specified with t1 and t2 to the connector pins defined by m.

m	Connector pin
0, 48	Drawer kick-out connector pin 2
1, 49	Drawer kick-out connector pin 5

Remarks: ■ The ON time is [t1 x 2ms], and the OFF time is as [t2 x 2ms].
 • If t2 is smaller than t1, OFF time is set to [t1 x 2ms].

Differences: None

ESC t

Function: Select character code table

Code:

ASCII	ESC	t	n
Hex	1B	74	n
Decimal	27	116	n

Range: $0 \leq n \leq 5$, $16 \leq n \leq 19$, $21 \leq n \leq 31$, $33 \leq n \leq 41$, $n=255$

Default: For model not supporting Thai character: $n=0$
For model supporting Thai character support : $n = 20$

Description: This command specifies code page according to the value of n as follows:

n	Code page
0	Page 0 437 (USA, Standard Europe)
1	Page 1 Katakana
2	Page 2 850 (Multilingual)
3	Page 3 860 (Portuguese)
4	Page 4 863 (Canadian-French)
5	Page 5 865 (Nordic)
16	Page 16 1252 (Latin I)
17	Page 17 866 (Cyrillic #2)
18	Page 18 852 (Latin 2)
19	Page 19 858 (Euro)
21	Page 21 862 (Hebrew DOS code)
22	Page 22 864 (Arabic)
23	Page 23 Thai42
24	Page 24 1253 (Greek)
25	Page 25 1254 (Turkish)

n	Code page
26	Page 26 1257 (Baltic)
27	Page 27 Farsi
28	Page 28 1251 (Cyrillic)
29	Page 29 737 (Greek)
30	Page 30 775 (Baltic)
31	Page 31 Thai14
33	Page 33 1255 (Hebrew New code)
34	Page 34 Thai 11
35	Page 35 Thai 18
36	Page 36 855 (Cyrillic)
37	Page 37 857 (Turkish)
38	Page 38 928 (Greek)
39	Page 39 Thai 16
40	Page 40 1256 (Arabic)
41	Page 41 1258 (Vietnam)
42	Page 42 Khmer (Cambodia)
47	Page 47 1250 (Czech)
255	User Code Page (Space)

Remarks : ■ The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

ESC v

Function : Transmit paper sensor status

Code :

ASCII	ESC	v
Hex	1B	76
Decimal	27	118

Range: None

Default: None

Description :

- This command transmits a byte of data specifying the paper sensor status.
- The status of paper near end and paper end sensors is sent to the host as follows:
 - When paper near end is detected, 0x03 is transmitted.
 - When paper end is detected, 0xC is transmitted.

Remarks :

- The paper sensor status can be transmitted using GS r.
- The near end sensor is optional while paper end sensor required.
- If the printer is not equipped with a near end sensor, the paper near end sensor is considered as normal condition.

Differences: None

ESC {

Function : Turns upside-down printing mode on/off

Code :

ASCII	ESC	{	n
Hex	1B	7B	n
Decimal	27	123	n

Range: $0 \leq n \leq 255$

Default: n = 0

Description : This command selects/deselects upside-down printing mode according to the least significant bit as follows.

LSB	Upside-down mode
0	Turned off
1	Turned on

Remarks :

- This command is valid only when entered at the beginning of the line.
- The upside-down print mode has no effect in page mode. If this command is processed in page mode, upside-down printing mode is enabled when the printer returns to standard mode.
- 180 rotated characters are printed from right to left in upside-down print mode.
- The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Example

Normal	Upside- down Mode
ABCDEF	FEDCBA

Differences: None

FS p

Function : Print NV bit image

Code :

ASCII	FS	p	n	m
Hex	1C	70	n	m
Decimal	28	112	n	m

Range: $1 \leq n \leq 255$
 $0 \leq m \leq 3, 48 \leq m \leq 51$

Default: None

Description : This command prints NV bit image n using the mode specified by m as follows:

m	Mode
0, 48	Normal
1, 49	Double-width
2, 50	Double-height
3, 51	Quadruple

Remarks :

- GS (L and GS (8 can be used for printing NV bit image.
- The NV bit image is defined by FS q.
- n is assigned to each NV bit image to be stored in download order by FS q.
- This command has no effect with NV bit image not defined in advance.
- In page mode, the NV bit image is saved without being printed.
- The printer does not print the NV bit image that is beyond one line of print area.
- When using unidirectional print mode, there will be no vertical misalignment between the top and bottom parts of the printed pattern.

Differences: ■ SRP-F310:

DPI : Dots per Inch (25.4mm)

Mode	Vertical Dot Density (DPI)	Horizontal Dot Density (DPI)
Normal	180	180
Double-width	180	90
Double-height	90	180
Quadruple	90	90

■ SRP-F312:

DPI : Dots per Inch (25.4mm)

Mode	Vertical Dot Density (DPI)	Horizontal Dot Density (DPI)
Normal	203	203
Double-width	203	203/2
Double-height	203/2	203
Quadruple	203/2	203/2

FS q

Function: Define NV bit image

Code:

ASCII	FS	q	n	[xL xH yL d1...dk]1... [xL xH yL d1...dk]n
Hex	1C	71	n	[xL xH yL d1...dk]1... [xL xH yL d1...dk]n
Decimal	28	113	n	[xL xH yL d1...dk]1... [xL xH yL d1...dk]n

Range:

$1 \leq n \leq 255$
 $1 \leq (xL + xH \times 256) \leq 1023$ ($0 \leq xL \leq 255$, $0 \leq xH \leq 3$)
 $1 \leq (yL + yH \times 256) \leq 288$ ($0 \leq yL \leq 255$, $yH=0,1$)
 $0 \leq d \leq 255$
 $k = (xL + xH \times 256) \times (yL + yH \times 256) \times 8$

Default: None

Description:

- This command defines the NV bit image in the NV memory.
 - n denotes the number of the NV being defined.
 - (xL, xH) and (yL, yH) set the number of dots in the horizontal and vertical directions to $[(xL + xH \times 256) \times 8]$ and $[(yL + yH \times 256) \times 8]$ respectively for the NV bit image.

Remarks:

- GS (L and GS (8 can be used for defining NV bit image.
- When this command is entered, all NV bit images previously defined are removed from the NV memory.
- After completion of this command, the printer executes a software reset to restore the settings as when turned on.
- The NV bit image is printed by FS p.

- During the execution of this command, paper feed button, LSB and real time functions will not operate.

- Bit image data and print result are as follows:

d1	dY+1	...	.	MSB
			.	LSB
			.	MSB
d2	dY+2	...	dk-2	LSB
.	.	...	dk-1	MSB
.	.			LSB
.	.			MSB
dY	dY x 2	...	dk	LSB

- NV memory is divided into 2 areas for mono and 2-color graphics. The capacity of each NV memory area is 256KB.

Differences: None

GS !**Function:** Select character size**Code:**

ASCII	GS	!	n
Hex	1D	21	n
Decimal	29	33	n

Range: $0 \leq n \leq 255$
 $(1 \leq \text{Vertical enlargement} \leq 8, 1 \leq \text{Horizontal enlargement} \leq 8)$

Default: $n = 0$ **Description:** ■ This command selects the character height and width using bits 0 to 3, and bits 4 to 7 respectively as follows:

Bit	Function	Setting
0	Specifies the number of times normal font size in the vertical direction	Refer to Table 2 [Enlarged in vertical direction]
1		
2		
3		
4	Specifies the number of times normal font size in the horizontal direction	Refer to Table 1 [Enlarged in horizontal direction]
5		
6		
7		

- Table 1 [Enlarged in horizontal direction]

Hex	Decimal	Enlargement
00	0	1 time (standard)
10	16	2 times
20	32	3 times
30	48	4 times
40	64	5 times
50	80	6 times
60	96	7 times
70	112	8 times

- Table 2 [Enlarged in vertical direction]

Hex	Decimal	Enlargement
00	0	1 time (standard)
01	1	2 times
02	2	3 times
03	3	4 times
04	4	5 times
05	5	6 times
06	6	7 times
07	7	8 times

Remarks:

- The character size set by this command is valid for alphanumeric, user-defined characters, multi-byte code characters such as Chinese, Japanese, and Korean.
- Double width and double height modes can be set by ESC !.
- Multi-byte code characters are specified only by this command.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences: None

GS \$

Function: Set absolute vertical print position in page mode

Code:	ASCII	GS	\$	nL	nH
	Hex	1D	24	nL	nH
	Decimal	29	36	nL	nH

Range: $0 \leq (nL + nH \times 256) \leq 65535$ ($0 \leq nL \leq 255$, $0 \leq nH \leq 255$)

Default: None

Description: This command sets the absolute vertical print starting position to $[(nL + nH \times 256) \times (\text{vertical or horizontal motion unit})]$.

Remarks:

- This command is activated only in page mode and ignored in standard mode.
- Either vertical or horizontal motion unit is used according to the print direction set by ESC T as follows:
 - With the starting position of the upper left or lower right on the print area, the vertical motion unit is used.
 - In other cases, the horizontal motion unit is used.
- The configuration beyond the print area set by ESC W is ignored.

Differences: None

GS (A

Function: Execute test print

Code:	ASCII	GS	(	A	pL	pH	n	m
	Hex	1D	28	41	pL	pH	n	m
	Decimal	29	40	65	pL	pH	n	m

Range: $(pL + pH \times 256) = 2$ ($pL=2, pH=0$)
 $0 \leq n \leq 2, 48 \leq n \leq 50$
 $1 \leq m \leq 2, 49 \leq m \leq 50$

Default: None

Description: ■ This command prints a specified pattern for testing on a roll paper.
 • Roll paper is selected with n specified as follows:

n	Paper type
0, 48	Roll paper
1, 49	
2, 50	

• Different kinds of test patterns are selected according to m as follows:

m	Test pattern
1, 49	Hexadecimal dump mode
2, 50	Self-test printing(configuration+default codepage)
3, 51	Not operated

Remarks: ■ The printer cancels a macro definition in progress If this command is processed. The macro becomes invalid.
 ■ After completion of this command, a software reset is executed automatically to restore the printer status set during power cycling.
 ■ All of the data transmitted from the host to the printer is printed and identified in hexadecimal dump mode.
 ■ The real time command and LSB operations are not executed during the printing of printer configuration ($m=2, 50$).

Differences: None

GS (E

Function: Set NV user memory area

Code:	ASCII	GS	(	E	pL	pH	fn	[parameter]
	Hex	1D	28	45	pL	pH	fn	[parameter]
	Decimal	29	40	69	pL	pH	fn	[parameter]

Range: None

Default: None

Description: This command stores the customized values to the NV user memory area and uses them for the printer operation. The table below explains the functions available in this command. Executes commands related to the user setting mode by specifying the function code fn.

fn	Format	No.	Function
1	GS (E pL pH fn d1 d2	1	Start the user setting mode
2	GS (E pL pH fn d1 d2 d3	2	End the user setting mode (Performs a soft reset)
3	GS (E pL pH fn [a1 b18...b11]... [ak bk8...bk1]	3	Set value(s) for the memory switch
4	GS (E pL pH fn a	4	Transmit the settings of the memory switch to the host

Remarks:

- pL, pH is used to set the number of bytes following pH to (pL + pH x 256).
- The change in the items of the NV user memory is available only after entering the user setting mode.
- After completing the user setting mode (Function 2), the printer performs software reset to restore the initial settings in effect at power on. Receive and print buffers are cleared as well.
- Since frequent write operation by this command may deteriorate the performance of the NV memory, it is recommended to write to NV memory when the significant change in the setting is required.
- While processing this command, the printer remains busy. Therefore the data transmission by the host is not available. The real time commands and LSB operations are not processed.

Differences: None

<Function 1> GS (E pL pH fn d1 d2 (fn=1)**Code:**

ASCII	GS	(	E	pL	pH	fn	d1	d2
Hex	1D	28	45	pL	pH	fn	d1	d2
Decimal	29	40	69	pL	pH	fn	d1	d2

Range:

(pL + pH x 256) = 1 (pL=1, pH=0)
 fn=1
 d1=73, d2=78

Default:

None

Description:

This command starts the user setting mode, enabling the printer to notify that the mode has changed as follows:
 [Mode change feedback]

	Hexadecimal	Decimal	Number of Data
Header	37H	55	1 byte
Flag	20H	32	1 byte
NUL	00H	0	1 byte

Remarks:

- This command is effective only in standard mode, not in page mode.
- Upon entering the user mode setting mode by this command, the printer transmits “mode change feedback” to the host.
- The user setting mode should be enabled prior to processing <Function 2> through 12. Otherwise, those functions are ignored.
- After confirming “mode change feedback”, it is recommended to send the command to reconfigure the NV user memory.

Differences:

None

<Function 2> GS (E pL pH fn d1 d2 d3 (fn=2)**Code:**

ASCII	GS	(	E	pL	pH	fn	d1	d2	d3
Hex	1D	28	45	pL	pH	fn	d1	d2	d3
Decimal	29	40	69	pL	pH	fn	d1	d2	d3

Range:

(pL + pH x 256) = 1 (pL=1, pH=0)
 fn=2
 d1=79, d2=85, d3=84

Default:

None

Description:

This command terminates the user setting mode and performs a software reset.

Remarks:

- This command activates setting items set in the user setting mode.
- All the setting items will be effective only after performing this command.
- After executing a software reset, the printer resumes the setting in effect at power on.

Differences:

None

<Function 3> GS (E pL pH fn [a1 b18...b11]...[ak bk8...bk1] (fn=3)**Code:**

ASCII	GS	(	E	pL	fn	[a1 b18...b11]... [ak bk8...bk1]
Hex	1D	28	45	pL	fn	[a1 b18...b11]... [ak bk8...bk1]
Decimal	29	40	69	pL	fn	[a1 b18...b11]... [ak bk8...bk1]

Range:
 $10 \leq (pL + pH \times 256) \leq 65535$

fn=3

a=1,2,3,4,5,6,11,12

b=48, 49, 50

Default:

All switches are set to Off(b = 48)

Description:

■ This command changes all the Memory Switch(Msw) 1 through 8 to the value specified by b simultaneously as follows:

- When b=48, 49, the corresponding bit is set to Off and On respectively.
- When b=50, there is no change in the memory switch.

■ The setting items of the memory switch 1 are as follows:

Msw	Value			Function	Remark
	3	2	1		
1-1~3	48	48	48	Print speed 4	270 mm/s
	48	48	49	Print speed 3	250 mm/s
	48	49	48	Print speed 2	230 mm/s
	48	49	49	Print speed 1	200 mm/s

- The printer supports 4 different printing speeds, 270,250,230 and 200mm/sec.
Please be sure that the printing quality at higher speed may be worse than at the lower.

- Density level selection using the memory switch 1-6 through 1-7.

Msw	Value		Function	Remark
	7	6		
1-6~7	49	48	Density Level 3	Dark
	48	49	Density Level 2	
	48	48	Density Level 1	Light

- The print density adjusts the darkness of characters to be printed.

- The setting items of the memory switch 2 are as follows:

Msw	Value	Function
2-1	48	Specification for Destination: Single byte country
	49	Specification for Destination: Double byte country

- Code page selection using the memory switch 2-3 through 2-8.

Msw2-8	Msw2-7	Msw2-6	Msw2-5	Msw2-4	Msw2-3	Character Table
48	48	48	48	48	48	PC437
48	48	48	48	49	48	Katakana
48	48	48	49	48	48	PC850
48	48	48	49	49	48	PC860
48	48	49	48	48	48	PC863
48	48	49	48	49	48	PC865
48	48	49	49	48	48	WPC1252
48	48	49	49	49	48	PC866
48	49	48	48	48	48	PC852
48	49	48	48	49	48	PC858
48	49	48	49	48	48	PC862
48	49	48	49	49	48	PC864
48	49	49	48	48	48	Thai42
48	49	49	48	49	48	WPC1253
48	49	49	49	48	48	WPC1254
48	49	49	49	49	48	WPC1257

Msw2-8	Msw2-7	Msw2-6	Msw2-5	Msw2-4	Msw2-3	Character Table
49	48	48	48	48	48	Farsi
49	48	48	48	49	49	WPC1251
49	48	48	49	48	48	PC737
49	48	48	49	49	49	PC775
49	48	49	48	48	48	Thai 14
49	48	49	48	49	48	Hebrew old code
49	48	49	49	48	48	WPC1255
49	48	49	49	49	48	Thai 11
49	49	48	48	48	48	Thai 18
49	49	48	48	49	48	PC855
49	49	48	49	48	48	PC857
49	49	48	49	49	48	PC928
49	49	49	48	48	48	Thai 16
49	49	49	48	49	48	WPC1256
49	49	49	49	48	48	WPC1258
49	49	49	49	49	48	Khmer
48	48	49	48	48	49	WPC1250

■ The setting items of the memory switch 3 are as follows:

Specify the emulations to be enabled using the memory switch 3-1 through 3-3

Msw3-3	Msw3-2	Msw3-1	Emulation selection	Remark
48	48	48	Emulation 1 (default)	ESC/POS
48	48	49	Emulation 2	
48	49	48	Emulation 3	
48	49	49	Emulation 4	
49	48	48	Emulation 5	

■ The setting items of the memory switch 4 are as follows:

Msw	Value	Function
4-1	48	ASCII font selection: Resident font
	49	ASCII font selection: Customized font
4-2	48	Extended font selection: Resident font
	49	Extended font selection: Customized font

■ Single byte font selection using the memory switch 4-3 through 4-4.

Msw	Value		Single byte font selection	Remark
	4	3		
4-3~4	48	48	Font A	12x24
	48	49	Font B	9x17
	49	48	Font C	9x24

■ Double byte font selection using the memory switch 4-5 through 4-7.

Msw	Value			Double byte font selection	Remark
	7	6	5		
4-5~7	48	48	48	KS5601	Korean font
	48	48	49	SHIFT-JIS	Japanese font
	48	49	48	BIG5	Chinese font
	48	49	49	GB2312	Chinese font
	49	48	48	GB18030	Chinese font

■ The setting items of the memory switch 5 are as follows:

Msw	Value	Function
5-1	48	Auto cutter function: Partial cut
	49	Auto cutter function: Full cut
5-2	48	Reserved
5-3	48	2 Color printing disable
	49	2 Color printing enable
5-4	48	Auto line feed disable
	49	Auto line feed enable
5-5	48	Near end sensor enable
	49	Near end sensor disable
5-6~8	48	Reserved

■ The setting items of the memory switch 6 are as follows:

Msw	Value	Function
6-1	48	Auto generate pulse to internal buzzer not selected
	49	Auto generate pulse to internal buzzer selected
6-2	48	Internal buzzer control: enable
	49	Internal buzzer control: disable
6-3	48	Internal buzzer with cash drawer pulse not selected
	49	Internal buzzer with cash drawer pulse selected
6-4	48	Reserved
6-5	48	Offline status condition: pulse mode
	49	Offline status condition: step mode
6-6	48	Watermark printing disable
	49	Watermark printing enable
6-7	48	Reserved
6-8	48	Near end sensor detect signal disable
	49	Near end sensor detect signal enable

- Printer generate pulse to internal buzzer automatically for cutting command ESC i and GS V.

- Printer generate pulse to internal buzzer automatically with cash drawer pulse by the setting.
- The watermark printing is available by the setting.
- The beep is activated for the audible paper empty warning signal.

Remarks: None

Differences: None

<Function 4> GS (E pL pH fn a (fn=4)

Code:

ASCII	GS	(	E	pL	pH	fn	a
Hex	1D	28	45	02	00	04	a
Decimal	29	40	69	2	0	4	a

Range:

pL + pH x 256) = 2 (pL=2, pH=0)
 fn=4
 a=1,2,3,4,5,6,11,12

Default:

None

Description:

This command transmits the setting value of the memory switch corresponding to a.

	Hexadecimal	Decimal	Amount of Data
Header	37H	55	1 byte
Identifier	21H	33	1 byte
Setting value	30H or 31H	48 or 49	8 bytes
NUL	00H	0	1 byte

■ The setting value is sent from bit 8 to bit 1, consisting of 8 bytes in total.

- Off: Hexadecimal = 30H / Decimal = 48
- On: Hexadecimal = 31H / Decimal = 49

Remarks:

None

Differences:

None

GS (L, GS 8 L

Function : Select graphics data

Code :

ASCII	GS	(	L	pL	pH	m	fn	[parameter]
Hex	1D	28	4C	pL	pH	m	fn	[parameter]
Decimal	29	40	76	pL	pH	m	fn	[parameter]

ASCII	GS	8	L	p1	p2	p3	p4	m	fn	[parameter]
Hex	1D	38	4C	p1	p2	p3	p4	m	fn	[parameter]
Decimal	29	56	76	p1	p2	p3	p4	m	fn	[parameter]

Range: None

Default: None

Description : This command processes graphics data according to the function code (fn).

fn	No.	Format	Function
0, 48	48	GS (L pL pH m fn	Transmits the NV graphics memory capacity
2, 50	50	GS (L pL pH m fn	Prints the graphics data in the print buffer
3, 51	51	GS (L pL pH m fn	Transmits the remaining capacity of the NV graphics memory
64	64	GS (L pL pH m fn d1 d2	Transmits the defined NV graphics key code list
65	65	GS (L pL pH m fn d1 d2 d3	Deletes all NV graphics data
66	66	GS (L pL pH m fn kc1 kc2	Deletes the specified NV graphics data
67	67	GS (L pL pH m fn kc1 kc2 b xL xH yL yH [cd1...dk]1...[c d1...dk]b	Defines the graphics data in the non-volatile memory
69	69	GS (L pL pH m fn kc1 kc2 x y	Prints the specified NV graphics data
112	112	GS (L pL pH m fn a bx by c xL xH yL yH d1...dk	Stores the graphics data in the print buffer memory

Remarks :

- This command is adapted to print image data.
- pL, pH specifies the number of bytes following pH using $(pL + pH \times 256)$.
- Since frequent writing operation could cause the damage to the NV memory, it is recommended to write only when being required.
- While storing data by this command, the printer is in BUSY state where receiving of data is not available. Therefore, it is not recommended to send data during this process.
- The real time commands and LSB operations are not allowed during NV memory operation process.

Differences: None

<Function 48> GS (L pL pH m fn (fn=0, 48)**Code :**

ASCII	GS	(	L	pL	pH	m	fn
Hex	1D	28	4C	pL	pH	m	fn
Decimal	29	40	76	pL	pH	m	fn

Range:

$(pL + pH \times 256) = 1$ (pL=2, pH=0)
 m=48
 fn=0, 48

Default:

None

Description :

Transmits the total capacity of the NV bit-image memory (number of bytes in the memory area).

Remarks :

	Hexadecimal	Decimal	Amount of Data
Header	37H	55	1 byte
Identifier	21H	33	1 byte
Setting value	30H or 31H	48 or 49	8 bytes
NUL	00H	0	1 byte

- The total capacity data is converted to character codes corresponding to decimal data, then transmitted from the MSB.
- The data length is variable.
- The total capacity of the NV user memory is selectable as any one of [0, 64K, 128K, 192K, 256K] bytes with GS (E. The default value is 256K.

Differences:

None

<Function 50> GS (L pL pH m fn (fn=2, 50)**Code :**

ASCII	GS	(	L	pL	pH	m	fn
Hex	1D	28	4C	pL	pH	m	fn
Decimal	29	40	76	pL	pH	m	fn

Range:

(pL + pH x 256) = 1 (pL=2, pH=0)
 m=48
 fn=2, 50

Default:

None

Description :

This command prints the graphics data defined by the process of Function 112.

Remarks :

- The graphics data stored in the printer buffer is printed.
- This command is available in standard mode, not in page mode.
- The graphics data is defined by Function 112.
- The required amount of line feed pitch is used for printing graphics data, regardless of the existing setting value of the pitch.

Differences:

None

<Function 51> GS (L pL pH m fn (fn=3, 51)**Code:**

ASCII	GS	(	L	pL	pH	m	fn
Hex	1D	28	4C	pL	pH	m	fn
Decimal	29	40	76	pL	pH	m	fn

Range:

$(pL + pH \times 256) = 2$ (pL=2, pH=0)
 m=48
 fn=3, 51

Default:

None

Description:

This command transmits the setting value of the memory switch corresponding to a.

	Hexadecimal	Decimal	Amount of Data
Header	37H	55	1 byte
Identifier	21H	33	1 byte
Setting value	30H – 39H	48 - 57	1 - 8 bytes
NUL	00H	0	1 byte

■ The setting value is sent from bit 8 to bit 1, consisting of 8 bytes in total.

- Off: Hexadecimal = 30H / Decimal = 48
- On: Hexadecimal = 31H / Decimal = 49

Remarks:

None

Differences:

None

<Function 64> GS (L pL pH m fn d1 d2 (fn=64)**Code:**

ASCII	GS	(	L	pL	pH	m	fn	d1	d2
Hex	1D	28	4C	pL	pH	m	fn	d1	d2
Decimal	29	40	76	pL	pH	m	fn	d1	d2

Range:

(pL + pH x 256) = 4 (pL=4, pH=0)

m=48

fn=64

d1=75, d2=67

Default:

None

Description:

■ Transmits the defined NV graphics key code list.

	Hexadecimal	Decimal	Amount of Data
Header	37H	55	1 byte
Flag	72H	114	1 byte
Status	40H or 41H	64 or 65	1 byte
Data	30H – 39H	48 - 57	2 - 80 bytes
NUL	00H	0	1 byte

■ When the key code is not present :

	Hexadecimal	Decimal	Amount of Data
Header	37H	55	1 byte
Flag	72H	114	1 byte
Status	40H	64	1 byte
NUL	00H	0	1 byte

Remarks:

- If the number of the key code exceed 40, the key code is transmitted dividing up to 40.
 - The status if the continuous transmission data block is present is 41H.
 - The status if the continuous transmission data block is not present is 40H.
- After the [Header-NULL] is transmitted, the printer receives a response from the hosg; then it performs the process defined by the response.(See the tables below.)
 - When the status (existence of the next data block) is Hexadecimal = 41H / Decimal = 65)

Response		Process performed
ASCII	Decimal	
ACK	6	Transmits the next data
NAK	21	Transmits the previous data again
CAN	24	Ends the process.

- When the status (for the last data block) is Hexadecimal = 40H / Decimal = 64)

Response		Process performed
ASCII	Decimal	
ACK	6	Ends the process
NAK	21	Transmits the previous data again
CAN	24	Cancels the process.

Differences: None

<Function 65> GS (L pL pH m fn d1 d2 d3 (fn=65)**Code :**

ASCII	GS	(	L	pL	pH	m	fn	d1	d2	d3
Hex	1D	28	4C	pL	pH	m	fn	d1	d2	d3
Decimal	29	40	76	pL	pH	m	fn	d1	d2	d3

Range:

(pL + pH x 256) = 5 (pL=5, pH=0)
 fn=65
 d1=67, d2=76, d3=82

Default:

None

Description :

This command removes all defined NV graphics data.

Remarks :

■ The graphics data is define by Function 67 into the NV graphics memory with the sector dedicated for storing NV graphics data.

Differences:

None

<Function 66> GS (L pL pH m fn kc1 kc2 (fn=66)**Code :**

ASCII	GS	(	L	pL	pH	m	fn	kc1	kc2
Hex	1D	28	4C	pL	pH	m	fn	kc1	kc2
Decimal	29	40	76	pL	pH	m	fn	kc1	kc2

Range:

(pL + pH x 256) = 4 (pL=4, pH=0)

m=48

fn=66

 $32 \leq kc1 \leq 126$ $32 \leq kc2 \leq 126$ **Default:**

None

Description :

Deletes the NV graphics data defined by the codes kc1 and kc2.

Remarks :

■ The graphics data is define by Function 67.

Differences:

None

<Function 67> GS (L pL pH m fn kc1 kc2 b xL xH yL yH [cd1...dk]1...[c d1...dk]b (fn=67)**Code :**

ASCII	GS	(	L	pL	pH	m	fn	kc1 kc2 b xL xH yL yH [cd1...dk]1...[c d1...dk]b
Hex	1D	28	4C	pL	pH	m	fn	kc1 kc2 b xL xH yL yH [cd1...dk]1...[c d1...dk]b
Decimal	29	40	76	pL	pH	m	fn	kc1 kc2 b xL xH yL yH [cd1...dk]1...[c d1...dk]b

Range:

GS (L parameter

 $3 \leq (pL + pL \times 256) \leq 65535$ ($0 \leq pL \leq 255$, $0 \leq pH \leq 255$)

GS (8 parameter

 $3 \leq (p1 + p2 \times 256) + p3 \times 65535 + p4 \times 16777216 \leq 4294967295$ $(0 \leq p1L \leq 255, 0 \leq p2 \leq 255, 0 \leq p3 \leq 255, 0 \leq p4 \leq 255)$

Common parameter

m=48

fn=67

a=48

 $32 \leq kc1 \leq 126$ $32 \leq kc2 \leq 126$

b=1,2

 $1 \leq (xL + xH \times 256) \leq 8192$ $1 \leq (yL + yH \times 256) \leq 2304$

c=49 (When The monochrome paper is selected)

c=50 (When The two-color paper is selected)

 $0 \leq d \leq 255$ $k = (\text{int} ((xL + xH \times 256) + 7) / 8) \times (yL + yH \times 256)$ **Default:**

None

- Description :**
- The following parameters are used to define the raster graphics data.
 - b specifies the number of colors for the defined data.
 - xL and xH specify the number of dots in horizontal direction to (xL + xH x 256).
 - yL and yH specify the number of dots in horizontal direction to (yL + yH x 256) dots.
 - c specifies the color of the defined data.

c	Defined data color
49	Color 1
50	Color 2

- STP-103II is can not use two color printing mode.

- Remarks :**
- Color 1 means black, and Color 2 red that is available for 2-color paper.
 - If new NV graphics data is saved or the existing data is modified, all of the existing data in NV graphics memory are flushed and updated using this command. The rest of NV graphics data groups having no change should be redefined along with the new group stored.
 - When NV graphics data groups are saved, each of the groups is allocated with N in the order of download.
 - 256K bytes of NV memory is reserved for each of mono color and 2-color graphics data. Therefore, the total capacity of the NV graphics memory is 512K bytes.

Differences: None

<Function 69> GS (L pL pH m fn kc1 kc2 x y (fn=69)**Code :**

ASCII	GS	(	L	pL	pH	m	fn	kc1	kc2	x	y
Hex	1D	28	4C	pL	pH	m	fn	kc1	kc2	x	y
Decimal	29	40	76	pL	pH	m	fn	kc1	kc2	x	y

Range:

(pL + pH x 256) = 6 (pL=6, pH=0)

m=48, fn=69

 $32 \leq kc1 \leq 126$ $32 \leq kc2 \leq 126$

x=1, 2

y=1, 2

Default:

None

Description :

- Prints the NV graphics data defined by the codes kc1 and kc2.
 - The graphics data is enlarged by x and y in the horizontal and vertical directions.

Remarks :

- This command prints the NV graphics data defined by Function 67.
- In page mode, this command is not effective.
- NV graphics data beyond the print area for one line is not printed.

Differences:

None

<Function 112> GS (L pL pH m fn a bx by c xL xH yL yH d1...dk (fn=112)**Code :**

ASCII	GS	(	L	pL	pH	m	fn	a bx by c xL xH yL yH d1...dk
Hex	1D	28	4C	pL	pH	m	fn	a bx by c xL xH yL yH d1...dk
Decimal	29	40	76	pL	pH	m	fn	a bx by c xL xH yL yH d1...dk

Range:

GS (L parameter

 $11 \leq (pL + pL \times 256) \leq 65535$ ($0 \leq pL \leq 255$, $0 \leq pH \leq 255$)

GS 8 L parameter

 $11 \leq (p1 + p2 \times 256) + p3 \times 65535 + p4 \times 16777216 \leq 4294967295$ $(0 \leq p1 \leq 255, 0 \leq p2 \leq 255, 0 \leq p3 \leq 255, 0 \leq p4 \leq 255)$

Common parameter

m=48

fn=112

a=48

c=49 (When The monochrome paper is selected)

c=50 (When The two-color paper is selected)

- When single-color paper specified :

 $1 \leq (xL + xH \times 256) \leq 1662$ (When by =1) $1 \leq (xL + xH \times 256) \leq 831$ (When by =2)

- When two-color paper specified :

 $1 \leq (xL + xH \times 256) \leq 831$ (When by =1) $1 \leq (xL + xH \times 256) \leq 415$ (When by =2) $0 \leq d \leq 255$ $k = (\text{int} ((xL + xH \times 256) + 7) / 8) \times (yL + yH \times 256)$ **Default:**

None

- Description :**
- This command stores the raster graphics data in the print buffer, enlarged by bx and by in the horizontal and vertical directions.
 - xL, xH specifies the raster graphics data in the horizontal direction as (xL + xH x 256) dots.
 - yL, yH specifies the raster graphics data in the vertical direction to (yL + yH x 256) dots.
 - d denotes the stored data (raster format).
 - k denotes the number of the graphics data.
 - c specifies the color of the defined data.

c	Defined data color
49	Color 1
50	Color 2

- Color 1 means black, and Color 2 red or blue that is available for 2-color paper.

- Remarks :**
- The graphics data is stored in the printer buffer directly.
 - NV graphics data beyond the print area for one line is not printed.
 - Real time command is not effective during processing of this command.

Differences: None

GS (N

Function: Select character color

Code:

ASCII	GS	(	N	pL	pH	n	m
Hex	1D	28	4E	pL	pH	n	m
Decimal	29	40	78	pL	pH	n	m

Range:

(pL + pH x 256) = 2 (pL=2, pH=0)
 n=48
 m=49 (when the monochrome paper is selected)
 m=49,50 (when the two-color paper is selected)

Default:

m = 49

Description:

■ This command selects the color specified by m.

m	Color
49	Color 1
50	Color 2

- Color 1 means black and Color 2 red.

Remarks:

- In white/black reverse mode, the characters are regarded as nonprinting dots and the background is printed in the color specified by this command.
- In underline mode, the underline is printed in the color defined by this command.

Differences:

None

GS (k

Function: Specify and print the symbol

Code: None

Range: None

Default: None

Description: ■ This command processes the data concerning two-dimensional code.

- Symbol type is specified by cn.
- Function code is specified by fn.

cn	Type of Symbol
48	PDF417 (2-dimensional code)
49	QR CODE (2-dimensional code)

cn	fn	Function	
48	65	Function 065	PDF417: Specify the number of columns
	66	Function 066	PDF417: Specify the number of rows
	67	Function 067	PDF417: Specify the width of module
	68	Function 068	PDF417: Specify the module height
	69	Function 069	PDF417: Specify the error correction level
	70	Function 070	PDF417: Specify the option
	80	Function 080	PDF417: Store the received data in the symbol storage area
	81	Function 081	PDF417: Print the symbol data in the symbol storage area
	82	Function 082	PDF417: Send the size information of the symbol data in the symbol storage area

cn	fn	Function	
49	65	Function 165	QR CODE: Select the module
	67	Function 167	QR CODE: Select the size of module
	69	Function 169	QR CODE: Select the error correction level
	80	Function 180	QR CODE: Store the data in the symbol storage area
	81	Function 181	QR CODE: Print the data in the symbol storage area
	82	Function 182	QR CODE: Transmit the size information of the symbol data in the symbol storage area

Remarks: PDF417 symbol data (when cn=48)

- The symbol data is defined, stored to the symbol storage area by Function 080 and printed by the specification of Function 081. The symbol data in the area remains reserved until the following processes are executed:
 - Performing Function 080
 - Performing ESC @
 - Performing the printer reset and power-off
- The setting values of Functions 065 to 070 are utilized for the processing of Function 080 or 082. The printable area must be large enough to accommodate different-size symbols. If not, the symbol may not be printed.
- The same symbol data is repeatedly printed by executing Function 081 after performing Function 080.
- The same symbol data is printed differently by executing Function 081 after setting the feature of the symbol by using Functions 065 through 070.
- By using Function 082, the symbol size printed by Function 081 is Available.
QR CODE Symbol Data (cn = 49)
- The symbol data is defined, stored to the symbol storage area by Function 180 and printed by the specification of Function 181. The symbol data in the area remains reserved until the following processes are executed:
 - Performing Function 180
 - Performing ESC @
 - Performing the printer reset and power-off

- The setting values of Functions 165 to 169 are utilized for the processing of Function 180 or 182. The printable area must be large enough to accommodate different-size symbols. If not, the symbol may not be printed.
- The same symbol data is repeatedly printed by executing Function 181 after performing Function 180.
- The same symbol data is printed differently by executing Function 181 after setting the feature of the symbol by using Functions 165 through 169.
- By using Function 182, the symbol size printed by Function 181 is available.

Differences: None

<Function 065> GS (k pL pH cn fn n (fn=65)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	n
Hex	1D	28	6B	03	00	30	41	n
Decimal	29	40	107	3	0	48	65	n

Range:

(pL + pH x 256) = 3 (pL=3, pH=0)
 cn=48, fn=65
 $0 \leq n \leq 30$

Default:

n = 0

Description:

- This command specifies the number of columns in the data area of PDF417.
 - When n=0, automatic processing is set
 - When n is not 0, the number of columns of the data area is set to n code word.

Remarks:

- Settings of this command affect the processing of Functions 081 and 082.
- With auto processing (n=0) specified, the maximum number of columns in the data area is set to 30 columns.
- The following data is excluded from the number of columns:
 - Start and stop patterns
 - Indicator code word of left and right
- With auto processing (n=0) specified, the number of columns is calculated using the following information.
 - Printing area when processing Functions 081, 082
 - Module width (Function 067)
 - Option setting (Function 070)
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

None

<Function 066> GS (k pL pH cn fn n (fn=66)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	n
Hex	1D	28	6B	03	00	30	42	n
Decimal	29	40	107	3	0	48	66	n

Range:

(pL + pH x 256) = 3 (pL=3, pH=0)
 cn=48, fn=66
 n=0, 3 ≤ n ≤ 90

Default:

n = 0

Description:

- This command specifies the number of rows in the data area of PDF417.
 - When n=0, automatic processing is set
 - When n is not 0, the number of rows is set to n rows.

Remarks:

- Settings of this function affect the processing of Functions 081 and 082.
- With auto processing (n=0) specified, the maximum number of rows is set to 90.
- With auto processing (n=0) specified, the number of rows is calculated by using the following information:
 - Printing area when processing Functions 081, 082
 - Module height (Function 068)
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

None

<Function 067> GS (k pL pH cn fn n (fn=67)
Code:

ASCII	GS	(	k	pL	pH	cn	fn	n
Hex	1D	28	6B	03	00	30	43	n
Decimal	29	40	107	3	0	48	67	n

Range:

$(pL + pH \times 256) = 3$ (pL=3, pH=0)
 cn=48
 fn=67
 $1 \leq n \leq 4$

Default:

n = 3

Description:

This command sets the width of the module of PDF417 symbol to n dots.

Remarks:

- Settings of this command affect the processing of Functions 081 and 082.
- The setting unit for printer models varies.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

- Setting unit(1 dot)
 - **SRP-F310:** 0.141(1/180 inch)
 - **SRP-F312:** 0.125(1/203 inch)

<Function 068> GS (k pL pH cn fn n (fn=68)

Code:

ASCII	GS	(	k	pL	pH	cn	fn	n
Hex	1D	28	6B	03	00	30	44	n
Decimal	29	40	107	3	0	48	68	n

Range:

(pL + pH x 256) = 3 (pL=3, pH=0)
 cn=48
 fn=68
 $2 \leq n \leq 8$

Default:

n = 3

Description:

This command sets the module height of PDF417 to [the module width x n].

Remarks:

- Settings of this command affect the processing of Functions 081 and 082.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

None

<Function 069> GS (k pL pH cn fn m n (fn=69)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	m	n
Hex	1D	28	6B	04	00	30	45	m	n
Decimal	29	40	107	4	0	48	69	m	n

Range:

(pL + pH x 256) = 4 (pL=4, pH=0)

cn=48

fn=69

m=48

48 ≤ n ≤ 56

Default:

None

Description:

- This command specifies the error correction level for PDF417.
 - The error correction level is set by “level”.

Remarks:

- Settings of this function affect the processing of Functions 081 and 082.
- Error correction level specified by “level” (m=48) is as follows:
The number of the error correction codeword is unchanged regardless of the number of codeword in the data area.

n	Function	Number of error correction codeword
48	Error correction level 0	2
49	Error correction level 1	4
50	Error correction level 2	8
51	Error correction level 3	16
52	Error correction level 4	32
53	Error correction level 5	64
54	Error correction level 6	128
55	Error correction level 7	256
56	Error correction level 8	512

- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

None

<Function 070> GS (k pL pH cn fn m (fn=70)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	m
Hex	1D	28	6B	03	00	30	46	m
Decimal	29	40	107	3	0	48	70	m

Range:

(pL + pH x 256) = 3 (pL=3, pH=0)
 cn=48
 fn=70
 m=0,1

Default:

m = 0

Description:

This command selects the option for PDF417.

m	Function
0	Select the standard PDF417
1	Select the simplified PDF417

Remarks:

- Settings of this function affect the processing of Functions 081 and 082.
- When simplified PDF417 symbol is canceled, standard PDF417 symbol is automatically selected.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

None

<Function 080> GS (k pL pH cn fn m d1...dk (fn=80)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	m	d1...dk
Hex	1D	28	6B	pL	pH	30	50	30	d1...dk
Decimal	29	40	107	pL	pH	48	80	48	d1...dk

Range:
 $4 \leq (pL + pH \times 256) \leq 65535$ ($0 \leq pL \leq 255$, $0 \leq pH \leq 255$)

cn=48

fn=80

m=48

 $0 \leq d \leq 255$ $k = (pL + pH \times 256) - 3$ **Default:**

None

Description:

This command stores the PDF417 symbol data (d1...dk) in the symbol storage area.

Remarks:

- The data stored in the symbol storage area by this command remains reserved after processing Function 081 or 082.
- The following data should not be included in the symbol data d1..dk since this information is automatically added by the printer:
 - Start pattern and stop pattern.
 - Indicator codeword of left and right.
 - The descriptor of symbol length (the first code word in the data area).
 - The error correction codeword calculated by modulus 929.
- The setting of this command remains effective until the following processing is performed:
 - Executing Function 080
 - Executing ESC @
 - Executing printer reset or power-off

Differences:

None

<Function 081> GS (k pL pH cn fn m (fn=81)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	m
Hex	1D	28	6B	03	00	30	51	m
Decimal	29	40	107	3	0	48	81	m

Range:

(pL + pH x 256) = 3 (pL=3, pH=0)
 cn=48
 fn=81
 m=48

Default:

None

Description:

This command encodes and prints the PDF417 symbol data in the symbol save area.

Remarks:

- In standard mode, this command is available only when printer is at the beginning of a line or the printer buffer is empty.
- A symbol exceeding the printing area in size can not be printed.
- Printing operation is not processed under the following conditions:
 - There is no data (Function 080 is not processed).
 - If [(number of columns x number of rows) < number of code word] when automatic processing is specified for number of columns and number of rows.
 - Number of code word exceeds 928 in the data area.
- The following data is added automatically by the encode processing:
 - Start pattern and stop pattern.
 - Indicator code word of left and right.
 - The descriptor of symbol length (the first code word in the data area).
 - The error correction code word calculated by modulus 929.
 - Pad codeword.
- The data area includes the following codewords:
 - Data specified by Function 080.
 - The descriptor of symbol length (the first code word in the data area).

- The error correction code word calculated by modulus 929.
- Pad codeword.
- When automatic processing (Function 065) is specified, the number of columns is calculated using the following information:
 - Current printing area
 - Module width (Function 067)
 - Option setting (Function 070)
 - Codeword in the data area
 - The maximum number of columns is 30.
- When auto processing (Function 066) is specified in page mode, the number of rows is calculated using the following information:
 - Current printing area
 - Module height (Function 068)
 - Codeword in the data area
 - The maximum number of rows is 90.
- Except for character size and upside-down printing mode, none of print mode such as emphasized, double-strike, etc, affects the printing of the symbol.
- In standard mode, the paper feed amount set by the paper feed setting command does not affect printing of the symbol. The printing position returns to the left side of the printable area after printing the symbol.
- In page mode, the printer stores the symbol data in the print buffer without executing actual printing.
- The quiet zone is not included in the printing data. Be sure to include the adequate quiet zone for executing of this command.
 - The quiet zone means the spaces surrounding the symbol such as upper, lower, left, and right spaces.

Differences: None

<Function 082> GS (k pL pH cn fn m (fn=82)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	m
Hex	1D	28	6B	03	00	30	52	m
Decimal	29	40	107	3	0	48	82	m

Range:

(pL + pH x 256) = 3 (pL=3, pH=0)
 cn=48
 fn=82
 m=48

Default:

None

Description:

This command encodes and sends the size information of the PDF417 symbol data in the symbol storage area.

Remarks:

- In standard mode, this command is available only when printer is at the beginning of a line or the printer buffer is empty.
- The size information for each data is as follows:

Send data	Hex	Decimal	Data
Header	37H	55	1 byte
Identifier	2FH	47	1 byte
Horizontal size	30H – 39H	48 – 57	1 – 5 byte
Separator	1FH	31	1 byte
Vertical size	30H – 39H	48 – 57	1 – 5 byte
Separator	1FH	31	1 byte
Fixed value	31H	49	1 byte
Separator	1FH	31	1 byte
Other information	30H or 31H	48 or 49	1 byte
NUL	00H	0	1 byte

- Horizontal size and vertical size denotes the number of dots of the symbol.

- The following data indicates whether or not printing of the symbol is possible:

Hex	Decimal	Condition
30H	48	Printing is possible
31H	49	Printing is impossible

- The quiet zone is not included in the printing data. Be sure to include the adequate quiet zone for executing of this command.

Differences: None

<Function 165> GS (k pL pH cn fn n1 n2 (fn=65)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	n1	n2
Hex	1D	28	6B	04	00	31	41	n1	n2
Decimal	29	40	107	4	0	49	65	n1	n2

Range:

$(pL + pH \times 256) = 3$ (pL=3, pH=0)
 cn=49
 fn=65
 n1 = 49, 50
 n2 = 0

Default:

n1 = 50, n2 = 0

Description:

This command sets the QR Code model as follows:

n1	Function
49	Model 1
50	Model 2

Remarks:

- The setting of this command affects <Function 181> and <Function 182>.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

None

<Function 167> GS (k pL pH cn fn n (fn=67)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	n
Hex	1D	28	6B	03	00	31	43	n
Decimal	29	40	107	3	0	49	67	n

Range:

$(pL + pH \times 256) = 3$ (pL=3, pH=0)
 cn=49
 fn=67
 $1 \leq n < 8$

Default:

n = 3

Description:

This command sets the size of the QR Code module to n dots.

Remarks:

- The setting of this command affects the processing of <Function 181> and <Function 182>.
- Since the QR CODE module is square, n = module width = module height.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

None

<Function 169> GS (k pL pH cn fn n (fn=69)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	n
Hex	1D	28	6B	03	00	31	45	n
Decimal	29	40	107	3	0	49	69	n

Range:

$(pL + pH \times 256) = 3$ (pL=3, pH=0)
 cn=49
 fn=69
 $48 \leq n \leq 51$

Default:

n = 48

Description:

This command sets the error correction level for QR Code.

n	Function	Recovery Amount (%)
48	Error Correction Level L	7
49	Error Correction Level M	15
50	Error Correction Level Q	25
51	Error Correction Level H	30

Remarks:

- The setting of this command affects the processing of <Function 181> and <Function 182>.
- Reed-Solomon correction is employed to generate a series of error correction codewords.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences:

None

<Function 180> GS (k pL pH cn fn m d1...dk (fn=80)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	m	d1...dk
Hex	1D	28	6B	pL	pH	31	50	30	d1...dk
Decimal	29	40	107	pL	pH	49	80	48	d1...dk

Range:
 $4 \leq (pL + pH \times 256) \leq 7092$ ($0 \leq pL \leq 255$, $0 \leq pH \leq 27$)

cn=49

fn=80

m=48

 $0 \leq d \leq 255$ $k = (pL + pH \times 256) - 3$ **Default:**

None

Description:

This command saves symbol data of the QR Code to the symbol storage area.

Remarks:

- The symbol data is defined, stored to the symbol storage area by Function 180 and printed by the specification of Function 181. The data remains reserved after completion of printing.
- The following shows the data available for encoding of QR code.

Character Type	Usable Characters
Numeric Data	"0" ~ "9"
Alphanumeric Data	"0" ~ "9", "A" ~ "Z", SP, \$, %, *, +, -, ., /, :
Kanji Data	Shift JIS value
8bit Byte Data	00H ~ FFH

- The setting of this command remains effective until the following processing is performed:
 - Performing Function 180
 - Performing ESC @
 - Performing the printer reset or power-off

Differences:

None

<Function 181> GS (k pL pH cn fn m (fn=81)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	m
Hex	1D	28	6B	03	00	31	51	m
Decimal	29	40	107	3	0	49	81	m

Range:

(pL + pH x 256) = 3 (pL=3, pH=0)
 cn=49
 fn=81
 m=48

Default:

None

Description:

This command encodes and prints QR Code symbol data saved in the symbol storage area.

Remarks:

- In standard mode, this command is available only when printer is at the beginning of a line or the printer buffer is empty.
- A symbol exceeding the printing area in size can not be printed.
- Printing operation is not processed under the following conditions:
 - There is no data. (Function 180 is not executed)
 - If [(number of columns x number of rows) < number of code words], the numbers of columns and rows are automatically processed.
 - The four types of data compression modes are listed below. According to the symbol data in the data storage area, automatically selects the best suitable compression mode.
 - *Numeric Data Code
 - *Alphanumeric Data mode
 - *Kanji Data mode
 - *8 bit Data mode

- The following data is automatically added by the encoding processing:
 - Position sensor pattern
 - Segregator for the position sensor pattern
 - Timing pattern
 - Format information
 - Version information
 - Error correction code text
 - Pad code text
 - Indicator for counting bits of bytes
 - Mode indicator
 - Concluder
 - Queue pattern (when model 2 is selected)
 - Expansion pattern (when model 1 is selected)
- Except for character size and upside-down printing mode, none of print mode such as emphasized, double-strike, etc, affects the printing of the symbol.
- In standard mode, the paper feed amount set by the paper feed setting command does not affect printing of the symbol. The printing position returns to the left side of the printable area after printing the symbol.
- In page mode, the printer stores the symbol data in the print buffer without executing actual printing.
- The quiet zone is not included in the printing data. Be sure to include the adequate quiet zone for executing of this command.

Differences: None

<Function 182> GS (k pL pH cn fn m (fn=82)**Code:**

ASCII	GS	(	k	pL	pH	cn	fn	m
Hex	1D	28	6B	03	00	31	52	m
Decimal	29	40	107	3	0	49	82	m

Range:

(pL + pH x 256) = 3 (pL=3, pH=0)
 cn=49
 fn=82
 m=48

Default:

None

Description:

This command transmits the size information of the QR Code symbol data encoded by Function 180.

Remarks:

■ In standard mode, this command is available only when printer is at the beginning of a line or the printer buffer is empty.

■ The size information of each data is as follows:

Send data	Hex	Decimal	Data
Header	37H	55	1 byte
Flag	36H	54	1 byte
Horizontal size	30H – 39H	48 – 57	1 – 5 byte
Separator	1FH	31	1 byte
Vertical size	30H – 39H	48 – 57	1 – 5 byte
Separator	1FH	31	1 byte
Fixed Value	31H	49	1 byte
Separator	1FH	31	1 byte
Other Information	30H or 31H	48 or 49	1 byte
NUL	00H	0	1 byte

- Horizontal size and vertical size denotes the number of dots of the symbol.

- The following data indicates whether or not printing of the symbol is possible:

Hex	Decimal	Condition
30H	48	Printing is possible
31H	49	Printing is impossible

- The quiet zone is not included in size information.

Differences: None

GS ***Function:** Define downloaded bit image

Code:	ASCII	GS	*	x	y	[d1...d(x x y x 8)]
	Hex	1D	2A	x	y	[d1...d(x x y x 8)]
	Decimal	29	42	x	y	[d1...d(x x y x 8)]

Range: $1 \leq x \leq 255$
 $1 \leq y \leq 48$ (where $x \times y \leq 1536$)
 $0 \leq d \leq 255$

Default: None

Description: ■ This command defines the downloaded bit image using the number of dots specified by x and y.

- x and y specify the number of dots in the horizontal and vertical directions respectively.
- D defines the bit image data.
- K denotes the number of the definition data.

Remarks: ■ The bit image can be printed by downloaded graphics function, GS (8).

■ The downloaded bit image is available until ESC @, printer reset or power cycling is executed.

■ The user-defined character and the downloaded bit image cannot be defined simultaneously.

- The user-defined character is cleared preceding the execution of this command.
- The downloaded bit image data is cleared with ESC & executed.

Differences: None

GS /

Function: Print downloaded bit image

Code:

ASCII	GS	/	m
Hex	1D	2F	m
Decimal	29	47	m

Range: $0 \leq m \leq 3$, $48 \leq m \leq 51$

Default: None

Description: This command prints the downloaded bit image defined by GS * according to the mode denoted by m.

DPI : Dots per Inch (25.4mm)

m	Mode	Vertical dot density(DPI)	Horizontal dot density(DPI)
0, 48	Normal	180	180
1, 49	Double-width	180	90
2, 50	Double-height	90	180
3, 51	Quadruple	90	90

Remarks:

- The download bit image is defined by GS *.
- This command is ignored when if a downloaded bit image is not defined.
- In standard mode, this command works only when the print buffer is empty and the printer is in the start of the line. m is treated as normal data if the print buffer has data.
- In page mode, the bit image data is accumulated in the print buffer, but does not perform the actual printing.
- Except for character size and upside-down printing mode, none of print mode such as emphasized, double-strike, etc, affects the printing of the downloaded bit image.
- The default dot density set by GS L is applied to printing of the downloaded bit image.

Differences: ■ SRP-F310:

DPI : Dots per Inch (25.4mm)

m	Mode	Vertical dot density(DPI)	Horizontal dot density(DPI)
0, 48	Normal	180	180
1, 49	Double-width	180	90
2, 50	Double-height	90	180
3, 51	Quadruple	90	90

■ SRP-F312:

DPI : Dots per Inch (25.4mm)

m	Mode	Vertical dot density(DPI)	Horizontal dot density(DPI)
0, 48	Normal	203	203
1, 49	Double-width	203	203/2
2, 50	Double-height	203/2	203
3, 51	Quadruple	203/2	203/2

GS :

Function: Start/end macro definition

Code:

ASCII	GS	:
Hex	1D	3A
Decimal	29	58

Range: None

Default: None

Description: ■ This command starts or ends macro definition.

Remarks:

- The printer starts macro definition during normal operation and finishes it during macro definition upon receiving this command.
- The printer performs printing during macro definition.
- The macro is executed by GS ^.
- The maximum number of macro data to be defined varies with respect to printer models. The data exceeding this limit is not stored.
- ESC @ does not clear the existing defined macro. The macro remains effective until the printer reset and power cycling are executed.

Differences: None

GS B

Function: Turns white/black reverse printing mode on / off

Code:	ASCII	GS	B	n
	Hex	1D	42	n
	Decimal	29	66	n

Range: $0 \leq n \leq 255$

Default: $n = 0$

Description:

- This command selects white/black reverse printing mode by setting the least significant bit of n.
 - When the LSB of n is 0, white/black reverse mode is turned off.
 - When the LSB of n is 1, white/black reverse mode is turned on.

Remarks:

- This command does not affect multi-byte characters such as Kanji, Japanese and Korean.
- The right space defined by ESC SP is affected by this command.
- In white/black reverse mode, the underline mode is not effective.
- This mode remains effective until ESC @, printer reset or power cycling is executed.

Differences: None

GS H

Function: Selects print position of HRI characters

Code:

ASCII	GS	H	n
Hex	1D	48	n
Decimal	29	72	n

Range: $0 \leq n \leq 3$, $48 \leq n \leq 51$

Default: n = 0

Description: ■ This command selects the printing position of HRI (Human Readable Interpretation) characters when printing a bar code.

- The printing position is set according to the value of n as follows:

n	Printing position
0, 48	Not printed
1, 49	Above the bar code
2, 50	Below the bar code
3, 51	Both above and below the bar code

Remarks: ■ The font of the HRI characters is defined by GS f.
 ■ The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences: None

GS I

Function: Transmits printer ID

Code:	ASCII	GS	I	n
	Hex	1D	49	n
	Decimal	29	73	n

Range: $1 \leq n \leq 69$

Default: None

Description: ■ This command transmits the printer ID or information.

- Transmits 1 byte of printer ID, using n as follows:

n	Printer ID	Specification
1,49	Printer model ID	Printer model
2,50	Type ID	Printer type
3,51	Printer feature ID	Printing method and Printer size

- Transmits specified printer information, using n as follows:

n	Printer ID type	Specification
65	Firmware version	Firmware version
66	Manufacturer	BIXOLON
67	Printer model	Printer model
69	Code page	Currently enabled code page

Remarks: ■ Printer information (When n = 65, 66, 67, 69) consist of [Header ~ NULL] data as shown below:

Transmitted data	Hex	Decimal	Amount of data
Header	5FH	95	1byte
Printer information	Depends on the model	Depends on the model	0-15 bytes
NUL	00H	0	1byte

- The firmware version can be confirmed by self test printing.

Differences: ■ The printer ID is shown according to printer models as follows:

Printer ID	SRP-F310	SRP-F312
1(Printer model ID)	0x20	0x20
2(Type ID)	Type ID varies depending on functions the printer supports as follows: - 0x01 (Multi-byte character) - 0x02 (Autocutter) - 0x03 (Autocutter + Multi-byte character) - 0x04 (Customer display) - 0x05 (Multi-byte character + Display) - 0x07 (Customer display + Autocutter + Multi-byte Character)	
3(Printer feature ID)	0x63	0x63
66(Manufacturer)	BIXOLON	
67(Printer model)	SRP-F310	SRP-F312
69(Language of Font)	Code page currently being used. Refer to cod page setting command, ESC t.	

GS L

Function: Set left margin


Code:	ASCII	GS	L	nL	nH
	Hex	1D	4C	nL	nH
	Decimal	29	76	nL	nH

Range: $0 \leq nL \leq 255, 0 \leq nH \leq 255$

Default: $(nL + nH \times 256) = 0$ ($nL=0, nH=0$)

Description: This command sets the left margin specified to $[(nL + nH \times 256) \times (\text{horizontal motion units})]$.

- Remarks:**
- The left margin is not effective in page mode. If the left margin is enabled in page mode, the setting is available when the printer returns to standard mode.
 - When the setting is beyond the printable area, the left margin is automatically set to the maximum value of the printable area.
 - Since the left margin is the same as the leftmost side of the printable area, the left side of the printable area is changed according to the left margin specified.
 - The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

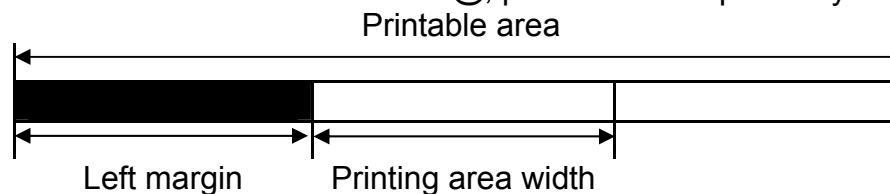

Differences: None

GS V

Function: Select cut mode and cut paper

Code:

①	ASCII	GS	V	m	
	Hex	1D	56	m	
	Decimal	29	86	m	
②	ASCII	GS	V	m	n
	Hex	1D	56	m	n
	Decimal	29	86	m	n

Range: ① m=0, 1, 48, 49 ② m=65, 66, $0 \leq n \leq 255$

Default: None

Description: This command cuts paper in the specified mode as follows.

m		Function
①	0,48	Executes a partial cut (one point left uncut)
	1,49	
②	65	Feeds paper to (cutting position + n × vertical motion unit) and executes a partial cut(one point left uncut)

Remarks:

For ①

■ If an auto cutter is not provided, this command is ignored command is executed.

For ②

■ When n = 0, the printer feeds the paper to the cutting position and cuts it.

■ If an auto cutter is not provided, the printer only feeds the paper for specified amount.

■ Vertical motion unit is used for calculating a paper feed amount.

■ Cutting mode is changed only by setting MSW5-1.

Differences: None

GS W

Function: Set printing area width

Code:

ASCII	GS	W	nL	nH
Hex	1D	57	nL	nH
Decimal	29	87	nL	nH

Range: $0 \leq nL \leq 255, 0 \leq nH \leq 255$


Default:

- **SRP-F310:**
($nL + nH \times 256$)=512 ($nL=0, nH=2$) (When 80mm width of paper used)
- **SRP-F312:**
($nL + nH \times 256$)=576 ($nL=64, nH=2$) (When 80mm width of paper used)

Description: This command sets the printing area width to [$(nL + nH \times 256) \times (\text{horizontal motion units})$].

Remarks:

- The printing area width is not effective in page mode. If the printing area width is enabled in page mode, the setting is available when the printer returns to standard mode.
- When (left margin + printing area width) exceeds the printable area, the printing area width is automatically set to (printing area width - left margin).
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

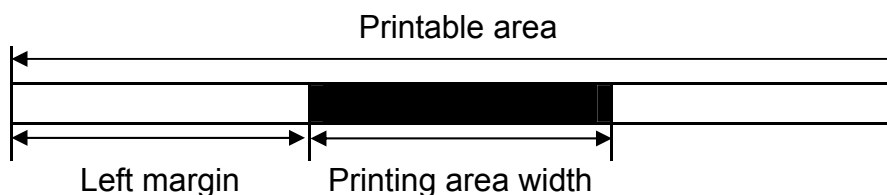

Differences: None

GS ^

Function: Execute macro

Code:	ASCII	GS	^	r	t	m
	Hex	1D	5E	r	t	m
	Decimal	29	94	r	t	m

Range: $0 \leq r \leq 255$
 $0 \leq t \leq 255$
 $m=0, 1$

Default: None

Description: ■ This command executes a macro using parameters as following:

- r specifies the number of times to execute the macro.
- t specifies the waiting time before the macro is executed.
- m specifies macro executing mode as shown below.

m	Function
0	Executes the macro r times continuously at the interval specified by t.
1	The printer waits for the paper FEED button to be pressed for the time specified by t. The macro is executed once when the button is pressed. This operation is repeated r times.

Remarks: ■ The macro is defined by GS:
 ■ If the macro is not defined or $r = 0$, the command is ignored.
 ■ The macro function is useful to print the same data repeatedly.

Differences: None

GS a

Function: Enable/Disable Last Status Back (LSB)

Code:

ASCII	GS	a	n
Hex	1D	61	n
Decimal	29	97	n

Range: $0 \leq n \leq 255$

Default: $n = 0$

Description:

- This enables or disables LSB (Last Status Back) according to n.
 - LSB is enabled when $n > 0$.
- If there is any change comparing new status value to old status value, new status value will be stored in LSB buffer.
- When the printer status changes, new status value will not be sent to host but be stored in SB buffer.
- The printer processor checks buffer periodically. If there is any change on status value, latest status value will be sent to the host.
- The interval of checking time can be changed using the command BS ^ T.

Remarks:

- LSB is the function that transmit the printer status such as cover open/close and Online/Offline if LSB is enabled. Using this LSB function, the host can check to see if the printer is running properly.
- Once LSB has been enabled, the printer transmit the current printer status When its status is changed, until LSB is disabled.
- When $n = 0$, LSB is disabled. The printer stops transmitting the status.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

■ The printer information transmitted is comprised of 4 bytes as follows:

• First byte(printer information)

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Not used. Fixed to Off
1	Off	00	0	Not used. Fixed to Off
2	Off	00	0	Drawer kick-out connector pin 3 is LOW
	On	04	4	Drawer kick-out connector pin 3 is HIGH
3	Off	00	0	On-line
	On	08	8	Off-line
4	On	10	16	Not used. Fixed to On
5	Off	00	0	Cover is close
	On	20	32	Cover is open
6	Off	00	0	Paper is not being fed by the paper feed button
	On	40	64	Paper is being fed by the paper feed butto
7	Off	00	0	Not used. Fixed to Off

• Second byte(printer information)

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Not used. Fixed to Off
1	Off	00	0	Not used. Fixed to Off
2	Off	00	0	No mechanical error
	On	04	4	Mechanical error
3	Off	00	0	No auto cutter error
	On	08	8	Auto cutter error occurred
4	Off	00	0	Not used. Fixed to Off
5	Off	00	0	No unrecoverable error
	On	20	32	Unrecoverable error
6	Off	00	0	No automatically recoverable error
	On	40	64	Automatically recoverable error occurred
7	Off	00	0	Not used. Fixed to Off

– If mechanical error (bit 2) or auto-cutter error (bit 3) occurs due to paper jams or the like, it is possible to recover by correcting a cause of the error and executing ENQ in real time mode.

- If an unrecoverable error (bit 5) occurs, turn off the power as soon as possible.
- Third byte (paper sensor information)

Bit	Off/On	Hex	Decimal	Function
0,1	Off	00	0	Paper near end sensor: paper adequate
	On	03	3	Paper near end sensor: paper near end
2,3	Off	00	0	Paper end sensor: paper present
	On	0C	12	Paper end sensor: no paper present
4	Off	00	0	Not used. Fixed to Off
5	Off	00	0	Not used. Fixed to Off
6	Off	00	0	Not used. Fixed to Off
7	Off	00	0	Not used. Fixed to Off

- Fourth byte (paper sensor information)

Bit	Off/On	Hex	Decimal	Function
0	On	01	1	Not used. Fixed to On
1	On	02	2	Not used. Fixed to On
2	On	04	4	Not used. Fixed to On
3	On	08	8	Not used. Fixed to On
4	Off	00	0	Not used. Fixed to Off
5	Off	00	0	Not used. Fixed to Off
6	Off	00	0	Not used. Fixed to Off
7	Off	00	0	Not used. Fixed to Off

Differences: None

GS f

Function: Select font for HRI characters

Code:	ASCII	GS	f	n
	Hex	1D	66	n
	Decimal	29	102	n

Range: n = 0, 1, 48, 49

Default: n = 0

Description: This command selects a font for the HRI(Human Readable Interpretation) characters used when printing a bar code, using n as follows:

n	Font
0, 48	Font A
1, 49	Font B

Remarks:

- The setting of this command is applied to only HRI characters.
- The printing position of HRI characters are specified by GS H.
- The configurations of Font A and B vary depending on the printer model.

Differences: None

GS h

Function: Selects bar code height

Code:

ASCII	GS	h	n
Hex	1D	68	n
Decimal	29	104	n

Range: $1 \leq n \leq 255$

Default: $n = 162$

Description: This command sets the height of the bar code to n dots.

Remarks:

- The unit of n depends on the printer model.
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences: Unit of one dot:

- **SRP-F310:** 0.141mm(1/180 inch)
- **SRP-F312:** 0.125mm(1/203 inch)

GS k

Function: Print bar code

Code:

①	ASCII	GS	k	m	d1...dk	NUL
	Hex	1D	6B	m	d1...dk	NUL
	Decimal	29	107	m	d1...dk	NUL
②	ASCII	GS	k	m	n	d1...dn
	Hex	1D	6B	m	n	d1...dn
	Decimal	29	107	m	n	d1...dn

Range: ① $0 \leq m \leq 6$ ② $65 \leq m \leq 73$
K, m, n depend on the barcode system

Default: None

Description: ■ This command selects a bar code system and prints the bar code.

- k indicates the number of bytes of bar code data.
- n specifies the number of bytes of bar code data.
- d specifies the character code data of the bar code data to be printed.

For range ①

m	Bar Code System	Range of k	Range of d
0	UPC-A	$11 \leq k \leq 12$	$48 \leq d \leq 57$
1	UPC-E	$11 \leq k \leq 12$	$48 \leq d \leq 57$
2	JAN13(EAN)	$12 \leq k \leq 13$	$48 \leq d \leq 57$
3	JAN8(EAN)	$7 \leq k \leq 8$	$48 \leq d \leq 57$
4	CODE39	$1 \leq k$	$48 \leq d \leq 57, 65 \leq d \leq 90,$ $d=32,36,37,43,45,46,47$
5	ITF	$1 \leq k$ (even number)	$48 \leq d \leq 57$
6	CODABAR	$1 \leq k$	$48 \leq d \leq 57, 65 \leq d \leq 68,$ $d=36,43,45,46,47,58$

For range ②

m	Bar Code System	Range of k	Range of d
65	UPC-A	$11 \leq n \leq 12$	$48 \leq d \leq 57$
66	UPC-E	$11 \leq n \leq 12$	$48 \leq d \leq 57$
67	JAN13(EAN)	$12 \leq n \leq 13$	$48 \leq d \leq 57$
68	JAN8(EAN)	$7 \leq n \leq 8$	$48 \leq d \leq 57$
69	CODE39	$1 \leq n \leq 255$	$48 \leq d \leq 57, 65 \leq d \leq 90,$ $d=32,36,37,43,45,46,47$
70	ITF	$1 \leq n \leq 255$ (even number)	$48 \leq d \leq 57$
71	CODABAR	$1 \leq n \leq 255$	$48 \leq d \leq 57, 65 \leq d \leq 68,$ $d=36,43,45,46,47,58$
72	CODE93	$1 \leq n \leq 255$	$0 \leq d \leq 127$
73	CODE128	$2 \leq n \leq 255$	$0 \leq d \leq 127$

Remarks:

- The bar code width exceeding the print area can not be specified.
- Except for character size and upside-down printing mode, none of print mode such as emphasized, double-strike, etc, affects the printing of the barcode.
- The quiet zone of the bar code (left and right spaces of the bar code) should be considered when using this command.

Differences: None

GS r

Function: Transmit status

Code:	ASCII	GS	r	n
	Hex	1D	72	n
	Decimal	29	114	n

Range: n = 1, 2, 49, 50

Default: None

Description: The command transmits the status specified by n as follows:

n	Function
1, 49	Transmits paper sensor status
2, 50	Transmits drawer kick-out connector status

- Remarks:**
- The status is one byte.
 - The status to be transmitted is as follows:
 - Paper sensor status (n=1, 49):

Bit	Off/On	Hex	Decimal	Function
0, 1	Off	00	0	Paper near-end sensor: Paper adequate
	On	03	3	Paper near-end sensor: Paper near end
2, 3	Off	00	0	Paper end sensor: Paper present
	On	0C	12	Paper end sensor: Paper not present
4	Off	00	0	Fixed
5	Off	00	0	Reserved
6	Off	00	0	Reserved
7	Off	00	0	Fixed

Bits 2 and 3: This command can not be executed when the printer is offline due to the lack of paper. Therefore, the status of bit 2 (1) and bit 3 (1) is not transmitted.

- Drawer kick-out connector status (n=2, 50):

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Drawer kick-out connector pin 3 is LOW
	On	01	1	Drawer kick-out connector pin 3 is HIGH
1	Off	00	0	Reserved
2	Off	00	0	Reserved
3	Off	00	0	Reserved
4	Off	00	0	Fixed
5	Off	00	0	Reserved
6	Off	00	0	Reserved
7	Off	00	0	Fixed

- This command can be executed in real-time mode using DLE.

Differences: None

GS v 0

Function: Print raster bit image

Code:	ASCII	GS	v	0	m	xL	xH	yL	yH	d1...dk
	Hex	1D	76	30	m	xL	xH	yL	yH	d1...dk
	Decimal	29	118	48	m	xL	xH	yL	yH	d1...dk

Range: $0 \leq m \leq 3$, $48 \leq m \leq 51$
 $1 \leq (xL + xH \times 256) \leq 128$ ($0 \leq xL \leq 128$, $xH=0$)
 $1 \leq (yL + yH \times 256) \leq 4095$ ($0 \leq yL \leq 255$, $0 \leq yH \leq 15$)
 $0 \leq d \leq 255$
 $k = (xL + xH \times 256) \times (yL + yH \times 256)$

Default: None

Description: ■ This command prints a raster bit image according to the mode defined by m.

DPI : Dots per Inch (25.4mm)

m	Mode	Vertical dot density (DPI)	Horizontal dot density (DPI)
0, 48	Normal	180	180
1, 49	Double-width	180	90
2, 50	Double-height	90	180
3, 51	Quadruple	90	90

- xL, xH specifies $(xL + xH \times 256)$ byte(s) in the horizontal direction for the bit image.
- yL, yH specifies $(yL + yH \times 256)$ dot(s) in the vertical direction for the bit image.
- d specifies the definition data of the bit image data.

Remarks:

- In standard mode, this command is effective when the printer buffer is empty and the printer is in the beginning of the line. If the buffer is not empty, after processing m, the printer treats the following data as normal data.
- In page mode, the bit image is stored in the print buffer, not being printed.
- None of the print modes such as emphasized, double-strike, etc, affects the printing of the bit image.
- The default dot density set by GS L is applied to printing of the bit image.

Differences: ■ SRP-F310:

DPI : Dots per Inch (25.4mm)

m	Mode	Vertical dot density (DPI)	Horizontal dot density (DPI)
0, 48	Normal	180	180
1, 49	Double-width	180	90
2, 50	Double-height	90	180
3, 51	Quadruple	90	90

■ SRP-F312:

DPI : Dots per Inch (25.4mm)

m	Mode	Vertical dot density (DPI)	Horizontal dot density (DPI)
0, 48	Normal	203	203
1, 49	Double-width	203	203/2
2, 50	Double-height	203/2	203
3, 51	Quadruple	203/2	203/2

GS w

Function: Set bar code width

Code:

ASCII	GS	w	n
Hex	1D	77	n
Decimal	29	119	n

Range: $2 \leq n \leq 6$

Default: $n = 3$

Description: ■ This command sets the horizontal size of the bar code, using n as follows:

n	Multi-level bar code module width (mm)	Binary-level bar code	
		Thin element width (mm)	Thick element width (mm)
2	0.282	0.282	0.706
3	0.423	0.423	1.129
4	0.564	0.564	1.411
5	0.706	0.706	1.834
6	0.847	0.847	2.258

- n specifies the bar code module width.

Remarks:

- The setting of this command is effective for the following bar codes:
 - Multi-level bar codes (UPC-A, UPC-E, JAN13, HAN8, CODE93, CODE128)
 - Binary-level bar codes (CODE39, ITF, CODABAR)
- The setting of this command remains effective until ESC @, printer reset or power cycling is executed.

Differences: ■ SRP-F310:

n	Multi-level bar code module width (mm)	Binary-level bar code	
		Thin element width (mm)	Thick element width (mm)
2	0.282	0.282	0.706
3	0.423	0.423	1.129
4	0.564	0.564	1.411
5	0.706	0.706	1.834
6	0.847	0.847	2.258

■ SRP-F312:

n	Multi-level bar code module width (mm)	Binary-level bar code	
		Thin element width (mm)	Thick element width (mm)
2	0.250	0.250	0.625
3	0.375	0.375	1.000
4	0.500	0.500	1.250
5	0.625	0.625	1.625

BS F W

Function: Download customized font

Code:

ASCII	BS	F	W	n	m
Hex	08	46	57	n	m
Decimal	08	70	87	n	m

Range:

n = 0, 1
 $65 \leq m \leq 67$ (m = 65, 66 ,67)

Default:

None

Description:

■ Download customized font using the function number of n, m.

n	Function (Select download area)
0	Select ASCII character area 0x00 ~ 0x7F
1	Select extended character area 0x80 ~ 0xFF

m	Function (Select font type)
65	Select customized font A (12x24)
66	Select customized font B (9x17)
67	Select customized font C (9x24)

■ This command defines the customized font using the number of datas specified font size.

Font type	Font size
font A	6144 bytes
font B	4352 bytes
font C	6144 bytes

Remarks:

■ The customized font can be selected by function BS M.

Differences:

None

BS F R

Function: Read customized font

Code:

ASCII	BS	F	R	n	m
Hex	08	46	52	n	m
Decimal	08	70	82	n	m

Range: $14 \leq n \leq 255$
 $65 \leq m \leq 67$ (m = 65, 66 ,67)

Default: None

Description: ■ Read customized font using the function number of n, m.

n	Function (Select download area)
0	Select ASCII character area 0x00 ~ 0x7F
1	Select extended character area 0x80 ~ 0xFF

m	Function (Select font type)
65	Select customized font A (12x24)
66	Select customized font B (9x17)
67	Select customized font C (9x24)

■ This command can read the customized font using the number of datas specified font size.

Font type	Font size (1 character size)
font A	48 bytes
font B	34 bytes
font C	48 bytes

Remarks: ■ The customized font can be selected by function BS M.

Differences: None

BS F C

Function: Clear(Erase) customized font

Code:

ASCII	BS	F	C	n	m
Hex	08	46	43	n	m
Decimal	08	70	67	n	m

Range: $14 \leq n \leq 255$
 $65 \leq m \leq 67$ (m = 65, 66 ,67)

Default: None

Description: ■ Erase customized font using the function number of n, m.

n	Function (Select download area)
0	Select ASCII character area 0x00 ~ 0x7F
1	Select extended character area 0x80 ~ 0xFF

m	Function (Select font type)
65	Select customized font A (12x24)
66	Select customized font B (9x17)
67	Select customized font C (9x24)

Remarks: ■ The customized font can be selected by function BS M.

Differences: None

BS F I

Function: Transmit customized font

Code:	ASCII	BS	F	I	n
	Hex	08	46	49	n
	Decimal	08	70	73	n

Range: None

Default: n = 1, 49

Description: ■ nTransmit customized font information specified.

	Hexadecimal	Decimal	Amount of data
Header	5FH	95	1 byte
Data	30H,31H	48,49	1-8 byte(s)
NUL	00H	0	1 byte

data	Customized font type
D1	ASCII font A (12x24)
D2	ASCII font B (9x17)
D3	ASCII font C (9x24)
D4	Reserved
D5	Extended font A (12x24)
D6	Extended font B (9x17)
D7	Extended font C (9x24)
D8	Reserved

- When return value data is 30H,customized font is not installed.
- When return value data is 31H,customized font is installed.

Remarks: ■ The customized font can be selected by function BS M.

Differences: None

BS M

Function: Select device font type

Code:	ASCII	BS	M	n	m
	Hex	08	4D	n	m
	Decimal	08	77	n	m

Range: $65 \leq m \leq 67$ (m = 65,66,67)

Default: n = 0

Description: ■ This command selects print mode(s) with bits having following meanings:

Bit	Off/On	Hex	Decimal	Function
0	Off	00	0	Resident ASCII font selected
	On	01	1	Customized ASCII font selected
1	Off	00	0	Resident codepage font selected
	On	02	2	Customized character font selected

m	Function (Select font type)
65	Font A (12x24)
66	Font B (9x17)
67	Font C (9x24)

■ The printer supports 3 font types by selecting m function.

Remarks: ■ The setting of this command remains effective until ESC !, ESC @, printer reset or power cycling is executed.

Differences: None

BS V

Function : Select cut mode and cut paper

Code :

①	ASCII	BS	V	m	
	Hex	08	56	m	
	Decimal	08	86	m	
②	ASCII	BS	V	m	n
	Hex	08	56	m	n
	Decimal	08	86	m	n

Range: ① m=0, 1, 48, 49 ② m=65, 66, $0 \leq n \leq 255$

Default: None

Description : This command cuts paper in the specified mode as follows.

Remarks :

For ①

■ If an auto cutter is not provided, this command is ignored command is executed.

For ②

■ When $n = 0$, the mechanism feeds the paper to the cutting position and cuts it.

■ If an auto cutter is not provided, the mechanism only feeds the paper for specified amount.

- Vertical motion unit is used for calculating a paper feed amount.

m		Function
①	0,48	Executes a full cut (cuts the paper completely)
	1,49	Executes a partial cut (one point left uncut)
②	65	Feeds paper to (cutting position + $n \times$ vertical motion unit) and executes a full cut(cuts the paper completely)
	66	Feeds paper to (cutting position + $n \times$ vertical motion unit) and executes a partial cut(one point left uncut)

- Cutting mode is changed only by setting MSW5-1.

Differences: None

BS W D

Function : Define watermark image

Code :	ASCII	BS	W	D	n	[xL xH yL d1...dk]1... [xL xH yL d1...dk]n
	Hex	08	57	44	n	[xL xH yL d1...dk]1... [xL xH yL d1...dk]n
	Decimal	08	87	68	n	[xL xH yL d1...dk]1... [xL xH yL d1...dk]n

Range: $1 \leq n \leq 255$
 $1 \leq (xL + xH \times 256) \leq 1023$ ($0 \leq xL \leq 255$, $0 \leq xH \leq 3$)
 $1 \leq (yL + yH \times 256) \leq 288$ ($0 \leq yL \leq 255$, $yH=0,1$)
 $0 \leq d \leq 255$
 $k = (xL + xH \times 256) \times (yL + yH \times 256) \times 8$

Default: None

Description : ■ This command defines the watermark image in the watermark memory.

- n denotes the number of the watermark being defined.
- (xL, xH) and (yL, yH) set the number of dots in the horizontal and vertical directions to $[(xL + xH \times 256) \times 8]$ and $[(yL + yH \times 256) \times 8]$ respectively for the watermark image.
- d specifies the defined data (column format).
- When this command is entered, all watermark images previously defined are removed from the watermark memory.

Remarks :

- After completion of this command, the printer executes a software reset to restore the settings as when turned on.
- The watermark image is selected by BS W E.
- During the execution of this command, paper feed button, LSB and real time functions will not operate.
 - Watermark image data and print result are as follows:

d1	dY+1	...	.	MSB
			.	LSB
			.	
d2	dY+2	...	dk-2	MSB
				LSB
.	.	...	dk-1	MSB
.	.			LSB
.	.			
dY	dY x 2	...	dk	MSB
				LSB

- The capacity of watermark memory area is 256KB.

Differences: None

BS W E

Function : Select watermark printing function

Code :	ASCII	BS	W	E	n
	Hex	08	57	45	n
	Decimal	08	87	69	n

Range: $0 \leq n \leq 255$

Default: $n = 0$

- Description :**
- When $n = 0$ then watermark function is disabled.
 - n is assigned to each watermark image to be stored in download order by BS W D.
 - This command has no effect with watermark image not defined in advance.
 - In reverse mode, the watermark image is reversed with printing data.
 - n is the number of the watermark image to enable.in case enabled watermark images exist already,the latest enabled watermark image will be printed.
 - Vertical dot density and horizontal dot density specified as follows:

DPI : Dots per Inch (25.4mm)

Model	Vertical Dot Density (DPI)	Horizontal Dot Density (DPI)
SRP-F310	180	180
SRP-F312	203	203/2

Remarks : None

Differences: None

BS ^ T

Function : Set Last Status Back(LSB) time

Code :	ASCII	BS	^	T	n
	Hex	08	5E	54	n
	Decimal	08	94	84	n

Range: $0 < n < 30$

Default: $n = 5$

Description :

- Set the check time interval to change the status of printer.
- If there is any change comparing new status value to old status value, new status value will be stored in LSB buffer.
- When the printer status changes, new status value will not be sent to host but be stored in LSB buffer.
- The printer processor checks buffer periodically. If there is any change on status value, latest status value will be sent to the host.

Remarks :

- The LSB(Last Status Back) set time is $[n \times 100\text{ms}]$ and the default time is 500 ms.
 - If n is smaller than 1 or greater than 29, the LSB(Last Status Back) time is set to default $[5 \times 100\text{ms}]$.

Differences: None

BS DC1 % (fn = 1)

Function: Select BIL(Bixelon Interactive Linker) function

Code:	ASCII	BS	DC1	%	fn	n
	Hex	08	11	25	01	n
	Decimal	08	17	37	01	n

Range: $0 \leq n \leq 2$

Default: n = 0

Description: ■ If the value of n is 1, the printer enters the BIL(Bixelon Interactive Linker) mode. If the button of BIL(Bixelon Interactive Linker) is pressed, the printer transmits specified key data to host automatically.

■ the button of BIL(Bixelon Interactive Linker) information consists of [Header ~ NULL] data as shown below:

	Hexadecimal	Decimal	Amount of data
Header	7EH	126	1 byte
Key data	30H ~ 39H	48 ~ 57	1 byte
NUL	00H	0	1 byte

■ Select BIL mode using the function number of n.

n	Function
1~4	Reserved
5	BIL disable
6	BIL enable

Remarks: None

Differences: None

BS DC1 % (fn = 3)

Function: Select reverse printing function

Code:	ASCII	BS	DC1	%	fn	n
	Hex	08	11	25	03	n
	Decimal	08	17	37	03	n

Range: $0 \leq n \leq 2$

Default: n = 0

Description:

- When the printer receives Reverse Printing Start command (n = 1), the data will be stored in receive buffer until it receives Reverse Printing End command (n = 2).
- When the printer receives Reverse Printing End (n = 2), the data will be printed upside down compared to standard mode.
- After printing data, the printers will return to standard mode automatically.
- Select reverse printing mode using the function number of n.

n	Function
1	Starts reverse printing mode
2	Ends the reverse mode and prints the data in reverse.

Remarks: None

Differences: None

BIXOLON Corporation

Address: 980-3, Digital Empire Building A, 5F, Yeongtong-dong,
Yeongtong-gu, Suwon city, Gyeonggi-do, Korea 443-813
Tel +82 (0) 31 218 5500
Fax +82 (0) 31 218 5589

BIXOLON America Inc.

Address: 3171 Fujita St, Torrance, CA 90505
Tel +1 858 764 4580
Fax +1 310 257 6869

BIXOLON Europe GmbH

Address: Tiefenbroicher Weg 35 40472 Düsseldorf
Tel +49 (0) 211 68 78 54 0
Fax +49 (0) 211 68 78 54 20