

# User's Manual

Since the tablet software updates regularly, the user manual may not cover all aspects of new features.

#### **Important Notices**

- The new battery will be in its best condition after being fully charged and discharged 2-3 times.
- While using earphones, if the volume is excessively high it may cause hearing damage. Please adjust the volume of the player to a safe level and moderate during use.
- Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface
- Do not use the tablet while driving or walking.
- The tablet is not moisture and water resistant. Please do not use it in a damp environment.
- Do not drop or hit the tablet against a hard surface, or the screen may be damaged or cracked.
- Do not upgrade the firmware by yourself. The tablet should be upgraded with the right firmware and right methods offered by us. If upgrade is needed, please contact us.

	Section 1: Tablet Overview Tablet Overview Screen Basics Touch Screen Basics Section 2: Initial Setup Charging Turn on Setting up your Google™ Account Getting Started Section 3: Your Home Screen Icons Adding Icons Moving Icons Removing Icons Take a Screenshot Sleep Mode Notifications Change the Wallpaper Section 4: Network Connection Turn On/Off Wi-Fi Adding a Wi-Fi Network Section 5: Connecting to a Computer PC Mac Section 6: Using the Keyboard Entering Text Gesture Typing Basic Editing Keyboard settings Section 7: Exploring Apps Clock Camera Included Apps Uninstalling Apps Section 8: Google Accounts Why use a Google Account?	4 4 4 5 5 6 6 6 7 7 8 8 9 9 9 10 10 11 12 12 13 14 14 15 16 16 17 18 18 19 19 20 22 23 33
1	Included Apps Uninstalling Apps	20 22
	Google Play recommendations	25

Google Play Store app	25
Section 9: Google Now	26
Google Now Cards	26
Location Access	27
Google Now Settings	27
Section 10: Voice Actions	29
Voice Commands	30
Section 11: Tablet Settings	31
Section 12: Tips & Tricks	32
Extending Battery Life	32
Reset/Restore	33
Troubleshooting	33
Customer Support	34
Limitations of Liability Statement	34


36

Français

# 1. Tablet Overview







#### **Screen Basics**



#### **Touch Screen Basics**

Tap the screen once to activate or open something.



Touch and hold to move an item by dragging.
\*In many apps touch and hold can offer more options.





Zooming: Double tap quickly to zoom into a webpage, picture, or map. Some apps allow you to zoom in and out by touching the screen with two fingers, and pinching them together.






TIP: You can flick the screen with your finger to quickly scroll through a long list, such as a library of music.

Tap a specific location on the screen where you would like to enter text. The on-screen keyboard will pop up.

# 2. Initial Setup

**Charging**Fully charge your tablet for 6 hours before the first use.

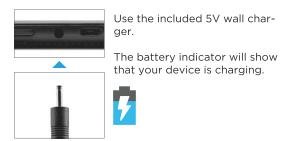

#### Turn on

To start your tablet, press and hold the power key for 2 seconds. The Ematic logo indicates that the tablet is loading.

Once the screen loads, choose your language and connect to your Wi-Fi network. You will then be prompted to sign in to your Google Account.

## **Setting up your Google Account**

Sign in using the email address and password from your Google Account. If you don't have one yet, create one

An email address that you use for any of the following counts as a Google Account:

- Gmail™
- YouTube™
- Google Apps™
- AdWords<sup>™</sup>
- Any other Google product

When you sign in with a Google Account, all your email, contacts, Calendar events, and other data associated with that account are automatically synced with your tablet. You can also add multiple Google Accounts later.

#### **Getting Started**

Once your tablet loads, you will see a Welcome Screen. Tap OK to begin using your tablet. Tap to customize your Home Screen with apps and widgets.



# **3.** Your Home Screen

#### Icons

You can fill the home screen with any combinations of shortcuts, widgets, and folders you like.

When you power up your tablet for the first time, you'll see the main home screen panel. This panel is typically centered; you can access additional panels on either side of the main one by swiping your finger left or right.



Battery Level: The blue battery level indicator will decrease and change to red as the battery is drained.



Wi-Fi Signal: As the Wi-Fi signal strength decreases, the blue bands will change to grey.



All Apps: Tap to view all apps.



Back: Go back to the previous screen.



Recent apps: Open a list of recent apps. Tap an app to open or swipe left/right to remove the thumbnail.



Home: Go back to the home screen. Hold and slide up to open Google Now.



Increase Volume



Decrease Volume

### **Adding Icons**



Within the All Apps menu, choose an app or swipe right to choose a widget. Tap and hold desired app or widget for about 2 seconds until the Home screen appears. Slide it wherever you want and let go.

### **Moving Icons**

Touch & hold the icon.

Slide your finger to the new position.

(To move between Home screens, slide toward the edge of the screen. To bump another icon out of the way, slide slowly towards it.)

Lift your finger to drop the icon into its new position.

#### **Removing Icons**

Touch and hold the app or widget and drag to the X icon at the top of the screen.



### Take a Screenshot

Make sure the image you want is displayed on the screen. Press the Power Button and the Volume Down button simultaneously.

You can also tap the Screenshot icon in your Quick Settings by swiping down from the top right of your screen.



The screenshot is automatically saved to your Gallery.

## Sleep Mode

To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, press the power key and immediately release it. Do it again to bring up the lock screen.




#### **Notifications**

Swipe down from the top right of your Home Screen to view your Quick Settings.



Swipe down from the top left of your Home Screen to view your Notifications.



Change the Wallpaper
Tap and hold your finger on any open space on your home screen. A list of options appears.



Gallery: Choose a wallpaper from your personal gallery Live Wallpapers: Choose from a scrolling list of animated wallpapers

Photos: Choose a wallpaper from your personal photos. UHD Player: Choose a wallpaper from your personal

Wallpapers: Choose from thumbnails of default images

# 4. Network Connection

Wi-Fi can only be used when it connects with a Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot.

#### Turn on Wi-Fi



Within the All Apps menu, tap Settings.



Under Wireless & Networks, tap the Wi-Fi switch to turn it on and scan for networks.

Your tablet will list the networks it finds within range. Tap a network to connect.




When connected, the wireless indicator appears in the status bar. The blue lines indicate connection strength.

#### Turn off Wi-Fi

Tap the Wi-Fi ON switch under Wireless & Networks. Turn off Wi-Fi when you're not using it to extend the life of your battery between charges.


## Adding a Wi-Fi Network

Users may also add a Wi-Fi network under Wi-Fi settings.

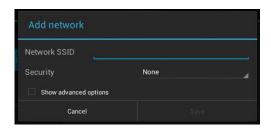

Forget a Wi-Fi Network
In the Wi-Fi settings screen, tap the name of the network. Tap "Forget" in the dialog that opens.

# **5.** Connecting to a Computer

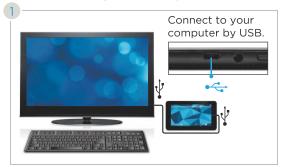


### PC



The device driver will install.



Choose open folder to view files or select the removable disk.




You will now be able to drag and drop the files from your computer onto your tablet just as you would with a USB flash drive.

## Mac



First, install the Android File Transfer application for Mac. Go to android.com/filetransfer on your Mac and choose download now.

3 Install the application.

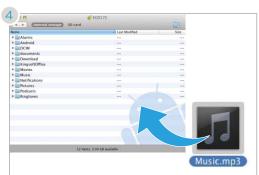

The Android File Transfer application will launch automatically when you connect your tablet. Drag & drop files to transfer.

# 6. Using the Keyboard

## **Entering text**

Enter text using the onscreen keyboard. In most apps it will open automatically. In others, open the keyboard by touching where you want to type.

\*Depending on what you are doing, some of the keys on the keyboard may look different. Keyboards A&B appear when you are searching or browsing the net. Keyboard C appears when you are writing emails, documents, or messaging.

#### Keyboard A:



#### Keyboard B:

