

User's Manual

Dear users,

First of all, thank you for giving us the opportunity to serve you!

Before using this product, please read the instructions carefully.

This "manual" is intended to introduce you the basic characteristics of this product, in order to help you using it at the best way. This manual describes the product's features and information in details, as well as recommendations and attentions to help you fully understand the technical characteristics of the product.

In the annex provided with the product, you will find "warranty card", which indicates the effectiveness of the relevant provisions of maintenance, as well as additional services provided to users, please read it carefully in order to avoid unnecessary problems. The product has powerful functions and high performance, it will greatly improve your enjoy and satisfaction online.

Special note:

All the information in this manual is correct at time of publication. However, as we continue to update and improve the product, so the software on your device may be described slightly different in appearance and functions.

(We reserve the right to improve products, specifications and designs are subject to change without notice!)

Content

Technical parameters	4
Appearance Preview	5
1. Appearance Introduction	5
2. TF card.....	6
3. Charge	6
First experience	6
1. Boot the MID	7
2. Shutdown	7
3. Lock-screen and power-saving mode	9
4. Main interface description	9
5. Custom Screen	10
7. Connection of USB cable.	12
Internet Function	14
1. Network connection	14
1-1WI-FI.....	14
2. Internet	15
Software Management	16
1.Explorer	16
2. Software installation.....	16
Applications	16
1. Music Playing.....	16
2. Picture browsing	17
3. E-mail	18
3. E-mail	19
4. Camera and video recording	19
5. Apk Installer	20

Prompt

... Do not disassemble the product; do not use alcohol, thinner or benzene to clean the surface of the product, if there is any problem, please contact us.

... The product should be charged more than 12 hours in the first three times.

... Do not put the product in a place with high temperature, humidity or dust; do not put the product in a vehicle with windows closed especially in summer.

... To avoid dropping or strong impact to the product, do not let the touch screen be shaken violently, otherwise, it may cause damage to the touch screen or display incorrectly.

... Please select the appropriate volume, volume should not be too high when using earphones, if you feel tinnitus, please turn down the volume or stop using the product.

... Please charge the product in the following cases:

A. The battery icon shows no power.

B. The system is automatically shut down, reboot it will be shut down again soon. (Low battery, the system will be automatically shut down)

C. No response when press keys.

Note: Please use the attached adapter to charge the machine, it can not be charged by any other rechargers; otherwise the machine may be burned.

... Please do not suddenly disconnect the machine when it has been formatting or uploading and downloading in progress, otherwise it may cause a program error.

... After improperly shutdown, the machine will scan and repair the disk when reboot, the interface may stay a long time in the progress.

... For memory loss caused by product damage, repair or other reasons, the company is not responsible; please properly use the product by following the manual.

... Does not use the product in places prohibit the use of electronic device, for example, on an aircraft.

... Please do not use the product when driving or walking in a street, otherwise it may cause a car accident.

... USB is used for data transmission only, can't charge.

... This machine has no water resistance.

Technical parameters

Machine	CPU	InfoTMIC X15 Cortex A5 1.0GHz
	Operating system	Android 4.1.1
	Browser	Google Browser
	Hard disk	4GB NAND Flash
	Memory	1GB DDR3
	Expansion slot	MicroSD Card Slot, Support up to 32GB flash
	Screen	7" TFT Touch Panel
	Camera	Front: 0.3 megapixels
	Resolution	1024x600 Pixels
	Input method	Soft-keyboard on touch panel
	Built-in speakers	1W 8ohm built-in speaker
	Earphone	3.5mm
	USB cable	Micro USB
	Battery	Li-polymer Rechargeable Battery 3000mAh 3.7V
	Size	191mm×116.5mm×11mm
	Weight	0.302kg
	Voltage	AC 100~240V 50/60Hz; DC 5V/2A
	Working temperature	-10℃~+55℃
	Music formats	OGG、AAC、FLAC、MP2、WAV、M4A、WMA、etc...
	Video formats	RM、RMVB、AVI、3GP、MP4、MOV、FLV、ASP、MPG、VOB、MKV
	Picture formats	JPEG, BMP, PNG
	E-mail	Email, Gmail(Optional)
	Maps	Google map, Navigation map(Optional)
	Network access	WiFi (802.11 b/g/n)

Appearance Preview

1. Appearance Introduction

This chapter describes the appearance of the machine, including buttons and ports; it will guide you to understand the features and accessories.



- | | | | |
|------------------|----------------------|-------------------|--------------|
| (1) Touch screen | (2) Power switch key | (3) Earphone slot | (4) USB slot |
| (5) DC slot | (6) HDMI slot | (7) TF card slot | (8) Speakers |
| (9) Reset | | | |
| (10) Camera | | | |

Appearance Preview

Note: (1) The LCD is a touch screen; you can carry out clicking and dragging operations in the touch area; please do not use pen, pencil or other sharp objects to click on the screen to avoid scratching.

(2) Please keep the speakers clean to avoid the dirt blocking the hole and affect the sound.

(3) The back of the MID has antenna and model, please do not cover with metal objects to avoid weak signal.

2. TF card

When plug a TF card, please do follow the icon on the machine, pay attention to the direction of oblique angle.

(When remove the card, press the card with your thumb and release, the card will be automatically ejected.)



Note: (1) Do not let objects come into the card slot. (In order to prevent the harm of dust or moisture, please put cards back into box or package when don't be used)

(2) When remove a TF card, be sure that the machine is power off.

(3) To remove a TF card with the machine is working, please don't pull out the TF card indirectly.

3. Charge

This product uses 5V/2A standard voltage; Please use the attached power charger, other chargers may cause failure and risk.

Do not use the charger in humid environment. If your hands and feet are wet, please do not touch the charger.

When using the charger or charging the product, please maintain good ventilation, do not cover the machine with paper or other items resulting in reduced cooling effect.

First experience

The MID can achieve a variety of operating modes: (1) Clicking. (2) Holding. (3) Sliding. (4)

Dragging. (5) Rotating.

Keys action definition: (1) Short press: the time is less than 1.2 seconds. (2) Long press: the time is longer than 3 seconds. There are all short presses in this manual without special instructions.

360 degree rotation: for most interfaces or images, it can automatically rotate the screen from horizontal into vertical as long as rotate the MID.


1. Boot the MID

1-1. Press the power switch key at the side of the machine (long press), the machine will be booted. The LCD screen will display booting screen and animation first, a few seconds later; it will enter into the Lock screen interface, shown as below.



1-2. Hold unlock button, there will be a white wire frame around. Drag unlock button to the right unlock icon, and then unfasten.

Or the user can press the menu key indirectly to unlock.


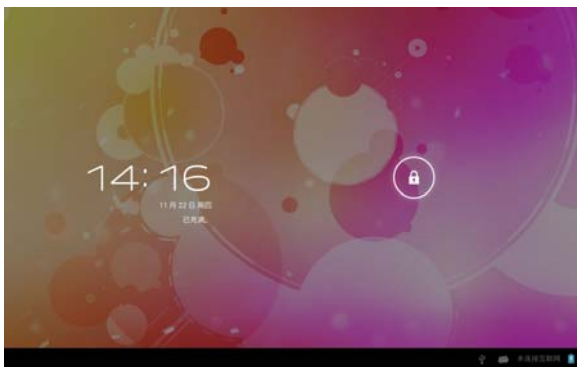


2. Shutdown

When the MID is running, press the power switch key (long press), the system will display the shutdown screen.

First experience

Click the "Power off" options, "Power off" three function, choose "Power off" into the following screen.

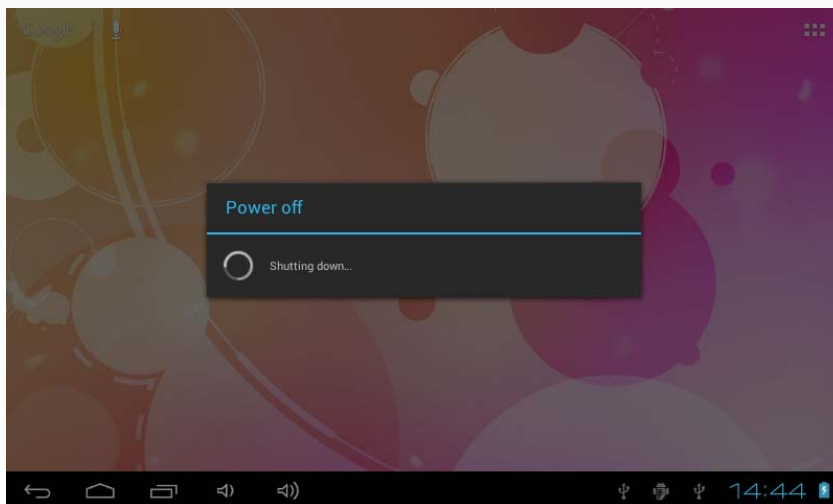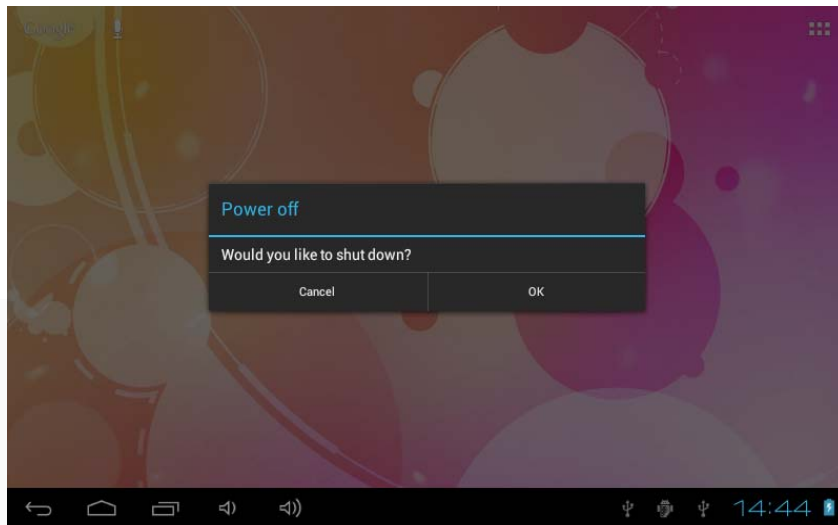

* * * When electricity to 15%, the system will prompt charge. When battery is running low, the system will automatically shut down.

First experience

3. Lock-screen and power-saving mode


When the machine is on, press the power switch or the screen is inactivity a certain time, the MID will enter into screen-off / lock-screen status for power saving. Then MID programs are still running, but the screen is blank.

When press the power switch again, MID will open the unlock menu.

Hold and drag unlock button to the right unlock icon, the MID will resume normal state.



4. Main interface description

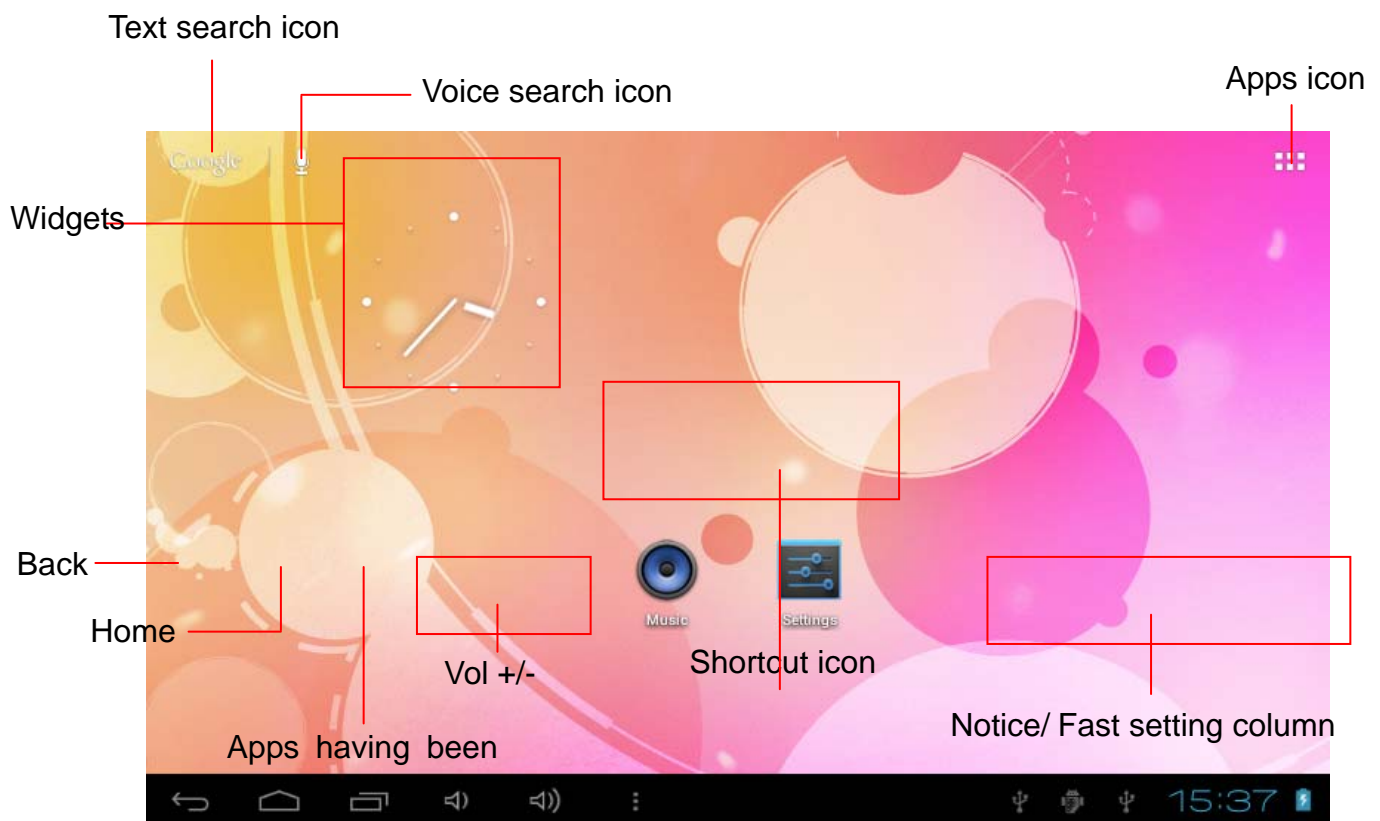


First experience


Text search icon	Under the system has used a correct network, click to enter into the Text search menu. Input a key word and search.
voice search icon	Under the system has used a correct network, click to enter into the voice search menu. Aim straight the MIC and say a key word.
APPS icon	Click to enter into the applications menu.
Shortcut icon	Shortcut icons add/delete will be covered later.
Widgets	Widgets add/delete will be covered later.
Back key	In pop-up menu, press it to cancel operation. In the other menu, press it to back the front menu.
Home key	In any menu, press it to back the main interface.
Apps having been opened	Click to display all APPS programs that have been opened. Click each of the application to enter into its relevant menu.
Notice/Fast setting column	Click to display more information: USB, WIFI, Date etc. Click each item to enter into its setting menu.
Vol +/- key	In any menu, press it to adjust the volume.

In the main interface, the system sets 5 display menus. You can browse them freely through sliding screen from left and right. You can add/delete different icons in each the main menu.

5. Custom Screen


Add shortcut


In the main interface, click  button to open Application Program menu. Press and hold the icon, will open the add shortcut interface, move the icon to the place you want to place, the program will add shortcut to the main interface.

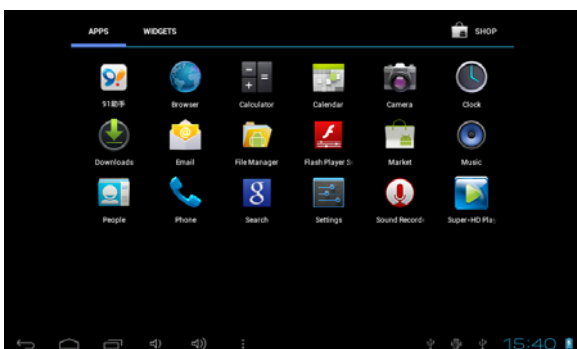




First experience


Add widgets

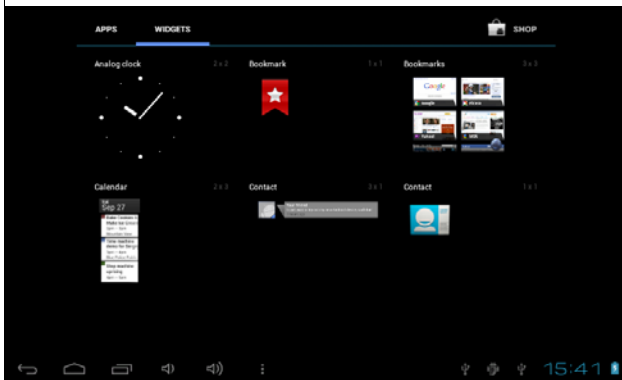In the main interface, click  button, will open Application Program menu. Press the "WIDGETS" options, will open the widgets interface, Press and hold the icon, will open the add widget interface, move the icon to the place you want to place, the widget will add to the main interface.



Delete shortcut/widgets

In the main interface, press and hold the shortcut icon and Widgets until the top of the screen appears the icon . Then drag the icon to the icon , the icon will turn red , the icon will be deleted after release the button.

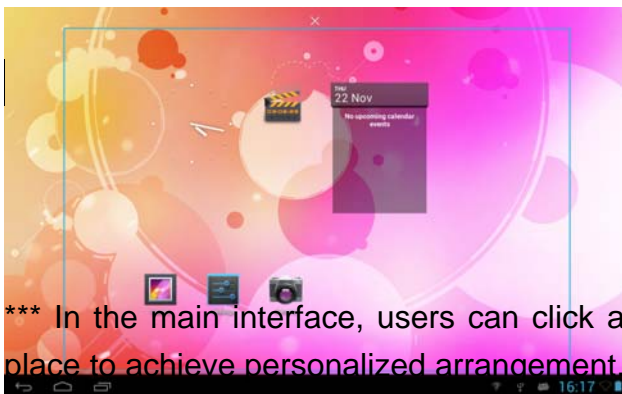

*** In the main interface, users can click and drag any shortcut icon and Widgets to the place to achieve personalized arrangement.





First experience

6. Change your wallpaper

In order to decorate personalized main interface, users can set their favorite pictures, photos ... as wallpaper of the main interface.

6-1 If press and hold touch screen in the main interface, the machine will pop-up the wall paper dialog box. .

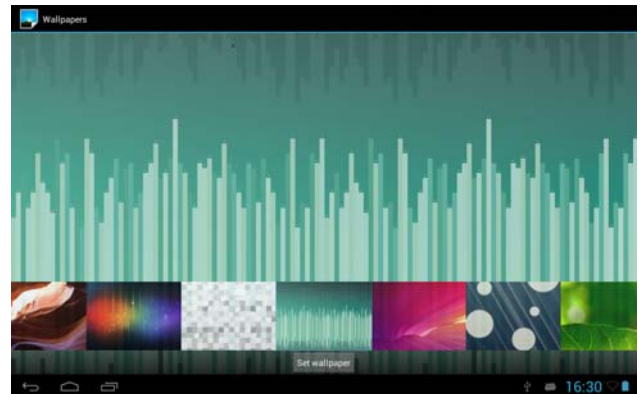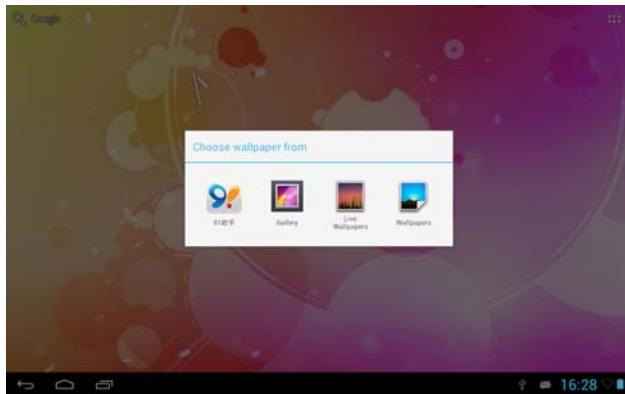

6-2 Select one item, for example: click "Wallpaper" options to enter its sub menu.

6-4 Slide the screen, browse and select the appropriate picture, after clicking MID will return to the settings interface and display the selected wallpaper.




7. Connection of USB cable.


When connect the MID to computer with a USB cable,



icon will be displayed in the

Click , will show the following interface.

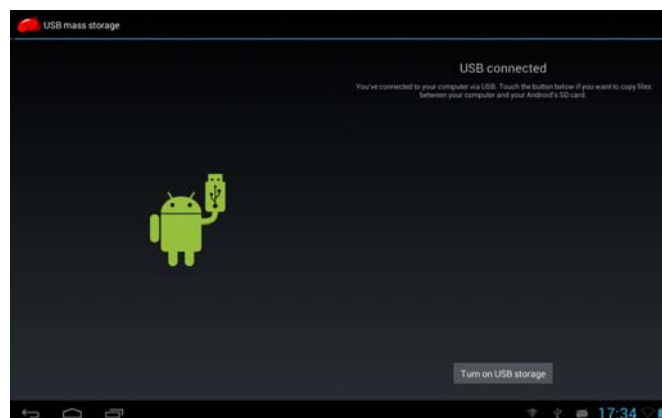


Click  , it can realize synchronized operation between MID and computer.

At this time, files in TF card and memory of MID will be displayed on the computer; you can copy and transfer the data.

System setting



In the setting interface, user can complete many custom settings and inspect the relevant information of all the software that being installed.

Click  in the Application Program menu to enter into its setting menu.



“APPS”


In the apps settings interface, user can see all installation applications. If you open one application, you can browse its relevant information. As to not be used application again, you can select to delete it.

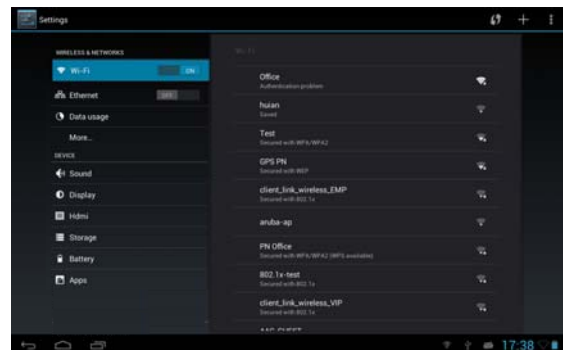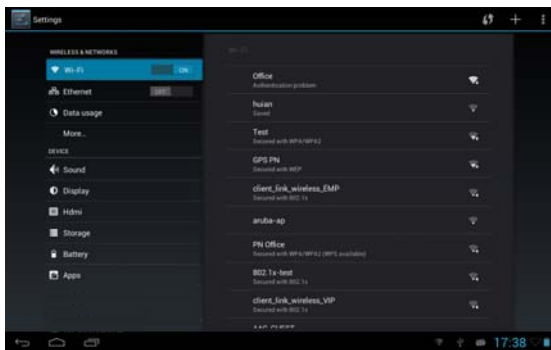

Internet Function

1. Network connection

The MID achieves internet access through built-in WI-FI .

Click  , MID will pop-up settings menu.






1-1WI-FI


1-1-1 Sliding the “Wife” switch button  to open the Wi-Fi.

1-1-2 Click “Wi-Fi” to enter into the Wi-Fi setting menu.

1-1-3 The system will automatically search and add the nearby networks can be connected, and display the name of network.

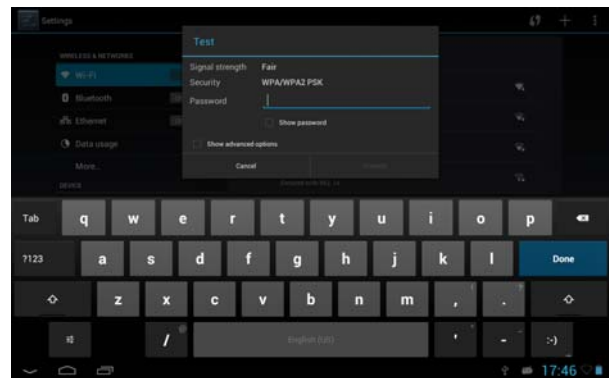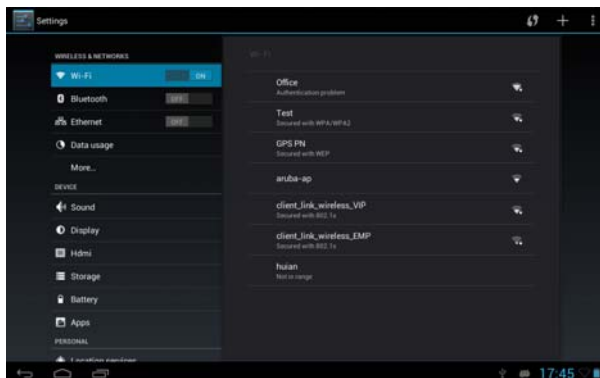

(2-3) Clicking a wireless network, MID will pop-up messages menu. Click space, keyboard will appear, after entering the password, click  .

If the connection is successful, the network icon  will be displayed in the Notice/Fast setting column of the main interface.

Special note:

As to the Wi-Fi router which have been connected before, this machine will keep record automatically. Next, when the status of Wi-Fi set-up is open, the machine will search the Wi-Fi router automatically and then connect to it .

When the network icon  will be displayed in main interface, the machine

has connected WIFI successfully.


Internet Function

2. Internet

2-1 Under the normal statue of the network connection, Click in the main interface to enter into its menu. There will display all the Web of having been opened.




in the main

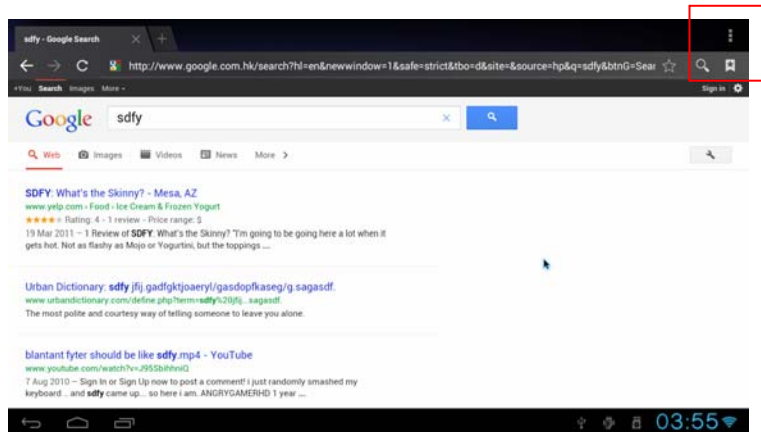

2-2 Click the input frame, keyboard menu will pop-up, input a new Web site and open.



2-3 Click icon (see the red frame), the machine will pop-up the operation function menu.

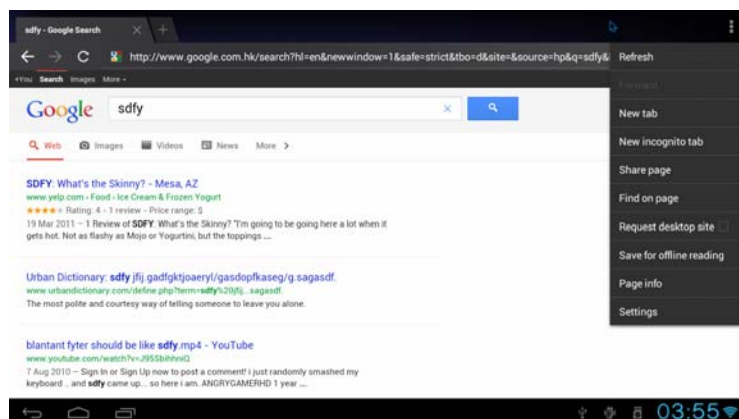


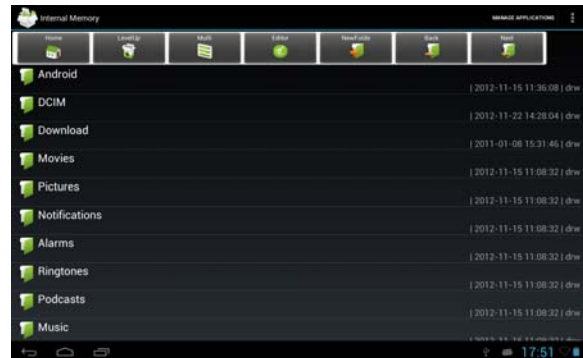
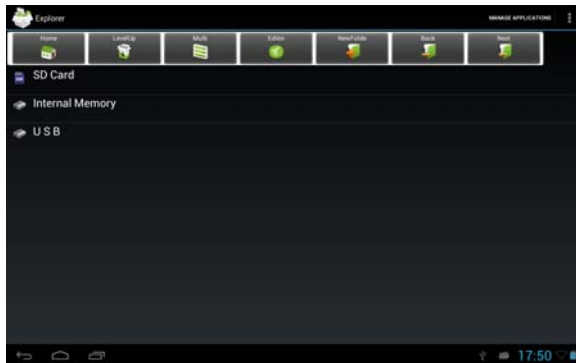
Software Management

The product supports third-party applications on android platform, most applications can be obtained and downloaded from the Internet.

1.Explorer




Click  in Application Program Interface to enter into explorer, you can browse, copy, delete, move, rename, and other editing operations to the files in the machine and TF card.



2. Software installation

2-1 Click the software to be installed in the "Explorer", MID will open the installer interface.

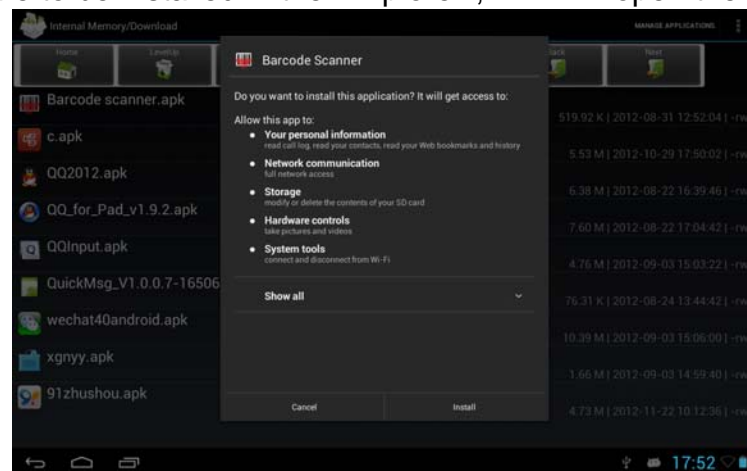

2-2 Click "Install", MID will show the progress bar, after installation, it will display "Application is already installed."

2-3 "Click "Finish" to exit, thus its shortcut icon will be displayed in "Application function key menu".

2-4 Click the icon to open the software.

Special note:

You can download chat tools to install. Such as: QQ, MSN....

Applications


1. Music Playing

1-1 Click



in the "Application Program Interface" to enter into the playlist.


1-2 Click a music file to open the player and play it.

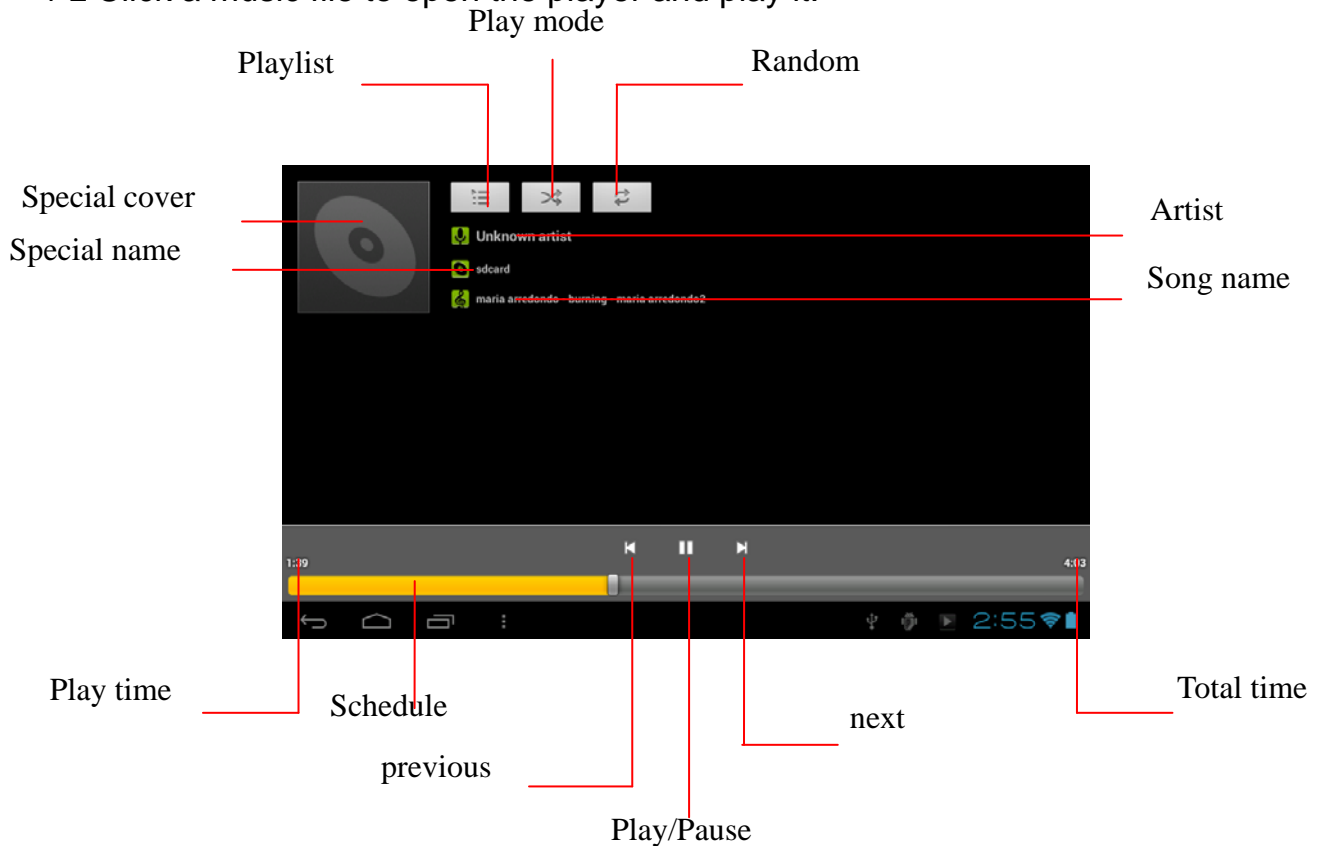

1-3 Backstage play

When have playing a music, click  to back the main interface, the machine will enter into a backstage play mode.

1-3-1 Click  in the main interface to display its menu.

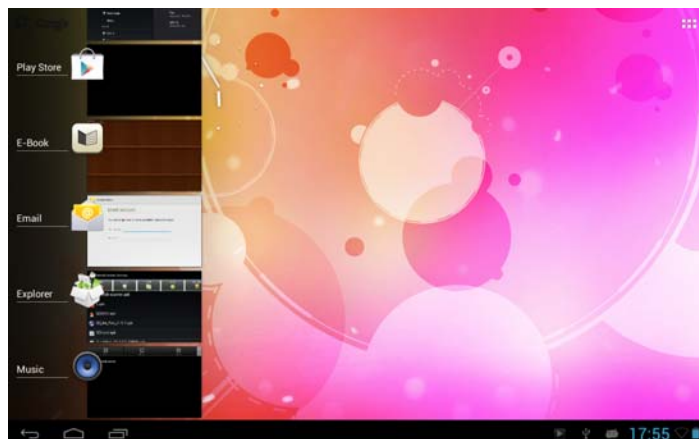


1-3-2 Select the music player to back the player menu.

Applications

2. Picture browsing


2-1 Click

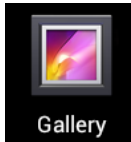

In "Application Program Interface" to enter into picture browsing

interface. there are all the picture and video data stored in the machine and a TF card.

2-2 Select a picture to browse.

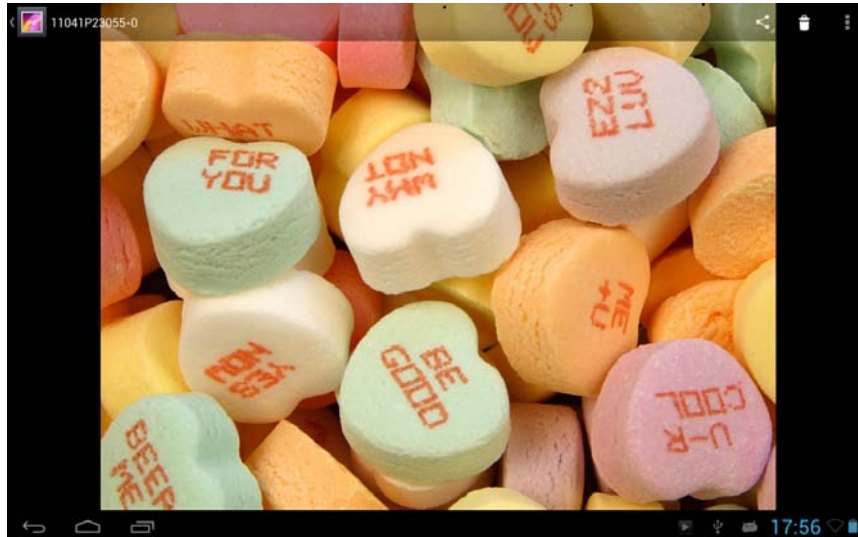


2-3 Select a video data to play.

Schedule

Play time

Total time

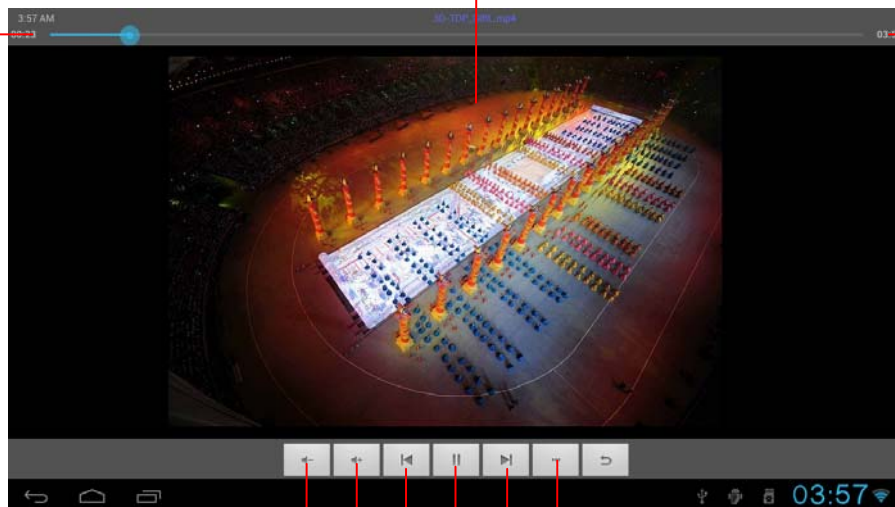

Volume

Playlist

Previous

Next


Play/Pause

Applications

3. E-mail



Click in "Application Program Interface" to enter into E-mail settings, input the email address and password, you can send and receive email messages.

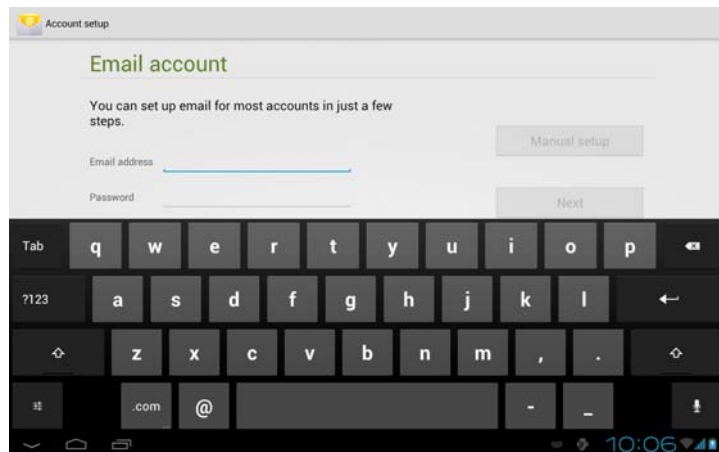

4. Camera and video recording



Click in "Application Program Interface" to enter into its interface.



Photo Preview

Front / rear camera


Photo / Video recording

Settings menu


Photo Video

Applications



5.Apk Installer

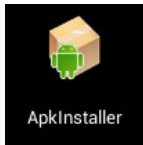

Click "ApkInstaller" choose "Install", then select the "Internal Memory" can be installed need software.

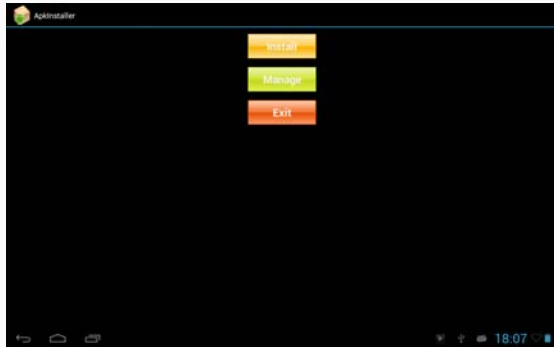

Click on the "Manage" for application, Launch, Export, Uninstall, Cancel the operation.

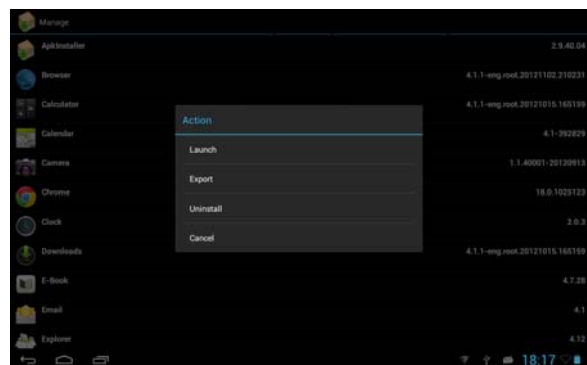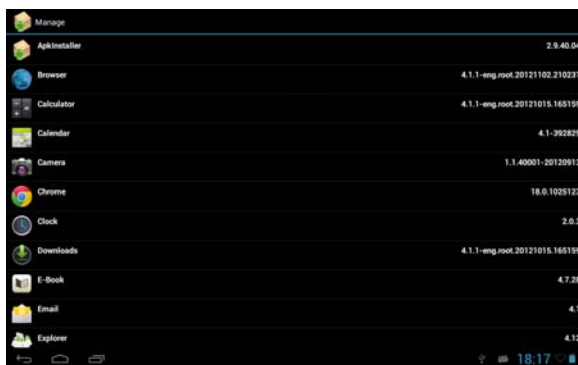

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.