


Quick Installation Guide

AC1300 Outdoor AP

OAP1300

I. Product Information

I-1. Package Contents

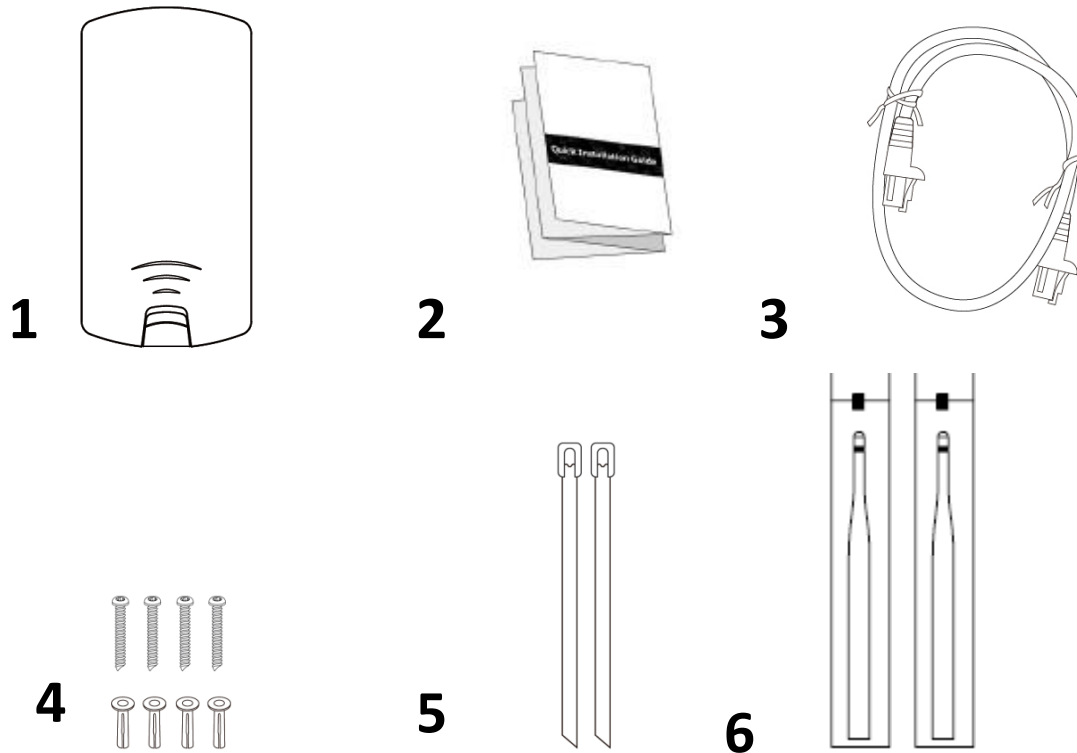

1. Access Point

2. Quick Installation Guide

3. Ethernet Cable

4. Wall Mount Screws Kits


5. Pole Mount Ties

6. Antenna

I-2. System Requirements

- Existing Ethernet cable, IEEE802.3at PoE Switch
- Computer with web browser for access point configuration

I-3. Hardware Overview

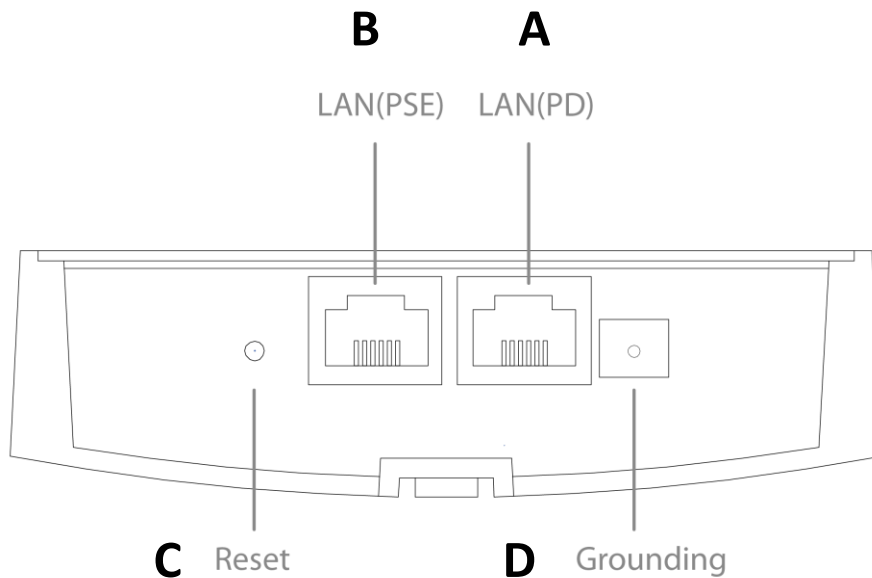

- A.** LAN1 port with Power over Ethernet (IEEE802.3at PoE PD-IN).
- B.** LAN2 port with Power over Ethernet (IEEE802.3af PoE PSE-OUT).
- C.** Reset Button.
- D.** Grounding Terminal.

I-4. LED Status

LED Behavior		
5G	ON	5G Wireless is enabled.
	Off	5G Wireless is disabled.
2.4G	ON	2.4G Wireless is enabled.
	Off	2.4G Wireless is disabled.
LAN2(PSE)	ON	LAN2 port is connected.
	Flashing	Traffic is passing through Ethernet port.
	Off	LAN2 port is unconnected.
LAN1(PD)	ON	LAN1 port is connected.
	Flashing	Traffic is passing through Ethernet port.
	Off	LAN1 port is unconnected.
Status	ON	Booting up process
	Off	No error occur
Power	ON	The access point is on.
	Flashing	Long Flashing: Firmware upgrading
	Off	The access point is off.

I-5. Reset

If you experience problems with your access point, you can reset the device back to its factory settings. This resets all settings back to default.

1. Press and hold the reset button on the access point for at least 10 seconds. Then release the button.



You may need to use a pencil or similar sharp object to push the reset button.


2. Wait for the access point to restart. The access point is ready for setup when the Status LED is **OFF**.

I-6. Mounting

The access point includes a mount for wall or pole which requires some assembly.


Wall Mount

1. Attach the access point to a wall using the included screws and plugs.

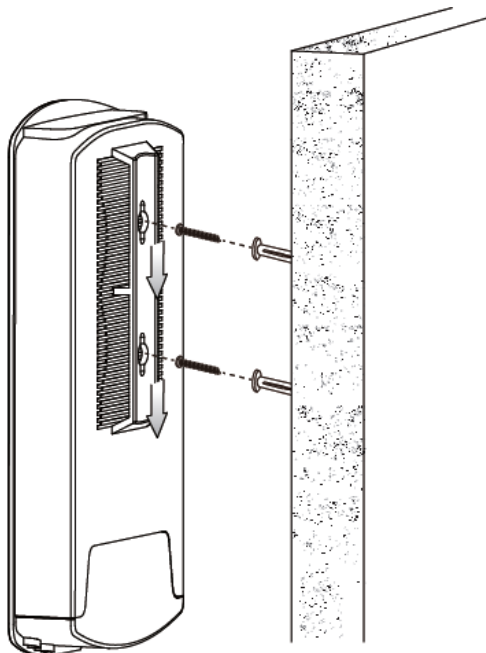

Pole Mount

1. Fix the access point to a pole using the included stainless tie.

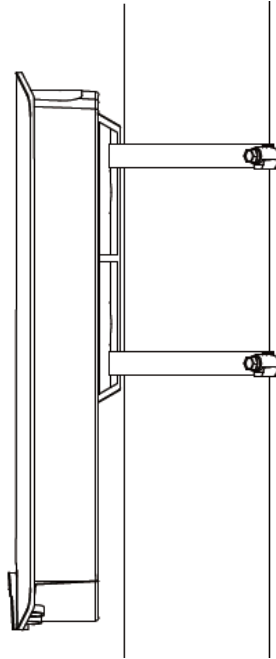

Attention: This product is installed in restricted access location by professionals.


II. Quick Setup

The AC1300 Outdoor AP/CPE features a range of powerful functions:


- AC1300 high-speed wireless technology
- 16 SSIDs for management
- SNMP v1/v2c/v3

Your access point can be up and running in just a few minutes. It can function as a standalone access point (AP mode), as part of an AP array (Managed AP mode), or as a client bridge for WISP last-mile services (Client Bridge mode).

II-1. Initial Setup

 **Do not connect a non-PoE device to the access point's LAN2 (PoE-OUT) port. The LAN2 port outputs 48V and can damage a non PoE device.**

1. Connect the access point's LAN1 (PoE-IN) port to the PoE Switch via Ethernet cable.
2. Wait a moment for the access point to start up. The access point is ready when the Status LED is **OFF**.
3. Use an Ethernet cable to connect your computer to the access point's LAN2 port for initial setup.

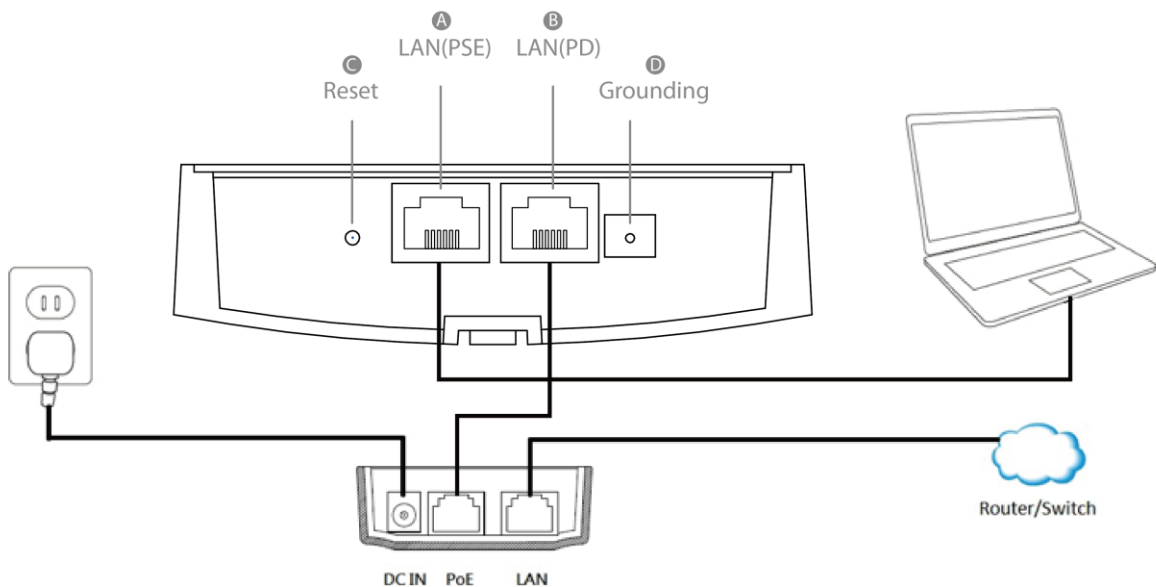


II-2. AP Mode


1. Enter the access point's IP address into the URL bar of a web browser. The default IP is **192.168.2.2**. If the AP is connected to a DHCP server, ensure you use the correct address.



2. You will be prompted for a user name and password. Enter the default username "admin" and the default password "1234".

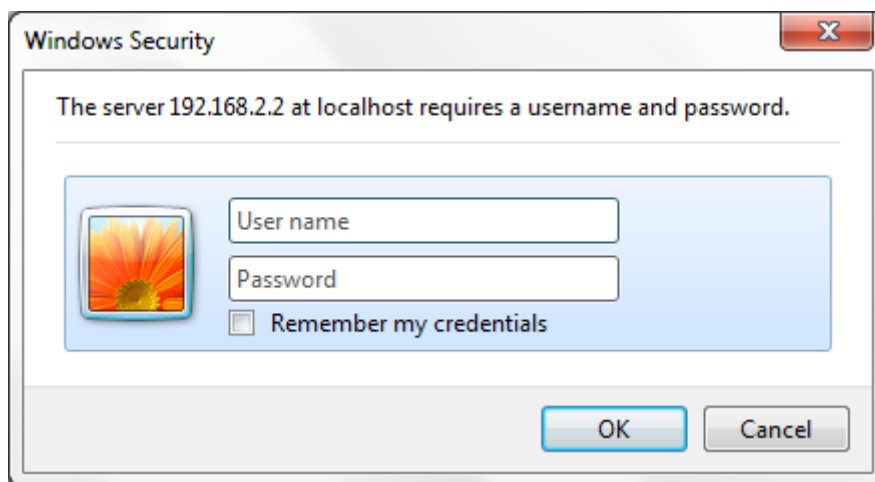

3. You will arrive at the "System Information" screen shown below.

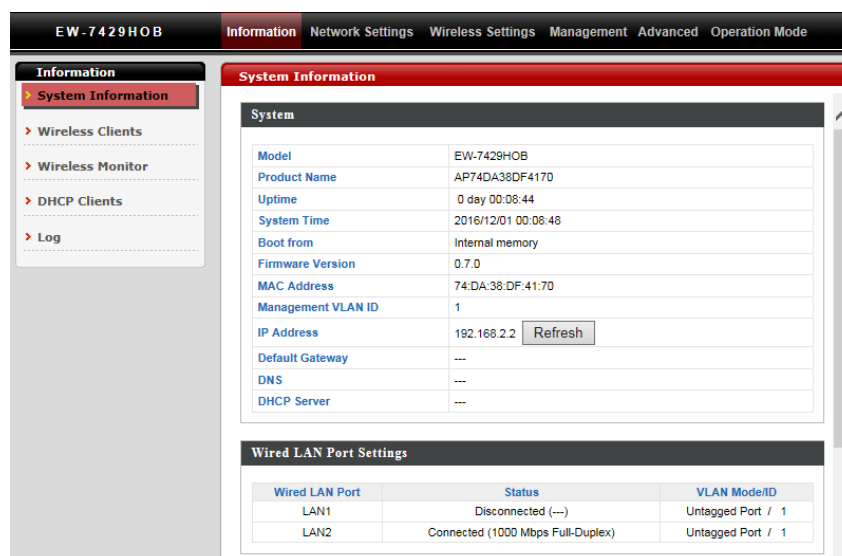A screenshot of the 'System Information' screen in a web interface. The top navigation bar includes 'EW-7429HOB', 'Information', 'Network Settings', 'Wireless Settings', 'Management', 'Advanced', and 'Operation Mode'. The left sidebar shows a tree view with 'System Information' selected. The main content area is titled 'System Information' and contains a 'System' section with the following details:

Model	EW-7429HOB
Product Name	AP74DA38DF4170
Uptime	0 day 00:08:44
System Time	2016/12/01 00:08:48
Boot from	Internal memory
Firmware Version	0.7.0
MAC Address	74:DA:38:DF:41:70
Management VLAN ID	1
IP Address	192.168.2.2 <input type="button" value="Refresh"/>
Default Gateway	---
DNS	---
DHCP Server	---

Below this is a 'Wired LAN Port Settings' section with a table:

Wired LAN Port	Status	VLAN Mode/ID
LAN1	Disconnected (---)	Untagged Port / 1
LAN2	Connected (1000 Mbps Full-Duplex)	Untagged Port / 1

The next steps will help you to configure the following basic settings of the access point:

- LAN IP Address
- 2.4G/5GHz SSID & Security
- Administrator Name & Password
- Time & Date



It is recommended you configure these settings before using the access point.

1. To change the access point's LAN IP address, go to **"Network Settings" > "LAN-side IP Address"** and you will see the screen below.

LAN-side IP Address	
IP Address Assignment	DHCP Client ▼
IP Address	192.168.2.2
Subnet Mask	255.255.255.0
Default Gateway	From DHCP ▼ <input type="text"/>
Primary DNS Address	From DHCP ▼ <input type="text" value="0.0.0.0"/>
Secondary DNS Address	From DHCP ▼ <input type="text" value="0.0.0.0"/>

2. Enter the IP address settings you wish to use for your access point. You can use a dynamic (DHCP) or static IP address, depending on your network environment. Click "Apply" to save the changes and wait a few moments for the access point to reload.



When you change your access point's IP address, you need to use the new IP address to access the browser based configuration interface instead of the default IP 192.168.2.2.

3. To change the SSID of your access point's 5GHz wireless network(s), go to **"Wireless Settings" > "5GHz 11ac" > "Basic"**. Enter the new SSID for your 5GHz wireless network in the "SSID1" field and click "Apply".



To utilize multiple 5GHz SSIDs, open the drop down menu labelled "Enable SSID number" and select how many SSIDs you require.

Then enter a new SSID in the corresponding numbered fields below, before clicking “Apply”.

5GHz Basic Settings	
Wireless	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Band	11a/n/ac ▼
Enable SSID number	1 ▼
SSID1	EW-7429HOB-DF4170_A VLAN ID 1
Auto Channel	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Auto Channel Range	Band 1 ▼
Auto Channel Interval	One day ▼ <input type="checkbox"/> Change channel even if clients are connected
Channel Bandwidth	Auto 80/40/20 MHz ▼
BSS BasicRateSet	6,12,24 Mbps ▼

Apply Cancel


4. To configure the security of your access point’s 5GHz wireless network(s), go to **“Wireless Settings”** > **“5GHz 11ac 11an”** > **“Security”**. Select an **“Authentication Method”** and enter a **“Pre-shared Key”** or **“Encryption Key”** depending on your choice, then click **“Apply”**.



If using multiple SSIDs, specify which SSID to configure using the “SSID” drop down menu.

5GHz Wireless Security Settings	
SSID	EW-7429HOB-DF4170_A ▾
Broadcast SSID	Enable ▾
Wireless Client Isolation	Disable ▾
802.11k	Disable ▾
Load Balancing	100 /100
Authentication Method	No Authentication ▾
Additional Authentication	No additional authentication ▾

5. To change the SSID of your access point's 2.4GHz wireless network(s), go to **“Wireless Settings” > “2.4GHz 11ac” > “Basic”**. Enter the new SSID for your 5GHz wireless network in the “SSID1” field and click “Apply”.

 **To utilize multiple 2.4GHz SSIDs, open the drop down menu labelled “Enable SSID number” and select how many SSIDs you require. Then enter a new SSID in the corresponding numbered fields below, before clicking “Apply”.**

Basic	
2.4GHz Basic Settings	
Wireless	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Band	11b/g/n ▾
Enable SSID number	1 ▾
SSID1	EW-7429HOB-DF4170_G VLAN ID 1
Auto Channel	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Auto Channel Range	Ch 1 - 11 ▾
Auto Channel Interval	One day ▾ <input type="checkbox"/> Change channel even if clients are connected
Channel Bandwidth	Auto ▾
BSS BasicRateSet	1,2,5.5,11 Mbps ▾
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

6. To configure the security of your access point's 2.4GHz wireless network(s), go to **“Wireless Settings” > “2.4GHz 11ac 11an” > “Security”**. Select an “Authentication Method” and enter a “Pre-shared Key” or “Encryption Key” depending on your choice, then click “Apply”.



If using multiple SSIDs, specify which SSID to configure using the “SSID” drop down menu.

2.4GHz Wireless Security Settings	
SSID	EW-7429HOB-DF4170_G ▾
Broadcast SSID	Enable ▾
Wireless Client Isolation	Disable ▾
802.11k	Disable ▾
Load Balancing	100 /100
Authentication Method	No Authentication ▾
Additional Authentication	No additional authentication ▾

7. To change the administrator name and password for the browser based configuration interface, go to **“Management” > “Admin”**.

Account to Manage This Device	
Administrator Name	admin
Administrator Password	••••• (4-32 Characters)
	••••• (Confirm)
<input type="button" value="Apply"/>	

8. Complete the “Administrator Name” and “Administrator Password” fields and click “Apply”.
9. To set the correct time for your access point, go to **“Management” > “Date and Time Settings”**.

Date and Time Settings	
Local Time	2012 Year Jan Month 1 Day 0 Hours 00 Minutes 00 Seconds
<input type="button" value="Acquire Current Time from Your PC"/>	
NTP Time Server	
Use NTP	<input type="checkbox"/> Enable
Server Name	<input type="text"/>
Update Interval	24 hours
Time Zone	
Time Zone	(GMT) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London

- 10.** Set the correct time and time zone for your access point using the drop down menus. The access point also supports NTP (Network Time Protocol) so alternatively you can enter the host name or IP address of a time server. Click “Apply” when you are finished.



You can use the “Acquire Current Time from your PC” button if you wish to set the access point to the same time as your PC.

- 11.** The basic settings of your access point are now configured.

III. Hardware Specification

Hardware Specification

MCU/RF	Qualcomm Atheros IPQ 4018 Quad-Core 710MHz
Memory	DDR3 256MB
Flash	SPI NOR 32MB
Physical Interface	<ul style="list-style-type: none">- LAN1: Gigabit Ethernet with IEEE802.3at PoE PD-IN support- LAN2: Gigabit Ethernet with IEEE802.3af PoE PSE-OUT support- Reset Button x 1- Grounding Terminal x 1- RP-SMA Connector x 2
Power Requirement	IEEE802.3at Power over Ethernet
Antenna	External Dual Band Dipole Antenna x 2 (2.4G: 3dBi, 5G: 4dBi)

ENVIRONMENT & PHYSICAL

Temperature Range	Operation : -40 to 60°C (-40°F to 140°F) Storage : -40 to 70°C (-40°F to 158°F)
Humidity	90% or less – Operating, 90% or less - Storage
Certifications	FCC, CE, IEC60950-1, IEC60950-22
Dimensions (TBD)	242.27(L) x 120.93(W) x 48.78(D)mm
Weight	632g (AP: 594g, Antenna: 38g)
International Protection Rated	IP5X, IPX6

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body or nearby persons.