

Fisher® Vee-Ball™ V150, V200 and V300 Rotary Control Valves NPS 1 through 12

Contents

Introduction	1
Scope of Manual	1
Description	2
Educational Services	2
Specifications	2
Educational Services	2
Installation	2
Maintenance	7
Packing Maintenance	7
Replacing the Ball Seal	9
Disassembly	9
Assembly	12
HD Metal Seal Lubrication	18
Bearing and Ball Maintenance	18
NPS 3 through 12 valve	18
Welded Taper Key Replacement	21
NPS 1 through 2 valves	23
Actuator Mounting	29
NPS 3 through 12 without Attenuator	29
Determining Mounting Position	30
Determining Closed Position	30
Parts Ordering	36
Parts Kits	38
Parts List	39
Appendix A Instructions for Non-Series B	46

Figure 1. Fisher Vee-Ball with 1052 Actuator and FIELDVUE™ DVC6200 Digital Valve Controller



X0177

Introduction

Scope of Manual

This instruction manual provides installation, operation, maintenance, and parts information for the Fisher Vee-Ball V150 (NPS 1 through 12), V200 (NPS 1 through 10), and V300 (NPS 1 through 12) rotary control valves (see figure 1). NPS 3 through 12 valves without an attenuator currently in production are referred to as Series B (for more information on this distinction see Appendix A).

For larger valves (NPS 14, 16, and 20), refer to a separate instruction manual. For information on ENVIRO-SEAL™ packing, see the [ENVIRO-SEAL Packing System for Rotary Valves instruction manual \(D101643X012\)](#). Refer to separate manuals for information concerning the actuator, positioner and accessories.

Do not install, operate, or maintain Vee-Ball valves without being fully trained and qualified in valve, actuator, and accessory installation, operation, and maintenance. **To avoid personal injury or property damage, it is important to carefully read, understand, and follow all the contents of this manual, including all safety cautions and warnings.** If you have any questions about these instructions, contact your Emerson Process Management sales office before proceeding.



Table 1. Specifications

Valve Sizes and End Connection Styles V150: NPS 1, 1-1/2, 2, 3, 4, 6, 8, 10, and 12 with CL150 raised-face flanges V200: NPS 1, 1-1/2, 2, 3, 4, 6, 8, and 10 flangeless valves that mate with CL150, 300, or 600 (for NPS 1 through 8) raised-face flanges V300: NPS 1, 1-1/2, 2, 3, 4, 6, 8, 10, and 12 valves with CL300 raised-face flanges Maximum Inlet Pressure⁽²⁾ Consistent with applicable ASME B16.34 or EN 12516-1 ratings Standard Flow Direction Forward (into the convex face of the Vee-ball)	Actuator Mounting Right-hand, standard or left-hand, optional, as viewed from upstream end of valve (see figure 23 and the Actuator Mounting section) Maximum Ball Rotation Standard: Ball rotates counterclockwise to close when viewed from actuator side of valve Optional: Ball rotates clockwise to close Ball rotation is 90 degrees Valve/Actuator Action With diaphragm or piston rotary actuator, field-reversible between: push-down-to-close (extending actuator rod closes valve) and push-down-to-open (extending actuator rod opens valve.) See actuator manual for details
---	--

1. The pressure/temperature limits in this manual, and any applicable code or standard limitation, should not be exceeded.

Description

The V150, V200, and V300 Vee-Ball valves (figure 1) with a V-notch ball are used in throttling or on-off service. The V200 is a flangeless construction. The V150 and V300 valves are raised-face flanged constructions. The splined valve shaft of all these valves connect to a variety of rotary-shaft actuators.

Specifications

Specifications for these valves are shown in table 1 and in bulletin [51.3:Vee-Ball](#).

Educational Services

For information on available courses for Fisher Vee-Ball valves, as well as a variety of other products, contact:

Emerson Process Management
 Educational Services - Registration
 Phone: 1-641-754-3771 or 1-800-338-8158
 E-mail: education@emerson.com
<http://www.emersonprocess.com/education>

Installation

Separate installation steps are provided in this section for V150 and V300 flanged valves, and for V200 flangeless valves. Key numbers in installation procedures are shown in figures 24, 25 and 26 unless otherwise indicated.

Some types of ceramic trim, including VTC, can create a spark under certain conditions. If an edge of a ceramic part is struck against a second ceramic part with enough force, it can produce a spark.

⚠ WARNING

Avoid personal injury and property damage from ignition of process fluid caused by sparks from ceramic trim. Do not use ceramic trim where the process fluid is unstable or if it is an explosive mixture (such as ether and air).

⚠ WARNING


Always wear protective gloves, clothing, and eyewear when performing any installation operations to avoid personal injury.

Personal injury or equipment damage caused by sudden release of pressure may result if the valve assembly is installed where service conditions could exceed either the valve body rating or the mating pipe flange joint rating. To avoid such injury or damage, provide a relief valve for overpressure protection as required by government or accepted industry codes and good engineering practices.

Check with your process or safety engineer for any additional measures that must be taken to protect against process media.

If installing into an existing application, also refer to the WARNING at the beginning of the Maintenance section in this instruction manual.

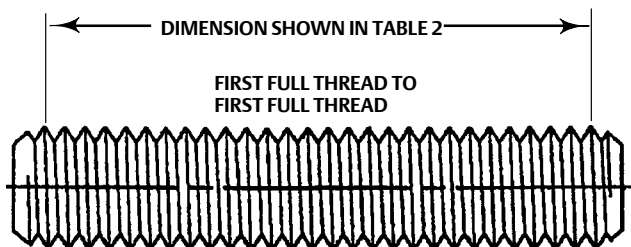Figure 2. Flange Stud Length for Seal Protector End



1A4520

Table 2. Flange Stud Lengths Required for Seal Protector Ring End of Fisher V150 and V300 Valves

VALVE SIZE, NPS	V150				V300	
	ANSI/ISA S75.08.02 Face-to-Face		ASME B16.10 Short Face-to-Face		ANSI/ISA S75.08.02 Face-to-Face	
	mm	Inches	mm	Inches	mm	Inches
1	70	2.75	95	3.75	89	3.50
1-1/2	83	3.25	127	5.00	102	4.00
2	95	3.75	146	5.75	95	3.75
3	95	3.75	133	5.25	121	4.75
4	108	4.25	146	5.75	127	5.00
6	114	4.50	152	6.00	140	5.50
8	121	4.75	171	6.75	152	6.00
10	133	5.25	165	6.50	171	6.75
12	140	5.50	159	6.25	184	7.25

⚠ WARNING

When ordered, the valve configuration and construction materials were selected to meet particular pressure, temperature, pressure drop, and controlled fluid conditions. Responsibility for the safety of process media and compatibility of valve materials with process media rests solely with the purchaser and end-user. To avoid possible personal injury and because some valve/trim material combinations are limited in their pressure drop and temperature ranges, do not apply any other conditions to the valve without first contacting your Emerson Process Management sales office.

⚠ WARNING

The valve drive shaft is not necessarily grounded to the pipeline when installed. Personal injury or property damage could result from an explosion caused by a discharge of static electricity from valve components if the process fluid or the atmosphere around the valve is flammable. If the atmosphere around the valve or the process fluid is flammable, electrically bond the drive shaft to the valve.

Note

Standard PTFE packing is composed of a partially conductive carbon-filled PTFE female adaptor with PTFE V-ring packing. Standard graphite packing is composed of all conductive graphite ribbon packing. Alternate shaft-to-valve body bonding is available for hazardous service areas where the standard packing is not sufficient to bond the shaft to the valve (see the following step).

Attach the optional bonding strap assembly (key 131, figure 3) to the valve drive shaft (key 6) with the clamp (key 130, figure 3) and connect the other end of the bonding strap assembly to the valve body with the cap screw (key 23).

1. If the valve is to be stored before installation, protect the flange mating surfaces and keep the valve body cavity dry and free of foreign material.
2. Install a three-valve bypass around the control valve assembly if continuous operation will be necessary during inspection and maintenance of the valve.
3. The valve is normally shipped as part of a control valve assembly, with an actuator mounted on the valve. If the valve and actuator have been purchased separately or if the actuator has been removed, mount the actuator according to the Actuator Mounting section and the appropriate actuator instruction manual.
4. Standard flow direction is with the seal protector ring (key 3) facing upstream.
5. Install the valve in a horizontal or vertical pipeline with the drive shaft in a horizontal position.

CAUTION

Do not allow the valve to be installed in the pipeline with the drive shaft in the vertical position because of excessive wear to valve component parts.

6. The actuator can be right- or left-hand mounted with the shaft in a horizontal orientation as shown in figure 1. If necessary, refer to the appropriate actuator instruction manual for actuator installation and adjustment procedures.

CAUTION


Ensure the valve and adjacent pipelines are free of foreign material that could damage the valve seating surfaces.

7. Be certain the valve and adjacent pipelines are free of any foreign material that could damage the valve sealing surfaces.
8. Be sure the pipeline flanges are in line with each other.

Installing V150 and V300 Valves

1. Install the V150 and V300 valve using studs (keys 32 and 33, not shown) and nuts to connect the valve flanges to the pipeline flanges. The seal protector ring (key 3) end of the valve requires longer line flange studs (key 32) than standard. Do not use standard-length line flange studs for the seal protector ring end of the valve.

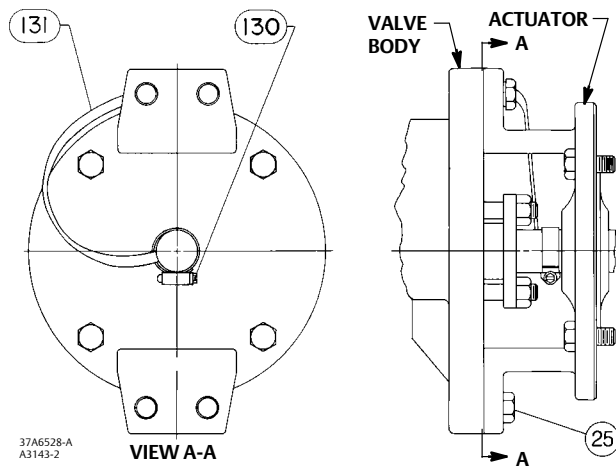Figure 3. Optional Shaft-to-Body Bonding Strap Assembly



2. See table 2 and figure 2 for length of studs for the seal protector ring end of V150 and V300 valves. Lubricate the studs with anti-seize lubricant.
3. Insert flat-sheet line flange gaskets (or spiral-wound gaskets with compression-controlling center rings) that are compatible with the flowing media.
4. Connect pressure lines to the actuator as indicated in the actuator instruction manual. When an auxiliary manual actuator is used with a power actuator, install a bypass valve on the power actuator (if one is not supplied) for use during manual operation.

⚠ WARNING

Personal injury could result from packing leakage. Valve packing was tightened before shipment; however the packing might require some readjustment to meet specific service conditions. Check with your process or safety engineer for any additional measures that must be taken to protect against process media.

If the valve has ENVIRO-SEAL live-loaded packing installed, this initial re-adjustment will probably not be required. See [ENVIRO-SEAL Packing System for Rotary Valves instruction manual \(D101643X012\)](#) for packing instructions.

Installing V200 Valves

Stud length dimensions are shown in figure 4 for the seal protector ring end of the valve. For V200, CL600, the dimension from the center line of the valve bore to the mounting flange face is larger than a CL150 or 300 valve.


1. Install the V200 valve using long studs (key 32, figure 4) to connect the two pipeline flanges. Refer to figure 4 for the size of studs required. Lubricate the studs with anti-seize lubricant.
2. Install two studs in the flanges before you place the valve in the line. Place the two studs so they will contact the line-centering notches at the bottom of the valve body.
3. Insert flat-sheet line flange gaskets (or spiral-wound gaskets with compression-controlling center rings) that are compatible with the process fluid.
4. Place the valve on the two studs. Install all remaining studs. Measure carefully to be sure the valve is centered on the pipeline flanges, and tighten the flange stud nuts. Tighten the nuts in a criss-cross sequence to be sure the flange gaskets are properly torqued.

5. Connect pressure lines to the actuator as indicated in the actuator instruction manual. When an auxiliary manual actuator is used with a power actuator, install a bypass valve on the power actuator (if one is not supplied) for use during manual operation.

⚠ WARNING

Personal injury could result from packing leakage. Valve packing was tightened before shipment; however the packing might require some readjustment to meet specific service conditions. Check with your process or safety engineer for any additional measures that must be taken to protect against process media.

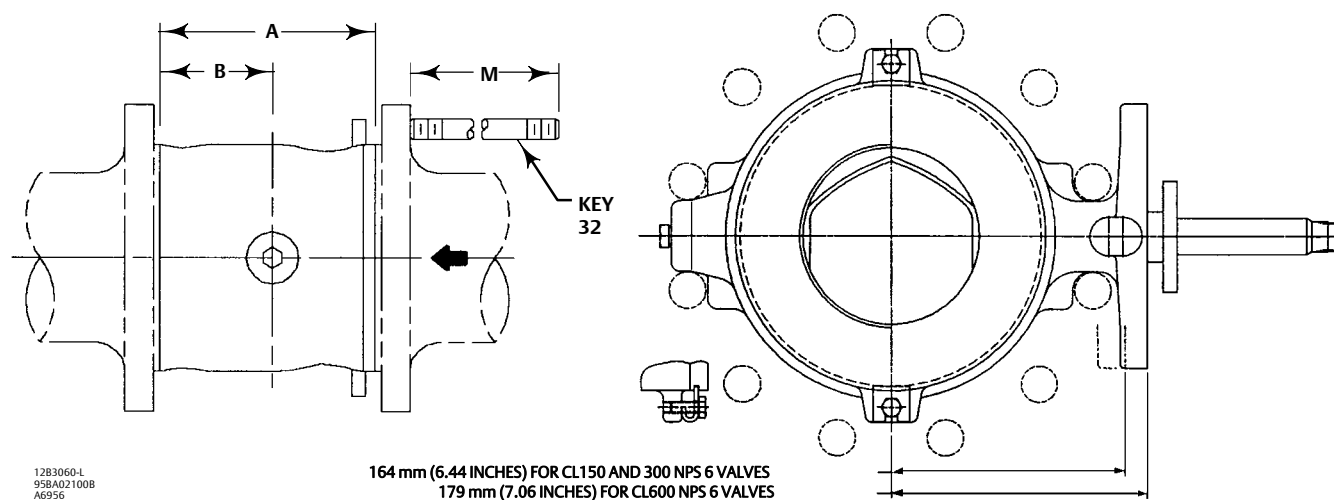Figure 4. Fisher V200 Dimensions and Required Clearances for Installation



V200 VALVE SIZE, NPS	DIMENSION						
	A		B	M			
	Standard ANSI/ISA S75.08.02 ⁽¹⁾	CL150 ASME B16.10 ⁽²⁾ Short (Optional)		Standard CL150 ANSI/ISA S75.08.02 ⁽¹⁾	CL150 ASME B16.10 ⁽²⁾ Short (Optional)	CL300	CL600
mm							
1	102	127	58	176	202	202	202
1-1/2	114	165	64	189	240	224	224
2	124	178	57	211	268	237	237
3	165	203	87	254	286	279	286
4	194	229	92	286	321	305	343
6	229	267	119	343	381	362	423
8	243	292	119	343	394	387	426
10	297	330	151	419	451	---	---
Inches							
1	4.00	5.00	2.29	6.94	7.94	7.94	7.94
1-1/2	4.50	6.50	2.50	7.44	9.44	8.81	8.81
2	4.88	7.00	2.25	8.31	10.56	9.31	9.31
3	6.50	8.00	3.44	10.00	11.25	11.00	11.25
4	7.62	9.00	3.62	11.25	12.62	12.00	13.50
6	9.00	10.50	4.69	13.50	15.00	14.25	16.25
8	9.56	11.50	4.69	13.50	15.50	15.25	16.75
10	11.69	13.00	5.94	16.50	17.75	---	---
1. IEC 534-3-2 face-to-face dimensions are equivalent to ANSI/ISA S75.08.02 face-to-face dimensions. 2. 150 lb class only.							

Maintenance

Valve parts are subject to normal wear and must be inspected and replaced as necessary. The frequency of inspection and replacement depends upon the severity of service conditions.

Key numbers in this procedure are shown in figures 24, 25, and 26, unless otherwise noted.

⚠ WARNING

The Vee-ball closes with a shearing, cutting motion, which could result in personal injury. To avoid injury, keep hands, tools, and other objects away from the Vee-ball while stroking the valve.

Avoid personal injury from sudden release of process pressure. Before performing any maintenance operations:

- Do not remove the actuator from the valve while the valve is still pressurized.
- Disconnect any operating lines providing air pressure, electric power, or a control signal to the actuator. Be sure the actuator cannot suddenly open or close the valve.
- Use bypass valves or completely shut off the process to isolate the valve from process pressure. Relieve process pressure from both sides of the valve. Drain the process media from both sides of the valve.
- Vent the power actuator loading pressure and relieve any actuator spring precompression.
- Use lock-out procedures to be sure that the above measures stay in effect while you work on the equipment.
- Always wear protective gloves, clothing, and eyewear when performing any maintenance operations.
- The valve packing area may contain process fluids that are pressurized, *even when the valve has been removed from the pipeline*. Process fluids may spray out under pressure when removing the packing hardware or packing rings.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.

Packing Maintenance

Key numbers in this procedure are shown in figures 24, 25, and 26, unless otherwise noted. A detailed view of the packing is also shown in figure 5.

If the valve is equipped with the ENVIRO-SEAL Packing System, refer to:

- the separate [ENVIRO-SEAL Packing System for Rotary Valves instruction manual \(D101643X012\)](#) for maintenance instructions, and
- the Parts List section of this manual for retrofit kits, parts kits, and individual parts.

If the packing is relatively new and tight on the drive shaft (key 6), and if tightening the packing follower nuts does not stop leakage, it is possible that the drive shaft is worn or nicked so that a seal cannot be made. If the leakage comes from the outside diameter of the packing, it is possible that the leakage is caused by nicks or scratches on the packing box wall. Inspect the drive shaft and packing box wall for nicks or scratches while performing the following procedure.

Replacing Packing

When using this procedure, it is recommended that the actuator **not** be removed from the valve while the valve is still in the pipeline or between flanges. Valve/actuator adjustments must be made with the valve out of the pipeline. Refer to the Determining Closed Position portion of the Actuator Mounting section.

Disassembly

⚠ WARNING

Observe the steps in the **WARNING** at the beginning of the Maintenance section.

1. Isolate the control valve from the line pressure, release pressure from both sides of the valve body, and drain the process media from both sides of the valve. If using a power actuator, shut off all pressure lines to the power actuator, release pressure from the actuator, and disconnect the pressure lines from the actuator. Use lock-out procedures to be sure that the above measures stay in effect while you are working on the equipment.
2. Remove line bolting, remove the control valve from the pipeline, and place the valve/actuator assembly on a flat surface with the seal protector ring facing up.
3. Remove the actuator cover. Take note of the orientation of the actuator with respect to the valve body and the lever orientation with respect to the valve drive shaft (see figure 6).

⚠ WARNING

When the actuator is removed from the valve, the ball/shaft assembly may suddenly rotate, with a shearing, cutting motion, which could result in personal injury. To avoid injury, carefully rotate the ball to a stable position after the actuator is removed.

CAUTION

When removing the actuator from the valve, do not use a hammer or similar tool to drive the lever or actuator off the valve shaft. Driving the lever or actuator off the valve shaft could damage the ball, seal, and valve.

If necessary, use a puller to remove the lever or actuator from the valve shaft. It is okay to tap the puller screw lightly to loosen lever or actuator, but hitting the screw with excessive force could damage the ball, seal, and valve.

4. Remove the clamped lever (do not loosen the actuator turnbuckle adjustment), remove the actuator mounting screws and nuts (keys 23 and 24), and remove the actuator. (If necessary, refer to the actuator instruction manual for assistance.)
5. If applicable, remove the bonding strap assembly before attempting to remove the packing (see figure 3).
6. Remove the packing follower nuts and packing follower (keys 17 and 20). For alloy packing constructions, the packing follower (key 17) and a separate packing flange (key 40) must be removed if present.

If the valve is equipped with the ENVIRO-SEAL packing system, refer to the [ENVIRO-SEAL Packing System for Rotary Valves instruction manual \(D101643X012\)](#) for disassembly.

⚠ WARNING

Personal injury could result from packing leakage. Do not scratch the drive shaft or packing box wall while removing packing parts in the following procedure.

7. Remove the packing parts (see figure 5, keys 16, 17, 35, and 39 depending on construction) using a formed wire hook with a sharp end. Pierce the rings with the sharp end of the hook in order to remove them. Do not scratch the

drive shaft or packing box wall; scratching these surfaces could cause leakage. Clean all accessible metal parts and surfaces to remove particles that would prevent the packing from sealing.

Assembly

If the valve is equipped with the ENVIRO-SEAL packing system, refer to the [ENVIRO-SEAL Packing System for Rotary Valves instruction manual \(D101643X012\)](#) for assembly.

Series B only

1. For NPS 8, 10, and 12 valves, install the packing spacer (key 34) if it has been removed.
2. To help ensure correct centering of the Vee-ball (key 2) on the seal (key 11), make sure the ball is closed while you install or tighten new packing. Insert a screwdriver, pry bar, or similar tool between the lower ear of the ball and the valve body. Use the pry to move the ball tightly against the bearing on the actuator side of the valve (see figure 6). Keep the ball in that position until you have completed packing installation and adjustment.
3. Install the new packing parts using the parts sequence shown in figure 5. Install the packing follower (key 17). Alloy constructions have a packing follower (key 17) and a separate packing flange (key 40) that must be replaced.
4. Secure the packing follower with the packing follower nuts (key 20). Tighten the nuts far enough to stop leakage under operating conditions.

Handle the seal protector ring, seal, and other parts carefully to prevent damage. A new gasket (key 15) is required whenever the seal protector ring (key 3) (figure 11) is removed.

Flow ring construction does not use a seal, shims, or spring seal. Use this procedure to remove the seal protector ring from flow ring constructions, but disregard any instructions calling for the seal, shims, or spring seal.

Note

If the valve is equipped with a bonding strap assembly (figure 3), re-install the assembly.

5. Reconnect the actuator and lever in accordance with the orientations that were noted in step 3 of the disassembly procedures. If necessary, use figure 23 to identify the correct index marks.
6. Refer to the appropriate actuator instruction manual to complete actuator assembly and adjustment.
7. When the control valve is in operation, check the packing follower for leakage and retighten the packing follower nuts (key 20) as necessary.

Replacing the Ball Seal

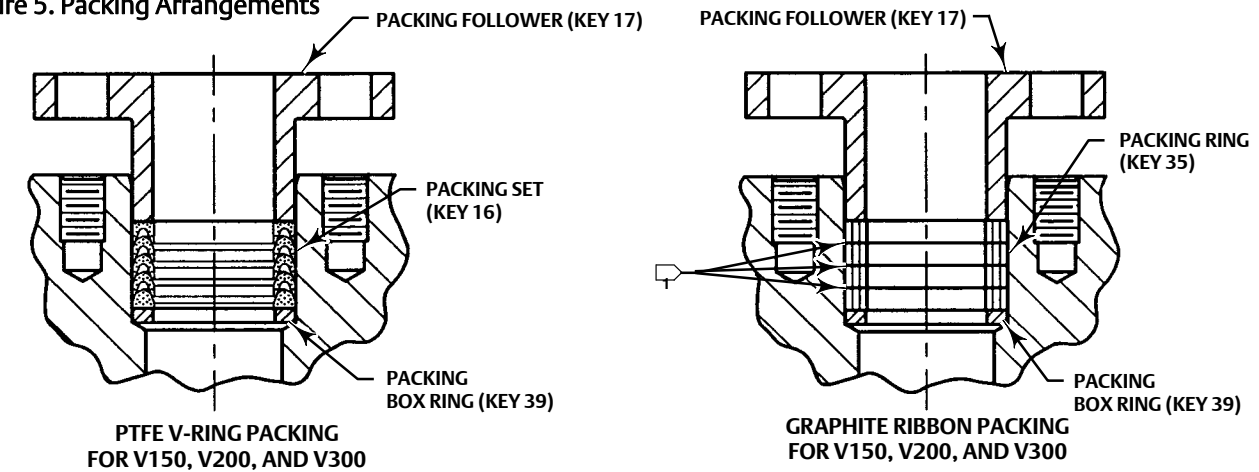
Disassembly

Perform this procedure if the control valve is not shutting off properly or if seal inspection is necessary. If you find upon inspection that the ball, shaft, or bearings need to be replaced, use this procedure to remove the ball seal. Then, proceed to the Bearing and Ball Maintenance procedures. Then, return to this procedure and begin with the assembly of the ball seal steps.

While the actuator/valve assembly must be removed from the pipeline, the actuator may remain mounted on the valve as you replace the ball seal.

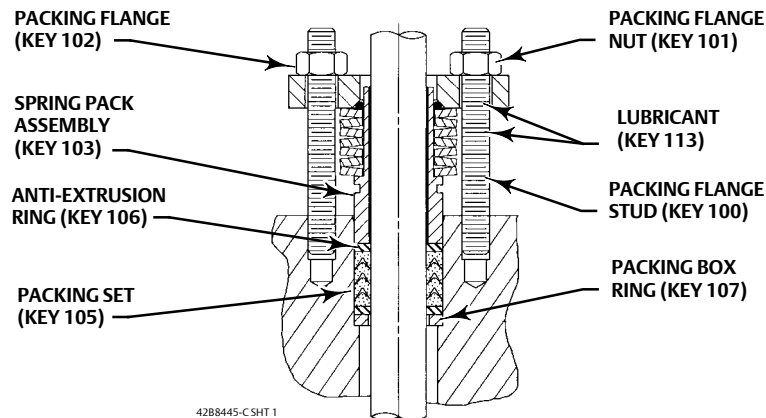
Key numbers are shown in figures 24, 25, and 26, unless otherwise indicated. Ball Seal assembly details (with key numbers) are also shown in figures 8, 9 and 10.

Figure 5. Packing Arrangements

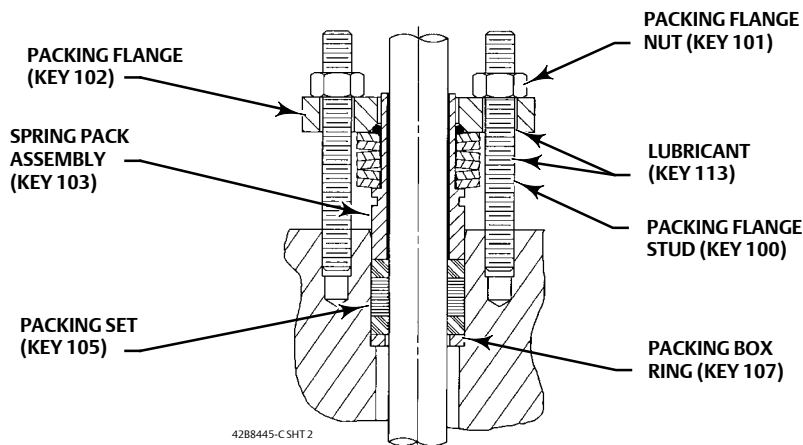


NOTE:
① INCLUDES ZINC WASHERS (KEY 36) FOR
GRAPHITE RIBBON PACKING ONLY.

28B5170

STANDARD PACKING

42B8445-C SHT 1


ENVIRO-SEAL PTFE PACKING SYSTEM

B2412-1

42B8445-C SHT 2

ENVIRO-SEAL GRAPHITE PACKING SYSTEM

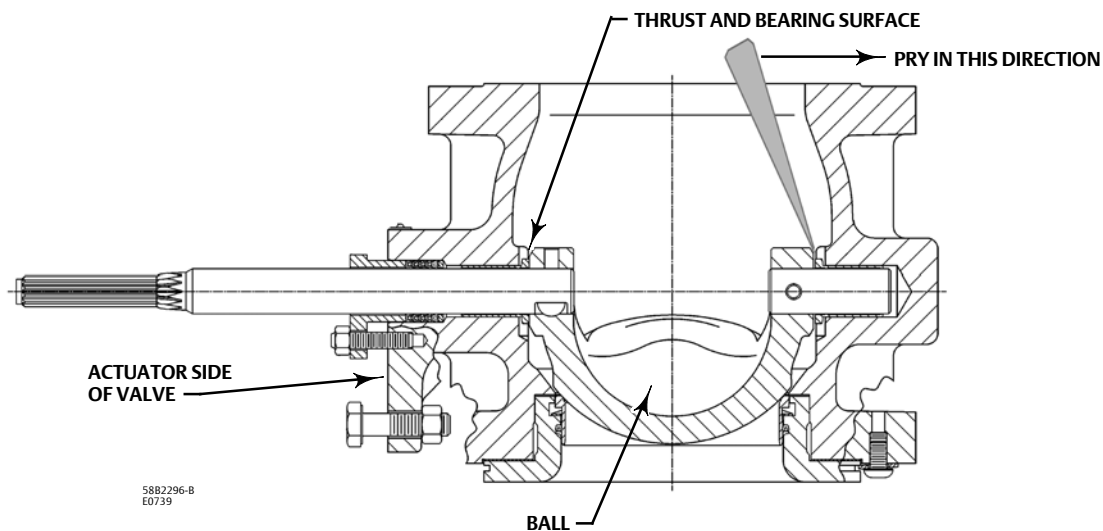Figure 6. Typical Vee-Ball Valve Showing Pry Bar



⚠ WARNING

Perform the steps in the WARNING at the beginning of the Maintenance section of this manual.

1. Remove line bolting, remove the control valve from the pipeline, and place the valve on a flat surface with the seal protector ring facing up. Carefully rotate the ball to the open position.
2. Remove protector ring screws and washers (keys 21 and 22). Carefully remove the seal protector ring and gasket (keys 3 and 15). (For flow ring constructions, go to step 4.)
 - a. **For a Fisher TCM seal**, remove the seal (key 11) from the valve body. For NPS 1, 1-1/2, and 2 valves, also remove the backup ring (key 14, figure 8) from the valve body.
 - b. **For a flat metal seal**, remove the spring seal, seal, and shims (keys 13, 11, and 12). (Note: It may be necessary to re-use some of the original shims when reassembling the flat metal seal.)
 - c. **For an HD metal seal or a high temperature HD metal seal**, once the protector ring has been removed from the valve, push the metal seal (key 11) out of the seal protector ring (key 3). Remove the wave spring (key 13), and on the HD metal seal, the radial seal (key 37).

Note

The high temperature HD metal seal also has a piston ring (key 133) that will need to be removed. It will be in two pieces for the NPS 1, 1-1/2 and 2 valves, and one piece with a break in it for the NPS 3 through 12 valves.

CAUTION

Exercise care to avoid damaging components in the following procedure.

- It might be necessary to remove the HD metal seal by carefully tapping it with a soft punch and hammer. Take care not to damage the seal protector ring.
 - **NPS 3 through 12 valves**, if the seal is difficult to push out, it is recommended that a seal removal plate be used to press the HD metal seal out of the seal protector ring. Refer to figure 12 for dimensions of the seal removal plate.
 - **NPS 10 and 12 valves with an attenuator only**: Remove the retaining ring (key 41) in the seal protector ring. This retaining ring is an octagonal-shaped support wire. To remove the retaining ring, find one of the free ends of the ring. Use a screwdriver or similar tool to pry inward and upward until the ring is removed.
3. Inspect the gasket and sealing surfaces on the valve body (key 1 or 1A), the seal protector ring (key 3), Vee-ball (key 2), and the retaining ring (key 41 for NPS 10 and 12 valves with an attenuator only). Be sure the sealing surfaces are not damaged.
 4. If replacement of the ball, shafts (keys 6 or 9), or bearings (key 10) is needed, proceed to the Bearing and Ball Maintenance procedure. If only the seal is to be replaced, proceed to the Assembly steps below.

Assembly

Refer to figures 8, 9, and 10 for key number locations during seal installation. Valve key number locations are shown in figures 24, 25, and 26.

1. Thoroughly clean all parts that are to be re-used and obtain replacement parts. Be sure that all sealing surfaces are in good condition without scratches or wear. If the valve has been installed between line flanges and the flange studs and nuts have been tightened, always replace the gasket (key 15) with a new gasket.
2. To help ensure correct side-to-side centering of the ball (key 2) on the seal (key 11), make sure the ball is closed while you install the seal or flow ring and seal protector ring. Insert a screwdriver, pry bar, or similar tool between the lower ear of the ball and the valve body (see figure 6).
3. Use the pry to move the ball tightly against the bearing on the actuator side of the valve. Be careful, excessive force may damage the ball. Keep the ball in that position until you have completed seal or flow ring installation. Check the ball's position periodically, and re-center if necessary, during lever assembly and packing adjustments.

WARNING


The Vee-Ball closes with a shearing, cutting motion, which could result in personal injury. To avoid injury or property damage, keep hands, tools, and other objects away from the Vee-Ball while stroking the valve.

4. Install the seal.

CAUTION


Due to the Vee-ball shape, take care to never completely rotate either the front skirted edge or the circular back edge of the ball out of the ball seal as the seal could be damaged.

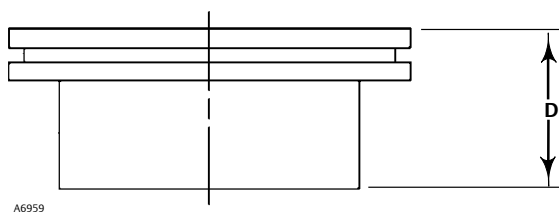Figure 7. NPS 1 and 1-1/2 Seal Protector Ring Measurements



A6959

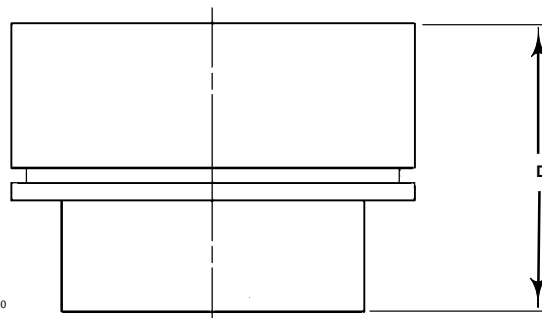ANSI/ISA S75.08.02 FACE-TO-FACE VALVE



A6960

CL150 ASME B16.10 (SHORT) FACE-TO-FACE VALVE


Valve Size, NPS	Construction ⁽¹⁾	TCM Seal "D"	HD Seal "D"	Flow Ring "D"
mm				
1	New	37.6	44.7	39.6
	Old	25.1	33.0	26.9
1-1/2	New	39.1	44.5	40.9
	Old	27.4	32.8	29.2
Inches				
1	New	1.48	1.76	1.56
	Old	0.99	1.30	1.06
1-1/2	New	1.54	1.75	1.61
	Old	1.08	1.29	1.15

1. See the Note on page 14 of this Instruction Manual.

Valve Size, NPS	Construction ⁽¹⁾	TCM Seal "D"	HD Seal "D"	Flow Ring "D"
mm				
1	New	63.0	70.1	65.0
	Old	50.5	58.4	52.3
1-1/2	New	89.9	95.3	91.7
	Old	78.2	83.6	80.0
Inches				
1	New	2.48	2.76	2.56
	Old	1.99	2.30	2.06
1-1/2	New	3.54	3.75	3.61
	Old	3.08	3.29	3.15


1. See the Note on page 14 of this Instruction Manual.

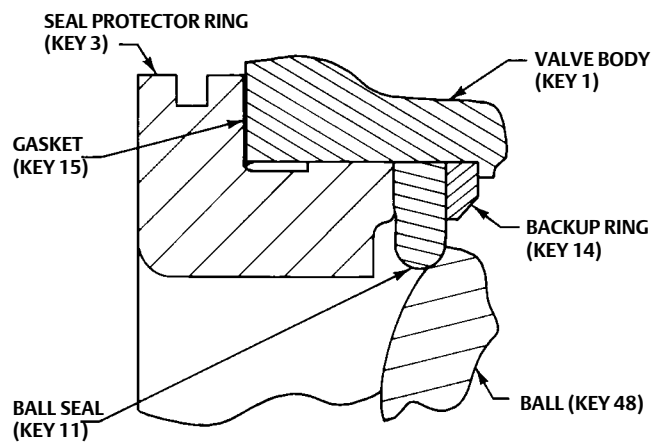Figure 8. Ball Seal Assembly for NPS 1, 1-1/2, and 2 Valves



A6032-2

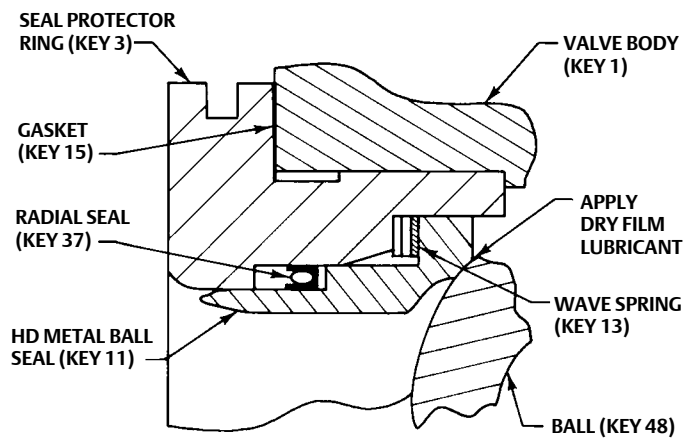Fisher TCM Plus BALL SEAL



HD METAL BALL SEAL

Figure 9. Ball Seal Assembly for NPS 3 through 12 Valves

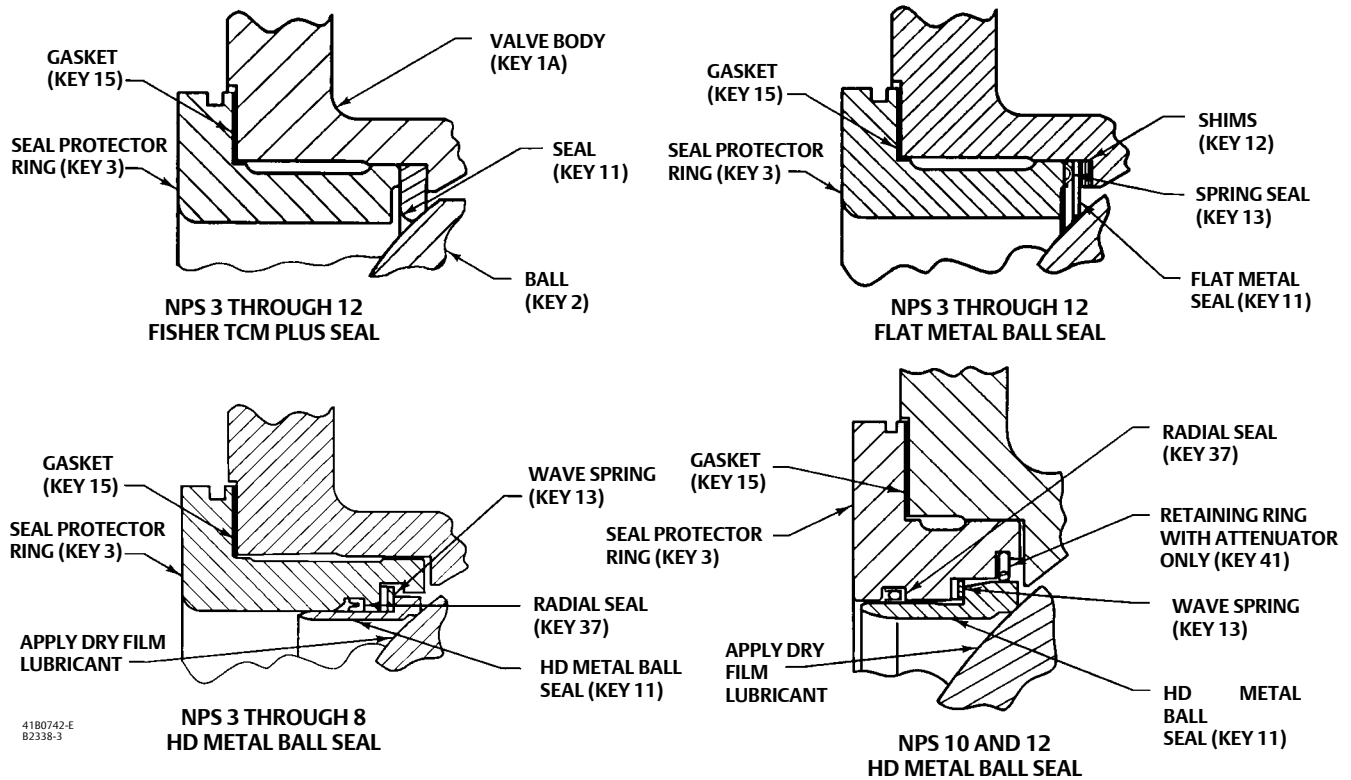


Figure 10. High Temperature HD Metal Seal Details

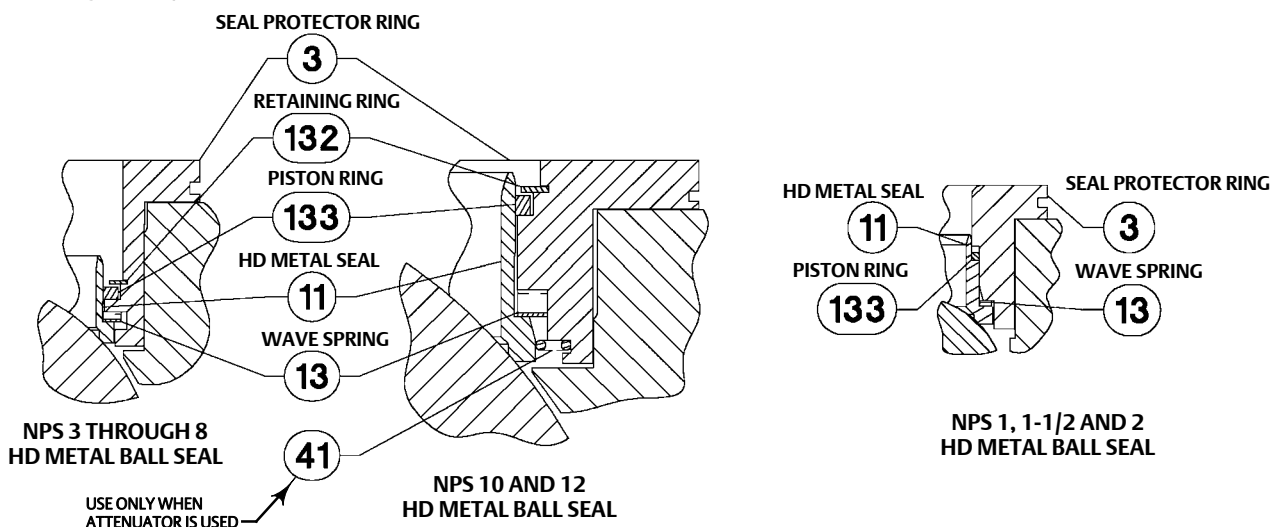


Figure 11. Seal Protector Ring


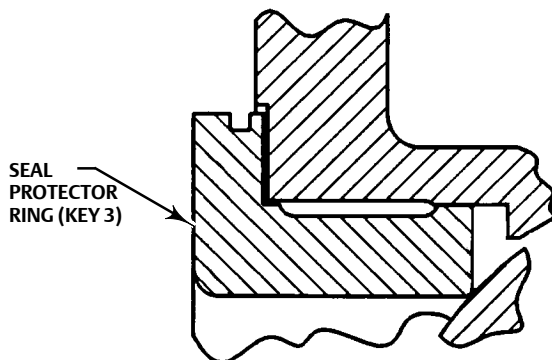


Figure 12. HD Seal Removal Plate Dimensions

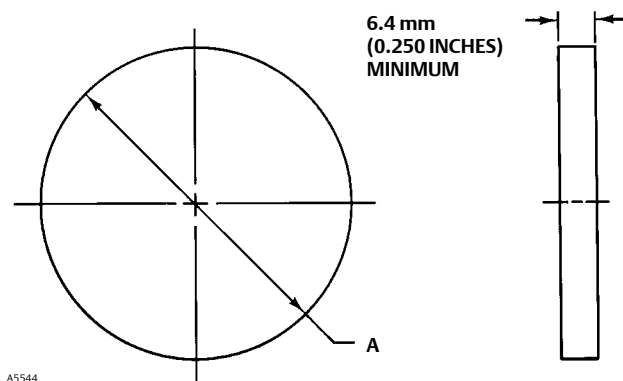

VALVE SIZE, NPS	DIMENSION A	
	Minimum-Maximum, mm	Minimum-Maximum, Inches
3	75.9-76.2	2.990-3.000
4	95.0-95.3	3.740-3.750
6	126.7-127.0	4.990-5.000
8	158.5-158.8	6.240-6.250
10	212.5-212.7	8.365-8.375
12	263.3-263.5	10.365-10.375

Installing Fisher TCM Plus or Extra ball seals:

- a. **NPS 1, 1-1/2, and 2 valves:** Install the backup ring (key 14). Install the Fisher TCM seal (key 11) into the valve body. Refer to figure 7.
 - Install the gasket (key 15) on the valve body.
 - Install the seal protector ring (key 3) into the valve body. Now go to step 5 in this procedure.
- b. **NPS 3 through 12 valves:** Install the Fisher TCM seal (key 11) into the valve body.
 - Install the gasket (key 15) on the valve body.

- Install the seal protector ring (key 3) into the valve body. Now go to step 5 in this procedure.

Installing flat metal seals:

- a. Install 12 shims in the valve and install the flat metal seal on top of the shims.
- b. Install the spring seal (key 13) on the flat metal seal (key 11) with the convex side of the spring seal facing the ball.
- c. Install the seal protector ring, and install the protector ring screws and washers (keys 21 and 22). Tighten the screws.
- d. Add or remove shims under the ball seal as necessary to obtain zero ball seal deflection as accurately as possible.

Note

Zero ball seal deflection for a flat metal seal is the point at which the addition of one 0.13 mm (0.005 inch) thick shim causes contact between the ball and ball seal to be broken. Hold the parts tightly together when determining zero deflection, or improper zero deflection might result.

- e. After zero deflection is reached, remove the seal protector ring, spring seal, seal and 4 shims. Final assembly of the control valve should not exceed a maximum of 9 shims for zero deflection. If more than 9 shims are required, contact your Emerson Process Management sales office.
- f. Install the gasket (key 15) on the valve body.
- g. Install the seal protector ring (key 3) into the valve body. Now go to step 5 in this procedure.

Installing HD metal seals:

Note

The older and newer designs of the NPS 1 and 1-1/2 seal protector ring are functionally the same, but are different lengths and not interchangeable. All NPS 1 and 1-1/2 sizes of V150 and V300 valves are the newer design. The change in seal protector ring length occurred in the 1992/1993 timeframe and affects NPS 1 and 1-1/2 V200 valves only. To determine whether you have the older or newer design, measure the length of the seal protector ring (key 3, figure 26) from its pipeline flange mating surface to its opposite end. Compare your measurement to those listed in figure 7.

- a. **For NPS 1 and 1-1/2 valves:** The older and newer designs of the NPS 1 and 1-1/2 seal protector rings are functionally the same, but are different lengths and not interchangeable. Refer to figure 7 for protector ring dimensions.
 - Install the wave spring (key 13) onto the ball seal.
 - Lubricate and install the radial seal (key 37) onto the ball seal (key 11). Make sure the open side of the radial seal faces away from the ball.
 - Push the ball seal assembly into the seal protector ring (key 3).
 - Go to step 5 in this procedure.

b. For all NPS 3 through 8 valves and NPS 10 and 12 valves without attenuator:

- Lubricate and install the radial seal (key 37) into the appropriate groove in the seal protector ring making sure the open side of the radial seal faces away from the ball.
- Install the wave spring (key 13) into the seal protector ring (key 3).
- Install the HD metal seal (key 11) into the seal protector ring (key 3), past the radial seal. While pushing it past the radial seal, make sure the HD metal seal is level. Go to step 5 in this procedure.

c. For NPS 10 and 12 valves with attenuator:

- Lubricate the radial seal with lithium grease and install the radial seal (key 37) into the appropriate groove in the seal protector ring making sure the open side of the radial seal faces away from the ball.
- Install the wave spring (key 13) into the seal protector ring (key 3).
- To install the retaining ring (key 41), find one of the free ends of the ring. Insert the free end into the groove in the seal protector ring. Work around the ring, pressing it into the groove until the ring is completely in its groove.
- Install the HD metal seal (key 11) into the seal protector ring (key 3), past the radial seal. While pushing it past the radial seal, make sure the HD metal seal is level.
- The HD metal seal uses a retaining ring (key 41) for NPS 10 and 12 valves only. This retaining ring is an octagonal-shaped support wire. Go to step 5 in this procedure.

Installing high temperature HD metal seals:

a. For NPS 1, 1-1/2 and 2 valves: The older and newer designs of the NPS 1 and 1-1/2 seal protector rings are functionally the same, but are different lengths and not interchangeable. All part numbers in this manual are for the newer design. Refer to figure 7 for ring dimensions.

- Place the wave spring (key 13) on top of the HD metal seal (key 11).
- Break the piston ring (key 133) into two approximately equal pieces either by placing the ring over a pencil or similar object and applying pressure down-wards on the ring until the ring snaps. Be sure to match the broken ends together as you install it on the HD metal seal (key 11).
- Lay the HD metal seal (key 11) down on a flat surface and push the seal protector ring (key 3) into place. Make sure the seal is level. Go to step 5 in this procedure.

b. For NPS 3 through 8 valves:

- Place the piston ring (key 133) and retaining ring (key 132) into the appropriate groove in the seal protector ring (key 3). The piston ring has one break in it; do **not** break it further.
- Install the wave spring (key 13) into the seal protector ring (key 3).
- Lay the HD metal seal (key 11) down on a flat surface and push the seal protector ring (key 3) past the piston ring (key 133) and into place. Make sure the seal is level. Go to step 5 in this procedure.

c. For NPS 10 and 12 valves:

- Place the piston ring (key 133) and retaining ring (key 132) into the appropriate groove in the seal protector ring (key 3). The piston ring has one break in it; do **not** break it further.

- Install the wave spring (key 13) into the seal protector ring (key 3).
 - If the valve has an attenuator, install the retaining ring (key 41). The octagonal shaped support wire ring has two free ends. Place one of the free ends into the groove in the seal protector ring. Then starting at the inserted end, press the rest of the ring into the groove completely.
 - Lay the HD metal seal (key 11) down on a flat surface and push the seal protector ring (key 3) past the piston ring (key 133) and into place. Make sure the seal is level. Go to step 5 in this procedure.
5. Install a replacement gasket (key 15) on the valve body (key 1 or 1A). Install the HD metal ball seal/seal protector ring assembly into the valve body (key 1 or 1A).
 6. Install washers (or clips), and screws that clamp the seal protector ring to the valve body [keys 3, 21, and 22; the V200 valve uses clips (key 22) in place of washers].
 7. If necessary, refer to the Packing Maintenance procedures to install the packing. Install the actuator using the Actuator Mounting procedures or to the appropriate actuator instruction manual.

HD Metal Seal Lubrication

To assist with break-in of the HD metal seals, it is recommended that the ball and seal be lubricated with dry film lubricant or equivalent moly disulfide.

Bearing and Ball Maintenance

⚠ WARNING

Before performing the steps in this section, observe the **WARNING** at the beginning of the Maintenance section on page 7.

NPS 3 through 12 Valves

Procedures for disassembly and assembly of the bearings and ball cannot be accomplished until the ball seal and valve packing are removed from the valve.

Refer to the Replacing Packing procedures to remove the actuator, and to remove the packing flange and packing follower from the valve. When the packing disassembly steps are complete, return to this section.

Refer to the Replacing the Ball Seal procedures to remove the ball seal from the valve.

Table 3. Continuous Threaded Rod

Valve Size, NPS	Threaded Rod Thread Size	Thread Depth in Follower Shaft
3	0.25-20	0.5
4	0.25-20	0.5
6	0.25-20	0.5
8	0.3125-18	0.62
10	0.3125-18	0.62
12	0.3125-18	0.94

Disassembly

⚠ WARNING

When the actuator is removed from the valve, the ball/shaft assembly may suddenly rotate, with a shearing, cutting motion, which could result in personal injury. To avoid injury, carefully rotate the ball to a stable position at the bottom of the valve body cavity. Make sure the ball will not rotate.

Key numbers in this procedure are shown in figures 24, 25, and 26, unless otherwise indicated.

1. A taper key (key 4, figures 14, 24, 25 and 31) is used to connect the ball and drive shaft in NPS 3 through 12 valves.
2. Carefully rotate the ball to the open position after the actuator is disconnected. Make sure the ball will not rotate (see warning above). Provide support for the ball during the following disassembly.
3. Working from the small end of the groove pin (key 7), use a pin punch to drive the groove pin out of the ball ear and follower shaft.

For tack welded taper keys, driving the taper key out of the ball ear will shear the tack welding.

4. Locate the small end of the taper key (key 4, see figures 14, 24, 25 and 31). Using a pin punch on the smaller end of the taper key, drive it out of the ball (key 2) and drive shaft (key 6). Note: driving the taper key in the wrong direction will tighten it.
5. Pull the drive shaft (key 6) out of the actuator side of the valve body.

CAUTION

Exercise care to avoid damaging components in the following procedure.

6. The ball will be free to move when both shafts are removed. Make sure the sealing surface of the ball is not damaged while removing the follower shaft.
 - a. Unscrew the pipe plug (key 25) if one is installed. Use a punch to drive the follower shaft (key 9) into the center of the ball.
 - b. If a pipe plug is not installed, use a piece of continuous threaded rod as a removal rod when moving the follower shaft (key 9) into the center of the ball. Refer to the table 3 for a description of the size threaded rod needed. The length of the rod should allow easy working room from the valve body.
7. Carefully remove the follower shaft and ball (key 2) from the valve body.

For NPS 4 valves with attenuator, remove the ball/attenuator through the inlet of the valve. Taking hold of the follower shaft ear on the ball/attenuator, you must position the scalloped edge of the attenuator against the valve bore opening and then pivot, or roll, the ball/attenuator out of the valve body (see figure 18).

For NPS 6, 8, 10, and 12 valves with attenuator, remove the ball/attenuator through the outlet of the valve by carefully turning and manipulating the ball. The NPS 6, 8, 10, or 12 ball/attenuator will not come straight out of the valve body.

8. Remove the bearings (key 10) by hand. If the bearings are tight in the valve body, then pull or drive them out with a slight pressure.
 - To remove the follower shaft bearings, use a blind-hole bearing puller. If you do not have such a tool, you can machine the bearing out.
9. Thoroughly clean surfaces of all parts that are to be re-used or obtain replacement parts.

Assembly

1. Inspect all sealing surfaces to ensure they are in good condition and without scratches or wear.
2. Install the replacement bearings (key 10) by hand. The bearing flanged end should touch the valve body.
3. **Installing the Vee-Ball:** Ensure the ball part number matches up with the appropriate seal type as shown in the key 2 ball table in the parts list section of this instruction manual.

⚠ WARNING

The ball might be damaged if it is allowed to fall into the valve body. To avoid personal injury or damage to the sealing surfaces, support the ball to prevent it from falling into or out of the valve body cavity.

Note

For ease of assembly, the follower shaft (key 9) should be inserted into the ball before installing the ball in the following applications:

- NPS 3 valve without ball/attenuator
- NPS 4 through 12 valves with ball/attenuator.

Carefully install the ball into the valve body cavity.

- **For Vee-Ball with attenuator (NPS 4 through 12 valves)**, carefully install the ball into the valve body cavity. For NPS 4 valves, install the ball/attenuator through the inlet of the valve. For NPS 6, 8, 10, and 12 valves, install the ball/attenuator through the outlet of the valve. Taking hold of the follower shaft ear on the ball/attenuator, you must position the scalloped edge of the attenuator against the valve bore opening and then carefully pivot, or roll, the ball/attenuator into the valve body (see figure 18).

After you have installed the ball (key 2) into the valve body assembly, firmly support the ball while installing the shafts.

4. Installing the follower shaft (key 9):

- **For NPS 3 valves:** The follower shaft (key 9) should already have been inserted into the ball before the ball was put into the valve body. Insert the follower shaft (key 9) into the valve body bearing (key 10).
- **For NPS 4 and larger valves:** Insert the follower shaft (key 9) through the ball, and into the valve body bearing (key 10).
- **For NPS 4 through 12 valves with ball/attenuator:** The follower shaft (key 9) should already have been inserted into the ball/attenuator before the ball was put into the valve body. Insert the follower shaft (key 9) into the valve body bearing (key 10).

Then for all sizes, align the hole in the follower shaft with the holes in the ball. Insert the small end of the groove pin (key 7) into the hole in the ball and into the follower shaft. The pin will hold the parts in place while the drive shaft (key 6) is being installed.

Table 4. Taper Key Minimum Depth

Valve Size, NPS	Minimum Depth To Drive Taper Key After Initial Solid Contact, mm (Inches)
3, 4, 6	4.8 (0.188)
8, 10, 12	5.6 (0.219)

Table 5. Taper Key Maximum Depth

Valve Size, NPS	Maximum Depth To Drive Taper Key After Initial Solid Contact, mm (Inches)
3, 4	7.1 (0.281)
6	7.9 (0.312)
8, 10	9.5 (0.375)
12	10.3 (0.406)


5. Installing the Drive Shaft:

CAUTION

The drive shaft must be used with the correct Vee-Ball. Refer to the tag (see figure 13) attached to the Vee-Ball and to the drive shaft.

Failure to use the correct Vee-Ball/ shaft combination may result in the ball not being in the position indicated by the slash mark on the end of the shaft. If the ball is not properly aligned with the slash mark, the valve will not function correctly and seal damage may result.

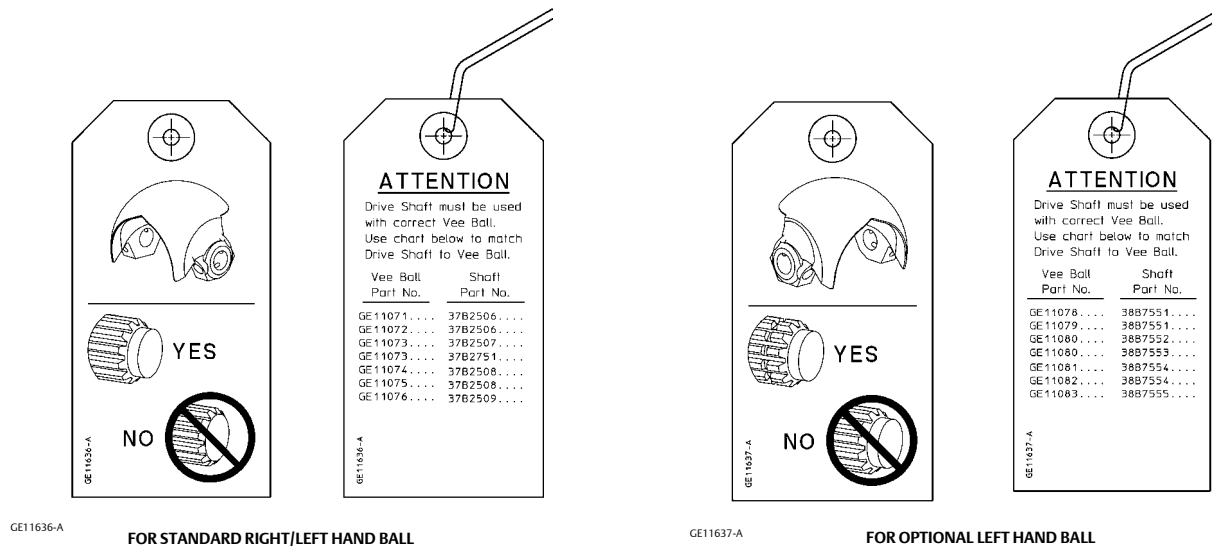Figure 13. Informational Tag



CAUTION

Make sure the drive shaft is free of oil or grease, otherwise the taper pin or taper key will not seat properly. Failure to properly set the taper pin or taper key could result in it coming loose while in service. Loosening of the taper key in service could result in improper valve function and equipment damage.

- Insert the drive shaft into the valve body bearing (key 10), and into the ball ear. Align the hole in the drive shaft with the holes in the ball.
- Insert the taper key into the ball and drive shaft as shown in figure 14.


• Installing the Taper Key

Current standard construction materials for all NPS 3 through 12 valves require the taper key (key 4, figure 14) to be tack welded in place **after properly seating**, using the following procedure. Use standard welding preparations when preparing parts for reassembly.

CAUTION

Make sure the drive shaft (key 6) is free of oil or grease, otherwise the taper key will not seat properly. Failure to properly set the taper pin or taper key could result in it coming loose while in service. Loosening of the taper key in service could result in improper valve function and equipment damage.

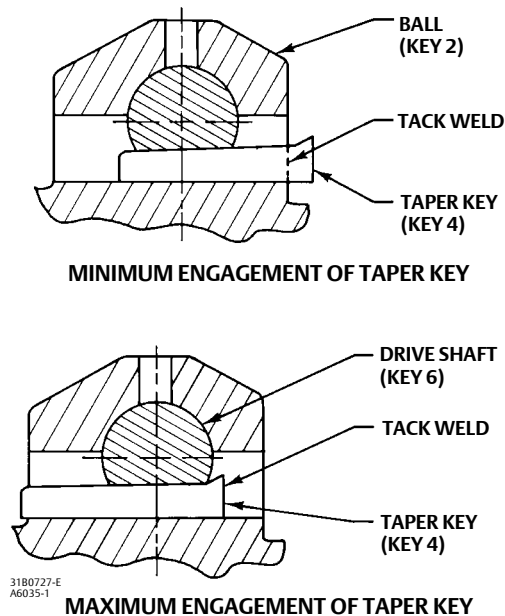Figure 14. Taper Key Installation




6. Install the drive shaft (key 6) into the valve body through the ball and into the lower bearing.
7. Insert the taper key (key 4) into ball and drive shaft (keys 2 and 6) as shown in figure 14. The taper key inserts, with the flat side of the key, facing the drive shaft (key 6).
8. Using a flat end punch, drive the groove pin (key 7) into the ball ear and follower shaft until it is flat with the ball ear surface. Stake both ends of the pin hole with a center punch to ensure the groove pin does not come out.
9. Using a flat end punch, drive the taper key (key 4) into the ball ear and drive shaft (key 6) until solid, heavy contact is obtained between the key and shaft.
10. Measure the position of the taper key head.
11. Drive the taper key in further using the minimum distance shown in table 4.
12. Inspect the ball/shaft taper key connection to verify that the taper key spans the entire shaft flat width. If not, the taper key must be driven in further until this condition is satisfied. However, do not exceed the maximum depths shown in table 5.

Note

All valve taper keys are tack welded, except titanium.

13. When the above conditions are met, tack weld the taper key (key 4) to the ball ear on the head end of the key (see figures 24 and 25). Use a:
 - 1/8 inch diameter weld on NPS 3 through 6 valves,
 - 3/16 inch diameter weld on NPS 8 through 10 valves, and
 - 1/4 inch diameter weld on NPS 12 valves.

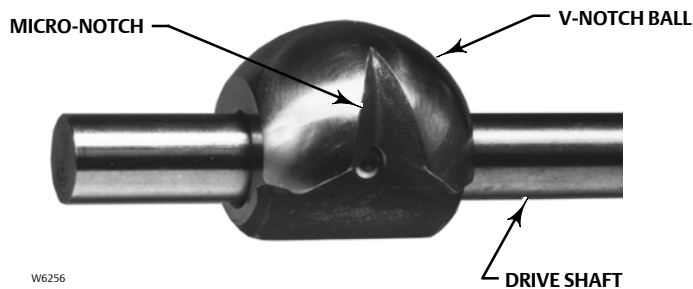Figure 15. Typical Metal Micro-Notch Ball and Drive Shaft



For all constructions: Refer to Replacing the Ball Seal, Packing Maintenance, and other procedures as necessary to complete the assembly of the valve.

NPS 1 through 2

Procedures for disassembly and assembly of the bearings and ball cannot be accomplished until the ball seal and valve packing are removed from the valve.

Refer to the Replacing Packing procedures to remove the actuator, and to remove the packing flange and packing follower from the valve. When the packing disassembly steps are complete, return to this section.

Refer to the Replacing the Ball Seal procedures to remove the ball seal from the valve.

Disassembly

⚠ WARNING

When the actuator is removed from the valve, the ball/shaft assembly may suddenly rotate, with a shearing, cutting motion, which could result in personal injury. To avoid injury, carefully rotate the ball to a stable position at the bottom of the valve body cavity. Make sure the ball will not rotate.

Key numbers in this procedure are shown in figures 24, 25, and 26, unless otherwise indicated.

1. A taper pin (key 4, figure 20) is used in the NPS 1, 1-1/2, and 2 valves, and in the NPS 1 Metal Micro-Notch valve (figure 21).
2. **Ceramic Micro Notch ball constructions:** A screw (key 4, figure 22) is used to attach the ball to the drive shaft.

CAUTION


Exercise care to avoid damaging components in the following procedure.

- a. The parts are held together with a screw and an adhesive. Remove the screw (key 4) and separate the drive shaft from the ball. In some cases, a small amount of heat can be applied to help loosen the adhesive. However, excessive heat may damage other valve component parts.
- b. Once the shafts have been removed from the valve body, the ball may fall. To avoid personal injury or damage to the sealing surfaces, provide support for the ball to prevent it from falling as the shaft(s) are being removed.

Table 6. Continuous Threaded Rod

Valve Size, NPS	Threaded Rod Thread Size	Thread Depth in Follower Shaft
1	1/4-20	0.5
1.5	1/4-20	0.5
2	1/4-20	0.5

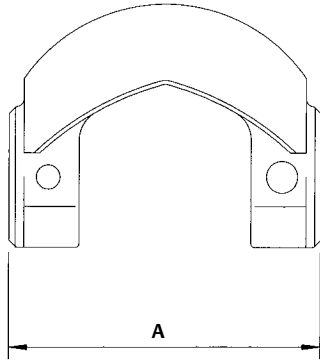Figure 16. Dimensions of Ball in Ball / Shaft Assembly



VALVE SIZE	A			
	NEW - WITHOUT THRUST WASHER		OLD - WITH THRUST WASHER	
	mm	Inches	mm	Inches
1	32.9	1.29	31.8	1.25
1.5	48.6	1.91	47.7	1.88
2	64.5	2.54	63.4	2.50

- Carefully rotate the ball to the open position after the actuator is disconnected. Make sure the ball will not rotate (see warning above). Provide support for the ball during the following disassembly.
- Unscrew the pipe plug (key 25). (The pipe plug is optional and may not be available.)
- Working from the small end of the groove pin (key 7), use a pin punch to drive the groove pin out of the ball ear and follower shaft.

Note

All NPS 1 Micro-Notch constructions use a one piece shaft. They do not have a follower shaft.

- Locate the small end of the taper key (key 4, figure 14). Using a pin punch on the smaller end of the taper key, drive it out of the ball (key 2) and drive shaft (key 6). Note: driving the taper key in the wrong direction will tighten it.
- Pull the drive shaft (key 6) out of the actuator side of the valve body.


Note

The new ball/shaft assembly (key 48) does not require a thrust washer (key 38) in valves ordered after November 01, 2001.

Discard the thrust washer in valves ordered prior to this date when new ball/shaft assemblies are used as spare parts.

Figure 17 shows the informational tag that is attached with the new ball/shaft assembly when shipped as a spare part. Refer to figure 16 for dimensions of the ball in the ball/shaft assembly.

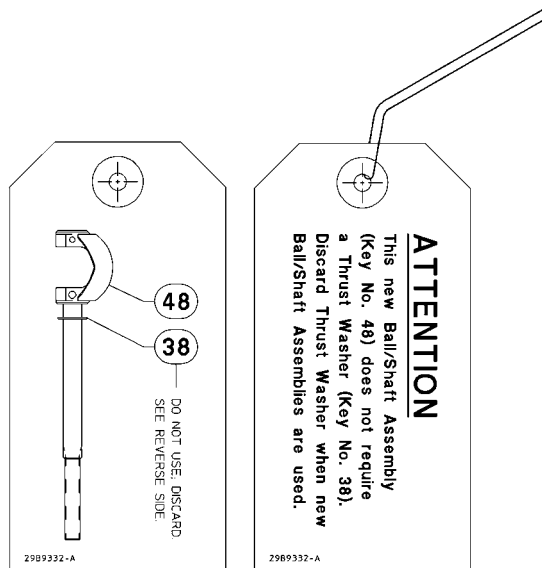Figure 17. Informational Tag



2989332

CAUTION

Exercise care to avoid damaging components in the following procedure.


8. Make sure the sealing surface of the ball is not damaged while removing the follower shaft.
 - a. If a pipe plug (key 25) is installed, use a punch to drive the follower shaft (key 9) into the center of the ball.
 - b. If a pipe plug is not installed, use a piece of continuous threaded rod as a removal rod when moving the follower shaft (key 9) into the center of the ball. Refer to the table 6 shown below for a description of the size threaded rod needed. The length of the rod should allow easy working room from the valve body.
9. **Remove the ball** (key 2) by carefully removing the follower shaft and ball from the valve body.
10. **Remove the bearings** (key 10) by hand. If the bearings are tight in the valve body, then pull or drive them out with a slight pressure.
11. Thoroughly clean surfaces of all parts that are to be re-used or obtain replacement parts.

Assembly

1. Inspect all sealing surfaces to ensure they are in good condition and without scratches or wear.
2. **Install bearings** (key 10) by hand. The bearing flanged end should touch the body.
3. **Installing the ball** (key 2):

⚠ WARNING

The Vee-Ball might be damaged if it is allowed to fall into the valve body. To avoid personal injury or damage to the sealing surfaces, support the ball to prevent it from falling into or out of the valve body cavity.

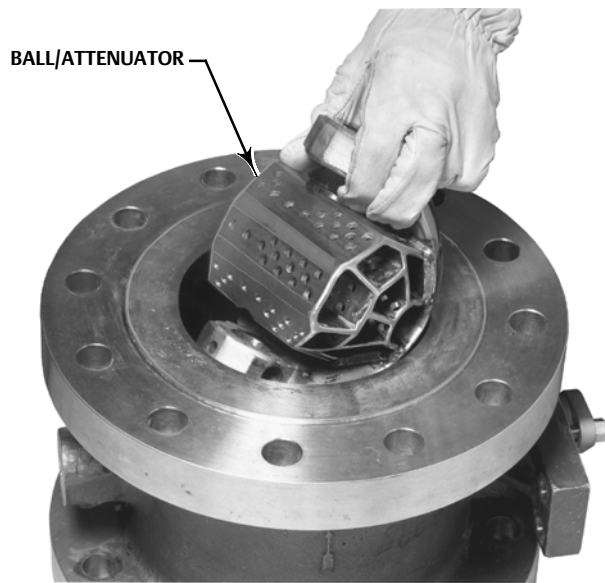Figure 18. Ball/Attenuator Installation and Removal Method

W6134

Note

For ease of assembly, the follower shaft (key 9) should be inserted into the ball before installing the ball in an NPS 3 valve without ball/attenuator

Carefully install the ball into the valve body cavity.

After you have installed the ball (key 2) into the valve body assembly, firmly support the ball while installing the shafts.

4. Installing the follower shaft (key 9):

- **For NPS 1 through 2 valves:** The follower shaft (key 9) should already have been inserted into the ball before the ball was put into the valve body. Insert the follower shaft (key 9) into the valve body bearing (key 10).

Note

All NPS 1 Micro-Notch constructions use a one piece shaft. They do not have a follower shaft.


5. Installing the Drive Shaft for Valves with Taper Pins

CAUTION

The drive shaft must be used with the correct Vee-Ball. Refer to the tag (see figure 13) attached to the Vee-Ball and to the drive shaft.

Failure to use the correct Vee-Ball/ shaft combination may result in the ball not being in the position indicated by the slash mark on the end of the shaft. If the ball is not properly aligned with the slash mark, the valve will not function correctly and seal damage may result.

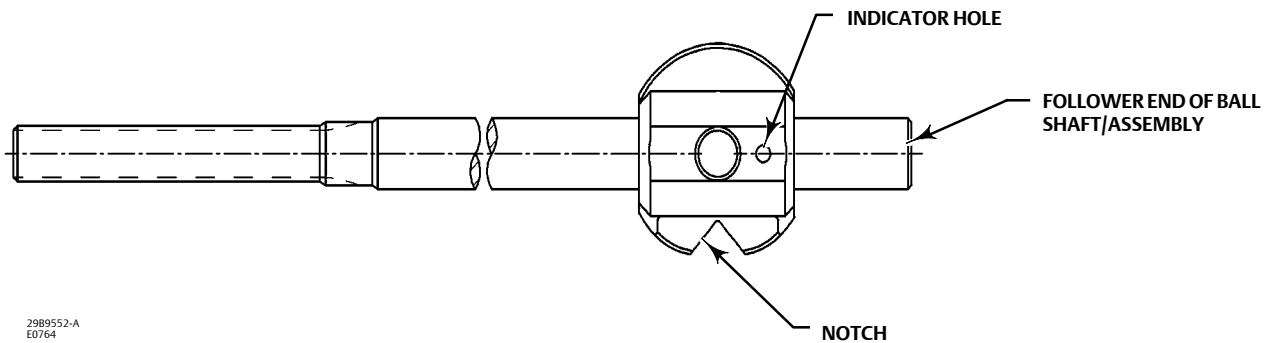Figure 19. Location of Indicator Hole in Micro-Notch Vee-Balls



CAUTION

Make sure the drive shaft is free of oil or grease, otherwise the taper pin will not seat properly. Failure to properly set the taper pin or taper key could result in it coming loose while in service. Loosening of the taper key in service could result in improper valve function and equipment damage.

6. Insert the drive shaft into the valve body bearing (key 10), and into the ball ear (or ball, for Micro-Notch constructions). Align the hole in the drive shaft with the holes in the ball.

Note

There is an indicator hole drilled in all Micro-Notch balls. This indicator hole must be oriented closest to the follower end of the ball/shaft assembly. See figure 19.

7. Insert the taper pin into the ball and drive shaft as shown in figures 20 and 21. **The small end of the taper pin must be inserted into the larger hole side of the ball ear (or ball, for Micro-Notch constructions), and into the large hole side of the drive shaft.**

Note

The taper pin will not fit correctly if inserted in the wrong direction through the ball ear (or ball, for Micro-Notch constructions) or through the drive shaft. Make sure the drive shaft and ball ear (or ball, for Micro-Notch constructions) are in the correct orientation for installing the pin.

● Installing Taper Pins in NPS 1, 1-1/2, and 2 Valves

Note

For NPS 1, 1-1/2, and 2 valves, the taper pins (figure 20) do not require welding.

Using a flat-end punch, drive the taper pin into the ball ear (or ball, for Micro-Notch constructions) and drive shaft until solid heavy contact is felt. Make sure the taper pin spans the width of the ball.

Using a flat end punch, drive the groove pin (key 7) into the ball and follower shaft until it is flat with the ball surface.

Installing the Drive Shaft in VTC Ceramic Vee-Ball Valves

CAUTION

The drive shaft must be used with the correct Vee-Ball. Refer to the tag (see figure 13) attached to the Vee-Ball and to the drive shaft.

Failure to use the correct Vee-Ball/ shaft combination may result in the ball not being in the position indicated by the slash mark on the end of the shaft. If the ball is not properly aligned with the slash mark, the valve will not function correctly and seal damage may result.

Figure 20. Taper Pin Installation for Fisher V150, V200, and V300 NPS 1, 1-1/2, and 2 Valves



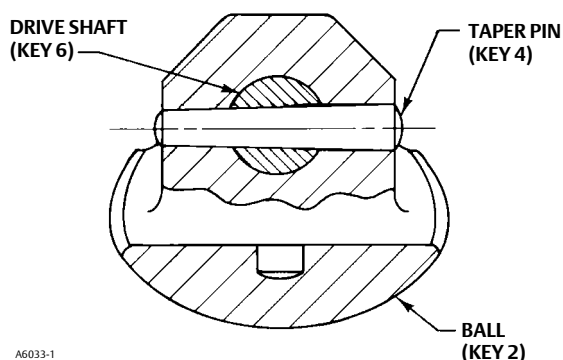


Figure 21. Taper Pin Installation for Fisher V150, V200, and V300 NPS 1 Valves with Micro-Notch Ball Construction

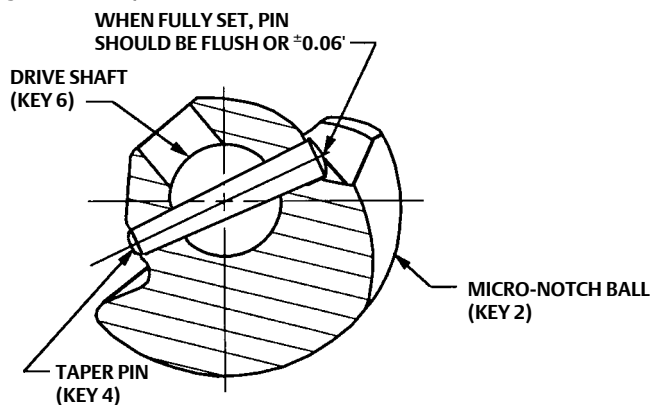

Valves with NPS 1 ceramic micro-notch balls use a screw with a threaded valve shaft to connect the ball to the shaft. An adhesive is used to lock the screw in the valve shaft (keys 4 and 6, figure 22).

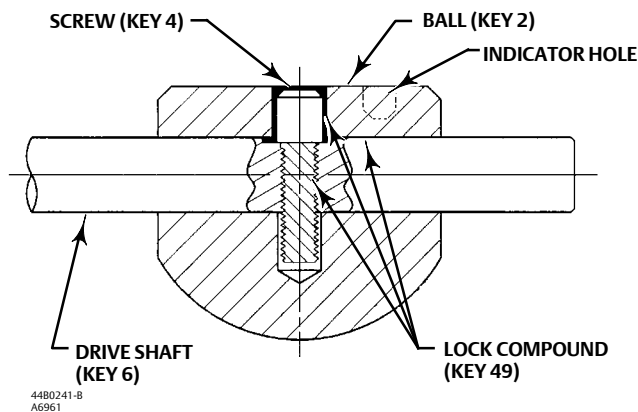Figure 22. Screw Installation for Fisher V200, NPS 1 Valves with VTC Ceramic Micro-Notch Ball Construction



Note

There is an indicator hole drilled in all Micro-Notch balls. The orientation of this hole in the ceramic Vee-Ball is to the right of the screw in the ball, and must be located closest to the follower end of the ball/shaft assembly. See figures 19 and 22.

⚠ WARNING

Avoid personal injury and property damage from ignition of process fluid caused by sparks from ceramic trim.
Do not use ceramic trim where the process fluid is unstable or if it is an explosive mixture (such as ether and air).

Within the valve body:

8. The threaded hole in the shaft, the screw and screw clearance hole in the ball must be free of oil and grease before applying an activator.
9. Apply Loctite® Depend® Activator 7387 to threaded hole, screw and ball clearance hole. Assemble the ball onto the shaft while aligning threaded shaft hole within the ball clearance hole.
10. The flat on the shaft must be oriented so that the head of the cap screw seats on the flat.
11. Apply 5 drops of Loctite Depend 330 into the hole in the ball.
12. Thread the screw into the shaft tightening it to 9.2 N•m (81 in•lbs) torque. Remove excess adhesive, Allow four hours to cure fully before continuing with assembly.

For all constructions: Refer to Replacing the Ball Seal, Packing Maintenance, and other procedures as necessary to complete the assembly of the valve.

Actuator Mounting

Use the appropriate actuator instruction manual, this section of this manual, and figure 23 of this manual when mounting the actuator or changing actuator styles and positions.

1. To help ensure correct centering of the Vee-Ball (key 2) on the seal (key 11), be sure the ball is closed when mounting the actuator (for applications other than Spring Return Fail-Open).

2. Clean the valve shaft and actuator lever splines to be sure the actuator lever will slide on easily. Only drive the lever in if absolutely necessary.
3. Carefully wedge the ball solidly against the actuator-side bearing, using a screwdriver or similar tool inserted between the lower ear of the ball and the valve body. This will center the ball. See figure 6.
4. Keep the wedge in place while installing the lever, if necessary. Remove the wedge after you have clamped the actuator lever on the valve shaft and have connected the lever to the actuator piston rod or diaphragm rod.

Determining Mounting Position

The actuator can be either right or left-hand mounted, with the actuator on the right or left side when viewed from upstream (see figure 23).

The Series B Vee-Ball, NPS 4 through 12 with attenuator, and the NPS 1 micro-notch Vee-Ball have one V-notch. For **right-hand mounting (standard)**, the ball will be in the top of the valve body when the valve is open and the shaft is horizontal. In this position the ball rotates CCW to Close. For **left-hand mounting (standard)**, the ball will be in the bottom of the valve body when the valve is open and the shaft is horizontal. In this position the ball rotates CCW to Close. An optional ball for **left-hand mounting**, which rotates into the top of the valve body when the shaft is horizontal, is also available. In this position the ball rotates CW to Close.

The NPS 1 through 2 has two notches, and can be rotated in either direction.

Determining Closed Position

1. The valve must be removed from the line to check the position of the ball.

WARNING

The Vee-Ball closes with a shearing, cutting motion. To avoid personal injury, keep hands, tools, and other objects away from the ball while stroking the valve.

2. Rotate the ball to the closed position.
3. Position the ball in the proper location

For Series B:

- When viewed from the valve body inlet, the ball is in the proper position when the flat spot on the top of the ball is exactly in the center of the seal package.

Make a copy of the centering template in figure 27 out of a suitable stiff material. Place the centering template in the opening at the seal (See figure 27). Find the center of the template and make sure the spot on the ball is centered directly below it.































For NPS 1, 1-1/2, and 2 valves with attenuators: Follow one of the procedures below:

- When viewed from the valve body inlet, the ball is in the proper position when both V-notches of the ball are centered between the machined diameter of the ledge that supports the seal.
 - If the ball has a spot machined on the top, align that spot to the exact center of the seal cavity.
4. Adjust the actuator linkage as described in the appropriate actuator instruction manual until the ball is centered in the closed position. A line is stamped on the actuator end of the drive shaft (see figure 23) to indicate the ball position.

Use the appropriate actuator instruction manual and figure 23 of this manual when mounting the actuator or changing actuator styles and positions.

The **Micro-Notch ball closed position** is approximately 5 degrees closed from the first point of flow. This establishes the zero degree position for the ball.

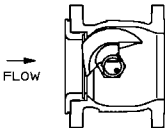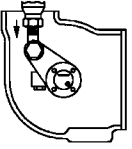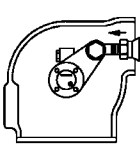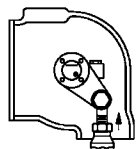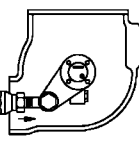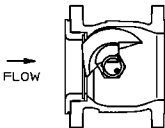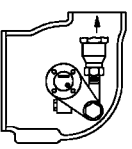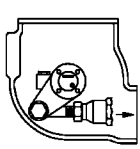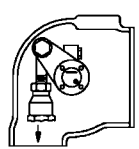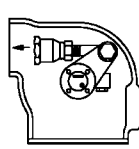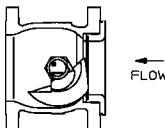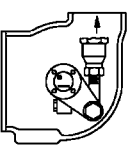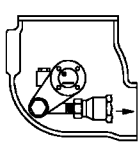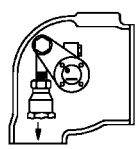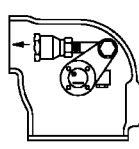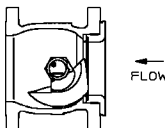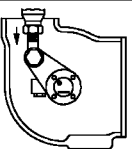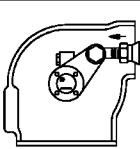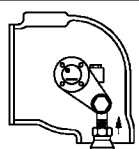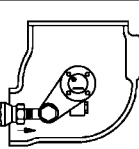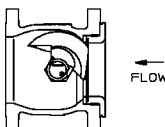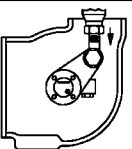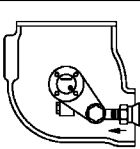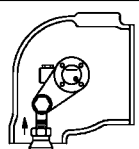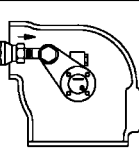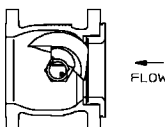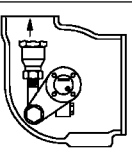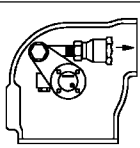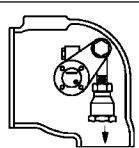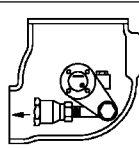Figure 23. Index Marks for Actuator Lever Orientation for NPS 1 through 12 Valves with or without Attenuator

ACTUATOR		VALVE OPEN	ACTUATOR POSITION			
MOUNTING	STYLE		1	2	3	4
(STANDARD) RIGHT-HAND BALL ROTATES COUNTER- CLOCKWISE TO CLOSE	STYLE A PUSH DOWN TO CLOSE					
	STYLE B PUSH DOWN TO OPEN					
(STANDARD) LEFT-HAND BALL ROTATES COUNTER- CLOCKWISE TO CLOSE	STYLE C PUSH DOWN TO OPEN					
	STYLE D PUSH DOWN TO CLOSE					
(OPTIONAL) ⁽²⁾ LEFT-HAND BALL ROTATES CLOCKWISE TO CLOSE	STYLE C PUSH DOWN TO CLOSE					
	STYLE D PUSH DOWN TO OPEN					
NOTE: 1. ARROW ON LEVER INDICATES DIRECTION OF ACTUATOR THRUST TO CLOSE VALVE. 2. THE OPTIONAL LEFT-HAND ORIENTATION IS NOT AVAILABLE FOR MICRO-NOTCH VEE-BALLS.						

4884773-C

Figure 24. Fisher V150 or V300 NPS 3 through 12 Valve Assembly
(Details are typical for V200 flangeless valve body)

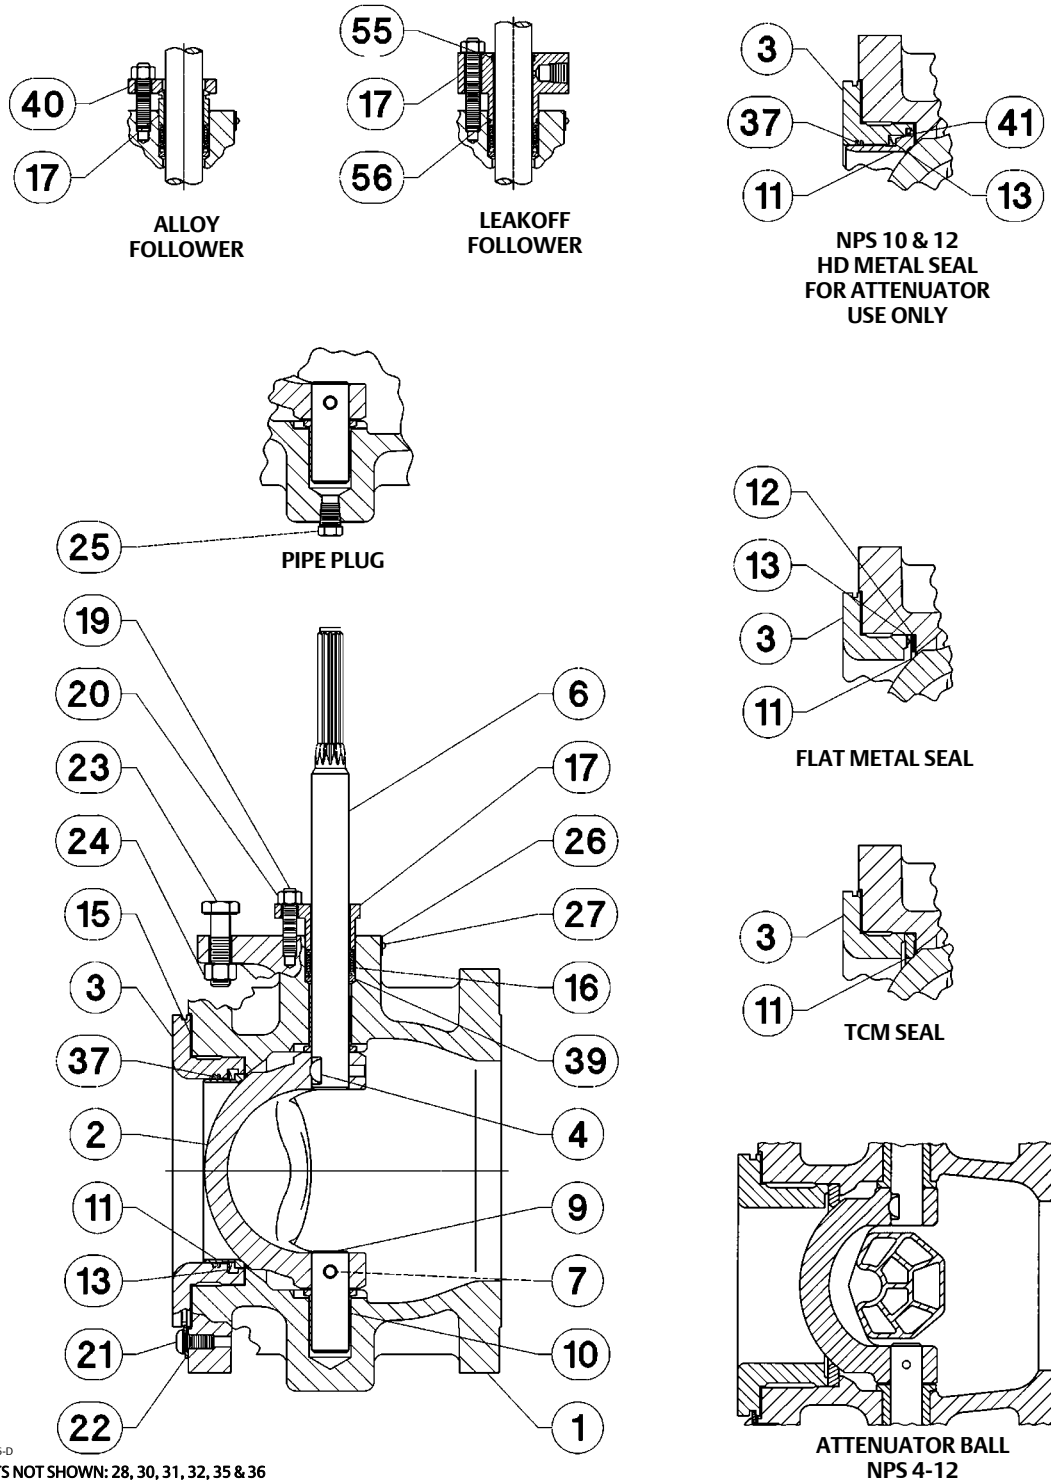


Figure 25. Exploded View, Fisher V150 and V300 NPS 3 through 12 without Attenuator Assembly.



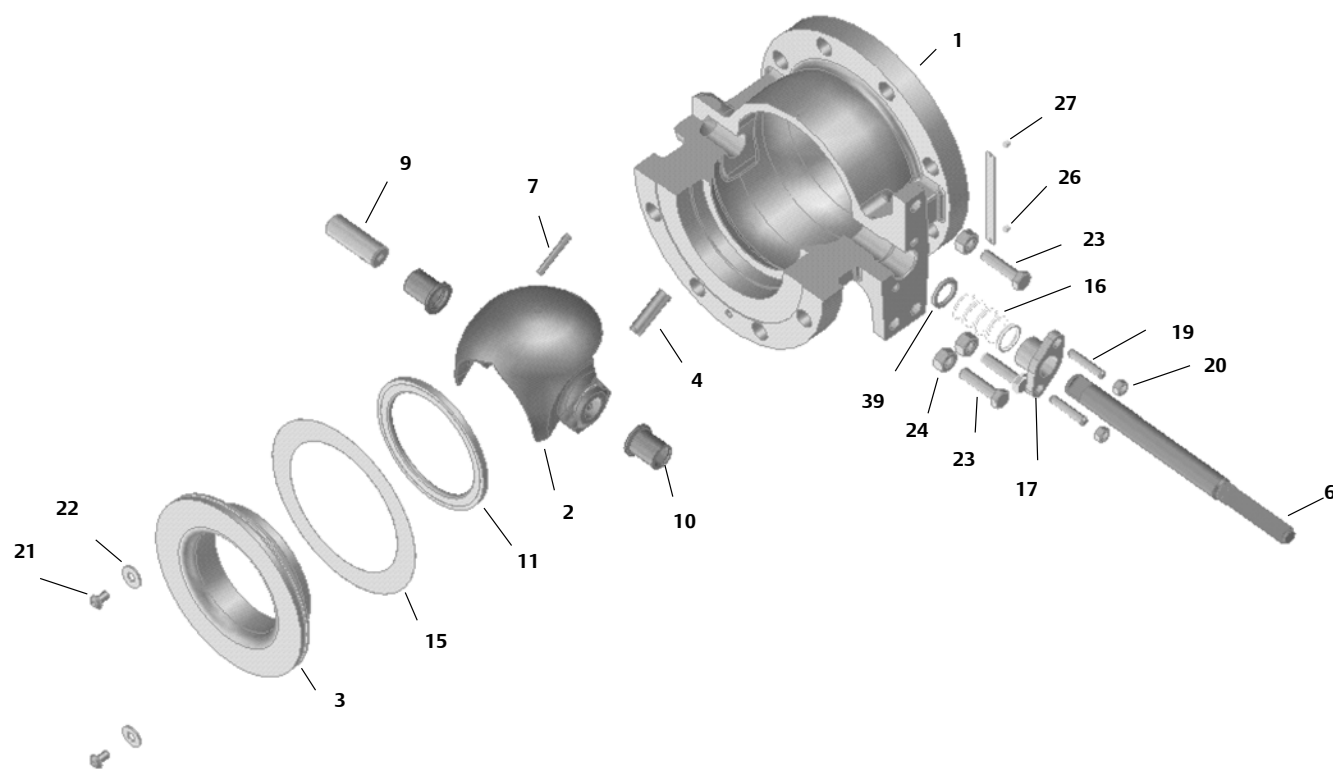


Figure 26. Fisher V150 or V300 NPS 1, 1-1/2, and 2 Valve Assembly
(Details are typical for V200, except V200 does not have flanges)

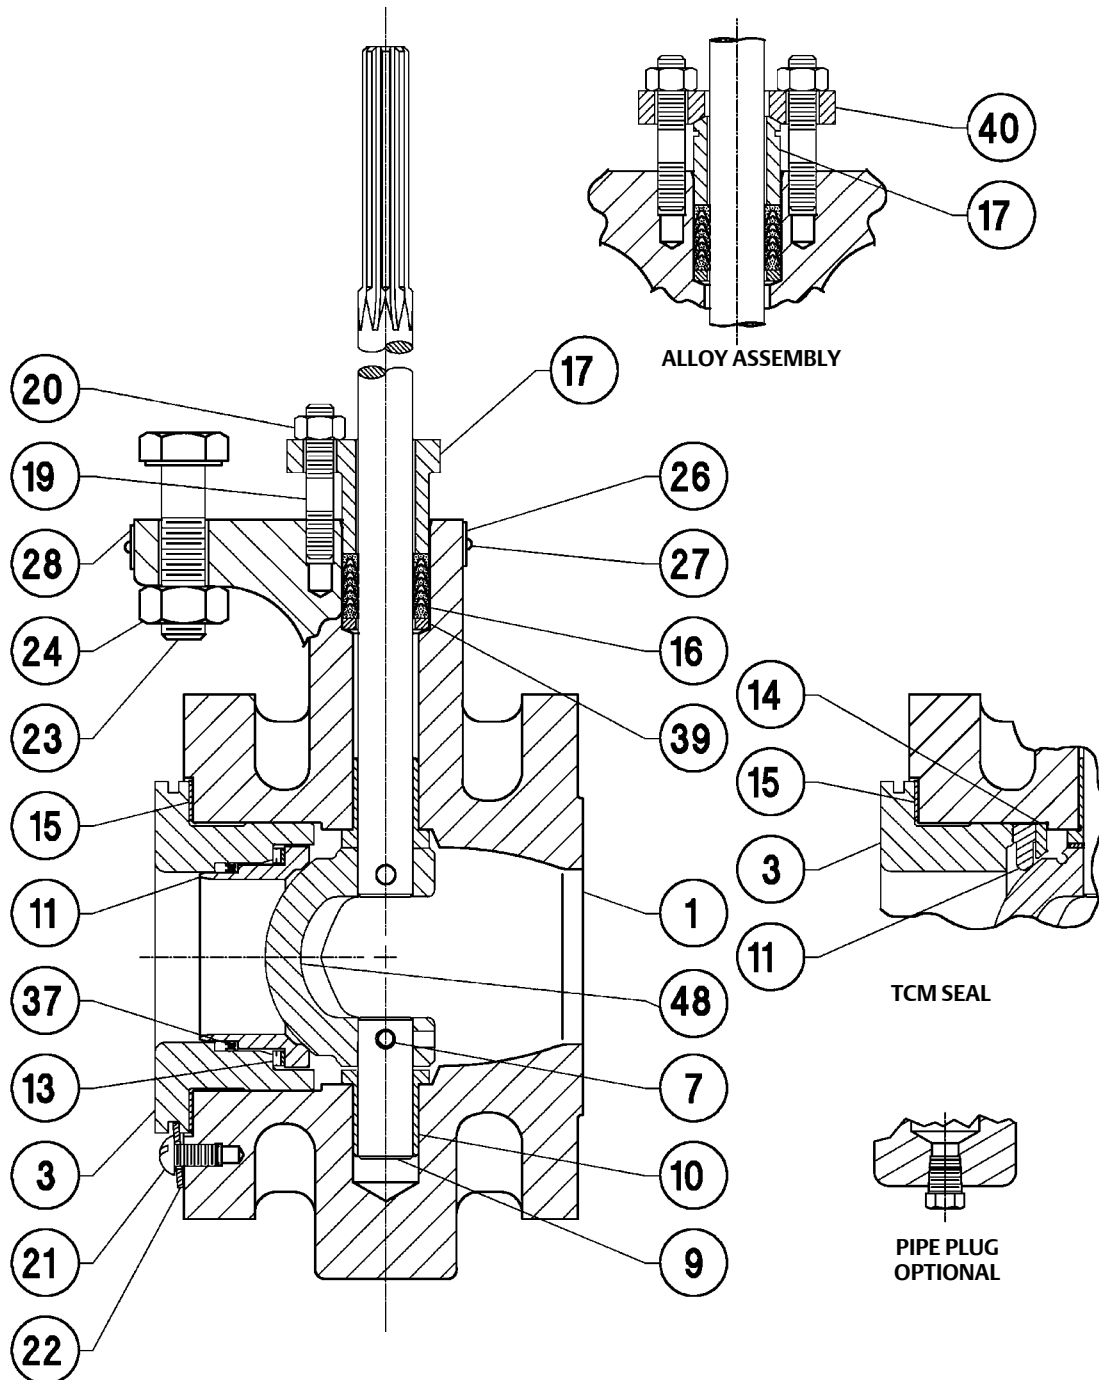


NOTE:
PARTS NOT SHOWN: 30, 31, 32, 33, 35 & 36
4482228-B

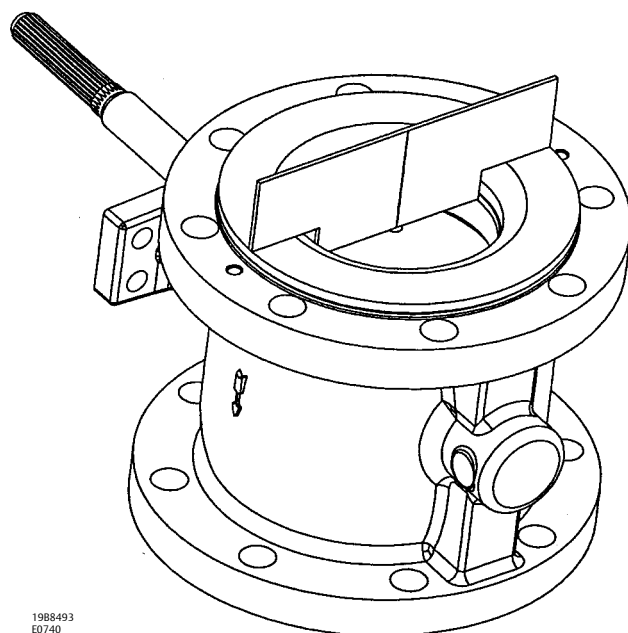Figure 27. Centering Template in Use and Template Dimensions



1988493
E0740

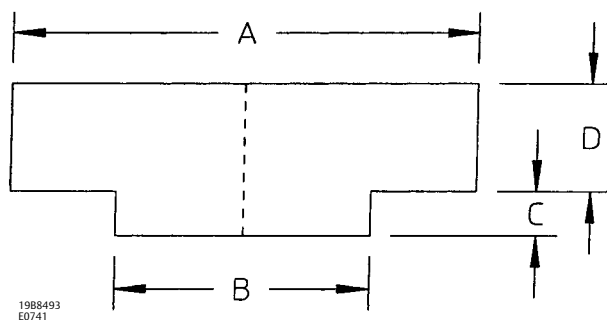

1988493
E0741

VALVE SIZE, NPS	A (FOR ASME VALVES)	A (FOR DIN VALVES)	B ⁽¹⁾	C ⁽¹⁾ (ANSI/ISA S75.08.02)	C (ASME B16.10 Short ⁽²⁾)	D ⁽¹⁾
mm						
1	63	68	19	35	61	25
1-1/2	82	88	28	34	85	25
2	102	102	38	31	85	25
3	127	138	63	24	62	38
4	157	157	82	36	71	44
6	216	212	117	21	59	51
8	270	268	139	12	61	57
10	324	320	203	2	35	60
12	381	378	254	2	20	63
Inches						
1	2.50	2.68	0.75	1.40	2.40	1.00
1-1/2	3.25	3.46	1.12	1.34	3.34	1.00
2	4.02	4.02	1.50	1.22	3.34	1.00
3	5.00	4.55	2.50	0.94	2.44	1.50
4	6.19	6.19	3.25	1.42	2.80	1.75
6	8.50	8.35	4.62	0.82	2.32	2.00
8	10.62	10.55	5.50	0.48	2.42	2.25
10	12.75	12.60	8.00	0.09	1.40	2.38
12	15.00	14.88	10.00	0.09	0.78	2.50

1. These dimensions are the same for ASME and DIN valves.
2. Note that ASME B16.10 Short dimensions are actually longer than ANSI/ISA S75.08.02 dimensions.

Parts Ordering

A serial number is assigned to each valve and stamped on the nameplate. Always refer to the valve serial number when corresponding with your Emerson Process Management sales office regarding spare parts or technical information. When ordering replacement parts, also specify the complete 11-character part number from the parts kits or parts list information.

WARNING

Use only genuine Fisher replacement parts. Components that are not supplied by Emerson Process Management should not, under any circumstances, be used in any Fisher valve, because they will void your warranty, might adversely affect the performance of the valve, and could give rise to personal injury and property damage.

Note

For the NPS 2 V150 valve, this manual covers valves with serial numbers 12551183 and higher. Always reference the serial number of your valve when corresponding with your Emerson Process Management sales office.

Retrofit Kits for ENVIRO-SEAL Packing

Retrofit kits include parts to convert existing V150, V200 and V300 valves with shallow (single packing depth) packing box to the ENVIRO-SEAL packing box construction. Retrofit kits include single PTFE packing. See following table.

ENVIRO-SEAL Packing Retrofit Kits

SHAFT DIAMETER ⁽¹⁾		PART NUMBER	
mm	Inches	Single PTFE	Graphite
12.7	1/2	RRTYXRT0012	RRTYXRT0312
15.9	5/8	RRTYXRT0022	RRTYXRT0322
19.1	3/4	RRTYXRT0032	RRTYXRT0332
25.4	1	RRTYXRT0052	RRTYXRT0352
31.8	1-1/4	RRTYXRT0062	RRTYXRT0362
38.1	1-1/2	RRTYXRT0072	RRTYXRT0372
Parts Included in Kit			
Key	Description	Quantity	
100	Packing stud	2	2
101	Packing nut	2	2
102	Packing flange	1	1
103	Spring pack assembly	1	1
105	Packing set	1	1
106	Anti-extrusion washer	2	---
107	Packing box ring ⁽²⁾	1	1
---	Tag	1	1
---	Tie Cable	1	1
1. Diameter through the packing box. 2. Not required for all sizes of V150 and V200 or for V300 with 1-1/4 or 1-1/2 inch diameter shafts.			

Repair Kits for ENVIRO-SEAL Packing

Repair kits include valves parts for shallow (single packing depth) for ENVIRO-SEAL packing box construction. Repair kits include single PTFE or graphite packing. See following table.

ENVIRO-SEAL Packing Repair Kits

SHAFT DIAMETER ⁽¹⁾		PART NUMBER	
mm	Inches	PTFE	Graphite
12.7	1/2	RRTYX000012	13B8816X012
15.9	5/8	RRTYX000022	13B8816X032
19.1	3/4	RRTYX000032	13B8816X052
25.4	1	RRTYX000052	13B8816X092
31.8	1-1/4	RRTYX000062	13B8816X112
38.1	1-1/2	RRTYX000072	13B8816X142
Parts Included in Kit			
Key	Description	Quantity	
105	Packing set	1	1
106	Anti-extrusion washer	2	--- ⁽²⁾
1. Diameter through the packing box. 2. Included in key 105.			

Repair Kits for Ball Seals

Seal repair kits include recommended spare parts for Fisher TCM Plus, S31600 stainless steel, CF10SMnN, or CD7MCuN ball seal constructions. The following table indicates the repair kit part number and the quantity of parts included in the kit.

Fisher V150, V200, and V300 Repair Kits

VALVE SIZE, NPS		KIT PART NUMBER			
		Ball Seal Material			
		TCM Plus	---	Alloy 6	CD7MCuN (Alloy 255 Duplex SST)
1		RV150X00CA2	---	RV150XHDA2	RV150XHDC2
1-1/2		RV150X00CB2	---	RV150XHDA2	RV150XHDC2
VALVE SIZE, NPS		Ball Seal Material			
		TCM Plus	S31600 (316 SST)	CF10SMnN	CD7MCuN (Alloy 255 Duplex SST)
2 ⁽¹⁾		RV150X00C12	RV150X00M12	RV150X0HD12	RV150XHDC12
2 ⁽²⁾		RV150X00C82	---	RV150X0HD82	RV150XHDC82
3		RV150X00C22	RV150X00M22	RV150X0HD22	RV150XHDC22
4		RV150X00C32	RV150X00M32	RV150X0HD32	RV150XHDC32
6		RV150X00C42	RV150X00M42	RV150X0HD42	RV150XHDC42
8		RV150X00C52	RV150X00M52	RV150X0HD52	RV150XHDC52
10		RV150X00C62	RV150X00M62	RV150X0HD62	RV150XHDC62
12		RV150X00C72	RV150X00M72	RV150X0HD72	RV150XHDC72
Parts Included in Kit		Quantity in Kit			
Key No.	Description				
11	Ball seal	1	1	1	1
12	Shim seal ⁽³⁾	---	4	---	---
13	Spring seal	---	1	---	---
13	Wave spring	---	---	1	1
15	Gasket	1	1	1	1
37	Radial seal	---	---	1	1
21	Retainer screw	2 or 4 ⁽⁴⁾	2 or 4 ⁽⁴⁾	2 or 4 ⁽⁴⁾	2 or 4 ⁽⁴⁾
22	Retainer washer	2 or 4 ⁽⁴⁾	2 or 4 ⁽⁴⁾	2 or 4 ⁽⁴⁾	2 or 4 ⁽⁴⁾
1. V150's only for serial numbers below 12551183. 2. V150's for serial numbers 12551183 and above. All V200's and V300's. 3. Fewer shim seals are furnished in the parts kits than are used in the original construction of the valve. Most original shim seals can be reused. 4. A quantity of 2 is supplied for NPS 2 through 8 valves, and a quantity of 4 is supplied for NPS 10 and 12 valves.					

Parts List

Note

Part numbers are shown for recommended spares only. For other part numbers, contact your Emerson Process Management sales office.

Common Parts (figures 24, 25 & 26)

Key	Description	Part Number
1	If you need a valve body as a replacement part, order by valve size, serial number, and desired valve body material. Contact your Emerson Process Management sales office for assistance.	
2*	Ball	see following table
2*	Ball w/ attenuator	see following table
3	Seal Protector Ring	
4*	Taper Key	
	R30006 (cobalt alloy 6 casting)	
	NPS 3 and 4	12B9530X012
	NPS 6	12B9531X012
	NPS 8 & 10	12B9532X012
	NPS 12	12B9533X012
	N10276	
	NPS 3 and 4	11B0674X032
	NPS 6	11B0695X032
	NPS 8 & 10	11B0722X032
	NPS 12	11B4684X032
6*	Drive Shaft	see following table
6*	Drive Shaft w/ attenuator	see following table
7*	Groove Pin	
	S31600 (316 stainless steel)	
	NPS 1	13B0345X012
	NPS 1-1/2 and 2	11B0705X012
	NPS 3 and 4	18A6135X012
	NPS 6	18A6138X012
	NPS 8	11B0738X012
	NPS 10 and 12	11B8596X012
	N10276	
	NPS 1	13B0345X022
	NPS 1-1/2 and 2	11B0705X022
	NPS 3 and 4	18A6135X022
	NPS 6	18A6138X032
9*	Follower Shaft	see following table
9*	Follower Shaft w/ attenuator	see following table
10*	Bearing (2 req'd)	
	PEEK/PTFE	
	NPS 1	14B3351X012
	NPS 1-1/2	14B3352X012
	NPS 2	14B3353X012
	NPS 3 and 4	17B7142X012
	NPS 6	27B7136X012
	NPS 8 and 10	27B7775X012
	NPS 12	27B9470X012
	R30016 (alloy 6B)	
	NPS 1	23B0342X012
	NPS 1-1/2	23B6819X022
	NPS 2	23B6682X012

Key	Description	Part Number
	NPS 3 and 4	27B9673X012
	NPS 6	27B9670X012
	NPS 8 and 10	27B9547X012
	NPS 12	27B9471X012
	Silver-plated R30016 (alloy 6B)	
	NPS 1	23B0343X012
	NPS 1-1/2	23B6820X012
	NPS 2	23B6683X012
	NPS 3 and 4	28B2950X012
	NPS 6	28B2951X012
	NPS 8 and 10	28B2952X012
	NPS 12	28B2953X012
	316L SST Nitride	
	NPS 1	23B0342X032
	NPS 1-1/2	23B6819X032
	NPS 2	23B6682X032
	NPS 3 and 4	27B9673X022
	NPS 6	27B9670X022
	NPS 8 and 10	27B9547X022
	NPS 12	27B9471X022
	Carbon-filled PTFE with N10276 sleeve	
	NPS 1	13B0349X012
	NPS 1-1/2	13B6822X012
	NPS 2	13B6685X012
	NPS 3 and 4	17B9675X012
	NPS 6	27B9672X012
	NPS 8 and 10	27B9549X012
	NPS 12	27B9472X012
	Glass-filled PTFE with N10276 sleeve	
	NPS 1	13B0349X042
	NPS 1-1/2	13B6822X042
	NPS 2	13B6685X022
	NPS 3 and 4	17B9675X022
	NPS 6	27B9672X022
	NPS 8 and 10	27B9549X022
	NPS 12	27B9473X022
11*	Ball Seal	
	Fisher TCM Plus	
	NPS 1	13B0339X052
	NPS 1-1/2	13B6815X062
	NPS 2	13B6686X062
	NPS 3	13A2565X102
	NPS 4	13A2585X102
	NPS 6	13A2619X102
	NPS 8	13A2645X072
	NPS 10	13A2662X052
	NPS 12	13A2677X062
	Fisher TCM Ultra	
	NPS 1	13B0339X062
	NPS 1-1/2	13B6815X072
	NPS 2	13B6686X072
	NPS 3	13A2565X112
	NPS 4	13A2585X112
	NPS 6	13A2619X112
	NPS 8	13A2645X082
	NPS 10	13A2662X062
	NPS 12	13A2677X072
	Flat Metal	
	S31600	
	NPS 3	11B4688X012
	NPS 4	11B5704X012
	NPS 6	11B5708X012
	NPS 8	11B5712X012
	NPS 10	11B5717X012

Key	Description	Part Number	Key	Description	Part Number
	S30200			NPS 2	13B6687X052
	NPS 12	11B5722X012		NPS 3	11B0660X042
	HD (Heavy-Duty) Metal			NPS 4	11B0672X052
	CF10SMnN			NPS 6	11B0681X032
	NPS 2	33B6676X012		NPS 8	11B0693X032
	NPS 3	34B4766X012		NPS 10	11B0720X022
	NPS 4	34B4767X012		NPS 12	11B4682X022
	NPS 6	34B4768X012		Graphite for Oxygen Service	
	NPS 8	34B4769X012		NPS 1	13B0344X022
	NPS 10	34B3365X012		NPS 1-1/2	13B6823X022
	NPS 12	34B3366X012		NPS 2	13B6687X022
	CD7MCuN SST			NPS 3	11B0660X052
	NPS 1	33B0341X022		NPS 4	11B0672X062
	NPS 1-1/2	33B6817X022		NPS 6	11B0681X042
	NPS 2	33B6676X022		NPS 8	11B0693X042
	NPS 3	34B4766X022		NPS 10	11B0720X032
	NPS 4	34B4767X022		NPS 12	11B4682X032
	NPS 6	34B4768X022			
	NPS 8	34B4769X022	16*	Packing Set, PTFE and carbon-filled PTFE V-ring	
	NPS 10	34B3365X022		NPS 1	12A9016X022
	NPS 12	34B3366X022		NPS 1-1/2 and 2	1R5795X0012
	R30006 cobalt alloy 6 casting			NPS 3 and 4	12A8995X022
	NPS 1	33B0341X012		NPS 6	12A8832X022
	NPS 1-1/2	33B6817X032		NPS 8 and 10	12A8951X022
	NPS 2	33B6676X032		NPS 12	12A8935X022
	NPS 3	34B4766X032	17	Packing Follower w/integral flange	
	NPS 4	34B4767X032	17	Packing Follower w/o integral flange	
	NPS 6	34B4768X032	19	Packing Follower Stud	
	NPS 8	34B4769X032	20	Packing Follower Nut	
	S31700 (317 SST) w/ CoCr-A seat		21	Seal Protector Screw	
	NPS 10	34B3365X032	22	Seal Protector Clip	
	NPS 12	34B3366X032	23	Actuator Mounting Screw	
12*	Shim Seal, S31600 (12 req'd)		24	Actuator Mounting Nut	
	Use w/flat metal seal only		25	Pipe Plug (Optional) (not shown)	
	NPS 3	11B4689X012	26	Identification Nameplate	15A0460X012
	NPS 4	11B5706X012	27	Drive Screw	
	NPS 6	11B5710X012	28	Flow Arrow	
	NPS 8	11B5714X012	30	Nameplate	
	NPS 10	11B5718X012	31	Nameplate Wire (not shown)	
	NPS 12	11B5721X012	32	Line Flange Stud	
13*	Spring Seal, S31600		33	Line Flange Stud	
	Use w/ flat metal seal only		34	Spacer	
	NPS 3	21B4687X012	35*	Packing Ring, graphite ribbon (4 req'd)	
	NPS 4	21B5705X012		NPS 1	12A9134X012
	NPS 6	21B5707X012		NPS 1-1/2 and 2	12A9135X012
	NPS 8	21B5713X012		NPS 3 and 4	12A9136X012
	NPS 10	21B5716X012		NPS 6	12A9137X012
	NPS 12	21B5720X012		NPS 8 and 10	12A9138X012
13*	Wave Spring, N07750 (NACE)			NPS 12	12A9139X012
	use w/ HD Metal Seal only		36*	Packing Washer, zinc	
	NPS 1	23B0347X012		NPS 1 (3 req'd)	14A8362X012
	NPS 1-1/2	23B6825X012		NPS 1-1/2 and 2	14A9771X012
	NPS 2	23B6689X012		NPS 3 and 4 (3 req'd)	14A8363X012
	NPS 3	24B4760X012		NPS 6 (3 req'd)	14A8365X012
	NPS 4	24B4761X012		NPS 8 and 10 (3 req'd)	14A8366X012
	NPS 6	24B4762X012		NPS 12 (3 req'd)	14A8367X012
	NPS 8	24B4763X012	37*	Radial Seal, PTFE/CG	
	NPS 10	22B4509X012		Use w/HD Metal Seal	
	NPS 12	22B4514X012		NPS 1	18B0261X012
14	Backup Ring (Composition seal only)			NPS 1-1/2	18B0262X012
15*	Gasket			NPS 2	18B0263X012
	Graphite laminate (Standard)			NPS 3	18B0264X012
	NPS 1	13B0344X032		NPS 4	28B0265X012
	NPS 1-1/2	13B6823X042		NPS 6	28B0266X012
				NPS 8	28B0267X012

Key	Description	Part Number	Key	Description	Part Number
	NPS 10	28B0268X012	105*	Packing Set	
	NPS 12	28B0269X012		W/single PTFE packing	
39*	Packing Box Ring			NPS 1	12B7053X012
	316 SST			NPS 1-1/2 and 2	12B7402X012
	NPS 1	16A6082X012		NPS 3	12B7414X012
	NPS 1-1/2 and 2	16A6083X012		NPS 4	12B7414X012
	NPS 3 and 4	16A6084X012		NPS 6	12B7438X012
	NPS 6	16A6085X012		NPS 8 and 10	12B7450X012
	NPS 8 and 10	16A6086X012		NPS 12	12B7462X012
	NPS 12	16A6087X012	106*	Anti-Extrusion Ring (2 req'd)	
	N10276			W/single and double PTFE packing	
	NPS 1	16A6082X092		NPS 1	12B7054X012
	NPS 1-1/2 and 2, N04400	16A6083X102		NPS 1-1/2 and 2	12B7406X012
	NPS 3 and 4	16A6084X072		NPS 3 and 4	12B7418X012
	NPS 6	16A6085X092		NPS 6	12B7442X012
	NPS 8 and 10	16A6086X062		NPS 8 and 10	12B7454X012
	NPS 12	16A6087X092		NPS 12 w/single PTFE packing only	12B7466X012
40	Packing Flange		107*	Packing Box Ring	
41	Retaining Ring			W/single and double PTFE packing	
48*	Ball-Shaft Assembly	see following table		NPS 1	16A6082X012
130	Clamp			NPS 1-1/2 and 2	16A6083X012
131	Bonding Strap Assembly			NPS 3 and 4	16A6084X012
				NPS 6	16A6085X012

ENVIRO-SEAL Packing System (Parts in all Type Vee-Ball Valves) (figure 5)

Key	Description	Part Number	Key	Description	Part Number
100	Packing Flange Stud		108*	Packing Ring (2 req'd)	
101	Packing Flange Nut			W/double PTFE packing	
102	Packing Flange			NPS 1	1H7844X0012
103	Spring Pack Assembly			NPS 1-1/2 and 2	1R5794X0012
				NPS 3 and 4	12A8992X022
				NPS 6	12A8831X022
				NPS 8 and 10	12A8953X022
			109*	Anti-Extrusion Ring (2 req'd)	
				W/double PTFE packing	
				NPS 1 (adapter rings)	12B7473X012
				and (anti-extrusion rings)	12B7054X012
				NPS 1-1/2 and 2 (adapter rings)	12B7410X012
				and (anti-extrusion rings)	12B7406X012
				NPS 3 and 4 PTFE packing	12B7422X012
				NPS 6 PTFE packing	12B7446X012
				NPS 8 and 10 PTFE packing	12B7458X012
			110	Lantern Ring	
			111	Tag	
			112	Tie Cable	
			113	Lubricant, anti-seize (not furnished with packing system)	

*Recommended spare parts

1. Chrome-plated ball (CRPL)

2. CF3M is the standard material offered in Europe only.

Key 2*. Series B Design Ball for NPS 3 through 12 Valves (without attenuator)

Valve NPS	Ball Material ⁽¹⁾	RH/LH ⁽³⁾ Mounted Actuator - Standard		LH Mounted Actuator - Optional	
		Ball for use with TCM seals	Ball for use with all other seals	Ball for use with TCM seals	Ball for use with all other seals
1, 1-1/2, 2	----- see key 48 -----				
3	Chrome Plated CG8M	GE11071X222	34B8330X572	GE11078X082	38B6978X122
	Chrome Plated CG8M w/CoCR-A Notch	GE11071X272	34B8330X582	GE11078X092	38B6978X132
	Chrome Plated CF3M ⁽²⁾	GE11071X292	34B8330X502	GE11078X112	38B6978X152
	Chrome Plated CF3M w/CoCR-A Notch	GE11071X302	34B8330X592	GE11078X122	38B6978X162
4	Chrome Plated CG8M	GE11072X302	37B1866X672	GE11079X112	38B6979X112
	Chrome Plated CG8M w/CoCR-A Notch	GE11072X282	37B1866X552	GE11079X122	38B6979X122
	Chrome Plated CF3M ⁽²⁾	GE11072X322	37B1866X572	GE11079X142	38B6979X142
	Chrome Plated CF3M w/CoCR-A Notch	GE11072X332	37B1866X582	GE11079X152	38B6979X152
6	Chrome Plated CG8M	GE11073X312	47B1737X372	GE11080X112	48B6980X152
	Chrome Plated CG8M w/CoCR-A Notch	GE11073X322	47B1737X492	GE11080X122	48B6980X162
	Chrome Plated CF3M ⁽²⁾	GE11073X342	47B1737X512	GE11080X142	48B6980X182
	Chrome Plated CF3M w/CoCR-A Notch	GE11073X352	47B1737X522	GE11080X152	48B6980X192
8	Chrome Plated CG8M	GE11074X282	44B8352X332	GE11081X092	48B6981X162
	Chrome Plated CG8M w/CoCR-A Notch	GE11074X292	44B8352X502	GE11081X102	48B6981X172
	Chrome Plated CF3M ⁽²⁾	GE11074X312	44B8352X522	GE11081X122	48B6981X192
	Chrome Plated CF3M w/CoCR-A Notch	GE11074X322	44B8352X532	GE11081X132	48B6981X202
10	Chrome Plated CG8M	GE11075X262	44B8641X342	GE11082X082	48B6982X132
	Chrome Plated CG8M w/CoCR-A Notch	GE11075X272	44B8641X272	GE11082X092	48B6982X142
	Chrome Plated CF3M ⁽²⁾	GE11075X242	44B8641X452	GE11082X112	48B6982X162
	Chrome Plated CF3M w/CoCR-A Notch	GE11075X292	44B8641X462	GE11082X122	48B6982X172
12	Chrome Plated CG8M	GE11076X242	47B1405X362	GE11083X082	48B6983X102
	Chrome Plated CG8M w/CoCR-A Notch	GE11076X252	47B1405X372	GE11083X092	48B6983X112
	Chrome Plated CF3M ⁽²⁾	GE11076X272	47B1405X392	GE11083X112	48B6983X132
	Chrome Plated CF3M w/CoCR-A Notch	GE11076X282	47B1405X402	GE11083X122	48B6983X142
1. For materials not shown, contact your Emerson Process Management sales office 2. For Europe and Asia manufacture 3. With Standard LH mount the ball will rotate open to the bottom on the valve body					

Key 2* . Ball (With attenuator)

Chrome Plated CG8M ball, CG8M attenuator (right hand mounted actuator- standard)	
NPS 4 valve	38B6522X012
NPS 6 valve	48B6523X012
NPS 8 valve	48B6525X012
NPS 10 valve	48B6527X012
NPS 12 valve	48B6529X012
Chrome Plated CG8M ball, CG8M attenuator (left hand mounted actuator - optional)	
NPS 4 valve	38B6522X012
NPS 6 valve	48B6524X012
NPS 8 valve	48B6526X012
NPS 10 valve	48B6528X012
NPS 12 valve	48B6530X012

Key 6* . Spline Drive Shaft for Non-attenuated Series B Design Ball - (RH/LH Standard)

S20910	
NPS 1, 1-1/2, and 2 valves	see key 48 table
NPS 3 and 4 valves	37B2506X022
NPS 6 valve	37B2507X022
NPS 6 CL600 valve	37B2751X022
NPS 8 and 10 valves	37B2508X022
NPS 8 and 10 valves	37B2509X022
N10276	
NPS 1, 1-1/2, and 2 valves	see key 48 table
NPS 3 and 4 valves	37B2506X032
NPS 6 valve	37B2507X032
NPS 8 and 10 valves	37B2508X032
NPS 8 and 10 valves	37B2509X032
S31254	
NPS 1, 1-1/2, and 2 valves	see key 48 table
NPS 3 and 4 valves	37B2506X052
NPS 6 valve	37B2507X052
NPS 8 and 10 valves	37B2508X052
NPS 8 and 10 valves	37B2509X052

Key 6* . Spline Drive Shaft for Non-attenuated Series B Design Ball - (LH Optional)

S20910	
NPS 3 and 4 valves	38B7551X022
NPS 6 valve	38B7552X022
NPS 6 CL600 valve	38B7553X022
NPS 8 and 10 valves	38B7554X022
NPS 12 valve	38B7555X022

Key 6* . Spline Drive Shaft for Attenuated Ball- (RH/LH Standard)

S20910	
NPS 4 valve	21B0668X012
6-inch valve	31B0732X012
NPS 6 CL600 valve	37B0528X022
NPS 8 and 10 valves	31B0716X012
NPS 12 valve	31B4678X012

Key 9*. Follower Shaft

S20910	
NPS 1 valve	13B0336X012
NPS 1-1/2 and 2 valves	13B6678X012
NPS 3 and 4 valves	11B0728X012
NPS 6 valve	11B0733X012
NPS 8 and 10 valves	11B0717X012
NPS 12 valve	11B4679X012
N10276	
NPS 1 valve	13B0336X022
NPS 1-1/2 and 2 valves	13B6678X022
NPS 3 and 4 valves	11B0728X022
NPS 6 valve	11B0733X022
NPS 8 and 10 valves	11B0717X022
NPS 12 valve	11B4679X032
S31254	
NPS 1 valve	13B0336X052
NPS 1-1/2 and 2 valves	13B6678X062
NPS 3 and 4 valves	11B0728X132
NPS 6 valve	11B0733X092
NPS 8 and 10 valves	11B0717X102
NPS 12 valve	11B4679X092

Key 48* . Ball/Spline Shaft Assembly for NPS 1, 1-1/2, and 2 Valves

Ball Material ⁽³⁾	CG8M CRPL ⁽¹⁾	CG8M CRPL ⁽¹⁾	CG8M	CG8M	CW2M
Shaft Material ⁽³⁾	S20910	S17400	S20910	S17400	N10276
NPS 1 Valve (1/2-Inch shaft)	29B9535X652	29B9535X722	29B9535X642	29B9535X712	29B9535X052
NPS 1-1/2 Valve (5/8-Inch shaft)	39B9542X592	39B9542X652	39B9542X582	39B9542X642	39B9542X052
NPS 2 Valve (5/8-Inch shaft)	39B9547X472	39B9547X862	39B9547X792	39B9547X852	39B9547X052
Ball Material	CF3M CRPL ⁽²⁾	CF3M CRPL ⁽²⁾	CF3M	CF3M	CK3MCUN
Shaft Material (cont.)	S20910	S17400	S20910	S17400	S31254
NPS 1 Valve (1/2-Inch shaft)	29B9535X682	29B9535X752	29B9535X672	29B9535X742	29B9535X152
NPS 1-1/2 Valve (5/8-Inch shaft)	39B9542X622	39B9542X682	39B9542X612	39B9542X672	39B9542X152
NPS 2 Valve (5/8-Inch shaft)	39B9547X812	39B9547X892	39B9547X802	39B9547X882	39B9547X152
Ball Material	CG8M CRPL with CoCR-A Notch	CG8M CRPL with CoCR-A Notch	CF3M CRPL with CoCR-A Notch	CF3M CRPL with CoCR-A Notch	
Shaft Material (cont.)	S20910	S17400	S20910	S17400	
NPS 1 Valve (1/2-Inch shaft)	29B9535X662	29B9535X732	29B9535X692	29B9535X762	
NPS 1-1/2 Valve (5/8-Inch shaft)	39B9542X602	39B9542X662	39B9542X632	39B9542X692	
NPS 2 Valve (5/8-Inch shaft)	39B9547X742	39B9547X872	39B9547X822	39B9547X902	
1. Chrome Plated ball (CRPL). 2. CF3M is for Europe and Asia manufacture. 3. For materials or shaft sizes not shown contact your Emerson Process Management sales office.					

Key 48* . Ball/Spline Shaft Assembly for NPS 1 Valves with Micro-Notch Vee-Ball⁽¹⁾

Mounting	Right Hand	Right Hand	Right Hand	Right Hand	Right Hand
Ball Material ⁽³⁾	CG8M CRPL ⁽²⁾	CG8M CRPL ⁽²⁾	CF3M CRPL ⁽²⁾	CF3M CRPL ⁽²⁾	R30006
Shaft Material	S20910	S17400	S20910	S17400	S20910
NPS 1 Valve	GE47969X062	GE47969X072	GE47969X082	GE47969X092	39B9540X022
1. For VTC ceramic Micro-Notch ball materials contact your Emerson Process Management sales office. 2. Chrome Plated ball (CRPL). 3. CF3M is for Europe and Asia manufacture.					

Appendix A

Instructions for Non-Series B

The Series B changes affected only the NPS 3 through 12 valves without attenuators. To determine if a Vee-Ball valve is Series B, you will need to examine several of the internal parts. Compare the distinctive skirted V-notch outline of the forward side and the circular edge on the reverse side of the Series B design ball to the V-notch on both sides of the non-series B design ball. Then look for bushings. The lack of bushings indicates the valve body is Series B.

All Vee-Ball valves NPS 3 through 12 produced before the Series B design changes use the Specifications table, the Installation, Maintenance, Packing Maintenance, Replacing Packing, and Replacing the Ball Seal instructions found elsewhere in this manual. Bearing and Vee-Ball Maintenance and Actuator Mounting instructions for these valves may be found below.

Maintenance

WARNING

The Vee-ball closes with a shearing, cutting motion, which could result in personal injury. To avoid injury, keep hands, tools, and other objects away from the Vee-ball while stroking the valve.

Avoid personal injury from sudden release of process pressure. Before performing any maintenance operations:

- Do not remove the actuator from the valve while the valve is still pressurized.
- Disconnect any operating lines providing air pressure, electric power, or a control signal to the actuator. Be sure the actuator cannot suddenly open or close the valve.
- Use bypass valves or completely shut off the process to isolate the valve from process pressure. Relieve process pressure from both sides of the valve. Drain the process media from both sides of the valve.
- Vent the power actuator loading pressure and relieve any actuator spring precompression.
- Use lock-out procedures to be sure that the above measures stay in effect while you work on the equipment.
- Always wear protective gloves, clothing, and eyewear when performing any maintenance operations to avoid personal injury.
- The valve packing area may contain process fluids that are pressurized, *even when the valve has been removed from the pipeline*. Process fluids may spray out under pressure when removing the packing hardware or packing rings.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.

Procedures for disassembly and assembly of the bearings and ball cannot be accomplished until the ball seal and valve packing are removed from the valve.

1. Refer to the Replacing Packing procedures to remove the actuator, and to remove the packing flange and packing follower from the valve. When the packing disassembly steps are complete, return to this section.
2. Refer to the Replacing the Ball Seal procedures to remove the ball seal from the valve.

Disassembly

WARNING

When the actuator is removed from the valve, the ball/shaft assembly may suddenly rotate, with a shearing, cutting motion, which could result in personal injury. To avoid injury, carefully rotate the ball to a stable position. Make sure the ball will not rotate.

Key numbers in this procedure are shown in figures 24, 26, and 31, unless otherwise indicated. A taper key (key 4, figure 14) is used in NPS 3 through 12 Non-Series B valves.

3. Carefully rotate the ball to the open position after the actuator is disconnected. Make sure the ball will not rotate (see warning above). Provide support for the ball during the following disassembly.
4. Unscrew the pipe plug (key 25). (With newer valve constructions, the pipe plug is optional and may not be available.)
5. Working from the small end of the groove pin (key 7), use a pin punch to drive the groove pin out of the ball ear and follower shaft.

For tack welded taper keys, driving the taper key out of the ball ear will shear the tack welding.

6. Locate the small end of the taper key (key 4, see figure 14). Using a pin punch on the smaller end of the taper key, drive it out of the ball (key 2) and drive shaft (key 6). Note: driving the taper key in the wrong direction will tighten it.
7. Pull the drive shaft (key 6) out of the actuator side of the valve body.
8. Make sure the sealing surface of the ball is not damaged while removing the follower shaft.
 - a. If a pipe plug (key 25) is installed, use a punch to drive the follower shaft (key 9) into the center of the ball.
 - b. If a pipe plug is not installed, use a piece of continuous threaded rod as a removal rod when moving the follower shaft (key 9) into the center of the V-notch ball. Refer to the table 7 for a description of the size threaded rod needed. The length of the rod should allow easy working room from the valve body.
9. **Remove the ball** (key 2) by carefully removing the follower shaft and ball from the valve body.
10. Remove the packing box spacer (key 34) for NPS 8, 10, and 12 valves.
11. **Removing the bearings (key 10):**
 - a. **For composition bearings**, remove the bearings by hand. If the bearings are tight in the valve body, then pull or drive them out with a slight pressure. Allow the bushings (key 5 or 8) to remain in the valve body.

Table 7. Continuous Threaded Rod

Valve Size, NPS	Threaded Rod Thread Size	Thread Depth in Follower Shaft
3	1/4-20	0.5
4	1/4-20	0.5
6	1/4-20	0.5
8	5/16-18	0.62
10	5/16-18	0.62
12	5/16-18	0.94

- b. **For metal bearings**, use a press and ram to remove the drive shaft bearings out of the valve body. Refer to figures 29 and 30 ram dimensions. The bushings (key 5 or 8) will normally remain in the valve body.

To remove the follower shaft bearings, use a blind-hole bearing puller. If you do not have such a tool, you can machine the bearing out.

Note

For proper shutoff performance, the ball and seal require the bearing (key 10) to be positioned correctly. If you removed the bearings (key 10), be sure to locate the new bearings as shown in figures 29 and 30.

12. Thoroughly clean surfaces of all parts that are to be re-used or obtain replacement parts.

Assembly

1. Inspect all sealing surfaces to ensure they are in good condition and without scratches or wear.
2. **Installing bearings (key 10):**
 - a. **For composition bearings**, install the bearings by hand. The bearing flanged end should touch the bushing (key 5 or 8).
 - b. **For metal bearings:**
 - Use a press and ram to install the bearings (key 10). Refer to figures 29 and 30.
 - Press the bearings in until each bearing is flush with the bushing (key 5 or 8). The acceptable tolerance for bearing location is: flush with the bushing to 1.52 mm (0.060 inches) inside the bushing. That is, the bearings should not protrude into the flow cavity of the valve, and they should not be more than 1.52 mm (0.060 inches) inside the bushing.
 - Take care not to change the position of the bushings (key 5 or 8) when pressing in new bearings (key 10), otherwise the ball will not center in the valve body and seal.
3. **Installing the Vee-Ball (key 2):**

WARNING

The Vee-Ball might be damaged if it is allowed to fall into the valve body. To avoid personal injury or damage to the sealing surfaces, support the ball to prevent it from falling into or out of the valve body cavity.

Note

For ease of assembly, the follower shaft (key 9) should be inserted into the ball before installing the ball in an NPS 3 valve without ball/attenuator.

Carefully install the ball into the valve body cavity.

After you have installed the ball (key 2) into the valve body assembly, firmly support the ball while installing the shafts.

4. **Installing the follower shaft (key 9):**

- **For NPS 3 valves:** The follower shaft (key 9) should already have been inserted into the ball before the ball was put into the valve body. Insert the follower shaft (key 9) into the valve body bearing (key 10).
- **For NPS 4 and larger valves without attenuator:** Insert the follower shaft (key 9) through the ball, and into the valve body bearing (key 10).

Then for all sizes, align the hole in the follower shaft with the holes in the ball. Insert the small end of the groove pin (key 7) into the hole in the ball and into the follower shaft. The pin will hold the parts in place while the drive shaft (key 6) is being installed.

5. Insert the drive shaft (key 6) into the valve body bearing (key 10), and into the ball ear. Align the hole in the drive shaft with the holes in the ball.

CAUTION

The drive shaft must be used with the correct Vee-Ball. Refer to the tag (see figure 13) attached to the Vee-Ball and to the drive shaft.

Failure to use the correct Vee-Ball/ shaft combination may result in the ball not being in the position indicated by the slash mark on the end of the shaft. If the ball is not properly aligned with the slash mark, the valve will not function correctly and seal damage may result.

6. Installing the Taper Key (key 4):

Current standard construction materials for all NPS 3 through 12 valves require the taper key (key 4, figure 14) to be tack welded in place using the following procedure. Use standard welding preparations when preparing parts for reassembly.

CAUTION

Make sure the drive shaft (key 6) is free of oil or grease, otherwise the taper key will not seat properly. Failure to properly set the taper pin or taper key could result in it coming loose while in service. Loosening of the taper key in service could result in improper valve function and equipment damage.

1. Install the drive shaft (key 6) into the valve body through the ball and into the lower bearing.
2. Insert the taper key (key 4) into ball and drive shaft (keys 2 and 6) as shown in figure 14. The taper key inserts, with the flat side of the key, facing the drive shaft (key 6).
3. Using a flat end punch, drive the groove pin (key 7) into the ball ear and follower shaft until it is flat with the ball ear surface.
4. Using a flat end punch, drive the taper key (key 4) into the ball ear and drive shaft (key 6) until solid, heavy contact is obtained between the key and shaft.
5. Measure the position of the taper key head.
6. Drive the taper key in further using the minimum distance shown in table 7.

Table 8. Taper Key Minimum Depth

VALVE SIZE, NPS	MINIMUM DEPTH TO DRIVE TAPER KEY AFTER INITIAL SOLID CONTACT, mm (INCHES)
3, 4, 6	4.8 (0.188)
8, 10, 12	5.6 (0.219)

Table 9. Taper Key Maximum Depth

VALVE SIZE, NPS	MAXIMUM DEPTH TO DRIVE TAPER KEY AFTER INITIAL SOLID CONTACT, mm (INCHES)
3, 4	7.1 (0.281)
6	7.9 (0.312)
8, 10	9.5 (0.375)
12	10.3 (0.406)

7. Inspect the ball/shaft taper key connection to verify that the taper key spans the entire shaft flat width. If not, the taper key must be driven in further until this condition is satisfied. However, do not exceed the maximum depths shown in table 8.

Note

When welding standard valves that have a CG8M (317 SST) or CF3M (316L SST) ball, use 309 or 309L filler rod material. Alloy valve taper keys are normally not welded.

8. When the above conditions are met, tack weld the taper key (key 4) to the ball ear on the head end of the key (see figure 26). Use a:

- 1/8 inch diameter weld on NPS 3 through 6 valves,
- 3/16 inch diameter weld on NPS 8 through 10 valves, and
- 1/4 inch diameter weld on NPS 12 valves.

For all constructions: Refer to Replacing the Ball Seal, Packing Maintenance, and other procedures as necessary to complete the assembly of the valve.

Actuator Mounting

Use the appropriate actuator instruction manual and figure 23 of this manual when mounting the actuator or changing actuator styles and positions.

To help ensure correct centering of the ball (key 2) on the seal (key 11), be sure the ball is closed when mounting the actuator. Do not use a hammer or other tool to drive the actuator lever onto the valve shaft.

Clean the valve shaft and actuator lever splines to be sure the actuator lever will slide on easily. If the lever does not slide on easily, carefully wedge the ball solidly against the actuator-side bearing using a screwdriver or similar tool inserted between the lower ear of the ball and the valve body.

Keep the wedge in place while installing the lever, but again, do not drive on the lever. Remove the wedge after you have clamped the actuator lever on the valve shaft and connected the lever to the actuator piston rod or diaphragm rod.

Determining Mounting Position

The actuator can be either right or left-hand mounted.

Note

Right-hand mounting—Actuator is on the right side of the valve when viewed from valve inlet.

Left-hand mounting—Actuator is on the left side of the valve when viewed from valve inlet.

The preferred location of the ball is in the top of the valve body when the valve is open. To convert from right to left hand-mounting, turn the valve to position the actuator mounting pad on the left and rotate the ball to the top of the valve.

The number one V-notch controls flow on right-hand mounting. Turn the valve 180 degrees, and rotate the ball to the top of the valve to obtain left-hand mounting. The number two V-notch controls flow for this construction. See figure 28.

Determining Closed Position

1. The valve must be removed from the line to check the position of the ball.

WARNING

The ball closes with a shearing, cutting motion. To avoid personal injury, keep hands, tools, and other objects away from the ball while stroking the valve.

2. Rotate the ball to the closed position.
3. Follow one of the procedures below:
 - When viewed from the valve body inlet, the ball is in the proper position when both V-notches of the ball are centered between the machined diameter of the ledge that supports the seal.
 - If the ball has a spot machined on the top, align that spot to the exact center of the seal cavity.
4. Adjust the actuator linkage as described in the appropriate actuator instruction manual until the condition described in step 3 exists. A line is stamped on the actuator end of the drive shaft (see figure 23) to indicate the ball position.

⚠ WARNING

Use only genuine Fisher replacement parts. Components that are not supplied by Emerson Process Management should not, under any circumstances, be used in any Fisher valve, because they will void your warranty, might adversely affect the performance of the valve, and could give rise to personal injury and property damage.

Non-Series B Design Parts (figure 31)





















Note

Part numbers are shown for recommended spares only. For part numbers not shown, contact your Emerson Process Management sales office.

Key	Description	Part Number
2	Ball	
2	Ball with attenuator (RH mtg in Common parts section)	
6	Drive Shaft	
9	Follower Shaft	
10*	Bearing (2 req'd)	
	PEEK	
	NPS 3 and 4	14B3354X012
	NPS 6	14B3355X012

Key	Description	Part Number
	NPS 8 and 10	14B3356X012
	NPS 12	14B3357X012
	S44004 (440C SST)	
	NPS 2	23B6682X022
	NPS 3 and 4	14A5698X012
	NPS 6	14A4618X012
	NPS 8 and 10	14A5699X012
	NPS 12	14A6549X012
	R30016 (alloy 6B)	
	NPS 3 and 4	14A6546X012
	NPS 6	14A6547X012
	NPS 8 and 10	14A6548X012
	NPS 12	14A6550X012
	Silver-plated R30016 (alloy 6B)	
	NPS 3 and 4	14A6537X012
	NPS 6	14A2498X012
	NPS 8 and 10	14A6538X012
	NPS 12	14A6539X012
	Carbon-filled PTFE with N10276 sleeve	
	NPS 3 and 4	12B5944X012
	NPS 6	12B5945X012
	Glass-filled PTFE with N10276 sleeve	
	NPS 3 and 4	12B5944X042
	NPS 6	12B5945X042

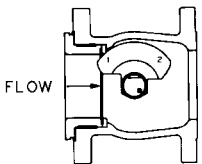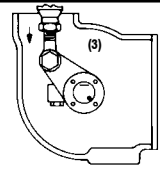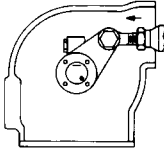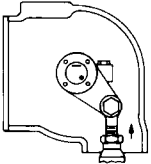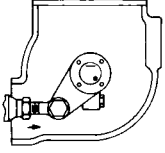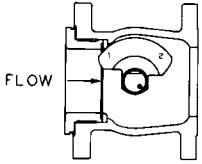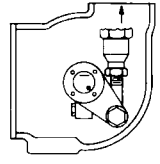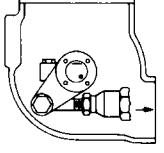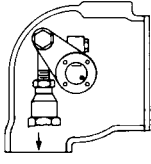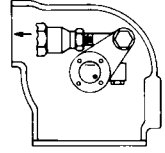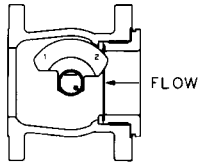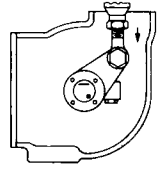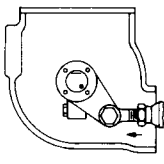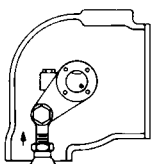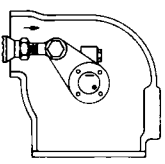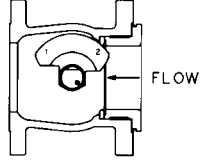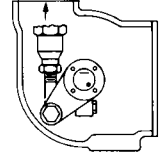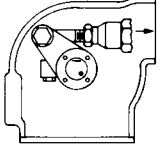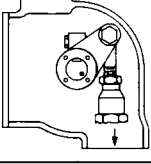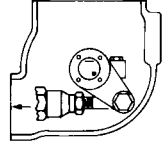Figure 28. Index Marks for Actuator Lever Orientation for Non-Series B Valves

ACTUATOR		VALVE OPEN	ACTUATOR POSITION			
MOUNTING	STYLE		1	2	3	4
RIGHT-HAND ⁽¹⁾	STYLE A (PDTC) ⁽²⁾					
	STYLE B (PDTO) ⁽²⁾					
LEFT-HAND ⁽¹⁾	STYLE C (PDTC) ⁽²⁾					
	STYLE D (PDTO) ⁽²⁾					

1. Right-hand mounting controls with v notch no. 1; Left-hand mounting controls with v notch no. 2
 2. PDTC-push down to close; PDTO-push down to open
 3. Arrow on lever indicates direction of actuator thrust to close valve


B2703

VALVE SIZE, NPS	BEARING RAM DIMENSIONS								BUSHING RAM DIMENSIONS					
	Ram Lengths				Ram Diameters				Ram Diameters					
	L		M		D		d		D		Long Ram d		Short Ram d	
	mm	Inches	mm	Inches	mm	Inches	mm	Inches	mm	Inches	mm	Inches	mm	Inches
3 & 4	<u>201.42</u> MIN	<u>7.930</u> MIN ⁽¹⁾	<u>95.25</u> MIN	<u>3.750</u> MIN	<u>22.86</u> 22.61	<u>0.900</u> 0.890	<u>19.05</u> 18.80	<u>0.750</u> 0.740	<u>28.19</u> 27.94	<u>1.110</u> 1.100	<u>19.05</u> 18.80	<u>0.750</u> 0.740	<u>22.86</u> 22.61	<u>0.900</u> 0.890
6	<u>247.65</u> MIN	<u>9.750</u> MIN	<u>95.25</u> MIN	<u>3.750</u> MIN	<u>29.21</u> 28.96	<u>1.150</u> 1.140	<u>25.40</u> 25.15	<u>1.000</u> 0.990	<u>34.54</u> 34.29	<u>1.360</u> 1.350	<u>25.40</u> 25.15	<u>1.000</u> 0.990	<u>29.21</u> 28.96	<u>1.150</u> 1.140
8	<u>338.75</u> MIN	<u>13.310</u> MIN	<u>139.70</u> MIN	<u>5.500</u> MIN	<u>35.56</u> 35.31	<u>1.400</u> 1.390	<u>31.75</u> 31.50	<u>1.250</u> 1.240	<u>40.89</u> 40.64	<u>1.610</u> 1.600	<u>31.75</u> 31.50	<u>1.250</u> 1.240	<u>35.56</u> 35.31	<u>1.400</u> 1.390
10	<u>396.75</u> MIN	<u>15.620</u> MIN	<u>139.70</u> MIN	<u>5.500</u> MIN	<u>35.56</u> 35.31	<u>1.400</u> 1.390	<u>31.75</u> 31.50	<u>1.250</u> 1.240	<u>40.89</u> 40.64	<u>1.610</u> 1.600	<u>31.75</u> 31.50	<u>1.250</u> 1.240	<u>35.56</u> 35.31	<u>1.400</u> 1.390
12	<u>476.25</u> MIN	<u>18.750</u> MIN	<u>152.40</u> MIN	<u>6.000</u> MIN	<u>41.91</u> 41.66	<u>1.650</u> 1.640	<u>38.10</u> 37.85	<u>1.500</u> 1.490	<u>50.42</u> 50.17	<u>1.985</u> 1.975	<u>38.10</u> 37.85	<u>1.500</u> 1.490	<u>41.91</u> 41.66	<u>1.650</u> 1.640

1. MIN = Minimum.

VALVE SIZE, NPS	DIMENSION			
	B	C	B	C
	Millimeters		Inches	
3	<u>48.26</u> 50.04	<u>100.38</u> 100.63	<u>1.960</u> 1.970	<u>3.952</u> 3.962
4	<u>60.10</u> 60.35	<u>121.01</u> 121.26	<u>2.366</u> 2.376	<u>4.764</u> 4.774
6	<u>83.59</u> 83.85	<u>168.00</u> 168.25	<u>3.291</u> 3.301	<u>6.614</u> 6.624
8	<u>106.20</u> 106.45	<u>213.21</u> 213.46	<u>4.181</u> 4.191	<u>8.394</u> 8.404
10	<u>135.33</u> 135.59	<u>271.48</u> 271.73	<u>5.328</u> 5.338	<u>10.688</u> 10.698
12	<u>169.67</u> 169.93	<u>340.16</u> 340.41	<u>6.680</u> 6.690	<u>13.392</u> 13.402

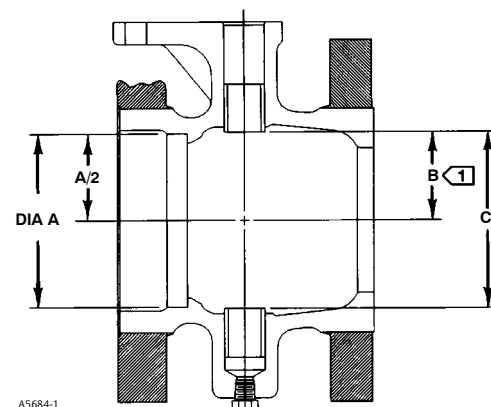Figure 29. Bushing Location



A5684-1

BUSHING (KEY 5) LOCATION

Figure 30. Metal Bearing Ram Location


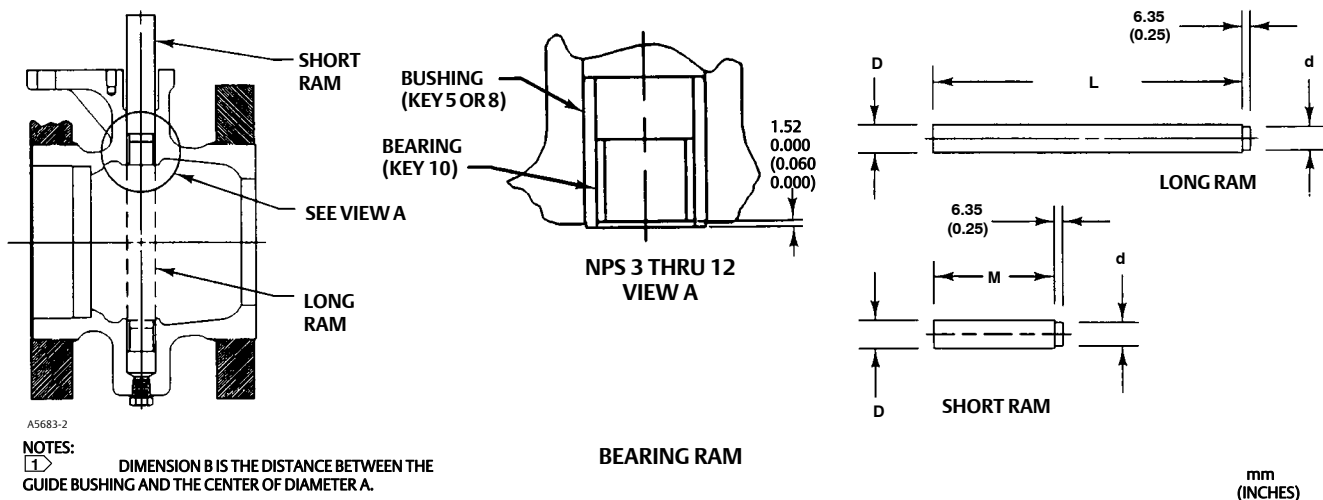


Figure 31. Fisher V150 and V300 Non-Series B Valve Assembly (NPS 3- 12)
(Details are typical for V200 Valves except V200 does not have flanges)

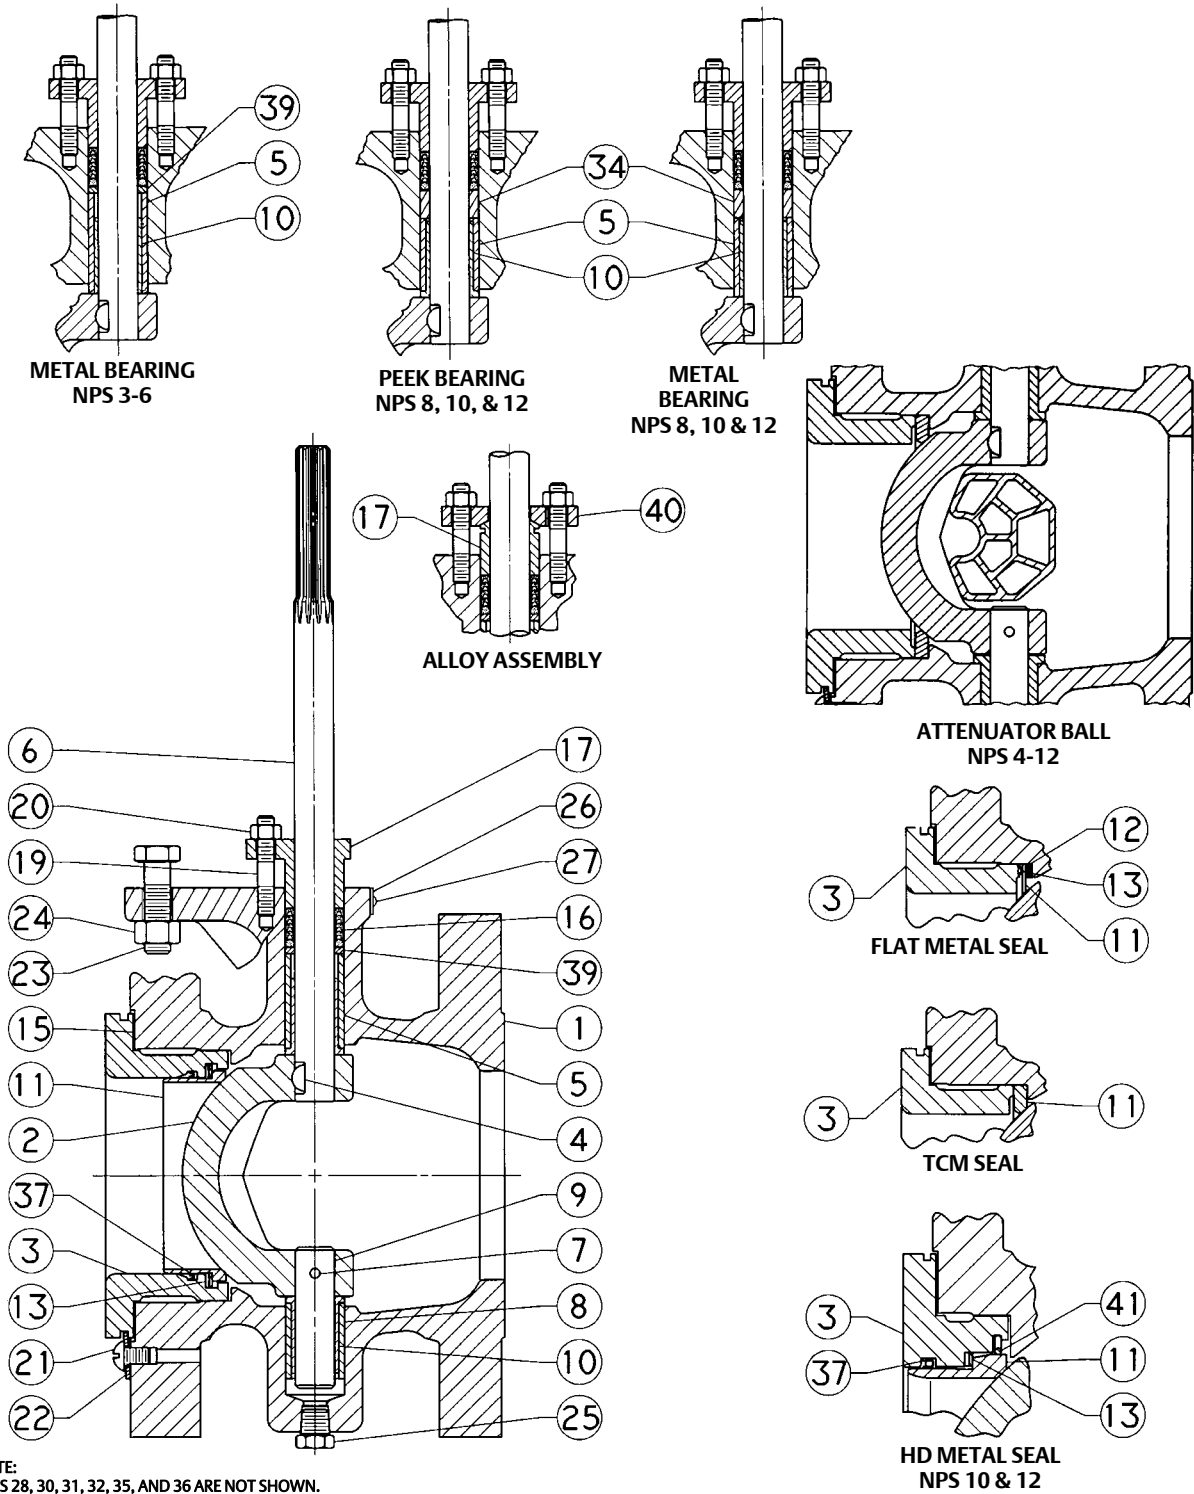

42B4652-C

Neither Emerson, Emerson Process Management, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end user.

Fisher, ENVIRO-SEAL, Vee-Ball, and FIELDVUE are marks owned by one of the companies in the Emerson Process Management business unit of Emerson Electric Co. Emerson Process Management, Emerson, and the Emerson logo are trademarks and service marks of Emerson Electric Co. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Process Management

Marshalltown, Iowa 50158 USA

Sorocaba, 18087 Brazil

Chatham, Kent ME4 4QZ UK

Dubai, United Arab Emirates

Singapore 128461 Singapore

www.Fisher.com