

# **MD207 Manual**

# Safety and General Information

## Important Information on Safe and Efficient Operation

### ***Read This Information Before Using Your Radio.***

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

### **Transmit and Receive Procedure**

Your two-way radio contains a transmitter and a receiver. To control your exposure and ensure compliance with the general population/uncontrolled environment exposure limits, always adhere to the following procedure:

- Transmit no more than 50% of the time.
- To receive calls, release the PTT button.
- To transmit (talk), press the Push to Talk (PTT) button.

Transmitting 50% of the time, or less, is important because the radio generates measurable RF energy exposure only when transmitting (in terms of measuring standards compliance).

### **Exposure to Radio Frequency Energy**

Your Motorola two-way radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J.
- American National Standards Institute (ANSI)/Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992.
- Institute of Electrical and Electronics Engineers (IEEE) C95. 1-1999 Edition.
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998.
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 KHz to 300 GHz, 1999.
- Australian Communications Authority Radio communications (Electromagnetic Radiation—Human Exposure) Standard, 2003.
- ANATEL ANNEX to Resolution No. 303 of July 2, 2002
- ANATEL ANNEX to Resolution No. 533 of September 10, 2009.

To ensure optimal radio performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures.

### **Portable Radio Operation and EME Exposure**

#### *Antenna Care*

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.

Do NOT hold the antenna when the radio is "IN USE." Holding the antenna affects its effective range.

#### *Body-Worn Operation*

To maintain compliances with FCC/Health Canada RF exposure guidelines if you wear a radio on your body when transmitting always place the radio in a Motorola-supplied or

approved clip holder, holster, case or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines.

If you do not use one of the Motorola-supplied or approved body-worn accessories and are not using the radio held in the normal use position, **ensure the radio and its antenna are at least 1 inch (2.5 cm) from your body when transmitting.**

#### *Data Operation*

If applicable, when using any data feature of the radio with or without an accessory cable, **position the radio and its antenna at least one inch (2.5 cm) from the body.**

#### *Approved Accessories*

53724: Remote Speaker with Push-to-Talk Microphone

53727: Earbud with Push-to-Talk Microphone

53728: Flexible Ear Receiver

### **Electromagnetic Interference/Compatibility**

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed or otherwise configured for electromagnetic compatibility.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference;
2. This device must accept any interference received, including interference that may cause undesired operation.

#### *Facilities*

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

#### *Aircraft*

When instructed to do so, turn off your radio when onboard an aircraft. Any use of a radio must be in accordance with applicable regulations per airline crew instructions.

#### *Medical Devices – Pacemakers*

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless radio and a pacemaker.

These recommendations are consistent with the independent research by and recommendations of the U.S. Food and Drug Administration.

People with pacemakers should:

- ALWAYS keep the radio more than 6 inches (15 cm) from their pacemaker when the radio is turned ON.
- Not carry the radio in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio OFF immediately if there is any reason to suspect that interference is taking place.

#### *Medical Devices – Hearing Aids*

Some digital wireless radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

#### *Medical Devices – Other*

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

#### **Safety and General Use While Driving**

Check the laws and regulations regarding the use of radios in the area where you drive, and always obey them. If you do use your radio while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

The use of a two-way radio while engaged in activities requiring concentration may cause distraction or otherwise impair your ability to safely participate in such activities. Always use technology safely.

Do not place a portable radio in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio may be propelled with great force and cause serious injury to occupants of the vehicle.

#### *Potentially Explosive Atmospheres*

Turn off your radio prior to entering any area with a potentially explosive atmosphere. Only radio types that are especially qualified should be used in such areas as "Intrinsically Safe." Do not remove, install or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles (such as grain, dust or metal powders) and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often—but not always—posted.

#### *Blasting Caps and Areas*

To avoid possible interference with blasting operations, turn off your radio when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off two-way radios." Obey all signs and instructions.

#### **Operational Cautions**

##### *Antennas*

**Do not use any portable radio that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

##### *Batteries*

All batteries can cause property damage and/or bodily injury such as burns if a conductive material—like jewelry, keys or beaded chains—touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse or other container with metal objects.

Exercise care when removing NiMH or AA batteries. Do not use sharp or conductive tools

to remove either of these batteries.

*Battery Charger Safety Instructions:*

**Save these Instructions**

1. Do not expose the charger to rain or snow.
2. Do not operate or disassemble the charger if it has received a sharp blow, or has been dropped or damaged in any way.
3. Never alter the AC cord or plug provided with the unit. If the plug will not fit the outlet, have the proper outlet installed by a qualified electrician. An improper condition can result in a risk of electric shock.
4. To reduce the risk of damage to the cord or plug, pull the plug rather than the cord when disconnecting the charger from the AC receptacle.
5. To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning.
6. Use of an attachment not recommended or sold by Motorola may result in a risk of fire, electric shock or personal injury.
7. Make sure the cord is located so it will not be stepped on, tripped over or subjected to damage or stress.
8. An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a risk of a fire and/or electric shock. If an extension cord must be used, make sure that:
  - The pins on the plug of the extension cord are the same number, size and shape as those on the plug of the charger.
  - The extension cord is properly wired and in good electrical condition.
  - The extension cord size is 18 AWG for lengths up to 100 feet, and 16 AWG for lengths up to 150 feet.
9. The supply cord of the AC adaptor cannot be replaced. If the cord is damaged, call customer service at 1-800-638-5119 or e-mail us at [giantintl@callcenter.com](mailto:giantintl@callcenter.com).

## **FCC Licensing Information**

Your Motorola radio operates on FRS & GMRS frequencies in Canada & in the USA. For Canadian citizens, use of these frequencies is subject to the rules & regulations of Industry Canada (IC). IC requires no license when operated in Canada. For USA citizens, use is subject to the rules and regulations of the Federal Communications Commission (FCC). The FCC requires that all operators using GMRS frequencies obtain a radio license before operating their equipment. To obtain the FCC forms, please visit the FCC's Web site at [wireless.fcc.gov/uls/index.htm?job=home](http://wireless.fcc.gov/uls/index.htm?job=home) to source form 605 and 159, which includes all the instructions you will need. If you wish to have the document faxed or mailed, or if you have questions, please use the following contact information:


<b>For a fax:</b> <b>Contact the Fax-on-Demand system</b>	<b>For mail service:</b> <b>Call the FCC Forms Hotline</b>	<b>If you have questions about the FCC License:</b> <b>Call the FCC</b>
1-202-418-0177	1-800-418-FORM	1-888-CALL-FCC

	(3676)	(225-5322)
--	--------	------------


Changes or modifications not expressly approved by Motorola may void the user's authority granted by the IC/FCC to operate this radio and should not be made. To comply with IC/FCC requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land, mobile and fixed services as certified by an organization representative of the user of those services. Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the IC/FCC equipment authorization for this radio could violate IC/FCC rules.

**Note:** Use of this radio outside the country where it was intended to be distributed is subject to government regulations and may be prohibited.

## Control Buttons

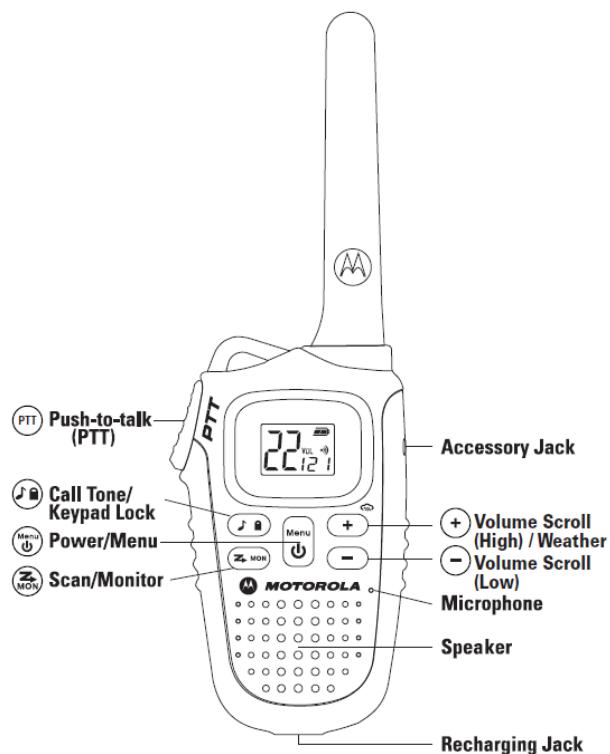

## Display Screen Guide

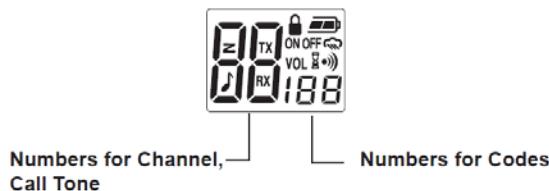

- Battery Meter - Transmitting - Keypad Lock - Weather Alert

- Receiving - Volume - Scan. - Talk Confirmation Tone

- On/Off for each feature - Auto Power On/Off - Call Tone/Keypad Tone

## Getting Started

### Installing the Batteries

Each radio uses 1 NiMH rechargeable battery pack or 3 AA alkaline batteries and beeps when the batteries are low.

### Installing NiMH Rechargeable Battery Pack

1. Turn the radio off.
2. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.

3. Remove the NiMH battery pack from the clear plastic bag (do not disassemble or unwrap the battery pack).
4. Insert the NiMH battery pack with the diagram facing you.
5. Reposition the battery cover and press down to secure.

### **Installing the Three AA Alkaline Batteries (Optional Accessory)**

1. Turn the radio off.
2. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
3. Insert the three AA alkaline batteries with + and - polarity as shown inside.
4. Reposition the battery cover and press down to secure.

### **Radio Battery Meter**

The radio battery icon shows the radio battery charge level, from full  to  empty.

When the radio has one segment left, the radio chirps periodically or after releasing  (Low Battery Alert).

### **Removing the NiMH Battery Pack**

1. Turn the radio off.
2. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
3. Gently remove the NiMH battery by easing it out.
4. Reposition the battery cover and press down to secure.

### **Removing the Three AA Alkaline Batteries (Optional Accessory)**

1. Turn the radio off.
2. With the back of the radio facing you, lift the battery latch up to release the battery cover and remove the cover.
3. Remove each alkaline battery by easing each battery out individually.
4. Reposition the battery cover and press down to secure.

### **Notes:**

- Exercise care when removing NiMH or AA batteries. Do not use sharp or conductive tools to remove either of these batteries.
- Remove the batteries before storing your radio for extended periods of time. Batteries corrode over time and may cause permanent damage to your radio.

### **Using the Plug-in Charging Adaptor**

The battery plug-in charger (adaptor) provides charging convenience for NiMH batteries in one or both radios. Charge the NiMH battery overnight (at least 16 hours) before using it for the first time. After the initial charge, an empty battery is fully charged within 14 hours.

1. Follow the steps above to install a NiMH battery pack.
2. Connect the AC power adaptor plug into the recharging jack at the bottom of the radio. (The adaptor charges two radios.)
3. Plug the AC power supply into a standard wall outlet.

**Notes:**

- The battery icon will scroll while the battery pack is being charged.
- When moving between hot and cold temperatures, do not charge the battery until the battery temperature acclimates (usually about 20 minutes).
- For optimal battery life, unplug the charging adaptor within 16 hours. Do not store the radio while connected to the charger.

**Low Battery Alert**

In addition to your battery meter showing how much battery power you have, your radio will beep to alert you to the fact that your batteries are low.

**Attaching and Removing the Belt Clip**

1. Attach belt clip to pocket or belt strap.
2. Align the belt clip post with the hole in the back of the radio.
3. Gently push until the clip clicks in place.

**To Remove**

1. Push down on the release tab at the top of the belt clip to release the catch.
2. Pull the belt clip away from the back of the radio.

**Turning Your Radio On and Off**

1. To turn on, press and hold  until a channel number appears and the radio beeps.
2. To turn off, press and hold  until the display goes blank.

**Setting the Volume**

1. Press the  to increase or  to decrease the volume. The volume level flashes and "VOL" displays.  
Do not hold the radio close to your ear. If the volume is set to an uncomfortable level, it could hurt your ear.

**Talking and Listening**

To communicate, all radios in your group must be set to the same channel.

1. To talk, press and hold .
2. When you are finished talking, release .

For maximum clarity, hold the radio two to three inches away from your mouth and speak directly into the microphone. Do not cover the microphone while talking.

**Talk Range**

Your radio is designed to maximize performance and improve transmission range. Do not use the radios closer than five feet apart.

**Monitor Button**

Pressing and holding  for three seconds allows you to listen to the volume level of the

radio when you are not receiving. This allows you to adjust the volume, if necessary. You can also press  to check for activity on the current channel before you talk.

### **Push to Talk Timeout Timer**

To prevent accidental transmissions and save battery life, the radio emits a continuous warning tone and stops transmitting if you press  for 60 continuous seconds.

## **Menu Options**

### **Selecting the Channel**

Your radio has 22 channels. The channel is the frequency your radio uses to transmit. (See Channels and Frequencies table below.)

1. With the radio on, press . The current channel flashes.
2. Press  or  and select a channel.
3. Press  or  to confirm your selection.

## **Channels and Frequencies**

Channel	Frequency	Description	Channel	Frequency	Description
1	462. 5625 MHz	GMRS/FRS	12	467. 6625 MHz	FRS
2	462. 5875 MHz	GMRS/FRS	13	467. 6875 MHz	FRS
3	462. 6125 MHz	GMRS/FRS	14	467. 7125 MHz	FRS
4	462. 6375 MHz	GMRS/FRS	15	462. 5500 MHZ	GMRS
5	462. 6625 MHz	GMRS/FRS	16	462. 5750 MHZ	GMRS
6	462. 6875 MHz	GMRS/FRS	17	462. 6000 MHZ	GMRS
7	462. 7125 MHz	GMRS/FRS	18	462. 6250 MHZ	GMRS
8	467. 5625 MHz	FRS	19	462. 6500 MHZ	GMRS
9	467. 5875 MHz	FRS	20	462. 6750 MHZ	GMRS
10	467. 6125 MHz	FRS	21	462. 7000 MHZ	GMRS
11	467. 6375 MHz	FRS	22	462. 7250 MHZ	GMRS

### **Selecting the Interference Eliminator Code**

Interference Eliminator Codes help minimize interference by blocking transmissions from unknown sources. Your radio has 121 Interference Eliminator Codes. Codes 1 – 38 are the standard analog codes that appear on other FRS/GMRS radios. Codes 39 – 121 are additional digital codes added for superior interference protection. 0 is the off position, no analog or digital codes are enabled.

*To set the code for a channel:*

1. Press  until the code starts to flash.
2. Press  or  to select the code.
3. Press  to save the code setting or to  continue set up.

You can set a different code for each channel using this procedure. An extended press  or  allows you to scroll through the Interference Code rapidly so you can quickly reach the code you want.

Note: You must set the Interference Eliminator Code to 0 on a radio that uses Interference Eliminator Codes to communicate with radios that do not have Interference Eliminator Codes. Select 0 for "no tone, no code" and OFF will flash on your radio's display.

INTERFERENCE ELIMINATOR TONE / CODE VALUES					
CODE	(Hz)	CODE	(OCTAL)	CODE	(OCTAL)
1	67.0	39	023	81	315
2	71.9	40	025	82	331
3	74.4	41	026	83	343
4	77.0	42	031	84	346
5	79.7	43	032	85	351
6	82.5	44	043	86	364
7	85.4	45	047	87	365
8	88.5	46	051	88	371
9	91.5	47	054	89	411
10	94.8	48	065	90	412
11	97.4	49	071	91	413
12	100.0	50	072	92	423
13	103.5	51	073	93	431
14	107.2	52	074	94	432
15	110.9	53	114	95	445
16	114.8	54	115	96	464
17	118.8	55	116	97	465
18	123.0	56	125	98	466
19	127.3	57	131	99	503
20	131.8	58	132	100	506
21	136.5	59	134	101	516
22	141.3	60	143	102	532
23	146.2	61	152	103	546
24	151.4	62	155	104	565
25	156.7	63	156	105	606
26	162.2	64	162	106	612
27	167.9	65	165	107	624
28	173.8	66	172	108	627
29	179.9	67	174	109	631
30	186.2	68	205	110	632
31	192.8	69	223	111	654
32	203.5	70	226	112	662
33	210.7	71	243	113	664
34	218.1	72	244	114	703
35	225.7	73	245	115	712
36	233.6	74	251	116	723
37	241.8	75	261	117	731
38	250.3	76	263	118	732
		77	265	119	734
		78	271	120	743
		79	306	121	754
		80	311		

### Setting and Transmitting Call Tones

Your radio can transmit different call tones to other radios in your group so you can alert them that you want to talk.

To set a call tone:

1. With the radio on, short press  until the  appears. The current call tone setting flashes.
2. Press  or  to change and hear the call tone.
3. Press  to set the new call tone or  to continue set up.

To transmit your call tone to other radios set to the same channel as your radio, press .

**Note:** Setting the call to 0 disables the call tone feature.

#### Transmitting a Talk Confirmation Tone

You can set your radio to transmit a unique tone when you finish transmitting. It is like saying "Roger" or "Over" to let others know you are finished talking.

1. With the radio on, short press  until  appears. The current setting On/Off flashes.
2. Press  or  to turn On or Off.
3. Press  to set the talk confirmation tone or  to continue set up.

#### Keypad Tones

You may enable or disable the speaker key tones. You will hear the key tone each time a button is pushed.

1. Press  until  appears. The current setting On/Off will appear.
2. Press either  or  to turn On or Off.
3. Press  to confirm or  to continue set up.

**Note:** When the key tone feature is off, the following are not disabled:

- Transmit timeout alert tone
- Power-down alert tone
- Low battery alert tone
- The transmitted talk confirmation tone

#### Auto Power Off

Your radio will save power by automatically turning itself off if unused after a predetermined amount of time.

1. Activate this setting by short pressing  until  displays. The current setting (0, 30, 60, 90) will flash.
2. Press  or  to set the time to 30 minutes, 60 minutes or 90 minutes.
3. When you exit the Menu mode, the setting timer will begin if you are not using the radio.

4. The screen shows .

5. Press  to confirm or  to continue set up.

## Special Features

### Keypad Lock

To avoid accidentally changing your radio settings you can lock your keypad:

1. Press and hold  until  displays.

2. When in lock mode, you can turn the radio on and off, receive, transmit, send a call tone, and monitor channels. All other functions are locked.

To unlock the radio, press and hold  until  no longer displayed.

### Scanning Channels

Use scan to search the 22 channels for transmissions from unknown parties, to find someone in your group who has accidentally changed channels, or to quickly find unused channels for your own use.

There are 2 modes of scanning (basic and advanced) to make your search more effective. The basic scan mode uses the channel and code combinations for each of the 22 channels as you have set them. The "Advanced Scan" mode will scan all channels for any and all codes, detect any code in use, and use that code value temporarily for that channel.

To start Scanning:

1. Briefly press the  key. The scan  will appear in the display, and the radio will begin to scroll through the channel and code combinations.

2. When the radio detects channel activity matching the channel and code combination, it stops scrolling and you can hear the transmission.

3. To respond and talk to the person transmitting, press  within five seconds after the end of the transmission.

4. The radio will resume scrolling through the channels five seconds after the end of any received activity.

5. To stop scanning, briefly press the  key.

To start Advanced Scanning:

1. Set the Interference Eliminator Code to "0".

2. Briefly press the  key. The scan  will appear in the display, and the radio will begin to scroll through the channels. No Interference Eliminator Codes will filter what is heard.

3. When the radio detects channel activity with ANY code (or NO code), it stops scrolling

and you can hear the transmission. Any Interference Eliminator Code that may be in use by that party will be detected and displayed.

4. To respond and talk to the person transmitting, press  within five seconds of the end of the transmission. The radio will transmit using the newly detected Interference Eliminator Code.
5. The radio will resume scrolling through the channels five seconds after the end of any received activity.

6. To stop scanning, briefly press the  key.

#### **Scanning Notes:**

1. If you press while the radio is scrolling through inactive channels, the transmission will be on the "home channel". Scanning will resume five seconds after the end of your transmission. You may press the key to stop scanning at any time.
2. If the radio stops on an undesired transmission, you may immediately resume the scan by briefly pressing  or .
3. If the radio repeatedly stops on an undesired transmission, you may temporarily remove that channel from the scan list by pressing and holding  or  for three seconds. You may remove more than one channel in this way.
4. To restore the removed channel(s) to the scan list, turn the radio off and then back on, or exit and re-enter the scanning mode by pressing .
5. You cannot remove the home channel from the scan list.
6. In Advanced Scan, the detected code will only be used for one transmission. You must note the code, exit scan, and set that detected code on that channel to permanently use the detected code.

#### **Use With Accessories**

You can transmit more reliably with the use of optional PTT headset accessories. A PTT headset allows privacy to others around you while listening.

Many accessories (sold separately) are available for your radio. For more information, visit our Web site at [www.motorolasolutions.com](http://www.motorolasolutions.com) or [shop.giantintl.com](http://shop.giantintl.com).

1. Turn the radio off and plug the PTT accessory into the accessory jack.
2. Turn the radio on. You may now press the PTT on the accessory microphone instead of the radio.
3. Adjust the volume appropriately by pressing . Lower the volume before placing the accessory on your head or in your ear.

**Note:** The MD Series does not have VOX capabilities, and is only compatible with PTT headset accessories.

## **Weather Receiver**

This radio can tune in to broadcasts by the United States National Oceanic and Atmospheric Administration (NOAA) Weather Radio.

You can listen to a weather channel (see "Weather Channels and Frequencies" table for details) or set the radio to alert you to emergency weather broadcasts that interrupt routine broadcasts. When you listen to a weather channel, you cannot use the radio in scan mode or for two-way communications.

NOAA has transmitters located throughout the United States. These transmitters broadcast watches, forecasts, and other information 24 hours a day.

**Note:** NOAA weather radio stations are assigned to cover specific areas and service may be limited. Please check with your local weather office for frequency and details, or visit [www.weather.gov/nwr](http://www.weather.gov/nwr) in the US to view the appropriate transmitter for your area.

The use of the NOAA logo does not provide an endorsement or implied endorsement by NOAA's National Weather Service.

#### Turning Weather Channel Reception On and Off

1. To turn weather reception on, press and hold  for 3 seconds.

2. To turn off, press  or turn the radio off and then back on.

#### Scanning for Weather Channel

The radio can scan for an active NOAA transmission automatically.

1. After turning weather reception on, briefly press the .

2. The scan icon  will appear in the display, and the channel will scroll through the NOAA channels 1-7.

3. When the radio detects channel activity, it stops scanning and you can hear the transmission.

4. You may resume the scan by briefly pressing  or .

5. To stop scanning, briefly press the key. The scan icon will disappear.

#### Setting the Weather Channel Manually

If you know which frequency is correct for your location, refer to the

"**Weather Channels and Frequencies**" table to manually set your radio to the appropriate weather channel.

1. After turning weather reception on, press . The current channel flashes.

2. Press  or  to select the appropriate channel with good reception in your area.

3. Press  to save the weather channel setting.

#### Setting the Weather Alert

The radio can be set to respond to NOAA Weather Radio emergency messages. A special alarm tone sounds an alert and turns on the weather receiver to give you immediate weather and emergency information.

1. After turning weather reception on, press  twice. ON or OFF flashes.
2. Press  or  to select ON to activate. If you activate the Weather Alert and return to two-way mode,  will display.
3. Press  to save the Weather Alert setting.
4. Press  to return to two-way mode.

WEATHER CHANNELS AND FREQUENCIES					
CHANNEL	RX (MHz)	CHANNEL	RX (MHz)	CHANNEL	RX (MHz)
WX1	162.550	WX5	162.450	WX9	161.775
WX2	162.400	WX6	162.500	WX10	161.750
WX3	162.475	WX7	162.525	WX11	162.000
WX4	162.425	WX8	161.650		