

Rhein Tech Laboratories, Inc.
360 Herndon Parkway
Suite 1400
Herndon, VA 20170
<http://www.rheintech.com>

Client: Harris Corporation
Model: P7300 UHF Radio
FCC ID: OWDTR-0054-E
Standards: FCC Part 90
Report #: 2009141

Appendix M: Manual

Please refer to the following pages for the manual.



P7300 FAMILY
PORTABLE RADIOS
UHF, 700/800 MHz



TABLE OF CONTENTS

	<i>Page</i>
1 SAFETY CONVENTIONS.....	12
2 SAFETY TRAINING INFORMATION	13
2.1 RF EXPOSURE GUIDELINES	13
2.2 ELECTROMAGNETIC INTERFERENCE/COMPATIBILITY	14
3 OPERATING TIPS	15
3.1 EFFICIENT RADIO OPERATION	15
3.1.1 Antenna Care and Replacement.....	15
3.1.2 Electronic Devices	15
3.1.3 Aircraft.....	16
3.1.4 Electric Blasting Caps	16
3.1.5 Potentially Explosive Atmospheres	16
4 BATTERIES	17
4.1 CONDITIONING BATTERY PACKS.....	17
4.1.1 Conditioning NiMH Battery Packs.....	17
4.1.2 Conditioning NiCd Battery Packs	17
4.1.3 Additional Information.....	18
4.2 CHARGING BATTERY PACKS	18
4.2.1 Charging Guidelines	18
4.3 BATTERY PACK USAGE.....	18
4.3.1 Usage Guidelines	18
4.4 CHANGING THE BATTERY PACK	19
4.4.1 Removing the Battery Pack	19
4.4.2 Attaching the Battery Pack	20
4.5 BATTERY DISPOSAL.....	20
5 INTRODUCTION	22
5.1 WATER RESISTANCE.....	22
6 OPTIONS AND ACCESSORIES	23
7 USER INTERFACE.....	25
7.1 CONTROLS	27
7.1.1 Buttons and Knobs.....	27
7.1.2 Keypad.....	29
7.1.3 Display.....	30
7.1.4 Tri-Color LED	32
7.2 UNIVERSAL DEVICE CONNECTOR.....	32
8 EDACS OPERATION.....	35
8.1 CONTROLS	35
8.1.1 Buttons and Knobs.....	35
8.1.2 Keypad.....	36
8.2 DISPLAY	38
8.3 RADIO STATUS ICONS.....	39
8.4 TRI-COLOR LED	40
8.5 STATUS MESSAGES	40
8.6 ERROR MESSAGES	41
8.7 ALERT TONES	42

TABLE OF CONTENTS

		<i>Page</i>
8.8	TURNING ON THE RADIO	42
8.9	SYSTEM SELECTION.....	43
8.10	GROUP/CHANNEL SELECTION.....	43
8.11	MODIFY SCAN LIST	44
	8.11.1 P7370 Model.....	44
	8.11.2 P7350 Model.....	44
8.12	MENU	44
	8.12.1 Menu Item Selection Process.....	45
8.13	BACKLIGHT ADJUST	47
8.14	CONTRAST ADJUST	47
8.15	DECLARING AN EMERGENCY.....	48
8.16	LOCKING/UNLOCKING KEYPAD	48
8.17	HIGH/LOW POWER ADJUSTMENT	48
	8.17.1 Using the Menu Button.....	48
	8.17.2 Using the Pre-Programmed Option Button.....	48
8.18	DIGITAL VOICE OPERATION	48
	8.18.1 Clear Mode	49
	8.18.2 Digital Mode.....	49
	8.18.3 Private Mode.....	49
	8.18.4 Private Operation.....	50
8.19	SCANNING TRUNKED GROUPS	51
	8.19.1 Turning Scan On and Off	52
	8.19.2 Adding Groups to a Scan List.....	52
	8.19.3 Deleting Groups from a Scan List	53
	8.19.4 Nuisance Delete.....	54
8.20	SCANNING TRUNKED SYSTEMS.....	54
	8.20.1 Wide Area System Scanning	54
	8.20.2 Priority System Scan.....	54
	8.20.3 ProScan.....	55
8.21	EMERGENCY OPERATION.....	55
	8.21.1 Receiving an Emergency Call	55
	8.21.2 Declaring an Emergency Call.....	55
8.22	INDIVIDUAL CALLS.....	56
	8.22.1 Receiving and Responding to an Individual Call	56
	8.22.2 Sending an Individual Call	57
	8.22.3 Call Storage Lists.....	57
8.23	TELEPHONE INTERCONNECT CALLS	58
	8.23.1 Receiving a Telephone Interconnect Call.....	58
	8.23.2 Sending a Telephone Interconnect Call.....	58
	8.23.3 Dual-Tone Multi-Frequency: Overdial/Conventional Mode	59
8.24	PROGRAMMABLE ENTRIES	60
	8.24.1 Pre-Storing Individual and Telephone Interconnect Calls from the Keypad.....	60
8.25	STATUS/MESSAGE OPERATION.....	61
	8.25.1 Status Operation	61
	8.25.2 Message Operation	62
8.26	DYNAMIC REGROUP OPERATION	62
	8.26.1 Emergency Operation	62
8.27	MACRO KEY OPERATION.....	62

TABLE OF CONTENTS

	<u>Page</u>
8.28 PORTABLE DATA.....	62
8.28.1 Displays	63
8.28.2 DATA OFF Operation.....	63
8.28.3 DATA ON Operation	63
8.28.4 Exiting Data Calls.....	63
8.28.5 Scan Lockout Mode.....	63
8.28.6 Data Lockout Mode.....	64
9 OPENSKY OPERATION.....	67
9.1 CONTROLS	67
9.1.1 Buttons and Knobs.....	67
9.1.2 Keypad.....	68
9.2 RADIO STATUS ICONS.....	69
9.3 TRI-COLOR LED	70
9.4 LOG IN TO THE NETWORK.....	70
9.5 LOG OFF THE NETWORK	71
9.6 PERSONALITY	71
9.6.1 Profiles.....	71
9.6.2 Talk Groups	72
9.7 OPENSKY DISPLAY OVERVIEW	72
9.7.1 Display's Top Line	72
9.7.2 Display's Second Line.....	72
9.7.3 Dwell Display	72
9.8 ALERT TONES	73
9.9 BASIC MENU STRUCTURE	74
9.10 KEYPAD FUNCTION COMMANDS (P7370 ONLY).....	76
9.11 QUICK KEYS (P7370 ONLY)	77
9.12 LOCK/UNLOCK THE KEYPAD.....	77
9.13 DUAL-TONE MULTI-FREQUENCY (P7370 ONLY)	77
9.14 CHANGING THE ACTIVE PROFILE	78
9.15 CHANGING THE SELECTED TALK GROUP	78
9.16 ADJUSTING DISPLAY AND BUTTON BACKLIGHT BRIGHTNESS	78
9.17 STEALTH MODE.....	78
9.17.1 Enabling Stealth Mode	78
9.17.2 Disabling Stealth Mode	78
9.17.3 Stealth Mode using A/B Switch	79
9.18 ADJUSTING SIDE TONE AUDIO LEVEL	79
9.19 CHANGE OPERATING MODE	79
9.20 RECEIVING AND TRANSMITTING VOICE CALLS	79
9.20.1 Receiving a Voice Call	79
9.20.2 Transmitting a Voice Call.....	79
9.21 ADJUSTING AUDIO TREBLE LEVEL.....	80
9.22 TALK GROUP LOCK OUT	80
9.22.1 Lock Out a Talk Group.....	81
9.22.2 Unlock a Talk Group	81
9.23 SCANNING.....	81
9.23.1 Selecting Scan Modes.....	81
9.23.2 Checking or Changing Active Scan Mode	82
9.23.3 Scanning Priority	82

TABLE OF CONTENTS

	<i>Page</i>
9.24 MAKING SELECTIVE CALLS	83
9.24.1 Manually Dialing a Selective Call (P7370 Only)	83
9.24.2 Selective Call Using Speed Dial	84
9.24.3 Accepting a Selective Call	84
9.24.4 Rejecting a Selective Call	84
9.24.5 Terminating a Selective Call	85
9.25 SELECTIVE ALERTS	85
9.25.1 Defining Messages	85
9.25.2 Sending a Message	85
9.25.3 Receiving a Message	86
9.25.4 Deleting a Selective Alert Message	86
9.26 MAKING INTERCONNECT CALLS (P7370 ONLY)	86
9.27 EMERGENCY COMMUNICATIONS	87
9.27.1 Declaring an Emergency Call or Alert	87
9.27.2 Receiving an Emergency Call	88
9.27.3 Dismissing an Emergency	88
9.27.4 Clearing an Emergency Call or Alert	88
9.28 DYNAMIC REGROUPING	89
9.29 GPS COORDINATES	89
9.30 V-TAC OPERATION	89
9.30.1 Extended Coverage Modes (“XCOV” and “XCOV-TG”)	89
9.30.2 Change Between Extended Coverage Modes	90
9.30.3 Radio Limitations Using Extended Coverage Modes	90
9.30.4 Use XCOV Mode	90
9.30.5 Use XCOV-TG Mode	91
9.30.6 Use Scene-of-Incident Mode	92
10 CONVENTIONAL OPERATION	95
10.1 CONTROLS	95
10.1.1 Buttons and Knobs	96
10.1.2 Keypad	97
10.2 DISPLAY	99
10.2.1 Radio Status Icons	100
10.3 TRI-COLOR LED	101
10.4 STATUS MESSAGES	101
10.4.1 Error Messages	102
10.5 ALERT TONES	102
10.6 TURNING ON THE RADIO	102
10.7 SYSTEM SELECTION	102
10.8 GROUP/CHANNEL SELECTION	103
10.9 MODIFY SCAN LIST	103
10.9.1 P7370 Model	103
10.9.2 P7350 Model	104
10.10 NUISANCE DELETE	104
10.11 MENU	104
10.12 BACKLIGHT ADJUST	107
10.13 CONTRAST ADJUST	107
10.14 DECLARING AN EMERGENCY	107
10.15 LOCKING/UNLOCKING KEYPAD	108

TABLE OF CONTENTS

	<i>Page</i>
10.16 HIGH/LOW POWER ADJUSTMENT	108
10.17 DIGITAL VOICE OPERATION	108
10.17.1 Clear Mode	108
10.17.2 Digital Mode.....	109
10.18 RECEIVING A CALL	109
10.19 SENDING A CALL	110
11 P25 OPERATION.....	113
11.1 CONTROLS	113
11.1.1 Buttons and Knobs.....	114
11.1.2 Keypad.....	115
11.2 DISPLAY	117
11.3 RADIO STATUS ICONS.....	118
11.4 TRI-COLOR LED	119
11.5 STATUS MESSAGES	119
11.5.1 Error Messages	120
11.6 ALERT TONES	121
11.7 TURNING ON THE RADIO	121
11.8 SYSTEM SELECTION.....	121
11.8.1 GROUP/CHANNEL SELECTION.....	122
11.9 MODIFY SCAN LIST	122
11.9.1 P7370 Model.....	122
11.9.2 P7350 Model.....	123
11.10 MENU	123
11.10.1 Menu Item Selection Process.....	123
11.11 BACKLIGHT ADJUST	126
11.12 CONTRAST ADJUST	126
11.13 DECLARING AN EMERGENCY.....	126
11.14 LOCKING/UNLOCKING KEYPAD	127
11.15 HIGH/LOW POWER ADJUSTMENT	127
11.15.1 Using the Menu Button.....	127
11.15.2 Using the Pre-Programmed Option Button.....	127
11.16 DIGITAL VOICE OPERATION	127
11.16.1 Clear Mode	127
11.16.2 Digital Mode.....	128
11.16.3 Private Mode.....	128
11.16.4 Private Operation.....	129
11.17 SCANNING TRUNKED GROUPS	130
11.17.1 Turning Scan On and Off	130
11.17.2 Adding Groups to a Scan List.....	131
11.17.3 Deleting Groups from a Scan List	132
11.17.4 Nuisance Delete.....	132
11.18 SCANNING TRUNKED SYSTEMS.....	132
11.18.1 Wide Area System Scanning	133
11.18.2 Priority System Scan	133
11.18.3 ProScan.....	133
11.19 EMERGENCY OPERATION.....	134
11.19.1 Receiving an Emergency Call	134
11.19.2 Declaring an Emergency Call.....	134

TABLE OF CONTENTS

	<i>Page</i>
11.20 INDIVIDUAL CALLS	134
11.20.1 Receiving and Responding to an Individual Call	134
11.20.2 Sending an Individual Call	135
11.20.3 Call Storage Lists.....	136
11.21 TELEPHONE INTERCONNECT CALLS	137
11.21.1 Receiving a Telephone Interconnect Call.....	137
11.21.2 Sending a Telephone Interconnect Call.....	137
11.21.3 Dual-Tone Multi-Frequency: Overdial/Conventional Mode	138
11.22 PROGRAMMABLE ENTRIES	139
11.22.1 Pre-Storing Individual and Telephone Interconnect Calls from the Keypad.....	139
11.23 STATUS/MESSAGE OPERATION.....	139
11.23.1 Status Operation	140
11.23.2 Message Operation	140
11.24 MACRO KEY OPERATION.....	140
11.25 PORTABLE DATA.....	141
11.25.1 Displays	141
11.25.2 DATA OFF Operation.....	141
11.25.3 DATA ON Operation	141
11.25.4 Exiting Data Calls.....	142
11.25.5 Scan Lockout Mode.....	142
11.25.6 Data Lockout Mode	142
11.26 GROUP CALLS IN P25 MODE.....	142
11.26.1 Transmitting a Group Call	142
11.26.2 Receiving a Group Call	143
11.27 INDIVIDUAL CALLS IN P25 MODE.....	143
11.27.1 Transmitting an Individual Call.....	143
11.27.2 Receiving an Individual Call	143
11.28 EMERGENCY GROUP CALLS IN P25 MODE	143
11.28.1 Declaring an Emergency Group Call.....	143
11.28.2 Receiving an Emergency Group Call	144
12 IMMERSIBLE P7300 PREVENTIVE MAINTENANCE.....	147
12.1 TECHNICAL ASSISTANCE – IMMERSIBLE P7300.....	147
13 TECHNICAL ASSISTANCE	149
14 BASIC TROUBLESHOOTING.....	150
FIGURES	
Figure 4-1: Removing the Battery Pack.....	19
Figure 4-2: Attaching the Battery Pack.....	20
Figure 7-1: P7300 Portable Radio.....	26
Figure 7-2: Top View.....	27
Figure 7-3: Side View	27
Figure 7-4: P7350 “Scan” Model Front Panel	29
Figure 7-5: P7370 “System” Model Front Panel	29
Figure 7-6: P7300 Radio Display.....	30
Figure 7-7: Full Cycle Battery Charge Indicator	32
Figure 7-8: Tri-Color LED.....	32
Figure 7-9: P7300 15-Pin Universal Device Connector.....	33

TABLE OF CONTENTS

	<u>Page</u>
Figure 8-1: P7350 “Scan” Radio Front Panel	36
Figure 8-2: P7370 “System” Radio Front Panel	37
Figure 8-3: P7300 Radio Display.....	38
Figure 8-4: Full Cycle Battery Charge Indicator	39
Figure 8-5: Tri-Color LED.....	40
Figure 8-6: Menu Display	44
Figure 8-7: Backlight Menu Item Selection Parameter.....	45
Figure 8-8: Backlight Menu Display	45
Figure 8-9: System Encryption Key Display	50
Figure 8-10: Group/Channel Encryption Key Display	50
Figure 8-11: Calls Received Lists.....	56
Figure 8-12: WHC Individual Call Display	57
Figure 8-13: Calls Received and Personality Lists	58
Figure 9-1: Full Cycle Battery Charge Indicator	69
Figure 9-2: Tri-Color LED.....	70
Figure 9-3: Personality Structure Example.....	72
Figure 10-1: Top View.....	95
Figure 10-2: Side View	95
Figure 10-3: P7350 “Scan” Radio Front Panel	97
Figure 10-4: P7370 “System” Radio Front Panel	98
Figure 10-5: P7300 Radio Display.....	99
Figure 10-6: Battery Charge Icons (Full Cycle)	100
Figure 10-7: Tri-Color LED.....	101
Figure 10-8: Menu Display	104
Figure 10-9: Backlight Menu Item Parameter	105
Figure 10-10: Backlight Menu Display	105
Figure 11-1: Top View.....	113
Figure 11-2: Side View	113
Figure 11-3: P7350 “Scan” Radio Front Panel	115
Figure 11-4: P7370 “System” Radio Front Panel	116
Figure 11-5: P7300 Radio Display.....	117
Figure 11-6: Full Cycle Battery Charge Indicator	119
Figure 11-7: Tri-Color LED.....	119
Figure 11-8: Menu Display	123
Figure 11-9: Backlight Menu Item Selection Parameter.....	124
Figure 11-10: Backlight Menu Display	124
Figure 11-11: System Encryption Key Display	129
Figure 11-12: Group/Channel Encryption Key Display	129
Figure 11-13: Calls Received Lists.....	135
Figure 11-14: WHC Individual Call Display	135
Figure 11-15: Calls Received and Personality Lists	136
Figure 12-1: Labels	147

TABLES

Table 2-1: RF Exposure Compliance Testing Distances	14
Table 6-1: Options and Accessories.....	23
Table 7-1: P7300 Front Keypad Functions	29
Table 7-2: Status Icons Descriptions	31
Table 8-1: P7350 Keypad Functions.....	36

TABLE OF CONTENTS

	<i>Page</i>
Table 8-2: P7370 Keypad Functions.....	37
Table 8-3: EDACS Icon Descriptions.....	39
Table 8-4: Alert Tones	42
Table 8-5: Menu Item Information	46
Table 8-6: Information Display.....	47
Table 8-7: Transmit/Receive Mode Compatibility for Digital Voice Operation	51
Table 9-1: Keypad Functions.....	68
Table 9-2: Status Icons Descriptions.....	69
Table 9-3: Alert Tones	73
Table 9-4: Basic P7300 OpenSky Menu Structure	74
Table 9-5: Keypad Function Commands	76
Table 9-6: Quick Key Sequence	77
Table 9-7: Scan Modes	82
Table 9-8: Status of Selective Alert Messages.....	85
Table 9-9: Emergency Calls vs. Emergency Alerts	87
Table 9-10: Band Definitions.....	93
Table 10-1: Status Icon Descriptions	100
Table 10-2: Alert Tones	102
Table 10-3: Menu Item Information	106
Table 10-4: Information Display.....	107
Table 10-5: Transmit/Receive Mode Compatibility for Digital Voice Operation	109
Table 11-1: P7350 Keypad Functions.....	115
Table 11-2: P7370 “System” Keypad Functions	116
Table 11-3: Radio Status Icon Descriptions.....	118
Table 11-4: Alert Tones	121
Table 11-5: Menu Item Information	125
Table 11-6: Information Display.....	126
Table 11-7: Transmit/Receive Mode Compatibility for Digital Voice Operation	130
Table 14-1: Troubleshooting.....	150

SAFETY SECTION

1 SAFETY CONVENTIONS

The following conventions are used throughout this manual to alert the user to general safety precautions that must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warning elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Harris Corporation assumes no liability for the customer's failure to comply with these standards.



The **WARNING** symbol calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a **WARNING** symbol until the conditions identified are fully understood or met.



The **CAUTION** symbol calls attention to an operating procedure, practice, or the like, which, if not performed correctly or adhered to, could result in damage to the equipment or severely degrade the equipment performance.



The **NOTE** symbol calls attention to supplemental information, which may improve system performance or clarify a process or procedure.



The **ESD** symbol calls attention to procedures, practices, or the like, which could expose equipment to the effects of Electro-Static Discharge. Proper precautions must be taken to prevent ESD when handling circuit modules.



WARNING - The electrical hazard symbol indicates there is an electrical hazard present.

2 SAFETY TRAINING INFORMATION



The Harris P7300 portable radio generates RF electromagnetic energy during transmit mode. This radio is designed for and classified as “Occupational Use Only,” meaning it must be used only during the course of employment by individuals aware of the hazards and the ways to minimize such hazards. This radio is NOT intended for use by the “General Population” in an uncontrolled environment.

The P7300 portable radio has been tested and complies with the FCC RF exposure limits for “Occupational Use Only.” In addition, this Harris radio complies with the following Standards and Guidelines with regard to RF energy and electromagnetic energy levels and evaluation of such levels for exposure to humans:

- FCC OET Bulletin 65 Edition 97-01 Supplement C, Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields.
- American National Standards Institute (C95.1 – 1992), IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
- American National Standards Institute (C95.3 – 1992), IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields – RF and Microwave.

2.1 RF EXPOSURE GUIDELINES



To ensure that exposure to RF electromagnetic energy is within the FCC allowable limits for occupational use, always adhere to the following guidelines:

- DO NOT operate the radio without a proper antenna attached, as this may damage the radio and may also cause the FCC RF exposure limits to be exceeded. A proper antenna is the antenna supplied with this radio by Harris or an antenna specifically authorized by Harris for use with this radio. (Refer to Table 6-1.)
- DO NOT transmit for more than 50% of total radio use time (“50% duty cycle”). Transmitting more than 50% of the time can cause FCC RF exposure compliance requirements to be exceeded. The radio is transmitting when the “TX” indicator appears in the display. The radio will transmit by pressing the “PTT” (Push-To-Talk) button.
- Always transmit using low power when possible. In addition to conserving battery charge, low power can reduce RF exposure.
- ALWAYS use Harris authorized accessories (antennas, batteries, belt clips, speaker/mics, etc). Use of unauthorized accessories may cause the FCC Occupational/Controlled Exposure RF compliance requirements to be exceeded. (Refer to Table 2-1.)

- As noted in Table 2-1, ALWAYS keep the device and its antenna **AT LEAST** 1.1 cm (0.43 inches) from the body and at least 2.5 cm (1.0 inch) from the face when transmitting to ensure FCC RF exposure compliance requirements are not exceeded. However, to provide the best sound quality to the recipients of your transmission, Harris recommends you hold the microphone at least 5 cm (2 inches) from mouth, and slightly off to one side.

Table 2-1: RF Exposure Compliance Testing Distances

RADIO FREQUENCY	TESTED DISTANCES (worst case scenario)	
	Body	Face
450-512 MHz	1.1 cm	2.5 cm
700/800 MHz	1.1 cm	2.5 cm

The information in this section provides the information needed to make the user aware of RF exposure, and what to do to assure that this radio operates within the FCC RF exposure limits of this radio.

2.2 ELECTROMAGNETIC INTERFERENCE/COMPATIBILITY

During transmissions, this Harris radio generates RF energy that can possibly cause interference with other devices or systems. To avoid such interference, turn off the radio in areas where signs are posted to do so. DO NOT operate the transmitter in areas that are sensitive to electromagnetic radiation such as hospitals, aircraft, and blasting sites.

3 OPERATING TIPS

Antenna location and condition are important when operating a portable radio. Operating the radio in low lying areas or terrain, under power lines or bridges, inside of a vehicle or in a metal framed building can severely reduce the range of the unit. Mountains can also reduce the range of the unit.

In areas where transmission or reception is poor, some improvement may be obtained by ensuring that the antenna is vertical. Moving a few yards in another direction or moving to a higher elevation may also improve communications. Vehicular operation can be aided with the use of an externally mounted antenna.

Battery condition is another important factor in the trouble free operation of a portable radio. Always properly charge the batteries.

3.1 EFFICIENT RADIO OPERATION

Keep the antenna in a vertical position when receiving or transmitting a message.

Do not hold the antenna when receiving a message and, especially, do not hold when transmitting a message.



Do NOT hold onto the antenna when the radio is powered on!

3.1.1 Antenna Care and Replacement



Do not use the portable radio with a damaged or missing antenna. A minor burn may result if a damaged antenna comes into contact with the skin. Replace a damaged antenna immediately. Operating a portable radio with the antenna missing could cause personal injury, damage the radio, and may violate FCC regulations.



Use only the supplied or approved antenna. Unauthorized antennas, modifications, or attachments could cause damage to the radio unit and may violate FCC regulations. (Refer to Table 6-1.)

3.1.2 Electronic Devices



RF energy from portable radios may affect some electronic equipment. Most modern electronic equipment in cars, hospitals, homes, etc. is shielded from RF energy. However, in areas in which you are instructed to turn off two-way radio equipment, always observe the rules. If in doubt, turn it off!

3.1.3 Aircraft



WARNING

- Always turn off a portable radio before boarding any aircraft!
- Use it on the ground only with crew permission.
- DO NOT use while in-flight!!

3.1.4 Electric Blasting Caps



WARNING

To prevent accidental detonation of electric blasting caps, DO NOT use two-way radios within 1000 feet of blasting operations. Always obey the "Turn Off Two-Way Radios" signs posted where electric blasting caps are being used. (OSHA Standard: 1926.900)

3.1.5 Potentially Explosive Atmospheres



WARNING

Areas with potentially explosive atmospheres are often, but not always, clearly marked. These may be fuelling areas, such as gas stations, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Turn OFF two-way radios when in any area with a potentially explosive atmosphere. It is rare, but not impossible that a radio or its accessories could generate sparks.

4 BATTERIES

The P7300 series portable radios use rechargeable, recyclable Nickel Cadmium (NiCd), Nickel Metal Hydride (NiMH), or Lithium Ion (Li Ion) batteries. Please read carefully, the battery information provided, to maximize the useful life of each type of battery.



Do not disassemble or modify Lithium Ion battery packs. The Lithium Ion battery packs are equipped with built-in safety and protection features. Should these features be disabled or tampered with in any way, the battery pack can leak acid, overheat, emit smoke, burst, and/or, ignite.



If the battery is ruptured or is leaking electrolyte that results in skin or eye contact with the electrolyte, immediately flush the affected area with water. If the battery electrolyte gets in the eyes, flush with water for 15 minutes and consult a physician immediately.

4.1 CONDITIONING BATTERY PACKS

4.1.1 Conditioning NiMH Battery Packs

Condition a new NiMH battery before putting into use. This also applies to rechargeable NiMH batteries that have been stored for long periods (weeks, months, or longer). Conditioning requires fully charging and fully discharging the battery three (3) times using the tri-chemistry charger. The first time the battery is put into the charger, this unit will condition Nickel-based battery packs by automatically charging and discharging (cycling) the battery. Refer to the appropriate charger manual for details.



Failure to properly condition NiMH battery packs before initial use will result in shortened performance by the battery.

4.1.2 Conditioning NiCd Battery Packs

A new NiCd battery does not require conditioning before use. However, Harris recommends periodically conditioning NiCd batteries to avoid the memory effect which results when a NiCd battery is repeatedly charged and not fully discharged, further resulting in a lower voltage and a lower capacity. Fortunately, both nominal voltage and capacity are restored through battery conditioning.

Conditioning requires fully charging and fully discharging the battery three (3) times using the tri-chemistry charger. The first time the battery is put into the charger, this unit will condition Nickel-based battery packs by automatically charging and discharging (cycling) the battery. Refer to the appropriate charger manual for details.



Always use Harris authorized chargers and conditioners. Use of unauthorized chargers and conditioners may void the warranty.

4.1.3 Additional Information

For more information regarding the proper care of portable radio batteries or establishing a battery maintenance program, refer to ECR-7367 which may be ordered by calling toll free 1-800-368-3277, then select option 7.

4.2 CHARGING BATTERY PACKS

Battery chargers are available from Harris with nominal charge times. Combinations include single and multi-position charge units.

Harris chargers are specifically designed for charging nickel-based and lithium ion battery packs. The chargers are chemistry-specific for the battery packs and automatically adjust the charging profiles accordingly. Refer to the appropriate charger manual for specific operating instructions.

4.2.1 Charging Guidelines

Observe the following guidelines when charging a battery pack:

- Avoid high temperature during charging.
- Discontinue use if the charger is overheating.
- Only charge Harris battery packs using a charger approved for use by Harris.
- Do not leave batteries in the charger indefinitely. For best results, leave the battery in the charger for two to six hours after the Green Ready LED comes on. Then place the battery pack into service and fully discharge (as indicated by the radio low battery warning) before re-charging.

If any faults are encountered while charging the battery pack, consult the charger's manual to determine the cause and possible corrective action.

4.3 BATTERY PACK USAGE

Both Nickel-based and Lithium ion batteries vary in capacity and life cycle. For instance, NiCd batteries have a longer life cycle than NiMH batteries whereas NiMH batteries have a larger capacity. However, both Nickel-based and Lithium ion type batteries require basic usage guidelines be followed in order to optimize the battery runtime or shift life.

4.3.1 Usage Guidelines

The following guidelines will help optimize the battery runtime or shift life:

- Ensure Nickel-based battery packs are fully discharged (as indicated by the radio low battery warning) before re-charging. Full discharge is not required for Lithium Ion battery packs.
- Periodically condition Nickel-based battery packs. The frequency should be determined based on usage patterns (refer to ECR-7367). If the battery is fully discharged (to radio Low Battery warning) during routine use, the frequency of conditioning may be reduced. Lithium Ion batteries do not suffer from memory-effect and therefore do not require conditioning.

Do not leave any Harris rechargeable batteries in a charger for more than a few days.

4.4 CHANGING THE BATTERY PACK

4.4.1 Removing the Battery Pack

Make sure the power to the radio is turned OFF.



Although the P7300 has been designed to tolerate changing the battery pack without turning power off, Harris recommends turning the radio off before changing battery packs to ensure safety and best operation.

1. Press or pull both latches on either side of the battery pack ① toward the bottom of the radio simultaneously.
2. Pull the battery ② away from the radio.
3. Remove the battery pack from the radio.



Figure 4-1: Removing the Battery Pack

4.4.2 Attaching the Battery Pack

Make sure the power to the radio is turned OFF.

1. Align the tabs at each side on the bottom of the battery pack with the slots at the bottom of the battery cavity ①.
2. Push the top of the battery pack ② down until the latches click to attach the battery to the radio.
3. Tug gently to verify that the latches are secure and the battery pack is properly attached to the radio.



Figure 4-2: Attaching the Battery Pack

4.5 BATTERY DISPOSAL



CAUTION

In no instance should a battery be incinerated. Disposing of a battery by burning will cause an explosion.



RECHARGEABLE BATTERY PACK DISPOSAL – The product you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal. Canadian and U.S. users may call Toll Free 1-800-8-BATTERY® for information and/or procedures for returning rechargeable batteries in your locality.

PRODUCT INFORMATION

5 INTRODUCTION

The P7300 series portable radio is available in two models: the P7350 Scan model with a limited 6-button front-mounted keypad and the P7370 System model with a 15-button DTMF front-mounted keypad. The UHF P7300 portable radio delivers end-to-end encrypted digital voice and IP data communications. It is designed to support multiple operating modes including:

- EDACS® (Enhanced Digital Access Communications System) or ProVoice™ Trunked mode
- P25 Trunked Mode
- P25 Digital Conventional Mode
- Conventional Analog mode

The P7300 portables can include all of these modes or just one. Additional modes of operation can be added with software updates.

The P7300 supports a full range of advanced digital trunking features, including voice group calls, priority scanning, emergency calls, late call entry, and dynamic reconfiguration. It performs autonomous roaming for wide area applications. High quality voice coding and robust audio components assure speech clarity.

In the trunked modes, the user selects a communications “operating” system (i.e., EDACS, ProVoice, or P25) and group. While communicating in a trunked mode, channel selection is transparent to the user and is controlled via digital communication with the system controller (e.g., a CSD in an EDACS system). This provides advanced programmable features and fast access to communication channels.

In Conventional Analog mode, the user selects a channel and communicates directly on that channel. A channel is a transmit/receive radio frequency pair.

The exact operation of the radio will depend on the operating mode, the radio’s programming, and the particular radio system. Most features described in this manual can be enabled through programming. Consult your System Administrator for the particular features programmed into your P7300. Then refer to the corresponding section(s) within this manual for feature and operation information.

5.1 WATER RESISTANCE

The P7300 series portable radios operate reliably even under adverse conditions. These radios meet MIL-STD-810F specifications for wind driven rain, humidity, and salt fog.

6 OPTIONS AND ACCESSORIES

Table 6-1 lists the Options and Accessories tested for use with the P7300 series portable radios.

Refer to the maintenance manual or to Harris Products and Services Catalog for a complete list of options and accessories, including those items that do not adversely affect the RF energy exposure.



Always use Harris authorized accessories (antennas, batteries, belt clips, speaker/mics, etc). Use of unauthorized accessories may cause the FCC Occupational/Controlled Exposure RF compliance requirements to be exceeded. (Refer to Table 2-1.)



Always use the correct options and accessories (battery, antenna, speaker/mic, etc.) for the radio. Intrinsically safe options must be used with intrinsically safe radios. (Refer to Table 6-1.)

Table 6-1: Options and Accessories

DESCRIPTION	PART NUMBER
ANTENNAS	
Helical Stub 470-512 MHz	KRE 101 1219/14
¼ λ Whip 440-512 MHz	KRE 101 1223/12
BATTERIES (IMMERSION-RATED)	
7.5V Nickel Cadmium (NiCd) Battery, Immersible, non-<IS>	BT-023406-001
7.5V Nickel Cadmium (NiCd) Battery, Immersible, <IS>	BT-023406-002
7.5V Nickel Metal Hydride (NiMH) Battery, Immersible, non-<IS>	BT-023406-003
7.5V Nickel Metal Hydride (NiMH) Battery, Immersible, <IS>	BT-023406-004
7.5V Lithium Ion (Li Ion) Battery, Immersible, non-<IS>	BT-023406-005
7.5V Lithium Ion (Li Ion) Battery, Immersible, <IS>	BT-023406-006
MISCELLANEOUS ACCESSORIES	
Speaker Mic without Antenna (cc) provision, <IS>	MC-023933-001
Speaker Mic with Antenna (cc) provision, <IS>	MC-023933-002
Earphone for Speaker Mic <IS>	LS103239V1
DROP SHIP AUDIO ACCESSORIES	
Earphone Kit, Black	EA-009580-001
Earphone Kit, Beige	EA-009580-002
2-Wire Kit, Palm Mic, Black	EA-009580-003
2-Wire Kit, Palm Mic, Beige	EA-009580-004
3-Wire Kit, Mini-Lapel Mic, Black	EA-009580-005
3-Wire Kit, Mini-Lapel Mic, Beige	EA-009580-006
Explorer Headset with PTT	EA-009580-007
Lightweight Headset Single Speaker with PTT	EA-009580-008
Breeze Headset with PTT	EA-009580-009
Headset, Heavy Duty, N/C Behind-the-Head, with PTT	EA-009580-010
Ranger Headset with PTT	EA-009580-011
Skull Mic with Body PTT and Earcup	EA-009580-012
Headset, Heavy Duty, N/C Over-the-Head, with PTT	EA-009580-013
Throat Mic with Acoustic Tube and Body PTT	EA-009580-014

DESCRIPTION	PART NUMBER
Throat Mic with Acoustic Tube, Body PTT, and Ring PTT	EA-009580-015
Breeze Headset with PTT and Pigtail Jack	EA-009580-016
Hurricane Headset with PTT	EA-009580-017
Hurricane Headset with PTT and Pigtail Jack	EA-009580-018
CARRYING CASE ACCESSORIES	
P7300 Black Nylon Case with Belt Loop Kit, consists of: P7300 Black Nylon Case with Retaining Strap and Leather Belt Loop	Kit: KT-016201-001 , incl: FM-016199-001 CC-014527
P7300 Orange Nylon Case with Belt Loop Kit, consists of: P7300 Orange Nylon Case with Retaining Strap and Leather Belt Loop	Kit: KT-016201-002 , incl: FM-016199-002 CC-014527
P7300 Leather Case with Belt Loop Kit, consists of: P7300 Leather Case with Retaining Strap (w/o Shoulder Strap D-Rings), Swivel Mount and Leather Belt Loop	Kit: KT-016201-003 , incl: FM-016199-003 KRY 101 1608/2 CC-014527
P7300 Leather Case with Shoulder Strap Kit, consists of: P7300 Leather Case with Retaining Strap D-Rings with Retaining Strap, Swivel Mount Shoulder Strap	Kit: KT-016201-004 , incl: FM-016199-004 KRY 101 1608/2 CC-014524-001
Short Leather Retaining Strap (for use with Shoulder Strap application)	CC-014524-002
Swivel Mount and Belt Loop	KRY 101 1608/2 KRY 101 1609/1
Metal Belt Clip (standard)	CC23894
Metal Belt Clip (alternate)	CC-011318
"T" Strap Holder	KRY 101 1656/1

7 USER INTERFACE

This section describes the primary user interface; the buttons, knob controls, indicators, and display.

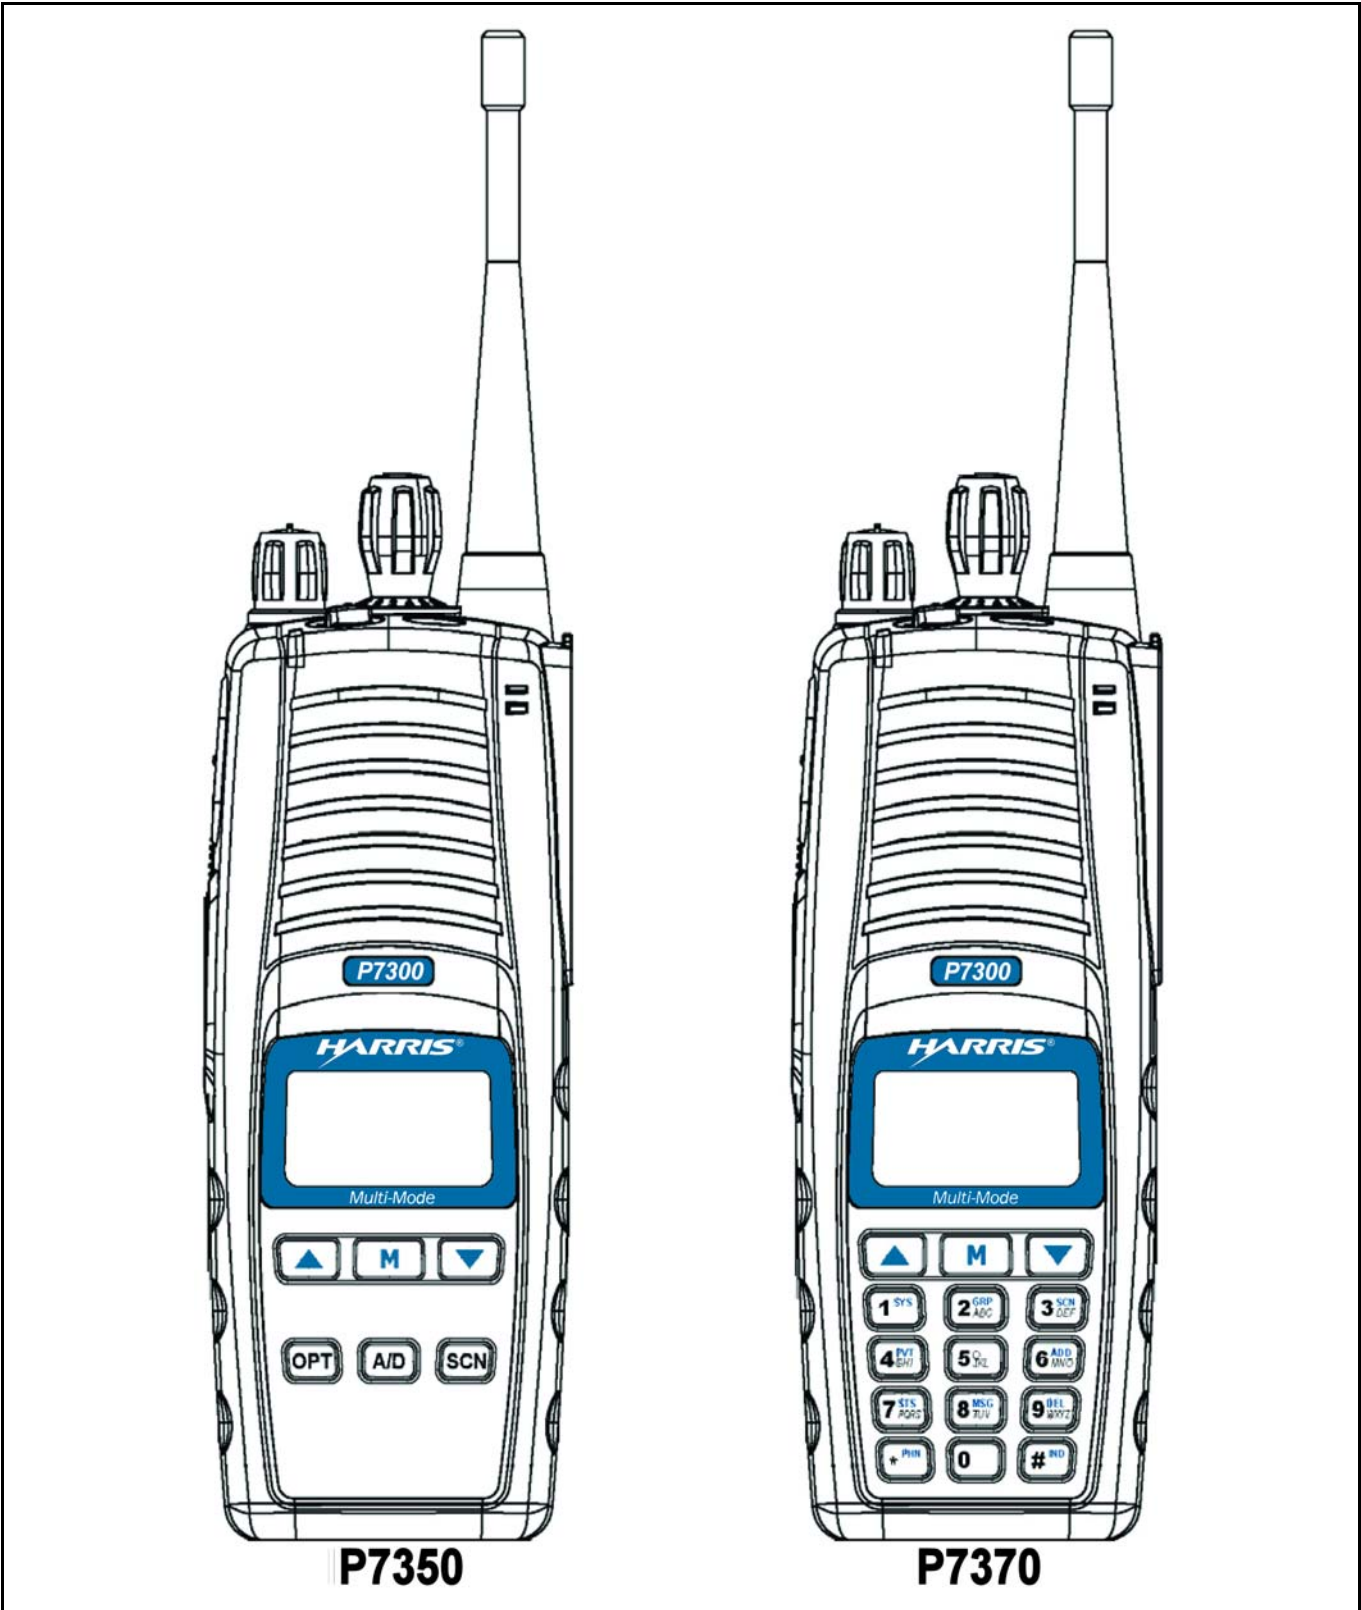


Figure 7-1: P7300 Portable Radio

7.1 CONTROLS

7.1.1 Buttons and Knobs

The P7300 portable radios feature two rotary control knobs, an emergency button, and a dual-position A/B switch located on the top of the radio (Figure 7-2). The Push-To-Talk (PTT) button and two option buttons are located on the side (Figure 7-3).

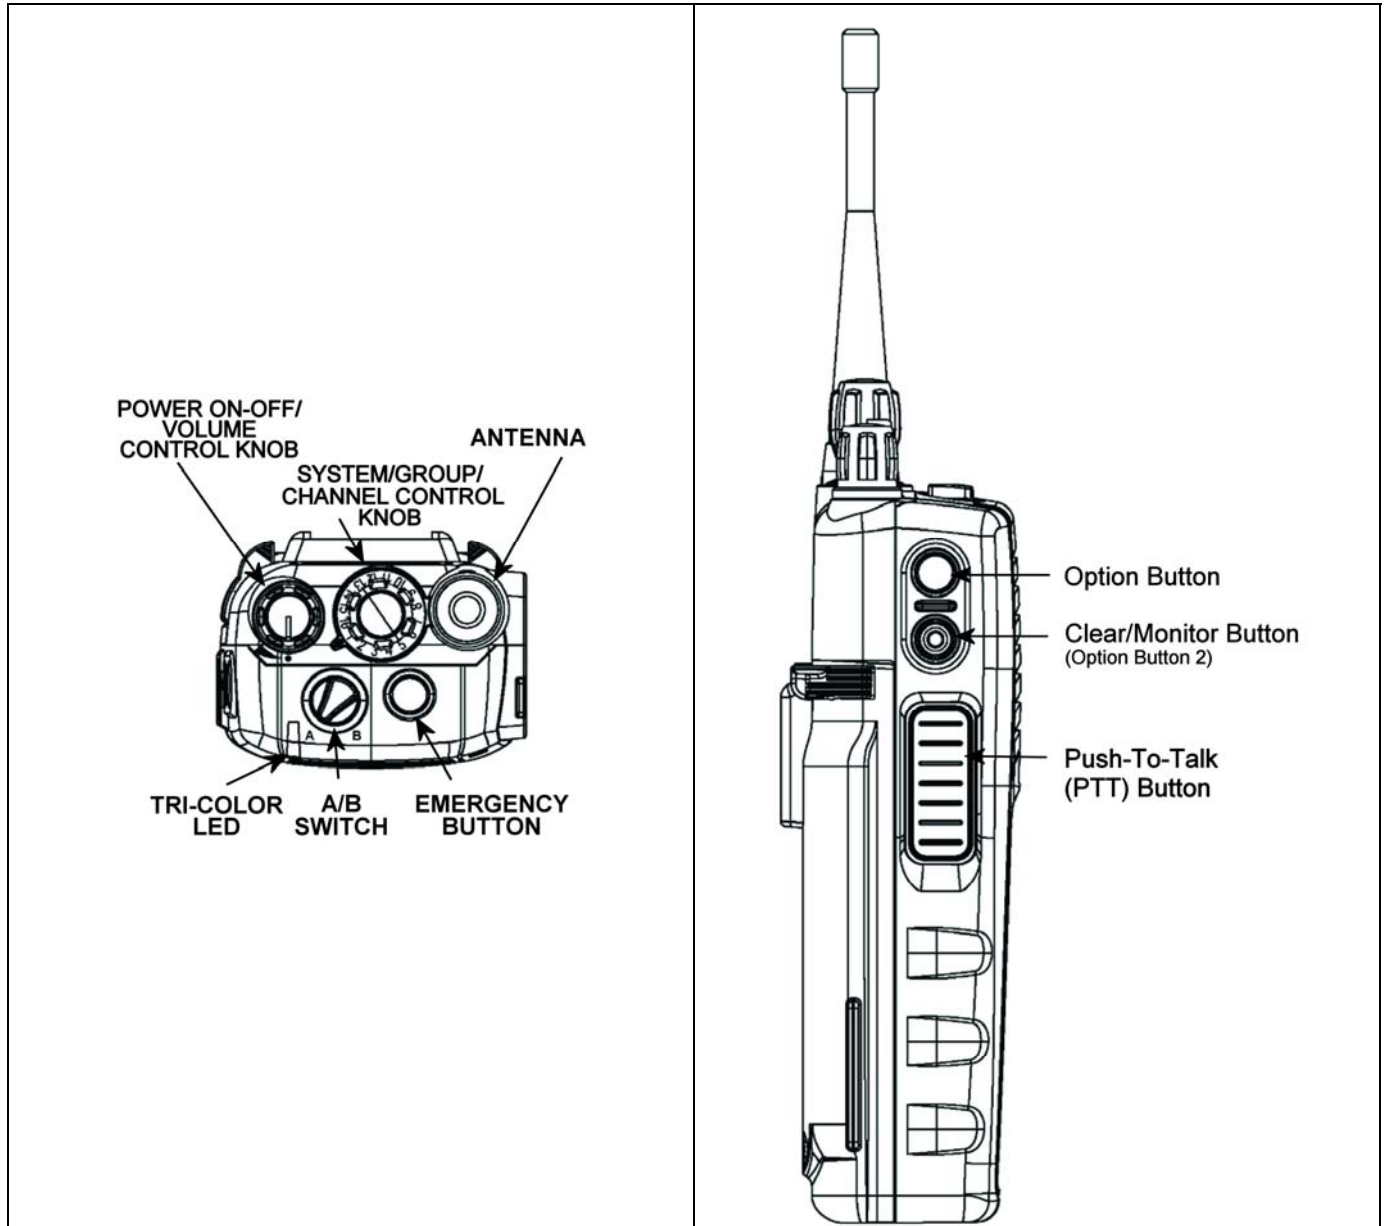


Figure 7-2: Top View

Figure 7-3: Side View

The functions of the button and knob controls vary depending on the mode of operation. The primary functions of the button and knob controls when in the EDACS mode of operation are listed in the following paragraphs. The functions while in other modes are discussed in the specific sections.

**POWER ON/OFF-VOLUME
CONTROL KNOB**

Applies power to the radio and adjusts audio volume.

Rotating the control clockwise applies power to the radio. A single alert tone (if enabled through programming) indicates the radio is operational.

Rotating the control clockwise increases the volume level. Minimum volume levels may be programmed into the radio to prevent missed calls due to a low volume setting. While adjusting the volume, the display will momentarily indicate the volume level (i.e., **VOL=31**). The volume range is from a minimum programmed level of zero (displayed as **OFF** in the display) up to 40, which is the loudest level.

**SYSTEM/GROUP/CHANNEL
CONTROL KNOB**

Used to select groups/channels. This is a 16-position rotary knob.

Note: A mechanical stop, used to limit the number of accessible positions, is shipped with the radio but must be installed. To install the mechanical stop, remove the System/Group/Channel control knob, loosen the set screw on the System/Group/Channel control knob metal base (using a 1.27 mm hex wrench), and remove the System/Group/Channel control knob metal base. Replace the 16 channel ring with the channel stop ring located at the desired channel. Re-install the System/Group/Channel control knob metal base, tighten the set screw, and re-install the System/Group/Channel control knob.

EMERGENCY/HOME BUTTON

Automatically selects the pre-programmed Group/System by pressing and holding for a programmed duration. It can also be used to declare an emergency by pressing and holding for a programmed duration. The button must be pre-programmed for either operation, but not both.

PUSH-TO-TALK (PTT) BUTTON

The PTT button must be pressed before voice transmission begins.

OPTION BUTTON 

Activates one of a number of programmable software options selected during PC programming. Programmable options include hi/low power settings, keypad lock, LCD contrast, LCD and keypad back lighting.

CLEAR/MONITOR BUTTON 
(OPTION BUTTON 2)

Exits the current operation (removing all displays associated with it) and returns the radio to the selected talk group. Terminates individual and telephone interconnect calls.

7.1.2 Keypad

The front mounted keypad of the P7350 “Scan” model has six buttons and P7370 “System” model has 15 buttons. Refer to Figure 7-4 and Figure 7-5, respectively.



Figure 7-4: P7350 “Scan” Model Front Panel



Figure 7-5: P7370 “System” Model Front Panel

Alpha-numeric character entry is the secondary function of most of the P7300 keypad keys in the EDACS mode of operation. In addition, the \star PHN (*) and #IND (#) keys are also available. The primary and secondary functions of each key, where applicable, are described in Table 7-1 and the following section.

Table 7-1: P7300 Front Keypad Functions

KEY	FUNCTION
\boxed{M}	<u>Primary Function:</u> Accesses the pre-stored menu. <u>Secondary Function:</u> Activates a selected item within the menu. This is similar to an “Enter” key.
$\boxed{\uparrow} \quad \boxed{\downarrow}$	<u>Primary Function:</u> Allows the user to scroll through available systems, groups, or channels, depending on personality programming. <u>Secondary Function:</u> Changes the selection for an item within a list.
$\boxed{A/D}$ (P7350 only)	In EDACS and Conventional Analog modes, Adds/Deletes selected groups or channels from SCAN list of the currently selected system.
\boxed{SCN} (P7350 only)	In EDACS and Conventional Analog modes, toggles SCAN operation ON and OFF.
\boxed{OPT} (P7350 only)	In EDACS and Conventional Analog modes, activates one of any programmable software options selected during the PC programming, including: high/low TX power and talkaround.
$\boxed{1 \text{ SYS}}$	<u>Primary function:</u> Selects a specific system. If the rotary knob is used to select the system and more than 16 systems are programmed in the radio, the $\boxed{1 \text{ SYS}}$ key is used to select additional banks (groupings) of systems.
$\boxed{2 \text{ GRP}}$	<u>Primary function:</u> Selects a specific group.
$\boxed{3 \text{ SCN}}$	<u>Primary function:</u> Turns the Scan operation ON and OFF.
$\boxed{4 \text{ PVT}}$	<u>Primary function:</u> Enables or disables Private Mode for the system/group/channel displayed.

KEY	FUNCTION
	<u>Primary function:</u> Adds groups or channels from the currently selected system to the Scan list.
	<u>Primary function:</u> Status key. Access to the status list (0-9). The Status key permits the transmission of a pre-programmed status message to an EDACS site.
	<u>Primary function:</u> Message key. Access to the message list (0-9). The Message key permits the transmission of a pre-programmed message to an EDACS site.
	<u>Primary function:</u> Deletes selected groups or channels of the currently selected system from the Scan list.
 (P7370 Only)	<u>Secondary function:</u> In EDACS mode the secondary function of these keys is much as a typical DTMF telephone pad 0-9, *, and # keys; and are used to place telephone interconnect and individual (unit-to-unit) calls. (See individual listings for primary functions.)
 (P7370 Only)	<u>Primary function:</u> In EDACS mode, initiates telephone interconnect calls.
 (P7370 Only)	<u>Primary function:</u> In EDACS mode, initiates individual, unit-to-unit calls.

7.1.3 Display

The P7300 display is made up of 3 lines. Lines 1 and 2 contain twelve alpha-numeric character blocks each. The 3rd line also contains twelve blocks, each used to display radio status icons. If programmed, the display backlighting will illuminate upon power up or when radio controls are operated. Specific display characteristics will be discussed in following sub-sections.

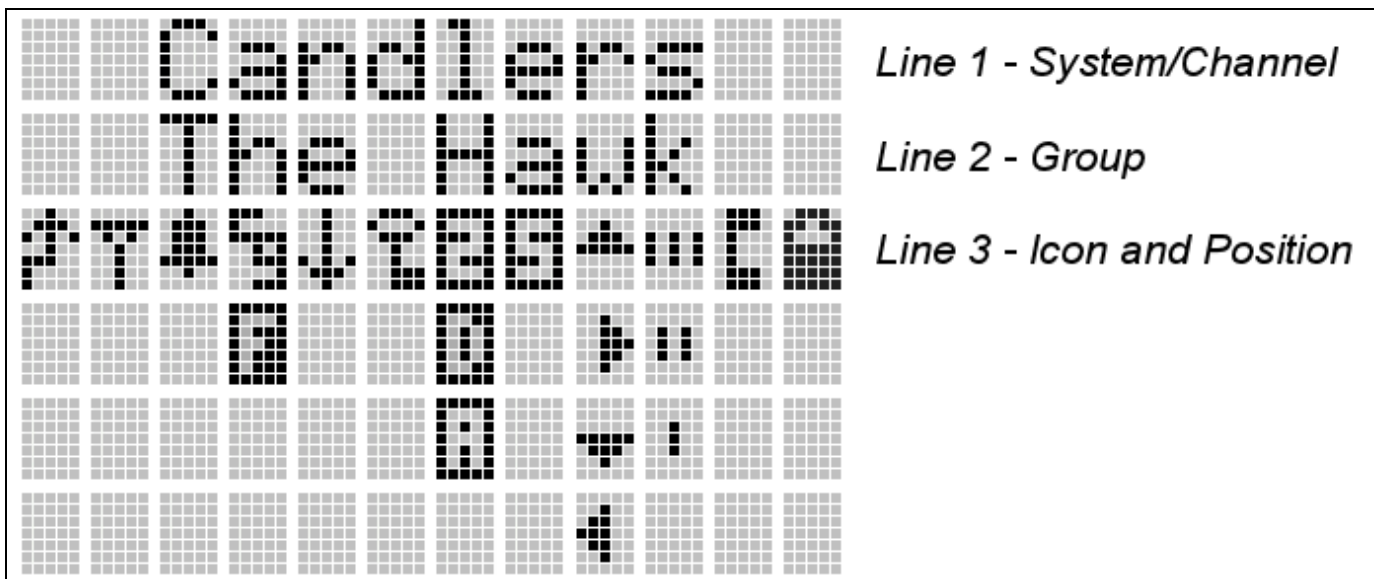


















Figure 7-6: P7300 Radio Display

7.1.3.1 Radio Status Icons

Status Icons represent various operating characteristics of the radio and appear on the third line of the display. Each of the icons will be discussed in further detail in the corresponding modes of operation; EDACS and Conventional icons will be discussed in the EDACS or Conventional Operation sections, and P25 icons will be discussed in the P25 Operation section.

Table 7-2: Status Icons Descriptions

STATUS ICON DESCRIPTIONS	
EDACS, CONVENTIONAL, AND P25 ICONS	
	Steady – during all radio transmissions. Appears in the 1 st position of the display.
	Steady – “Busy” transmitting or receiving. Appears in the 2 nd position of the display. Flashing – call queued.
	Steady – T99 Mode enabled. Appears in the 3 rd position of the display.
	Steady – Channel Guard enabled. Appears in the 4 th position of the display. If icon is not visible – Channel Guard is disabled.
	Steady – trunked system in Failsoft™ mode. Appears in the 4 th position of the display.
	Steady – transmit at low power. Appears in the 5 th position of the display. If icon is not visible – transmit at high power.
	Steady – transmit in encrypt mode. Appears in the 6 th position of the display. Flashing – receiving an encrypted call.
	Steady – Indicates the current channel is set up as a Project 25 (P25) channel. Appears in the 7 th and 8 th positions of the display.
	Steady – Indicates the current channel is set up as a ProVoice channel. Appears in the 7 th position of the display.
	Steady – Indicates the current channel is set up as an analog channel. Appears in the 7 th position of the display.
	Animated (rotates clockwise) – scan mode enabled. Appears in the 9 th position of the display. If icon is not visible – scan is disabled.
	Steady – priority 1 group or channel. Appears in the 10 th position of the display.
	Steady – priority 2 group or channel. Appears in the 10 th position of the display.
	Steady – group or channel in scan list. Appears in the 10 th position of the display.
	Steady – special call mode (individual or telephone). Appears in the 11 th position of the display.
	Steady – battery charge indicators. Appear in the 12 th position of the display. Flashing – Low battery indicator.

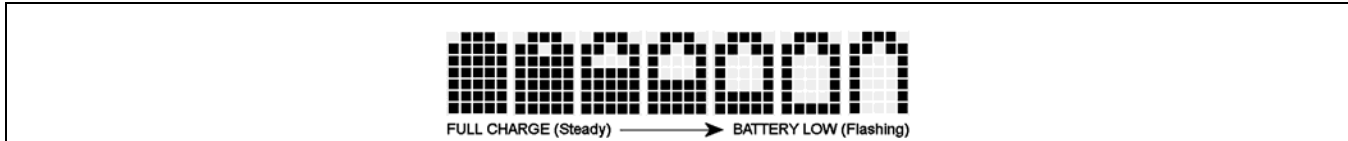


Figure 7-7: Full Cycle Battery Charge Indicator

The battery charge indicators illustrate approximate level only, based on battery voltage. Refer to Figure 7-7.

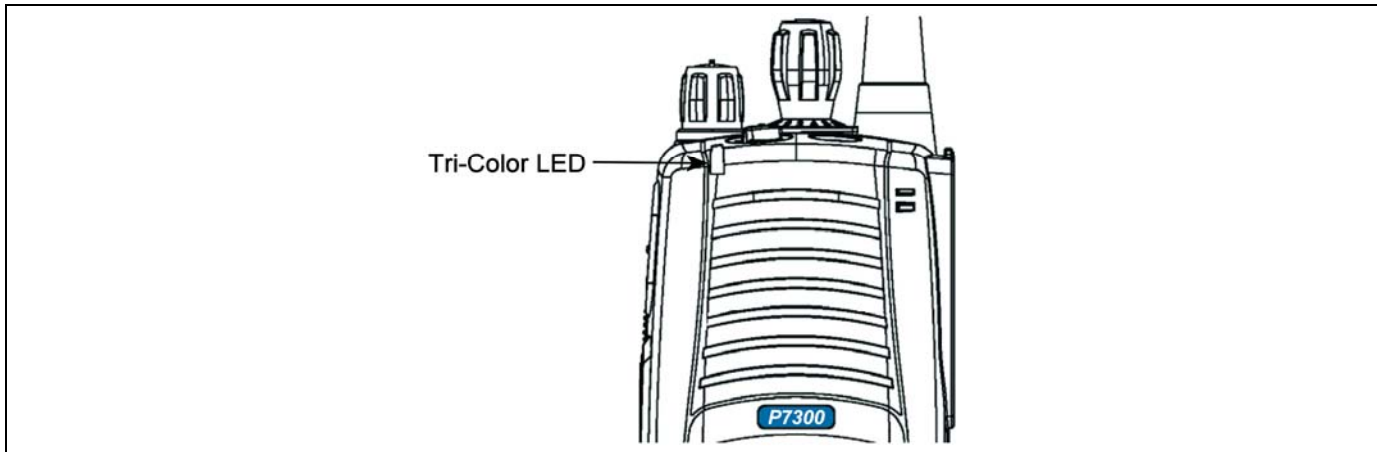


Figure 7-8: Tri-Color LED

7.1.4 Tri-Color LED

The Tri-Color LED changes color to indicate radio status and is visible from both the front and top of the radio (see Figure 7-2). In addition, the mode of operation may also help determine what the color of the LED represents.

In EDACS, Conventional, or P25 modes

Green:	Receiving
Red:	Transmitting Unencrypted
Orange:	Transmitting Encrypted

7.2 UNIVERSAL DEVICE CONNECTOR

The Universal Device Connector (UDC) provides connections for external accessories such as a headset, a speaker-microphone, audio test box, audio test cables, and programming cables. The UDC is located on the right side of the radio, opposite the PTT Button. The UDC facilitates programming and testing the radio. The UDC pins perform different functions depending on the accessory attached to the UDC.

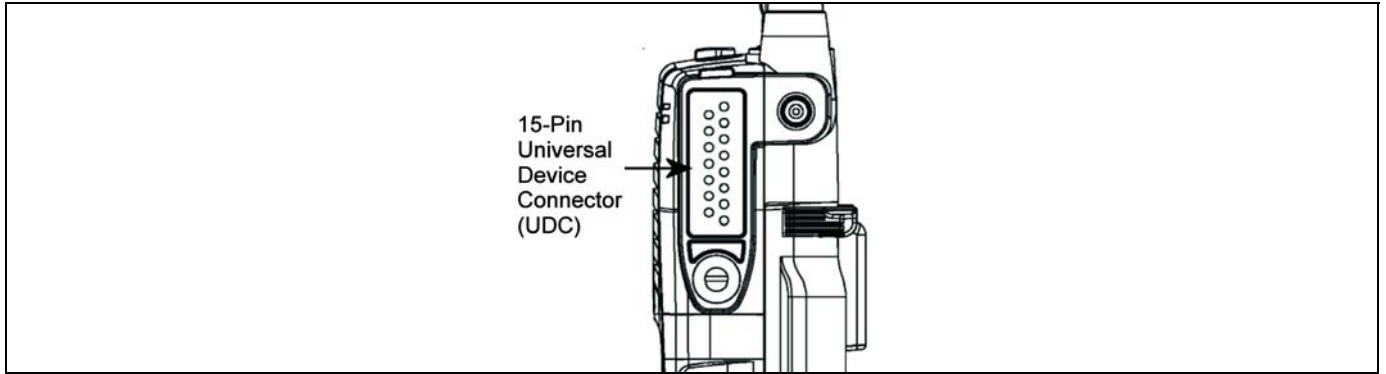


Figure 7-9: P7300 15-Pin Universal Device Connector

EDACS OPERATION

8 EDACS OPERATION

8.1 CONTROLS

The radio features two rotary control knobs and an emergency button mounted on the top of the radio. Push-To-Talk and option buttons are mounted on the side. The front mounted keypad has six buttons on the P7350 Scan model and 15 buttons on the P7370 System Radio.

8.1.1 Buttons and Knobs

This section describes the primary function of the button and knob controls (see Figure 7-2 and Figure 7-3). Other functions associated with these controls are detailed in later sections.

POWER ON/OFF-VOLUME CONTROL KNOB

Applies power to and adjusts the receiver’s volume. Rotating the control clockwise applies power to the radio. A single alert tone (if enabled through programming) indicates the radio is operational.

Rotating the control clockwise increases the volume level. Minimum volume levels may be programmed into the radio to prevent missed calls due to a low volume setting. While adjusting the volume the display will momentarily indicate the volume level (i.e., **VOL=31**). The volume range is from a minimum programmed level of zero (displayed as **OFF** in the display) up to 40, which is the loudest level.

SYSTEM/GROUP/CHANNEL CONTROL KNOB

Selects systems or group/channels (depending on programming). This is a 16-position rotary knob.

Note: A mechanical stop, which can limit the positions accessed, is shipped with the radio but must be installed. To install the mechanical stop, remove the System/Group/Channel control knob, loosen the set screw on the System/Group/Channel control knob metal base (using a 1.27 mm hex wrench), and remove the System/Group/Channel control knob metal base. Replace the 16 channel ring with the channel stop ring located at the desired channel. Reinstall the System/Group/Channel control knob metal base, tighten the set screw, and reinstall the System/Group/Channel control knob.

EMERGENCY/HOME BUTTON

Automatically selects the pre-programmed Group/System by pressing and holding for a programmed duration. It can also be used to declare an emergency by pressing and holding for a programmed duration. The button must be pre-programmed for either operation, but not both.

PTT BUTTON

PTT must be pressed before voice transmission begins. In trunked mode the radio’s ID is transmitted upon depression of the PTT button.

OPTION BUTTON ○

Activates one of a number of programmable software options selected during PC programming. Programmable options include hi/low power settings, keypad lock, LCD contrast, LCD and keypad back lighting.

CLEAR/MONITOR BUTTON ⊙
OPTION BUTTON 2

Exits the current operation (removing all displays associated with it) and returns the radio to the selected talk group. Terminates individual and telephone interconnect calls.

8.1.2 Keypad

The keys on the keypad have special functions and are labeled using a symbol or abbreviated word describing its primary function. Alpha-numeric entry is a secondary function of the keys. Each key is described in the following subsections.

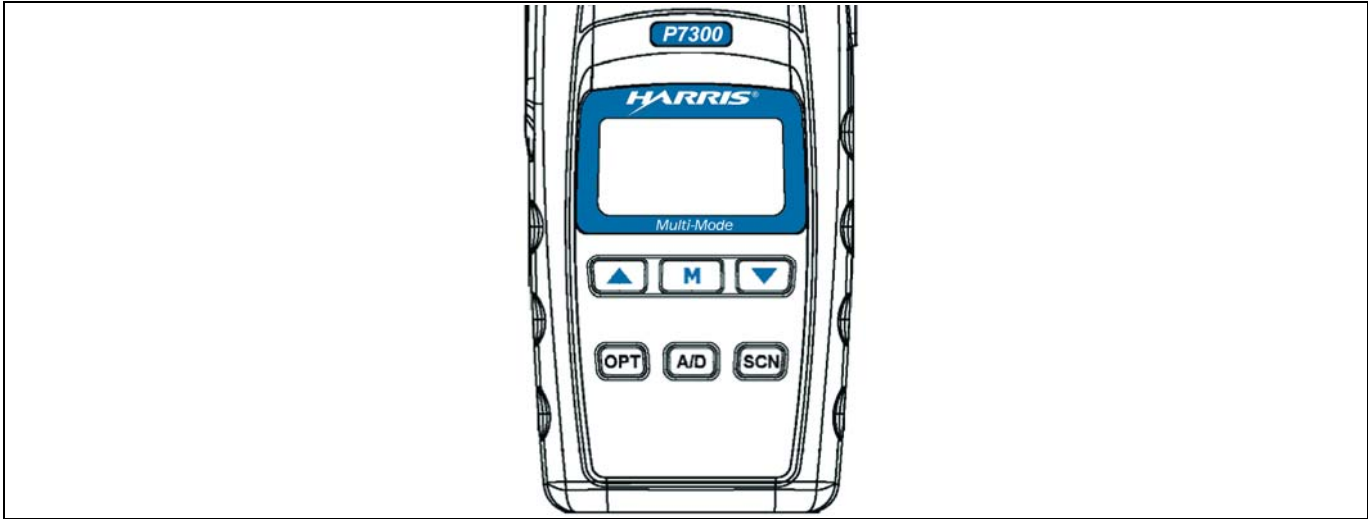


Figure 8-1: P7350 “Scan” Radio Front Panel

Table 8-1: P7350 Keypad Functions





















KEY	FUNCTION
	<u>Primary Function:</u> Accesses the pre-stored menu. <u>Secondary Function:</u> Activates a selected item within the menu. This is similar to an “Enter” key.
	Scrolls thru available menu items.
 (P7350 only)	Activates one of any programmable software options selected during the PC programming, including: high/low TX power and talkaround.
 (P7350 only)	Toggles SCAN operation ON and OFF.
 (P7350 only)	Adds/Deletes selected groups or channels from SCAN list of the currently selected system.



Figure 8-2: P7370 “System” Radio Front Panel

Table 8-2: P7370 Keypad Functions

KEY	FUNCTION
	<p><u>Primary Function:</u> Accesses the pre-stored menu. <u>Secondary Function:</u> Activates a selected item within the menu. This is similar to an “Enter” key.</p>
	<p><u>Primary Function:</u> Allows the user to scroll through available systems, groups, or channels, depending on personality programming. <u>Secondary Function:</u> Changes the selection for an item within a list.</p>
<p>0-9,  and </p>	<p><u>Primary Function:</u> Refer to the separate key definitions within this table. <u>Secondary Function:</u> These keys function much as a typical DTMF telephone pad 0-9, *, and # keys; and are used to place telephone interconnect and individual (unit-to-unit) calls.</p>
	<p>Selects a specific system. If the rotary knob is used to select the system and more than 16 systems are programmed in the radio, the  key is used to select additional banks (groupings) of systems.</p>
	<p>Selects a specific group.</p>
	<p>Turns the Scan operation ON and OFF.</p>
	<p>Enables or disables Private Mode for the system/group/channel displayed.</p>
	<p>Adds groups or channels from the currently selected system to the Scan list.</p>
	<p>Status. Access to the status list (0-9). The Status key permits the transmission of a pre-programmed status message to an EDACS site.</p>
	<p>Message. Access to the message list (0-9). The Message key permits the transmission of a pre-programmed message to an EDACS site.</p>
	<p>Deletes selected groups or channels of the currently selected system from the Scan list.</p>
	<p>Initiates telephone interconnect calls.</p>
	<p>Initiates individual unit-to-unit calls.</p>

8.2 DISPLAY

The radio display is made up of 3 lines (see Figure 8-3). Lines 1 and 2 contain eight alphanumeric character blocks and are used primarily to display system and group names. Line 1 also displays radio status messages. The 3rd line is used primarily to display radio status icons. All three lines are used to display menu options when in the menu mode. If programmed, the display backlighting will illuminate upon power up or when radio controls are operated.

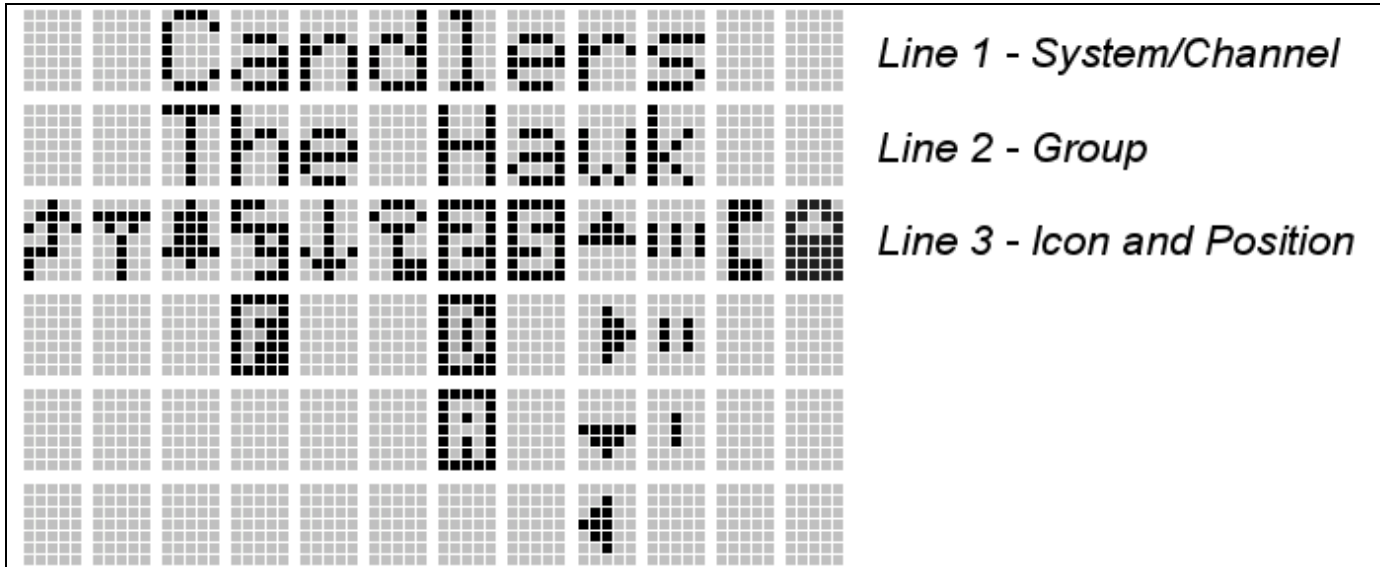


Figure 8-3: P7300 Radio Display

8.3 RADIO STATUS ICONS

Status Icons indicate the various operating characteristics of the radio. The icons show operating modes and conditions and appear on the third line of the display (see Table 8-3).

Table 8-3: EDACS Icon Descriptions

EDACS STATUS ICONS	
	Steady – during all radio transmissions. Appears in the 1 st position of the display.
	Steady – “Busy” transmitting or receiving. Appears in the 2 nd position of the display. Flashing – call queued.
	Steady – trunked system in Failsoft™ mode. Appears in the 4 th position of the display.
	Steady – transmit at low power. Appears in the 5 th position of the display. If icon is not visible – transmit at high power.
	Steady – transmit in encrypt mode. Appears in the 6 th position of the display. Flashing – receiving an encrypted call.
	Steady – Indicates the current channel is set up as a ProVoice channel. Appears in the 7 th position of the display.
	Animated (rotates clockwise) – scan mode enabled. Appears in the 9 th position of the display. If icon is not visible – scan is disabled.
	Steady – priority 1 group or channel. Appears in the 10 th position of the display.
	Steady – priority 2 group or channel. Appears in the 10 th position of the display.
	Steady – group or channel in scan list. Appears in the 10 th position of the display.
	Steady – special call mode (individual or telephone). Appears in the 11 th position of the display.
	Steady – battery charge indicators. Appear in the 12 th position of the display. Flashing – Low battery indicator.

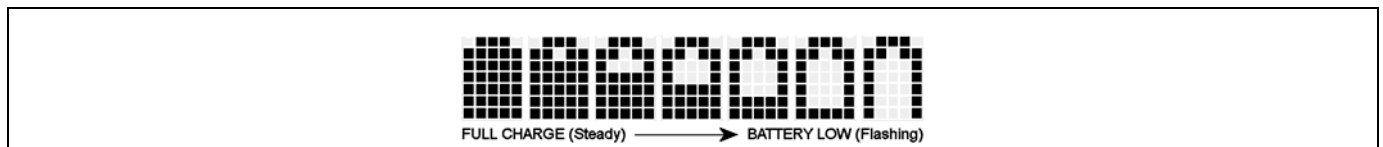


Figure 8-4: Full Cycle Battery Charge Indicator

The battery charge indicators illustrate approximate level only, based on battery voltage. Refer to Figure 8-4.

8.4 TRI-COLOR LED

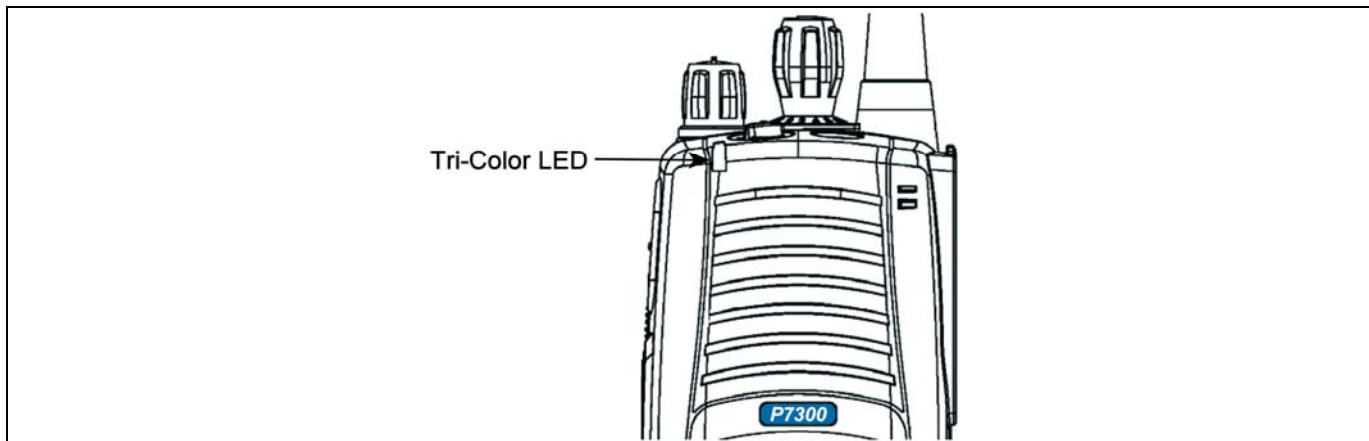


Figure 8-5: Tri-Color LED

The Tri-Color LED changes color to indicate radio status and is visible from both the front and top of the radio (see Figure 8-5). The colors of the LED and the status they represent are defined below.

Green:	Receiving
Red:	Unencrypted transmission
Orange:	Encrypted transmission

8.5 STATUS MESSAGES

During radio operation, various radio Status Messages can be displayed. The messages are described below.

<u>MESSAGE</u>	<u>NAME</u>	<u>DESCRIPTION</u>
QUEUED	Call Queued	Indicates the system has placed the call in a request queue.
SYS BUSY	System Busy	Indicates the system is busy, no channels are currently available, the queue is full, or an individual call is being attempted to a radio that is currently transmitting.
DENIED	Call Denied	Indicates the radio or talkgroup is not authorized to operate on the selected system and/or talkgroup.
CC SCAN	Control Channel Scan	Indicates the control channel is lost and the radio has entered the Control Channel Scan mode to search for the control channel (usually out of range indication).
WA SCAN	Wide Area Scan	Indicates the radio has entered the Wide Area Scan mode to search for a new system (if enabled through programming).
SYSC ON	System Scan Features On	Indicates the System Scan features are enabled.

<u>MESSAGE</u>	<u>NAME</u>	<u>DESCRIPTION</u>
SYSC OFF	System Scan Features Off	Indicates the System Scan features are disabled.
LOW BATT	Low Battery	Battery voltage has dropped to the point to where the radio is no longer able to transmit. The radio will still receive calls until the battery is discharged beyond the point of operation at which time the radio automatically shuts down.
RXEMER	Receive Emergency	Indicates an emergency call is being received. This message will be flashing on line two.
TXEMER	Transmit Emergency	Indicates an emergency call has been transmitted on this radio. This message will be flashing on line two.
VOL=31	Volume Level	Indicates the current volume level. The volume level display ranges from OFF (muted) to 40 (loudest).
WHC	Who Has Called	Indicates an individual call has been received, but not responded to. The indicator turns OFF if the individual call mode is entered, the system is changed, or the radio is turned off and then on again.
UNKNOWN	Unknown ID	Indicates an individual call is being received from an unknown ID.

8.6 ERROR MESSAGES

If either of the Error Messages shown below is displayed, the radio is programmed incorrectly or needs servicing.

```
DSP ERR      or  DIG U
ERR=XXXXX    ERR
(PowerUp
only)
```

Where **xxxxx** is the error code and **DSP ERR** or **DIG U ERR** is the message.

8.7 ALERT TONES

The P7300 radio provides audible Alert Tones or “beeps” to indicate the various operating conditions (see Table 8-4).

Table 8-4: Alert Tones

NAME	TONE	DESCRIPTION
Call Originate	one short mid-pitched	<i>OK to talk after pressing the push-to-talk button</i>
Call Queued	one high-pitched	<i>Call queued for processing</i>
Autokey	one mid-pitched	<i>Queued call received channel assignment</i>
System Busy	three low-pitched	<i>System busy or unable to complete call</i>
Call Denied	one low-pitched	<i>Radio is not authorized on the system or group</i>
Carrier Control Timer	five high-pitched/one long low-pitched	<i>PTT depressed for maximum length of time</i>
Low Battery	one low-pitched/one short mid-pitched	<i>Low battery</i>
TX Low Battery Alert	one low-pitched	<i>After PTT - battery too low to transmit</i>

8.8 TURNING ON THE RADIO

1. Power ON the radio by rotating the POWER ON-OFF/VOLUME knob clockwise. A short alert signal (if enabled through programming) indicates the radio is ready to use.
2. The display shows the last selected system and group or a default system and group (depending on programming).
3. Adjust the POWER ON-OFF/VOLUME knob to the desired volume level.
4. Select the desired system and group. The display indicates the current system and group names.
5. The radio is now ready to transmit and receive calls.



NOTE

In the trunked environment, CC SCAN will be displayed if communication with the system's control channel cannot be established. This may occur if, for example, the radio is out of range of the trunking site. It may be necessary to move to another location or select another trunking system to re-establish the control channel link for trunked mode operations. CC SCAN is displayed on the group line until a control channel is accessed.

8.9 SYSTEM SELECTION

- METHOD 1:** From the control knob: If system selection is programmed to the System/Group/Channel control knob, select a system by turning the knob to the desired system number position (1-16). The display registers the new system name on line one. The **[1 SYS]** button can be programmed to provide access to a “2nd bank” of 16 system number positions (17-32).
- METHOD 2:** From the keypad: If system selection is programmed as the primary function of **[▼]** and **[▲]**, select a system by pressing **[▼]** or **[▲]** to scroll through the system list. The display registers the new system name on line one.
- METHOD 3:** **(P7370 model radios only)** Direct Access: Press **[1 SYS]** to enter the system select mode. Press the numeric key, which is mapped to the desired system. Press **[M]**. The radio will move to the selected system.



NOTE

If system selection is programmed to the System/Group/Channel control knob, direct access to systems will not be available. Pressing **[▼]** or **[▲]** will scroll through different sets of 16 systems each (banks) if more than 16 systems are programmed into the radio. The systems within each bank are then selectable via the System/Group/Channel control knob as described previously in METHOD 1.

Example:

System: 1 = North	Group: 1 = Group 1
2 = South	2 = Group 2
3 = East	3 = Group 3
4 = West	4 = Group 4

1. Press **[1 SYS]**. (South is the currently selected system.)
2. Press **[4 PVI]**. (Press 4 to select “West” system.)
3. Press **[M]**. (West is the newly selected system.)


8.10 GROUP/CHANNEL SELECTION

Several methods can be used to select a new group or channel.


- METHOD 1:** From the Control knob: If group selection is programmed to the System/Group/Channel control knob, select a group by turning the System/Group/Channel control knob to the desired group number position. The display registers the new group name on line two. If the knob is moved to a position greater than the number of programmed groups, the highest programmed group will remain selected. The **[O]** button can be programmed to provide access to a “2nd bank” of 16 group number positions (17-32).
- METHOD 2:** From keypad: If group selection is programmed as the primary function of **[▼]** and **[▲]** select a group by pressing **[▼]** or **[▲]** to scroll through the group list. The display registers the new group name on line two.
- METHOD 3:** **(P7370 model radios only)** Direct Access: Press **[2 GRP]** to enter the group select mode. Press the numeric key mapped to the desired group. Press **[M]**. The radio will move to the selected group.

8.11 MODIFY SCAN LIST

8.11.1 P7370 Model

1. Press **[3 SCN DEF]** to toggle scan OFF and verify  is **not** displayed.
2. Select group or channel.
3. Press **[9 DEL W/Hz]** once to remove group or channel from list.
4. Press **[6 ADD]** once to add as a normal group or channel.
5. Press **[6 ADD]** twice to add as a Priority 2 group.
6. Press **[6 ADD]** three times to add as a Priority 1 group.
7. Press **[3 SCN DEF]** to re-start scanning.

8.11.2 P7350 Model

1. Press **[SCN]** to toggle scan OFF and verify  is **not** displayed.
2. Select group or channel.
3. Press **[A/D]** once to remove group or channel from the list.
4. Press **[A/D]** once to add as a normal group or channel.
5. Press **[A/D]** twice to add as a Priority 2 group.
6. Press **[A/D]** three times to add as a Priority 1 group.
7. Press **[SCN]** to re-start scanning.

8.12 MENU

The Menu function accesses features that are not available directly from the keypad. The order and actual menu items available is configurable through programming. Upon radio power up, the menu item that is at the top of the menu list will always be displayed first. Subsequent access to the menu function will return the last menu item that was shown in the display and cursor position.

1. To enter the menu mode, then press **[M]**.
2. Upon entering the menu selection mode, Menu options will appear in the display (see Figure 8-6).

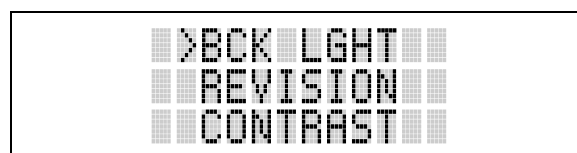


Figure 8-6: Menu Display

3. The radio will continue to receive and transmit normally while in the menu function.
4. To scroll through the menu options use the **[▼]** or **[▲]** keys. When the required menu item has been found, align the cursor with the option then press **[M]** to select it. The menu item's parameter setting shown in the display can now be changed by using **[▼]** or **[▲]** to scroll through the list of parameter values.

5. Once the desired setting is reached press **[M]** to store the value and return the menu option selection level.

For menu items that display radio information, pressing **[v]** or **[^]** will scroll through a list of informational displays. Possible menu items are listed in Table 8-5.

8.12.1 Menu Item Selection Process

An example of the backlight menu item selection process and menu item parameter change is shown in Figure 8-7.

1. Press **[M]**. The menu mode is entered.
2. Press **[v]** or **[^]** until the display shows:

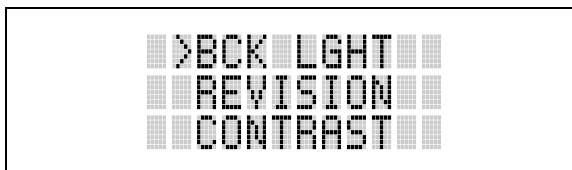


Figure 8-7: Backlight Menu Item Selection Parameter

3. Press **[M]**. The backlight menu item is activated. Line one shows the active menu item and its current parameter setting. Line two shows the currently selected system or group name (see Figure 8-8).



Figure 8-8: Backlight Menu Display

4. The menu item's parameter setting shown in the display can now be changed by using **[v]** or **[^]**.
5. Once the desired setting is reached press **[M]** to store the value and return the menu option selection level.

For menu items that display radio information pressing **[v]** or **[^]** will scroll through a list of informational displays. An example of information displays is shown in Table 8-5.



The TX POWER menu item, when selected, toggles LOW/HIGH power. It does not use **[v]** or **[^]** to scroll nor is an additional press of the **[M]** button required.

Table 8-5: Menu Item Information

FEATURE	DISPLAY	PARAMETER SETTING	COMMENT
Keypad Lock	Menu Item: KEY LOCK Once Selected: LOCKED	Locked Unlocked	Locks the keypad. To unlock; press and release <input type="checkbox"/> M then within 1 second press the option button <i>NOTE:</i> This sequence is also a short cut to locking the keypad.
Backlight Adjust	Menu Item: BCK LIGHT Once Selected: BCKL=	OFF, 1 thru 6	Selects the light level for backlighting.
Contrast Adjust	Menu Item: CONTRAST Once Selected: CNTRST=	1, 2, 3, 4	Selects the display contrast level.
Transmit Power Select	Menu Item: TX POWER Once Selected: POWER=	HIGH or LOW	Selects radio output power mode.
Radio Revision Information	Menu Item: REVISION	N/A	Selects the information display to view. Informational display only (see Table 8-6). <i>No user selectable settings.</i>
Toggle Scan On/Off	SCAN	ON/OFF	Toggles Scan operation ON/OFF.
Toggle Private Mode	PRIVATE	ON/OFF	Toggles Private Mode ON/OFF.
Display Current Encryption Key	DISP KEY	N/A	Displays current encryption key. Informational display only. <i>No selectable settings.</i>
Display Current Home Group/Channel	HOME	N/A	Selects Home Group/Channel
Select Desired System	SYS SEL	N/A	Selects a new system.
Add Group/Channel to Scan List	SCAN ADD	N/A	Adds to Scan List.
Delete Group/Channel	SCAN DEL	N/A	Deletes Group or Channel from Scan List.
Add/Delete Scan List	SCAN A/D	N/A	Add or Delete from Scan List.
Select Telephone Numbers From Phone List	PHN CALL	N/A	Trunked Only.
Data Operation	NO DATA	ON/OFF	Trunked Only. Toggles Data Operation ON/OFF.
Select Individual Call from IC List	IND CALL	N/A	Trunked Only.
Select Group	GRP SEL	N/A	Trunked Only.
Feature Encryption Display	Menu Item: FEATURES	N/A	Indicates current features programmed into the radio as well as certain information required to add features to the radio. <i>Informational display only. No user selectable settings.</i>
System Scan Enable	Menu Item: SYS SCAN Once Selected: SYSC ON or SYSC OFF	ON/OFF	Toggles System Scan feature ON/OFF.

Table 8-6: Information Display

RADIO ID XXXXXXXX	LID in EDACS/EA In CONV it has no meaning.
RAM SIZ	RAM Size
FLSH SIZ	Flash Size
RF BAND	Frequency Band
PERS VER	Software Version
DSP DATE	Date DSP code was built.
DSP TIME	Time DSP code was built.
DSP FEAT	The DSP Features supported by the DSP code, in Hexadecimal. Bit mapped (see IPC spec for details): <ul style="list-style-type: none"> • 0x0001 – Conventional • 0x0002 – EDACS • 0x0010 – AMPF • 0x0020 – undefined
DSP VER	DSP Software Version
FLSH VER	FLASH Software ex: P73U0102 P=portable, 54=5400 radio, U=unencrypted, 01=major revision (>50 means unreleased code), 02=minor revision
HARRIS (C) 2009	Copyright
PERSNLTY	Personality Name
BLD DATE	Date host (ARM) code was built.
BLD TIME	Time host (ARM) code was built.






8.13 BACKLIGHT ADJUST

1. Press **[M]** to access the menu.
2. Press **[v]** or **[^]** to scroll through menu until “BCKLGHT” appears.
3. Press **[M]** to select Backlight menu.
4. Press **[v]** or **[^]** to scroll through available settings OFF, 1 through 6.
5. Press **[M]** to select new backlight setting.



8.14 CONTRAST ADJUST

1. Press **[M]** to access the menu.
2. Press **[v]** or **[^]** to scroll through menu until “CONTRAST” appears.
3. Press **[M]** to select Contrast menu.
4. Press **[v]** or **[^]** to adjust contrast setting from 1 - 4.
5. Press **[M]** to select new contrast setting.

8.15 DECLARING AN EMERGENCY

1. Press and hold the red Emergency/Home button (the length of time is programmable; check with the system administrator).
2. ***TXEMER*** will flash in the display, plus  and  will be displayed. After 2-3 seconds the transmit icon  will turn off.
3. ***TXEMER*** and  will remain until the emergency is cleared. See Section 8.21 for additional emergency operation.
4. Press the PTT and  will reappear.
5. Release PTT when the transmission is complete.

8.16 LOCKING/UNLOCKING KEYPAD





1. Press  button.
2. Within 1 second, press the  button on the side of the radio.

8.17 HIGH/LOW POWER ADJUSTMENT

Transmit power adjustment is possible if enabled through programming. Within conventional systems, transmit power is adjustable on a per channel basis. Within EDACS trunking systems, transmit power is adjustable on a per system basis.

There are two ways to toggle between high and low power, described in Sections 8.17.1 and 8.17.2.

8.17.1 Using the Menu Button

1. Press .
2. Using the  or  keys, scroll until the cursor (>) appears to the left of “TX POWER” in the display.
3. Press  again to toggle between High and Low power.
4. “POWER = HIGH” or “POWER = LOW” will appear momentarily on the top line of the display.

8.17.2 Using the Pre-Programmed Option Button

Press the Option button. “POWER = HIGH” or “POWER = LOW” will appear momentarily on the top line of the display.

8.18 DIGITAL VOICE OPERATION

Digital voice programmed systems have three (3) different voice modes: clear (analog), digital, and private (encrypted). The voice modes are programmed on a per-group basis within each trunked system and on a per-channel basis within each conventional system.

8.18.1 Clear Mode

The Clear Mode is a voice mode in which the radio transmits and receives only clear (analog) voice signals. These analog signals are non-digitized and non-encrypted. Clear mode transmissions can be monitored easily by unauthorized persons.



Groups or channels programmed for clear operation cannot transmit or receive digital or private messages.

8.18.2 Digital Mode

The Digital Mode allows the radio to transmit and receive digitized voice signals. Digital signals provide improved weak signal performance and cannot be easily monitored with a standard receiver. Groups or channels programmed for digital operation transmit only digital signals. Message trunked group calls and individual phone calls (I-Calls) are answered back in the mode in which they were received assuming the call or hang time is still active. Individual phone, all call, and emergency calls are transmitted clear if the digital mode is disabled or inoperative.



1. If receiving an analog message trunked call, the radio responds in the analog mode during the hang time on the working channel.
2. If receiving an analog I-Call, the radio responds in the analog mode during the hang time.
3. When using the ***WHC*** feature to respond to an I-Call (after the hang time has expired), the call is transmitted in the mode defined by the system mode as programmed for the current system if the ID being called is not in the I-Call list. If the ID is in the I-Call list, then the call is transmitted as defined by the I-Call mode programmed in the list for that ID.

The over dial DTMF tones are not available while in the Digital Mode.

8.18.3 Private Mode

The Private Mode allows the radio to transmit encrypted messages and receive clear or private transmissions. The radio transmits private if the group/channel is programmed for private operation and forced operation is pre-programmed. If auto-select operation is pre-programmed and the radio is in the Private Mode, the radio transmits in the mode of the received call if the hang time is active. If no hang time is active, the radio transmits private.

Cryptographic keys are transferred to the radio using a cryptographic Keyloader. Up to seven (7) different cryptographic keys, numbered 1-7, can be transferred from a Keyloader and stored in the radio. An individual key is automatically selected on a per-group/channel basis according to the radio programming. Groups and channels within the digital system can be programmed for keys 1-7 (private). Up to 8 banks of 7 keys can be stored for private systems. The bank is specified per system.

When operating on a group or channel programmed for Private Mode, all transmissions are private transmissions and the radio receives clear and private signals. The status icon  is displayed when the Private Mode is enabled. If the selected group or channel is programmed for auto-select capability, the mode may be toggled between private and clear with the  key, then following the selection mode rules. Radios programmed for forced private operation do not allow a change of the transmit mode.

8.18.3.1 Displaying the Currently Used Cryptographic Key Number

To display the Currently Used Cryptographic Key Number for either the system encryption key (for special call such as individual, phone, all, agency or fleet) or the group/channel key (for group or conventional calls), perform the following procedure:

1. Press the **[M]** button.
2. Use the **[▲]** or **[▼]** button to select "DISP KEY."
3. Use the **[▲]** or **[▼]** button to toggle between displaying the system key (Figure 8-9) or the group/channel key (Figure 8-10).

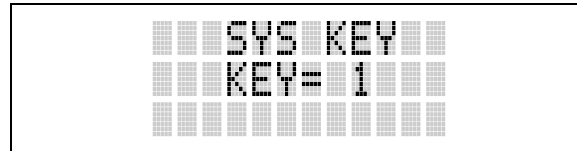


Figure 8-9: System Encryption Key Display

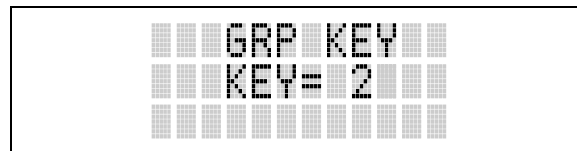


Figure 8-10: Group/Channel Encryption Key Display

8.18.3.2 Key Zero

All cryptographic keys can be zeroed (erased from radio memory) by pressing the **[Ⓞ]** button and while still pressing this button, press and hold the OPTION button. Press both buttons for 2 seconds. A series of beeps will begin at the start of the 2 second period and then switch to a solid tone after the keys have been zeroed. The display will indicate **KEY ZERO**.

If the cryptographic key(s) are zeroed, one or more keys must be transferred from the Keyloader into the radio before private communications may continue.

8.18.4 Private Operation

8.18.4.1 Receiving an Encrypted Call

When receiving, the radio automatically switches between clear or private operation. If the transmission being received is an encrypted transmission, it will be decrypted, the **[🔒]** icon will be displayed, the receiver will unscquelch, and the message will be heard in the speaker. For this to occur, the selected group or channel must be programmed for private operation and the correct cryptographic key must be loaded into the radio.

8.18.4.2 Transmitting an Encrypted Call

1. Select the desired group or channel.
2. Place the radio in Private Mode by pressing **[M]** key; then follow the selection mode rules. On a System radio, the **[4^{OFF}]** key can be used to toggle the Private Mode ON/OFF. When Private Mode is enabled, the **[🔒]** icon is displayed.

3. If the last state of the radio was Private Mode, the Private Mode will be enabled on power up. Also, the Private Mode will be enabled if forced operation has been programmed in the radio.

If a group or channel is not programmed for Private Mode operation, **PVT DIS** will be displayed if an attempt is made to enable private transmit mode. It is not possible to operate on this group/channel in Private Mode.

If the radio does not have the correct encryption key loaded, **NO KEY#** will be displayed and the call will not be transmitted.

4. Continue with standard transmission procedures. A Private Mode access tone will be heard when the PTT button is pressed.

8.18.4.3 Scanned Group Calls

Receiving a Scanned Group Call is the same as receiving a selected group call. During the scan hang time, if the radio was programmed for auto-select, it will transmit back in the same mode it received the call. For example, if a clear group is entered in the scan list, it will only receive clear calls. If the same group was available in private and entered in the scan list, it can receive clear and private calls, provided auto-select was programmed in the radio. The user can select transmitting on the scanned or selected group. If a group is entered in the scan list more than once and under different modes, (clear, digital, or private), then only the first occurrence of the group will be used.

Table 8-7: Transmit/Receive Mode Compatibility for Digital Voice Operation

GROUP/CHANNEL PROGRAMMING (TRANSMIT)	CLEAR RECEIVE	DIGITAL RECEIVE	PRIVATE RECEIVE
CLEAR	Yes	No	No
DIGITAL	Yes	Yes	No
PRIVATE	Yes	No	Yes*

*assumes the proper cryptographic key is loaded



NOTE

Conventional digital or encrypted channels require Channel Guard on the channel to operate correctly.









NOTE

The voice coding technology embodied in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The user of this technology is explicitly prohibited from attempting to de-compile, reverse engineer, or to disassemble the Object Code, or in any other way convert the Object Code into a human-readable form.

8.19 SCANNING TRUNKED GROUPS














Groups that have been previously added to the scan list on a per system basis may be scanned. Each system's group scan list is retained in memory when the radio is powered OFF or when the battery pack is removed.

8.19.1 Turning Scan On and Off

1. Toggle Scan operation ON by pressing  (P7350 model) or  (P7370 model).  icon rotates clockwise to indicate radio is scanning.
2. Toggle Scan operation OFF by again pressing  (P7350 model) or  (P7370 model).  will disappear.
 - If the radio scans to a group other than the selected group then receives a call on the selected group, the radio will switch to the selected group. However, if the “scanned-to” group is programmed at a higher priority the radio will remain on the “scanned-to” group.
 - The radio will continue scanning if a new group is selected when scan is ON.
3. Pressing the PTT button when scan is ON will cause the radio to transmit on the displayed group or to the currently selected group (depending on programming).

8.19.2 Adding Groups to a Scan List

P7350 Model Radio


1. Scan must be OFF to add/delete groups to/from the scan list. If the Scan icon  is ON, press the  key to turn Scan OFF.
2. Select the desired group using the System/Group/Channel control knob and/or the  or  keys. If the selected group is currently on the list, pressing  will display  on line three.
3. If the scan list status icon is blank () , the group can be added to the scan list by pressing the  key.  will be displayed on line three.
4. Press the  key a second time to set the group to Priority 2. A  is displayed on line three.
5. Press  a third time to set the group to Priority 1. A  is displayed on line three. The priority level section sequence only advances the group to the next high priority level and stops at priority level 1. To select a lower priority level, the group must be deleted from the scan list and then added back to the scan list. Each new group added to the scan list starts at the lowest priority. If the Priority 1 and Priority 2 groups are already set and a new group is assigned as Priority 1 or Priority 2, the previously assigned group will change to non-priority scanning. One of the following messages may be momentarily displayed.

SCAN DIS The radio is not programmed to scan.

FIXED P1 A Priority 1 group has been pre-programmed into the radio. A new Priority 1 group cannot be selected.

FIXD LST A fixed scan list has been pre-programmed into the radio. It is not possible to change the list without reprogramming the radio.



To quickly view multiple group scan status, press  then slowly but consistently rotate the group knob. Each group status will appear on the display.

P7370 Model Radio

1. With scan operation turned OFF, select the desired group to add to the selected trunked system group scan list.
2. Press **[6 ADD]**. The current priority status of the group will be displayed in column 10 of line three for a time-out period. If the group is not part of the scan list, the status will be blank.
3. While the status is displayed, press **[6 ADD]** to add the group to the scan list. **[111]** is displayed on line three.
4. Press **[6 ADD]** a second time to set the group to Priority 2. A **[11]** is displayed on line three.
5. Press **[6 ADD]** a third time to set the group to Priority 1. A **[1]** is displayed on line three. The priority level selection sequence only advances the group to next higher priority level and stops at priority level 1. To select a lower priority level, the group must be deleted from the scan list and then added back to the scan list. Each new group added to the scan list starts at the lowest priority. If the Priority 1 and Priority 2 groups are already set and a new group is assigned as Priority 1 or Priority 2, the previously assigned group will change to non-priority scanning. One of the following messages may be momentarily displayed.

SCAN DIS The radio is not programmed to scan.

FIXED P1 A Priority 1 group has been pre-programmed into the radio. A new Priority 1 group cannot be selected.

FIXD LST A fixed scan list has been pre-programmed into the radio. It is not possible to change the list without reprogramming the radio.



NOTE

To quickly view multiple group scan status, press either **[6 ADD]** or the **[9 DEL]** key. Then slowly but consistently rotate the group knob. Each group status will appear on the display.

8.19.3 Deleting Groups from a Scan List

P7350 Model Radio

1. With scan operation turned OFF, select the desired group to delete from the selected trunked system group scan list.
2. Press **[A/D]**. The current status of the group is displayed for a time-out period.
3. While the current status is displayed, press **[A/D]** until the group from the scan list is "**blank**." The sequence is "**blank**," **[111]**, **[11]**, **[1]**, "**blank**." Any group that is not in a trunked system group scan list will show a "**blank**" for the time-out period when it is the selected channel.

P7370 Model Radio

1. With scan operation turned OFF, select the desired group to delete from the selected trunked system's group scan list.
2. Press **[9 DEL]**. The current status of the group is displayed for a time-out period.
3. While the status is displayed, press **[9 DEL]** to delete the group from the scan list. **[111]**, **[11]**, or **[1]** turns OFF. Any group that is not in a trunked system group scan list will show a "**blank**" for the time out period when it is the selected channel.

8.19.4 Nuisance Delete

A group can also be deleted from the scan list, if it is not the currently selected group, by pressing the **[A/D]** key (P7350 model) or the **[9%z]** key (P7370 model) during scan operation while the radio is displaying the unwanted group. The group will be deleted from the system's group scan list in the same manner as if done using the steps above. Deletions done in this manner will not remain deleted if the radio is powered OFF and then powered ON.

8.20 SCANNING TRUNKED SYSTEMS

The radio can be programmed using Radio Personality Manager (RPM) with the following System Scan features. Then these features are automatically enabled when the radio is powered ON. A key or menu option is also defined to allow the System Scan features to be toggled during radio operation. The System Scan state will be maintained through system changes but will default to ON when the radio is powered ON.

Enable/Disable via Menu Selection

Press **[M]** and then use the **[v]** or **[^]** buttons to scroll through the selections until **SYS SCAN** is displayed. Then press **[M]** to toggle the System Scan state. The **SYSC ON** or **SYSC OFF** display message is displayed for two seconds to show the new state.

Enable/Disable via Pre-Programmed Keypad Key

Press the key pre-programmed to toggle System Scan and the **SYSC ON** or **SYSC OFF** display message is displayed for two seconds to show the new state.

8.20.1 Wide Area System Scanning

The P7300 series radio can be pre-programmed through RPM for Wide Area System Scan operation for roaming across mobile systems. EDACS radio systems manage the radios assigned to the system via a control channel (CC). Upon the loss of the currently selected system's control channel, radios can be programmed to automatically scan the control channels of other systems. If a new control channel is found, the radio will switch to the new system and sound an alert tone.

8.20.2 Priority System Scan

The radio can also be pre-programmed for Priority System Scan. The priority system is the desired or preferred system. While receiving the control channel of the selected system, the radio will periodically leave the selected system and search for the control channel of the priority system. This is done at a pre-programmed rate defined by the value in the Priority Scan Time control, unless the ProScan™ algorithm is enabled, as explained in the following sections. This priority scan timer is reset each time the PTT button is pressed or when the call is received. If the priority system control channel is found, or meets the predefined criteria (ProScan), the radio will automatically switch to the priority system.

8.20.2.1 Enabling the Wide Area System Scan Function

If the radio cannot find the control channel of the selected system and begins to wide area system scan, the radio will only scan for the priority system control channel if the priority system is in the wide area scan list.

8.20.2.2 When ProScan is Enabled

The radio monitors the priority system and will switch to the priority system if the pre-programmed criteria ProScan options are met. If ProScan is enabled, the rate at which the radio will scan for the priority system is defined by the System Sample Time control, set in RPM, (refer to RPM On-Line Help). See Section 8.20.3 for more information on ProScan.


8.20.3 ProScan

The radio may be programmed for ProScan system scan operation for multi-site applications. ProScan is a multi-site system scanning algorithm. ProScan provides the radio with the ability to select a new system for the radio to communicate on, when the selected system drops below a predefined level. This algorithm enables each radio to analyze the signal quality of its current control channel and compare it with the signal quality of the control channel for each site in its adjacent scan list. The signal quality metric used for the ProScan algorithm is based on a combination of both **Received Signal Strength Indicator (RSSI)** and **Control Channel Verification (CCV)** measurements. When the selected system degrades to a pre-programmed level, the radio will begin to look for a better control channel. Once a control channel that exceeds the pre-programmed parameters is found, the radio will change to the new system and emit a tone (if enabled through programming). If the control channel is completely lost, the radio will enter Wide Area System scanning and search the programmed adjacent systems until a suitable control channel is found.

8.21 EMERGENCY OPERATION



The radio's ability to declare an emergency, clear an emergency, remain locked on an emergency system and group, and the emergency audio and display freeze can each be enabled or disabled through programming. When an emergency is declared scanning will stop and restarts only after the emergency has been cleared.



8.21.1 Receiving an Emergency Call

When receiving an Emergency Call on the selected group and system, an alert beep is heard and  is displayed. The message ***RXEMER*** flashes in the display on line two until the emergency condition is cleared.

8.21.2 Declaring an Emergency Call

Perform the following steps to send an emergency call to a selected system and group (or on an optionally pre-programmed group).

1. Press and hold the red EMERGENCY button that is on top of the radio in front of the antenna for approximately one second (this time is programmable and therefore could be longer or shorter; check with the system administrator). The radio will transmit an emergency call request with the radio ID until an emergency channel assignment is received.
2. When the working channel assignment is received, the radio sounds a single beep indicating the radio has auto keyed (see Table 8-4) and is ready for voice transmission. ***TXEMER*** flashes on line two in the display until the emergency is cleared.
3. Press PTT and speak into the microphone in a normal voice.  and  momentarily turn ON.
4. Release PTT when the transmission is complete.

To clear the emergency, first press and hold the  button. While continuing to hold the  button, press the EMERGENCY button. (This will work if the radio is programmed to clear emergencies.)

8.22 INDIVIDUAL CALLS

8.22.1 Receiving and Responding to an Individual Call

When the radio receives an individual call (a call directed only to the user's radio), it un-mutes on the assigned working channel and displays **II**. The first line on the display shows the logical ID number of the unit sending the message, or the associated name if the ID number is found in the individual call list. The radio can be programmed to ring when an individual call is received. If enabled, the ring begins five seconds after the caller un-keys and will continue until the PTT button, the **Ⓢ** button or the individual call mode is entered.



NOTE

The volume of the ring is adjustable through the volume control levels.

If a response is made by pressing the PTT to the call prior to the programmed call-back time-out, the call will automatically be directed to the originating unit. If a response is not made before the call-back time-out, the radio will return to normal receive display, and ***WHC*** will appear on the first line of the LCD.

To respond after the call-back time-out, press the **(#^{IND})** key. The radio's display will show the callers ID on the first line and **WHCI=1** on the second line. Pressing the PTT button at this point will initiate an individual call back to the original caller.

The radio stores the IDs of the last 10 callers in the Calls Received List as shown. Individual calls are stored in the top half of the list (1-10) and Group calls are stored in the bottom half of the list (1-10). The most recent call is stored in position 1, the second most recent call is stored in position 2, etc.

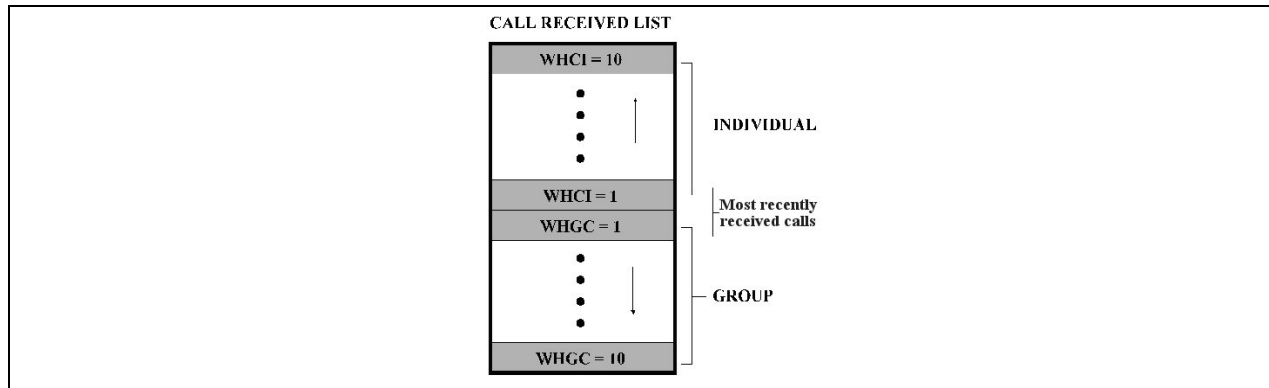


Figure 8-11: Calls Received Lists

To access the Calls Received List, press the **(#^{IND})** key twice. Use the **(▼)** or **(▲)** buttons to scroll through the list. Pressing the **(M)** key will display the time elapsed since the call was received. After pressing **(#^{IND})** the display will appear similar to Figure 8-12.

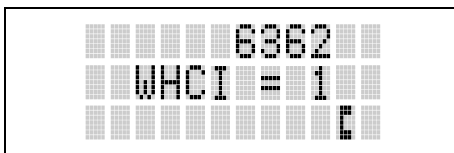


Figure 8-12: WHC Individual Call Display

Pressing the PTT will initiate an individual call to the displayed logical ID. Powering the radio OFF and ON will clear this list.

8.22.2 Sending an Individual Call

8.22.2.1 Pre-Stored Individual Calls

The following procedures describe how to initiate and complete a Pre-Stored Individual Call.

P7370 Model Radio

1. To select a pre-stored individual phone number, enter the individual call mode using the (#^{IND}) key. is displayed. Then scroll through the list of stored numbers using the (▼) or (▲) keys.
2. Press the PTT button; when the radio is clear to transmit, turns ON, turns OFF, and the channel access tone sounds. Line one shows the called individual's name if found in the list of stored individuals or *LID* followed by the logical ID number of the unit being called. The message ***INDU*** displays on line two.

P7350 Model Radio

1. To select a pre-stored individual number, enter the menu mode by pressing the (M) key. Scroll through the mode list using the (▼) or (▲) buttons.
2. Press (M). is displayed. Scroll through the list of stored phone numbers using the (▼) or (▲) buttons until the desired number is displayed. Press (M).
3. Press the PTT button; when the radio is clear to transmit turns ON, turns OFF, and the channel access tone sounds. Line one shows the called individual's name or LID. The message ***INDU*** displays on line two.

8.22.2.2 Direct Dial Individual Calls (P7370 Model Only)

1. The following procedure describes how to initiate and complete a Direct Dial Individual Call.
2. The individual call ID is not stored in the pre-stored list of call IDs but the individual unit ID is known, it can be entered directly from the keypad.
3. Press and hold the PTT button to transmit. will turn ON, will turn OFF, and the channel access tone will sound. Line one shows the called individual's ID followed by the logical ID number of the unit being called. The message ***INDU*** displays on line two. Proceed talking into the microphone.

8.22.3 Call Storage Lists

There are two lists available for call storage in the P7300 series radios, the **calls received** list (1 - 10) and the **personality** list (1 - 99 as defined by the user). When the individual call mode is entered by pressing (#^{IND}), the **calls received** list is available. The user can toggle to the personality list by selecting any index

other than 0 or toggle between the two lists by pressing the **#** key. If wrap is enabled, the **calls received** list wraps on itself and not into the other list.

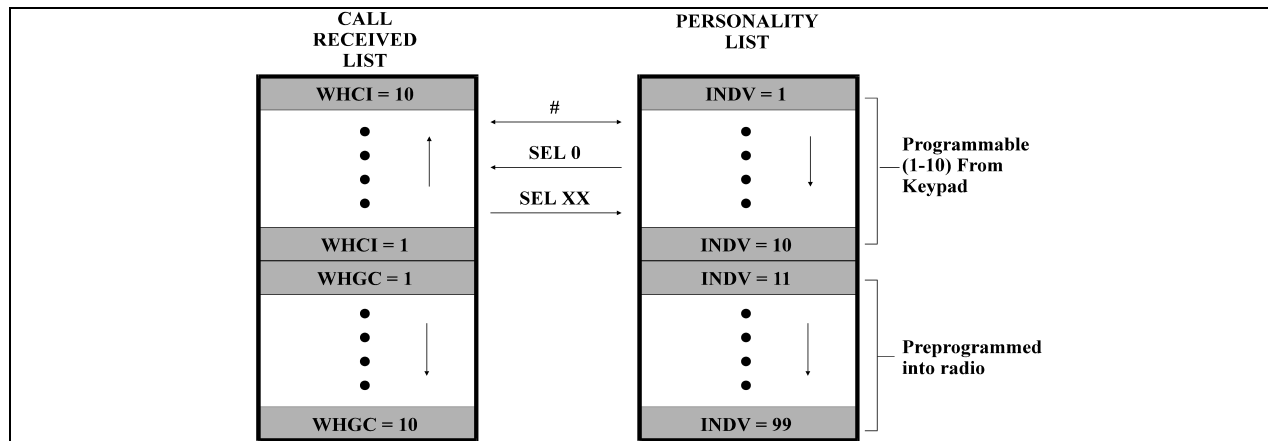


Figure 8-13: Calls Received and Personality Lists

The saved call list shows all ten storage locations. If no calls have been received, the saved call list will be empty and the pre-stored list will be available upon entering the individual call mode.

When in the saved call list, pressing the **M** key toggles the time stamp ON and OFF. The time stamp indicates how long ago the call was received. When in the pre-stored list pressing the **M** key toggles the Logical *ID*entification (*LID*) ON and OFF.

8.23 TELEPHONE INTERCONNECT CALLS

8.23.1 Receiving a Telephone Interconnect Call

When the radio receives a telephone interconnect call (a call directed only to the user's radio), it un-mutes on the assigned working channel and displays **☎**. The first line displays ***PHONE***. The second line displays ***INDV***. Proceed with the call. Press the PTT to talk, release the PTT to listen.

8.23.2 Sending a Telephone Interconnect Call


8.23.2.1 Pre-Stored Number

Use the following procedures to initiate and complete a Telephone Interconnect call.

1. **P7370 Model:** To select a previously stored phone number, press the ***PIN** key. Use the **▼** or **▲** buttons to scroll through the list of stored numbers.

P7350 Model: To select a previously stored phone number, press the **M** key. Use the **▼** or **▲** buttons to select the menu option **PHN CALL**. Press the **M** key again then use the **▼** or **▲** buttons to scroll through the list of pre-stored numbers.

2. Press and release the PTT button. When the radio is clear to transmit, **☎** turns ON, **☎** turns OFF, and the channel access tone sounds. Line one shows the accompanying name selected from the list of stored numbers. The message ***PHONE*** appears on line two of the display. The radio then automatically transmits the programmed number stored in the special call queue.
3. A telephone ring will be heard from the speaker. When someone answers the phone, press the PTT button and speak into the microphone. Release the PTT button to listen to the callee. Unsuccessful


interconnect signaling returns the radio to the normal receive mode and the number remains displayed until the special call is cleared or the time-out expires or another group or system is selected. Terminate a call by pressing the  button.



NOTE


In half-duplex mode, only one person may talk at a time. The radio PTT button needs to be pressed in order to communicate to the individual called and released for the individual called to be heard.


8.23.2.2 Direct Dialing of Phone Calls (P7370 Model Only)

1. If the phone number is not stored in the pre-stored list of phone numbers, but the phone number is known, it can be entered directly from the keypad. Start by pressing the  key, then enter the required number from the keypad. Press and release the PTT button.



NOTE


The last number directly entered can be recalled by first pressing  then pressing the PTT button.

2. A telephone ring can be heard from the speaker. When someone answers the phone, press and hold the PTT button and speak into the microphone. Release the PTT button to listen to the individual called. Unsuccessful interconnect signaling returns the radio to the normal receive mode and the number remains displayed until the special call is cleared or the time-out expires or another group or system is selected.
3. To terminate the call, momentarily press the  button.





8.23.3 Dual-Tone Multi-Frequency: Overdial/Conventional Mode

Once the radio has established a connection to the public telephone system, it may be necessary to “overdial” more digits to access banking services, answering machines, credit card calls, or other types of systems that require Dual-Tone Multi-Frequency (DTMF) access digits.

Overdial operation can also be used to initiate a telephone interconnect call via DTMF signaling if a dial tone has already been accessed on the system. This method makes a telephone interconnect call while operating in the conventional mode but will also function in trunked mode if a dial tone is directly accessible.

Telephone numbers and other number sequences for overdialing can be stored in the phone list when programming the radio. These numbers are accessed by pressing the  key, then following the selection mode rules. Perform the following procedures to access and dial these stored numbers.

P7350 Model Radio

1. Follow the procedure in Section 8.23.2 to establish a connection to the telephone system or consult the system administrator for the procedure to access a dial tone on the trunked or conventional system.
2. Enter selection mode first to enable entry of Overdial numbers by pressing the  button.
3. Follow the selection mode rules to call up a stored number from the phone list: Use the  or  buttons to scroll through the list of stored numbers.  is displayed. Press the PTT to send the overdial sequence once. If the number needs to be transmitted again it must be selected or entered again (this prevents unwanted numbers from being sent the next time the PTT button is pressed during the call).

Overdial select/entry mode remains active until the call is dropped, cleared, or **[M]** is pressed. The overdial select/entry mode can be re-entered if the call is still active by pressing **[M]**.

P7370 Model Radio

1. Follow the procedure in Section 8.23.2 to establish a connection to the telephone system or consult the system administrator for the procedure to access a dial tone on the trunked or conventional system.
2. Overdial numbers are transmitted using one of the following methods:

- METHOD 1:
1. Enter the overdial selection mode by pressing the **[* PHN]** button.
 2. Use the **[▼]** or **[▲]** buttons to scroll through the list of stored numbers. **[]** is displayed. Press the PTT to send the overdial sequence once. If the number needs to be transmitted again it must be selected or entered again (this prevents unwanted numbers from being sent the next time the PTT button is pressed during the call).

Overdial select/entry mode remains active until the call is dropped, cleared, or **[M]** is pressed. The overdial select/entry mode can be re-entered if the call is still active by pressing **[M]**.

METHOD 2: **(P7370 model radios only)**

1. Enter the overdial selection mode by pressing the **[* PHN]** button.
2. Press and hold the PTT button while entering the overdial number sequence from the keypad. This method sends DTMF tones during individual, telephone interconnect, trunked group, or conventional channel calls. Press the PTT to send the overdial sequence once. If the number needs to be transmitted again it must be selected or entered again (this prevents unwanted numbers from being sent the next time the PTT button is pressed during the call). *Note: Anytime the PTT button is pressed and held, the keypad is enabled for DTMF entry.*

Overdial select/entry mode remains active until the call is dropped, cleared, or **[M]** is pressed. The overdial select/entry mode can be re-entered if the call is still active by pressing **[M]**.

This overdial select/entry mode remains active until dropped, cleared, or **[M]** is pressed. The overdial select/entry mode can be re-entered if the call is still active by pressing the **[* PHN]** button.

8.24 PROGRAMMABLE ENTRIES

8.24.1 Pre-Storing Individual and Telephone Interconnect Calls from the Keypad

Individual Call ID numbers, telephone numbers, and other number sequences for overdialing are stored in the special calls lists when programming the radio. The first ten entry locations of these lists can be changed by the radio operator. The keypad is used when adding, changing, and storing numbers in these entry locations.

Use the following procedure to store a number in one of the first ten entries of a special call list:

1. Press the **[# IND]** or **[* PHN]** button to enter the individual call list or the phone call list. **[]** is displayed.
2. Scroll through the list using the **[▼]** or **[▲]** keys until one of the first ten entries is reached. **NO ENTRY** is displayed if the location is empty.

3. Enter the desired number. If necessary, a pause can be entered by pressing and holding 0-9, (#^{NO}), or (*^{PN}) until an underscore appears in the display (telephone interconnect only). The individual call list entries will accept up to 5 digits. The phone call list entries accept a combination of up to 31 digits and pauses.
4. Press and hold the (M) key until the display changes indicating that the number has been stored.

Repeat steps 1-4 to store additional numbers, to change numbers already stored, or to change the storage location of a number.

8.25 STATUS/MESSAGE OPERATION

The **Status** and **Message** operations allow for the transmission of a *pre-programmed status* or a *pre-programmed message* to an EDACS site. Each Status and Message is assigned an ID then cross-referenced with the representative status condition (“Off Duty,” for example) or a message (“Call home”). In addition, Status conditions can also be associated with a programmable Menu entry (required for second method of transmitting a Status condition (see Section 8.25.1).

8.25.1 Status Operation

P7370 Model Radio

One of two methods can be used to transmit a status condition.

- METHOD 1:
1. Press the (M) key, then use the (▼) or (▲) buttons to scroll to the pre-programmed status condition. STATUS and 0 through 9 pre-programmed status selections are available from the menu.
 2. If STATUS is selected, you need to enter the number of the status condition you intend to transmit. If no status has been programmed for the selected number key, the radio will display **NO ENTRY**. A valid selection will display the status for a pre-programmed time.

After the time-out expires or the (M) key has been pressed (the (M) key will override the time-out period), the status is selected and will be transmitted to the site or stored in the radio memory where it can be polled by the site at a future time.

- METHOD 2:
1. Press the (7^{RTS} / 9^{PHS}) key.
 2. Press the corresponding pre-programmed 0 through 9 status condition key. If no status has been programmed for the selected number key, the radio will display **NO ENTRY**. A valid selection will permit the status condition to appear in the top line of the display and the status ID to appear in the second line of the display for a pre-programmed time.


After the time-out expires or the (M) key has been pressed (the (M) key will override the time-out period), the status is selected and will be transmitted to the site or stored in the radio memory where it can be polled by the site at a future time.


View the currently selected status after it has been transmitted by pressing the (M) key and then the (M) key and then the (⊙) button prior to the time-out period. If the status was not sent successfully to the site, the text associated with the status condition will flash in the display.

The status selection can be changed by pressing a different status key 0 through 9, or the status operation can be cancelled by pressing Option Button 2 (⊙). Both operations must be carried out prior to the time-out period.

8.25.2 Message Operation


The following method can be used to transmit a Message using the Message Operation.



1. Press the  key.
2. Press the corresponding pre-programmed 0 through 9 pre-programmed "message" key. If no message has been programmed for the selected number key, the radio will display **NO ENTRY**. A valid selection will permit the message to appear in the top line of the display and the message ID to appear in the second line of the display for a pre-programmed time.

The message selection can be changed by pressing a different message key 0 through 9, or the message operation can be cancelled by pressing Option Button 2 . Both operations must be carried out prior to the pre-programmed time-out period.

8.26 DYNAMIC REGROUP OPERATION

Dynamic Regroup Operation permits multiple talk groups (up to eight) to be added to a radio via the system manager. The radio must be pre-programmed to respond to regrouping. Dynamic regrouping will not be activated in a radio until the system manager sends an activation message. Each radio that receives and acknowledges the regrouping instructions is successfully regrouped.

Pressing and holding the  button for 2.5 seconds toggles the user into and out of the dynamic regroup groupset. A double beep will sound for entry or exit. The display will indicate **REGRP_0x** where "x" is a digit of 1 to 8 indicating the group (when dynamic regroup has been enabled by the user). If the radio is in dynamic regroup and the user selects a group that has not been regrouped, the display will show **NO ENTRY**. The radio will be prevented from transmitting and receiving calls in this condition except for scanned groups.

After the time-out expires or the  key has been pressed (the  key will override the time-out period), the status is selected and will be transmitted to the site or stored in the radio memory where it can be polled by the site at a future time.

8.26.1 Emergency Operation

If the pre-programmed groupset on the currently selected system contains an EMER/HOME group and the radio is in dynamic regroup, the radio will declare the emergency on the currently selected dynamic group.

8.27 MACRO KEY OPERATION

Macro key operation permits the user to accomplish a series of keystrokes with a single "macro" keystroke. Each Macro Key is capable of executing up to twenty (20) keystrokes, to any push button input (i.e., keypad keys, OPTION buttons, etc.). Each macro key can be pre-programmed to activate when pressed or when released.

A macro key may also be pre-programmed to change the key stroke sequence the next time the macro key is activated.

For detailed operation and assignment of macro keys, contact your communications supervisor or administrator.

8.28 PORTABLE DATA

The P7300 series portable radios, when operating in the EDACS Trunked configuration, permit both voice and data calls to be transmitted and received. The radio can handle only one type of call at a time;

however, either data or voice is selected transparently by the operator through normal usage of the radio. Data communications is not supported in conventional mode.

The radios can be connected to a Mobile Data Terminal (MDT) or to a host computer. Any RS-232 compatible device that supports the Radio Data Interface (RDI) protocol (Version 1.91 or greater) may be connected to the radio. Support for MDTs or host computers is a programmable option per radio. Additionally, radios may also be programmed for data only operation (no voice calls transmitted or received).

8.28.1 Displays

The following will be displayed during the various states of data mode of operation:

- | | |
|-----------------|---|
| TX DATA | Appears on top line of display when the radio is transmitting a data call. |
| RX DATA | Appears on top line of display when the radio is receiving a data call. |
| DATA OFF | Appears on top line of display when the radio is in the data disabled state. |
| DATA ON | Appears for two seconds on top line of display when the radio is toggled to the data enabled state. |

8.28.2 DATA OFF Operation

The radio can be placed in the data disabled state by any of the following methods. When the data state is disabled, **DATA OFF** appears on the top line of the display.

- Declaring an emergency (not to be used unless an actual emergency condition exists). Alert tone will sound.
- Pressing Option Button 1 \bigcirc (if pre-programmed as “no data” key). Alert tone will sound.
- Pressing the pre-programmed “no data” (ND) key. Refer to previous bullet.

8.28.3 DATA ON Operation

The data state is enabled by one of the following (depending on how it was disabled). **DATA ON** will appear on the top line in the display for two seconds then the display will return to normal.

- Pressing the pre-programmed “no data” (ND) key toggles data state ON or OFF.
- Clearing an emergency. *This is valid only if the emergency caused “DATA OFF” operation.*

8.28.4 Exiting Data Calls




Under normal conditions, the radio enters the scan lockout mode and returns to the control channel after completion of a data call (transmit or receive). If, during a data call, one of the following operations occurs, the data call is immediately terminated and the radio performs the desired function:

- If the PTT is activated.
- If an Emergency is declared by pressing the pre-programmed emergency button.
- If a group or system is changed.

8.28.5 Scan Lockout Mode

Following the transmission or reception of a data call, if scan is enabled, scanning will stop temporarily. There are two independent pre-programmed times associated with this mode; one after a received data

call and one after a transmitted data call. During this time the scan indicator will flash to indicate that scan is enabled but temporarily suspended. This condition typically returns to normal scan operation when the pre-programmed time expires; however, the following operations and conditions will terminate the scan lockout mode before the timeout has expired.

- Press the  button.
- Press the PTT.
- Change a group or system.
- Enter Telephone Interconnect mode.
- Enter Individual call mode.
- Receive a new emergency assignment.
- Declare or clear an emergency.
- Receive an individual or phone call.
- Receive an Agency, Fleet, or System All Call.
- Press  (P7350 model) or  (P7370 model) to toggle Scan ON or OFF.

8.28.6 Data Lockout Mode

During the voice call scan hang time (pre-programmed) the radio does not receive data calls.

This page intentionally left blank

OPENSKY OPERATION

9 OPENSKY OPERATION

Once an OpenSky system has been selected from the available systems on your P7300 series portable radio, the characteristics described in the following sections will govern operation.

9.1 CONTROLS

The P7300 portable radio features two rotary control knobs, an emergency button, and a dual-position A/B switch located on the top of the radio. Refer to Figure 7-2. The Push-To-Talk (PTT) button and two option buttons are located to the left side of the radio keypad, see Figure 7-3. The front mounted keypad of the P7370 “System” model has 15 buttons and the P7350 “Scan” model has six buttons. Refer to Figure 7-4 and Figure 7-5, respectively.

9.1.1 Buttons and Knobs























The function of the button and knob controls will vary depending on the mode of operation. The primary functions of the button and knob controls when in the OpenSky mode of operation are listed in the following paragraphs.

POWER ON-OFF VOLUME KNOB	<p>Applies power to the radio and adjusts audio volume.</p> <p>Rotating the control clockwise applies power to the radio. A single alert tone (if enabled through programming) indicates the radio is operational.</p> <p>Rotating the control clockwise increases the volume level. While adjusting the volume the display will momentarily indicate the volume level (i.e. VOL=31). The volume range is from a minimum programmed level of zero (displayed as MUTE in the display) up to 40, which is the loudest level.</p>
VOICE GROUP SELECTION KNOB	<p>Used to select voice groups when operating within an OpenSky system. This is a 16-position rotary knob.</p> <p>A mechanical stop, which can limit the number of positions accessed, is shipped with the radio but must be installed. To install the mechanical stop, remove the voice group selection knob, loosen the set screw on the voice group selection knob metal base (using a 1.27 mm hex wrench), and remove the voice group selection knob metal base. Replace the 16 channel ring with the channel stop ring located at the desired channel. Re-install the voice group selection knob metal base, tighten the set screw, and re-install the voice group selection knob.</p>
EMERGENCY BUTTON	<p>Press to declare an emergency. To clear an emergency, press and hold Option 2 button Ⓞ. While holding Ⓞ, press the emergency button. Release both buttons when the “emergency cleared” tone sounds.</p>
PTT BUTTON	<p>The Push-To-Talk button must be pressed before voice transmission begins.</p>
SIDE OPTION BUTTON 1 Ⓞ	<p>Scrolls UP or DOWN thru available items within a sub-menu, such as available talk groups, pre-programmed speed dial numbers, canned alert messages, etc.</p>
SIDE OPTION BUTTON 2 Ⓞ	

9.1.2 Keypad

The keys on the keypad have special functions and are labeled using a symbol or abbreviated word describing its primary function. Numeric entry is a secondary function of the keys. Each key is described in Table 9-1.

Table 9-1: Keypad Functions

KEY	FUNCTION
	Primary function: Acts much as an “enter” button to activate a selection. Secondary function: While in the “dwell display,” press repeatedly to scroll through and view status display (on 2 nd line) for current profile, caller, received talk group, and channel.
 	Scrolls thru available menu items (see Table 9-4).
 (P7350 only)	Undefined in OTP mode.
 (P7350 only)	Toggles SCAN operation ON and OFF.
 (P7350 only)	Undefined in OTP mode.
            (P7370 Only)	The alpha-numeric keys are used to place telephone interconnect and individual (unit-to-unit) calls. The keys operate like a normal telephone keypad. Also used to enter passwords for logging into the OpenSky network, if not pre-configured for automatic registration at power-up.
 (P7370 Only)	 Initiates OpenSky functions (log in, log out, selective call, telephone interconnect call, etc.). See page 76 for additional information. It is also used as an escape or to clear an entry (something like backspace, but it clears everything and not only the last digit/character).
 (P7370 Only)	 Used in conjunction with alpha-numeric keys for passwords and OpenSky functions. See page 76 for additional information.

9.2 RADIO STATUS ICONS

Status Icons indicate the various operating characteristics of the radio. The icons show operating modes and conditions and appear on the third line of the display (see Table 9-2).

Table 9-2: Status Icons Descriptions

OPENSky ICONS	
	Steady – Received Signal Strength Indicator (RSSI). Appears in the 1 st and 2 nd position of the display in OpenSky mode.
	Steady – Radio is data registered. Appears in the 3 rd position of the display in OpenSky mode.
	Steady – Stealth mode is enabled, all tones and the display backlight are disabled, voice is still heard. Appears in the 4 th position of the display in OpenSky mode.
	Steady - Radio is transmitting or receiving an encrypted voice call. Appears in the 6 th position of the display.
	Animated – The radio is scanning for a VTAC. Once the radio has attached to a VTAC, the icon will turn off. The icon appears in the 7 th position of the display in OpenSky mode.
	VTAC Connection Indicator – Indicates the client is connected to a VTAC. Appears in the 8 th position of the display in OpenSky mode.
	Steady – Indicates Scan mode is Normal or Fixed. Is not displayed when Scan mode is None. Appears in the 9 th position of the display in OpenSky mode.
	Steady – Indicates Selective Call mode. Appears in the 11 th position of the display in OpenSky mode.
	Steady – Battery charge indicator. Appears in the 12 th position of the display.
	Flashing – Low battery indicator.

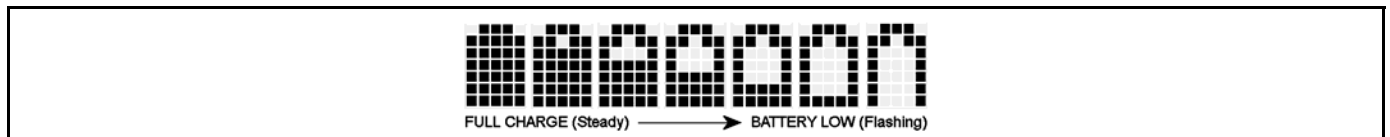


Figure 9-1: Full Cycle Battery Charge Indicator

The battery charge indicators illustrate approximate level only, based on battery voltage. Refer to Figure 9-1.

9.3 TRI-COLOR LED

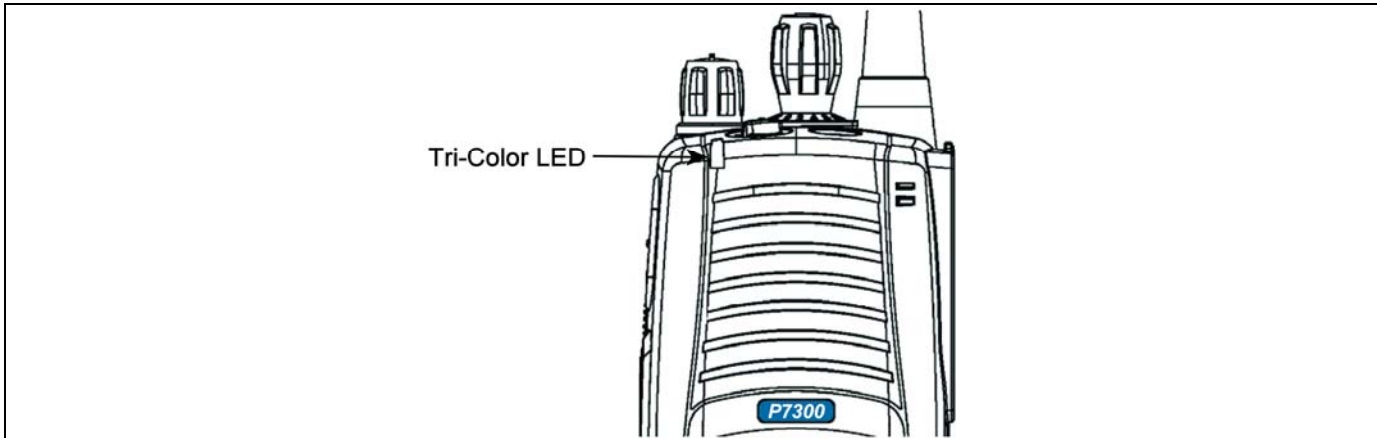


Figure 9-2: Tri-Color LED

The Tri-Color LED changes color to indicate radio status and is visible from both the front and top of the radio (see Figure 9-2). The radio states reflected by the LED are:







Green:	Receiving
Red:	Transmitting

If the LED is flashing rapidly, the radio is receiving an emergency call. If the LED is flashing every ½ second, the selected talk group is in the emergency state (although not transmitting). If the selected talk group is in the emergency state, an asterisk will be displayed next to the talk group name.

9.4 LOG IN TO THE NETWORK

Login occurs either automatically (auto registration) if the radio has a valid registration or, if enabled, requires the user to enter a User ID and password.

The user will be prompted to “Pls Login” with the *1 login command, a User ID, and password.

1. Press *1,   keys (Login command).
2. Enter the full 10-digit User ID.
3. Press the  key.
4. Enter the password.
 - If the radio is configured for alpha-numeric passwords and the password has consecutive duplicate numbers (“MES33” for example), enter #, the  key, between the consecutive duplicate numbers so the radio will **not** interpret the entry as a letter (“D” in this example).
 - If the radio is configured for numeric-only passwords, do not press the  key between duplicated numbers.
5. Press the  key twice.

The User ID may be remembered from the previous log-in. (Refer to Section 9.5 for further details regarding log-off commands.) The password will be established before the radio is put into operation. Contact the local OpenSky network administrator for more information.



If necessary, contact radio system administration personnel for log-in assistance and/or radio-specific log-in instructions.

9.5 LOG OFF THE NETWORK

The *0## command de-registers the radio. Typically, this is automatically performed when powering down the radio. Using this method, the User ID is remembered by the radio so only the password is needed at next log-in. Log-off manually by pressing .

If a user is logged in, it is necessary to log-off.

9.6 PERSONALITY

As illustrated in Figure 9-3, a personality defines the profiles and talk groups available to the user. It is the structuring of a collection of profiles and privileges established by the OpenSky network administrator to provide the user with a comprehensive set of profiles to communicate effectively with the necessary talk groups or individuals.

Personalities are stored on the network and downloaded over-the-air to the radio. This process is called “provisioning.” Provisioning occurs at radio power-up (if the personality is not already stored in the radio’s memory) and at user log-in. When changes are made to the personality, the radio is automatically re-provisioned. Each personality can contain up to sixteen (16) profiles and each profile can contain up to sixteen talk groups.

9.6.1 Profiles

As stated above, each profile can contain up to sixteen (16) talk groups. A profile also defines the radio’s emergency behavior. All transmissions are made on the selected talk group (displayed on the top line of the dwell display). The user can change the selected talk group to any of the other talk groups within the profile.

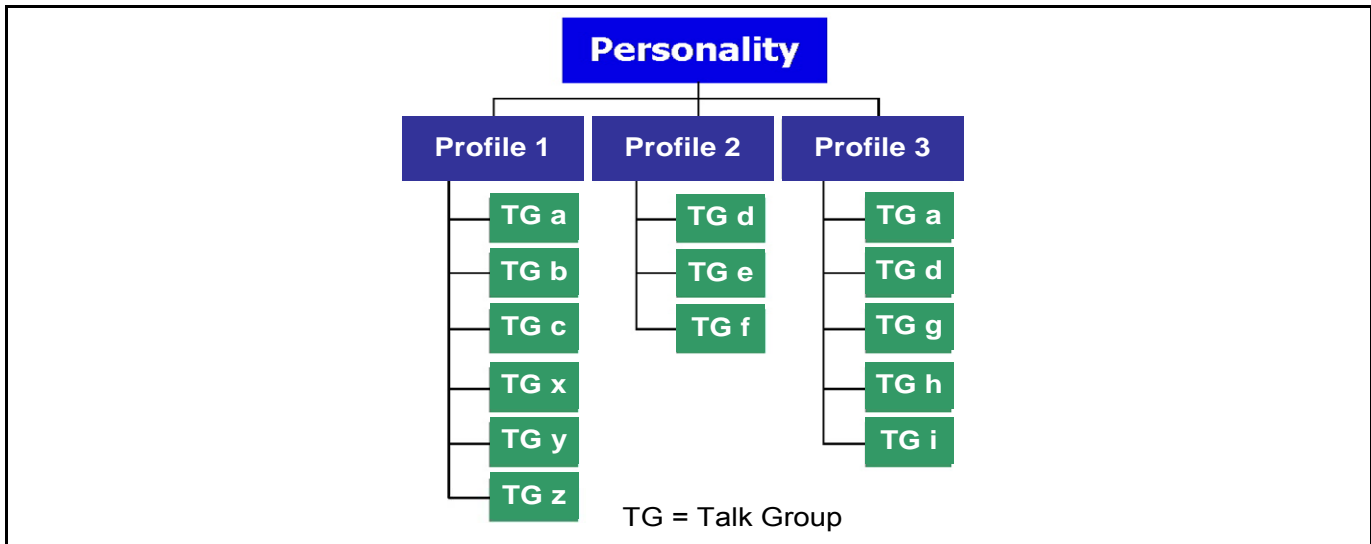


Figure 9-3: Personality Structure Example



9.6.2 Talk Groups

A talk group represents a set of users that regularly need to communicate with one another. There can be any number of authorized users assigned to a talk group. Talk groups are established and organized by the OpenSky network administrator. An OpenSky talk group is similar to a channel within a conventional FM radio system.

9.7 OPENSky DISPLAY OVERVIEW

The 12-character x 3-line display shows the radio status. The first two lines of the display are text lines that change in response to user interaction with the menu buttons. Status icons appear in the bottom line (line 3) of the display (see Table 9-2).


9.7.1 Display's Top Line

The display's top line of text changes as the  and  buttons are pressed to scroll through the available menu options (see Table 9-4). When the dwell display is present, the selected talk group will be displayed. Other information, such as alert messages will scroll across the top line of the display.

9.7.2 Display's Second Line

The second line will display information such as active menu, login prompt, emergency status, and dwell display messages as described in the following section.

9.7.3 Dwell Display

When not engaged in menu selection, the first two lines of the display default to the user-defined display, known as the "dwell display." The top line indicates the currently selected talk group. The second line will display the currently selected profile, caller ID/alias¹, received talk group, and current channel name. Press the  button repeatedly to scroll through and view one of these second line options.

¹ Alias is a logical ID name such as "J_Smith." The name corresponds to a user ID such as 003-542-0001.

9.8 ALERT TONES

The P7300 radio also provides audible Alert Tones or “beeps” to indicate the various operating conditions (see Table 9-3).

Table 9-3: Alert Tones

NAME	STONE	DESCRIPTION
Call Queued	one low tone/two high tones	Call is queued for processing.
Call Denied	three short beeps	Radio is out of coverage area or requested talk group is active.
Grant (or Go-Ahead)	single short beep	Sounded when resources become available for a call request placed in the queue (if enabled) upon channel access. If the radio roams to another site while transmitting, then it will auto rekey and begin transmitting on that tower. It gives a second grant tone to let the user know they have roamed.
Call Removed	single long low-pitched tone	Notifies the user access to the channel has been lost (out of coverage area or pre-empted by higher-priority call).
Low Battery	one low-pitched/one short mid-pitched	Low battery
Selective Alert Received	four short tones	Only played once to indicate a selective alert has been receive.
Emergency Alert Tone	three long beeps	Sounds when an emergency alert is declared.
Emergency Cleared Tone	one long low-pitched tone	Sounds when an emergency is cleared.
Selective Call Ring Tone	a ringing tone similar to a telephone	Ringling is repeated every four (4) seconds until the call is accepted or rejected by the radio being called or until the network drops the call if unanswered after one (1) minute.
Roam Tone	two short tones, one high-pitched and one low-pitched	Sounds when the radio transitions from one radio base station site to another.
Out of Range Tone	three brief tones	If enabled via programming, sounds at a programmable interval while the radio is in a state of persistent deactivation.

9.9 BASIC MENU STRUCTURE

Table 9-4 illustrates the basic P7300 OpenSky menu structure. Menu items will vary depending upon system programming, radio hardware, and optional configurations. All menus except the dwell display menu can be turned off by network administration personnel.

Table 9-4: Basic P7300 OpenSky Menu Structure

Menu Name	Radio Displays (first and second lines)	Usage Notes
	To/From Dwell Display <div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div>	
Engineering Display (Menu may not be available per programming.)	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> registration, RF sync and transceiver status codes <hr/> bit-error rates and RSSI data	Displays radio system connection data. For engineering use.
Silent Emergency	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> OFF/ON <hr/> "SilentEmerg"	Use <input type="radio"/> or <input checked="" type="radio"/> to toggle between OFF/ON. Press <input type="button" value="M"/> to enable.
Operating Mode (e.g., OTP, OCF)	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> available modes <hr/> "Mode Menu"	Use <input type="radio"/> or <input checked="" type="radio"/> to choose an available mode. Press <input type="button" value="M"/> and confirm (Y/N) with <input type="radio"/> or <input checked="" type="radio"/> and <input type="button" value="M"/> again.
GPS Fix [e.g., GPS, GPS (Site), GPS (Aged)]	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> current latitude and longitude (degrees:minutes:seconds) <hr/> "GPS"	GPS latitude and longitude position of currently tuned-to base station ["GPS (Site)"] or V-TAC ("GPS") scrolls across top line of the display. "GPS (Aged)" indicates VTAC coordinates haven't been updated for more that 2 minutes.
User ID	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> User ID # of user currently logged in <hr/> "User ID"	User's identification/name scrolls across top line of the display (if programmed).
IP Address	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> Radio's IP address <hr/> "IP Address"	Radio's Internet Protocol (IP) address scrolls across top line of the display.
Station Identification	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> station's call sign <hr/> "Station ID"	Station's identification/name scrolls across top line of the display (if programmed).
Stealth Mode (display backlight is disabled)	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> "OFF" <hr/> "StealthMenu"	Use <input type="radio"/> or <input checked="" type="radio"/> to turn on. On P7350, press any button to turn it off. On P7370, use Stealth Menu or press 2# to disable 2# to disable Stealth mode.
Treble Level	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> "LOW", "MEDIUM", "MEDHIGH", "HIGH" <hr/> "Treble Menu"	Use <input type="radio"/> or <input checked="" type="radio"/> to choose speaker treble level. Press <input type="button" value="M"/> to return to dwell display.
Display Brightness	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> "<< >>" <hr/> "Bright Menu"	Use <input type="radio"/> or <input checked="" type="radio"/> to brighten or dim backlighting. Press <input type="button" value="M"/> to return to dwell display.
Side Tone Level	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> "OFF", "LOW", "MED", HIGH" <hr/> "Side Menu"	Use <input type="radio"/> or <input checked="" type="radio"/> to choose side tone level. Press <input type="button" value="M"/> to return to dwell display.
	<div style="text-align: center;"> <input type="button" value="▼"/> <input type="button" value="▲"/> </div> See Next Page	

Menu Name	Radio Displays (first and second lines)	Usage Notes
	See Previous Page	
	▼ ▲	
Selected Channel (Menu may not be available per radio programming)	selected channel	Displays the current channel. Press [M] to return to dwell display.
	"ChannelMenu"	
Scan Mode (e.g. Normal, None, Fixed)	current scan mode	Use ○ or ⊙ to scroll between scan modes (Normal, None, and Fixed). Press [M] to return to dwell display.
	"ScnModeMenu"	
	▼ ▲	
Talk group Lock Out	talk group "<"	Use ○ or ⊙ to choose a talk group for locking/unlocking. Press [M] to toggle "<" on (locked out) and off.
	"LockOutMenu"	
	▼ ▲	
Priority 2 Talk group	current priority talk group	Use ○ or ⊙ to choose Priority 2 talk group. Press [M] to return to dwell display.
	"Priority2"	
	▼ ▲	
Priority 1 Talk group	current priority talk group	Use ○ or ⊙ to choose Priority 1 talk group. Press [M] to return to dwell display.
	"Priority1"	
	▼ ▲	
Alerts Received	time/sender's name/ alias/message text	"No alerts" or alert message text scrolls in display. Use ○ or ⊙ to view all messages.
	"AlertsRcvd" or oldest message	
	▼ ▲	
Alert Destination	current speed dial #	Use ○ or ⊙ to choose a speed-dial number. Press [M] to go to the "Alert Msg" menu. Use ○ or ⊙ to scroll through "canned messages." Press [M] to send message and return to dwell display.
	"AlertDest"	
	▼ ▲	
Speed Dial	current speed dial #	Use ○ or ⊙ to choose a speed-dial number and press PTT to place call.
	"SpeedDial"	
	▼ ▲	
Profile Selection	currently active profile	Use ○ or ⊙ to choose an available profile. Press [M] to return to dwell display.
	"ProfileMenu"	
	▼ ▲	
Talk group Selection	selected talk group	Use ○ or ⊙ to choose a talk group in current profile. Press [M] to return to dwell display.
	"TalkGrpMenu"	
	▼ ▲	
Emergency Dismiss	alert received	Use ○ or ⊙ to choose emergency talk group. Press [M] to toggle "<" on (dismiss) and off.
	"EmgDismiss"	
	▼ ▲	
Dwell Display	selected talk group (bottom line option)	Press [M] to change bottom line option.
	Use ▼ and ▲ to scroll through menus.	

9.10 KEYPAD FUNCTION COMMANDS (P7370 ONLY)

To perform a command from the keypad, use the keypad commands in Table 9-5.

Table 9-5: Keypad Function Commands

*0	Log-off command: *0## (logs the user off the system). See Section 9.5 for additional information. Key presses: (* PHN) 0 (# IND) (# IND)
*1	Log-in command: *1<User ID> # <Password> ## (required for encryption). See Section 9.2 for additional information. Key presses: (* PHN) (1 SYS) <User ID> (# IND) <Password> (# IND) (# IND)
*4	Enter Scene of Incident Mode (SOI) on specified channel and band: *4<LC>#<Band># where LC is the channel number that is being used as a SOI repeater and band is the number assigned to each frequency band. For example, if LC 25 800 MHz (band 0) is being used for SOI, then enter *4,25,#,0,#. Exit SOI Mode with *4# Key presses: (* PHN) (4 PTT) (# IND)
*6	Go to Default Profile. Selects default profile if the radio is not voice registered.
*7	Initiate Selective Alert command: *7<Target ID>#[Choose Message]#. See Section 9.25 for additional information. Exit SOI Mode with *4#. Command: (* PHN) (4 PTT) (# IND)
*8	Radio-to-Radio Call command: *8<Selective call number>#(PTT to dial). Command: (* PHN) (8 MSG TOV) <Selective call number> (# IND) then press PTT to dial
*9	Public Switched Telephone Network (PSTN) Call command: *9 <telephone number>#(PTT to dial) See Section 9.26 for additional information. Command: (* PHN) (9 DEL) <telephone number> (# IND) then press PTT to dial
*32	Begin Manual Encryption command: *32<Pre-determined Encryption Key># 1-16 digit encryption key for 128 bit encryption; 17-32 digit encryption key for 256 bit encryption.
*33	End Manual Encryption command: *33#
*61	Initiate XCOV Mode: Extended coverage for individual users.
*62	Initiate XCOV-TG Mode: Extended coverage for talk groups.
*60	Exit XCOV or XCOV-TG Mode: Returns to the normal mode.

9.11 QUICK KEYS (P7370 ONLY)

Quick Keys are a two-button sequence that provides the user with quick access to certain menu items. Quick Keys function as a toggle for these menu items.

Table 9-6: Quick Key Sequence

QUICK KEYS	FUNCTION
1#	Transition to ECP mode If ECP code is not loaded in the radio, "No App" appears in the display
2#	Toggles Stealth Mode On/Off
3#	Toggles Scan Mode On/Off (Normal/Fixed, see details below) <ul style="list-style-type: none"> • If the Scan Mode is Normal when the Scan Mode is toggled Off, the Scan Mode will be Normal when toggled On again. • If the Scan Mode is Fixed when the Scan Mode is toggled Off, the Scan Mode will be Fixed when scan mode is toggled On again. • If the Scan Mode is Off when the radio boots up, the Scan Mode will be Normal when Scan Mode is toggled On.
4#	Lights/Tones On/Off Pressing 4# turns the TX/RX LEDs, Backlight, and Side Tones On/Off. If any of the TX/RX LEDs, Backlight, and/or Side Tones are On, and this quick key sequence is used, then all of the TX/RX LEDs, Backlight, and Side Tones are turned Off. If the radio is in Stealth mode, this quick key is disabled since the user is not able to turn on the light/tones in stealth mode.
6#	XCOV & XCOV-TG Attach/Detach This quick key sequence is used to manually connect to a V-TAC. When attaching to a V-TAC, the radio's programming determines whether to attach to the V-TAC in XCOV or XCOV-TG mode. <ol style="list-style-type: none"> 1. If the user attaches to a V-TAC manually, using the *61# or *62# command sequence, the radio is understood to be attached and this quick key sequence will detach the radio from the VTAC. 2. If the user detaches manually from a V-TAC using the *60# command sequence, the radio is understood to be detached and this quick key sequence will attach the radio to a VTAC. 3. At bootup, the radio is understood to be detached from a VTAC. If a radio automatically attaches to a VTAC, the radio is still understood to be detached from a VTAC and will attempt to attach to a VTAC. 4. If a radio manually attaches to a VTAC and then is automatically detached from a VTAC, the radio is still understood to be attached to a VTAC and will attempt to detach from a VTAC.

9.12 LOCK/UNLOCK THE KEYPAD

1. Press and hold the **[M]** button.
2. While holding the **[M]** button, press the **[O]** button on the side of the radio.









9.13 DUAL-TONE MULTI-FREQUENCY (P7370 ONLY)

Dual-Tone Multi-Frequency (DTMF) is the system used by touch-tone telephones. DTMF assigns a specific tone frequency to each key so a microprocessor can easily identify its activation. This allows for specific tasks such as entering a user ID and password, or selective calling.

When a key on the DTMF keypad is pressed, the DTMF tone is played through the radio's speaker.

9.14 CHANGING THE ACTIVE PROFILE





The radio can store up to sixteen (16) standard profiles, one of which is the currently active profile. To change the currently active profile:

1. Press the  or  buttons until "ProfileMenu" is displayed.
2. Use  or  to scroll through the list of available profiles.
3. Profile becomes active when selected for longer than 2 seconds, when the  is pressed, or when the menu is changed using the  or  button. Press  to activate the selected profile.

9.15 CHANGING THE SELECTED TALK GROUP

Each profile stored in the radio can have up to sixteen (16) talk groups. One talk group within the currently active profile is set as the "selected talk group." To change the selected talk group, turn the Group Selection knob on top of the radio.

9.16 ADJUSTING DISPLAY AND BUTTON BACKLIGHT BRIGHTNESS

1. Press the  or  buttons until "Bright Menu" is displayed.
2. Use  or  to brighten or dim the display and button backlighting.





9.17 STEALTH MODE

For some users, it is important to be able to turn off the radio's display lights and side tones, but not the radio traffic. For example, in covert operations, lights and sounds could inadvertently expose an otherwise unobservable radio user. For this purpose, the radio has a Stealth feature that disables the radio display light, indicator light, and audible side tones.

When Stealth Mode is on, the radio continues to scan the programmed list of talk groups and the user can key-up on the selected talk group.

9.17.1 Enabling Stealth Mode

P7370 only: Quick Key combination 2# toggles Stealth Mode on and off.

Both models: Press the  or  buttons to scroll through menus until "StealthMenu" appears in the display. To immediately activate Stealth Mode press the  or  button once. This activates Stealth Mode, exits the Stealth Menu, and returns to the Dwell Display.

The display lights, indicator lights, and side tones are disabled. The Stealth Mode icon is displayed.

9.17.2 Disabling Stealth Mode

P7370 only: To re-enable all lighting, side tones and exit Stealth Mode, press Quick Key combination 2# again. The radio returns to the Dwell Display.


P7350 only: To re-enable all lighting, side tones and exit Stealth Mode, press any key other than PTT or the Emergency button. The radio returns to the Dwell Display.

The display lights, indicator lights, and side tones are re-enabled. The Stealth Mode icon disappears.

9.17.3 Stealth Mode using A/B Switch

It is also possible to enable and disable Stealth Mode using the A/B Switch, if so programmed. Depending on programming the switch in one position will enable Stealth Mode and in the other position, disables it.



With Stealth Mode on the P7350 model radio, pressing any radio button (other than the mic's PTT button or the Emergency button) on the front panel will immediately turn Stealth Mode off. For example, pressing the  button on the front panel will turn stealth mode off.





9.18 ADJUSTING SIDE TONE AUDIO LEVEL

The radio sounds confirming tones called “side tones” when its buttons are pressed. Most users find this audible confirmation helpful when navigating the menus. Side tone audio level can be adjusted or turned completely off using the “Side Menu.”









For covert operations, it may be necessary to turn off side tones. For safety's sake, turning off the radio during covert operations is not recommended.

If the radio is operating properly but side tones are not heard when the menu buttons are pressed, the side tones are probably turned off. To turn them back on, access the “Side Tone” menu and select a setting other than “off.”

Use the following procedure set side tone level:

1. Press the  or  buttons to cycle through the menu until “Side Menu” is displayed.
2. Press  or  to change to the desired level (Off, Low, Medium, and High). To turn side tones completely off, use the “Off” setting.

9.19 CHANGE OPERATING MODE

1. Press the  or  buttons to cycle through the menu until “Mode Menu” is displayed.
2. Press  or  to select the desired operating mode.
3. Press  and use  or  to select Y or N.
4. Press  again to make selection and return to the dwell display.

9.20 RECEIVING AND TRANSMITTING VOICE CALLS

As soon as the radio completes the initialization sequence and registers on the OpenSky network, the user will begin to hear calls from the talk groups in the active profile, if available.

9.20.1 Receiving a Voice Call

No action is required on the part of the user.

The caller's alias is only shown when the selected talk group matches the received talk group. Otherwise, the name of the received talk group is displayed.






9.20.2 Transmitting a Voice Call

1. Select the desired talk group.

2. Depress and hold the **PTT** button, wait a couple of seconds. If programmed by the administrator, a grant tone will be sounded.
3. Begin speaking into the microphone in a normal voice.
4. For maximum clarity, hold the radio approximately 2 inches from your mouth. Take care not to cover up the microphone while speaking.
5. Release the **PTT** button to terminate an outgoing voice call.

9.21 ADJUSTING AUDIO TREBLE LEVEL

The tone of received signals can be adjusted using the radio's "Treble Menu."

1. Press the  or  buttons to cycle through the menu until "Treble Menu" is displayed.
2. Press  or  to increase or decrease level. There are four levels available: low, medium, medium-high, and high.
3. Press  or wait a few seconds to return to the dwell display.

9.22 TALK GROUP LOCK OUT

There are two ways to focus voice communications by suppressing calls from talk groups in the active profile.

- **Non.** By changing the Scanning Mode to "None" only the selected talk group is scanned.
- **Lock Out.** By locking out selected talk groups, background noise or chatter can be eliminated and scanning resources can be focused on just those groups whose calls you wish to monitor.



NOTE

Lock out is a listening (receive) function and only blocks received calls on locked out talk groups. Lock out does not affect transmit capability. "None" and "Lock Out" do not apply to recent emergency lock outs.

Only talk groups in the active profile can be locked out, since they are the only talk groups whose voice calls can be heard on the radio. Talk group lock out is a scan-related feature. With lock out, one or more talk groups in the active profile can be temporarily disabled from being scanned. Calls are not received on locked-out talk groups. Lock out settings are not retained between profile changes or when the radio is power cycled.








NOTE






If the Scan Mode is "Fixed," P1 and P2 groups CANNOT be locked out. See Section 9.23 for more information.

The default emergency and emergency-capable talk groups can be locked out if they are NOT in an emergency state. If a talk group is locked out and is subsequently changed to the currently selected talk group, it will automatically be unlocked by the radio so the user can hear calls on the talk group. The radio may be configured so all talk groups are automatically locked out by default. In this case, they must be manually unlocked, if desired.

9.22.1 Lock Out a Talk Group

1. Use the  or  buttons to scroll through the menu choices until “LockOutMenu” appears in the display.
2. Use the  or  keys to scroll through the list of talk groups, if any, until the user group you want to lock out appears in the display.
3. Press the  key to select the lockable talk group.
4. “<” appears next to the locked out talk group.

9.22.2 Unlock a Talk Group

1. Use the  or  buttons to scroll through the menu choices until “LockOutMenu” appears in the display.
2. Use the  or  keys to scroll through the list of talk groups, if any, until the user group you want to unlock appears in the display.
3. Use the  key to unlock the displayed talk group.



- Changing the active profile removes any lockouts you have made.
- Turning off the radio removes any lockouts you have made.

9.23 SCANNING

9.23.1 Selecting Scan Modes

Three scanning modes are available for the radio, but only one can be active at any time. Changing the scanning mode changes the way the radio scans voice calls for all of the profiles in the radio personality, no matter which profile is or becomes active.

The choice of scanning mode broadens or narrows the span of communications with all the groups in profiles you listen to, but does not affect your interaction with those groups you talk with.

The scanning modes available for selection may be limited to a subset of the three scanning modes by the administrator.






Table 9-7: Scan Modes

SCAN MODE	EXPLANATION
None	<p>Eliminates distractions. Full communications (listen and talk) with the active talk group. No calls received from other talk groups.</p>
Normal	<p>This is the default setting. The user can scan all talk groups in the active profile that are not locked out as long as there is demand on the site. Priority (P1 and P2) groups are user selectable. Receive calls from more than one talk group, if available from the current site. Allows dragging of the selected talk group, P1, P2, and default emergency talk groups to the site on which the radio is registered. (If other calls are available at the site, they also can be heard but they will not be actively dragged.) The default emergency talk group, as well as any emergency-enabled talk groups, is only dragged if it is in emergency mode.</p>
Fixed	<p>The priority groups are fixed to the selected profile's pre-defined P1 and P2 groups (configured via the UAS). In this mode, P1 and P2 groups CANNOT be locked out. The user can scan all talk groups in the active profile that are not locked out, as long as there is demand on the site. Allows dragging of the P1, P2, and selected talk group to the site on which the radio is registered. If other calls are available at the site, they can also be heard, but they will not be actively dragged. The default emergency talk group, as well as any emergency-enabled talk groups, is only dragged if in emergency mode.</p>

The scanning mode choice remains in effect until it is changed. Even if the radio is turned off, the current scanning mode selection is saved for the next use.

9.23.2 Checking or Changing Active Scan Mode

9.23.2.1 Setting the Scan Mode

1. Press the  or  buttons until "ScnModeMenu" appears in the display.
2. Use the  or  keys to scroll through the list of modes until your choice appears: Normal, None, or Fixed.
3. Press the  key to activate the scan mode selection and return to the dwell display.

9.23.2.2 Duration of Scanning Mode Selections

Scanning Mode selections survive power down. At startup, the radio defaults to the scanning mode of set during last use. The last selection made remains in effect until a new selection is made from the Scan Mode menu.






9.23.3 Scanning Priority

The following lists the scanning priority order (from highest to lowest):

- Selected talk group in emergency state.
- Default emergency group in emergency state.

- Selected talk group.
- Emergency capable group in emergency state.
- Priority 1 talk group.
- Priority 2 talk group.
- Other (non-priority).

9.23.3.1 Changing Scan Priority

1. Press the  or  keys until “Priority1” or “Priority2” appears in the display (Priority1 group has higher priority than the Priority2 group).
2. Press the  or  button until the desired talk group is displayed.
3. Press the  key to select and activate the selection. The radio automatically returns to the Dwell Display.



- Changing the priority of a listen group does not change your talk group.
- You set priority for two talk groups, but only in the selected profile.
- The scanning priority settings are reset to the default values when the radio is turned off.

9.24 MAKING SELECTIVE CALLS

Selective calling is the capability for two voice radio units to obtain and use an independent talk path for a unit-to-unit call. A properly equipped radio can initiate a selective call to any radio in the system that is also programmed for selective calls.

In the OpenSky system, a radio can be configured to initiate selective calls through a pre-programmed list in memory called a speed dial list. Alternatively, a properly equipped radio can initiate a selective call to any radio in the system by entering the ten-digit User ID (similar to a telephone number) of the target radio. Some radios are configured to only receive (not initiate) selective calls.



Selective calls are terminated if an emergency is declared. The network limits selective calls to ten (10) minutes maximum.



If a Selective Call is attempted without registration, “No Priv” is displayed.

9.24.1 Manually Dialing a Selective Call (P7370 Only)

1. Enter *8, the User ID number of the user being called, and the # key (no dashes or spaces). *Note that this feature must be enabled by the administrator.*

*8<destination user id>#

  <destination user id> 

A shortened User ID number can be dialed using the following guidelines:

- If the radio being called is in the same region and agency – enter only the last four digits.
- If the radio being called is in the same region, but a different agency – enter the last seven digits.
- If the radio being called is in another region or if the area is unknown – enter all ten digits.

2. Press PTT (and release) to ring the other user.

The ring tone is sounded.

If the other user accepts the call, the called user's alias will appear in initiating caller's display. The two are now in a unit-to-unit call until one ends the call, the call is terminated due to an initiated emergency, or the maximum time limit of ten (10) minutes is reached.





If the called radio is busy, "BUSY" will appear in the second line of the display.

9.24.2 Selective Call Using Speed Dial




NOTE

Speed dial numbers are defined and provisioned by the OpenSky network administrator and cannot be manually entered into the radio by the user. Contact the administrator if changes to the speed dial list are required.

1. Scroll through the Menu options using the  or  button until "Speed Dial" appears in the second line of the display. Using the  or  keys, scroll through the pre-programmed speed-dial numbers until the desired number appears in the display and press the PTT button.

OR




2. Press and hold a key associated with a given number for more than three seconds. For example, press and hold the  to open the Speed Dial Menu and display the number assigned to that key in the speed dial list. Press the PTT button.

A ring tone is sounded.




If the other user accepts the call, the called user's alias will appear in initiating caller's display. The two are now in a unit-to-unit call until one ends the call, or the call is terminated due to an initiated emergency.

If the called radio is involved in another selective call, "BUSY" will appear on the second line of the display. "Unavailable" is displayed when the call has not been answered after a 1 minute timeout or when the other party is not registered on the network.

9.24.3 Accepting a Selective Call

1. The radio will ring (like a telephone), indicating you are receiving a Selective Call.
2. Press the  or the  or  buttons to accept the incoming selective call.
3. "CONNECT" will appear in the display, followed by "Lim 10 Min." "SEL CALL" and the alias of the caller appear in the display once the call is established.

9.24.4 Rejecting a Selective Call

When a Selective Call is being received (the radio is ringing), you can reject the call by pressing either of the  or  buttons or the  key, or by turning the Voice Group Selector Control knob. The call will be rejected and "Reject" appears on the callers display.

9.24.5 Terminating a Selective Call

Terminate a Selective Call (call must be active) by pressing the ☉ or ○ buttons or the [#NO] key, or by turning the Voice Group Selector Control knob. “HANGUP” will appear in the display followed by the active talk group.

9.25 SELECTIVE ALERTS

Selective alert messaging is an OTP feature that allows one of up to eight (8) pre-programmed (canned) text messages to be sent from one radio to another. The sender specifies a destination (receiving) radio, selects one of the pre-programmed text messages, and then transmits it to the destination radio. The message delivery system adds sender and time-of-day information and forwards the message to the destination (receiving) radio. The sending radio receives a brief message noting the status of the transmission.

Received messages are stored in the radio until deleted or until the radio is rebooted. Received messages do not survive a reboot.

9.25.1 Defining Messages

All selective alert messages are pre-defined. The messages are programmed and provisioned remotely by your OpenSky system administrator. The radio user cannot create selective alert message content. The entire selective alert message, including the abbreviation, can be up to 200 characters long.

When sending a selective alert message, the radio may display one of the following status messages (Table 9-8).

Table 9-8: Status of Selective Alert Messages

STATUS MESSAGE	DEFINITION
Delivering	Select Alert message transmit attempt
Busy	Too busy – Try again
Dest Down	Receiving radio not logged on – Not registered
Not Reg	Transmitting radio not logged on – Not registered
Delivered	Transmission complete
Unreachable	No response
Partial	Transmission interrupted

9.25.2 Sending a Message

The sending process has three steps. First select the destination radio’s User ID, then select the alert message, and finally send the message.

9.25.2.1 Selecting a Destination Using the Keypad (P7370 Only)

1. Using the keypad, enter *7, the [*PHN] [7#NO] keys.

At the “AlertDst” prompt, enter the full *User ID* of the unit to send the message. A shortened User ID number can be dialed using the following guidelines:

- If the radio being called is in the same region and agency – enter only the last four digits.
- If the radio being called is in the same region, but a different agency – enter the last seven digits.

- If the radio being called is in another region or if the area is unknown – enter all ten digits.
2. Press the key to activate the selection.
 3. Use the and buttons or the and buttons to scroll through the available messages until the desired message is displayed.
 4. Press the or key to send the message.
 5. Observe Status Messages (Table 9-8) to ensure proper delivery.

9.25.2.2 Selecting a Destination Using the Menu

1. Using the or key, scroll through the menu until “AlertDst” (Alert Destination) appears.
2. Use the or button to scroll through the list of User IDs until the desired destination is displayed and press the key.
3. Use the or buttons to scroll through the available messages until the desired message is displayed.
4. Press the key to send the message.
5. Observe Status Messages (Table 9-8) to ensure proper delivery.

9.25.3 Receiving a Message

When a selective alert message is received by a radio, a four-beep tone is heard. The tone is heard only once, but the message “NEWALRT” alternates with the talk group on the main display. Up to 8 received messages can be stored. If a ninth message is received, the first (oldest) message is automatically deleted to make room for the new message.

Received messages are displayed with the time and source information.

To display a Selective Alert Message:

1. Using the or button, scroll through the menu items until “Alerts Rcvd” appears. The oldest message is displayed and scrolls across the top line of the display.
2. The message includes the time, the User ID, and alias of the sender along with the message.
3. To view the next message, press the or button to go forward or backwards.

9.25.4 Deleting a Selective Alert Message

1. Display the message.
2. Press the key and or to select Y or N.
3. At the “Delete? Y” prompt, press the key. The message will be deleted.





Received messages cannot be saved.

9.26 MAKING INTERCONNECT CALLS (P7370 ONLY)

1. Using the keypad, enter *9, followed by the telephone number being called, and the # key (no dashes or spaces).

*9<telephone number>#

Wait a couple of seconds and press and release the PTT button to initiate the call. An initial ring tone will sound to indicate signal call initiation. Once the gateway picks up the call, the ring tone will change. Press and hold the PTT and talk normally then release the PTT to listen.

2. To hang up the call, press  the button or the  key.

9.27 EMERGENCY COMMUNICATIONS

The P7300 portable radio is capable of sending an emergency alert and making emergency calls on the network. The OpenSky system handles emergency calls with the highest priority, allowing you or the people you serve to get needed help.

Emergency call and alert capability for a profile is configured by the system administrator.



The radio that initiates an *emergency alert* emits a signal of 3 distinct beeps that only goes to the dispatch console.

Table 9-9: Emergency Calls vs. Emergency Alerts

EMERGENCY ALERT	EMERGENCY CALL
An Emergency Alert message is sent to the dispatcher console. The dispatch console plays an emergency tone when it receives the message.	An Emergency Alert message is sent to the dispatcher console. All peers (radios and consoles) and the dispatch console play the emergency tone whenever an emergency call is detected. An emergency tone plays for each new emergency, or when a profile is changed, (assuming there is an emergency on one of the talk groups for the new profile). If the orange LED is flashing rapidly, the radio is receiving an emergency call. If the LED is flashing every ½ second, the selected talk group is in the emergency state (although not transmitting). If the selected talk group is in the emergency state, an asterisk displays next to the talk group name.
No emergency audio (voice) transmission (hot-mic) capability available (per programming by system administrator)	In addition to the Emergency Alert signal, the microphone goes hot for a predetermined length of time to allow for emergency audio (voice) transmission. The radio declaring the emergency has channel access priority. Note that the User can also use the PTT after the pre-determined hot-mic audio transmission, or during to extend the initial hot-mic audio transmission.

9.27.1 Declaring an Emergency Call or Alert

1. Press the red emergency button on the radio to enter emergency mode.



The emergency behavior for the selected profile is configured by the network administrator. This determines whether pressing the Emergency button sends an Emergency Call or just an Emergency Alert. An Emergency Alert is always *part of* and *sent with* an Emergency Call.

If the active profile of the unit initiating the emergency is configured to Emergency Alert, the three-beep emergency alert signal is sent only to the dispatcher console.

If the active profile of the unit initiating the emergency is configured to Emergency Call, the three-beep emergency alert signal is sent to the dispatcher console and to all other radios within the selected talk group. The default emergency talk group becomes the selected talk group. The display will alternate between the emergency talk group name and “EMERGENCY” to indicate that the emergency has been initiated.

2. The microphone is hot (open mic) for a programmed amount of time in order to send your voice out on the emergency talk group.

All of the radios in the emergency talk group hear your call and see the emergency talk group displayed on their radio.

9.27.2 Receiving an Emergency Call

Initially, when receiving an emergency call, the radio sounds the emergency tone (three short high-pitched tones).

The radio will flash “EMERGENCY” and display the alias of the user that triggered the emergency or the alias of the talk group (if the incoming talk group is the selected talk group of the receiving radio).

With “None,” only the emergency tone is heard, not the initial open mic transmission.

To dismiss or ignore the emergency, refer to Section 9.27.3.




9.27.3 Dismissing an Emergency

The “Dismissing an Emergency” function allows you to “ignore” an emergency declared by another user.



NOTE

An emergency is dismissed for a configurable amount of time (default = 5 minutes).

1. After receiving an emergency call, press the  or  button until you see “EmgDismiss.”
2. Press the  to toggle “<” on (dismiss) and off. This works in similar fashion to the lock out menu.



NOTE



The emergency dismiss timer is cleared when the emergency is cleared.

9.27.4 Clearing an Emergency Call or Alert



NOTE

Check with your system administrator to ensure that your radio is configured with the ability to clear an emergency.

1. Press to declare an emergency. To clear an emergency, press and hold Option 2 button . While holding , press the emergency button. Release both buttons when the “emergency cleared” tone sounds.
2. The radio returns to your default selected talk group. The “EMERGENCY” display is removed from the main screen.



If the radio is in stealth mode, clearing the emergency will cause the radio to exit stealth mode.

9.28 DYNAMIC REGROUPING





Dynamic regrouping requires that the network administrator determine which radio users should be formed into an impromptu talk group to respond to particular emergency conditions.

The administrator will edit the personalities of the affected radios to include an emergency profile and then page the affected radios to re-register with the network to receive their edited personalities.

In response, affected radios automatically re-register to receive their edited personalities. During re-registration, subscriber equipment will default to the emergency profile selected by the administrator.

9.29 GPS COORDINATES

The radio’s current latitude and longitude coordinates may be displayed using the “GPS” menu. The following procedure assumes a GPS antenna is connected to the radio and it is receiving adequate signals from GPS satellites.

1. Press  or  until the “GPS” menu appears in the display. Current GPS coordinate latitude and longitude data continuously scrolls in the top line of the display in a degrees:minutes:seconds format.
2. Press  or  to change to another menu.



If the internal GPS receiver’s data is expired (30 minutes or more) or unavailable, the radio uses the serving base station’s coordinates [GPS (Site) is displayed]. The GPS Menu will also indicate if the data is aged (2 minutes or more) [GPS (Aged) is displayed].

9.30 V-TAC OPERATION

9.30.1 Extended Coverage Modes (“XCOV” and “XCOV-TG”)

In addition to all standard portable radio operating capabilities, Extended Coverage adds the V-TAC’s bridging (vehicular repeat) functionality for accessing the OpenSky radio network. Each portable radio connected to the V-TAC using Extended Coverage is considered a “client” on the V-TAC. Extended Coverage benefits portable radio users since it allows them to get network connectivity using the V-TAC’s higher transmit output power and better antenna system.

The V-TAC supports two Extended Coverage modes: Extended Coverage for individual users (display reads “XCOV”) and Extended Coverage for a talk group (display reads “XCOV-TG”). Typically, Extended Coverage is used after the vehicle’s operator has exited the vehicle with a portable radio unit and the portable unit requires this bridging functionality to access the OpenSky radio network.

The V-TAC takes advantage of OpenSky's TDMA capability to eliminate interference between its local and network radio links when operating in an Extended Coverage mode (XCOV or XCOV-TG), an undesirable characteristic of many traditional vehicular repeater systems. Because the V-TAC employs this technology, interference on the network and local radio links is minimized.

A V-TAC in XCOV or XCOV-TG mode sends its alias to clients. The alias is displayed in the second line of the dwell menu of the client, ("VA <alias>"). The client must be connected to a V-TAC running version OTP14.4 or for the V-TAC to provide the alias to the client. If the client is connected to a V-TAC running version OTP14.3.1 or earlier, the client displays "VA None."

9.30.2 Change Between Extended Coverage Modes

By default, the specific Extended Coverage mode utilized, either XCOV or XCOV-TG, is determined by commands sent to the V-TAC and portable radios from the system administrator or radio installation personnel. In other words, these commands determine which Extended Coverage mode the V-TAC and radios normally use and determine the access method that must be employed by a portable radio to connect to the V-TAC. After commands of this type are sent to the V-TAC and portable radios, each must be rebooted (powered off and then back on) before the change takes effect.

A radio can manually override this command-determined default mode by entering *61# or *62# or by using the Client Mode menu option. Command *61# sets the radio to use the XCOV mode and *62# sets the radio to use the XCOV-TG mode. However, the connection will only be successful if the V-TAC operating mode matches the manually selected portable V-TAC mode.

9.30.3 Radio Limitations Using Extended Coverage Modes

Connecting a portable radio to a V-TAC introduces minor functional limitations. See the following sections for a listing.

9.30.3.1 Limitations Using Both XCOV and XCOV-TG

Portable radios connected to the V-TAC using either of the Extended Coverage Modes, XCOV or XCOV-TG, will not channel-scan unless they lose radio frequency contact with the V-TAC. If manually enabled, radios will not scan network channels.

9.30.3.2 Limitations Using XCOV-TG

The following portable radio keypad functions are disabled when the radio is connected to the V-TAC using the XCOV-TG mode: log-off, manual log-in, alerts, selective calls, PSTN calls, and speed dial calls.

The following portable radio menus are disabled when the radio is connected to the V-TAC using the XCOV-TG mode: alert destination, alert message, alert received, priority talk group, and scan mode. In addition, the user cannot change talk group or profile.

9.30.4 Use XCOV Mode

The Extended Coverage for individual users (XCOV) mode allows up to eight (8) client radios to connect to the V-TAC. The radios have full radio functionality including selective calling and mobile data.

With the Extended Coverage for individual users' (XCOV) mode, V-TAC configuration defines which portable radios are permitted V-TAC access. The radio will automatically connect to a V-TAC if it cannot find a network channel. The radio can also be manually connected to a V-TAC as indicated with the *61# and *62# commands, each determined by the system administrator in the radio configuration.

9.30.4.1 Manually Accessing the XCOV Mode

P7370 Model Radios

1. Press *61# to manually access XCOV mode.
2. Press *60# to disconnect from XCOV mode.

All P7300 Model Radios

1. Press or until the Client Mode menu appears.
2. Press or until XCOV is displayed.
3. Press to confirm mode selection. The radio reverts to the dwell display and the V-TAC icon is displayed.

9.30.5 Use XCOV-TG Mode

When using the XCOV-TG mode, up to thirty (30) client radios can connect to the V-TAC. However, unlike XCOV, radios connected using XCOV-TG are limited to communicating only on the XCOV-TG talk group and emergency communications. Advanced features such as selective calling and mobile data operations are not available to the XCOV-TG connected clients.

The talk group used for XCOV-TG communications is the talk group that was selected at the V-TAC when it entered XCOV-TG mode. Before a radio can connect to the V-TAC, the talk group must be selected on the P7300. If this talk group is not provisioned in the radio's personality, the radio cannot connect to the V-TAC via the XCOV-TG mode. While connected to the V-TAC via XCOV-TG, a different talk group or profile cannot be selected.

When a portable radio is connected to the V-TAC via XCOV-TG, the V-TAC forwards only the network voice traffic on the XCOV-TG talk groups.

9.30.5.1 Manually Accessing the XCOV-TG Mode

For the Extended Coverage for a talk group mode (XCOV-TG), a portable radio user is granted access and connects to the V-TAC by simply selecting the same Talk Group that the V-TAC had selected when it entered the XCOV-TG mode. Contact the system administrator for questions regarding these aspects.

During XCOV-TG mode operations, the V-TAC will not disconnect portable radios connected to it. A portable radio user must manually disconnect from the V-TAC by pressing *60 # on the radio's keypad.

However, if the V-TAC is switched out of the XCOV-TG mode, all portable radios will be automatically disconnected from the V-TAC. The radios will continue to look for another V-TAC until manually disconnected (*60#).

P7370 Model Radios

- Press *62# to manually access XCOV-TG mode.
- Press *60# to manually disconnect XCOV-TG mode.

All P7300 Model Radios

1. Press or until the Client Mode menu appears.
2. Press or until XCOV-TG is displayed.
3. Press to confirm mode selection. The radio reverts to the dwell display and the V-TAC icon is displayed.

9.30.6 Use Scene-of-Incident Mode

The Scene-of-Incident mode (SOI) is user-selectable. The SOI mode provides a local repeater function (V-TAC) with no network connection.



When operating in the SOI mode, the radio is disconnected from the OpenSky network. Therefore, communications with radios and dispatch personnel on the network is not possible.

SOI Mode, Manual Channel Entry (P7370 Model Only)

1. Press *4#.
2. The radio prompts for the channel. Enter the channel number and press to confirm channel.
3. The radio prompts for the band. Table 9-10 lists valid bands and their definitions. Enter the number assigned for the desired frequency band and press to confirm.
4. The radio reverts to the dwell display. If accepted, you will be switched off the network, and be communicating locally through the V-TAC.

Press *40# or or use the Client Mode menu to return to normal operation (Network Mode). The personality and profile in use at the time the radio entered SOI mode is restored.

SOI Mode, Manual Channel Entry (All P7300 Models)

1. Press or until the Client Mode menu appears.
2. Press or until SOI is displayed.
3. Press to confirm mode selection.
4. Press or until “Manual Select Chan” is displayed and press .
5. Press or to edit the right-most digit and press to advance to the next digit. Repeat until the desired channel is entered.
6. The radio then prompts the user to edit the band. Table 9-10 lists valid bands and their definitions. Press or to edit the number assigned to the frequency band and press to confirm and enter the SOI mode.

Use the Client Mode menu to return to normal operation (Network Mode). The personality and profile in use at the time the radio entered SOI mode is restored.

SOI Mode, Pre-Programmed Channel Selection (All P7300 Models)

1. Press or until the Client Mode menu appears.
2. Press or until SOI is displayed.
3. Press to confirm mode selection.
4. Press or scroll through a list of pre-programmed channels.
5. Press to confirm channel and enter SOI mode.

Use the Client Mode menu to return to normal operation (Network Mode). The personality and profile in use at the time the radio entered SOI mode is restored.

Table 9-10: Band Definitions

RF BAND	RF CHANNEL NUMBER
0 = SMR	Band 0: 1-830
1 = AMPS	Band 1: 1-600
2 = BORDER	Band 2: 1-600
3 = 700 MHz Band 1	Band 3: 1-477
4 = 700 MHz Band 2	Band 4: 481-957
5 = 700 MHz Band 3	Band 5: 1-477
6 = 700 MHz Band 4	Band 6: 481-957
7 = 900 MHz	Band 7: 1-399
8 = 800 MHz Rebanded	Band 8: 1-830
9 = 400 MHz T band WB	Band 9: 1-6718 (Independent Separation Between TX and RX)
10 = 400 MHz T band NB	Band 10: 1-6718 (Independent Separation Between TX and RX)
11 = 400 MHz T band Temp (NYPD only)	Band 11: 1-120
14 = 700 MHz reband WB	Band 14: 1-957
15 = 700 MHz reband NB	Band 15: 1-959

CONVENTIONAL OPERATION

10 CONVENTIONAL OPERATION

The radio functions in the conventional mode when using conventional communications channels (non-trunked).

10.1 CONTROLS

The radio features two rotary control knobs and an emergency button mounted on the top of the radio. Push-To-Talk and option buttons are mounted on the side. The front mounted keypad has six buttons on the P7350 Scan model and 15 buttons on the P7370 System model.

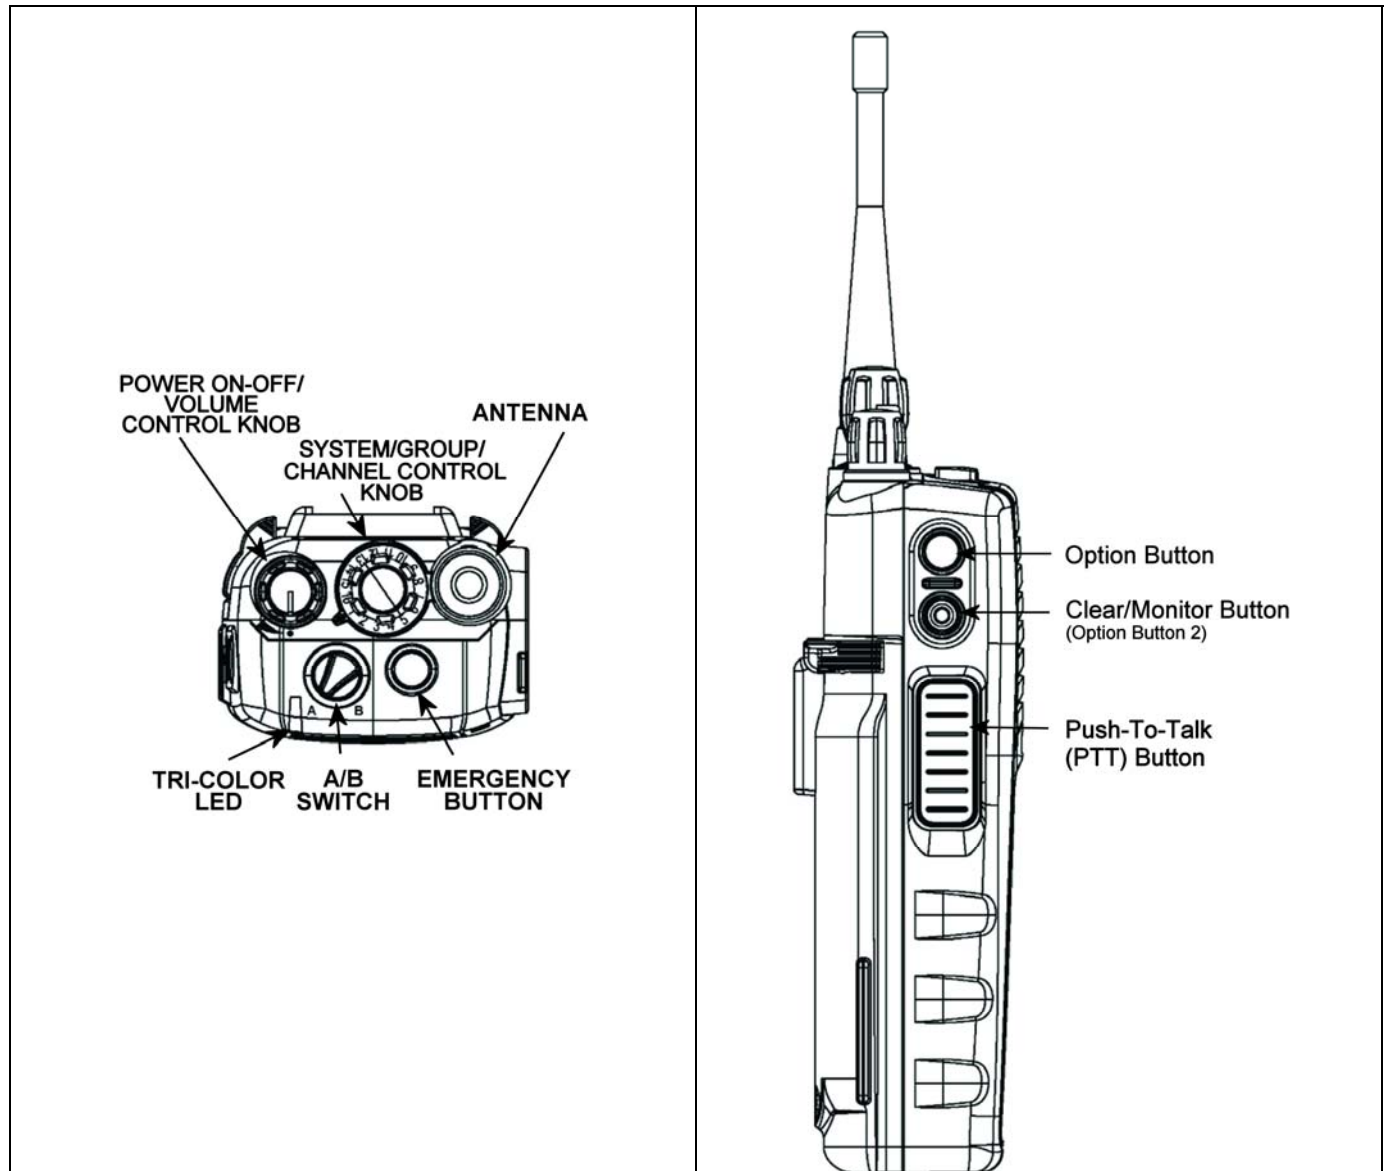


Figure 10-1: Top View

Figure 10-2: Side View

10.1.1 Buttons and Knobs

This section describes the primary function of the button and knob controls. Refer to Figure 10-1 and Figure 10-2.

POWER ON/OFF-VOLUME CONTROL KNOB

Applies power to and adjusts the receiver's volume. Rotating the control clockwise applies power to the radio. A single alert tone (if enabled through programming) indicates the radio is operational.

Rotating the control clockwise increases the volume level. Minimum volume levels may be programmed into the radio to prevent missed calls due to a low volume setting. While adjusting the volume the display will momentarily indicate the volume level (i.e. **VOL=31**). The volume range is from a minimum programmed level of zero (displayed as **OFF** in the display) up to 40, which is the loudest level.

SYSTEM/GROUP/CHANNEL CONTROL KNOB

Selects pre-programmed channels. This is a 16-position rotary knob.

Note: A mechanical stop, which can limit the positions accessed, is shipped with the radio but must be installed. To install the mechanical stop, remove the System/Group/Channel control knob, loosen the set screw on the System/Group/Channel control knob metal base (using a 1.27mm hex wrench), and remove the System/Group/Channel control knob metal base. Replace the 16 channel ring with the channel stop ring located at the desired channel. Re-install the System/Group/Channel control knob metal base, tighten the set screw, and re-install the System/Group/Channel control knob.

EMERGENCY/HOME BUTTON

Automatically selects the pre-programmed Group/System by pressing and holding for a programmed duration. It can also be used to declare an emergency by pressing and holding for a programmed duration. The button must be pre-programmed for either operation, but not both.

PTT BUTTON

PTT must be pressed before voice transmission begins.

OPTION BUTTON ○

Activates one of a number of programmable software options selected during PC programming. Programmable options include hi/low power settings, keypad lock, LCD contrast, and LCD and keypad back lighting.

CLEAR/MONITOR BUTTON ⊙ (OPTION BUTTON 2)

Unsilences the receiver and allows channel monitoring prior to transmission. Momentarily removes the Receiver Channel Guard decoding from the channel.

10.1.2 Keypad

The keys on the keypad have special functions and are labeled using a symbol or abbreviated word describing its primary function. Numeric entry is a secondary function of the keys. Each key is described in the following subsections.



Figure 10-3: P7350 “Scan” Radio Front Panel






























KEY	FUNCTION
 	<p><u>Primary Function:</u> Allows the user to scroll through available systems, groups, or channels, depending on personality programming.</p> <p><u>Secondary Function:</u> Changes the selection for an item within a list.</p>
	<p><u>Primary Function:</u> Accesses the pre-stored menu.</p> <p><u>Secondary Function:</u> Activates a selected item within a list. This is similar to an “Enter” key.</p>
	<p>Adds/Deletes selected groups or channels from the Scan list of the currently selected system.</p>
	<p>Turns the Scan operation ON and OFF.</p>
	<p>Activates one of a number of pre-programmed software options.</p>



Figure 10-4: P7370 “System” Radio Front Panel

KEY	FUNCTION
 	<p><u>Primary Function:</u> Allows the user to scroll through available systems, groups, or channels, depending on personality programming.</p> <p><u>Secondary Function:</u> Changes the selection for an item within a list.</p>
	<p><u>Primary Function:</u> Accesses the pre-stored menu.</p> <p><u>Secondary Function:</u> Activates a selected item within a list. This is similar to an “Enter” key.</p>
           	<p><u>Primary Function:</u> Refer to the separate key definitions within this table.</p> <p><u>Secondary Function:</u> These keys function much as a typical DTMF telephone pad 0-9, *, and # keys; and are used to place telephone interconnect calls and individual unit-to-unit calls.</p>
	<p>Selects a specific system. If the rotary knob is programmed to select the system and more than 16 systems are programmed in the radio, the  key is used to select additional banks (groupings) of systems.</p>
	<p>Selects a specific group.</p>
	<p>Turns the Scan operation ON and OFF.</p>
	<p>Adds groups or channels from the currently selected system to the Scan list.</p>
	<p>Deletes selected groups or channels of the currently selected system from the Scan list.</p>
	<p>Places telephone interconnect calls.</p>
	<p>Initiates individual calls.</p>

10.2 DISPLAY

The radio display is made up of 3 lines (see Figure 10-5). Lines 1 and 2 contain eight alphanumeric character blocks and are used primarily to display system or group/channel names. Line 1 also displays radio status messages. The 3rd line is used primarily to display radio status icons. All three lines are used to display menu options when in the menu mode. If programmed, the display backlighting will illuminate upon power up or when radio controls are operated.

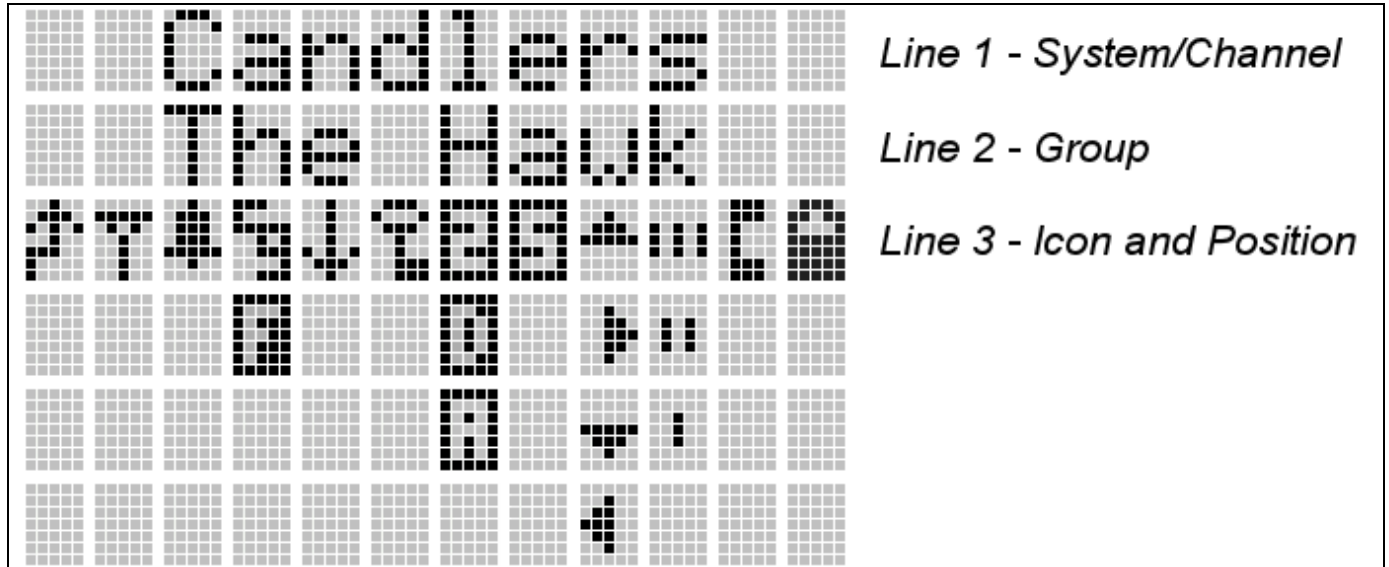


Figure 10-5: P7300 Radio Display

10.2.1 Radio Status Icons

Status Icons indicate the various operating characteristics of the radio. The icons show operating modes and conditions and appear on the third line of the display (see Table 10-1).

Table 10-1: Status Icon Descriptions

CONVENTIONAL STATUS ICONS	
	Steady – during all radio transmissions. Appears in the 1 st position of the display.
	Steady – “Busy” transmitting or receiving. Appears in the 2 nd position of the display. Flashing – call queued.
	Steady – T99 Mode enabled. Appears in the 3 rd position of the display.
	Steady – Channel Guard enabled. Appears in the 4 th position of the display. If icon is not visible – Channel Guard is disabled.
	Steady – transmit at low power. Appears in the 5 th position of the display. If icon is not visible – transmit at high power.
	Steady – transmit in encrypt mode. Appears in the 6 th position of the display. Flashing – receiving an encrypted call.
	Steady – Indicates the current channel is set up as an analog channel. Appears in the 7 th position of the display.
	Animated (rotates clockwise) – scan mode enabled. Appears in the 9 th position of the display. If icon is not visible – scan is disabled.
	Steady – priority 1 group or channel. Appears in the 10 th position of the display.
	Steady – priority 2 group or channel. Appears in the 10 th position of the display.
	Steady – group or channel in scan list. Appears in the 10 th position of the display.
	Steady – special call mode (individual or telephone). Appears in the 11 th position of the display.
	Steady – battery charge indicators. Appear in the 12 th position of the display. Flashing – Low battery indicator.

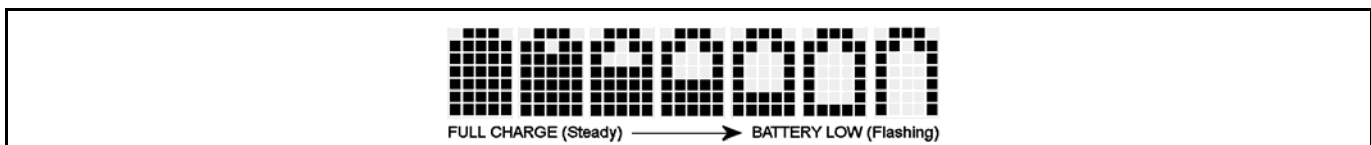


Figure 10-6: Battery Charge Icons (Full Cycle)

The battery icons (see Figure 10-6) indicate approximate level only, based on battery voltage.

10.3 TRI-COLOR LED

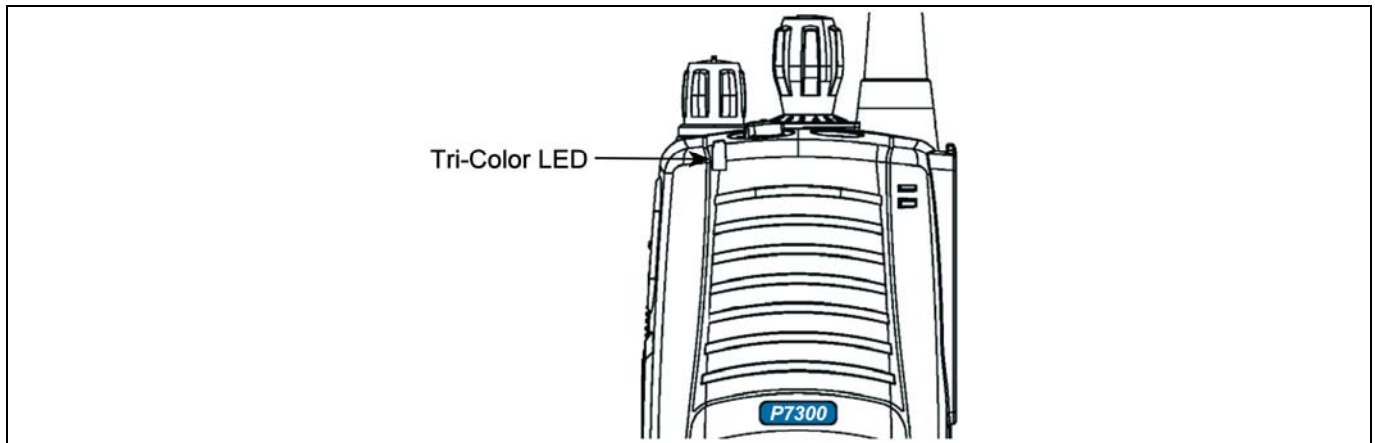


Figure 10-7: Tri-Color LED

The Tri-Color LED changes color to indicate radio status and is visible from both the front and top of the radio (see Figure 10-7). The colors of the LED and the status they represent are:

- Green:** Receiving
- Red:** Transmitting Unencrypted
- Orange:** Transmitting Encrypted

10.4 STATUS MESSAGES

During radio operation, various radio Status Messages can be displayed. The messages are described below.

<u>MESSAGE</u>	<u>NAME</u>	<u>DESCRIPTION</u>
TALKARND	Talkaround	Indicates the radio is operating on conventional channels in talkaround mode (no repeater).
LOW BATT	Low Battery	Battery voltage has dropped to the point to where the radio is no longer able to transmit. The radio will still receive calls until the battery is discharged beyond the point of operation at which time the radio will automatically shutdown.
VOL=31	Volume Level	Indicates the current volume level. The volume level display ranges from OFF (silent) to 40 (loudest).

10.4.1 Error Messages

If either of the Error Messages shown below is displayed, the radio is programmed incorrectly or needs servicing.

```
DSP ERR    or    DIG V
ERR=XXXX   ERR
(PowerUp
only)
```

Where: `XXXX` is the error code and `DSP ERR` or `DIG V ERR` is the message.

10.5 ALERT TONES

The P7300 radio provides audible Alert Tones or “beeps” to indicate the various operating conditions (see Table 10-2).

Table 10-2: Alert Tones

NAME	STONE	DESCRIPTION
Call Originate	one short mid-pitched	<i>OK to talk after pressing the push-to-talk button</i>
Carrier Control Timer	five high-pitched/one long low-pitched	<i>PTT depressed for maximum length of time</i>
Low Battery	one low-pitched/one short mid-pitched	<i>Low battery</i>
TX Low Battery Alert	one low-pitched	<i>After PTT - battery too low to transmit</i>

10.6 TURNING ON THE RADIO

1. Power ON the radio by rotating the POWER ON-OFF/VOLUME knob clockwise. A short alert signal (if enabled through programming) indicates the radio is ready to use.
2. The display shows the last selected system and group/channel or a default system and group/channel (depending on programming).
3. Adjust the POWER ON-OFF/VOLUME knob to the desired volume level.
4. Select the desired system, group/channel. The display indicates the current system and group/channel names.
5. The radio is now ready to transmit and receive calls.

10.7 SYSTEM SELECTION

METHOD 1: From the control knob: If system selection is programmed to the System/Group/Channel control knob, select a system by turning the knob to the desired number position (1-16). The display registers the new system name on line one. The \odot button can be programmed to provide access to a “2nd bank” of 16 system number positions (17-32).

METHOD 2: From the keypad: If system selection is programmed as the primary function of $\square \blacktriangledown$ and $\square \blacktriangle$, select a system by pressing $\square \blacktriangledown$ or $\square \blacktriangle$ to scroll through the system list. The display registers the new system name on line one.

METHOD 3: **(P7370 model radios only)** Direct Access: Press **[1^{SYS}]** to enter the system select mode. Press the numeric key, which is mapped to the desired system. Press **[M]**. The radio will move to the selected system.



NOTE

If system selection is programmed to the System/Group/Channel control knob, direct access to systems will not be available. Pressing **[▼]** or **[▲]** will scroll through different sets of 16 systems each (banks) if more than 16 systems are programmed into the radio. The systems within each bank are then selectable via the System/Group/Channel control knob as described previously in METHOD 1.

Example:

System: 1 = North	Group: 1 = Group 1
2 = South	2 = Group 2
3 = East	3 = Group 3
4 = West	4 = Group 4

1. Press **[1^{SYS}]**. (South is the currently selected system.)
2. Press **[4^{PVT}]**. (Press 4 to select the “West” system.)
3. Press **[M]**. (West is the newly selected system.)

10.8 GROUP/CHANNEL SELECTION

Several methods can be used to select a new group/channel.


METHOD 1: From the Control knob: If group selection is programmed to the System/Group/Channel control knob, select a group by turning the System/Group/Channel control knob to the desired group number position. The display registers the new group name on line two. If the knob is moved to a position greater than the number of programmed group, the highest programmed group will remain selected. The **[O]** button can be programmed to provide access to a “2nd bank” of 16 group number positions (17-32)

METHOD 2: From the keypad: If group selection is programmed as the primary function of **[▼]** and **[▲]**, select a group by pressing **[▼]** or **[▲]** to scroll through the list. The display registers the new group name on line two.

METHOD 3: **(P7370 model radios only)** Direct Access: Press **[2^{GRP}]** to enter the group select mode. Press the numeric key mapped to the desired group. Press **[M]**. The radio will move to the selected group.


10.9 MODIFY SCAN LIST

10.9.1 P7370 Model

1. Press **[3^{SCAN}]** to toggle scan OFF and verify  is **not** displayed.
2. Select group or channel.
3. Press **[9^{DEL}]** once to remove group or channel from list.
4. Press **[6^{ADD}]** once to add as a normal group or channel.
5. Press **[6^{ADD}]** twice to add as a Priority 2 group or channel.

6. Press **[6 ADD]** three times to add as a Priority 1 group or channel.
7. Press **[3 SCN]** to re-start scanning.

10.9.2 P7350 Model

1. Press **[SCN]** to toggle scan OFF and verify  is **not** displayed.
2. Select group or channel.
3. Press **[ADD]** once to remove group or channel from the list.
4. Press **[ADD]** once to add as a normal group or channel.
5. Press **[ADD]** twice to add as a Priority 2 group or channel.
6. Press **[ADD]** three times to add as a Priority 1 group or channel.
7. Press **[SCN]** to re-start scanning.

10.10 NUISANCE DELETE

A channel can temporarily be deleted from the scan list, if it is not the currently selected channel, by pressing the **[ADD]** key (P7350 model) or the **[9 DEL]** key (P7370 model) during scan operation while the radio is displaying the unwanted channel. The channel will be deleted from the scan list in the same manner as if done using the steps above. Deletions done in this manner will not remain deleted if the radio is powered OFF and then powered ON.

10.11 MENU

The Menu function accesses features that are not available directly from the keypad. The order and actual menu items available is configurable through programming. At radio power up, the menu item that is at the top of the menu list will always be displayed first. Subsequent access to the menu function will return the last menu item that was shown in the display and cursor position.

1. To enter the menu mode, press the **[M]** key.
2. Upon entering the menu selection mode, Menu options will appear in the display (see Figure 10-8).

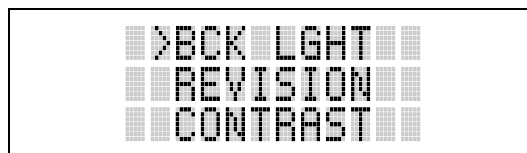


Figure 10-8: Menu Display

3. The radio will continue to receive and transmit normally while in the menu function.
4. To scroll through the menu options use the **[▼]** or **[▲]** keys. When the required menu item has been found align the cursor with the option then press **[M]** to select it. The menu item's parameter setting shown in the display can now be changed by using **[▼]** or **[▲]** to scroll through the list of parameter values.
5. Once the desired setting is reached press **[M]** to store the value and return the menu option selection level.
6. For menu items that display radio information, pressing **[▼]** or **[▲]** will scroll through a list of informational displays. Possible menu items are listed in Table 10-3.

An example of the backlight menu item selection process and menu item parameter change is shown in Figure 10-9.

1. Press **[M]** to enter the menu mode.
2. Press **[▼]** or **[▲]** until the display shows:

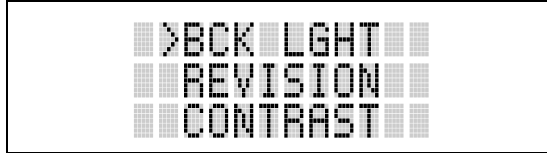


Figure 10-9: Backlight Menu Item Parameter

3. Press **[M]**. The backlight menu item is activated. Line one shows the active menu item and its current parameter setting. Line two shows the currently selected system or group name (see Figure 10-10).

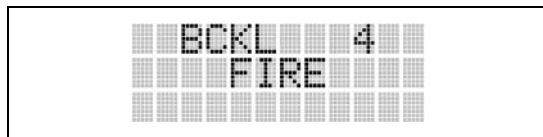


Figure 10-10: Backlight Menu Display

4. The menu item's parameter setting shown in the display can now be changed by using **[▼]** or **[▲]**.
5. Once the desired setting is reached press **[M]** to store the value and return the menu option selection level.

For menu items that display radio information, pressing **[▼]** or **[▲]** will scroll through a list of informational displays. An example of information displays is shown in Table 10-4.



NOTE

The TX POWER menu item, when selected, toggles LOW/HIGH power. It does not use **[▼]** or **[▲]** to scroll nor is an additional press of the **[M]** button required.

Table 10-3: Menu Item Information

FEATURE	DISPLAY	PARAMETER SETTING	COMMENT
Keypad Lock	Menu Item: KEY LOCK Once Selected: LOCKED	Locked Unlocked	Locks the keypad. To unlock; press and release <input type="checkbox"/> M then within 1 second press the option button (<i>NOTE</i> : this sequence is also a short cut to locking the keypad.)
Backlight Adjust	Menu Item: BCK LIGHT Once Selected: BCKL=	OFF, 1 thru 6	Selects the light level for backlighting.
Contrast Adjust	Menu Item: CONTRAST Once Selected: CNTRST=	1, 2, 3, 4	Selects the display contrast level.
Transmit Power Select	Menu Item: TX POWER Once Selected: POWER=	HIGH or LOW	Selects radio output power mode.
Radio Revision Information	Menu Item: REVISION	N/A	Selects the information display to view. Informational display only (see Table 10-4). <i>No user selectable settings.</i>
Toggle Scan On/Off	SCAN	ON/OFF	Toggles Scan operation ON/OFF.
Display Current Home Group/Channel	HOME	N/A	Selects Home Group/Channel
Select Desired System	SYS SEL	N/A	Selects a new system.
Add Group/Channel to Scan List	SCAN ADD	N/A	Adds to Scan List.
Delete Group/Channel	SCAN DEL	N/A	Deletes Group or Channel from Scan List.
Add/Delete Scan List	SCAN A/D	N/A	Add or Delete from Scan List.
Talkaround	TALKARND	ON/OFF	Toggles Talkaround feature ON/OFF.
Select Channel	CHN SEL	N/A	Conventional Only.
Feature Encryption Display	Menu Item: FEATURES Once Selected: (See Feature Encryption Display Section)	N/A	Indicates current features programmed into the radio as well as certain information required to add features to the radio. <i>Informational display only. No user selectable settings.</i>

Table 10-4: Information Display

RADIO ID XXXXXXXX	LID in EDACS/EA. In CONV it has no meaning.
RAM SIZ	RAM Size
FLSH SIZ	Flash Size
RF BAND	Frequency Band
PERS VER	Software Version
DSP DATE	Date DSP code was built.
DSP TIME	Time DSP code was built.
DSP FEAT	The DSP Features supported by the DSP code, in Hexadecimal. Bit mapped (see IPC spec for details): <ul style="list-style-type: none"> • 0x0001 – Conventional • 0x0002 – EDACS • 0x0010 – AMPF • 0x0020 – undefined
DSP VER	DSP Software Version
FLSH VER	FLASH Software ex: P73U0102 P=portable, 54=5400 radio, U=unencrypted, 01=major revision (>50 means unreleased code), 02=minor revision
HARRIS (C) 2009	Copyright
PERSNLTY	Personality Name
BLD DATE	Date host (ARM) code was built.
BLD TIME	Time host (ARM) code was built.

10.12 BACKLIGHT ADJUST






1. Press **[M]** to access the menu.
2. Press **[v]** or **[^]** to scroll through menu until “BCKLGHT” appears.
3. Press **[M]** to select Backlight menu.
4. Press **[v]** or **[^]** to scroll through available settings OFF, 1 through 6.
5. Press **[M]** to select new backlight setting.

10.13 CONTRAST ADJUST

1. Press **[M]** to access the menu.
2. Press **[v]** or **[^]** to scroll through menu until “CONTRAST” appears.
3. Press **[M]** to select Contrast menu.
4. Press **[v]** or **[^]** to adjust contrast setting from 1 - 4.
5. Press **[M]** to select new contrast setting.

10.14 DECLARING AN EMERGENCY

1. Press and hold the red Emergency/Home button (the length of time is programmable; check with the system administrator).

2. *TXEMER* will flash in the display, plus  and  will be displayed. After 2-3 seconds the transmit icon  will turn off.
3. *TXEMER* and  will remain until the emergency is cleared. (Refer to Section 8.21 for more detail concerning emergency operation.)
4. Press the PTT and  will reappear.
5. Release PTT when the transmission is complete.

10.15 LOCKING/UNLOCKING KEYPAD





1. Press  button.
2. Within 1 second, press the Option button on the side of the radio.

10.16 HIGH/LOW POWER ADJUSTMENT

Transmit power adjustment is possible if enabled through programming. Within conventional systems, transmit power is adjustable on a per channel basis. Within EDACS trunking systems, transmit power is adjustable on a per system basis.

There are two ways to toggle between high and low power:

Using the Menu Button:

1. Press .
2. Using the  or  key, scroll until the cursor (>) appears to the left of “TX POWER” in the display.
3. Press  again to toggle between High and Low power.
4. “POWER = HIGH” or “POWER = LOW” will appear momentarily on the top line of the display.

Using the Pre-Programmed Option Button:

Press the Option button. “POWER = HIGH” or “POWER = LOW” will appear momentarily on the top line of the display.

10.17 DIGITAL VOICE OPERATION

Digital voice programmed systems have three (3) different voice modes: clear (analog), digital, and private (encrypted). The voice modes are programmed on a per-group basis within each trunked system and on a per-channel basis within each conventional system.

10.17.1 Clear Mode

The Clear Mode is a voice mode in which the radio transmits and receives only clear (analog) voice signals. These analog signals are non-digitized. Clear mode transmissions can be monitored easily by unauthorized persons.



NOTE

Groups or channels programmed for clear operation cannot transmit or receive digital messages.

10.17.2 Digital Mode

The Digital Mode allows the radio to transmit and receive digitized voice signals. Digital signals provide improved weak signal performance and cannot be easily monitored with a standard receiver. Groups and channels programmed for digital operation transmit only digital signals. Individual phone calls (I-Calls) are answered back in the mode in which they were received assuming the call or hang time is still active. Individual phone, all call, and emergency calls are transmitted clear if the digital mode is disabled or inoperative.

1. If receiving an analog message trunked call, the radio responds in the analog mode during the hang time on the working channel.
2. If receiving an analog I-Call, the radio responds in the analog mode during the hang time.
3. When using the ***UHC*** feature to respond to an I-Call (after the hang time has expired), the call is transmitted in the mode defined by the system mode as programmed for the current system if the ID being called is not in the I-Call list. If the ID is in the I-Call list, then the call is transmitted as defined by the I-Call mode programmed in the list for that ID.

The overidial DTMF tones are not available while in the Digital Mode.

10.17.2.1 Scanned Group Calls

Receiving a Scanned Group Call is the same as receiving a selected group call. During the scan hang time, if the radio was programmed for auto-select, it will transmit back in the same mode it received the call. For example, if a clear group is entered in the scan list, it will only receive clear calls. If the same group was available in digital and entered in the scan list, it can receive clear and digital calls, provided auto-select was programmed in the radio. The user can choose to transmit on the scanned or selected group. If a group is entered in the scan list more than once under different modes (clear and digital), only the first occurrence of the group will be used.

Table 10-5: Transmit/Receive Mode Compatibility for Digital Voice Operation

GROUP/CHANNEL PROGRAMMING (TRANSMIT)	CLEAR RECEIVE	DIGITAL RECEIVE
CLEAR	Yes	No
DIGITAL	Yes	Yes



Conventional digital channels require Channel Guard on the channel to operate correctly.




The voice coding technology embodied in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The user of this technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into human-readable form.

10.18 RECEIVING A CALL

1. Select the desired conventional system/channel or turn scan ON and make sure desired channel is in scan list.

2. When the radio receives a call, the radio will unmute and the channel name will appear in the display.

10.19 SENDING A CALL

1. Select desired system/channel.
2. Ensure the channel is not busy by pressing the © button momentarily. If audio is heard or if the  icon is on, the channel is busy.
3. When you're sure that the channel is not busy, press the PTT button and speak into the microphone.

This page intentionally left blank

P25 OPERATION

11 P25 OPERATION

Once a P25 system has been selected from the available systems on your P7300 series portable radio, the characteristics described in the following sections will govern operation.

11.1 CONTROLS

The radio features two rotary control knobs and an emergency button mounted on the top of the radio. Push-To-Talk and option buttons are mounted on the side. The front mounted keypad has six buttons on the P7350 Scan model and 15 buttons on the P7370 System Radio.

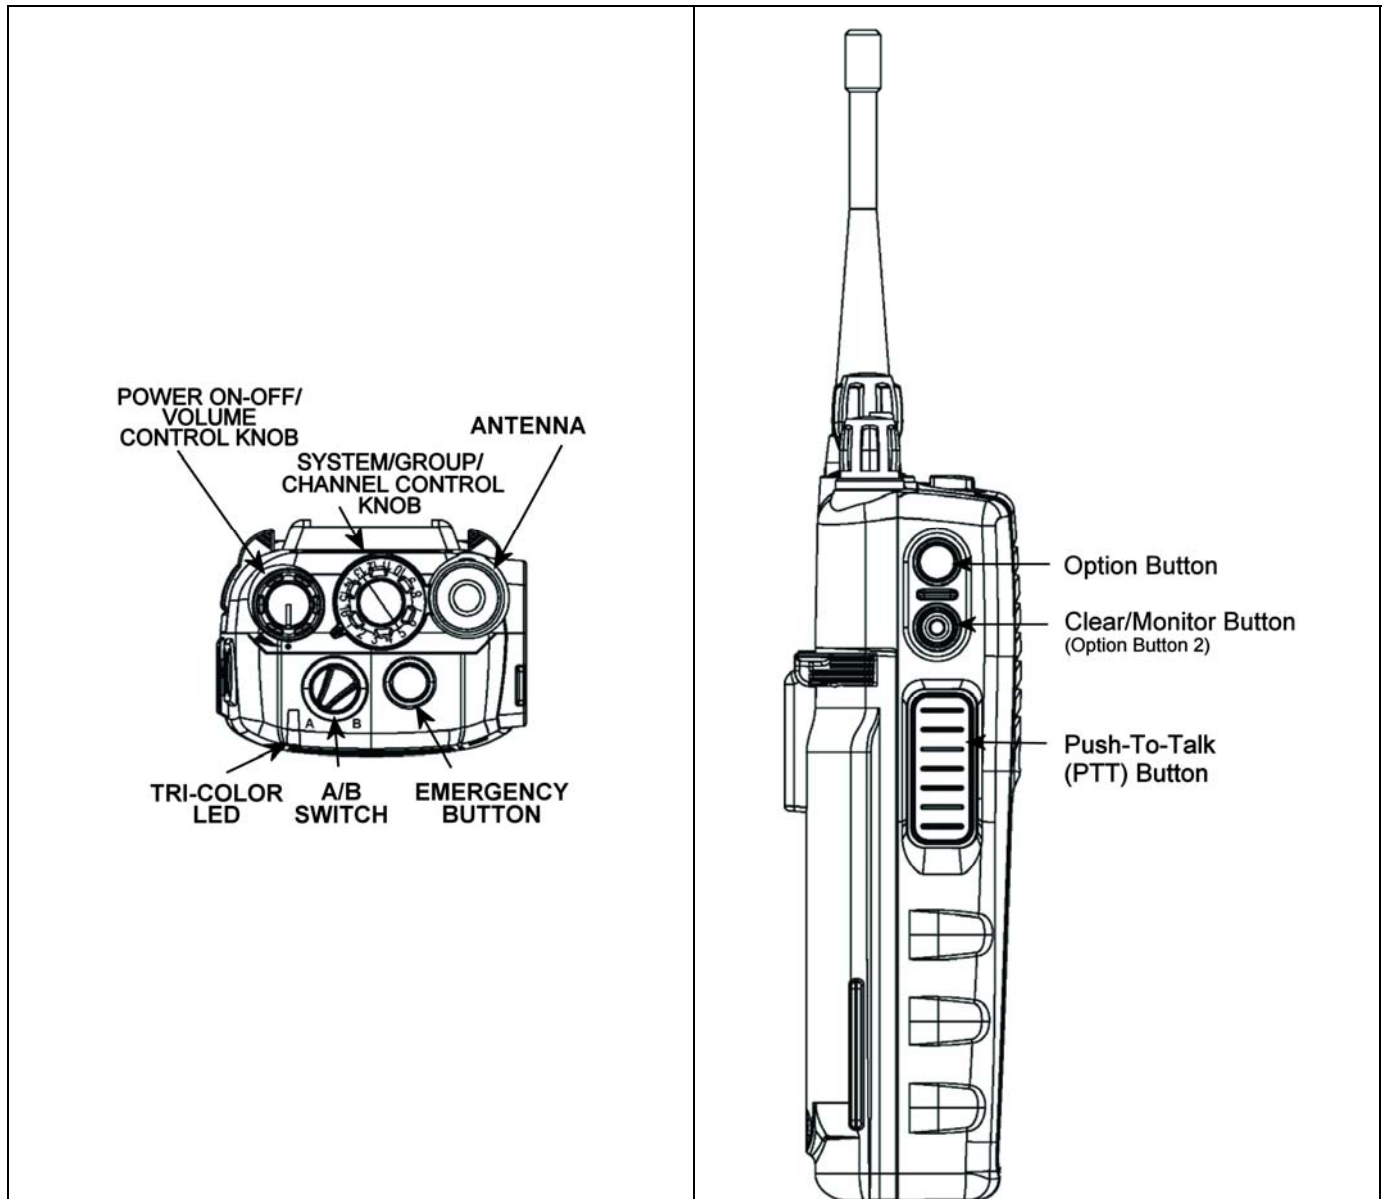




Figure 11-1: Top View

Figure 11-2: Side View

11.1.1 Buttons and Knobs

This section describes the primary function of the button and knob controls. Refer to Figure 11-1 and Figure 11-2.

- POWER ON/OFF-VOLUME CONTROL KNOB** Applies power to and adjusts the receiver's volume. Rotating the control clockwise applies power to the radio. A single alert tone (if enabled through programming) indicates the radio is operational.
- Rotating the control clockwise increases the volume level. Minimum volume levels may be programmed into the radio to prevent missed calls due to a low volume setting. While adjusting the volume the display will momentarily indicate the volume level (i.e. **VOL=31**). The volume range is from a minimum programmed level of zero (displayed as **OFF** in the display) up to 40, which is the loudest level.
- SYSTEM/GROUP/CHANNEL CONTROL KNOB** Selects systems or groups/channels (depending on programming). This is a 16-position rotary knob.
- Note:* A mechanical stop, which can limit the positions accessed, is shipped with the radio but must be installed. To install the mechanical stop, remove the System/Group/Channel control knob, loosen the set screw on the System/Group/Channel control knob metal base (using a 1.27 mm hex wrench), and remove the System/Group/Channel control knob metal base. Replace the 16 channel ring with the channel stop ring located at the desired channel. Reinstall the System/Group/Channel control knob metal base, tighten the set screw, and reinstall the System/Group/Channel control knob.
- EMERGENCY/HOME BUTTON** Automatically selects the pre-programmed Group/System by pressing and holding for a programmed duration. It can also be used to declare an emergency by pressing and holding for a programmed duration. The button must be pre-programmed for either operation, but not both.
- PTT BUTTON** Push-To-Talk must be pressed before voice transmission begins. In trunked mode the radio's ID is transmitted upon depression of the PTT button.
- OPTION BUTTON**  Activates one of a number of programmable software options selected during PC programming. Programmable options include hi/low power settings, keypad lock, LCD contrast, and LCD and keypad back lighting.
- CLEAR/MONITOR BUTTON**  (OPTION BUTTON 2) Unsquelsches the receiver and allows channel monitoring prior to transmission. Momentarily removes the Receiver Channel Guard decoding from the channel.

11.1.2 Keypad

The keys on the keypad have special functions and are labeled using a symbol or abbreviated word describing its primary function. Alpha-numeric entry is a secondary function of the keys. Each key is described in the following subsections.

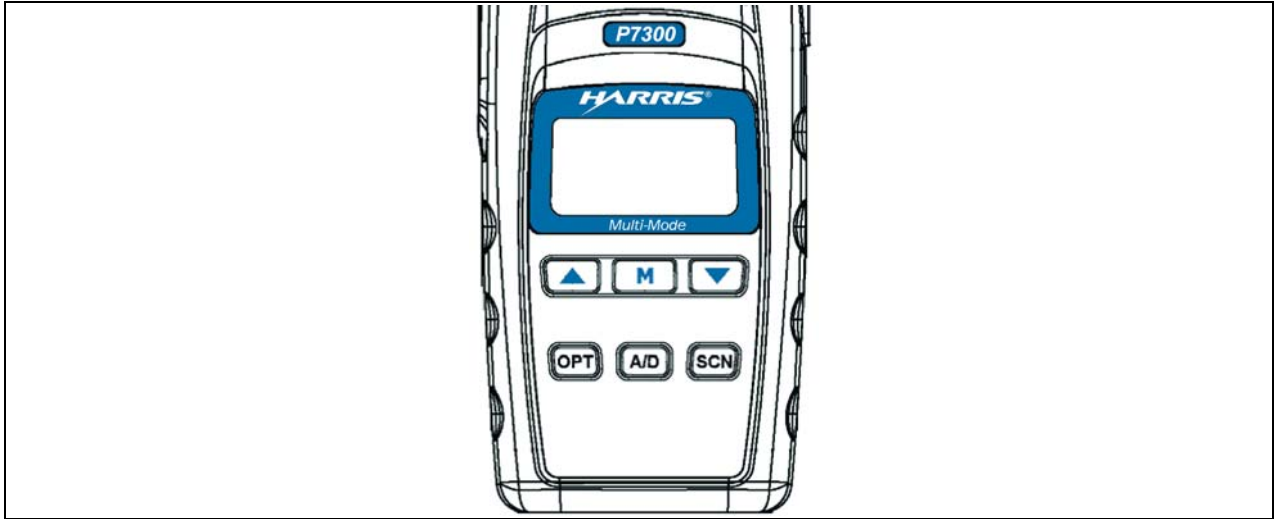


Figure 11-3: P7350 “Scan” Radio Front Panel
















Table 11-1: P7350 Keypad Functions

KEY	FUNCTION
M	<u>Primary Function:</u> Accesses the pre-stored menu. <u>Secondary Function:</u> Activates a selected item within the menu. This is similar to an “Enter” key.
▲ ▼	Scrolls thru available menu items.
OPT	Activates one of any programmable software options selected during the PC programming, including: high/low TX power and talkaround.
SCN	Toggles SCAN operation ON and OFF.
A/D	Adds/Deletes selected groups or channels from SCAN list of the currently selected system.



Figure 11-4: P7370 “System” Radio Front Panel

Table 11-2: P7370 “System” Keypad Functions

KEY	FUNCTION
	<u>Primary Function:</u> Accesses the pre-stored menu. <u>Secondary Function:</u> Activates a selected item within the menu. This is similar to an “Enter” key.
	<u>Primary Function:</u> Allows the user to scroll through available systems, groups, or channels, depending on personality programming. <u>Secondary Function:</u> Changes the selection for an item within a list.
0-9,  PHN and  IND	<u>Primary Function:</u> Refer to the separate key definitions within this table. <u>Secondary Function:</u> These keys function much as a typical DTMF telephone pad 0-9, *, and # keys; and are used to place telephone interconnect and individual (unit-to-unit) calls.
	Selects a specific system. If the rotary knob is used to select the system and more than 16 systems are programmed in the radio, the  key is used to select additional banks (groupings) of systems.
	Selects a specific group.
	Turns the Scan operation ON and OFF.
	Enables or disables Private Mode for the system/group/channel displayed.
	Adds groups or channels from the currently selected system to the Scan list.
	Status. Access to the status list (0-9). The Status key permits the transmission of a pre-programmed status message to an EDACS site.
	Message. Access to the message list (0-9). The Message key permits the transmission of a pre-programmed message to an EDACS site.
	Deletes selected groups or channels of the currently selected system from the Scan list.
	Initiates telephone interconnect calls.
	Initiates individual unit-to-unit calls.

11.2 DISPLAY

The radio display is made up of 3 lines (see Figure 11-5). Lines 1 and 2 contain eight alphanumeric character blocks and are used primarily to display system and group names. Line 1 also displays radio status messages. The 3rd line is used primarily to display radio status icons. All three lines are used to display menu options when in the menu mode. If programmed, the display backlighting will illuminate upon power up or when radio controls are operated.

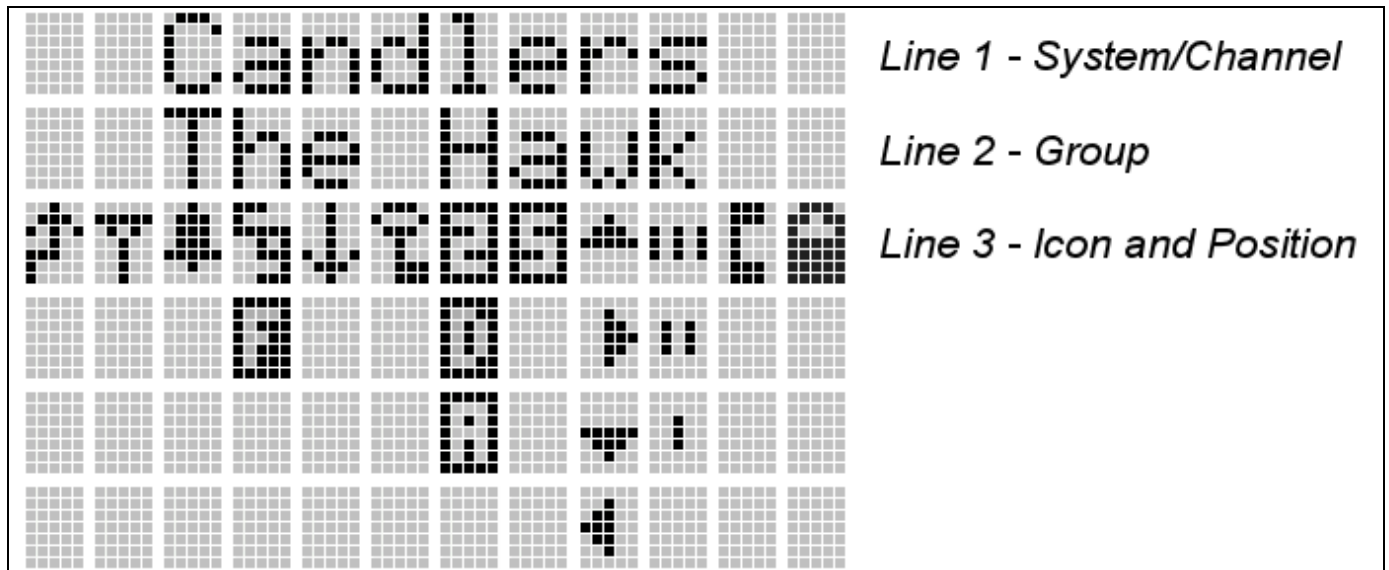


















Figure 11-5: P7300 Radio Display

11.3 RADIO STATUS ICONS

Status Icons indicate the various operating characteristics of the radio. The icons show operating modes and conditions and appear on the third line of the display (see Table 11-3).

Table 11-3: Radio Status Icon Descriptions

EDACS, CONVENTIONAL, AND P25 ICONS	
	Steady – during all radio transmissions. Appears in the 1 st position of the display.
	Steady – “Busy” transmitting or receiving. Appears in the 2 nd position of the display. Flashing – call queued.
	Steady – T99 Mode enabled. Appears in the 3 rd position of the display.
	Steady – Channel Guard enabled. Appears in the 4 th position of the display. If icon is not visible – Channel Guard is disabled.
	Steady – trunked system in Failsoft™ mode. Appears in the 4 th position of the display.
	Steady – transmit at low power. Appears in the 5 th position of the display. If icon is not visible – transmit at high power.
	Steady – transmit in encrypt mode. Appears in the 6 th position of the display. Flashing – receiving an encrypted call.
	Steady – Indicates the current channel is set up as a Project 25 (P25) channel. Appears in the 7 th (and 8 th) positions of the display.
	Steady – Indicates the current channel is set up as a ProVoice channel. Appears in the 7 th position of the display.
	Steady – Indicates the current channel is set up as an analog channel. Appears in the 7 th position of the display.
	Animated (rotates clockwise) – scan mode enabled. Appears in the 9 th position of the display. If icon is not visible – scan is disabled.
	Steady – priority 1 group or channel. Appears in the 10 th position of the display.
	Steady – priority 2 group or channel. Appears in the 10 th position of the display.
	Steady – group or channel in scan list. Appears in the 10 th position of the display.
	Steady – special call mode (individual or telephone). Appears in the 11 th position of the display.
	Steady – battery charge indicators. Appear in the 12 th position of the display. Flashing – Low battery indicator.

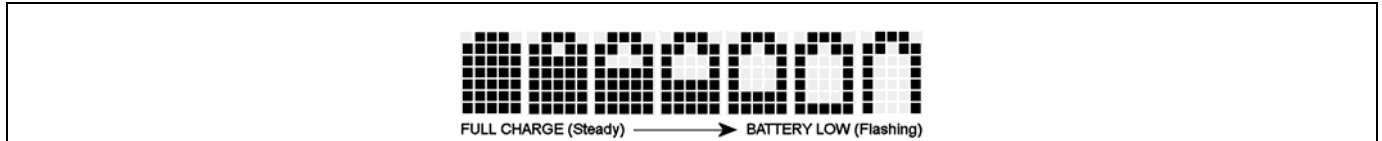


Figure 11-6: Full Cycle Battery Charge Indicator

The battery charge indicators illustrate approximate level only, based on battery voltage. Refer to Figure 11-6.

11.4 TRI-COLOR LED

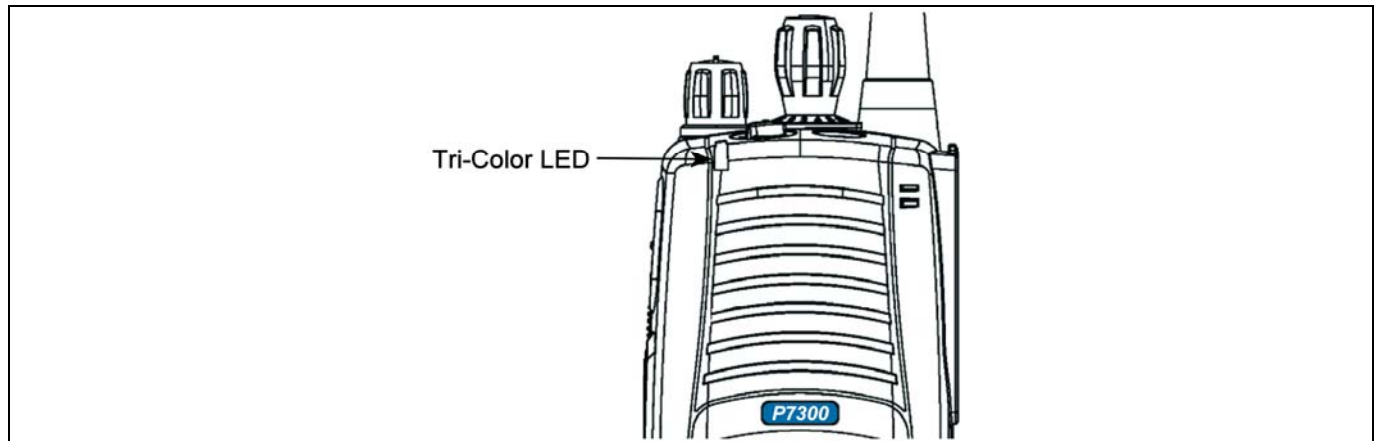


Figure 11-7: Tri-Color LED

The Tri-Color LED changes color to indicate radio status and is visible from both the front and top of the radio (see Figure 11-7). The colors of the LED and the status they represent while operating in EDACS and P25 modes are defined below.

- Green: Receiving
- Red: Unencrypted transmission
- Orange: Encrypted transmission

11.5 STATUS MESSAGES

During radio operation, various radio Status Messages can be displayed. The messages are described below.

<u>MESSAGE</u>	<u>NAME</u>	<u>DESCRIPTION</u>
QUEUED	Call Queued	Indicates the system has placed the call in a request queue.
SYS BUSY	System Busy	Indicates the system is busy, no channels are currently available, the queue is full, or an individual call is being attempted to a radio that is currently transmitting.
DENIED	Call Denied	Indicates the radio or talkgroup is not authorized to operate on the selected system and/or talkgroup.

<u>MESSAGE</u>	<u>NAME</u>	<u>DESCRIPTION</u>
CC SCAN	Control Channel Scan	Indicates the control channel is lost and the radio has entered the Control Channel Scan mode to search for the control channel (usually out of range indication).
WA SCAN	Wide Area Scan	Indicates the radio has entered the Wide Area Scan mode to search for a new system (if enabled through programming).
SYSC ON	System Scan Features On	Indicates the System Scan features are enabled.
SYSC OFF	System Scan Features Off	Indicates the System Scan features are disabled.
LOW BATT	Low Battery	Battery voltage has dropped to the point to where the radio is no longer able to transmit. The radio will still receive calls until the battery is discharged beyond the point of operation at which time the radio automatically shuts down.
RXEMER	Receive Emergency	Indicates an emergency call is being received. This message will be flashing on line two.
TXEMER	Transmit Emergency	Indicates an emergency call has been transmitted on this radio. This message will be flashing on line two.
VOL=31	Volume Level	Indicates the current volume level. The volume level display ranges from OFF (silent) to 40 (loudest).
WHC	Who Has Called	Indicates an individual call has been received, but not responded to. The indicator turns OFF if the individual call mode is entered, the system is changed, or the radio is turned off and then on again.
UNKNOWN	Unknown ID	Indicates an individual call is being received from an unknown ID.

11.5.1 Error Messages

If either of the Error Messages shown below is displayed, the radio is programmed incorrectly or needs servicing.

```
DSP ERR      or  DIG U
ERR=XXXX     ERR
(PowerUp
only)
```

Where: `xxxx` is the error code and `DSP ERR` or `DIG U ERR` is the message.

11.6 ALERT TONES

The P7300 series radios provide audible Alert Tones or “beeps” to indicate the various operating conditions (see Table 11-4).

Table 11-4: Alert Tones

NAME	STONE	DESCRIPTION
Call Originate	one short mid-pitched	<i>OK to talk after pressing the push-to-talk button</i>
Call Queued	one high-pitched	<i>Call queued for processing</i>
Autokey	one mid-pitched	<i>Queued call received channel assignment</i>
System Busy	three low-pitched	<i>System busy or unable to complete call</i>
Call Denied	one low-pitched	<i>Radio is not authorized on the system or group</i>
Carrier Control Timer	five high-pitched/one long low-pitched	<i>PTT depressed for maximum length of time</i>
Low Battery	one low-pitched/one short mid-pitched	<i>Low battery</i>
TX Low Battery Alert	one low-pitched	<i>After PTT - battery too low to transmit</i>

11.7 TURNING ON THE RADIO

1. Power ON the radio by rotating the POWER ON-OFF/VOLUME knob clockwise. A short alert signal (if enabled through programming) indicates the radio is ready to use.
2. The display shows the last selected system and group or a default system and group (depending on programming).
3. Adjust the POWER ON-OFF/VOLUME knob to the desired volume level.
4. Select the desired system and group. The display indicates the current system and group names.
5. The radio is now ready to transmit and receive calls.



11.8 SYSTEM SELECTION

METHOD 1: From the Control knob: If system selection is programmed to the System/Group/Channel control knob, select a system by turning the knob to the desired system number position (1-16). The display registers the new system name on line one. The **[1SYS]** button can be programmed to provide access to a “2nd bank” of 16 system number positions (17-32).

METHOD 2: From the keypad: If system selection is programmed as the primary function of **[▼]** and **[▲]** select a system by pressing **[▼]** or **[▲]** to scroll through the system list. The display registers the new system name on line one.




METHOD 3: **(P7370 model radios only)** Direct Access: Press **[1SYS]** to enter the system select mode. Press the numeric key, which is mapped to the desired system. Press **[M]**. The radio will move to the selected system.



If system selection is programmed to the System/Group/Channel control knob, direct access to systems will not be available. Pressing  or  will scroll through different sets of 16 systems each (banks) if more than 16 systems are programmed into the radio. The systems within each bank are then selectable via the System/Group/Channel control knob as described previously in METHOD 1.








Example:

System: 1 = North	Group: 1 = Group 1
2 = South	2 = Group 2
3 = East	3 = Group 3
4 = West	4 = Group 4

1. Press . (South is the currently selected system.)
2. Press . (Press 4 to select “West” system.)
3. Press . (West is the newly selected system.)








11.8.1 GROUP/CHANNEL SELECTION

Several methods can be used to select a new group or channel.


- METHOD 1:** From the Control knob: If group selection is programmed to the System/Group/Channel control knob, select a group by turning the System/Group/Channel control knob to the desired group number position. The display registers the new group name on line two. If the knob is moved to a position greater than the number of programmed groups, the highest programmed group will remain selected. The  button can be programmed to provide access to a “2nd bank” of 16 group number positions (17-32).
- METHOD 2:** From keypad: If group selection is programmed as the primary function of  and , select a group by pressing  or  to scroll through the group list. The display registers the new group name on line two.
- METHOD 3:** (**P7370 model radios only**) Direct Access: Press  to enter the group select mode. Press the numeric key mapped to the desired group. Press . The radio will move to the selected group.

11.9 MODIFY SCAN LIST

11.9.1 P7370 Model

1. Press  to toggle scan OFF and verify  is **not** displayed.
2. Select group or channel.
3. Press  once to remove group from list.
4. Press  once to add as a normal group.
5. Press  twice to add as a Priority 2 group.
6. Press  three times to add as a Priority 1 group.
7. Press  to re-start scanning.

11.9.2 P7350 Model

1. Press **[SCN]** to toggle scan OFF and verify  is **not** displayed.
2. Select group or channel.
3. Press **[AD]** once to remove group from the list.
4. Press **[AD]** once to add as a normal group.
5. Press **[AD]** twice to add as a Priority 2 group.
6. Press **[AD]** three times to add as a Priority 1 group.
7. Press **[SCN]** to re-start scanning.

11.10 MENU

The Menu function accesses features that are not available directly from the keypad. The order and actual menu items available is configurable through programming. Upon radio power up, the menu item that is at the top of the menu list will always be displayed first. Subsequent access to the menu function will return the last menu item that was shown in the display and cursor position.

1. To enter the menu mode, press **[M]**.
2. Upon entering the menu selection mode, Menu options will appear in the display (see Figure 11-8).

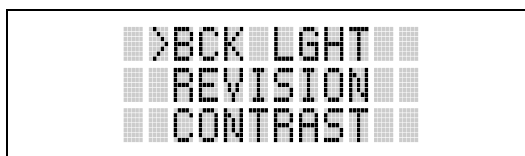


Figure 11-8: Menu Display

3. The radio will continue to receive and transmit normally while in the menu function.
4. To scroll through the menu options use the **[▼]** or **[▲]** keys. When the required menu item has been found align the cursor with the option then press **[M]** to select it. The menu item's parameter setting shown in the display can now be changed by using **[▼]** or **[▲]** to scroll through the list of parameter values.
5. Once the desired setting is reached press **[M]** to store the value and return the menu option selection level.

For menu items that display radio information, pressing **[▼]** or **[▲]** will scroll through a list of informational displays. Possible menu items are listed in Table 11-5.

11.10.1 Menu Item Selection Process

An example of the backlight menu item selection process and menu item parameter change is shown in Figure 11-9.

1. Press **[M]**. The menu mode is entered.
2. Press **[▼]** or **[▲]** until the display shows:

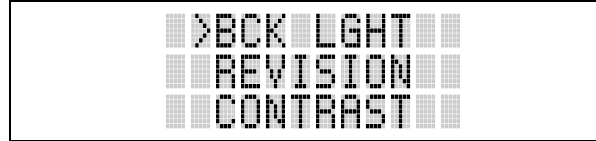


Figure 11-9: Backlight Menu Item Selection Parameter

3. Press . The backlight menu item is activated. Line one shows the active menu item and its current parameter setting. Line two shows the currently selected system or group name (see Figure 11-10).

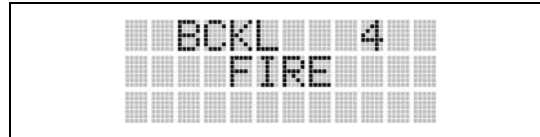


Figure 11-10: Backlight Menu Display

4. The menu item's parameter setting shown in the display can now be changed by using or .
5. Once the desired setting is reached press to store the value and return the menu option selection level.

For menu items that display radio information pressing or will scroll through a list of informational displays. An example of information displays is shown in Table 11-6.



NOTE

The TX POWER menu item, when selected, toggles LOW/HIGH power. It does not use or to scroll nor is an additional press of the button required.

Table 11-5: Menu Item Information

FEATURE	DISPLAY	PARAMETER SETTING	COMMENT
Keypad Lock	Menu Item: KEY LOCK Once Selected: LOCKED	Locked Unlocked	Locks the keypad. To unlock; press and release [M] then within 1 second press the option button <i>NOTE:</i> This sequence is also a short cut to locking the keypad.
Backlight Adjust	Menu Item: BCK LIGHT Once Selected: BCKL=	OFF, 1 thru 6	Selects the light level for backlighting.
Contrast Adjust	Menu Item: CONTRAST Once Selected: CNTRST=	1, 2, 3, 4	Selects the display contrast level.
Transmit Power Select	Menu Item: TX POWER Once Selected: POWER=	HIGH or LOW	Selects radio output power mode.
Radio Revision Information	Menu Item: REVISION	N/A	Selects the information display to view. Informational display only. <i>No user selectable settings.</i>
Toggle Scan On/Off	SCAN	ON/OFF	Toggles Scan operation ON/OFF.
Toggle Private Mode	PRIVATE	ON/OFF	Toggles Private Mode ON/OFF.
Display Current Encryption Key	DISP KEY	N/A	Displays current encryption key. Informational display only. <i>No selectable settings.</i>
Display Current Home Group/Channel	HOME	N/A	Selects Home Group/Channel
Select Desired System	SYS SEL	N/A	Selects a new system.
Add Group/Channel to Scan List	SCAN ADD	N/A	Adds to Scan List.
Delete Group/Channel	SCAN DEL	N/A	Deletes Group or Channel from Scan List.
Add/Delete Scan List	SCAN A/D	N/A	Add or Delete from Scan List.
Select Telephone Numbers From Phone List	PHN CALL	N/A	Trunked Only.
Data Operation	NO DATA	ON/OFF	Trunked Only. Toggles Data Operation ON/OFF.
Select Individual Call from IC List	IND CALL	N/A	Trunked Only.
Select Group	GRP SEL	N/A	Trunked Only.
Feature Encryption Display	Menu Item: FEATURES	N/A	Indicates current features programmed into the radio as well as certain information required to add features to the radio. <i>Informational display only. No user selectable settings.</i>
System Scan Enable	Menu Item: SYS SCAN Once Selected: SYSC ON or SYSC OFF	ON/OFF	Toggles System Scan feature ON/OFF.

Table 11-6: Information Display

RADIO ID XXXXXXXX	LID in EDACS/EA In CONV it has no meaning.
RAM SIZ	RAM Size
FLSH SIZ	Flash Size
RF BAND	Frequency Band
PERS VER	Software Version
DSP DATE	Date DSP code was built.
DSP TIME	Time DSP code was built.
DSP FEAT	The DSP Features supported by the DSP code, in Hexadecimal. Bit mapped (see IPC spec for details): <ul style="list-style-type: none"> • 0x0001 – Conventional • 0x0002 – EDACS • 0x0010 – AMPF • 0x0020 – undefined
DSP VER	DSP Software Version
FLSH VER	FLASH Software ex: P73U0102 P=portable, 54=5400 radio, U=unencrypted, 01=major revision (>50 means unreleased code), 02=minor revision
HARRIS (C) 2009	Copyright
PERSNLTY	Personality Name
BLD DATE	Date host (ARM) code was built.
BLD TIME	Time host (ARM) code was built.

11.11 BACKLIGHT ADJUST






1. Press **[M]** to access the menu.
2. Press **[v]** or **[^]** to scroll through menu until “BCKLGHT” appears.
3. Press **[M]** to select Backlight menu.
4. Press **[v]** or **[^]** to scroll through available settings OFF, 1 through 6.
5. Press **[M]** to select new backlight setting.

11.12 CONTRAST ADJUST



1. Press **[M]** to access the menu.
2. Press **[v]** or **[^]** to scroll through menu until “CONTRAST” appears.
3. Press **[M]** to select Contrast menu.
4. Press **[v]** or **[^]** to adjust contrast setting from 1 - 4.
5. Press **[M]** to select new contrast setting.

11.13 DECLARING AN EMERGENCY

1. Press and hold the red Emergency/Home button (the length of time is programmable; check with the system administrator).

2. ***TXEMER*** will flash in the display, plus  and  will be displayed. After 2-3 seconds the transmit icon  will turn off.
3. ***TXEMER*** and  will remain until the emergency is cleared. Refer to Section 11.19 for more detail regarding emergency operation.
4. Press the PTT and  will reappear.
5. Release PTT when the transmission is complete.

11.14 LOCKING/UNLOCKING KEYPAD





1. Press  button.
2. Within 1 second, press the  button on the side of the radio.

11.15 HIGH/LOW POWER ADJUSTMENT

Transmit power adjustment is possible if enabled through programming. Within conventional systems, transmit power is adjustable on a per channel basis. Within EDACS trunking systems, transmit power is adjustable on a per system basis.

There are two ways to toggle between high and low power, described in Sections 11.15.1 and 11.15.2.

11.15.1 Using the Menu Button

1. Press .
2. Using the  or  keys, scroll until the cursor (>) appears to the left of “TX POWER” in the display.
3. Press  again to toggle between High and Low power.
4. “POWER = HIGH” or “POWER = LOW” will appear momentarily on the top line of the display.

11.15.2 Using the Pre-Programmed Option Button

Press the Option button. “POWER = HIGH” or “POWER = LOW” will appear momentarily on the top line of the display.

11.16 DIGITAL VOICE OPERATION

Digital voice programmed systems have three (3) different voice modes: clear (analog), digital, and private (encrypted). The voice modes are programmed on a per-group basis within each trunked system and on a per-channel basis within each conventional system.

11.16.1 Clear Mode

The Clear Mode is a voice mode in which the radio transmits and receives only clear (analog) voice signals. These analog signals are non-digitized and non-encrypted. Clear mode transmissions can be monitored easily by unauthorized persons.



Groups or channels programmed for clear operation cannot transmit or receive digital or private messages.

11.16.2 Digital Mode

The Digital Mode allows the radio to transmit and receive digitized voice signals. Digital signals provide improved weak signal performance and cannot be easily monitored with a standard receiver. Groups programmed for digital operation transmit only digital signals. Message trunked group calls and individual phone calls (I-Calls) are answered back in the mode in which they were received assuming the call or hang time is still active. Individual phone, all call, and emergency calls are transmitted clear if the digital mode is disabled or inoperative.



1. If receiving an analog message trunked call, the radio responds in the analog mode during the hang time on the working channel.
2. If receiving an analog I-Call, the radio responds in the analog mode during the hang time.
3. When using the ***UHC*** feature to respond to an I-Call (after the hang time has expired), the call is transmitted in the mode defined by the system mode as programmed for the current system if the ID being called is not in the I-Call list. If the ID is in the I-Call list, then the call is transmitted as defined by the I-Call mode programmed in the list for that ID.

The overdial DTMF tones are not available while in the Digital Mode.

11.16.3 Private Mode




The Private Mode allows the radio to transmit encrypted messages and receive clear or private transmissions. The radio transmits private if the group is programmed for private operation and forced operation is pre-programmed. If auto-select operation is pre-programmed and the radio is in the Private Mode, the radio transmits in the mode of the received call if the hang time is active. If no hang time is active, the radio transmits private.



Cryptographic keys are transferred to the radio using a cryptographic Keyloader. Up to seven (7) different cryptographic keys, numbered 1-7, can be transferred from a Keyloader and stored in the radio. An individual key is automatically selected on a per-group basis according to the radio programming. Groups and channels within the digital system can be programmed for keys 1-7 (private). Up to 8 banks of 7 keys can be stored for private systems. The bank is specified per system.

When operating on a group programmed for Private Mode, all transmissions are private transmissions and the radio receives clear and private signals. The status icon  is displayed when the Private Mode is enabled. If the selected group is programmed for auto-select capability, the mode may be toggled between private and clear with the  key, then following the selection mode rules. Radios programmed for forced private operation do not allow a change of the transmit mode.

11.16.3.1 Displaying the Currently Used Cryptographic Key Number

To display the currently used Cryptographic Key Number for either the system encryption key (for special call such as individual, phone, all, agency or fleet) or the group key (for group calls), perform the following procedure:

1. Press the  button.
2. Use the  or  button to select "**DISP KEY.**"

- Use the  or  button to toggle between displaying the system key (Figure 11-11) or the group/channel key (Figure 11-12).

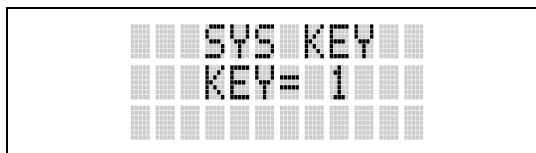


Figure 11-11: System Encryption Key Display

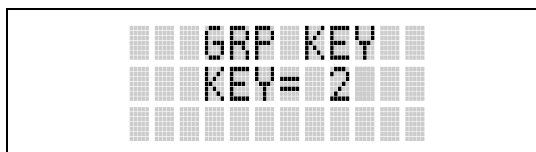



Figure 11-12: Group/Channel Encryption Key Display


11.16.3.2 Key Zero

All cryptographic keys can be zeroed (erased from radio memory) by pressing the  button and while still pressing this button, press and hold the OPTION button. Press both buttons for 2 seconds. A series of beeps will begin at the start of the 2 second period and then switch to a solid tone after the keys have been zeroed. The display will indicate **KEY ZERO**.




If the cryptographic key(s) are zeroed, one or more keys must be transferred from the Keyloader into the radio before private communications may continue.

11.16.4 Private Operation

11.16.4.1 Receiving an Encrypted Call

When receiving, the radio automatically switches between clear or private operation. If the transmission being received is an encrypted transmission, it will be decrypted, the  icon is displayed, the receiver will unsquelch and the message will be heard in the speaker. For this to occur, the selected group or channel must be programmed for private operation and the correct cryptographic key must be loaded into the radio.

11.16.4.2 Transmitting an Encrypted Call

- Select the desired group or channel.
- Place the radio in Private Mode by pressing  key; then follow the selection mode rules. On a System radio, the  key can be used to toggle the Private Mode ON/OFF. When Private Mode is enabled, the  icon is displayed.
- If the last state of the radio was Private Mode, the Private Mode will be enabled on power up. Also, the Private Mode will be enabled if forced operation has been programmed in the radio.

If a group is not programmed for Private Mode operation, **PVT DIS** will be displayed if an attempt is made to enable private transmit mode. It is not possible to operate on this group in Private Mode.

If the radio does not have the correct encryption key loaded, **NO KEY#** will be displayed and the call will not be transmitted.

- Continue with standard transmission procedures. A Private Mode access tone will be heard when the PTT button is pressed.

11.16.4.3 Scanned Group Calls

Receiving a Scanned Group Call is the same as receiving a selected group call. During the scan hang time, if the radio was programmed for auto-select, it will transmit back in the same mode it received the call. For example, if a clear group is entered in the scan list, it will only receive clear calls. If the same group was available in private and entered in the scan list, it can receive clear and private calls, provided auto-select was programmed in the radio. The user can select transmitting on the scanned or selected group. If a group is entered in the scan list more than once, and in different modes (clear, digital, or private), only the first occurrence of the group will be used.

Table 11-7: Transmit/Receive Mode Compatibility for Digital Voice Operation

GROUP PROGRAMMING (TRANSMIT)	CLEAR RECEIVE	DIGITAL RECEIVE	PRIVATE RECEIVE
CLEAR	Yes	No	No
DIGITAL	Yes	Yes	No
PRIVATE	Yes	No	Yes*

*assumes the proper cryptographic key is loaded



Conventional digital or encrypted channels require Channel Guard on the channel to operate correctly.









The voice coding technology embodied in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The user of this technology is explicitly prohibited from attempting to de-compile, reverse engineer, or to disassemble the Object Code, or in any other way convert the Object Code into a human-readable form.

11.17 SCANNING TRUNKED GROUPS

Groups that have been previously added to the scan list on a per system basis may be scanned. Each system's group scan list is retained in memory when the radio is powered OFF or when the battery pack is removed.







11.17.1 Turning Scan On and Off

- Toggle Scan operation ON by pressing  (P7350 model) or  (P7370 model). The  icon rotates clockwise to indicate radio is scanning.
- Toggle Scan operation OFF by again pressing  (P7350 model) or  (P7370 model). The  will disappear.
 - If the radio scans to a group other than the selected group then receives a call on the selected group, the radio will switch to the selected group. However, if the “scanned-to” group is programmed at a higher priority the radio will remain on the “scanned-to” group.

- The radio will continue scanning if a new group is selected when scan is ON.
3. Pressing the PTT button when scan is ON will cause the radio to transmit on the displayed group or to the currently selected group (depending on programming).

11.17.2 Adding Groups to a Scan List

P7350 Model Radio

1. Scan must be OFF to add/delete groups to/from the scan list. If the Scan icon  is ON, press the **[SCN]** key to turn Scan OFF.
2. Select the desired group using the System/Group/Channel control knob and/or the **[▼]** or **[▲]** keys. If the selected group is currently on the list, pressing **[ADD]** will display  on line three.
3. If the scan list status icon is blank () , the group can be added to the scan list by pressing the **[ADD]** key.  will be displayed on line three.
4. Press the **[ADD]** key a second time to set the group to Priority 2. A  is displayed on line three.
5. Press **[ADD]** a third time to set the group to Priority 1. A  is displayed on line three. The priority level section sequence only advances the group to the next high priority level and stops at priority level 1. To select a lower priority level, the group must be deleted from the scan list and then added back to the scan list. Each new group added to the scan list starts at the lowest priority. If the Priority 1 and Priority 2 groups are already set and a new group is assigned as Priority 1 or Priority 2, the previously assigned group will change to non-priority scanning. One of the following messages may be momentarily displayed.

SCAN DIS The radio is not programmed to scan.

FIXED P1 A Priority 1 group has been pre-programmed into the radio. A new Priority 1 group cannot be selected.




FIXD LST A fixed scan list has been pre-programmed into the radio. It is not possible to change the list without reprogramming the radio.



NOTE

To quickly view multiple group scan status, press **[ADD]** then slowly but consistently rotate the group knob. Each group status will appear on the display.

P7370 Model Radio

1. With scan operation turned OFF, select the desired group to add to the selected trunked system group scan list.
2. Press **[6 ADD]**. The current priority status of the group will be displayed in column 10 of line three for a time-out period. If the group is not part of the scan list the status will be blank.
3. While the status is displayed, press **[6 ADD]** to add the group to the scan list.  is displayed on line three.
4. Press **[6 ADD]** a second time to set the group to Priority 2. A  is displayed on line three.
5. Press **[6 ADD]** a third time to set the group to Priority 1. A  is displayed on line three. The priority level selection sequence only advances the group to next higher priority level and stops at priority level 1.

To select a lower priority level, the group must be deleted from the scan list and then added back to the scan list. Each new group added to the scan list starts at the lowest priority. If the Priority 1 and Priority 2 groups are already set and a new group is assigned as Priority 1 or Priority 2, the previously assigned group will change to non-priority scanning. One of the following messages may be momentarily displayed.

- SCAN DIS** The radio is not programmed to scan.
- FIXED P1** A Priority 1 group has been pre-programmed into the radio. A new Priority 1 group cannot be selected.
- FIXD LST** A fixed scan list has been pre-programmed into the radio. It is not possible to change the list without reprogramming the radio.



To quickly view multiple group scan status, press either **6 ADD** or the **9 DEL** key. Then slowly but consistently rotate the group knob. Each group status will appear on the display.

11.17.3 Deleting Groups from a Scan List

P7350 Model Radio

1. With scan operation turned OFF, select the desired group to delete from the selected trunked system group scan list.
2. Press **ADD**. The current status of the group is displayed for a time-out period.
3. While the current status is displayed, press **ADD** until the group from the scan list is "**blank**." The sequence is "**blank**," **III**, **II**, **I**, "**blank**." Any group that is not in a trunked system group scan list will show a "**blank**" for the time-out period when it is the selected channel.

P7370 Model Radio

1. With scan operation turned OFF, select the desired group to delete from the selected trunked system's group scan list.
2. Press **9 DEL**. The current status of the group is displayed for a time-out period.
3. While the status is displayed, press **9 DEL** to delete the group from the scan list. **III**, **II**, or **I** turns OFF. Any group that is not in a trunked system group scan list will show a "**blank**" for the time out period when it is the selected channel.

11.17.4 Nuisance Delete

A group can also be deleted from the scan list, if it is not the currently selected group, by pressing the **ADD** key (P7350 model) or the **9 DEL** key (P7370 model) during scan operation while the radio is displaying the unwanted group. The group will be deleted from the system's group scan list in the same manner as if done using the steps above. Deletions done in this manner will not remain deleted if the radio is powered OFF and then powered ON.

11.18 SCANNING TRUNKED SYSTEMS

The radio can be programmed with the following System Scan features. These features are automatically enabled when the radio is powered ON. A key or menu option is also defined to allow the System Scan

features to be toggled during radio operation. The System Scan state will be maintained through system changes but will default to ON when the radio is powered ON.

Enable/Disable via Menu Selection

Press **[M]** and then use the **[▼]** or **[▲]** buttons to scroll through the selections until **SYS SCAN** is displayed. Then press **[M]** to toggle the System Scan state. The **SYSC ON** or **SYSC OFF** display message is displayed for two seconds to show the new state.

Enable/Disable via Pre-Programmed Keypad Key

Press the key pre-programmed to toggle System Scan and the **SYSC ON** or **SYSC OFF** display message is displayed for two seconds to show the new state.

11.18.1 Wide Area System Scanning

The P7300 series radio can be programmed for Wide Area System Scan operation for roaming across mobile systems. Upon the loss of the currently selected system's control channel, radios can be programmed to automatically scan the control channels of other systems. If a new control channel is found, the radio will switch to the new system and sound an alert tone.

11.18.2 Priority System Scan

The radio can also be programmed for Priority System Scan. The priority system is the desired or preferred system. While receiving the control channel of the selected system, the radio will periodically leave the selected system and search for the control channel of the priority system. This is done at a programmable rate defined by the value in the Priority Scan Time control (unless the ProScan™ algorithm is enabled, as explained in the following sections). This priority scan timer is reset each time the PTT button is pressed or when the call is received. If the priority system control channel is found, (or meets the predefined criteria <ProScan>), the radio will automatically switch to the priority system.

11.18.2.1 Enabling the Wide Area System Scan Function

If the radio cannot find the control channel of the selected system and begins to wide area system scan, the radio will only scan for the priority system control channel if the priority system is in the wide area scan list.

11.18.2.2 When ProScan is Enabled

The radio monitors the priority system and will switch to the priority system if the criteria defined by the controls in the ProScan Options dialog box are met. If ProScan is enabled, the rate at which the radio will scan for the priority system is defined by the System Sample Time control, located in the ProScan Options dialog box. See Section 8.20.3 for more information on ProScan.

11.18.3 ProScan


The radio may be programmed for ProScan system scan operation for multi-site applications depending on the version of radio flash code. ProScan is an improved multi-site system scanning algorithm designed to replace ProSound™ scanning. ProScan provides the radio with the ability to select a new system for the radio to communicate on, when the selected system drops below a predefined level. This is accomplished by enabling each radio to analyze the signal quality of its current control channel and compares it with the signal quality of the control channel for each site in its adjacent scan list. (The signal quality metric used for the ProScan algorithm is based on a combination of both **Received Signal Strength Indicator (RSSI)** and **Control Channel Verification (CCV)** measurements.) When the selected system degrades to a pre-programmed level, the radio will begin to look for a better control channel. Once a control channel that

exceeds the pre-programmed parameters is found, the radio will change to the new system and emit a tone (if enabled through programming). If the control channel is completely lost, the radio will enter Wide Area System scanning and search the programmed adjacent systems until a suitable control channel is found.

11.19 EMERGENCY OPERATION



The radio's ability to declare an emergency, clear an emergency, remain locked on an emergency system and group, and the emergency audio and display freeze can each be enabled or disabled through programming. When an emergency is declared scanning will stop and restarts only after the emergency has been cleared.



11.19.1 Receiving an Emergency Call

When receiving an Emergency Call on the selected group and system, an alert beep is heard and  is displayed. The message ***RXEMER*** flashes in the display on line two until the emergency condition is cleared.

11.19.2 Declaring an Emergency Call



Perform the following steps to send an emergency call to a selected system and group (or on an optionally pre-programmed group).

1. Press and hold the red EMERGENCY button that is on top of the radio in front of the antenna for approximately one second (this time is programmable and therefore could be longer or shorter; check with the system administrator). The radio will transmit an emergency call request with the radio ID until an emergency channel assignment is received.
2. When the working channel assignment is received, the radio sounds a single beep indicating the radio has auto keyed (see Table 8-4) and is ready for voice transmission. ***TXEMER*** flashes on line two in the display until the emergency is cleared.
3. Press PTT and speak into the microphone in a normal voice.  and  momentarily turn ON.
4. Release PTT when the transmission is complete.

To clear the emergency first press and hold the  button. While continuing to hold the  button, press the EMERGENCY button. (This will work if the radio is programmed to clear emergencies.)

11.20 INDIVIDUAL CALLS

11.20.1 Receiving and Responding to an Individual Call

When the radio receives an individual call (a call directed only to the user's radio), it un-mutes on the assigned working channel and displays . The first line on the display shows the logical ID number of the unit sending the message, or the associated name if the ID number is found in the individual call list. The radio can be programmed to ring when an individual call is received. If enabled, the ring begins five seconds after the caller un-keys and will continue until the PTT button, the  button or the individual call mode is entered.



The volume of the ring is adjustable through the volume control levels.

If a response is made by pressing the PTT to the call prior to the programmed call-back time-out, the call will automatically be directed to the originating unit. If a response is not made before the call-back time-out, the radio will return to normal receive display, and ***WHC*** will appear on the first line of the LCD.

To respond after the call-back time-out, press the **[#ND]** key. The radio's display will show the callers ID on the first line and **WHCI=1** on the second line. Pressing the PTT button at this point will initiate an individual call back to the original caller.

The radio stores the IDs of the last 10 callers in the Calls Received List as shown. Individual calls are stored in the top half of the list (1-10) and Group calls are stored in the bottom half of the list (1-10). The most recent call is stored in position 1, the second most recent call is stored in position 2, etc.

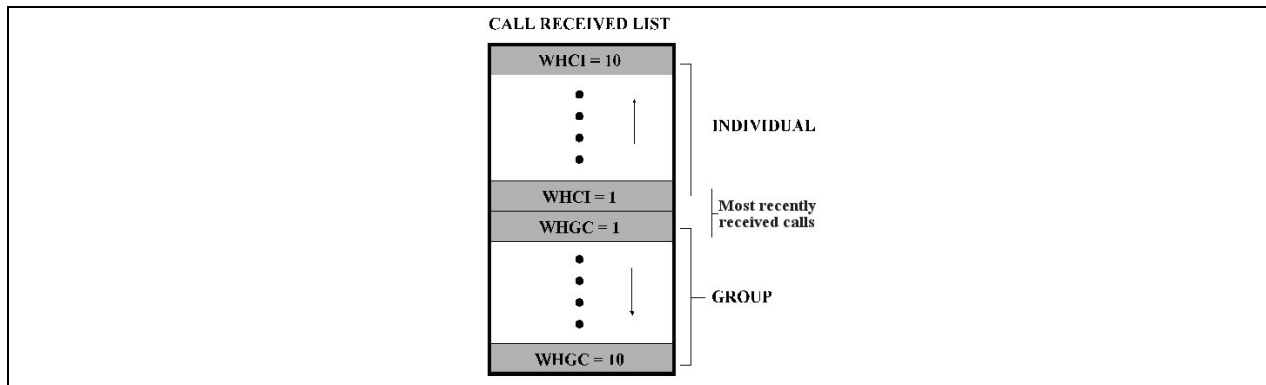


Figure 11-13: Calls Received Lists

To access the Calls Received List, press the **[#ND]** key twice. Use the **[▼]** or **[▲]** buttons to scroll through the list. Pressing the **[M]** key will display the time elapsed since the call was received. After pressing **[#ND]** the display will appear similar to Figure 11-14.

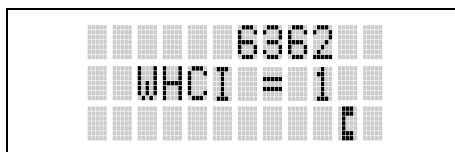


Figure 11-14: WHC Individual Call Display

Pressing the PTT will initiate an individual call to the displayed logical ID. Powering the radio OFF and ON will clear this list.

11.20.2 Sending an Individual Call

11.20.2.1 Pre-Stored Individual Calls

The following procedures describe how to initiate and complete a Pre-Stored Individual Call.

P7370 Model Radio

1. To select a pre-stored individual phone number, enter the individual call mode using the **[#ND]** key. **[#ND]** is displayed. Then scroll through the list of stored numbers using the **[▼]** or **[▲]** keys.
2. Press the PTT button; when the radio is clear to transmit, **[PTT]** turns ON, **[#ND]** turns OFF and the channel access tone sounds. Line one shows the called individual's name if found in the list of stored

individuals or **LID** followed by the logical ID number of the unit being called. The message ***INDU*** displays on line two.

P7350 Model Radio

1. To select a pre-stored individual number, enter the menu mode by pressing the **[M]** key. Scroll through the mode list using the **[v]** or **[^]** buttons.
2. Press **[M]**. **[M]** is displayed. Scroll through the list of stored phone numbers using the **[v]** or **[^]** buttons until the desired number is displayed. Press **[M]**.
3. Press the PTT button; when the radio is clear to transmit **[M]** turns ON, **[M]** turns OFF and the channel access tone sounds. Line one shows the called individual's name or LID. The message ***INDU*** displays on line two.

11.20.2.2 Direct Dial Individual Calls (P7370 Model Only)

1. The following procedure describes how to initiate and complete a Direct Dial Individual Call.
2. The individual call ID is not stored in the pre-stored list of call IDs but the individual unit ID is known, it can be entered directly from the keypad.
3. Press and hold the PTT button to transmit. **[M]** will turn ON, **[M]** will turn OFF, and the channel access tone will sound. Line one shows the called individual's ID followed by the logical ID number of the unit being called. The message ***INDU*** displays on line two. Proceed talking into the microphone.

11.20.3 Call Storage Lists

There are two lists available for call storage in the P7300 series radios, the **calls received** list (1 - 10) and the **personality** list (1 - 99 as defined by the user). When the individual call mode is entered by pressing **[#IND]**, the **calls received** list is available. The user can toggle to the personality list by selecting any index other than 0 or toggle between the two lists by pressing the **[#IND]** key. If wrap is enabled, the **calls received** list wraps on itself and not into the other list.

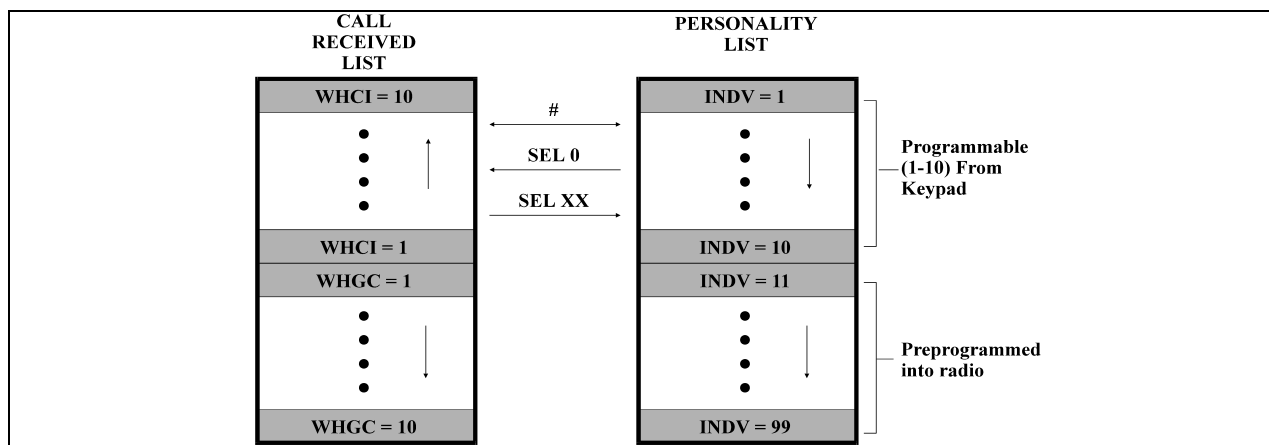


Figure 11-15: Calls Received and Personality Lists

The saved call list shows all ten storage locations. If no calls have been received, the saved call list will be empty and the pre-stored list will be available upon entering the individual call mode.

When in the saved call list, pressing the **[M]** key toggles the time stamp ON and OFF. The time stamp indicates how long ago the call was received. When in the pre-stored list pressing the **[M]** key toggles the Logical **ID**entification (**LID**) ON and OFF.

11.21 TELEPHONE INTERCONNECT CALLS

11.21.1 Receiving a Telephone Interconnect Call

When the radio receives a telephone interconnect call (a call directed only to the user's radio), it un-mutes on the assigned working channel and displays **[PHONE]**. The first line displays ***PHONE***. The second line displays ***INDU***. Proceed with the call. Press the PTT to talk, release the PTT to listen.

11.21.2 Sending a Telephone Interconnect Call

11.21.2.1 Pre-Stored Number

Use the following procedures to initiate and complete a Telephone Interconnect call.

1. **P7370 Model:** To select a previously stored phone number, press the **[*PHN]** key. Use the **[v]** or **[^]** buttons to scroll through the list of stored numbers.
P7350 Model: To select a previously stored phone number, press the **[M]** key. Use the **[v]** or **[^]** buttons to select the menu option **PHN CALL**. Press the **[M]** key again then use the **[v]** or **[^]** buttons to scroll through the list of pre-stored numbers.
2. Press and release the PTT button. When the radio is clear to transmit, **[PTT]** turns ON, **[PHONE]** turns OFF and the channel access tone sounds. Line one shows the accompanying name selected from the list of stored numbers. The message ***PHONE*** appears on line two of the display. The radio then automatically transmits the programmed number stored in the special call queue.
3. A telephone ring will be heard from the speaker. When someone answers the phone, press the PTT button and speak into the microphone. Release the PTT button to listen to the callee. Unsuccessful interconnect signaling returns the radio to the normal receive mode and the number remains displayed until the special call is cleared or the time-out expires or another group or system is selected. Terminate a call by pressing the **[END]** button.



NOTE

In half-duplex mode, only one person may talk at a time. The radio PTT button needs to be pressed in order to communicate to the individual called and released for the individual called to be heard.

11.21.2.2 Direct Dialing of Phone Calls (P7370 Model Only)

1. If the phone number is not stored in the pre-stored list of phone numbers, but the phone number is known, it can be entered directly from the keypad. Start by pressing the **[*PHN]** key, then enter the required number from the keypad. Press and release the PTT button.




NOTE

The last number directly entered can be recalled by first pressing **[*PHN]** then pressing the PTT button.

2. A telephone ring can be heard from the speaker. When someone answers the phone, press and hold the PTT button and speak into the microphone. Release the PTT button to listen to the individual


called. Unsuccessful interconnect signaling returns the radio to the normal receive mode and the number remains displayed until the special call is cleared or the time-out expires or another group or system is selected.

3. To terminate the call, momentarily press the  button.





11.21.3 Dual-Tone Multi-Frequency: Overdial/Conventional Mode



Once the radio has established a connection to the public telephone system, it may be necessary to “overdial” more digits to access banking services, answering machines, credit card calls, or other types of systems that require Dual-Tone Multi-Frequency (DTMF) access digits.

Overdial operation can also be used to initiate a telephone interconnect call via DTMF signaling if a dial tone has already been accessed on the system. This method makes a telephone interconnect call while operating in the conventional mode but will also function in trunked mode if a dial tone is directly accessible.

Telephone numbers and other number sequences for overdialing can be stored in the phone list when programming the radio. These numbers are accessed by pressing the  key, then following the selection mode rules. Perform the following procedures to access and dial these stored numbers.







P7350 Model Radio

1. Follow the procedure in Section 11.21.3 to establish a connection to the telephone system or consult the system administrator for the procedure to access a dial tone on the trunked or conventional system.
2. Enter selection mode first to enable entry of Overdial numbers by pressing the  button.
3. Follow the selection mode rules to call up a stored number from the phone list: Use the  or  buttons to scroll through the list of stored numbers.  is displayed. Press the PTT to send the overdial sequence once. If the number needs to be transmitted again it must be selected or entered again (this prevents unwanted numbers from being sent the next time the PTT button is pressed during the call).

Overdial select/entry mode remains active until the call is dropped, cleared, or  is pressed. The overdial select/entry mode can be re-entered if the call is still active by pressing .

P7370 Model Radio

1. Follow the procedure in Section 8.23.2 to establish a connection to the telephone system or consult the system administrator for the procedure to access a dial tone on the trunked or conventional system.
2. Overdial numbers are transmitted using one of the following methods:

- METHOD 1:
1. Enter the overdial selection mode by pressing the  button.
 2. Use the  or  buttons to scroll through the list of stored numbers.  is displayed. Press the PTT to send the overdial sequence once. If the number needs to be transmitted again it must be selected or entered again (this prevents unwanted numbers from being sent the next time the PTT button is pressed during the call).
Overdial select/entry mode remains active until the call is dropped, cleared, or  is pressed. The overdial select/entry mode can be re-entered if the call is still active by pressing .

METHOD 2: (P7370 model radios only)

1. Enter the over dial selection mode by pressing the **[*PHN]** button.
2. Press and hold the PTT button while entering the over dial number sequence from the keypad. This method sends DTMF tones during individual, telephone interconnect, trunked group, or conventional channel calls. Press the PTT to send the over dial sequence once. If the number needs to be transmitted again it must be selected or entered again (this prevents unwanted numbers from being sent the next time the PTT button is pressed during the call). *Note: Anytime the PTT button is pressed and held, the keypad is enabled for DTMF entry.*

Over dial select/entry mode remains active until the call is dropped, cleared, or **[M]** is pressed. The over dial select/entry mode can be re-entered if the call is still active by pressing **[M]**.

This over dial select/entry mode remains active until dropped, cleared, or **[M]** is pressed. The over dial select/entry mode can be re-entered if the call is still active by pressing the **[*PHN]** button.

11.22 PROGRAMMABLE ENTRIES

11.22.1 Pre-Storing Individual and Telephone Interconnect Calls from the Keypad

Individual Call ID numbers, telephone numbers, and other number sequences for over dialing are stored in the special calls lists when programming the radio. The first ten entry locations of these lists can be changed by the radio operator. The keypad is used when adding, changing, and storing numbers in these entry locations.

Use the following procedure to store a number in one of the first ten entries of a special call list:

1. Press the **[#IND]** or **[*PHN]** button to enter the individual call list or the phone call list. **[]** is displayed.
2. Scroll through the list using the **[▼]** or **[▲]** keys until one of the first ten entries is reached. **NO ENTRY** is displayed if the location is empty.
3. Enter the desired number. If necessary, a pause can be entered by pressing and holding 0-9, **[#IND]**, or **[*PHN]** until an underscore appears in the display (telephone interconnect only). The individual call list entries will accept up to 5 digits. The phone call list entries accept a combination of up to 31 digits and pauses.
4. Press and hold the **[M]** key until the display changes indicating that the number has been stored.

Repeat steps 1-4 to store additional numbers, to change numbers already stored, or to change the storage location of a number.

11.23 STATUS/MESSAGE OPERATION

The **Status** and **Message** operations allow for the transmission of a *pre-programmed status* or a *pre-programmed message* to an EDACS site. Each Status and Message is assigned an ID then cross-referenced with the representative status condition (“Off Duty,” for example) or a message (“Call home”). In addition, Status conditions can also be associated with a programmable Menu entry (required for second method of transmitting a Status condition (see Section 8.25.1).

11.23.1 Status Operation

P7370 Model Radio

One of two methods can be used to transmit a status condition.

- METHOD 1:
1. Press the **[M]** key, then use the **[▼]** or **[▲]** buttons to scroll to the pre-programmed status condition. STATUS and 0 through 9 pre-programmed status selections are available from the menu.
 2. If STATUS is selected, you need to enter the number of the status condition you intend to transmit. If no status has been programmed for the selected number key, the radio will display **NO ENTRY**. A valid selection will display the status for a pre-programmed time.

After the time-out expires or the **[M]** key has been pressed (the **[M]** key will override the time-out period), the status is selected and will be transmitted to the site or stored in the radio memory where it can be polled by the site at a future time.

- METHOD 2:
1. Press the **[7BITS PDRS]** key.
 2. Press the corresponding pre-programmed 0 through 9 status condition key. If no status has been programmed for the selected number key, the radio will display **NO ENTRY**. A valid selection will permit the status condition to appear in the top line of the display and the status ID to appear in the second line of the display for a pre-programmed time.

After the time-out expires or the **[M]** key has been pressed (the **[M]** key will override the time-out period), the status is selected and will be transmitted to the site or stored in the radio memory where it can be polled by the site at a future time.

View the currently selected status after it has been transmitted by pressing the **[M]** key and then the **[M]** key and then the **[⊙]** button prior to the time-out period. If the status was not sent successfully to the site, the text associated with the status condition will flash in the display.

The status selection can be changed by pressing a different status key 0 through 9, or the status operation can be cancelled by pressing Option Button 2 **[⊙]**. Both operations must be carried out prior to the time-out period.

11.23.2 Message Operation

The following method can be used to transmit a message using the Message Operation.

1. Press the **[8MSG 70V]** key.
2. Press the corresponding 0 through 9 pre-programmed "message" key. If no message has been programmed for the selected number key, the radio will display **NO ENTRY**. A valid selection will permit the message to appear in the top line of the display and the message ID to appear in the second line of the display for a pre-programmed time.

The message selection can be changed by pressing a different message key 0 through 9, or the message operation can be cancelled by pressing Option Button 2 **[⊙]**. Both operations must be carried out prior to the pre-programmed time-out period.

11.24 MACRO KEY OPERATION

Macro key operation permits the user to accomplish a series of keystrokes with a single "macro" keystroke. Each Macro Key is capable of executing up to twenty (20) keystrokes, to any push button input

(i.e., keypad keys, OPTION buttons, etc.). Each macro key can be pre-programmed to activate when pressed or when released.

A macro key may also be pre-programmed to change the key stroke sequence the next time the macro key is activated.

For detailed operation and assignment of macro keys, contact your communications supervisor or administrator.

11.25 PORTABLE DATA

The P7300 series portable radios, when operating in the EDACS Trunked configuration, permit both voice and data calls to be transmitted and received. The radio can handle only one type of call at a time; however, either data or voice is selected transparently by the operator through normal usage of the radio. Data communications is not supported in conventional mode.

The radios can be connected to a Mobile Data Terminal (MDT) or to a host computer. Any RS-232 compatible device that supports the Radio Data Interface (RDI) protocol (Version 1.91 or greater) may be connected to the radio. Support for MDTs or host computers is a programmable option per radio. Additionally, radios may also be programmed for data only operation (no voice calls transmitted or received).

11.25.1 Displays

The following will be displayed during the various states of data mode of operation:

TX DATA Appears on top line of display when the radio is transmitting a data call.

RX DATA Appears on top line of display when the radio is receiving a data call.

DATA OFF Appears on top line of display when the radio is in the data disabled state.

DATA ON Appears for two seconds on top line of display when the radio is toggled to the data enabled state.

11.25.2 DATA OFF Operation

The radio can be placed in the data disabled state by any of the following methods. When the data state is disabled, **DATA OFF** appears on the top line of the display.

- Declaring an emergency (not to be used unless an actual emergency condition exists). Alert tone will sound.
- Pressing Option Button 1 \bigcirc (if pre-programmed as “no data” key). Alert tone will sound.
- Pressing the pre-programmed “no data” (ND) key. Refer to previous bullet.

11.25.3 DATA ON Operation

The data state is enabled by one of the following (depending on how it was disabled). **DATA ON** will appear on the top line in the display for two seconds then the display will return to normal.

- Pressing the pre-programmed “no data” (ND) key toggles data state ON or OFF.
- Clearing an emergency. *This is valid only if the emergency caused “DATA OFF” operation.*




11.25.4 Exiting Data Calls

Under normal conditions, the radio enters the scan lockout mode and returns to the control channel after completion of a data call (transmit or receive). If, during a data call, one of the following operations occurs, the data call is immediately terminated and the radio performs the desired function:

- If the PTT is activated.
- If an Emergency is declared by pressing the pre-programmed emergency button.
- If a group or system is changed.

11.25.5 Scan Lockout Mode

Following the transmission or reception of a data call, if scan is enabled, scanning will stop temporarily. There are two independent pre-programmed times associated with this mode; one after a received data call and one after a transmitted data call. During this time the scan indicator will flash to indicate that scan is enabled but temporarily suspended. This condition typically returns to normal scan operation when the pre-programmed time expires; however, the following operations and conditions will terminate the scan lockout mode before the timeout has expired.

- Press the  button.
- Press the PTT.
- Change a group or system.
- Enter Telephone Interconnect mode.
- Enter Individual call mode.
- Receive a new emergency assignment.
- Declare or clear an emergency.
- Receive an individual or phone call.
- Receive an Agency, Fleet, or System All Call.
- Press  (P7350 model) or  (P7370 model) to toggle Scan ON or OFF.

11.25.6 Data Lockout Mode

During the voice call scan hang time (pre-programmed) the radio will not receive data calls.

11.26 GROUP CALLS IN P25 MODE

11.26.1 Transmitting a Group Call

1. Select the desired P25 system. (P25 icon will appear in display.)
2. Select the Talk Group/Conventional Channel. (Selected simultaneously using either the System/Group/Channel control knob or the group key.)
3. Press and hold the PTT.
4. When a grant tone is received (if enabled through programming) speak into the microphone.
5. Release PTT and wait for response.

11.26.2 Receiving a Group Call

1. The radio will unmute according to the squelch mode defined in the radio personality (monitor, normal, selective).
2. Select the desired P25 system and Talk Group/Channel or turn scan on and make sure the desired channel is in the scan list.
3. When the radio receives a P25 call, the radio will unmute and the channel name will appear in the display.
4. Press the PTT button to respond.

11.27 INDIVIDUAL CALLS IN P25 MODE

11.27.1 Transmitting an Individual Call

1. Select the desired P25 system. (The P25 icon will appear in the display.)
2. Select the radio unit to call (callee source ID) from the pre-programmed individual call list or enter the ID number on the radio keypad.
3. Press and hold the PTT.
4. When grant tone is received (if enabled through programming) speak into the microphone.
5. Release the PTT.

11.27.2 Receiving an Individual Call

1. The radio will unmute according to the squelch mode defined in the radio personality (monitor, normal, selective).
2. Select the desired P25 system and Talk Group/Channel or turn scan on and make sure the desired channel is in the scan list.
3. When the radio receives a P25 call, the radio will unmute and the ID of the transmitting radio will appear in the display.
4. Press the PTT button to respond.
5. Unanswered calls will appear in the Who Has Called (WHC) list.

11.28 EMERGENCY GROUP CALLS IN P25 MODE



There is no method available for a system-wide Emergency clear. An emergency group call must be cleared on each individual radio.

11.28.1 Declaring an Emergency Group Call

1. Select the desired P25 system and Talk Group/Channel.
2. Press the red emergency button on the top of the radio. The radio will broadcast a short emergency transmission with the emergency bit set. "TXEMER" will appear in the display of the transmitting radio.

3. While the PTT is NOT pressed, the mic will be open and the radio will broadcast an approximately 2 second transmission (e.g., background noise) which will be repeated at 10-30 second intervals.
4. Press the PTT to stop the short transmissions.
5. To send a voice message, press the PTT and speak into the microphone.
6. To clear an emergency from the transmitting radio, perform one of the following steps:
 - Change systems.
 - Change channels (if not prohibited by programming).
 - Cycle power by turning radio off and then back on.
 - Press the Clear and Emergency buttons simultaneously, providing the Clear Emergency option is enabled in the Supervisory Options in the personality.

11.28.2 Receiving an Emergency Group Call

1. Select the desired P25 System and Talk Group/Channel.
2. When the radio detects an incoming Emergency Group Call, the radio will sound an alert tone and “RXEMER” will appear in the display.
3. Voice or emergency transmissions will be heard at the receiving radio.
4. To clear an emergency from the receiving radio, perform one of the following steps:
 - Change systems.
 - Change channels (if not prohibited by programming).
 - Cycle power by turning radio off and then back on.
 - Press the Clear and Emergency buttons simultaneously, providing the Clear Emergency option is enabled in the Supervisory Options in the personality.

This page intentionally left blank

***TECHNICAL ASSISTANCE
AND
WARRANTY INFORMATION***

12 IMMERSIBLE P7300 PREVENTIVE MAINTENANCE

Those P7300 radios labelled “immersible” (see Figure 12-1) require periodic testing using specialized equipment to verify the radio’s watertight integrity.

Preventive Maintenance for Immersion-Rated Radios



P7300 multi-mode series portable radios with Immersion Option MAEV-MR must be serviced by a service center authorized and certified by Harris to perform the necessary tests to verify watertight integrity. As part of a thorough preventive maintenance plan, Harris recommends Immersion-Rated P7300 multi-mode series portable radios be, at a minimum, tested and re-certified on an annual basis. Harris further recommends that the radios be tested on or close to the anniversary of the ship date printed on the Model Number label on the back of the radio (see Figure 12-1).

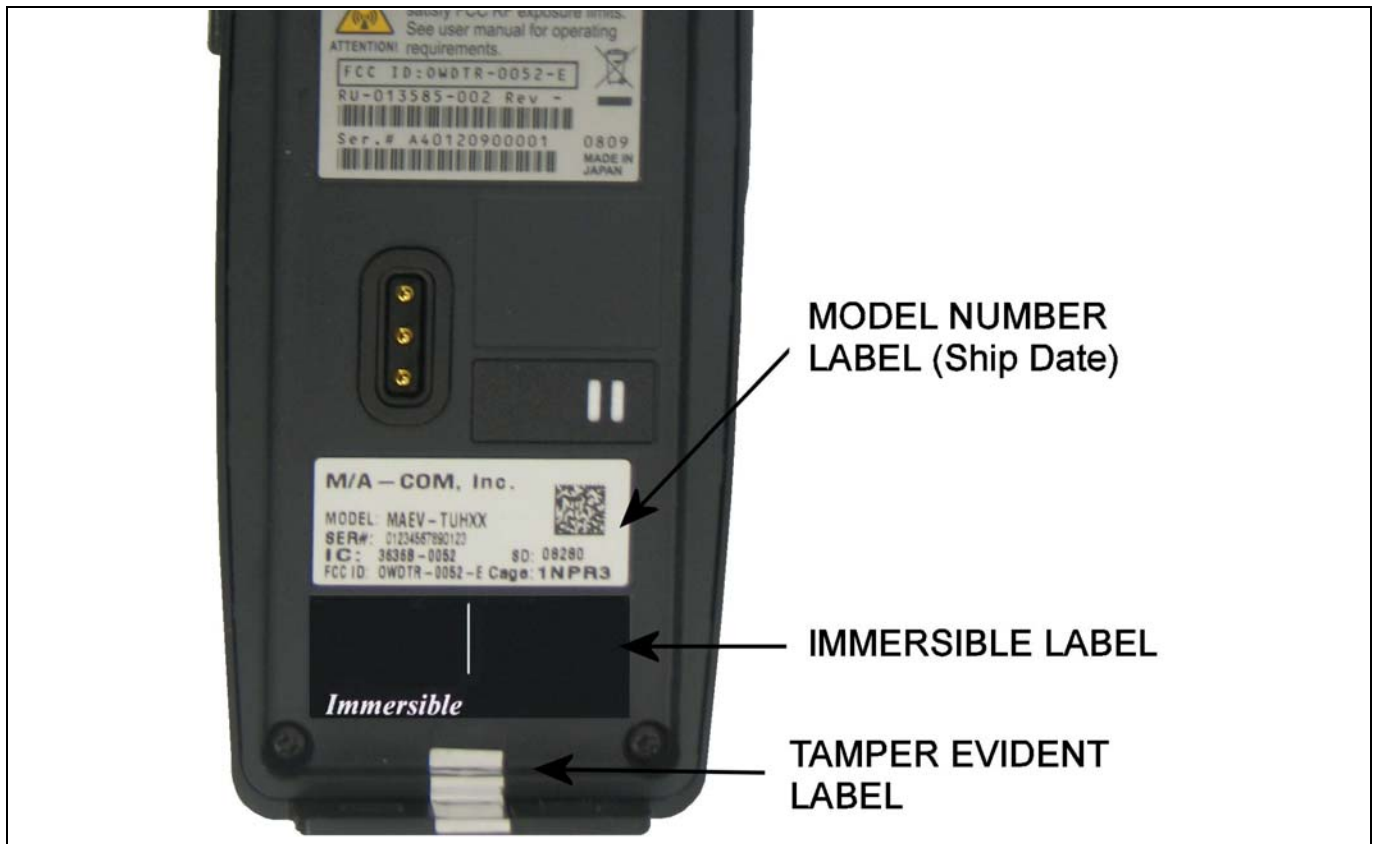


Figure 12-1: Labels

12.1 TECHNICAL ASSISTANCE – IMMERSIBLE P7300

To preserve the watertight integrity of the P7300 portable radio, the radio must be serviced by a service center authorized and certified by Harris to perform the necessary tests to verify the watertight integrity.

Use one of the following methods to locate the nearest service center authorized to service the radios warranted under Option MAEV-MR.

- Contact Harris Technical Assistance Center (TAC) at 1-800-528-7711 (in the U.S. and Canada) or at 1-434-385-2400 (worldwide) for a listing of service centers authorized by Harris to service P7300 radios with Option MAEV-MR.

or

- If a TECH-LINK subscriber, access Harris TECH-LINK web site for a list of Customer Service Managers (CSM) or Regional Service Managers (RSM) that will provide a list of the nearest service shops authorized by Harris to service P7300 radios with Option MAEV-MR.

13 TECHNICAL ASSISTANCE

The Technical Assistance Center's (TAC) resources are available to help with overall system operation, maintenance, upgrades and product support. TAC is the point of contact when answers are needed to technical questions.

Product specialists, with detailed knowledge of product operation, maintenance and repair provide technical support via a toll-free (in North America) telephone number. Support is also available through mail, fax and e-mail.

For more information about technical assistance services, contact your sales representative, or call the Technical Assistance Center at:

North America:	1-800-528-7711
International:	1-434-385-2400
Fax:	1-434-455-6712
E-mail:	tac@tycoelectronics.com

14 BASIC TROUBLESHOOTING

Use Table 14-1 as a troubleshooting guide if the radio is not functioning properly. If additional assistance is required, contact a qualified service technician or call Harris at 1-800-528-7711.

Table 14-1: Troubleshooting

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Radio will not turn on.	Low battery charge.	Change the battery pack to a fully charged pack.
No Audio.	Speaker volume is muted.	Increase the volume level.
Poor Audio.	User is in a poor coverage area or not on the network.	Move to a better coverage area.
Radio powers off for no apparent reason.	Radio may be experiencing very low voltage.	Have the battery checked by an authorized technician.
Radio will not transmit.	Radio may be out of coverage area or may be overheated.	Return to coverage area if possible. If overheated, let radio cool before retrying transmission. Report this failure to an authorized technician.

RECHARGEABLE BATTERY WARRANTY

- A. Harris Corporation, a Delaware Corporation, through its RF Communications Division. (hereinafter "Seller") warrants to the original purchaser for use (hereinafter "Buyer") that nickel-cadmium and nickel-metal hydride batteries supplied by Seller shall be free from defects in material and workmanship, and shall conform to its published specifications for a period of twelve (12) months from the date of purchase.
- B. For purposes of this warranty, batteries shall be deemed defective if (1) the battery capacity is less than 80% rated capacity, or (2) the battery develops leakage.
- C. If any battery fails to meet the foregoing warranty, Seller shall correct the failure by issuing a replacement battery upon receipt of the defective battery at an Authorized Service Center (ASC) or Seller factory (for OpenSky® Equipment only).
- D. Replacement batteries shall be warranted only for the remaining unexpired warranty period of the original battery. This warranty becomes void if:
1. The battery has been subjected to any kind of misuse, detrimental exposure, or has been involved in an accident.
 2. The battery is used in equipment or service other than the radio equipment for which it is specified.
- E. The preceding paragraphs set forth the exclusive remedies for claims based upon defects in or non-conformity of any battery, whether the claim is in contract, warranty, tort (including negligence), strict liability or otherwise, and however instituted. Upon the expiration of the warranty period, all such liability shall terminate. The foregoing warranties are exclusive and in lieu of all other warranties, whether oral, written, expressed, implied or statutory. NO IMPLIED OR STATUTORY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES.

This warranty applies only within the United States.

To obtain the name and address of an Authorized Service Center (ASC), ask your salesperson, or call one of the factory number(s) printed at the bottom of this page.

Harris Corporation
RF Communications Division
1011 Pawtucket Blvd.
Lowell, MA 01853
1-877-OPENSKY

Harris Corporation
RF Communications Division
221 Jefferson Ridge Parkway
Lynchburg, VA 24501

ECR-7048C

WARRANTY

- A. Harris Corporation, a Delaware Corporation, through its RF Communications Division (hereinafter "Seller") warrants to the original purchaser for use (hereinafter "Buyer") that Equipment manufactured by or for the Seller shall be free from defects in material and workmanship, and shall conform to its published specifications. With respect to all non-Seller Equipment, Seller gives no warranty, and only the warranty, if any, given by the manufacturer shall apply. Rechargeable batteries are excluded from this warranty but are warranted under a separate Rechargeable Battery Warranty (ECR-7048).
- B. Seller's obligations set forth in Paragraph C below shall apply only to failures to meet the above warranties occurring within the following periods of time from date of sale to the Buyer and are conditioned on Buyer's giving written notice to Seller within thirty (30) days of such occurrence:
1. for fuses and non-rechargeable batteries, operable on arrival only.
 2. for parts and accessories (except as noted in B.1) sold by Seller's Service Parts Operation, ninety (90) days.
 3. for P7200, P7100^{IP}, P5400, P5300, P5200, P5100, P3300, PANTHER™ 405P and 605P, M7300, M7200 (including V-TAC), M7100^{IP}, M5300 and M3300 radios, two (2) years, effective 10/01/2007.
 4. for all other equipment of Seller's manufacture, one (1) year.
- C. If any Equipment fails to meet the foregoing warranties, Seller shall correct the failure at its option (i) by repairing any defective or damaged part or parts thereof, (ii) by making available at Seller's factory any necessary repaired or replacement parts, or (iii) by replacing the failed Equipment with equivalent new or refurbished Equipment. Any repaired or replacement part furnished hereunder shall be warranted for the remainder of the warranty period of the Equipment in which it is installed. Where such failure cannot be corrected by Seller's reasonable efforts, the parties will negotiate an equitable adjustment in price. Labor to perform warranty service will be provided at no charge during the warranty period only for the Equipment covered under Paragraph B.3 and B.4. To be eligible for no-charge labor, service must be performed at Seller's factory, by an Authorized Service Center (ASC) or other Servicer approved for these purposes either at its place of business during normal business hours, for mobile or personal equipment, or at the Buyer's location, for fixed location equipment. Service on fixed location equipment more than thirty (30) miles from the Service Center or other approved Servicer's place of business will include a charge for transportation.
- D. Seller's obligations under Paragraph C shall not apply to any Equipment, or part thereof, which (i) has been modified or otherwise altered other than pursuant to Seller's written instructions or written approval or, (ii) is normally consumed in operation or, (iii) has a normal life inherently shorter than the warranty periods specified in Paragraph B, or (iv) is not properly stored, installed, used, maintained or repaired, or, (v) has been subjected to any other kind of misuse or detrimental exposure, or has been involved in an accident.
- E. The preceding paragraphs set forth the exclusive remedies for claims based upon defects in or nonconformity of the Equipment, whether the claim is in contract, warranty, tort (including negligence), strict liability or otherwise, and however instituted. Upon the expiration of the warranty period, all such liability shall terminate. The foregoing warranties are exclusive and in lieu of all other warranties, whether oral, written, expressed, implied or statutory. NO IMPLIED OR STATUTORY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY. IN NO EVENT SHALL THE SELLER BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES.

This warranty applies only within the United States.

Harris Corporation
RF Communications Division
1011 Pawtucket Blvd.
Lowell, MA 01853
1-877-OPENSKY

Harris Corporation
RF Communications Division
221 Jefferson Ridge Parkway
Lynchburg, VA 24501

ECR-7047G



RF Communications Division | 221 Jefferson Ridge Pkwy. | Lynchburg, VA USA 24501
Tel: 1-800-528-7711 (Outside USA, 1-434-35-2400) www.rfcomm.harris.com