

User Manual

Model:K6 Zense

Brand:KENXINDA

# **Declaration**

Please read the user's manual so as to keep your mobile phone in the best condition.

The manual has been verified and reviewed to guarantee the accuracy. Instructions and descriptions contained herein are accurate at the time of publication. However, mobile phones developed afterwards and the contents of their manual are subject to modification without further notification. Our company reserves the rights in relation to the manual.

# CONTENT

1. Product introduce .....	2
2. Set-up .....	3
3. Your Mobile Phone .....	5
4. Function of main menu .....	6
5. About the battery .....	10
6. Important safety instructions .....	11


## 1. Product introduce

### ■ Platform information:


Spreadtrum SC7731

### ■ ID diagram

5.0 enhanced version of the 1st - White

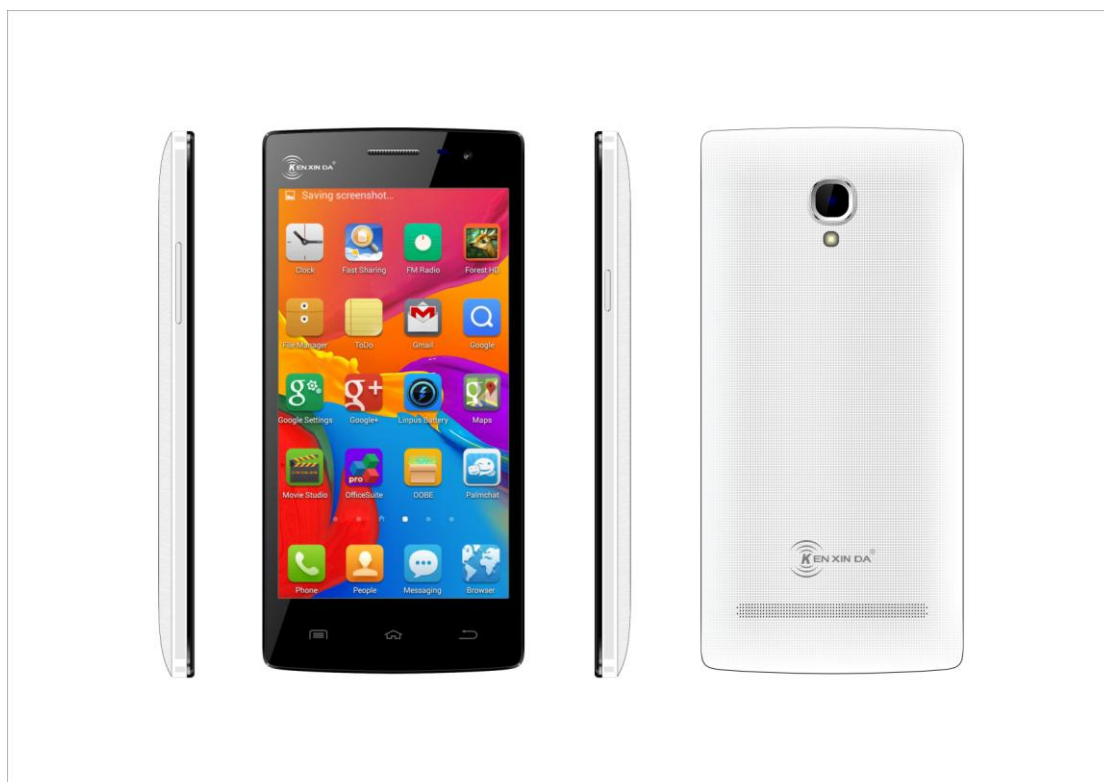

## 5.0 Strengthening II - White

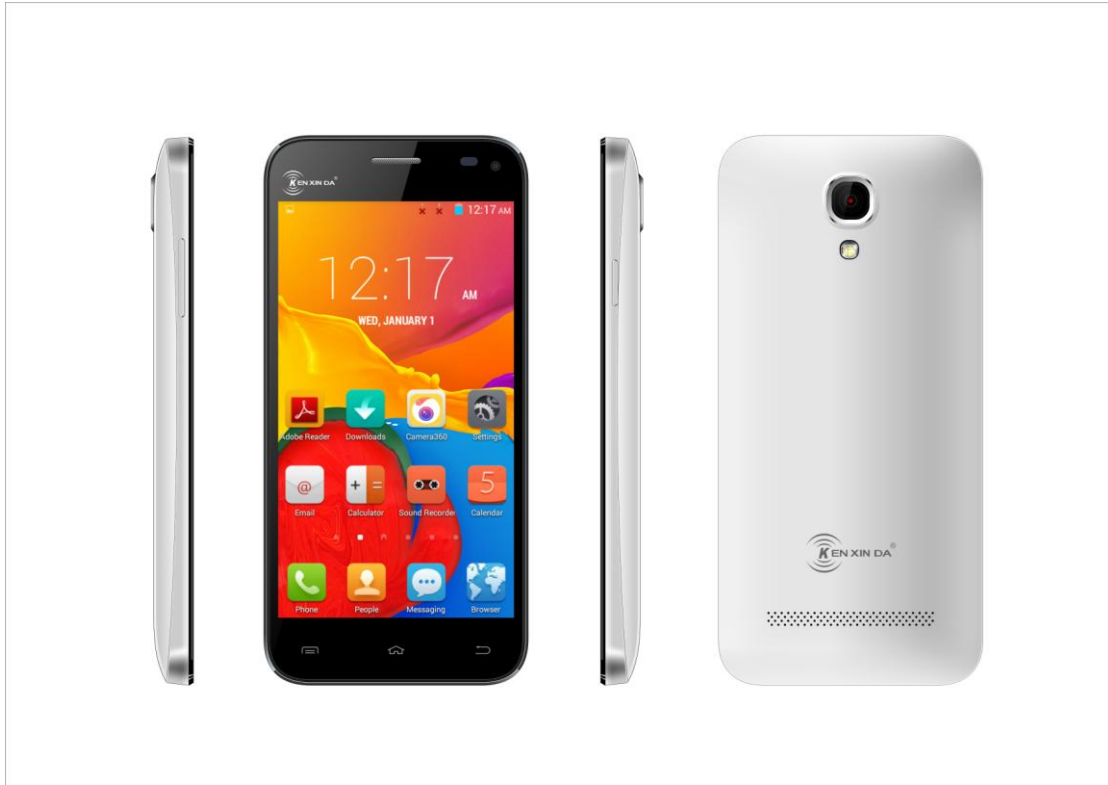

## 2. Set-up

### ■ Inserting T card and SIM card

Ensure to turn off the equipment and disconnect with the charger before taking out the battery.

Ask your SIM card dealer whether he has provided SIM card service and the method of usage who may be service provider or other dealers.

SIM card and its contacts are vulnerable to scratch or bending. Attention shall be attached when use, insert or take out the card.

## ■ **Inserting/taking out T-FLASH CARD**

Only use approved and compatible T-FLASH card applicable to the mobile phone.

Approved memory card trade standard is applied; however, certain bands may not be completely compatible with the mobile phone. Using incompatible memory card may damage not only the card and the mobile, but also the data stored in the card.

1. Insert SD flash card to card slot
2. Take out SD flash card: open the back cover, remove battery can pull out the SD flash card

## ■ **Charging the battery**

Check the model number of the charger before using it to charge the mobile.

Only use approved battery, charger and accessories applicable to the specific mobile model.

Using other types of battery, charger and accessories may violate the certification or warranty terms of the equipment and may result in danger.

Refer to the dealer for supply of relative approved accessories. Hold the plug to plug out and cut off the power supply of accessories instead of pulling the power cord.

1. Plug the charger in an AC power socket.
2. The charger connector plug at the bottom of the side of the mobile phone

## ■ **Switching your mobile phone ON**

Hold down the Power key to switch on the mobile phone and activate the operating system.

If the screen is automatically locked, please touch the Unlock key to unlock the screen.

## ■ **Switching your mobile phone OFF**

Hold down the Power key for 2 second and then touch the “OFF” option on the screen.

## 3. Your Mobile Phone

### ■ Buttons

#### 1 Menu key

- Touch the key to open or close a pop-up menu, and the menu shows available options of current application program or the operations you can execute on current screen.

#### 2 Home key

- Click on any interface will go back to the main menu.

Touch this key on any interface to return to main screen.

- Long press this button to display the background program

#### 3 Back key

- Touch it to return to the previous screen, close a dialog box, menu or pop-up message, and close the keypad.

#### 4 Power key

- If the mobile phone is off, press and hold this key to power on the mobile phone.
- If the mobile phone is on and the screen is dark, press this key briefly to activate the screen.

#### 5 Volume Up/Down key

- While playing media files like music or video clips:
- Press once to increase the volume of media file.

### ■ The interface

There were multiple interface on the interface, if want to access other main interface, please use your fingers in the interface slip, can slide to the interface the left or right. Each interface can add applications, widget, etc ;

### ■ Status bar

Status bar displays application program keys, date and time and status and notification area.

Display status icons to show mobile phone's current status, e.g., battery power, charging process, alarm setting and network connection.

## 4. Function of main menu

### ■ **Application Manager**

Manage the settings including installation of application programs and new programs.

### ■ **Browser**

The web browser in your mobile phone allows you to view entire page on broad screen and enjoy vivid colors and clear texts, regardless of display in a horizontal or vertical direction. Thanks to this browser, you are free to access a great variety of information on Internet.

### ■ **Calculator**

This equipment provided by the calculator function, simple operation, convenient, easy to grasp with corresponding failure.

### ■ **Calendar**

The “Calendar” functionality in your mobile phone helps you arrange and manage your events, meetings and appoints. It facilitates your scheduling and presents your weekly, monthly schedules and the entire schedule visually so that you may be fully aware of your overall arrangement in a month or the detailed arrangement on a particular day and strike a good balance between your work and family life.

### ■ **Camera**

This camera is an integrated video camera used to taking and sharing photos and video clips.

## ■ **Clock**

This mobile phone offers alarm clock functionality and you may set multiple alarms according to your needs.

## ■ **Download**

View and use the files that are downloaded from the Internet.

## ■ **Email**

You may enter email address, select communication protocols, select data account, set the address of receiving server and sending server, edit user name, edit the password of mailbox logon and save the setting, and enter mailbox option to write, send and receive emails.

## ■ **File explorer**

A versatile phone files/procedures/process manager. You can view the files or folders in the internal storage or external storage.

## ■ **Flashlight**

In the menu click on the screen to open or close the flashlight

## ■ **FM Radio**

You need to connect the headset compatible for equipment or accessories can make FM radio function normal operation.


## ■ **Bluetooth**



Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.



## ■ Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

Press Home key > tap  > Settings.

Click  next to the Wi-Fi menu to turn it on, click  you can turn off the Wi-Fi function.

## ■ Gallery

A unique software function allows you to experience pictures in an extraordinary way.

You may view all pictures in the picture library with a simple touch, or enlarge/reduce picture size or view them in a slide with your fingers.

## ■ History

Call history show in the missed, outgoing, incoming calls and the all calls list, click on the list of name or number can quickly back to dial into the contact details.

## ■ Messaging

You can write, send and read message (including SMS and MMS). Touch →

Message. Message screen will open message list or message dialogue, and display all messages.

According to different notification setting methods, upon receiving a new message, your mobile phone will give a ring, vibration or display message icon on status bar. The notification area of status bar will display new message icons to remind you a new message is received.

## ■ Music

With large and smart display screen and easy operation, you are totally free to enjoy your favorite songs and unique listening experience. Plus wired or wireless bluetooth earphone, you are in a world with yourself, your favorite music and excellent sound effect.

## ■ **People**

To view and manage contacts, touch the application program key “Contacts”.

## ■ **Phone**

To make a call, touch the “Phone” on the main screen to open phone application program.

### **Answer incoming call**

Sliding answer button, can be picked up the phone.

### **Reject incoming call**

Sliding Reject button (or press the Reject button), can hang up the phone.

## ■ **Search**

Enter related character string to find out the corresponding records or files.

## ■ **Settings**

You may select Network, My device, Personal and more phone settings.

## ■ **Sound Record**

To record the sound and can play it.

## ■ **Tasks manager**

View and manage the running application programs.

## ■ **Video player**

Watch phone supports video files, please select the play list into the video list, video file

playback with a simple touch, press Volume key to adjust the volume.

## ■ **USB connection**

When the mobile phone is connected to computer, the notification area of the status bar will display USB notification message. Click USB notification bar and click “USB connection”

- Activate USB memory function: touch “USB storage device” to start USB storage.
- After starting USB storage, you may import into or export from storage card

interactive files like music, game and video files.

## ■ **Charging and discharging**

This mobile phone is powered by storage battery. Its battery can be charged and discharged several hundred times, but will fail in the end. Please come to a certified mobile phone service provider for replacement. Only authorized batteries can be used, and only an authorized charger fit for this model of mobile phone may be used for charging your mobile phone.

When the battery is fully recharged, please disconnect the charger from your mobile phone and unplug it from power socket.

If battery power is exhausted, it will be some 30 minutes before the screen displays the charging prompt. No damaged charger may be used.

# **5. About the battery**

## ■ **Usage and treatment of battery**

Avoid short circuit of battery; otherwise, the battery may be damaged, and generate heat to cause fire hazard;

Don't put the battery under high temperature or in fire; otherwise, it may explode;

Don't attempt to take apart the battery, stop usage in case of damage or obvious aging of the battery and charger;

Return waste and used batteries to the supplier or specified recovery site. Don't throw it away in domestic garbage.

- Please use original matched battery. If wrong battery is used, there will be danger of explosion
- Disused old battery, Please handle it according to local environmental protection law and don't throw it at random

## 6. Important safety instructions

### ■ Medical mobile phone

The operation of any radio transmitting mobile phone (including wireless telephones) is likely to interfere with the functionality of medical mobile phone that is not properly protected. For any question or doubt on whether medical mobile phone can shield external radio frequency energy, please consult the physician or the manufacturer of medical mobile phone. Please switch off your mobile phone wherever it is expressly required that electronic mobile phones shall be turned off.

### ■ Automobile

Mobile phone can be repaired by professionals or be installed by them on an automobile. Improper installation or repair may cause danger or invalidate the warranty of mobile phone. Periodically check whether all wireless phones in automobile are properly installed or operate smoothly. Do not store or transport mobile phones and their components or accessories together with combustible liquids, gases or explosives in the same cargo compartment. For an automobile with air bag, keep in mind that the expansion of airbag will generate very high pressure. Do not install objects, including fixed or movable wireless phones, above airbag or at any place likely to be occupied by an expanding airbag. An onboard wireless phone improperly installed will suffer

serious damage in case of airbag expansion.

## ■ **Airplane**

The use of this mobile phone is forbidden during air travel. Please switch your mobile phone off before boarding. Use of your mobile phone jeopardizes airplane operation, disturbs radiotelephony network, and violates the law.

## ■ **In places where it may cause explosion**

Please turn off the equipment where it may cause explosion, and abide by all the word and graphic directions. Places where it may cause explosion include the places where it is suggested to turn off the auto engine under normal conditions. In such places, spark may lead to explosion or fire hazard, and result in personal injury or even death. Please turn off the equipment in gas stations, such as near the gas pump in the station. Please abide the specifications on restricted usage of radio equipment in fuel depot (where the fuels are kept and distributed), chemical plant or places conducting blasting. Places with potential explosion hazard are always (but not all) provided with clear directions, including under the deck of ship, chemical transportation or storage facilities, or places where the air contains chemical matters or particulates (such as grains, dust or metal dust). Please refer to the automobile manufacturer using liquefied petroleum gas (like propane, butane) to find out whether the equipment herein is allowed to be used near the automobile.

## ■ **Emergency call**

Like other wireless phones, the equipment uses radio signal, wireless and ground network, and is provided with programmable functions by the user. Thus, it is not guaranteed that the call can be put through in any circumstances. Therefore, it is not suggested to rely on any wireless equipment for important calls, such as medical treatment and first-aid.

## ■ **Making emergency phone calls:**

Turn on the equipment firstly and check whether the signal is strong enough. In certain networks, it may be required to insert the valid SIM card correct into the equipment.

If necessary, press the key of finish repeatedly.

## **FCC**

### **FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over on one gram of tissue.

Device types: K6 Zense (FCCID: 2AE56K6ZENSE) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.884W/kg and when properly worn on the body is 1.048W/kg. This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna.

Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form