



**LG Electronics Inc.**

<http://www.lge.co.kr>

**Color Monitor**

# StudioWorks

## 570LS

User's Guide  
Benutzerhandbuch  
Manuel d'utilisation  
Guida Utente  
Guia del Usuario  
Manual do proprietário  
Handleiding

Please read this manual carefully before operating your set.  
Retain it for future reference.  
Record model number and serial number of the set.  
See the label attached on the back cover and quote this  
information to your dealer when you require service.

# Contents

## ENGLISH

Introduction .....	A1
Connecting the Monitor .....	A2
Location and Function of Controls .....	A3
Control Panel Function .....	A4
On Screen Display (OSD) Control Adjustment .....	A5
On Screen Display(OSD) Selection and Adjustment .....	A6
Video Memory Modes .....	A8
Troubleshooting .....	A9
Specifications .....	A10

## DEUTSCH

Einleitung .....	B1
Anschließen .....	B2
Ort und Funktion der Bedienungselemente .....	B3
Bedienungselemente der Bildkontrolle .....	B4
Screen Display (OSD) Anpassung .....	B5
OSD Einstellung und Auswahlssymbole .....	B6
Videospeichermodi .....	B8
Störungen .....	B9
Produktbeschreibung .....	B10

## FRANÇAIS

Introduction .....	C1
Branchement du Moniteur .....	C2
Nomenclature et Fonctions .....	C3
Fonctions du Panneau de Commande .....	C4
Réglage des Commandes Affichage Écran .....	C5
Options de sélection et de Réglage OSD (affichage écran) .....	C6
Mise en Mémoire de Modes Vidéo .....	C8
Quelques Conseils en Cas D'incident .....	C9
Spécifications D'entree .....	C10

## ITALIANO

Introduzione .....	D1
Collegamento del Monitor .....	D2
Posizione e Funzione dei Conandi di Controllo .....	D3

Funzione del Pannello di Controllo .....	D4
Controllo Regolazione On Screen Display (OSD) .....	D5
Elementi di Selezione e Regolazione dell'OSD .....	D6
Modalità di Memoria Video .....	D8
In Caso di Problemi .....	D9
Specifiche .....	D10

## ESPAÑOL

Introducción .....	E1
Conectando del Monitor .....	E2
Ubicación y Función de los Controles .....	E3
Función del Panel de Control .....	E4
Ajuste del Control de Exhibición en Pantalla (OSD) .....	E5
Ajuste del OSD y Selección de Elementos .....	E6
Modos de Memoria de Video .....	E8
Sugerencias para Localizar las Fallas .....	E9
Especificaciones .....	E10

## PORTUGUÊS

Introdução .....	F1
Conectando o Monitor .....	F2
Posição dos Controles e Descrição .....	F3
Funções do Painel de Controle .....	F4
Ajuste On Screen Display(OSD) .....	F5
Ajustes OSD e Itens de Seleção .....	F6
Modos de Memória de Video .....	F8
Resolvendo Problemas .....	F9
Especificações .....	F10

## NEDERLANDS

Inleiding .....	N1
De Monitor Aansluiten .....	N2
De plaatsing en de werking van de knoppen .....	N3
Het bedieningspaneel .....	N4
Bediening via het beeldscherm OSD (On Screen Display) .....	N5
Kiezen en instellen via het OSD-systeem .....	N6
Modi voor videogeheugen .....	N8
Problemen oplossen .....	N9
Specificaties .....	N10

## Introduction

The StudioWorks 570LS Flat Panel Monitor has an active matrix TFT (Thin-Film Transistor) LCD (Liquid Crystal Display).

This monitor is designed for use in small working areas or for those who need more working space on the desk.

ENGLISH

### Features

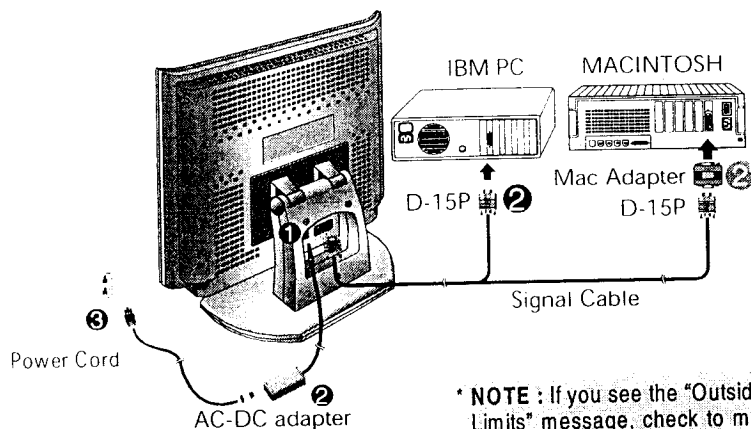
- The StudioWorks 570LS is a 15.1-inch (15.1 inches viewable) intelligent microprocessor based monitor.
- Digitally controlled auto-scanning is done with the microprocessor for horizontal scan frequencies between 31 and 61kHz, and vertical scan frequencies between 56 and 75Hz.
- The microprocessor-based digital controls allow you to adjust conveniently a variety of image controls by using the OSD (On Screen Display).
- It supports resolutions up to 1024x768, and has a wide viewing angle of  $\pm 60$  degrees horizontal and  $\pm 45$  degrees vertical.
- The monitor is shipped with 14 factory pre-programmed video modes that are permanently resident. In addition, there are 16 user-storable modes, for a total of 30 memory modes.
- Plug and play capability if supported by your system.
- This monitor has DDC 2B function.\*
- Compliant with the following regulated specifications :\*
  - EPA ENERGY STAR
  - Swedish TCO'99

\*For detailed information, please refer to the Reference Guide provided.

## Connecting the Monitor

On the back of the monitor are two plug-in connections; one for the AC power cord, and the other for the signal cable from the video card.

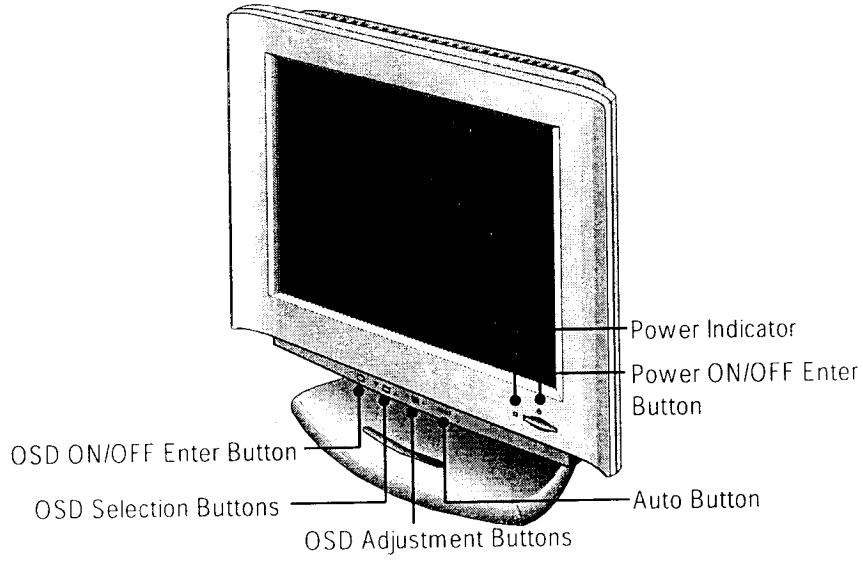
- 1 Power off both the monitor and PC.
- 2 Connect the 15 pin VGA connector of the supplied signal cable to the output VGA video connector on the PC and the matching input connector on the rear of the monitor. The connectors will mate only one way. If you cannot attach the cable easily, turn the connector upside down and try again. When mated, tighten the thumbscrews to secure the connection.
- 2 Locate the appropriate MAC to VGA adapter block at your local computer store. This adapter changes the high density 3 row 15 pin VGA connector to the correct 15 pin 2 row connection to mate with your MAC. Attach the other end of the signal cable to the side of the adapter block with 3 rows. Connect the attached adapter block/signal cable to the video output on your MAC.
- 3 Connect the plug from the AC-DC adapter into the connector on the display unit. 1 Connect one end of the AC power cord into the AC-DC adapter. 2 Plug the other end into a properly grounded three-prong AC outlet. 3
- 4 Power ON the PC, then the monitor.
- 5 If you see the **Check Signal Cable** message, check the signal cable and connectors.
- 6 After using the system, power OFF the monitor, then the PC.



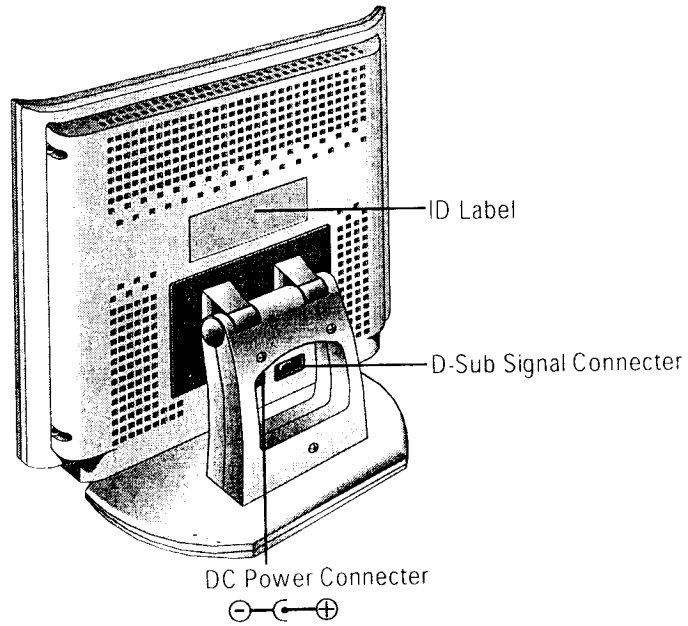
\* NOTE : If you see the "Outside Range Limits" message, check to make sure your system is set to one of the factory preset modes.(see page A8)

# Location and Function of Controls

## Front View

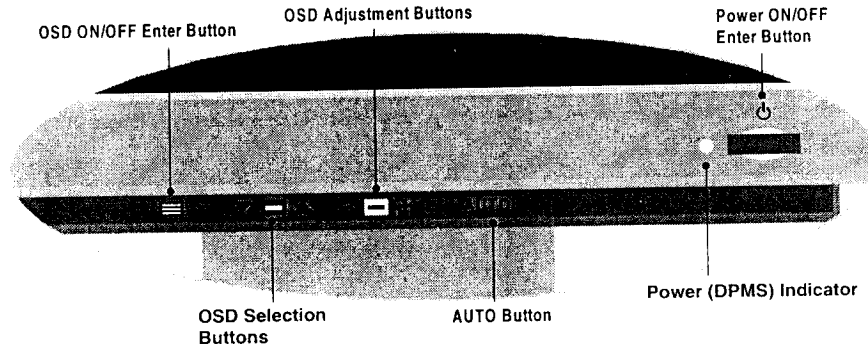







## Rear View



# Control Panel Function

## Front Panel Controls



Control	Function
 <b>OSD ON/OFF Enter Button</b>	Use this button to enter and from the on screen display (OSD).
 <b>OSD Selection Buttons</b>	Use these buttons for selecting (highlighting) an OSD icon to be adjusted.
 <b>OSD Adjustment Buttons</b>	Use these buttons for adjusting the level of the selected item.
<b>AUTO</b> <b>AUTO Button</b>	Use this button to enter a selection in the on screen display.  <b>* AUTO adjustment function</b> Touch the <b>AUTO/SET</b> button before using OSD menu. This button is for the automatic adjustment of the screen position, clock and phase. <b>Note:</b> Some signal from some graphics boards may not function properly. If the results are <b>unsatisfactory</b> , adjust your monitor's Position, Clock and Phase manually.
 <b>Power (DPMS) Indicator</b>	The power indicator light is shown in the power button. This indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/ suspend/power off), this indicator color changes to amber.
 <b>Power ON/OFF Enter Button</b>	Use this button to turn the monitor on or off.




## On Screen Display (OSD) Control Adjustment









Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.

### NOTE

- Allow the monitor to stabilize for at least 30 minutes before making image adjustment.

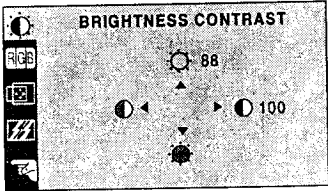
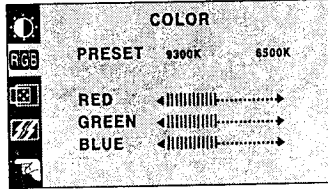
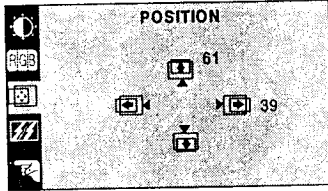
To make adjustments in the On Screen Display, follow these steps:



- 1** Press the  Button, then the main menu of the OSD appears.
- 2** To access a control, use the    Buttons.
- 3** Use the    Buttons to adjust the item to the desired level.
- 4** Exit the OSD by Pressing the  Button.

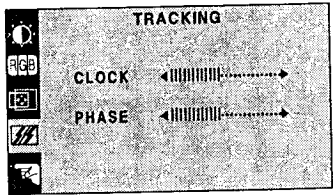
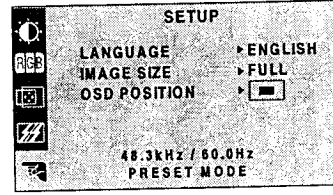
## On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selection and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

OSD Adjust	Description
	<p><b>Brightness</b> Used to adjust the brightness of the screen.</p> <p><b>Contrast</b> Adjust the display to the contrast desired.</p>
	<p><b>PRESET 9300K/ 6500K</b> To appear the displays color temperature.</p> <ul style="list-style-type: none"> <li>• 9300K:Slightly bluish white.</li> <li>• 6500K:Slightly reddish white.</li> </ul> <p><b>RED</b> To set your own color levels.</p> <p><b>GREEN</b> To set your own color levels.</p> <p><b>BLUE</b> To set your own color levels.</p>
	<p><b>Vertical Position</b> To move image up and down.</p> <p><b>Horizontal Position</b> To move picture image left and right.</p>



## On Screen Display(OSD) Selection and Adjustment

OSD Adjust	Description
 <p>The image shows the 'TRACKING' OSD menu. On the left, there are four icons: a sun/moon, a color bar, a square with a circle, and a square with diagonal lines. The menu text includes 'TRACKING', 'CLOCK' with a horizontal bar and arrows, and 'PHASE' with a horizontal bar and arrows.</p>	<p><b>CLOCK</b> To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.</p>
	<p><b>PHASE</b> To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.</p>
 <p>The image shows the 'SETUP' OSD menu. On the left, there are four icons: a sun/moon, a color bar, a square with a circle, and a square with diagonal lines. The menu text includes 'SETUP', 'LANGUAGE' with a right arrow pointing to 'ENGLISH', 'IMAGE SIZE' with a right arrow pointing to 'FULL', and 'OSD POSITION' with a right arrow pointing to a small square icon. At the bottom, it says '48.3kHz / 60.0Hz' and 'PRESET MODE'.</p>	<p><b>LANGUAGE</b> To choose the language in which the control names are displayed.</p>
	<p><b>IMAGE SIZE</b> This function displays the image in its original size or enlarged size so as to fit in the full screen of the LCD panel.</p>
	<p><b>OSD POSITION</b> To adjust position of the OSD window on the screen.</p>

## Video Memory Modes

The monitor has 30 memory locations for display modes, 14 of which are factory preset to popular video modes.

### Display Modes (Resolution)

	Display Modes (Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
1	VGA 640 x 350	31.47	70
2	VGA 720 x 400	31.47	70
3	VGA 640 x 480	31.47	60
4	MAC 640 x 480	35.00	67
5	VESA 640 x 480	37.86	73
6	VESA 640 x 480	37.50	75
7	VESA 800 x 600	35.16	56
8	VESA 800 x 600	37.88	60
9	VESA 800 x 600	48.08	72
10	VESA 800 x 600	46.88	75
11	MAC 832 x 624	49.72	75
12	VESA 1024 x 768	48.36	60
13	VESA 1024 x 768	56.48	70
14	VESA 1024 x 768	60.02	75

### User Modes

- Modes 15-30 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 15.

If you use up the 10 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 15.

### Recalling Display Modes

- When your monitor detects a mode it has seen before, it automatically recalls the image settings you may have made the last time you used that mode.

You may, however, manually force a recall of each of the 14 preset modes by pressing the Recall button. All preset modes are automatically recalled as the monitor senses the incoming signal.

The ability to recall the preset modes is dependent on the signal coming from your PC's video card or system. If this signal does not match any of the factory modes, the monitor automatically sets itself to display the image.

## Troubleshooting

**Check the following before calling for service.**

**Display Position is incorrect.**

- Push the **AUTO** Button.
- If the results are unsatisfactory, adjust the image position using the **H** position and **V** position icon in the on screen display.

**On the screen background, vertical bars or stripes are visible.**

- Push the **AUTO** Button.
- If the results are unsatisfactory, decrease the vertical bars or stripes using the **CLOCK** icon in the on screen display.

**Any horizontal noise appearing in any image or characters are not clearly portraided.**

- Push the **AUTO** Button.
- If the results are unsatisfactory, decrease the horizontal bars using the **PHASE** icon in the on screen display.

**NO SIGNAL message.**

- The signal cable is not connected, or is loose. Check and secure the connection.

**OUT OF RANGE message appears.**

**Picture is blank.**

- The frequency of the signal from the video card is outside the operating range of the monitor.

**Horizontal Frequency: 31kHz-61kHz**

**Vertical Frequency: 56Hz-75Hz**

\* Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

\* You can change the setup to the supported resolution using the **Safe Mode** (Press the **F8** key during booting the system).

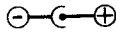
**The power LED is illuminated amber.**

- The monitor is in its display power management mode.
- There is no active signal coming from the PC.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

**The monitor doesn't enter the power saving off mode (Amber).**

- Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

## Specifications

<b>Display</b>	Type	15.1inch (38.35cm) Flat Panel Active matrix-TFT LCD, Anti-Glare coating
	Viewable Size	15.1inch (38.35cm)
	Pixel pitch	0.3 x 0.3mm
	True color	262,144 color
	<b>Sync Input</b>	Horizontal Freq.
Vertical Freq.		56 - 75Hz (Automatic)
Input Form		Separate TTL, Positive/Negative
Signal Input		15 pin D-Sub Connector
<b>Video Input</b>	Display Area	307 x 230mm / 12.1 x 9.1inch
	Input Form	Separate, RGB Analog, 0.714Vp-p/75ohm, Positive
	Resolution	VESA 1024 x 768/ 85Hz max
<b>Power Consumption</b>	Normal(Max.)	≤ 30W
	Stand-by/Suspend	≤ 3W
	Power Off	≤ 3W
<b>Dimensions</b>	Width	40.52 cm / 15.95 inches
	Height	36.16 cm / 14.24 inches
	Depth	18.24 cm / 7.18 inches
<b>Power Input</b>	DC 24V 1.2A	
<b>AC-DC Adapter</b>	Input	AC 100-240V 50-60Hz 1.2A-0.6A
	Output	DC 24V 1.5A 
<b>Weight</b>	Net	5.2 kg (11.46 lbs)
<b>Tilt Range</b>	Down	5°
	Up	30°
<b>Environmental Conditions</b>	Operating Condition	
	Temperature	10 °C to 35 °C
	Humidity	10 % to 80 % non-Condensing
	Storage Condition	
	Temperature	-20 °C to 60 °C
	Humidity	5 % to 95 % non-Condensing

### NOTE

- Information in this document is subject to change without notice and does not represent a commitment on the part of LG Electronics Inc.