

Lenovo
YOGA 720-13IKB
YOGA 720-15IKB
Hardware
Maintenance
Manual

Notes:

- Before using this information and the product it supports, be sure to read the general information under “Notices” on page 92.
- This manual applies to the following models: Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB. The illustrations used in this manual are for Lenovo YOGA 720-15IKB unless otherwise stated.

First Edition (March 2017)

© Copyright Lenovo 2017. All rights reserved.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2017 Lenovo

Contents

About this manual	iv	1040 PCI Express Mini Card for wireless LAN	38
Safety information	1	1050 Speakers	41
General safety	2	1060 DIMM (Lenovo YOGA 720-15IKB).....	42
Electrical safety	3	1070 Thermal module.....	44
Safety inspection guide	5	1080 System board	48
Handling devices that are sensitive to electrostatic discharge.....	6	1090 Fingerprint module (on select models).....	52
Grounding requirements.....	6	1100 Touchpad module.....	54
Safety notices: multilingual translations.....	7	1110 LCD unit	57
Laser compliance statement.....	14	1120 DC-in cable (Lenovo YOGA 720-15IKB).....	60
Important service information	16	1130 LCD panel.....	61
Strategy for replacing FRUs	16	1140 EDP cable and camera board.....	68
Strategy for replacing a hard disk drive	17	1150 LCD hinges	71
Important notice for replacing a system board	17	Locations	73
Important information about replacing RoHS compliant FRUs	18	Front and right-side view	73
General checkout	19	Bottom and left-side view	75
What to do first	20	Rear view	76
Power system checkout.....	21	Parts list	77
Checking the AC adapter	21	Overall	78
Checking operational charging	22	LCD FRUs	85
Checking the battery pack.....	22	Miscellaneous parts	88
Related service information	23	AC adapters.....	88
Restoring the factory contents by using OneKey Recovery	23	Screws	88
Restore of factory default	23	Power cords.....	89
Passwords	24	Notices	92
Power-on password	24	Trademarks	93
Hard-disk password	24		
Supervisor password	24		
Power management	25		
Putting the computer to sleep or shutting it down	25		
Putting your computer to sleep.....	25		
Shutting down the computer	25		
Lenovo YOGA 720-13IKB/			
Lenovo YOGA 720-15IKB	26		
Specifications	26		
Status indicators	28		
Keyboard function keys	29		
FRU replacement notices	30		
Screw notices	30		
Removing and replacing an FRU	31		
1010 Base cover.....	32		
1020 Battery pack.....	35		
1030 Solid state disk	36		

About this manual

This manual contains service and reference information for the following Lenovo products:

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB

Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific section includes service, reference, and product-specific parts information.

Important:

This manual is intended only for trained servicers who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively.

Before servicing a Lenovo product, make sure to read all the information under “Safety information” on page 1 and “Important service information” on page 16.

Safety information

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB computer:

- “General safety” on page 2
- “Electrical safety” on page 3
- “Safety inspection guide” on page 5
- “Handling devices that are sensitive to electrostatic discharge” on page 6
- “Grounding requirements” on page 6
- “Safety notices: multilingual translations” on page 7
- “Laser compliance statement” on page 14

General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- When lifting any heavy object:
 1. Make sure that you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
 4. Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Please remove covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Attention: Metal objects are good electrical conductors.
- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

Electrical safety

Observe the following rules when working on electrical equipments.

Important:

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Attention: Another person must be there to switch off the power, if necessary.
 - Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

Attention: An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.
 - When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
 - Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generatorsand similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
 - Caution: do not become a victim yourself.
 - Switch off the power.
 - Send the victim to get medical aid.

Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards according to the attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Turn off the computer. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The power cord should be the type specified in the parts list.
 - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Note:

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices: multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder-splitter können Kurzschlüsse erzeugen.

לפני הפעלת המחשב לאחר החלפת FRU יש לוודא שכל הברגים, הקפיצים, וחלקים קטנים אחרים נמצאים במקומם ואינם חופשיים לזוז בתוך המחשב. כדי לוודא זאת, יש ללטלט את המחשב ולהקשיב לגילוי קולות שקשוק. חלקי או שבבי מתכת עלולים לגרום לקצרים חשמליים.

Prima di accendere l'elaboratore dopo che é stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altri parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

FRUの交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.

Safety notice 2

DANGER

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts- oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין לפרק סוללת המתנה, לטעון אותה מחדש, להשליך אותה לנחש או למים או לקצר אותה. יש לשלוק את הסוללה בנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

Alcune batterie di riserva contengono una piccola quantità di nichel e cadmio. Non smontarle, ricaricarle, gettarle nel fuoco o nell'acqua né cortocircuitarle. Smaltirle secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria dell'RTC (real time clock) o la batteria di supporto, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 3**⚠ DANGER**

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

מארו הסוללה מכיל כמויות קטנות של ניקל וקדמיום. אין לפרק את מארו הסוללה, להשליך אותו לאש או למים או לקצר אותו. יש לשלוק את מארו הסוללה כנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה בזמן החלפת מארו הסוללה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

La batteria contiene piccole quantità di nichel. Non smontarla, gettarla nel fuoco o nell'acqua né cortocircuitarla. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 4

DANGER

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une température supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.

Die Systematterie ist eine Lithiumatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100 C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללת הליתיום עלולה לגרום לשריפה, להתפוצצות או לכוויות קשות. אין לטעון אותה מחדש, לטלוק את המחבר המקוטב שלה, לפרק אותה או לחמם אותה לטמפרטורה העולה על 100 מעלות צלזיוס. אין לשרוף את הסוללה ואין לחשוף את תוכן התא למים. יש לטלוק את הסוללה כנדרש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המומינה ברשימת החלקים המתאימים. שימוש בסוללה אחרת עלול לגרום לשכנת שריפה או התפוצצות.

La batteria di supporto e una batteria al litio e puo incendiarsi, esplodere o procurare gravi ustioni. Evitare di ricaricarla, smontarne il connettore polarizzato, smontarla, riscaldarla ad una temperatura superiore ai 100 gradi centigradi, incendiarla o gettarla in acqua. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクタの取り外し、バッテリー本体の分解、100°C (212°F) 以上への加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.

Safety notice 5

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water at least for 15 minutes. Seek medical care if any symptoms caused by the fluid are present after washing.

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.

אם מסך הנביש הנוזלי (LCD) נשבר והנוזל מתוך המסך בא במגע עם עיניים או ידיים, שטפו את האזורים הנוגעים מיד במים במשך 15 דקות לפחות. פנו לקבלת עזרה רפואית אם תסמינים הנובעים מהמגע עם הנוזל נמשכים לאחר השטיפה.

Nel caso che caso l'LCD si dovesse rompere ed il liquido in esso contenuto entrasse in contatto con gli occhi o le mani, lavare immediatamente le parti interessate con acqua corrente per almeno 15 minuti; poi consultare un medico se i sintomi dovessero permanere.

LCD が破損し、LCD 中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención medica si se presenta algún sintoma del fluido despues de lavarse.

Safety notice 6

⚠ DANGER

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.

כדי למנוע התחשמלות, אין להסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס ההפוך.

Per evitare scosse elettriche, non rimuovere la copertura in plastica che avvolge la parte inferiore della scheda invertitore.

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.

Safety notice 7

⚠ DANGER

Though the main batteries have low voltage, a shorted or grounded battery can produce enough current to burn personnel or combustible materials.

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארקת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דליקים.

Sebbene le batterie di alimentazione siano a basso voltaggio, una batteria in corto circuito o a massa può fornire corrente sufficiente da bruciare materiali combustibili o provocare ustioni ai tecnici di manutenzione.

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.

Safety notice 8**⚠ DANGER**

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Avant de retirer une unité remplaçable en clientèle, mettez le système hors tension, débranchez tous les cordons d'alimentation des socles de prise de courant, retirez la batterie et déconnectez tous les cordons d'interface.

Die Stromzufuhr muß abgeschaltet, alle Stromkabel aus der Steckdose gezogen, der Akku entfernt und alle Verbindungskabel abgenommen sein, bevor eine FRU entfernt wird.

לפני סילוק FRU כלשהו, יש לכבות את המחשב, לנתק את כל כבלי החשמל משקעי החשמל, להוציא את מטריז הסוללה, ואז לנתק כבלי חיבור אחרים אם יש כאלה.

Prima di rimuovere qualsiasi FRU, spegnere il sistema, scollegare dalle prese elettriche tutti i cavi di alimentazione, rimuovere la batteria e poi scollegare i cavi di interconnessione.

FRU を取り外す前に、**ThinkPad** の電源を切って、すべての電源コードをコンセントから外してください。次に、バッテリー・パックを外し、相互接続ケーブルを外してください。

Antes de quitar una FRU, apague el sistema, desenchufe todos los cables de las tomas de corriente eléctrica, quite la batería y, a continuación, desconecte cualquier cable de conexión entre dispositivos.

Laser compliance statement

Some models of Lenovo computer are equipped from the factory with an optical storage device such as a CD-ROM drive or a DVD-ROM drive. Such devices are also sold separately as options. If one of these drives is installed, it is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN 60 825 for Class 1 laser products.

If a CD-ROM drive, a DVD-ROM drive, or another laser device is installed, note the following:

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

O uso de controles, ajustes ou desempenho de procedimentos diferentes daqueles aqui especificados pode resultar em perigosa exposição à radiação.

凡未在这里指明的任何控制用法、调整、行为，都会导致严重后果。

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites.

Werden Steuer- und Einstellelemente anders als hier festgesetzt verwendet, kann gefährliche Laserstrahlung auftreten.

Az itt előírt eljárásoktól, beállítástoktól és vezérlésektől eltérni a lézersugárzás veszélye miatt kockázatos!

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure diverse da quelle specificate possono provocare l'esposizione a.

Использование элементов настройки и выполнение процедур иных, чем указано здесь, может привести к опасному радиационному облучению.

Použitie kontrol, úprav alebo iných vykonaní od iných výrobcov, ako je v tomto špecifikované, mohlo by mať za následok nebezpečenstvo vystavenia sa vyžiarovaniu.

本書で指定された内容以外の、お客様による整備、調整、または手順を行った場合、レーザー光の放射の危険があります。

El uso de controles o ajustes o la ejecución de procedimientos distintos de los aquí especificados puede provocar la exposición a radiaciones peligrosas.

Opening the CD-ROM drive, the DVD-ROM drive, or any other optical storage device could result in exposure to hazardous laser radiation. There are no serviceable parts inside those drives. **Do not open.**

A CD-ROM drive, a DVD-ROM drive, or any other storage device installed may contain an embedded Class 3A or Class 3B laser diode. Note the following:

⚠ DANGER

Emits visible and invisible laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

Radiação por raio laser ao abrir. Não olhe fixo no feixe de luz, não olhe diretamente por meio de instrumentos óticos e evite exposição direta com o feixe de luz.

开启时会有激光发射时，请勿盯视激光光束，请勿直接查看视觉仪器，并且避免直接接触在激光光束之中。

Rayonnement laser si carter ouvert. Évitez de fixer le faisceau, de le regarder directement avec des instruments optiques, ou de vous exposer au rayon.

Laserstrahlung bei geöffnetem Gerät. Nicht direkt oder über optische Instrumente in den Laserstrahl sehen und den Strahlungsbereich meiden.

Kinyitáskor lézersugár ! Ne nézzen bele se szabad szemmel, se optikai eszközökkel. Kerülje a sugárnyalábbal való érintkezést!

Aprenndo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici e evitare l'esposizione diretta al fascio.

Открывая, берегитесь лазерного излучения. Не смотрите на луч, не разглядывайте его с помощью оптических инструментов, а также избегайте прямого воздействия лазерного луча.

Keď je laserová jednotka otvorená. Vyhňte sa priamemu pohľadu a neľadte priamo s optickými nástrojmi do lúča a vyhňte sa priamemu vystaveniu lúčov.

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たりしないでください。

Radiación láser al abrir. No mire fijamente ni examine con instrumental óptico el haz de luz. Evite la exposición directa al haz.

Important service information

This chapter presents the following important service information:

- “Strategy for replacing FRUs” on page 16
 - “Strategy for replacing a hard disk drive” on page 17
 - “Important notice for replacing a system board” on page 17
- “Important information about replacing RoHS compliant FRUs” on page 18

Important:

BIOS and device driver fixes are customer-installable. The BIOS and device drivers are posted on the customer support site:

<http://support.lenovo.com>.

Strategy for replacing FRUs

Before replacing parts:

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is loaded to the system board before completing the service action.

To download software fixes, drivers, and BIOS, follow the steps below:

1. Go to <http://support.lenovo.com>.
2. Enter the serial number or select a product or use Lenovo smart downloading.
3. Select the BIOS/Driver/Applications and download.
4. Follow the directions on the screen and install the necessary software.

Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- If you are instructed to replace an FRU, but the replacement does not solve the problem, reinstall the original FRU before you continue.
- Some computers have both a processor board and a system board. If you are instructed to replace either of them, and replacing one of them does not solve the problem, reinstall that board, and then replace the other one.
- If an adapter or a device consists of more than one FRU, any of the FRUs may be the cause of the error. Before replacing the adapter or device, remove the FRUs one by one to see if the symptoms change. Replace only the FRU that changed the symptoms.

Attention: The setup configuration on the computer you are servicing may have been customized. Running Automatic Configuration may alter the settings. Note the current configuration settings (using the View Configuration option); then, when service has been completed, verify that those settings remain in effect.

Strategy for replacing a hard disk drive

Always try to run a low-level format before replacing a hard disk drive. This will cause all customer data on the hard disk to be lost. Make sure that the customer has a current backup of the data before performing this action.

Attention: The drive startup sequence in the computer you are servicing may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

Important notice for replacing a system board

Some components mounted on a system board are very sensitive. Improper handling can cause damage to those components, and may cause a system malfunction.

Attention: When handling a system board:

- Do not drop the system board or apply any excessive force to it.
- Avoid rough handling of any kind.
- Avoid bending the system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, replacement parts can also be non-compliant. In all cases if the original FRU parts are RoHS compliant, the replacement part must also be RoHS compliant.

Note: RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transit to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo's requirements and schedule in the EU. Products sold in 2005 and 2006 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, failed RoHS compliant parts must always be replaced with RoHS compliant ones, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs may be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can sub to RoHS		
RoHS	Must be RoHS		

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of the order.

General checkout

This chapter presents the following information:

- “What to do first” on page 20
- “Power system checkout” on page 21

Before you go to the checkout, make sure to read the following important notes:

Important notes:

- **Only certified trained personnel can service the computer.**
- **Before replacing any FRU, read the entire page on removing and replacing FRUs.**
- **Carefully remove screws for reuse when replacing FRUs.**
- **Be extremely careful during such write operations as copying, saving, or formatting.** Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- **Replace an FRU only with another FRU of the correct model.** When you replace an FRU, make sure that the machine model and the FRU part number are correct by referring to the FRU parts list.
- **An FRU should not be replaced just because of a single, unreproducible failure.** Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that an FRU is defective, clear the error logs and run the test again. If the error does not recur, do not replace the FRU.
- **Be careful not to replace a nondefective FRU.**

What to do first

When you do return an FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of servicer
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Procedure index and page number in which the failing FRU was detected
6. Failing FRU name and part number
7. Machine type, model number, and serial number
8. Customer's name and address

Note for warranty: During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer.

The following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

The following are not covered under warranty:

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Improper disk insertion or use of an optical drive
- Diskette drive damage caused by pressure on the diskette drive cover, foreign material in the drive, or the insertion of a diskette with multiple labels
- Damaged or bent diskette eject button
- Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect AC adapter on laptop products

The following symptoms might indicate damage caused by nonwarranted activities:

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

Power system checkout

To verify a symptom, follow the steps below:

1. Turn off the computer.
2. Connect the AC adapter.
3. Make sure that power is supplied when you turn on the computer.
4. Turn off the computer.
5. Disconnect the AC adapter.
6. Make sure that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate power supply checkout:

- “Checking the AC adapter” on page 21
- “Checking operational charging” on page 22

Checking the AC adapter

You are here because the computer fails only when the AC adapter is used.

- If the power-on indicator does not turn on, check the power cord of the AC adapter for correct continuity and installation.
- If the computer does not charge during operation, go to “Checking operational charging”.

To check the AC adapter, follow the steps below:

1. Unplug the AC adapter cable from the computer.
2. Measure the output voltage at the plug of the AC adapter cable. See the following figure:



Pin	Voltage (V DC)
1	+20
2	0

Note: Output voltage for the AC adapter pin No. 2 may differ from the one you are servicing.

3. If the voltage is not correct, replace the AC adapter.
4. If the voltage is acceptable, do the following:
 - Replace the system board.
 - If the problem persists, go to “Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB” on page 26.

Note: Noise from the AC adapter does not always indicate a defect.

Checking operational charging

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon is not lit, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon is still off, replace the battery pack.

If the charge indicator is still not lit, replace the system board.

Checking the battery pack

Battery charging does not start until the Power Meter shows that less than 95% of the total power remains; under this condition the battery pack can charge to 100% of its capacity. This protects the battery pack from being overcharged or from having a shortened life.

To check your battery, move your cursor to the Power Meter icon in the icon tray of the Windows® taskbar and wait for a moment (but do not click it), and the

percentage of battery power remaining is displayed. To get detailed information about the battery, double-click the Power Meter icon.

Note: If the battery pack becomes hot, it may not be able to be charged. Remove it from the computer and leave it at room temperature for a while. After it cools down, reinstall and recharge it.

Related service information

This chapter presents the following information:

- “Restoring the factory contents by using OneKey Recovery” on page 23
- “Passwords” on page 24
- “Power management” on page 25

Restoring the factory contents by using OneKey Recovery

Restore of factory default

The Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Glass computer comes with pre-installed OneKey Recovery System. In order to save application files and the initial backed up files of the system, the hard disk in a Lenovo computer includes a hidden partition when it is shipped. If you need to restore the system to the point of your first boot up, just enter the Recovery System. For details of the Recovery system, see *the User Guide for Recovery system*.

Note: This will delete all the new data on the system partition (C drive), which is not recoverable. Make sure to back up your critical data before you perform this action.

Passwords

As many as three passwords may be needed for any Lenovo computer: the power-on password (POP), the hard disk password (HDP), and the supervisor password.

If any of these passwords has been set, a prompt for it appears on the screen whenever the computer is turned on. The computer does not start until the password is entered.

Power-on password

A power-on password (POP) protects the system from being powered on by an unauthorized person. The password must be entered before an operating system can be booted.

Hard-disk password

There are two hard-disk passwords (HDPs):

+ User HDP - for the user

+ Master HDP - for the system administrator, who can use it to get access to the hard disk drive even if the user has changed the user HDP

Attention: If the user HDP has been forgotten, check whether a master HDP has been set. If it has, it can be used for access to the hard disk drive. If no master HDP is available, neither Lenovo nor Lenovo authorized service technicians provide any services to reset either the user or the master HDP, or to recover data from the hard disk drive. The hard disk drive can be replaced for a scheduled fee.

Supervisor password

A supervisor password protects the system information stored in the BIOS. The user must enter the supervisor password to get access to the BIOS and change the system configuration.

Attention: If you forget the password, there is no service procedure to reset the password. The system board must be replaced for a scheduled fee.

Power management

Note: Power management modes are not supported for an APM operating system.


Putting the computer to sleep or shutting it down

When you have finished working with your computer, you can put it to sleep or shut it down.

Putting your computer to sleep

If you will be away from your computer for only a short time, put the computer to sleep. When the computer is in sleep mode, you can quickly wake it to resume use, bypassing the startup process.

To put the computer to sleep, do one of the following:

- Close the display lid.
- Press the Power button.
- Open the start menu, and then select **Power**  → **Sleep**.

Attention: Wait until the power indicator light starts blinking (indicating that the computer is in sleep mode) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.


To wake the computer, do one of the following:

- Press any key on the keyboard. (Notebook mode only)
- Press the Power button.

Shutting down the computer

If you are not going to use your computer for a long time, shut it down.

To shut down your computer, do one of the following:

- Open the start menu, and then select **Power**  → **Shut down**.
- Press and hold or right-click the **Start** button in the lower-left corner and select **Shut down or sign out** → **Shut down**.

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB

This chapter presents the following product-specific service references and product-specific parts information:

- “Specifications” on page 26
- “Status indicators” on page 28
- “Keyboard function keys” on page 29
- “FRU replacement notices” on page 30
- “Removing and replacing an FRU” on page 31
- “Locations” on page 73
- “Parts list” on page 77

Specifications

The following table lists the specifications of the Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB:

Table 1. Specifications

Feature	Description
Processor	View the system properties of your computer. You can do this as follows: Open the Control Panel , and then select System and Security → System .
Graphic Chipset	<ul style="list-style-type: none"> • Integrated Graphics • nvidia N17p-G0 (Lenovo YOGA 720-15IKB)
Display	<ul style="list-style-type: none"> • 13.3-inch, 16:9, 1,920 × 1,080 pixels FHD / 3,840 × 2,160 pixels UHD (Lenovo YOGA 720-13IKB) • 15.6-inch, 16:9, 1,920 × 1,080 pixels FHD / 3,840 × 2,160 pixels UHD (Lenovo YOGA 720-15IKB)
Standard memory	<ul style="list-style-type: none"> • DDR4 (max 16 GB)
SSD	<ul style="list-style-type: none"> • 128 GB, 256 GB, 512 GB or 1 TB, NGFF (PCI-E) (Lenovo YOGA 720-13IKB) • 256 GB, 512 GB or 1 TB, NGFF (PCI-E) (Lenovo YOGA 720-15IKB)
I/O port	<ul style="list-style-type: none"> • Lenovo YOGA 720-13IKB USB 3.0 × 1 Combo audio jack × 1 Type-C × 1 (compatible with USB 3.0 & PowerDelivery) Type-C × 1 (compatible with USB 3.1, PowerDelivery, DisplayPort & Thunderbolt) • Lenovo YOGA 720-15IKB USB 3.0 × 2 Combo audio jack × 1 Type-C × 1 (compatible with USB 3.1, DisplayPort & Thunderbolt)
Audio	<ul style="list-style-type: none"> • 1/8" Combo audio jack • JBL Branded Speaker • Built-in microphone × 2

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB

Feature	Description
Bluetooth wireless	<ul style="list-style-type: none">Built-in antenna with wireless card module for all Models
Keyboard	<ul style="list-style-type: none">6 Row, Lenovo Keyboard, Back-light
Touch pad	<ul style="list-style-type: none">Multi-touch type
Integrated camera	<ul style="list-style-type: none">720P HD
Battery	<ul style="list-style-type: none">4 cells, 48 Wh (Lenovo YOGA 720-13IKB)6 cells, 72 Wh (Lenovo YOGA 720-15IKB)
AC adapter	<ul style="list-style-type: none">20 V, 45 W (Lenovo YOGA 720-13IKB)20 V, 135 W / 90 W (Lenovo YOGA 720-15IKB)
Pre-installed operating system	<ul style="list-style-type: none">Win10

Status indicators

The system status indicators below show the computer status:



Table 2. Status indicators

Indicator	Indicator status	Charge status	Meaning
Battery status indicator	On (solid white)	Charging	The battery has more than 80% charge.
	On (solid amber)	Discharging	The battery has between 5% and 20% charge.
	Blinking slowly (white)	Charging	The battery has between 20% and 80% charge. When the battery reaches 80% charge, the light will stop blinking. However, charging will continue until the battery is fully charged.
	Blinking slowly (amber)	Charging	The battery has less than 20% charge. When the battery charge reaches 20%, the blinking color will change to white.
	Blinking quickly (amber)	Discharging	The battery has less than 5% charge.
	Off	Discharging	The battery has more than 20% charge.













Keyboard function keys

You can access certain system settings quickly by pressing the appropriate function keys.

Table 3. Fn key combinations

Fn + B:	Activates the break function.
Fn + P:	Activates the pause function.
Fn + C:	Enables/disables the scroll lock.
Fn + S:	Activates the system request.
Fn + ↑:	Activates the Pgup key function.
Fn + ↓:	Activates the Pgdn key function.
Fn + ←:	Activates the home key function.
Fn + →:	Activates the end key function.
Fn + Space:	Adjusts the keyboard backlight (off → dim → bright → off).

Table 4. Hotkeys

 F1 :	Mutes/unmutes the sound.
 F2 :	Decreases the volume level.
 F3 :	Increases the volume level.
 F4 :	Enables/disables the microphone.
 F5 :	Refreshes the desktop or the currently active window.
 F6 :	Enables/disables the touchpad.
 F7 :	Enables/disables Airplane mode.
 F8 :	Enables/disables the integrated camera.
 F9 :	Locks the screen.
 F10 :	Toggles the display between the computer and an external device.
 F11 :	Decreases display brightness.
 F12 :	Increases display brightness.

Note: You can use the Lenovo Setting to enable/disable the hotkey function.

FRU replacement notices

This section presents notices related to removing and replacing parts. Read this section carefully before replacing any FRU.

Screw notices

Loose screws can cause a reliability problem. In the Lenovo computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- They are harder to tighten.


Do the following when you service this machine:

- Keep the screw kit in your tool bag.
- Carefully remove screws for reuse when replacing FRUs.
- Use a torque screwdriver if you have one.

Tighten screws as follows:


- **Plastic to plastic**

Turn an additional 90° after the screw head touches the surface of the plastic part:

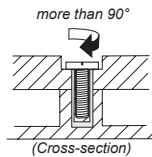

- **Logic card to plastic**

Turn an additional 180° after the screw head touches the surface of the logic card:

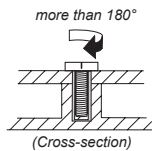

- **Torque driver**

- If you have a torque screwdriver, refer to the "Torque" column for each step.
- Make sure that you use the correct screws. If you have a torque screwdriver, tighten all screws firmly to the torque shown in the table. **Carefully remove screws for reuse when replacing FRUs. Make sure that all screws are tightened firmly.**
 - Ensure torque screwdrivers are calibrated correctly following country specifications.

Removing and replacing an FRU

This section presents exploded figures with the instructions to indicate how to remove and replace the FRU. Make sure to observe the following general rules:

1. Do not attempt to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
2. Before replacing any FRU, review "FRU replacement notices" on page 30.
3. Begin by removing any FRUs that have to be removed before the failing FRU. Any of such FRUs are listed at the top of the page. Remove them in the order in which they are listed.
4. Follow the correct sequence in the steps to remove the FRU, as given in the figures by the numbers in square callouts.
5. When turning a screw to replace an FRU, turn it in the direction as given by the arrow in the figure.
6. When removing the FRU, move it in the direction as given by the arrow in the figure.
7. To put the new FRU in place, reverse the removal procedures and follow any of the notes that pertain to replacement. For information about connecting and arranging internal cables, see "Locations" on page 73.
8. When replacing an FRU, use the correct screw as shown in the procedures.

DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any of the interconnecting cables.

Attention: After replacing an FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.


Attention: The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or using an electrostatic discharge (ESD) strap (P/N 6405959) to remove potential shock reasons.

1010 Base cover


Figure 1. Removal steps of base cover

Remove the screws **1** and **2**.

Lenovo YOGA 720-13IKB

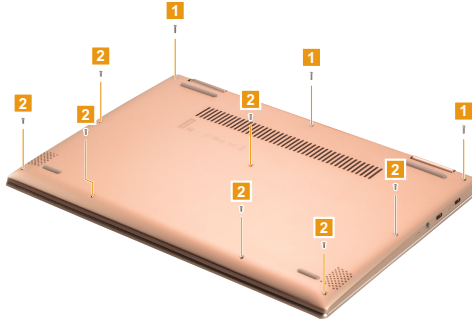

Lenovo YOGA 720-15IKB

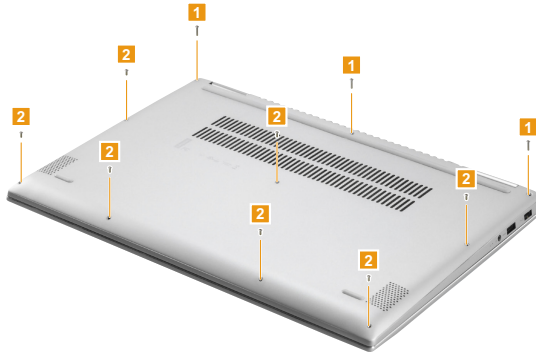

Step	Screw (quantity)	Color	Torque
1	M2.0 x 7.5 mm, Torx-head, nylok-coated (3) LOW TO UP (Lenovo YOGA 720-13IKB)	Silver	1.8-2.0 kg_cm
1	M2.0 x 9.5 mm, Torx-head, nylok-coated (3) LOW TO UP (Lenovo YOGA 720-15IKB)	Silver	1.8-2.0 kg_cm
2	M2.0 x 5.0 mm, Torx-head, nylok-coated (7) LOW TO UP	Silver	1.8-2.0 kg_cm

Figure 1. Removal steps of base cover (continued)

Remove the base cover **3**.

Lenovo YOGA 720-13IKB



Lenovo YOGA 720-15IKB



Note: Applying labels to the base cover

If you see the following labels on base cover, it needs to be peeled off from the old base cover, and put on the new base cover.

- a** OS label
- b** Indonesia label
- c** WLAN label
- d** BT label
- e** China Office label

For some models, you also need to apply one or two FCC labels. Check the old base cover; if it has one or two FCC labels, find duplicates of them in the label kit and apply them to the new base cover.

For the location of each label, refer to the following figure:

1020 Battery pack

For access, remove this FRU:

- “1010 Base cover” on page 32


⚠ DANGER

Only use the battery specified in the parts list for your computer. Any other battery could ignite or explode.


Figure 2. Removal steps of battery pack

Unplug the battery connector in the direction shown by arrow **1**. Remove the screws **2**, then remove the battery pack **3**.

Lenovo YOGA 720-13IKB

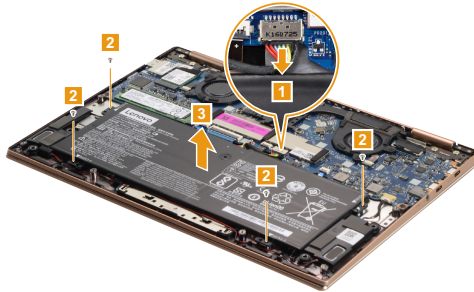

Lenovo YOGA 720-15IKB

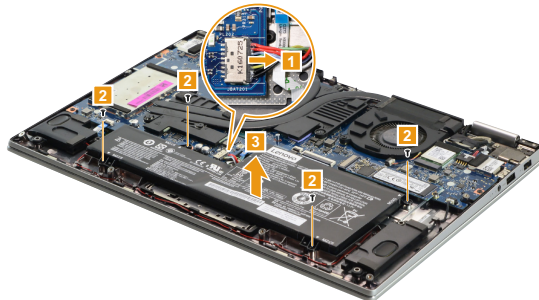

Step	Screw (quantity)	Color	Torque
2	M2.0 x 3.5 mm, Phillips-head, nylok-coated (4) BATTERY TO UP (Lenovo YOGA 720-13IKB)	Silver	1.8-2.0 kg_cm
2	M2.0 x 5.0 mm, Phillips-head, nylok-coated (4) BATTERY TO UP (Lenovo YOGA 720-15IKB)	Black	1.8-2.0 kg_cm

When installing: Make sure that the battery connector is attached firmly.

1030 Solid state disk


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35


Figure 3. Removal steps of solid state disk

Remove the screw **1**.

Lenovo YOGA 720-13IKB

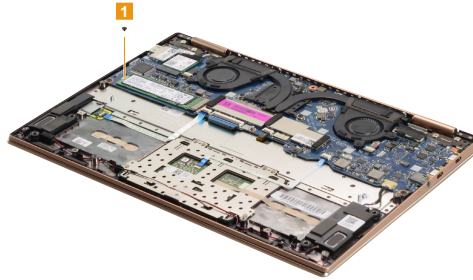

Lenovo YOGA 720-15IKB

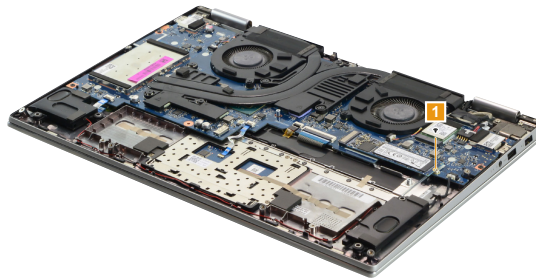


Step	Screw (quantity)	Color	Torque
1	M2.0 x 2.5 mm, Phillips-head, nylok-coated (1) SSD TO UP	Black	1.8-2.0 kg_cm


Figure 3. Removal steps of solid state disk (continued)

Remove the solid state disk in the direction shown by arrow **2**.

Lenovo YOGA 720-13IKB

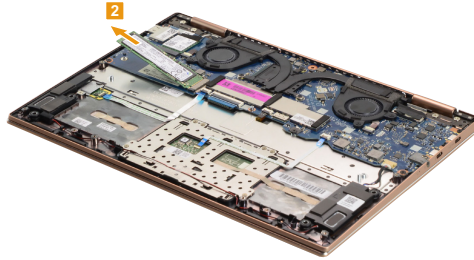

Lenovo YOGA 720-15IKB

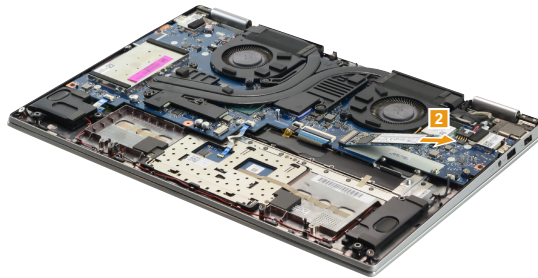

1040 PCI Express Mini Card for wireless LAN

For access, remove these FRUs in order:


- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35

Important: The preinstalled WLAN module may only be replaced with a Lenovo approved module in order to comply with FCC and IC regulations. Refer to “Table 5. Parts list—Overall” on page 80 for Lenovo part numbers for the approved modules.

Figure 4. Removal steps of PCI Express Mini Card for wireless LAN

Peel off the sponge on the card **1**.

Lenovo YOGA 720-13IKB

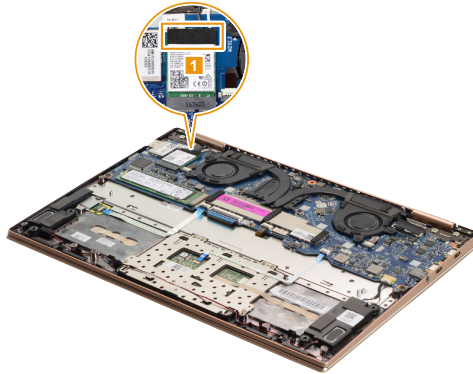


Lenovo YOGA 720-15IKB




Figure 4. Removal steps of PCI Express Mini Card for wireless LAN (continued)

Disconnect the two wireless LAN cables (black, white) **2**, and then remove the screw **3**.

Lenovo YOGA 720-13IKB

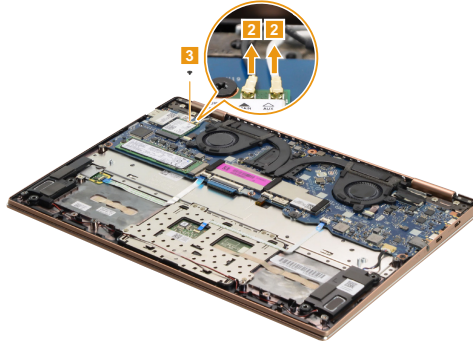

Lenovo YOGA 720-15IKB

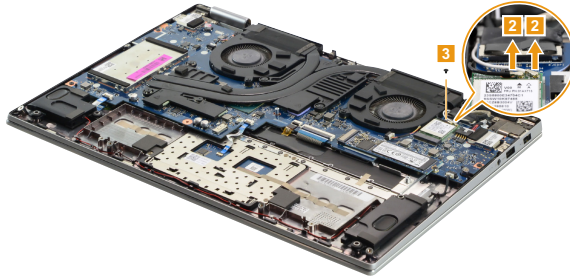

In step **2**, unplug the jacks by using the removal tool antenna RF connector (P/N: 08K7159), or pick up the connectors with your fingers and gently unplug them in the direction shown by the arrows.

Notes: The wireless LAN card has 2 cables in step **2**.

The wireless LAN card in some models might have 3 cables in step **2**.


Step	Screw (quantity)	Color	Torque
3	M2.0 x 2.5 mm, Phillips-head, nylok-coated (1) WLAN TO MB	Black	1.8-2.0 kg_cm

// Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual


Figure 4. Removal steps of PCI Express Mini Card for wireless LAN (continued)

Remove the card in the direction shown by arrow 4.

Lenovo YOGA 720-13IKB

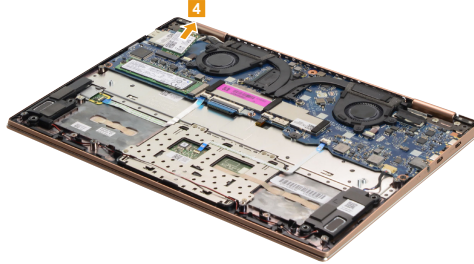

Lenovo YOGA 720-15IKB

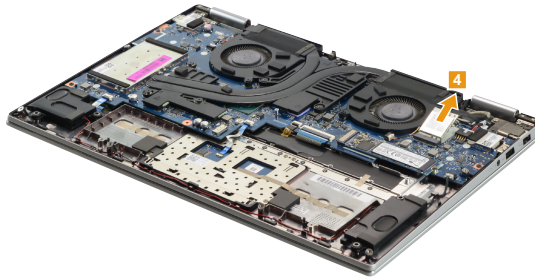

When installing: When installing the wireless LAN card, plug the black cable into the jack labeled **MAIN** and the white cable into the jack labeled **AUX**.

1050 Speakers


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35


Figure 5. Removal steps of speakers

Unplug the speaker connector in the direction shown by arrow **1**. Release the speaker cable from the cable guides and peel off the tape that secures the cable. Remove the two speakers **2**.

Lenovo YOGA 720-13IKB

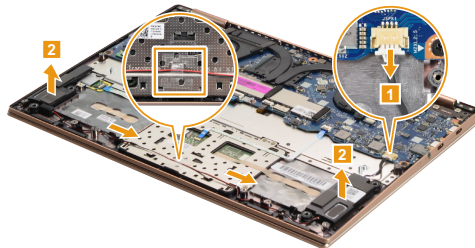

Lenovo YOGA 720-15IKB

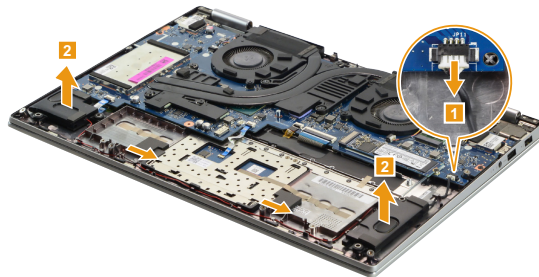

1060 DIMM (Lenovo YOGA 720-15IKB)

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35


Figure 6. Removal steps of DIMM (Lenovo YOGA 720-15IKB)

Carefully remove the DIMM EMI shielding **1**.



Figure 6. Removal steps of DIMM (Lenovo YOGA 720-15IKB) (continued)

Release the two latches on both edges of the socket at the same time in the directions shown by arrows **2**, and then unplug the DIMM in the direction shown by arrow **3**.

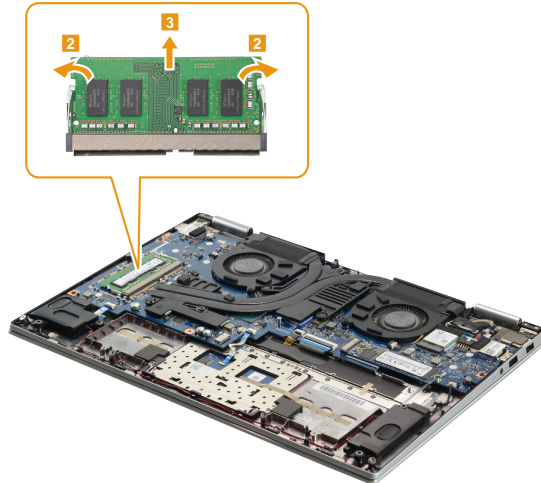

When installing: Insert the notched end of the DIMM into the socket. Push the DIMM firmly, and pivot it until it snaps into place. Make sure that it is firmly fixed in the slot and is difficult to move.

Note: When replacing the memory is completed, you need to restart the computer after the first reboot.

1070 Thermal module


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35


Figure 7. Removal steps of thermal module

Disconnect the two fan connectors in the directions shown by arrows **1** and **2**.

Lenovo YOGA 720-13IKB

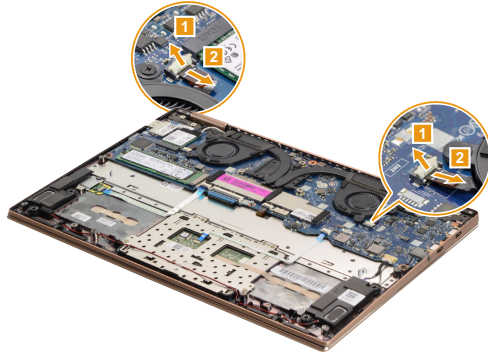

Lenovo YOGA 720-15IKB

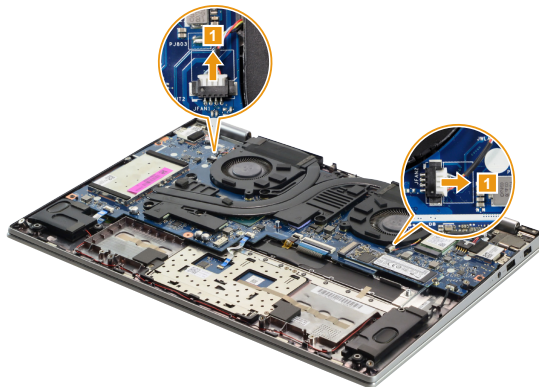


When installing: Make sure that the connectors are attached firmly.


Figure 7. Removal steps of thermal module (continued)

Remove the screws **3**, **3-a** and **3-b**.

Lenovo YOGA 720-13IKB

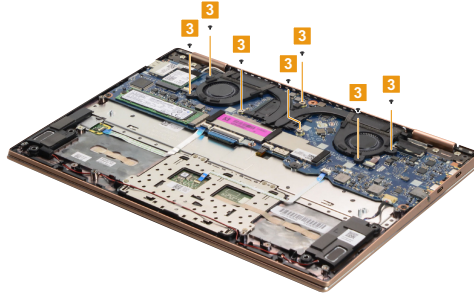

Lenovo YOGA 720-15IKB

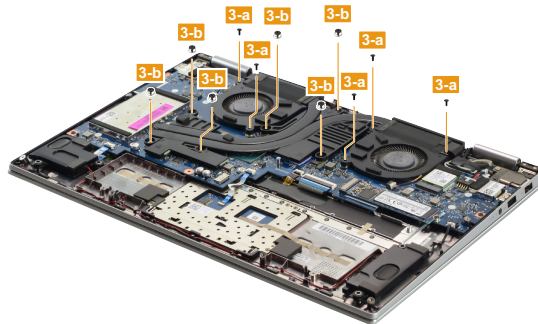


Step	Screw (quantity)	Color	Torque
3	M2.0 x 2.5 mm, Phillips-head, nylok-coated (7) THERMAL TO MB (UMA Only) /FAN TO UP (UMA Only)	Black	1.8-2.0 kg_cm
3-a	M2.0 x 5.0 mm, Phillips-head, nylok-coated (5) FAN TO UP	Black	1.8-2.0 kg_cm
3-b	M2.0 x 2.85+2.3 mm, Phillips-head, nylok-coated (6) THERMAL MODULE TO MB (DIS)	Black	1.8-2.0 kg_cm


Figure 7. Removal steps of thermal module (continued)

Remove the thermal module in the direction shown by arrow **4**.

Lenovo YOGA 720-13IKB

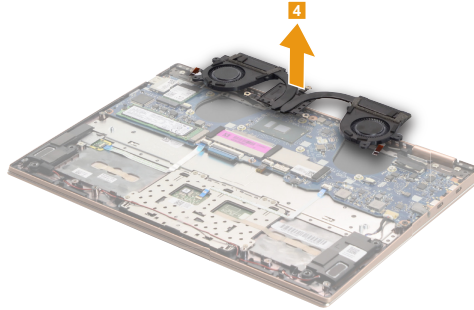


Lenovo YOGA 720-15IKB

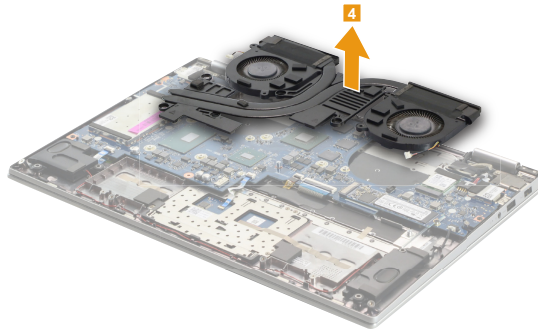


Attention: Do not handle the heat sink assembly roughly. Improper handling can cause distortion or deformation and imperfect contact with components.

Figure 7. Removal steps of thermal module (continued)

Lenovo YOGA 720-13IKB

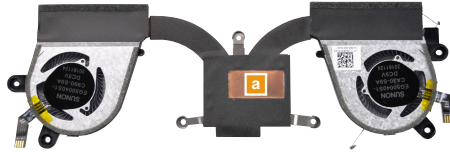

Lenovo YOGA 720-15IKB

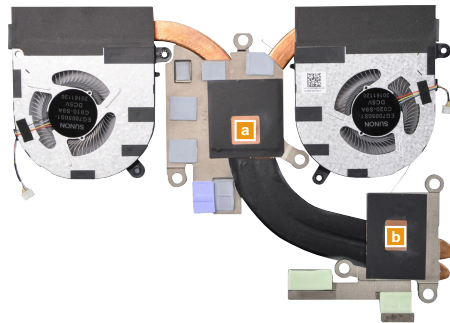

When installing: Before you attach the fan assembly to the computer, apply thermal grease, at an amount of 0.2 grams, to parts **a** **b** shown in the figure above. Either too much or too little grease application can cause a thermal problem due to imperfect contact with a component.

1080 System board

Important notices for handling the system board:

When handling the system board, bear the following in mind.

- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- Avoid rough handling of any kind.
- During the whole process, make sure not to drop or stack the system board.
- If you put a system board down, make sure to put it only on a padded surface, such as an ESD mat or conductive corrugated material.


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35
- “1030 Solid state disk” on page 36
- “1040 PCI Express Mini Card for wireless LAN” on page 38
- “1070 Thermal module” on page 44


Figure 8. Removal steps of system board (continued)

Detach the connectors in the directions shown by arrows **1**, **2** and **3**.

Lenovo YOGA 720-13IKB

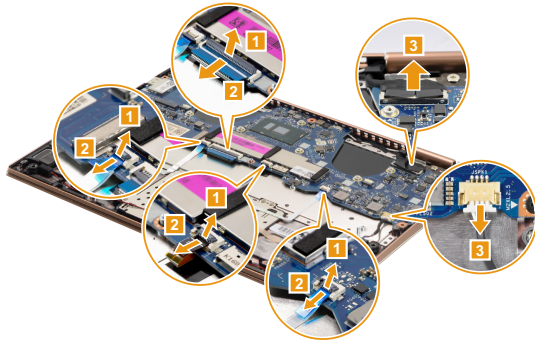

Lenovo YOGA 720-15IKB

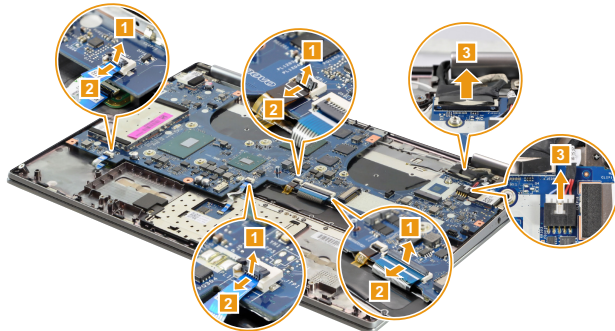


When installing: Make sure that the connectors are attached firmly.

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual


Figure 8. Removal steps of system board (continued)

Remove the screws **4**, **4-a** and **4-b**.

Lenovo YOGA 720-13IKB

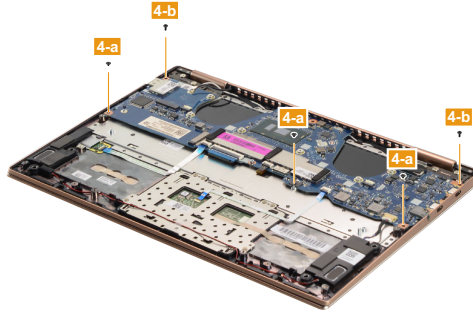

Lenovo YOGA 720-15IKB

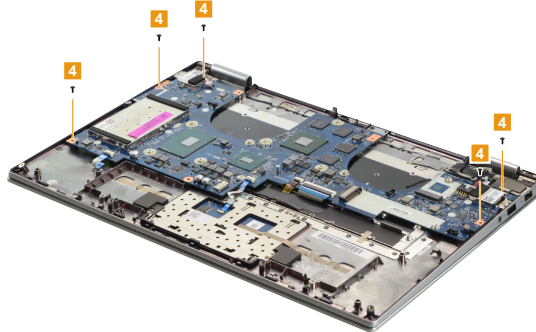


Step	Screw (quantity)	Color	Torque
4-a	M2.0 x 2.5 mm, Phillips-head, nylok-coated (3) MB TO UP	Black	1.8-2.0 kg_cm
4-b	M2.0 x 4.5 mm, Phillips-head, nylok-coated (2) MB TO HINGE TO UP	Black	1.8-2.0 kg_cm
4	M2.0 x 5.0 mm, Phillips-head, nylok-coated (5) MB TO UPPER	Black	1.8-2.0 kg_cm


Figure 8. Removal steps of system board (continued)

Remove the system board 5.

Lenovo YOGA 720-13IKB

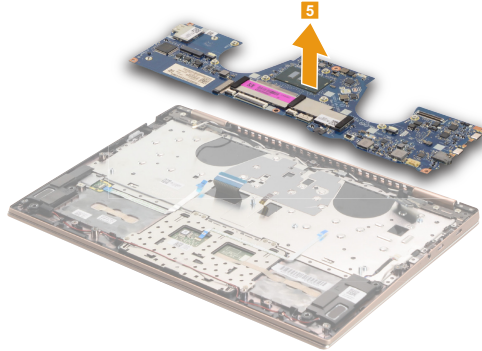

Lenovo YOGA 720-15IKB

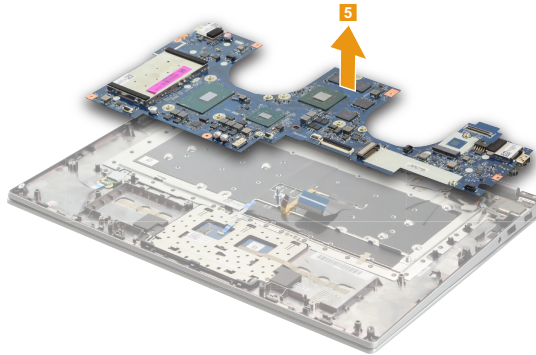

1090 Fingerprint module (on select models)


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35
- “1030 Solid state disk” on page 36
- “1040 PCI Express Mini Card for wireless LAN” on page 38
- “1050 Speakers” on page 41
- “1070 Thermal module” on page 44
- “1080 System board” on page 48


Figure 9. Removal steps of fingerprint module

Remove the screw **1**, then remove the fingerprint bracket **2**.

Lenovo YOGA 720-13IKB

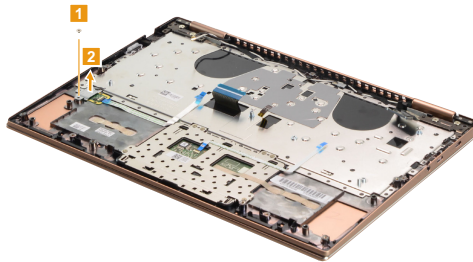

Lenovo YOGA 720-15IKB

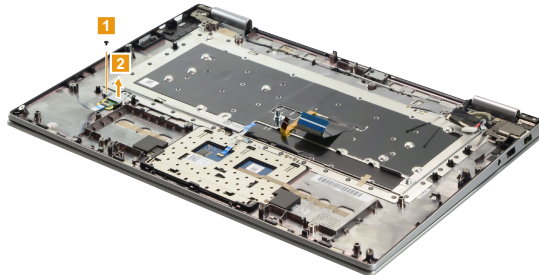


Step	Screw (quantity)	Color	Torque
1	M2.0 x 2.5 mm, Phillips-head, nylok-coated (1) FP TO UP	Silver	1.8-2.0 kg_cm


Figure 9. Removal steps of fingerprint module (continued)

Remove the fingerprint board **3**.

Lenovo YOGA 720-13IKB

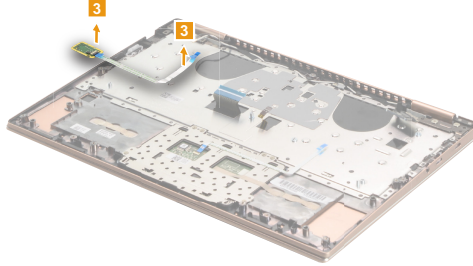

Lenovo YOGA 720-15IKB

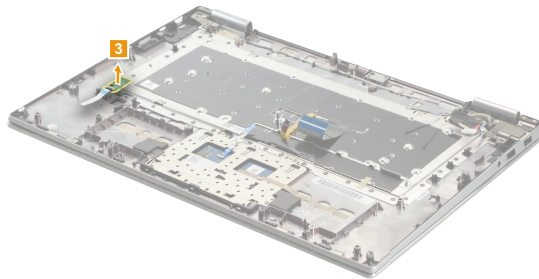

1100 Touchpad module


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35
- “1030 Solid state disk” on page 36
- “1040 PCI Express Mini Card for wireless LAN” on page 38
- “1050 Speakers” on page 41
- “1070 Thermal module” on page 44
- “1080 System board” on page 48

Figure 10. Removal steps of touchpad module

Peel off the tape **1**.

Lenovo YOGA 720-13IKB

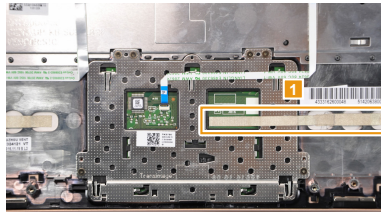

Lenovo YOGA 720-15IKB


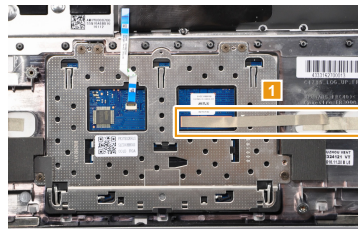



Figure 10. Removal steps of touchpad module (continued)

Remove the screws 2.

Lenovo YOGA 720-13IKB

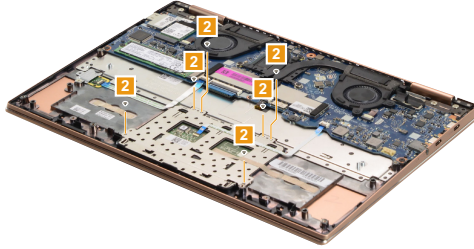

Lenovo YOGA 720-15IKB

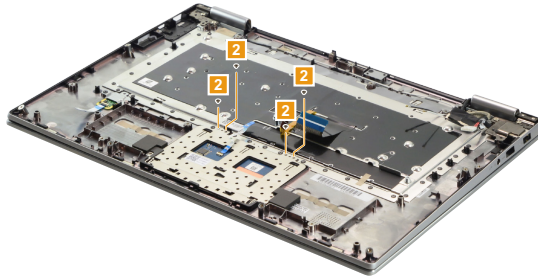


Step	Screw (quantity)	Color	Torque
2	M1.6 x 2.0 mm, Phillips-head, nylok-coated (6) TP BRACKET TO UP (Lenovo YOGA 720-13IKB)	Black	1.8-2.0 kg_cm
2	M1.6 x 2.0 mm, Phillips-head, nylok-coated (4) TP TO UPPER (Lenovo YOGA 720-15IKB)	Black	1.8-2.0 kg_cm


Figure 10. Removal steps of touchpad module (continued)

Remove the touchpad module in the direction shown by arrow **3**.

Lenovo YOGA 720-13IKB

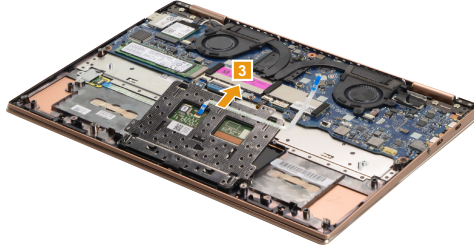

Lenovo YOGA 720-15IKB

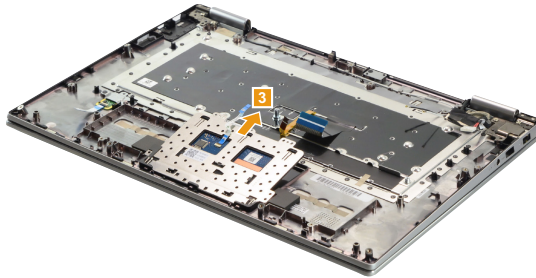

1110 LCD unit


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35
- “1030 Solid state disk” on page 36
- “1040 PCI Express Mini Card for wireless LAN” on page 38
- “1050 Speakers” on page 41
- “1070 Thermal module” on page 44
- “1080 System board” on page 48


Figure 11. Removal steps of LCD unit

Remove the screws **1**.

Lenovo YOGA 720-13IKB

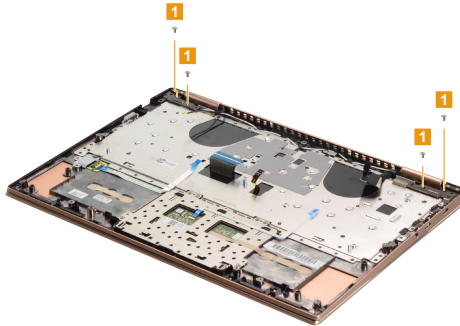

Lenovo YOGA 720-15IKB

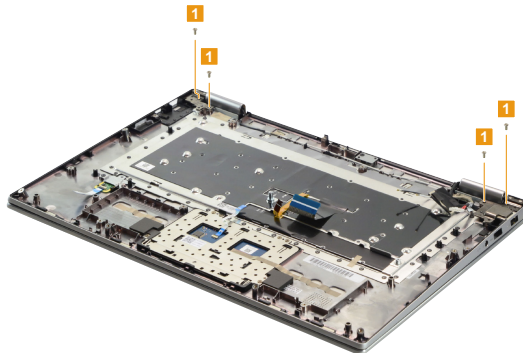


Step	Screw (quantity)	Color	Torque
1	M2.5 × 4.5 mm, Phillips-head, nylok-coated (4) HINGE TO UP (Lenovo YOGA 720-13IKB)	Silver	1.8-2.0 kg_cm
1	M2.5 × 5.0 mm, Phillips-head, nylok-coated (4) HINGE TO UPPER (Lenovo YOGA 720-15IKB)	Silver	1.8-2.0 kg_cm

// Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual

Figure 11. Removal steps of LCD unit (continued)

Open the hinges **2**. Release the antenna cables from the cable guides.

Lenovo YOGA 720-13IKB

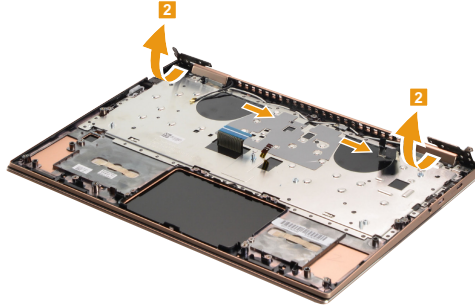

Lenovo YOGA 720-15IKB

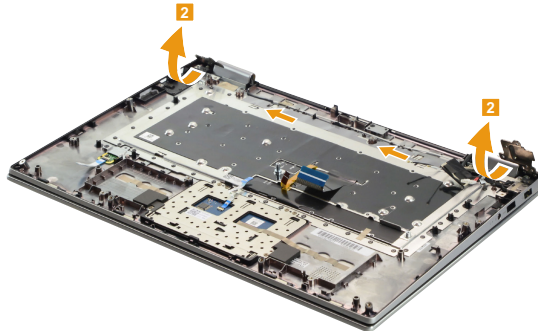



Figure 11. Removal steps of LCD unit (continued)

Rotate the upper case in the direction shown by arrow **3**. Then remove the upper case.

Lenovo YOGA 720-13IKB



Lenovo YOGA 720-15IKB

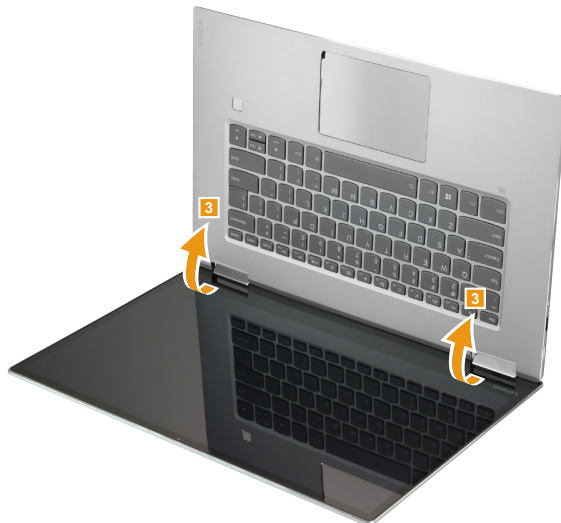


1120 DC-in cable (Lenovo YOGA 720-15IKB)

For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35
- “1030 Solid state disk” on page 36
- “1040 PCI Express Mini Card for wireless LAN” on page 38
- “1050 Speakers” on page 41
- “1070 Thermal module” on page 44
- “1080 System board” on page 48
- “1110 LCD unit” on page 57

Figure 12. Removal steps of DC-in cable (Lenovo YOGA 720-15IKB)

Remove the DC-in cable in the direction shown by arrow **1**.

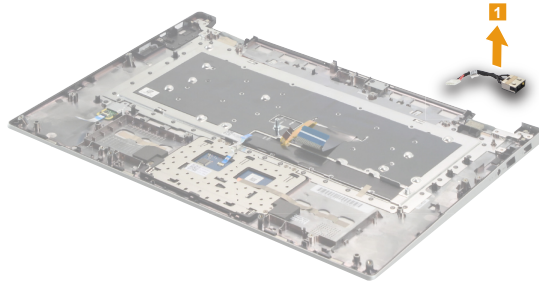

1130 LCD panel


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35
- “1030 Solid state disk” on page 36
- “1040 PCI Express Mini Card for wireless LAN” on page 38
- “1050 Speakers” on page 41
- “1070 Thermal module” on page 44
- “1080 System board” on page 48
- “1110 LCD unit” on page 57

Figure 13. Removal steps of LCD panel

Remove the hinge cover with tweezers **1**.

Lenovo YOGA 720-13IKB

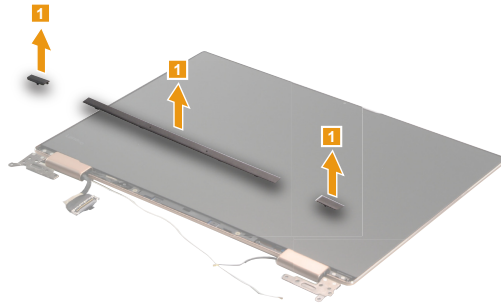

Lenovo YOGA 720-15IKB


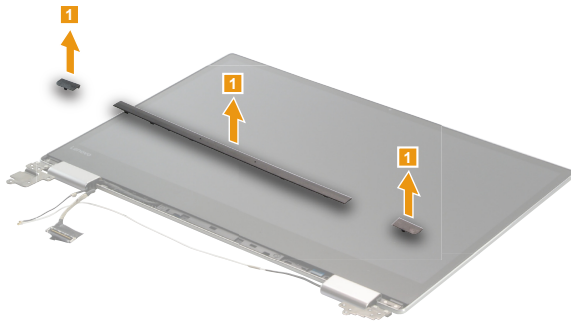


Figure 13. Removal steps of LCD panel (continued)

Remove the hinge rubbers **2**.

Lenovo YOGA 720-13IKB

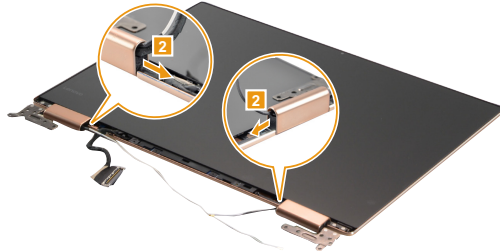

Lenovo YOGA 720-15IKB


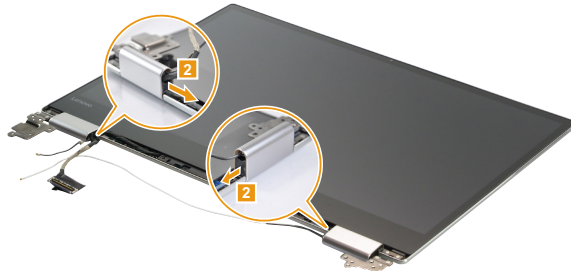



Figure 13. Removal steps of LCD panel (continued)

Remove the screws **3**.

Lenovo YOGA 720-13IKB

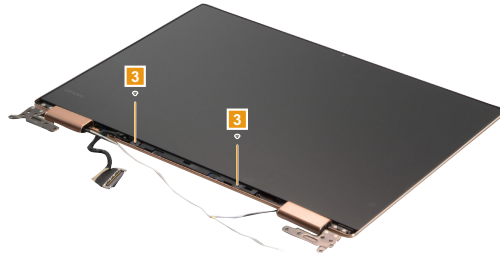

Lenovo YOGA 720-15IKB

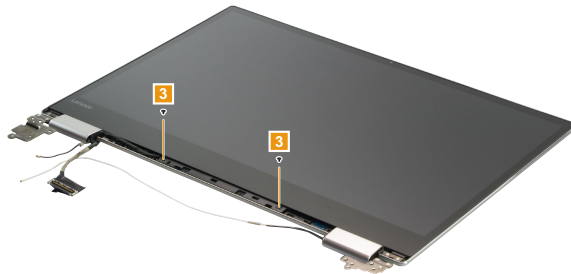


Step	Screw (quantity)	Color	Torque
3	M1.6 × 2.0 mm, Phillips-head, nylok-coated (2) PAMEL FRAME TO COVER (Lenovo YOGA 720-13IKB)	Black	1.8-2.0 kg_cm
3	M2.0 × 3.0 mm, Phillips-head, nylok-coated (2) PAMEL FRAME TO COVER (Lenovo YOGA 720-15IKB)	Black	1.8-2.0 kg_cm

Figure 13. Removal steps of LCD panel (continued)

Gently pull out the two pieces of adhesive tape with tweezers in the direction shown by arrows 4.

Lenovo YOGA 720-13IKB

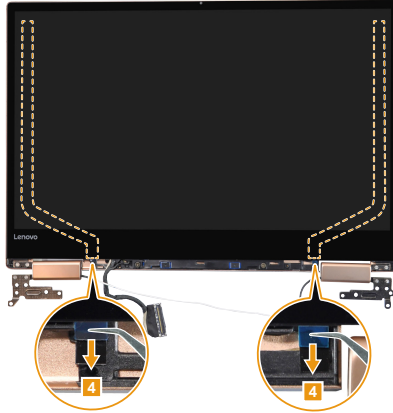

Lenovo YOGA 720-15IKB


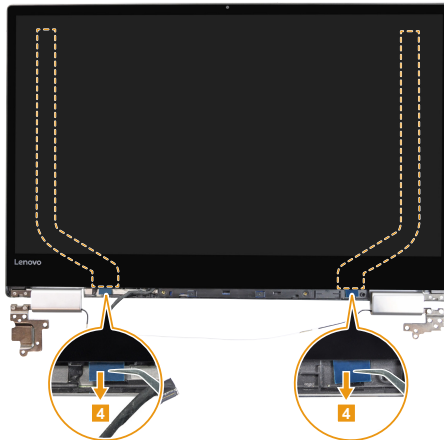


Figure 13. Removal steps of LCD panel (continued)

Lift the LCD panel 5.

Lenovo YOGA 720-13IKB

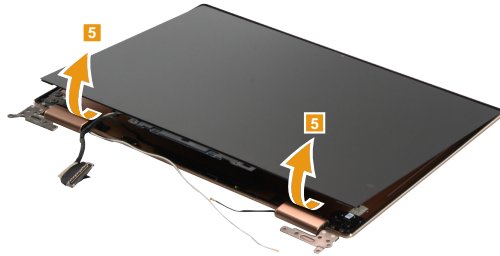

Lenovo YOGA 720-15IKB


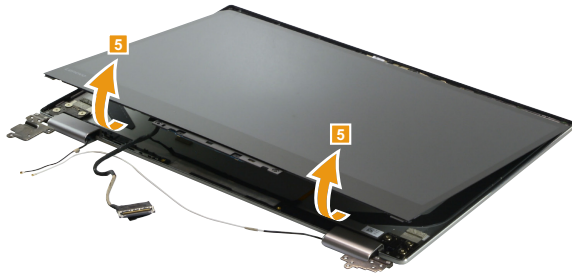



Figure 13. Removal steps of LCD panel (continued)

Gently separate the LCD panel and LCD cover and turn over the LCD panel. Detach the two connectors in the direction shown by arrows **6**. Peel off the adhesive tape. Lift the EDP cable latch in the direction shown by arrow **7**, then detach the LCD connector.

Lenovo YOGA 720-13IKB

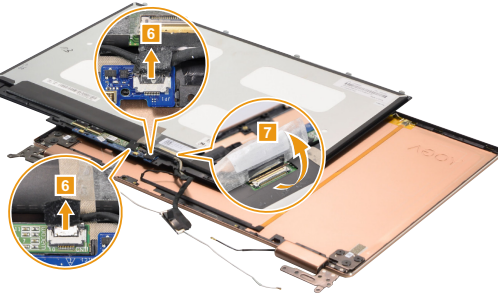

Lenovo YOGA 720-15IKB

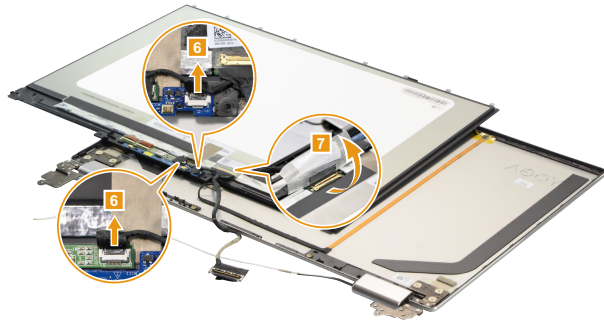


When installing: Make sure that the connectors are attached firmly.


Figure 13. Removal steps of LCD panel (continued)

Remove the microphone board from the LCD module **8**.

Lenovo YOGA 720-13IKB

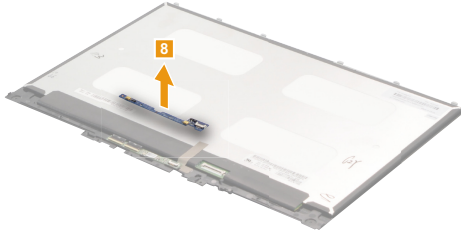

Lenovo YOGA 720-15IKB

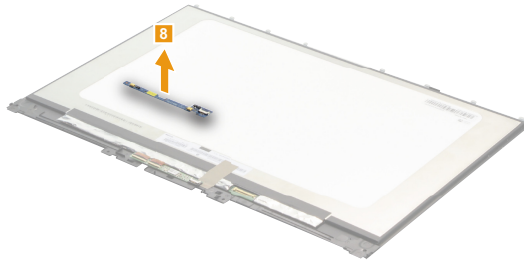

1140 EDP cable and camera board


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35
- “1030 Solid state disk” on page 36
- “1040 PCI Express Mini Card for wireless LAN” on page 38
- “1050 Speakers” on page 41
- “1070 Thermal module” on page 44
- “1080 System board” on page 48
- “1110 LCD unit” on page 57
- “1130 LCD panel” on page 61

Figure 14. Removal steps of EDP cable and camera board

Unplug the connector in the direction shown by arrow **1**. Remove the camera board **2**.

Lenovo YOGA 720-13IKB

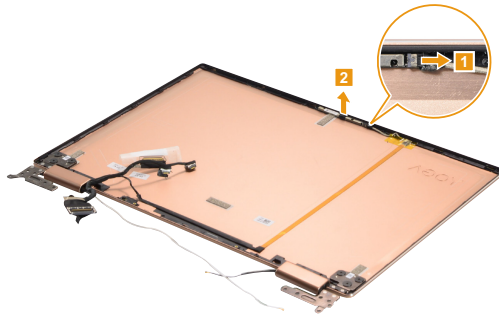

Lenovo YOGA 720-15IKB



When installing: Make sure that the connector is attached firmly.

Figure 14. Removal steps of EDP cable and camera board (continued)

Peel off the tape **3**.

Lenovo YOGA 720-13IKB




Lenovo YOGA 720-15IKB




Figure 14. Removal steps of EDP cable and camera board (continued)

Remove the EDP cable **4**.

Lenovo YOGA 720-13IKB

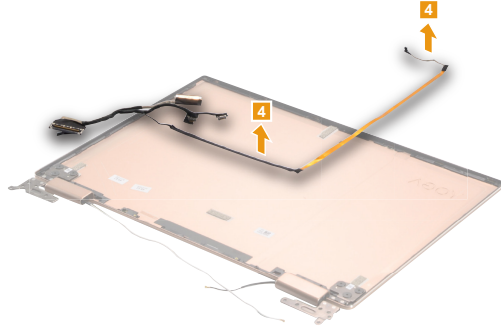

Lenovo YOGA 720-15IKB

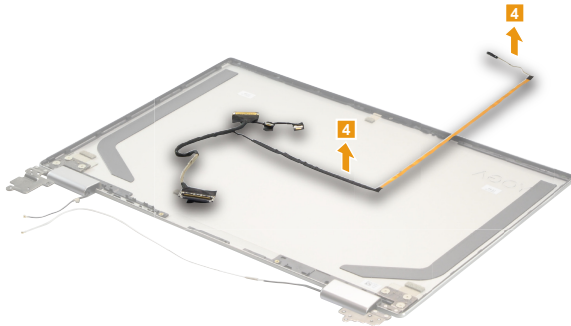

1150 LCD hinges


For access, remove these FRUs in order:

- “1010 Base cover” on page 32
- “1020 Battery pack” on page 35
- “1030 Solid state disk” on page 36
- “1040 PCI Express Mini Card for wireless LAN” on page 38
- “1050 Speakers” on page 41
- “1070 Thermal module” on page 44
- “1080 System board” on page 48
- “1110 LCD unit” on page 57
- “1130 LCD panel” on page 61
- “1140 EDP cable and camera board” on page 68

Figure 15. LCD hinges

Remove the screws **1**.

Lenovo YOGA 720-13IKB

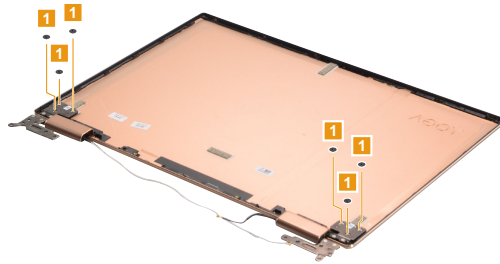

Lenovo YOGA 720-15IKB




Step	Screw (quantity)	Color	Torque
1	M2.0 × 2.0 mm, Phillips-head, nylok-coated (6) HINGE L/R TO COVER (Lenovo YOGA 720-13IKB)	Black	2.5 ~ 3.0 kgf*cm
1	M2.5 × 2.5 mm, Phillips-head, nylok-coated (6) HINGE BRK TO LCD COVER (Lenovo YOGA 720-15IKB)	Silver	2.5 ~ 3.0 kgf*cm

Figure 15. Removal steps of LCD hinges (continued)

Then release the hinges in the direction shown by arrows **2**.

Lenovo YOGA 720-13IKB

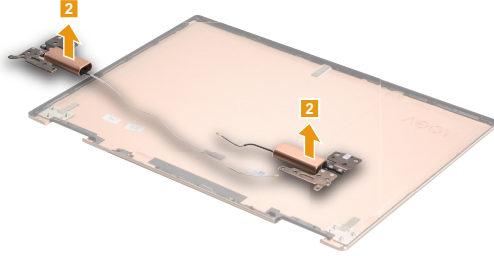

Lenovo YOGA 720-15IKB




Locations


Front and right-side view

- 1 Integrated camera
- 2 Multi-touch screen
- 3 Wireless LAN antennas
- 4 Built-in microphone
- 5 USB 3.0 port
- 6 Type-C port
- 7 Power button
- 8 Fingerprint reader
- 9 Touchpad

Lenovo YOGA 720-13IKB

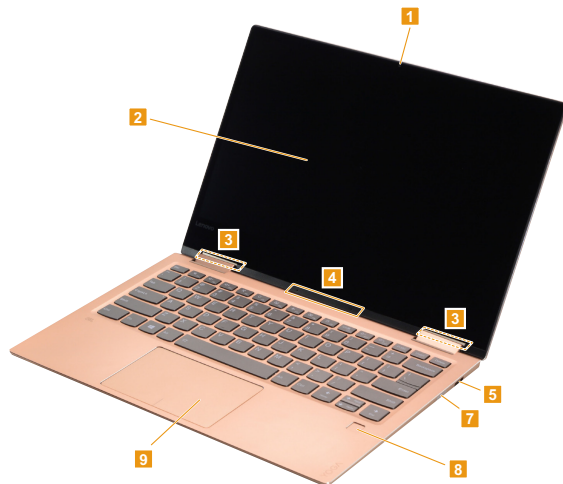

Lenovo YOGA 720-15IKB

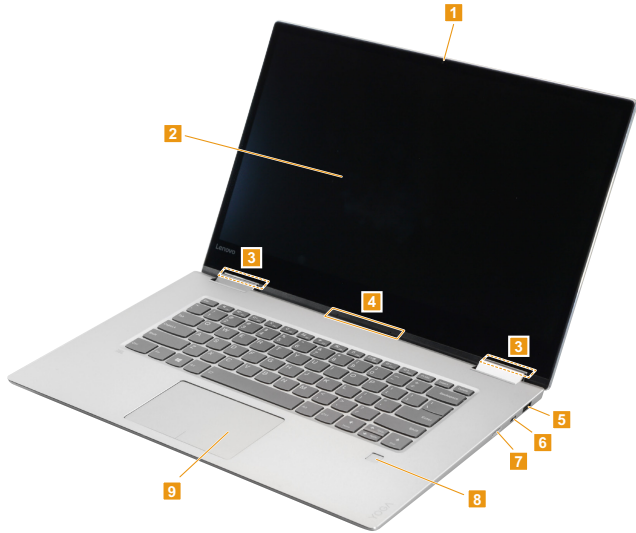

Bottom and left-side view

- 1 Louvers
- 2 Speakers
- 3 AC power adapter jack
- 4 Battery status indicator

Note: For the description of each indicator, see “Status indicators” on page 28.

- 5 USB 3.0 port
- 6 Combo audio jack
- 7 Novo button
- 8 Type-C port

Lenovo YOGA 720-13IKB



Lenovo YOGA 720-15IKB



Rear view

1 Ventilation slots

Lenovo YOGA 720-13IKB



Lenovo YOGA 720-15IKB



Parts list

This section presents the following service parts:

- “Overall” on page 78
- “LCD FRUs” on page 85
- “AC adapters” on page 88
- “Screws” on page 88

Notes:


- Each FRU is available for all types or models, unless specific types or models are specified.

Attention:


Do not attempt to replace an FRU on your own. If an FRU is damaged, contact a Lenovo authorized servicer or a marketing representative for replacement or repair. Only qualified technicians can inspect or repair this product.

Overall

Lenovo YOGA 720-13IKB

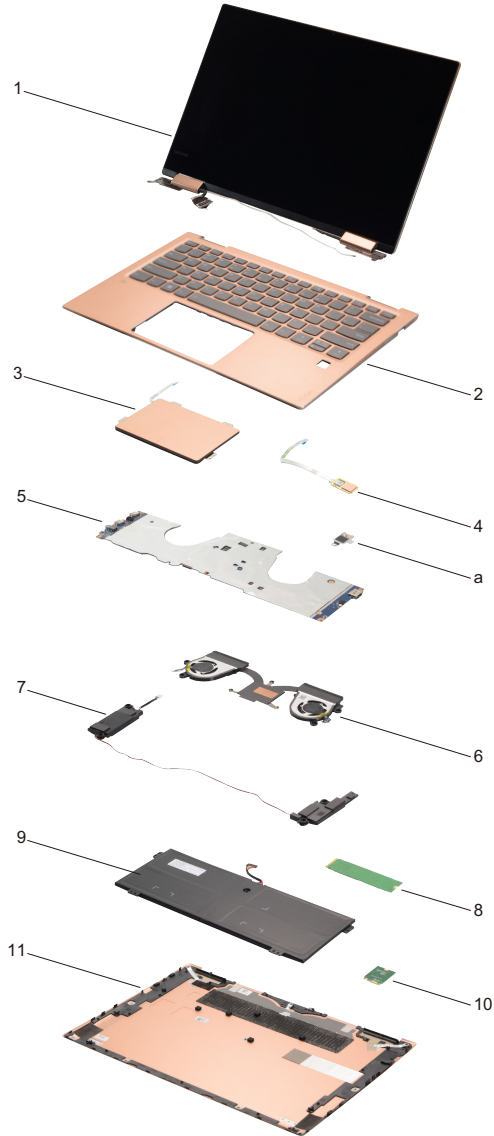

Lenovo YOGA 720-15IKB

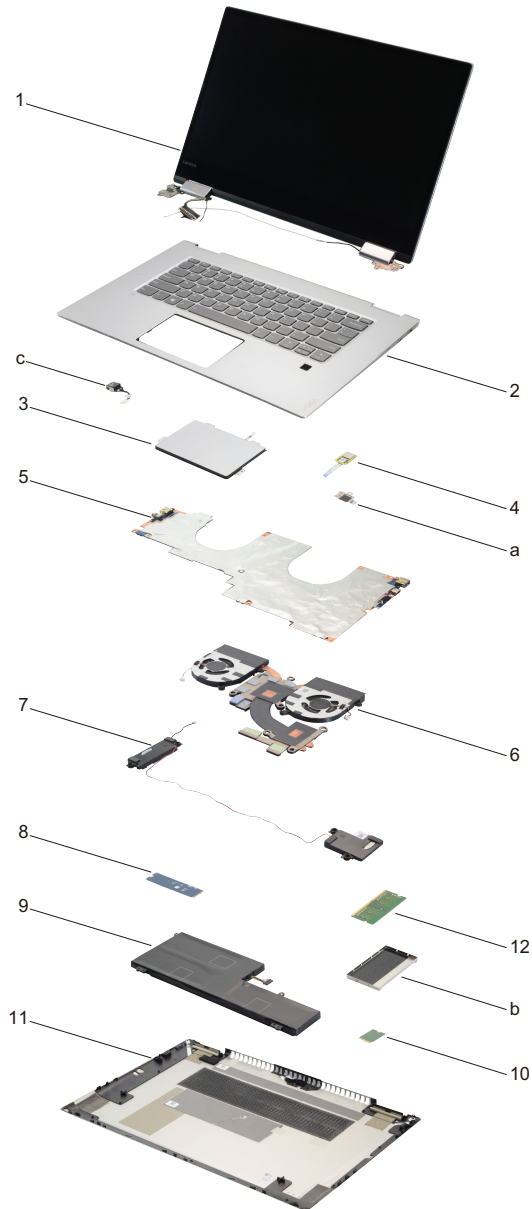

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual

Table 5. Parts list—Overall

No.	FRU	FRU no.	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
a-c	see "Miscellaneous parts" on page 88.				
1	LCD unit (see "LCD FRUs" on page 85.)				
2	Upper Case C 80X6 W/KB Silver US	5CB0N67889	N	•	
2	Upper Case C 80X6 W/KB Silver GK	5CB0N67863	N	•	
2	UpperCaseC 80X6W/KBSilver US INT'E	5CB0N67850	N	•	
2	Upper Case C 80X6 W/KB Silver KO	5CB0N67943	N	•	
2	Upper Case C 80X6 W/KB Silver CH	5CB0N67959	N	•	
2	Upper Case C 80X6 W/KB Silver RU	5CB0N67881	N	•	
2	Upper Case C 80X6 W/KB Silver AR-E	5CB0N67857	N	•	
2	Upper Case C 80X6 W/KB Silver HB	5CB0N67989	N	•	
2	Upper Case C 80X6 W/KB Silver TI	5CB0N68010	N	•	
2	UpperCase C 80X6 W/KB Silver INDIA	5CB0N67910	N	•	
2	Upper Case C 80X6 W/KB Silver UK	5CB0N67844	N	•	
2	Upper Case C 80X6 W/KB Silver IT	5CB0N67906	N	•	
2	Upper Case C 80X6 W/KB Silver SP	5CB0N67912	N	•	
2	Upper Case C 80X6 W/KB Silver TR	5CB0N67999	N	•	
2	Upper Case C 80X6 W/KB Silver PO	5CB0N67976	N	•	
2	Upper Case C 80X6 W/KB Silver LA	5CB0N68042	N	•	
2	Upper Case C 80X6 W/KB Silver CF-E	5CB0N67948	N	•	
2	Upper Case C 80X6 W/KB Silver ND	5CB0N67826	N	•	
2	Upper Case C 80X6 W/KB Silver FR	5CB0N67823	N	•	
2	Upper Case C 80X6 W/KB Silver GR	5CB0N67829	N	•	
2	Upper Case C 80X6 W/KB Silver BZ	5CB0N67925	N	•	
2	Upper Case C 80X6 W/KB Silver NL	5CB0N68028	N	•	
2	Upper Case C 80X6 W/KB Silver HG	5CB0N67947	N	•	
2	Upper Case C 80X6 W/KB Silver BE	5CB0N67885	N	•	
2	Upper Case C 80X6 W/KB Silver ICE	5CB0N67970	N	•	
2	Upper Case C 80X6 W/KB Silver SA	5CB0N67980	N	•	
2	Upper Case C 80X6 W/KB Silver SW	5CB0N68024	N	•	
2	Upper Case C 80X6 W/KB Silver BU	5CB0N67902	N	•	
2	UpperCase C 80X6 W/KB Silver CZ-SK	5CB0N67920	N	•	
2	UpperCase C 80X6 W/KB Silver AR-FR	5CB0N67934	N	•	
2	UpperCase C 80X6 W/KB Silver UKR	5CB0N67891	N	•	
2	UpperCase C 80X6 W/KB Silver USA	5CB0N67975	N	•	
2	Upper Case C 80X6 W/KB GM US	5CB0N67821	N	•	
2	Upper Case C 80X6 W/KB GM GK	5CB0N67838	N	•	
2	UpperCaseC 80X6W/KBGM US INT'E	5CB0N67849	N	•	
2	Upper Case C 80X6 W/KB GM KO	5CB0N67804	N	•	
2	Upper Case C 80X6 W/KB GM CH	5CB0N68036	N	•	
2	Upper Case C 80X6 W/KB GM RU	5CB0N68007	N	•	
2	Upper Case C 80X6 W/KB GM AR-E	5CB0N68032	N	•	
2	Upper Case C 80X6 W/KB GM HB	5CB0N67915	N	•	
2	Upper Case C 80X6 W/KB GM TI	5CB0N67963	N	•	
2	UpperCase C 80X6 W/KB GM INDIA	5CB0N67922	N	•	
2	Upper Case C 80X6 W/KB GM UK	5CB0N67813	N	•	
2	Upper Case C 80X6 W/KB GM IT	5CB0N67848	N	•	
2	Upper Case C 80X6 W/KB GM SP	5CB0N67973	N	•	
2	Upper Case C 80X6 W/KB GM TR	5CB0N67808	N	•	

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
2	Upper Case C 80X6 W/KB GM PO	5CB0N67900	N	•	
2	Upper Case C 80X6 W/KB GM LA	5CB0N67972	N	•	
2	Upper Case C 80X6 W/KB GM CF-E	5CB0N67905	N	•	
2	Upper Case C 80X6 W/KB GM ND	5CB0N68014	N	•	
2	Upper Case C 80X6 W/KB GM FR	5CB0N68002	N	•	
2	Upper Case C 80X6 W/KB GM GR	5CB0N67887	N	•	
2	Upper Case C 80X6 W/KB GM BZ	5CB0N67921	N	•	
2	Upper Case C 80X6 W/KB GM NL	5CB0N67923	N	•	
2	Upper Case C 80X6 W/KB GM HG	5CB0N67870	N	•	
2	Upper Case C 80X6 W/KB GM BE	5CB0N67837	N	•	
2	Upper Case C 80X6 W/KB GM ICE	5CB0N67907	N	•	
2	Upper Case C 80X6 W/KB GM SA	5CB0N67852	N	•	
2	Upper Case C 80X6 W/KB GM SW	5CB0N67871	N	•	
2	Upper Case C 80X6 W/KB GM BU	5CB0N68017	N	•	
2	UpperCase C 80X6 W/KB GM CZ-SK	5CB0N67895	N	•	
2	UpperCase C 80X6 W/KB GM AR-FR	5CB0N67854	N	•	
2	UpperCase C 80X6 W/KB GM UKR	5CB0N68034	N	•	
2	UpperCase C 80X6 W/KB GM USA	5CB0N67899	N	•	
2	Upper Case C 80X6 W/KB Copper US	5CB0N68038	N	•	
2	Upper Case C 80X6 W/KB Copper GK	5CB0N68020	N	•	
2	UpperCaseC 80X6W/KBCopper US INT'E	5CB0N67961	N	•	
2	Upper Case C 80X6 W/KB Copper KO	5CB0N67926	N	•	
2	Upper Case C 80X6 W/KB Copper CH	5CB0N68011	N	•	
2	Upper Case C 80X6 W/KB Copper RU	5CB0N67918	N	•	
2	Upper Case C 80X6 W/KB Copper AR-E	5CB0N67878	N	•	
2	Upper Case C 80X6 W/KB Copper HB	5CB0N68012	N	•	
2	Upper Case C 80X6 W/KB Copper TI	5CB0N67816	N	•	
2	UpperCase C 80X6 W/KB Copper INDIA	5CB0N68018	N	•	
2	Upper Case C 80X6 W/KB Copper UK	5CB0N67855	N	•	
2	Upper Case C 80X6 W/KB Copper IT	5CB0N67932	N	•	
2	Upper Case C 80X6 W/KB Copper SP	5CB0N67851	N	•	
2	Upper Case C 80X6 W/KB Copper TR	5CB0N68027	N	•	
2	Upper Case C 80X6 W/KB Copper PO	5CB0N67818	N	•	
2	Upper Case C 80X6 W/KB Copper LA	5CB0N67982	N	•	
2	Upper Case C 80X6 W/KB Copper CF-E	5CB0N67835	N	•	
2	Upper Case C 80X6 W/KB Copper ND	5CB0N67935	N	•	
2	Upper Case C 80X6 W/KB Copper FR	5CB0N67842	N	•	
2	Upper Case C 80X6 W/KB Copper GR	5CB0N67924	N	•	
2	Upper Case C 80X6 W/KB Copper BZ	5CB0N67988	N	•	
2	Upper Case C 80X6 W/KB Copper NL	5CB0N67830	N	•	
2	Upper Case C 80X6 W/KB Copper HG	5CB0N68015	N	•	
2	Upper Case C 80X6 W/KB Copper BE	5CB0N67962	N	•	
2	Upper Case C 80X6 W/KB Copper ICE	5CB0N68035	N	•	
2	Upper Case C 80X6 W/KB Copper SA	5CB0N67955	N	•	
2	Upper Case C 80X6 W/KB Copper SW	5CB0N67872	N	•	
2	Upper Case C 80X6 W/KB Copper BU	5CB0N67994	N	•	
2	UpperCase C 80X6 W/KB Copper CZ-SK	5CB0N68022	N	•	

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
2	UpperCase C 80X6 W/KB Copper AR-FR	5CB0N67986	N	•	
2	UpperCase C 80X6 W/KB Copper UKR	5CB0N68006	N	•	
2	UpperCase C 80X6 W/KB Copper USA	5CB0N67831	N	•	
2	Upper Case C 80X7 W/KB GM US	5CB0N67978	N		•
2	Upper Case C 80X7 W/KB GM GK	5CB0N67950	N		•
2	UpperCaseC 80X7W/KBGM US INT'E	5CB0N68043	N		•
2	Upper Case C 80X7 W/KB GM KO	5CB0N67942	N		•
2	Upper Case C 80X7 W/KB GM CH	5CB0N67884	N		•
2	Upper Case C 80X7 W/KB GM RU	5CB0N68021	N		•
2	Upper Case C 80X7 W/KB GM AR-E	5CB0N68039	N		•
2	Upper Case C 80X7 W/KB GM HB	5CB0N67938	N		•
2	Upper Case C 80X7 W/KB GM TI	5CB0N67968	N		•
2	UpperCase C 80X7 W/KB GM INDIA	5CB0N67987	N		•
2	Upper Case C 80X7 W/KB GM UK	5CB0N67862	N		•
2	Upper Case C 80X7 W/KB GM IT	5CB0N67866	N		•
2	Upper Case C 80X7 W/KB GM SP	5CB0N67825	N		•
2	Upper Case C 80X7 W/KB GM TR	5CB0N68013	N		•
2	Upper Case C 80X7 W/KB GM PO	5CB0N67811	N		•
2	Upper Case C 80X7 W/KB GM LA	5CB0N67847	N		•
2	Upper Case C 80X7 W/KB GM CF-E	5CB0N67894	N		•
2	Upper Case C 80X7 W/KB GM ND	5CB0N67904	N		•
2	Upper Case C 80X7 W/KB GM FR	5CB0N67927	N		•
2	Upper Case C 80X7 W/KB GM GR	5CB0N67919	N		•
2	Upper Case C 80X7 W/KB GM BZ	5CB0N67956	N		•
2	Upper Case C 80X7 W/KB GM NL	5CB0N67883	N		•
2	Upper Case C 80X7 W/KB GM HG	5CB0N67880	N		•
2	Upper Case C 80X7 W/KB GM BE	5CB0N67958	N		•
2	Upper Case C 80X7 W/KB GM ICE	5CB0N67979	N		•
2	Upper Case C 80X7 W/KB GM SA	5CB0N67802	N		•
2	Upper Case C 80X7 W/KB GM SW	5CB0N68001	N		•
2	Upper Case C 80X7 W/KB GM BU	5CB0N67832	N		•
2	UpperCase C 80X7 W/KB GM CZ-SK	5CB0N67819	N		•
2	UpperCase C 80X7 W/KB GM AR-FR	5CB0N67898	N		•
2	UpperCase C 80X7 W/KB GM UKR	5CB0N67992	N		•
2	UpperCase C 80X7 W/KB GM USA	5CB0N67810	N		•
2	Upper Case C 80X7 W/KB Silver US	5CB0N67945	N		•
2	Upper Case C 80X7 W/KB Silver GK	5CB0N67879	N		•
2	UpperCaseC 80X7W/KBSilver US INT'E	5CB0N67977	N		•
2	Upper Case C 80X7 W/KB Silver KO	5CB0N67964	N		•
2	Upper Case C 80X7 W/KB Silver CH	5CB0N67995	N		•
2	Upper Case C 80X7 W/KB Silver RU	5CB0N67807	N		•
2	Upper Case C 80X7 W/KB Silver AR-E	5CB0N67817	N		•
2	Upper Case C 80X7 W/KB Silver HB	5CB0N67952	N		•
2	Upper Case C 80X7 W/KB Silver TI	5CB0N67911	N		•
2	UpperCase C 80X7 W/KB Silver INDIA	5CB0N67888	N		•
2	Upper Case C 80X7 W/KB Silver UK	5CB0N67983	N		•
2	Upper Case C 80X7 W/KB Silver IT	5CB0N67903	N		•
2	Upper Case C 80X7 W/KB Silver SP	5CB0N68008	N		•

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
2	Upper Case C 80X7 W/KB Silver TR	5CB0N67960	N		●
2	Upper Case C 80X7 W/KB Silver PO	5CB0N67991	N		●
2	Upper Case C 80X7 W/KB Silver LA	5CB0N67868	N		●
2	Upper Case C 80X7 W/KB Silver CF-E	5CB0N67940	N		●
2	Upper Case C 80X7 W/KB Silver ND	5CB0N67901	N		●
2	Upper Case C 80X7 W/KB Silver FR	5CB0N68009	N		●
2	Upper Case C 80X7 W/KB Silver GR	5CB0N67953	N		●
2	Upper Case C 80X7 W/KB Silver BZ	5CB0N67886	N		●
2	Upper Case C 80X7 W/KB Silver NL	5CB0N67985	N		●
2	Upper Case C 80X7 W/KB Silver HG	5CB0N67949	N		●
2	Upper Case C 80X7 W/KB Silver BE	5CB0N68031	N		●
2	Upper Case C 80X7 W/KB Silver ICE	5CB0N67930	N		●
2	Upper Case C 80X7 W/KB Silver SA	5CB0N68005	N		●
2	Upper Case C 80X7 W/KB Silver SW	5CB0N67858	N		●
2	Upper Case C 80X7 W/KB Silver BU	5CB0N67946	N		●
2	UpperCase C 80X7 W/KB Silver CZ-SK	5CB0N67843	N		●
2	UpperCase C 80X7 W/KB Silver AR-FR	5CB0N67984	N		●
2	UpperCase C 80X7 W/KB Silver UKR	5CB0N67864	N		●
2	UpperCase C 80X7 W/KB Silver USA	5CB0N67833	N		●
3	TP Module C 80X6 W/Cable Silver	5T60N68003	N	●	
3	TP ModuleC 80X6 W/CableGunMetal	5T60N67869	N	●	
3	TP Module C 80X6 W/Cable Copper	5T60N68037	N	●	
3	TP ModuleC 80X7 W/CableGunMetal	5T60N67834	N		●
3	TP Module C 80X7 W/Cable Silver	5T60N67996	N		●
4	FPMModuleC 80X6 W/Calbe Silver	5F30N68000	N	●	
4	FPMModuleC80X6 W/CalbeGunMetal	5F30N67974	N	●	
4	FPMModule C 80X6 W/CalbeCopper	5F30N67853	N	●	
4	FPMModuleC80X7 W/CalbeGunMetal	5F30N67939	N		●
4	FPMModuleC 80X7 W/Calbe Silver	5F30N67933	N		●
5	MB C 80X6 NOK I77500 UMA 4G	5B20N67990	N	●	
5	MB C 80X6 WIN I77500 UMA 4G	5B20N68016	N	●	
5	MB C 80X6 NOK I77500 UMA 8G	5B20N67876	N	●	
5	MB C 80X6 WIN I77500 UMA 8G	5B20N68033	N	●	
5	MB C 80X6 NOK I77500 UMA 16G	5B20N67873	N	●	
5	MB C 80X6 WIN I77500 UMA 16G	5B20N67877	N	●	
5	MB C 80X6 NOK I57200 UMA 4G	5B20N67998	N	●	
5	MB C 80X6 WIN I57200 UMA 4G	5B20N67981	N	●	
5	MB C 80X6 NOK I57200 UMA 8G	5B20N67931	N	●	
5	MB C 80X6 WIN I57200 UMA 8G	5B20N67805	N	●	
5	MB C 80X6 NOK I57200 UMA 16G	5B20N68041	N	●	
5	MB C 80X6 WIN I57200 UMA 16G	5B20N67928	N	●	
5	MB C 80X6 NOK I77500 UMA 12G	5B20N67875	N	●	
5	MB C 80X6 WIN I77500 UMA 12G	5B20N67824	N	●	
5	MB C 80X6 NOK I57200 UMA 12G	5B20N67965	N	●	
5	MB C 80X6 WIN I57200 UMA 12G	5B20N67969	N	●	
5	MB C 80X7 NOK I57300 N17 2G 8G	5B20N67828	N		●
5	MB C 80X7 WIN I57300 N17 2G 8G	5B20N67890	N		●

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual

Table 5. Parts list—Overall (continued)


No.	FRU	FRU no.	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
5	MB C 80X7 NOK I77700 N17 2G 8G	5B20N67941	N		•
5	MB C 80X7 WIN I77700 N17 2G 8G	5B20N67856	N		•
5	MB C 80X7 NOK I77700 UMA 8G	5B20N67971	N		•
5	MB C 80X7 WIN I77700 UMA 8G	5B20N67814	N		•
5	MB C 80X7 NOK I57300 UMA 8G	5B20N67815	N		•
5	MB C 80X7 WIN I57300 UMA 8G	5B20N67897	N		•
5	MB C 80X7 NOK I57300 N17 4G 8G	5B20N67839	N		•
5	MB C 80X7 WIN I57300 N17 4G 8G	5B20N68025	N		•
5	MB C 80X7 NOK I77700 N17 4G 8G	5B20N68004	N		•
5	MB C 80X7 WIN I77700 N17 4G 8G	5B20N67893	N		•
6	Thermal Module C 80X6 W/Fan	5H40N67860	N	•	
6	Thermal Module C 80X7 W/Fan DIS	5H40N67861	N		•
6	Thermal Module C 80X7 W/Fan UMA	5H40N67914	N		•
7	Yoga720-13 RT6-D Speaker	5SB0M65355	N	•	
7	Yoga720-15 Blade N-Y Speaker	5SB0M65359	N		•
8	SSD, PM961 MZVLW128HEGR PCIE 128G SSD	5SD0L73445	N	•	
8	SSD, TSB XG4 128G M.2 2280 PCIe SSD	5SD0M56301	N	•	
8	SSD, PM961 MZVLW256HEHP PCIE 256G SSD	5SD0L73444	N	•	•
8	SSD, TSB XG4 256G M.2 2280 PCIe SSD	5SD0M56299	N	•	•
8	SSD, PM961 MZVLW512HMJP PCIE 512G SSD	5SD0L73443	N	•	•
8	SSD, TSB XG4 512G M.2 2280 PCIe SSD	5SD0M56300	N	•	•
8	SSD, MZVLW1T0HMLH-000L2 PCIe M.2 1TB SSD	5SD0L07883	N	•	•
9	Battery, Valcan SP/A L16M4PB1 7.68V48Wh4cell bty	5B10M52740	N	•	
9	Battery, Valcan CP/C L16C4PB1 7.68V48Wh4cell bty	5B10M52739	N	•	
9	Battery, Valcan LG L16L4PB1 7.72V48Wh4cell bty	5B10M52738	N	•	
9	Battery,vision LG L16L6PC1 11.58V72Wh6cell bty	5B10M53744	N		•
9	Battery,visionSP/C L16M6PC1 11.52V72Wh6cell bty	5B10M53743	N		•
9	Battery,vision CP/A L16C6PC1 11.52V72Wh6cell bty	5B10M53745	N		•
10	Intel 8265 2x2AC+BT PCIE M.2 WLAN NV	SW10K97453	N	•	•
10	Ltn NFA344A 2x2AC+BT4.x PCIE M.2 WLAN	SW10K97465	N	•	•
11	Lower Case C 80X6 Silver	5CB0N68026	N	•	
11	Lower Case C 80X6 GunMetal	5CB0N67937	N	•	
11	Lower Case C 80X6 Copper	5CB0N68040	N	•	
11	Lower Case C 80X7 GunMetal	5CB0N67836	N		•
11	Lower Case C 80X7 Silver	5CB0N67966	N		•
12	Memory, Samsung 4GB DDR4 SODIMM 2400 M471A5244CB0-CRC	SM30M49902	N		•
12	Memory, 4GB D4S HMA851S6AFR6N-UH	SM30G16505	N		•
12	Memory, 4GB D4S RMSA3270MB86H9F-2400	SM30G16507	N		•
12	Memory, 4GB D4S MTA4ATF51264HZ-2G3B1	SM30G16506	N		•
12	Memory, Samsung 8GB DDR4 SODIMM 2400 M471A1K43CB1-CRC	SM30M49901	N		•
12	Memory, HMA81GS6AFR8N-UH	SM30G16509	N		•
12	Memory, MTA8ATF1G64HZ-2G3B1	SM30G16510	N		•
12	Memory, RMSA3260MB78HAF-2400	SM30G16511	N		•
—	AC adapter (see "AC adapters" on page 88).				

LCD FRUs

In Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB, there are following types of LCDs.

- “13.3-in. FHD/UHD LED”

Lenovo YOGA 720-13IKB

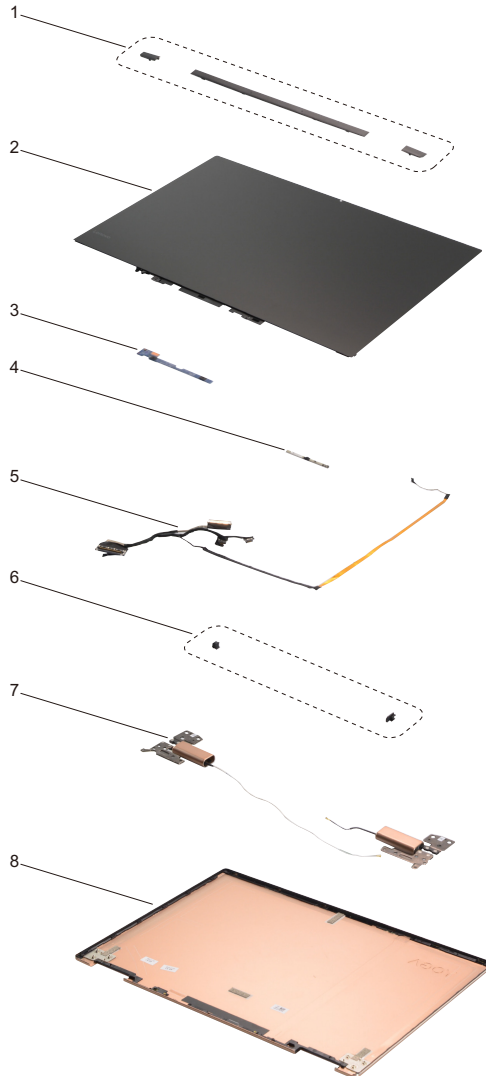

- “15.6-in. FHD/UHD LED”

Lenovo Yoga 720-15IKB

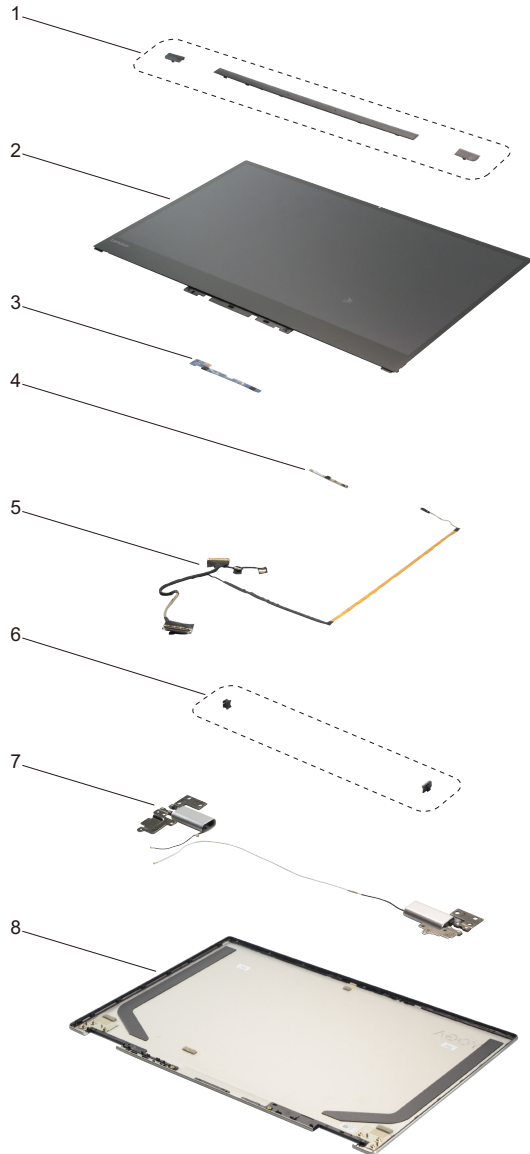


Table 6. Parts list—LCD FRUs

No.	FRU	FRU no.	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
1	Hinge Cover C 80X6 MID	5CB0N67892	N	•	
1	Hinge Cover C 80X6 R	5CB0N67822	N	•	
1	Hinge Cover C 80X6 L	5CB0N67859	N	•	
1	Hinge Cover C 80X7 MID	5CB0N68030	N		•
1	Hinge Cover C 80X7 R	5CB0N67896	N		•
1	Hinge Cover C 80X7 L	5CB0N68023	N		•
2					
2					
3	MIC Board C 80X6	5C50N67840	N	•	
3	MIC Board C 80X7	5C50N67997	N		•
4	Camera C 80X6 1M	5C20N68029	N	•	
4	Camera C 80X7 1M	5C20N67803	N		•
5	EDP Cable C 80X6 FHD	5C10N67841	N	•	
5	EDP Cable C 80X6 UHD	5C10N67944	N	•	
5	EDP Cable C 80X7 FHD	5C10N67908	N		•
5	EDP Cable C 80X7 UHD	5C10N67882	N		•
6	Hinge Cap Rubber C 80X6 L	5R60N67967	N	•	
6	Hinge Cap Rubber C 80X6 R	5R60N67865	N	•	
6	Hinge Cap Rubber C 80X7 L	5R60N67929	N		•
6	Hinge Cap Rubber C 80X7 R	5R60N67806	N		•
7	Hinge C 80X6 W/ANT R+L Silver	5H50N67993	N	•	
7	Hinge C 80X6 W/ANT R+L GunMetal	5H50N67951	N	•	
7	Hinge C 80X6 W/ANT R+L Copper	5H50N67913	N	•	
7	Hinge C 80X7 W/ANT R+L GunMetal	5H50N67845	N		•
7	Hinge C 80X7 W/ANT R+L Silver	5H50N67846	N		•
8	LCD Cover C 80X6 Silver	5CB0N67827	N	•	
8	LCD Cover C 80X6 GunMetal	5CB0N67909	N	•	
8	LCD Cover C 80X6 Copper	5CB0N68019	N	•	
8	LCD Cover C 80X7 GunMetal	5CB0N67820	N		•
8	LCD Cover C 80X7 Silver	5CB0N67812	N		•

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual

Miscellaneous parts

Table 7. Parts list—Miscellaneous parts

FRU	P/N	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
System miscellaneous parts:				
• (a) FingerPrint Bracket C 80X6	5B40N67867	N	•	
• (a) FingerPrint Bracket C 80X7	5B40N67917	N		•
• (b) Shielding of Memory C 80X7	5S60N67957	N		•
Cable miscellaneous parts:				
• (c) DC-IN Cable C 80X7	5C10N67809	N		•
Note: Italicized letters in parentheses are references to the exploded view in “Overall” on page 78.				

AC adapters

Table 8. Parts list—AC adapters

FRU	P/N	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
Chicony PD 3.0 USB-C 45W 3pin	SA10E75843	*	•	
Liteon PD 3.0 USB-C 45W 3pin	SA10E75841	*	•	
Delta PD 3.0 USB-C 45W 3pin	SA10E75839	*	•	
Acbel PD 3.0 USB-C 45W 3pin	SA10E75845	*	•	
Delta ADLX90NDC3A 20V4.5A BIS	5A10J46686	*		•
Liteon ADLX90NLC3A 20V4.5A AD BIS	5A10J75109	*		•
Chicony ADLX90NCC3A 20V4.5A AD BIS	5A10J75116	*		•
Delta ADLX90NDC3A 20V4.5A COO	SA10M42754	*		•
Chicony ADLX90NCC3A 20V4.5A COO	SA10M42797	*		•
Liteon ADL135NLC3A 20V6.75A AD BIS	5A10J75112	*		•
Delta ADL135NDC3A 20V6.75A BIS	5A10J46690	*		•
Delta ADL135NDC3A 20V6.75A COO	SA10M42761	*		•

Screws

Table 9. Parts list—Screws

FRU	P/N	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
Screw Pack C 80X6	5S10N67954	N	•	
Screw Pack C 80X7	5S10N67936	N		•

Power cords

A Lenovo power cord for a specific country or region is usually available only in that country or region:

Table 10. Parts list—3-pin power cords

Region	P/N	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
CCC 3 pin • LINETEK PC323+RVV300/300+LS15 1m	145000600	*	•	•
Argentina 3 pin • LINETEK LS15+H03VV-F+LP39 1m	145000599	*	•	•
Switzerland 3 pin • LINETEK LS15+H03VV-F+LP-37 1m	145000597	*	•	•
Brazil 3 pin • LINETEK LS15 H03VV-F LP26A 1m	145000596	*	•	•
Israel 3 pin • LINETEK LS15+H03VV-F+LP-41 1m	145000595	*	•	•
UL 3 pin • LINETEK LP-30B + SPT-2 + LS15 1m	145000594	*	•	•
UK 3 pin • LINETEK LP-61L+ H03VV-F+ LS15 1m	145000593	*	•	•
India 3 pin • LINETEK PE-361+ H05VV-F+ LS15 1m	145000592	*	•	•
Italy 3 pin • LINETEK LS15+H03VV-F+PE-336 1m	145000591	*	•	•
Korea 3 pin • LINETEK LS15+H05VV-F+LP-E04A 1m	145000590	*	•	•
Australia 3 pin • LINETEK LS15+H03VV-F+LP-23A 1m	145000589	*	•	•
Taiwan 3 pin • LINETEK LS15+VCTF+LP-53 1m	145000588	*	•	•
Japan 3 pin • LINETEK LS15+VCTF+LP-54 1m	145000587	*	•	•
Africa 3 pin • LINETEK LS15+H03VV-F+PE-364 1m	145000586	*	•	•
CE 3 pin • LINETEK LP-34+H03VV-F + LS15 1m	145000585	*	•	•
CCC 3 pin • Longwell LSG-31+RVV300/300+LS-18 1m	145000568	*	•	•
Argentina 3 pin • Longwell LP-24+H03VV-F+LS-18 1m	145000567	*	•	•
Switzerland 3 pin • Longwell LP-37+H03VV-F+LS-18 1m	145000565	*	•	•
Brazil 3 pin • Longwell LP-46+H03VV-F+LS-18 1m	145000564	*	•	•
Israel 3 pin • Longwell LP-41+H03VV-F+LS-18 1m	145000563	*	•	•

Lenovo YOGA 720-13IKB/Lenovo YOGA 720-15IKB Hardware Maintenance Manual

Table 10. Parts list—3-pin power cords (continued)

Region	P/N	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
UL 3 pin • Longwell LP-30B+SPT-2 18AWG+LS-18 1m	145000562	*	•	•
UK 3 pin • Longwell LP-61L+H03VV-F+LS-18 1m	145000561	*	•	•
India 3 pin • Longwell LP-67+BIS+LS-18 1m	145000560	*	•	•
Italy 3 pin • Longwell LP-22+H03VV-F+LS-18 1m	145000559	*	•	•
Korea 3 pin • Longwell LP-486+KTLH03VV-F+LS-5 1m	145000558	*	•	•
Australia 3 pin • Longwell LP-23A+LFC-3R+LS-18 1m	145000557	*	•	•
Taiwan 3 pin • Longwell LP-71+VCTF+LS-33 1m	145000556	*	•	•
Japan 3 pin • Longwell LP-54+VCTF+LS-18 1m	145000555	*	•	•
Africa 3 pin • Longwell LP-39+H03VV-F+LS-18 1m	145000554	*	•	•
CE 3 pin • Longwell LP-34A+H03VV-F+LS-18 1m	145000553	*	•	•
CCC 3 pin • VOLEX GB10S3+RVV 300/500+VAC5S 1m	145000538	*	•	•
Argentina 3 pin • VOLEX VA2073+H03VV-F+VAC5S 1m	145000528	*	•	•
Switzerland 3 pin • VOLEX MP232+H03VV-F+VAC5S 1m	145000524	*	•	•
Brazil 3 pin • VOLEX CH10S3+H03VV-F+VAC5S 1m	145000527	*	•	•
Israel 3 pin • VOLEX SI16S3+H03VV-F+VAC5S 1m	145000526	*	•	•
UL 3 pin • Volex US15S3+SPT-2 +VAC5S 1m	145000537	*	•	•
UK 3 pin • VOLEX MP5004+H03VV-F+VAC5S 1m	145000605	*	•	•
Italy 3 pin • VOLEX IT10S3+H03VV-F+VAC5S 1m	145000535	*	•	•
Korea 3 pin • VOLEX M2511+KETI IEC+VAC5S 1m	145000533	*	•	•
Australia 3 pin • VOLEX AU10S3+H03VV-F+VAC5S 1m	145000532	*	•	•
Taiwan 3 pin • VOLEX TW15CS3+VCTF+VAC5S 1m	145000531	*	•	•
Japan 3 pin • VOLEX VAC5S+VCTF+M755 1m	145000530	*	•	•

Table 10. Parts list—3-pin power cords (continued)

Region	P/N	CRU ID.	Lenovo YOGA 720-13IKB	Lenovo YOGA 720-15IKB
CE 3 pin • VOLEX M2511+H03VV-F+VAC5S 1m	145000525	*	•	•
CCC 3 pin • lux 0036+RVV 300/300 0.75/3C+0002 1m	145500003	*	•	•
Argentina 3 pin • lux 0040+H03VV-F 0.75/3C+0011 1m	145500015	*	•	•
Switzerland 3 pin • lux 0027+H03VV-F 0.75/3C+0011 1m	145500013	*	•	•
Brazil 3 pin • lux 0034+H03VV-F 0.75/3C+0011 1m	145500011	*	•	•
Israel 3 pin • lux 0041+H03VV-F 0.75/3C+0011 1m	145500012	*	•	•
UL 3 pin • lux 0014+SPT-2 60°C 18/3C+0016 1m	145500002	*	•	•
Thailand 3 pin • lux 0014+H03VV-F 0.75/3C+0011 1m	5L60J33143	*	•	•
UK 3 pin • lux 0031+H03VV-F 0.75/3C+0011 1m	145500000	*	•	•
India 3 pin • lux 0046+IS694 0.75/3C+0011 1m	145500004	*	•	•
Italy 3 pin • lux 0029+H03VV-F 0.75/3C+0011 1m	145500009	*	•	•
Korea 3 pin • lux 0033+H03VV-F 0.75/3C+0011 1m	145500008	*	•	•
Australia 3 pin • lux 0038+H03VV-F 0.75/3C+0011 1m	145500006	*	•	•
Taiwan 3 pin • lux 0019+VCTF 0.75/3C+0021 1m	145500007	*	•	•
Japan 3 pin • lux 0018(E)+VCTF 0.75/3C+0021 1m	145500005	*	•	•
Africa 3 pin • lux 0044+H03VV-F 0.75/3C+0011 1m	145500010	*	•	•
CE 3 pin • lux 0033+H03VV-F 0.75/3C+0011 1m	145500001	*	•	•

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents.

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

The following terms are either registered trademarks or trademarks of Lenovo in the United States and/or other countries:

Lenovo®

Lenovo logo®

OneKey

The following term is trademark of Microsoft Corporation in the United States, other countries, or both:

Windows®

The following term is trademark of Intel Corporation or its subsidiaries in the United States, other countries, or both:

Intel®

Other company, product, or service names may be the trademarks or service marks of others.