

The page features a decorative design with three blue circles of varying sizes, each composed of concentric rings in different shades of blue. Two thin blue lines intersect at the top left, forming a large 'V' shape that frames the circles. The largest circle is at the top right, a medium one is in the center, and a large one is at the bottom right.

uBoard Hardware Installation Guide (V2.2)

This manual is uBoard hardware installation guide manufactured by PenAndFree Co.,Ltd.
2010 PenAndFree Co.,Ltd. All rights reserved. uBoard is a trademark of PenAndFree Co.,Ltd. All contents of this publication are subject to change.

2010. 7

PenAndFree Co.,Ltd



Information to user :

This equipment has been tested and found to comply with limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment can generate, use, and radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause unacceptable interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



INDEX

1. Verify Components before Installation	----	3
2. Station Installation	----	3
2.1 Connecting USB cable properly	----	4
2.2 Connection VGA cable properly	----	4
3. Digital Pen	----	5
3.1 Key features	----	5
3.2 Digital pen operation	----	6

1. Verify Components before Installation.

 Before hardware installation, firstly, please check if components listed below are included in the package. If you find missed one, please contact the store you purchased.

Item	Quantity	Remarks
1 Station	1	
2 Digital Pen	1	
3 Recharging battery Cable	1	1M
5 Software CD	1	Including Calibration & Board SW
6 Station Holer	3	


2. Station Installation.

2.1 Connecting USB Cables properly.


2.1.1 Connect Micro USB connector to Micro USB port of Station.

Connects USB cable to micro USB port of uBoard station and adhere station holder to whiteboard or flat surface.

- ① Attach Station holder to the backside of station. As magnet is included in the back side of station, it can be easily attached.
- ② Connect micro USB connector of USB cable to micro USB port of Station.
- ③ Take off masking tape of station holder.

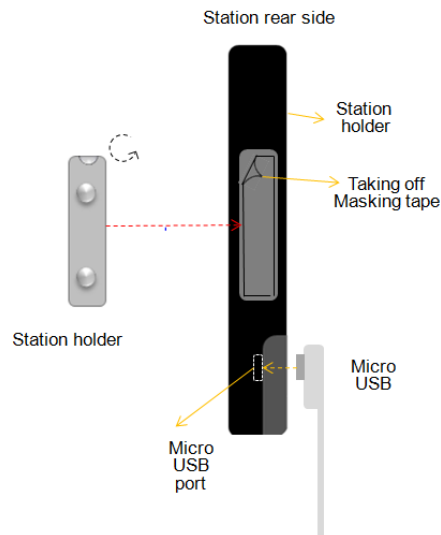


- ④ Place Station in the middle of whiteboard or working area and press Station to adhere station holder.
- ⑤ Make sure station position with screen without tilting vertically.

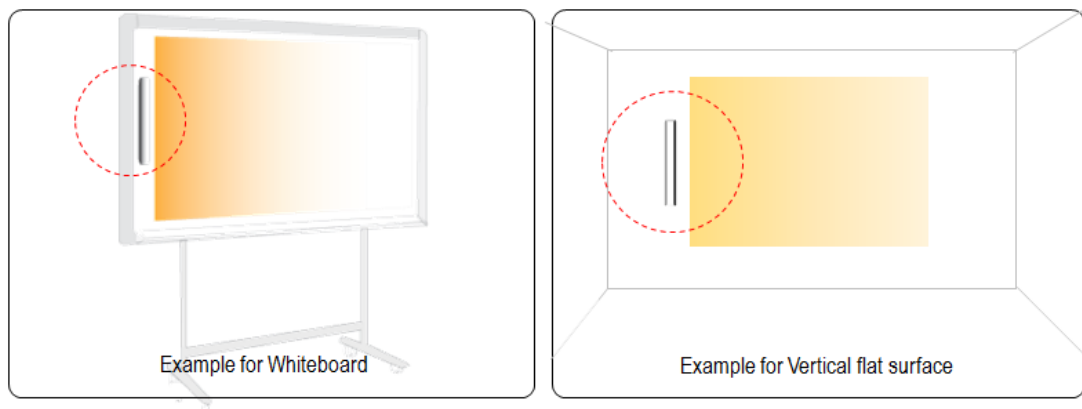

2.1.2 Connect USB connector to USB port of Computer.


Connect USB connector, the other end of USB cable, to the USB port on the computer. If cable length is not enough, please use USB extension cable.

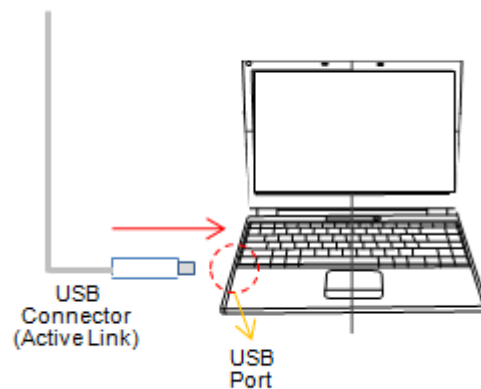

2.2 Connecting VGA cable properly.

After connecting USB cable between uBoard station and computer, connect VGA cable between Beam project and the computer. It is the last step for hardware installation. When this step is completed successfully, you are ready to use uBoard in hardware side.

However, in order to use uBoard, Software installation is additionally required. As for SW installation, Please refer to the software installation guide.

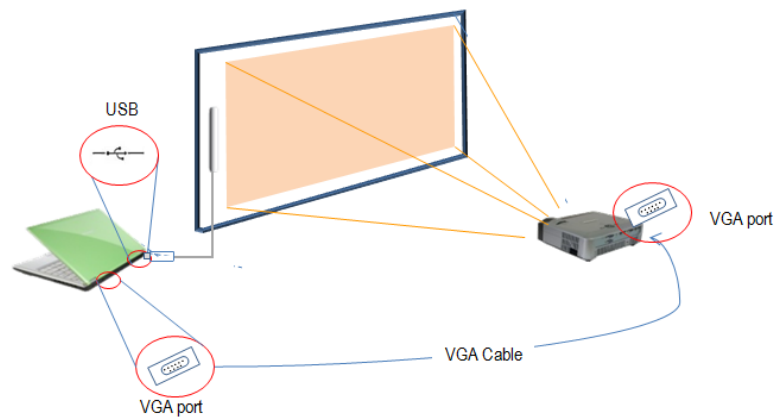

NOTICE:

Notice	
1	Avoid using this device in the environment that air is blown directly to receiver from air conditioner or heater.
2	Place Station in the middle of whiteboard or working area in the left side if possible, and make sure station position with screen without tilting vertically
3	Position station to keep 2 cm at the least away from left vertical line of projected screen
4	Recommend to use USB repeater in case that USB extension cable is exceeding 10m.

3. Digital pen

Digital pen for uBoard is ideally designed to support upto120 inches as effective working area. It adopted many key features to maximize user convenience.

3.1 Key features

3.1.1 Button functions

uBoard digital pen has 2 buttons executing different functions depending working environment.

- a. In MINT Interactive mode (Board software).
 - Low button (close to pen tip): executes the right button of mouse.
 - Upper button: switching eraser mode to writing mode or vice versa.
- b. In Window mode.
 - Low button: executes the right button of mouse.
 - Upper button: executes window Exit when to push it during a couple of seconds. (This function is only available during MINT control is active.)



3.2 Digital Pen operation

uBoard digital pen is using rechargeable battery to avoid environment contamination with maximizing user convenience.

- a. Recharging time & continuous operating time: It takes about 1 hour for full recharge and lasts 20 hours for continuous operating time.
- b. Automatic power save function: When the pen is idle for 10 seconds since last click, it will automatically enter sleep mode to save battery. Pen can be in active mode again by pressing any button or click pen tip.
- c. 2 level battery monitoring indicator: Let user know current battery status by turning on red LED light for low battery.


3.2.1 The way to recharge digital pen

In order to recharge digital pen safely, please use recharging cable enclosed in the package. Connect the recharging terminal of the cable to the recharging hole at the end of pen body and plug USB knob to computer.



3.2.2 How to check the pen status.

Press pen tip or pen button, then you can hear low beep sound generated by the pen when it works properly.

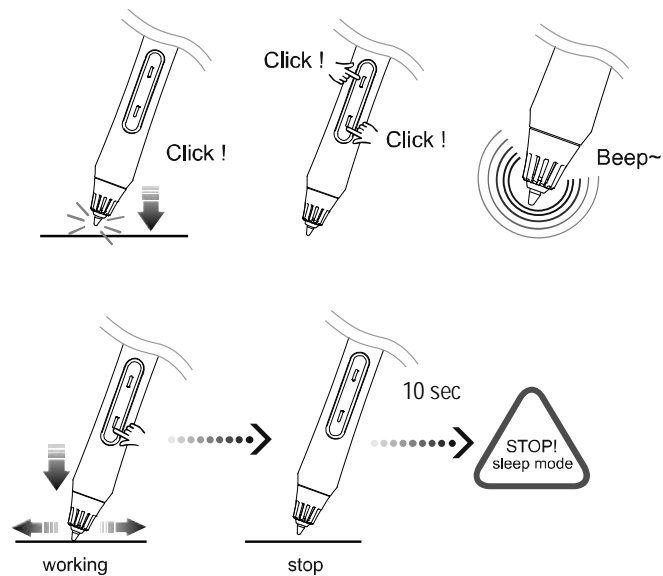

3.2.3 Pen tip change

When pen tip is worn-out, it can be replaced with new one.

[To remove] Turn pen-tip to right or left direction by 90 degrees and then pull it out carefully

[To insert] Insert pen-tip into pen cage and turn it to right or left direction by 90 degrees to lock it.



Notice: Possible to overheat, explode, fire or etc.

- Do not expose to heat(130°F), impact, chops or etc
- Careful of inhaled or bitten case by children or pets
- Prohibits to insert metals to charger connector or sink in water.