



> 2014 DODGE // USER GUIDE

DODGE 



## > IMPORTANT

This User Guide is intended to familiarize you with the important features of your vehicle. **The DVD enclosed contains your Owner's Manual, Navigation/Uconnect® Manuals, Warranty Booklets, Tire Warranty and Roadside Assistance (new vehicles purchased in the U.S.) or Roadside Assistance (new vehicles purchased in Canada) in electronic format.** We hope you find it useful. Replacement DVD kits may be purchased by visiting [www.techauthority.com](http://www.techauthority.com).  
Copyright 2016 FCA US LLC.

---

If you are the first registered retail owner of your vehicle, you may obtain a complimentary printed copy of the Owner's Manual, Navigation/Uconnect® Manuals or Warranty Booklet by calling 1-800-423-6343 (U.S.) or 1-800-387-1143 (Canada) or by contacting your dealer.

---

The driver's primary responsibility is the safe operation of the vehicle. Driving while distracted can result in loss of vehicle control, resulting in a collision and personal injury. FCA US LLC strongly recommends that the driver use extreme caution when using any device or feature that may take their attention off the road. Use of any electrical devices such as cell phones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous and could lead to a serious collision. Texting while driving is also dangerous and should never be done while the vehicle is moving. If you find yourself unable to devote your full attention to vehicle operation, pull off the road to a safe location and stop your vehicle. Some States or Provinces prohibit the use of cellular telephones or texting while driving. It is always the driver's responsibility to comply with all local laws.

# TABLE OF CONTENTS

## INTRODUCTION/WELCOME

WELCOME FROM FCA US LLC	2
-------------------------	---

## CONTROLS AT A GLANCE

DRIVER COCKPIT	6
INSTRUMENT CLUSTER	8

## GETTING STARTED

KEY FOB	10
REMOTE START	11
KEYLESS ENTER-N-GO™	11
VEHICLE SECURITY ALARM	14
SEAT BELT	15
SUPPLEMENTAL RESTRAINT SYSTEM (SRS) – AIR BAGS	16
CHILD RESTRAINTS	17
FRONT SEATS	21
REAR SEATS	24
POWER FOLDING THIRD ROW HEAD RESTRAINTS	26
HEATED/VENTILATED SEATS	26
HEATED STEERING WHEEL	28
TILT/TELESCOPING STEERING COLUMN	29

## OPERATING YOUR VEHICLE

ENGINE BREAK-IN RECOMMENDATIONS	30
HEADLIGHT SWITCH	30
TURN SIGNAL/WIPER/WASHER/HIGH BEAM LEVER	31
AUTOMATIC DIMMING MIRRORS	33
SPEED CONTROL	33
ADAPTIVE CRUISE CONTROL (ACC)	35
FORWARD COLLISION WARNING (FCW) WITH MITIGATION	37
ELECTRONIC SHIFTER	39
AUTOSTICK®	40
FUEL ECONOMY (ECO) MODE	41
AUTOMATIC CLIMATE CONTROLS WITH TOUCHSCREEN	42
PARKSENSE® REAR PARK ASSIST	44
PARKVIEW® REAR BACK-UP CAMERA	45
BLIND SPOT MONITORING	45
POWER SUNROOF	46
WIND BUFFETING	47

## ELECTRONICS

YOUR VEHICLE'S SOUND SYSTEM	48
IDENTIFYING YOUR RADIO	50
Uconnect® ACCESS	51
Uconnect® 5.0	65
Uconnect® 8.4A	72
Uconnect® 8.4AN	90
STEERING WHEEL AUDIO CONTROLS	109
ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)	109
PROGRAMMABLE FEATURES	110

UNIVERSAL GARAGE DOOR OPENER (HomeLink®)	112
POWER INVERTER	114
POWER OUTLET	115

## OFF-ROAD CAPABILITIES

ALL-WHEEL DRIVE OPERATION	117
---------------------------	-----

## UTILITY

ROOF LUGGAGE RACK	120
TRAILER TOWING WEIGHTS (MAXIMUM TRAILER WEIGHT RATINGS)	121
RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.)	122

## WHAT TO DO IN EMERGENCIES

ROADSIDE ASSISTANCE	127
INSTRUMENT CLUSTER WARNING LIGHTS	127
IF YOUR ENGINE OVERHEATS	132
JACKING AND TIRE CHANGING	134
BATTERY LOCATION	145
JUMP-STARTING	145
MANUAL PARK RELEASE 8-SPEED	147
TOWING A DISABLED VEHICLE	149
FREEDING A STUCK VEHICLE	150
EVENT DATA RECORDER (EDR)	151
CAP-LESS FUEL FILL FUNNEL	151

## MAINTAINING YOUR VEHICLE

OPENING THE HOOD	152
ADDING FUEL	153
ENGINE COMPARTMENT	155
FLUIDS AND CAPACITIES	157
MAINTENANCE SCHEDULE – GASOLINE ENGINE	159
MAINTENANCE RECORD	163
FUSES	164
TIRE PRESSURES	167
WHEEL AND WHEEL TRIM CARE	167
EXTERIOR BULBS	169

## CUSTOMER ASSISTANCE

FCA US LLC CUSTOMER CENTER	170
FCA CANADA INC. CUSTOMER CENTER	170
ASSISTANCE FOR THE HEARING IMPAIRED	170
PUBLICATIONS ORDERING	170
REPORTING SAFETY DEFECTS IN THE UNITED STATES	171

## MOPAR® ACCESSORIES

AUTHENTIC ACCESSORIES BY MOPAR®	172
---------------------------------	-----

## FREQUENTLY ASKED QUESTIONS

FREQUENTLY ASKED QUESTIONS	173
----------------------------	-----

## INDEX

INDEX	175
-------	-----

# INTRODUCTION/WELCOME

## WELCOME FROM FCA US LLC

Congratulations on selecting your new FCA US LLC vehicle. Be assured that it represents precision workmanship, distinctive styling, and high quality - all essentials that are traditional to our vehicles.

Your new FCA US LLC vehicle has characteristics to enhance the driver's control under some driving conditions. These are to assist the driver and are never a substitute for attentive driving. They can never take the driver's place. Always drive carefully.

Your new vehicle has many features for the comfort and convenience of you and your passengers. Some of these should not be used when driving because they take your eyes from the road or your attention from driving. Never text while driving or take your eyes more than momentarily off the road.

This guide illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. This guide may also include a description of features and equipment that are no longer available or were not ordered on this vehicle. Please disregard any features and equipment described in this guide that are not available on this vehicle. FCA US LLC reserves the right to make changes in design and specifications and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

This User Guide has been prepared to help you quickly become acquainted with the important features of your vehicle. It contains most things you will need to operate and maintain the vehicle, including emergency information.

The DVD includes a computer application containing detailed owner's information which can be viewed on a personal computer or MAC computer. The multimedia DVD also includes videos which can be played on any standard DVD player (including the Uconnect® Touchscreen Radios if equipped with DVD player capabilities). Additional DVD operational information is located on the back of the DVD sleeve.

**For complete owner information, refer to your Owner's Manual on the DVD in the owner's kit provided at the time of new vehicle purchase.** For your convenience, the information contained on the DVD may also be printed and saved for future reference.

FCA US LLC is committed to protecting our environment and natural resources. By converting from paper to electronic delivery for the majority of the user information for your vehicle, together we greatly reduce the demand for tree-based products and lessen the stress on our environment.

# INTRODUCTION/WELCOME

## VEHICLES SOLD IN CANADA

With respect to any vehicles sold in Canada, the name FCA US LLC shall be deemed to be deleted and the name FCA Canada Inc. used in substitution.

### **WARNING!**

- Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious personal injury.
- Always make sure that objects cannot fall into the driver foot well while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.
- Failure to properly follow floor mat installation or mounting can cause interference with the brake pedal and accelerator pedal operation causing loss of control of the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever/gear selector.
- Never use the 'PARK' position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- Refer to your Owner's Manual on the DVD for further details.

# INTRODUCTION/WELCOME

## Rollover Warning



### WARNING!

- Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious personal injury.
- Always make sure that objects cannot fall into the driver foot well while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.
- Failure to properly follow floor mat installation or mounting can cause interference with the brake pedal and accelerator pedal operation causing loss of control of the vehicle.
- Refer to your Owner's Manual on the DVD for further details.
- Never use the 'PARK' position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.

# INTRODUCTION/WELCOME

## **USE OF AFTERMARKET PRODUCTS (ELECTRONICS)**


The use of aftermarket devices including cell phones, MP3 players, GPS systems, or chargers may affect the performance of on-board wireless features including Keyless Enter-N-Go™ and Remote Start range. If you are experiencing difficulties with any of your wireless features, try disconnecting your aftermarket devices to see if the situation improves. If your symptoms persist, please see an authorized dealer.

CHRYSLER, DODGE, JEEP, RAM TRUCK, SRT, ATF+4, MOPAR and Uconnect are registered trademarks of FCA US LLC.

**COPYRIGHT ©2016 FCA US LLC**



# CONTROLS AT A GLANCE

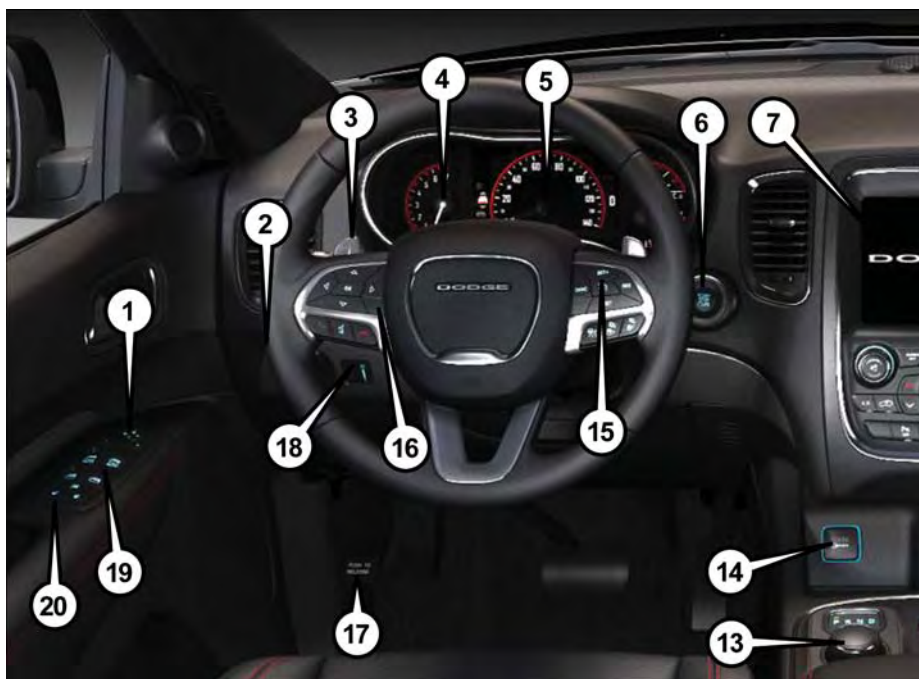


## DRIVER COCKPIT

1. Power Mirror Controls
2. Headlight Switch pg. 30
3. Paddle Shifter's (AutoStick®) pg. 40
4. Instrument Cluster pg. 8
5. Electronic Vehicle Information Center (EVIC) Display
6. Engine Start/Stop Button (Behind Steering Wheel) pg. 13
7. Audio System (Touchscreen Radio Shown) pg. 48
8. Passenger Power Window Controls
9. Glove Compartment
10. Audio System Control Knob pg. 65



# CONTROLS AT A GLANCE

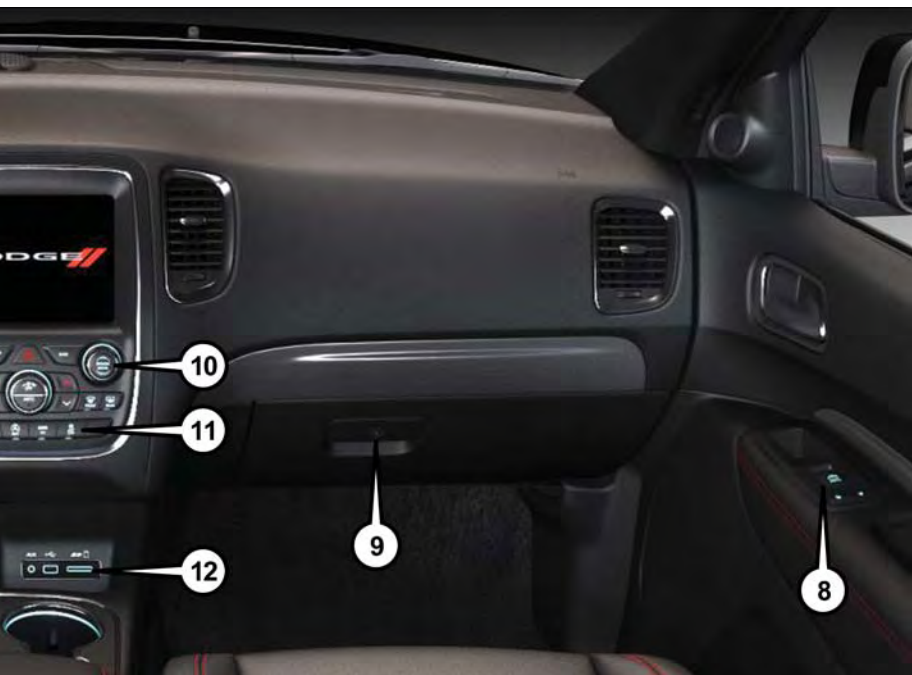

## 11. Switch Panel

- ParkSense® pg. 44
- ECO On pg. 41
- Electronic Stability Control (ESC) OFF pg. 150
- Forward Collision Warning (FCW) pg. 37

## 12. Media Hub

- Audio Jack (AUX)
- USB Port
- SD Port

## 13. Electronic Shifter pg. 39

## 14. Front Power Outlet pg. 115

## 15. Speed Control pg. 33

## 16. EVIC Controls pg. 109

## 17. Parking Brake Release

## 18. Instrument Panel Dimmer pg. 31

## 19. Power Windows

## 20. Power Door Locks

# CONTROLS AT A GLANCE















## INSTRUMENT CLUSTER

1. Tachometer

2. Speedometer

### Warning Lights

-  - Low Fuel Warning Light
-  - Charging System Light\*\*
-  - Oil Pressure Warning Light
-  - Engine Temperature Warning Light
-  - Transmission Temperature Warning Light
-  - Anti-Lock Brake (ABS) Light\*\*
-  - Air Bag Warning Light\*\*
-  - Electronic Throttle Control (ETC) Light

-  - Tire Pressure Monitoring System (TPMS) Light
-  - Seat Belt Reminder Light
- BRAKE** - Brake Warning Light\*\*
-  - Malfunction Indicator Light (MIL)\*\*
-  - Electronic Stability Control (ESC) Activation/Malfunction Indicator Light\*
- SERV AWD** - SERV (Service) AWD Indicator Light








(See page 127 for more information.)

# CONTROLS AT A GLANCE



## 3. Temperature Gauge








### Indicators

-  - Turn Signal Indicators
-  - High Beam Indicator
-  - Front Fog Light Indicator\*
-  - Vehicle Security Indicator\*
- TOW/HAUL** - TOW/HAUL Indicator\*
-  - Electronic Speed Control SET Indicator
-  - Loose Gas Cap Indicator
-  - Electronic Speed Control ON Indicator

\* If equipped

\*\* Bulb Check with Key On

## 4. Fuel Gauge

-  - Adaptive Cruise Control (ACC) ON Indicator\*
-  - Adaptive Cruise Control (ACC) SET Indicator\*
-  - Park/Headlight ON Indicator\*
-  - Electronic Stability Control (ESC) Off Indicator\*
-  - Windshield Washer Fluid Low Indicator
-  - Door Ajar Indicator
- FCW OFF** - Forward Collision Warning (FCW) OFF Indicator\*
-  - Liftgate Ajar Indicator

# GETTING STARTED

## KEY FOB

### Locking And Unlocking The Doors And Liftgate

#### Lock The Doors And Liftgate

- Press and release the LOCK button on the RKE transmitter to lock all doors and liftgate. The turn signal lights will flash and the horn will chirp to acknowledge the signal.

#### Unlock The Doors And Liftgate

- Press and release the UNLOCK button on the RKE transmitter once to unlock the driver's door, or twice within five seconds to unlock all doors and liftgate. The turn signal lights will flash to acknowledge the unlock signal. The illuminated entry system will also turn on.


All doors can be programmed to unlock on the first push of the UNLOCK button. Refer to "Programmable Features" in the "Electronics" section of this guide.



Key Fob

- |              |                  |
|--------------|------------------|
| 1 – Liftgate | 4 – Remote Start |
| 2 – Unlock   | 5 – Panic        |
| 3 – Lock     |                  |


## POWER LIFTGATE

- Press the LIFTGATE button  twice within five seconds to power open/close the Power Liftgate. If the button is pressed while the liftgate is being power closed, the liftgate will reverse to the full open position.
- Also, the Power Liftgate may be closed by pressing the liftgate switch located on the left rear trim panel, near the liftgate opening. Pressing once will close the liftgate only. This button cannot be used to open the liftgate.

## Panic Alarm

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.

## REMOTE START

- Press the REMOTE START button  on the Key Fob twice within five seconds. Pressing the REMOTE START button a third time shuts the engine off.
- To drive the vehicle, with a valid Keyless Enter-N-Go™ Key Fob within 5 ft (1.5m) of the driver's side of the vehicle, grab the front driver door handle to unlock the driver's door automatically, then press the Start/Stop switch. Or press the UNLOCK button, insert the Key Fob in the ignition and turn to the ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition is placed in the ON/RUN position.
- The vehicle must be started with the Key Fob after two consecutive timeouts.

### WARNING!

- Do not start or run an engine in a closed garage or confined area. Exhaust gas contains Carbon Monoxide (CO) which is odorless and colorless. Carbon Monoxide is poisonous and can cause you or others to be severely injured or killed when inhaled.
- Keep Key Fob transmitters away from children. Operation of the Remote Start System, windows, door locks or other controls could cause you and others to be severely injured or killed.

## KEYLESS ENTER-N-GO™

The Keyless Enter-N-Go™ system is an enhancement to the vehicle's Key Fob. This feature allows you to lock and unlock the vehicle's door(s) and liftgate without having to press the Key Fob lock or unlock buttons, as well as starting and stopping the vehicle with the press of a button.

### To Unlock From The Driver Or Passenger Side



- With a valid Keyless Enter-N-Go™ Key Fob located outside the vehicle and within 5 ft (1.5m) of the driver or passenger side door handle, grab either front door handle to unlock the door automatically.



# GETTING STARTED

## To Lock The Vehicle

- Both front door handles have LOCK buttons located on the outside of the handle. With one of the vehicle's Keyless Enter-N-Go™ Key Fobs located outside the vehicle and within 5 ft (1.5m) of the driver's or passenger front door handle, press the door handle LOCK button to lock all four doors and liftgate.
- DO NOT grab the door handle, when pressing the door handle lock button. This could unlock the door(s).

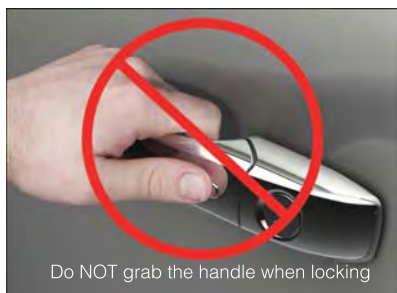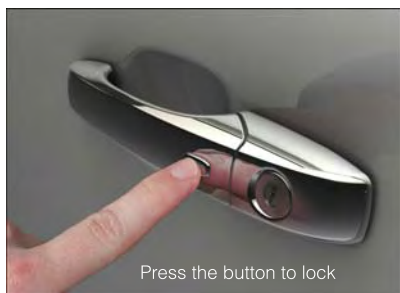

### NOTE:

- If "Unlock All Doors 1st Press" is programmed all doors will unlock when you grab hold of the front driver's door handle. To select between "Unlock Driver Door 1st Press" and "Unlock All Doors 1st Press", refer to the "Customer Programmable Features" in your vehicle's Owner's Manual on the DVD.
- If "Unlock All Doors 1st Press" is programmed all doors and liftgate will unlock when you press the liftgate button. If "Unlock Driver Door 1st Press" is programmed only the liftgate will unlock when you press the liftgate button. To select between "Unlock Driver Door 1st Press" and "Unlock All Doors 1st Press", refer to the "Customer Programmable Features" in your vehicle's Owner's Manual on the DVD.
- If a Key Fob is detected in the vehicle when locking the vehicle using the power door lock switch, the doors and liftgate will unlock and the horn will chirp three times. On the third attempt, your Key Fob can be locked inside the vehicle.
- After pressing the Keyless Enter-N-Go™ LOCK button, you must wait two seconds before you can lock or unlock the vehicle using the door handle. This is done to allow you to check if the vehicle is locked by pulling the door handle, without the vehicle reacting and unlocking.
- If a Keyless Enter-N-Go™ door handle has not been used for 72 hours, the Keyless Enter-N-Go™ feature for that handle may time out. Pulling the deactivated front door handle will reactivate the door handle's Keyless Enter-N-Go™ feature.

## Lock Or Unlock The Liftgate

- To Lock The Liftgate – With a Remote Keyless Entry (RKE) transmitter within 3 ft (1.0 m) of the liftgate, press the passive entry lock button located to the right of the electronic liftgate handle.
- To Unlock/Enter The Liftgate – The liftgate passive entry unlock feature is built into the electronic liftgate handle. With a Remote Keyless Entry (RKE) transmitter within 3 ft (1.0 m) of the liftgate, press the electronic release switch to open the liftgate.

### NOTE:

Refer to your Owner's Manual on the DVD for further information.



**Electronic Liftgate Handle**

- 1 – Electronic Release Switch  
2 – Lock Button Location

## Engine Starting/Stopping

### Starting

Perform the following starting procedure with a Remote Keyless Entry (RKE) transmitter inside the vehicle:

1. Rotate the shifter control to PARK.
2. While pressing the brake pedal, press the ENGINE START/STOP button once. If the engine fails to start, the starter will disengage automatically after 10 seconds.
3. To stop the cranking of the engine prior to the engine starting, press the button again.



### Stopping

1. Bring the vehicle to a complete stop.
2. Rotate the shifter control to PARK (P).
3. Press the ENGINE START/STOP button once. The ignition switch will return to the OFF position.

# GETTING STARTED

## NOTE:

If the transmission is not in PARK and the vehicle is in motion, the ENGINE START/STOP button must be held for two seconds with the vehicle speed above 5 mph (8 km/h) before the engine will shut off.

## Accessory Positions With Engine Off

### NOTE:


The following functions are with the driver's foot OFF the Brake Pedal (transmission in PARK or NEUTRAL).

### Beginning With The Ignition Switch In The OFF Position:

- Push the ENGINE START/STOP button once to cycle the ignition to the ACC position.
- Push the ENGINE START/STOP button a second time to cycle the ignition to the ON/RUN position.
- Push the ENGINE START/STOP button a third time to return the ignition to the OFF position.

### NOTE:

If the ignition is left in the ACC or ON/RUN (engine not running) position and the transmission is in PARK, the system will automatically time out after 30 minutes of inactivity and the ignition is returned to the OFF position.

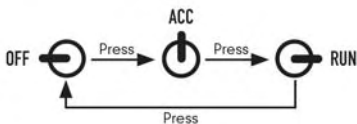

Accessory Positions

## VEHICLE SECURITY ALARM

This Vehicle Security Alarm monitors the doors, liftgate, and ignition switch for unauthorized operation.

When the alarm is activated, the interior switches for door locks are disabled. The Vehicle Security Alarm provides both audio and visual signals repeatedly for three minutes. If the disturbance is still present (driver's door, passenger door, other doors, ignition) after three minutes, the parking lights and tail lights will flash for an additional 15 minutes.

### To Arm

Cycle the Keyless Enter-N-Go™ START/STOP button until the button display indicates that the vehicle ignition is "OFF". Push the power door lock switch while the door is open, push the Key Fob LOCK button, or with one of the Key Fobs located outside the vehicle and within 5 ft (1.5 m) of the driver's and passenger front door handles, push the Keyless Enter-N-Go™ LOCK button located on the door handle.



**NOTE:**

After pushing the Keyless Enter-N-Go™ LOCK button, you must wait two seconds before you can lock or unlock the vehicle via the door handle.

**To Disarm**

Push the Key Fob UNLOCK button or with one of the Key Fobs located outside the vehicle and within 5 ft (1.5 m) of the driver's and passenger front door handles, grab the Keyless Enter-N-Go™ door handle and enter the vehicle, then push the Keyless Enter-N-Go™ START/STOP button (requires at least one valid Key Fob in the vehicle).

**SEAT BELT**

Be sure everyone in your vehicle is in a seat and using a seat belt properly.

- Position the lap belt across your thighs, below your abdomen. To remove slack in the lap portion, pull up a bit on the shoulder belt. To loosen the lap belt if it is too tight, tilt the latch plate and pull on the lap belt. A snug belt reduces the risk of sliding under the belt in a collision.
- Position the shoulder belt on your chest so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the belt.

A shoulder belt placed behind you will not protect you from injury during a collision. You are more likely to hit your head in a collision if you do not wear your shoulder belt. The lap and shoulder belt are meant to be used together.

A belt that is too loose will not protect you properly. In a sudden stop you could move too far forward, increasing the possibility of injury. Wear your seat belt snugly.

A frayed or torn belt could rip apart in a collision and leave you with no protection. Inspect the belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system. Seat belt assemblies must be replaced after a collision if they have been damaged (bent retractor, torn webbing, etc.).

The seat belts for both front seating positions are equipped with pretensioning devices that are designed to remove slack from the seat belt in the event of a collision.

A deployed pretensioner or a deployed air bag must be replaced immediately.

**WARNING!**

In a collision, you and your passengers can suffer much greater injuries if you are not buckled up properly. You can strike the interior of your vehicle or other passengers, or you can be thrown out of the vehicle. Always be sure you and others in your vehicle are buckled up properly.

# GETTING STARTED

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS) – AIR BAGS


This vehicle has Advanced Front Air Bags for both the driver and front passenger as a supplement to the seat belt restraint systems. The driver's Advanced Front Air Bag is mounted in the center of the steering wheel. The passenger's Advanced Front Air Bag is mounted in the instrument panel, above the glove compartment. The words SRS AIR BAG are embossed on the air bag covers.

Advanced Front Air Bags are designed to provide additional protection by supplementing the seat belts in certain frontal collisions depending on several factors, including the severity and type of collision. Advanced Front Air Bags are not expected to reduce the risk of injury in rear, side, or rollover collisions.

This vehicle is equipped with Supplemental Side Air Bag Inflatable Curtains to protect the driver, front and rear passengers sitting next to a window.

This vehicle is equipped with Supplemental Seat-Mounted Side Air Bags to provide enhanced protection to help protect an occupant during a side impact.

This vehicle is equipped with Supplemental Driver's Side Knee Air Bag mounted in the instrument panel below the steering column and a Knee Bolster mounted below the glove compartment. The Supplemental Driver's Side Knee Air Bag provides enhanced protection and works together with the Driver Advanced Front Air Bag during a frontal impact.

If the Air Bag Warning Light  is not on during starting, stays on, or turns on while driving, have the vehicle serviced by an authorized service center immediately.

Refer to the Owner's Manual on the DVD for further details regarding the Supplemental Restraint System (SRS).

### WARNING!

- Relying on the air bags alone could lead to more severe injuries in a collision. The air bags work with your seat belt to restrain you properly. In some collisions, the air bags won't deploy at all. Always wear your seat belts even though you have air bags.
- Being too close to the steering wheel or instrument panel during Advanced Front Air Bag deployment could cause serious injury, including death. Air bags need room to inflate. Sit back, comfortably extending your arms to reach the steering wheel or instrument panel.
- Supplemental Side Air Bag Inflatable Curtains and Supplemental Seat-Mounted Side Air Bags need room to inflate. Do not lean against the door or window. Sit upright in the center of the seat.
- Being too close to the Supplemental Side Air Bag Inflatable Curtain and/or Seat-Mounted Side Air Bag during deployment could cause you to be severely injured or killed.
- Do not drive your vehicle after the air bags have deployed. If you are involved in another collision, the air bags will not be in place to protect you.
- After any collision, the vehicle should be taken to an authorized dealer immediately.

## CHILD RESTRAINTS

Children 12 years or younger should ride properly buckled up in a rear seat, if available. According to crash statistics, children are safer when properly restrained in the rear seats rather than in the front.

Every state in the United States and all Canadian provinces require that small children ride in proper restraint systems. This is the law, and you can be prosecuted for ignoring it.


### NOTE:

- For additional information, refer to [www.seatcheck.org](http://www.seatcheck.org) or call 1-866-SEATCHECK (1-866-732-8243).
- Canadian residents, should refer to Transport Canada's website for additional information: <http://www.tc.gc.ca/eng/roadsafety/safedrivers-childsafety-index-53.htm>

## LATCH – Lower Anchors And Tethers For Children


- Your vehicle is equipped with the child restraint anchorage system called LATCH, which stands for Lower Anchors and Tethers for CHildren.
- The second row seating positions have lower anchors and top tether anchors. The second row center (60/40 bench seat only) and third row seating positions have a top tether anchor only.
- You may use the LATCH anchorage system until the combined weight of the child and the child restraint is 65 lbs (29.5 kg). Use the seat belt and tether anchor instead of the LATCH system once the combined weight is more than 65 lbs (29.5 kg).





-  The lower anchorages are round bars that are found at the rear of the seat cushion where it meets the seatback. They are just visible when you lean into the rear seat to install the child restraint. You will easily feel them if you run your finger along the gap between the seatback and seat cushion.



# GETTING STARTED

-  There are tether strap anchorages behind each rear seating position located on the back of the seat. To access them, pull the carpeted floor panel away from the seat back, this will expose the top tether strap anchorages. **DO NOT USE the cargo tie down loops located on the load floor as tether anchorages.**

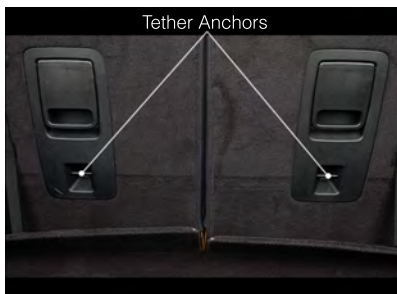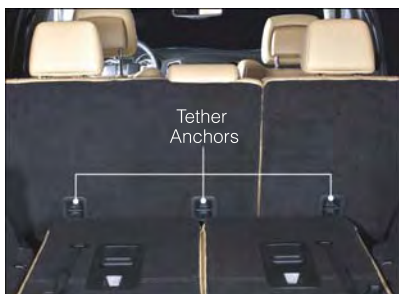

## WARNING!

Do not install a child restraint in the center position using the LATCH system. This position is not approved for installing child seats using the LATCH attachments. You must use the seat belt and tether anchor to install a child seat in the center seating position.

## Vehicles With Center Arm Rest Tether

- For rearward facing infant seats secured in the center seat position with the vehicle seat belts, the rear center seat position has an armrest tether that secures the arm rest in the upward position.
1. To access the center seat arm rest tether, first lower the arm rest. The tether is located behind the armrest and hooked onto the plastic seat backing.
  2. Pull down on the tether to unhook it from the plastic seat backing.
  3. Raise the armrest and attach the tether hook to the strap located on the front of the arm rest.

## Installing The Child Restraint Using The LATCH Lower Anchors

### NOTE:

**Never** "share" a LATCH anchorage with two or more child restraints.

1. Loosen the adjusters on the lower straps and on the tether strap of the child seat so that you can more easily attach the hooks or connectors to the vehicle anchorages.
2. Attach the lower hooks or connectors of the child restraint to the lower anchorages in the selected seating position.
3. If the child restraint has a tether strap, connect it to the top tether anchorage. See below for directions to attach a tether anchor.

4. Tighten all of the straps as you push the child restraint rearward and downward into the seat. Remove slack in the straps according to the child restraint manufacturer's instructions.
5. Test that the child restraint is installed tightly by pulling back and forth on the child seat at the belt path. It should not move more than 1 inch (25.4 mm) in any direction.

## **Installing The Child Restraint Using The Vehicle Seat Belts**

The seat belt in the passenger seating position are equipped with a Switchable Automatic Locking Retractor (ALR) that is designed to keep the lap portion of the seat belt tight around the child restraint. Any seat belt system will loosen with time, so check the belt occasionally, and pull it tight if necessary.

Always use the tether anchor when using the seat belt to install a forward facing child restraint, up to the recommended weight limit of the child restraint.

### **To Install A Child Seat Using An ALR:**

1. Pull enough of the seat belt webbing from the retractor to pass it through the belt path of the child restraint. Do not twist the belt webbing in the belt path.
2. Slide the latch plate into the buckle until you hear a "click."
3. Pull on the webbing to make the lap portion tight against the child seat.
4. To lock the seat belt, pull down on the shoulder part of the belt until you have pulled all the seat belt webbing out of the retractor. Then, allow the webbing to retract back into the retractor. As the webbing retracts, you will hear a clicking sound. This means the seat belt is now in the Automatic Locking mode.
5. Try to pull the webbing out of the retractor. If it is locked, you should not be able to pull out any webbing. If the retractor is not locked, repeat the last step.
6. Finally, pull up on any extra webbing to tighten the lap portion around the child restraint while you push the child restraint rearward and downward into the vehicle seat.
7. If the child restraint has a top tether strap and the seating position has a top tether anchorage, connect the tether strap to the anchorage and tighten the tether strap. See below for directions to attach a tether anchor.
8. Test that the child restraint is installed tightly by pulling back and forth on the child seat at the belt path. It should not move more than 1 inch (25.4 mm) in any direction.

### **Installing The Top Tether Strap (With Either Lower Anchors Or Vehicle Seat Belt):**

When installing a forward-facing child restraint, always secure the top tether strap, up to the tether anchor weight limit, whether the child restraint is installed with the lower anchors or the vehicle seat belt.

1. To access the top tether strap anchorages behind the rear seat, pull the carpeted floor panel away from the seat back, this will expose the top tether strap anchorages.

# GETTING STARTED

2. Route the tether strap to provide the most direct path for the strap between the anchor and the child seat.
3. If your vehicle is equipped with adjustable rear head restraints, raise the head restraint, and where possible, route the tether strap under the head restraint and between the two posts. If not possible, lower the head restraint and pass the tether strap around the outboard side of the head restraint.
4. For the center seating position, route the tether strap over the seatback and headrest.
5. Attach the tether strap hook of the child restraint to the top tether anchorage and remove slack in the tether strap according to the child restraint manufacturer's instructions.

## WARNING!

DO NOT USE the cargo tie down loops located on the load floor as tether anchorages.

## WARNING!


- In a collision, an unrestrained child, even a tiny baby, can become a projectile inside the vehicle. The force required to hold even an infant on your lap could become so great that you could not hold the child, no matter how strong you are. The child and others could be severely injured or killed. Any child riding in your vehicle should be in a proper restraint for the child's size.
- Rearward-facing child seats must never be used in the front seat of a vehicle with a front passenger air bag. An air bag deployment could cause severe injury or death to infants in this position.
- Only use a rearward-facing child restraint in a vehicle with a rear seat.
- Improper installation of a child restraint to the LATCH anchorages can lead to failure of an infant or child restraint. The child could be severely injured or killed. Follow the manufacturer's directions exactly when installing an infant or child restraint.
- An incorrectly anchored tether strap could lead to increased head motion and possible injury to the child. Use only the anchor positions directly behind the child seat to secure a child restraint top tether strap.
- If your vehicle is equipped with a split rear seat, make sure the tether strap does not slip into the opening between the seatbacks as you remove slack in the strap.

## FRONT SEATS

### Power Seats

The power recline switch, located on the outboard side of the seat, controls seatback adjustment.

The power seat switch controls forward/back, up/down and tilt adjustment.

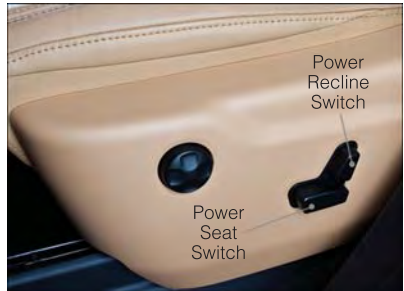

### Power Lumbar

- Push the switch forward to increase the lumbar support. Push the switch rearward to decrease the lumbar support.
- Pushing upward or downward on the switch will raise and lower the position of the support.



### Memory Seat

The memory seat feature allows you to set two different driver seating positions (excluding lumbar position), outside mirrors, radio station preset settings and tilt/telescoping steering column position (if equipped). The memory seat buttons are located on the driver's door panel.


# GETTING STARTED

## To set a memory position:

1. Cycle the vehicles ignition to the ON position.
2. Adjust all memory profile settings.
3. Press and release the S (SET) button.
4. Press and release the 1 or 2 button within five seconds.

## NOTE:

Before programming your RKE transmitters you must select the "Personal Settings Linked To Key Fob" feature through the Uconnect® system. Refer to "Uconnect® Settings" in "Understanding Your Instrument Panel" in the Owner's Manual on the DVD for further details.

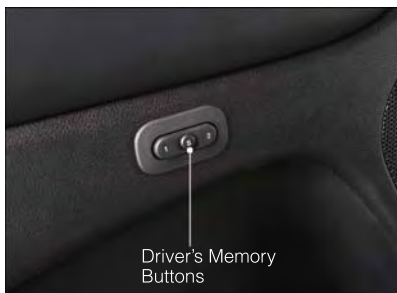

## To program a Key Fob to the memory position:

1. Cycle the vehicles ignition to the OFF position.
  2. Select the desired memory profile 1 or 2.
  3. Press and release the S (SET) button on the memory switch, then within five seconds press and release the 1 or 2 button accordingly.
  4. Press and release the LOCK button on the RKE transmitter within 10 seconds.
- To recall the saved positions, press 1 or 2 on the memory switch or press UNLOCK on the programmed RKE transmitter.

## Easy Entry/Exit Feature

The memory seat has an Easy Entry/Exit feature. This feature provides automatic driver seat positioning to enhance driver mobility when entering and exiting the vehicle.

## NOTE:

The Easy Entry/Exit feature is not enabled when the vehicle is delivered from the factory. To enable (or later disable) this feature you must select "Easy Exit Seats" in "Engine Off Options" through the programmable features in the Uconnect® system.


- Refer to "Uconnect® Customer Programmable Features" in "Electronics" of this User Guide.
- For further details refer to "Uconnect® Settings" in "Understanding Your Instrument Panel" in the Owner's Manual on the DVD.



## Manual Seat Adjustment

### Forward/Rearward

- Lift up on the adjusting bar located at the front of the seat near the floor and release it when the seat is at the desired position. Then, using body pressure, move forward and backward on the seat to be sure that the seat adjusters have latched.

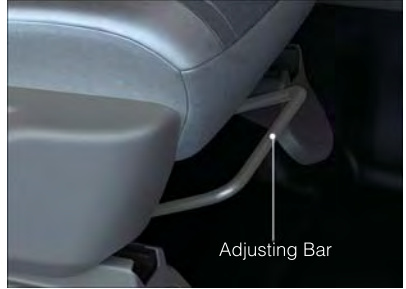

### Recliner

- Lift the rear lever located on the outboard side of the seat, lean back and release when seat is in desired position.



### Fold-Flat Front Passenger Seat

The front passenger seat can be folded flat to allow for extended cargo space.

- Pull up on the recliner lever and fold the seatback forward and down to a flat position.



# GETTING STARTED

## CAUTION!

Do not place any article under a power seat or impede its ability to move as it may cause damage to the seat controls. Seat travel may become limited if movement is stopped by an obstruction in the seat's path.

## WARNING!

- Adjusting a seat while the vehicle is moving is dangerous. The sudden movement of the seat could cause you to lose control. The seat belt might not be properly adjusted, and you could be severely injured or killed. Only adjust a seat while the vehicle is parked.
- Do not ride with the seatback reclined so that the seat belt is no longer resting against your chest. In a collision, you could slide under the seat belt and be severely injured or killed. Use the recliner only when the vehicle is parked.

## REAR SEATS

### 60/40 Split Rear Seat

The left or right side of the second row seatback can be folded flat to carry cargo. The left and right side of the second row seat can also be tumbled forward to allow access to the third row seat.

#### Fold And Tumble

- Pull upward on the release lever to release the seat.



#### NOTE:

Also, pulling upward on this handle allows the outboard seating positions to be reclined.

- Tumble the seat forward using the red pull strap located behind the seatback.

#### NOTE:

If sitting in the third row seat, pull rearward on the tumble pull strap located at the rear of the seat and tumble the seat forward.

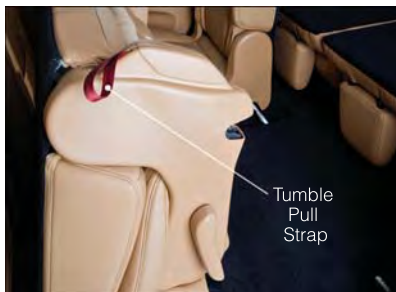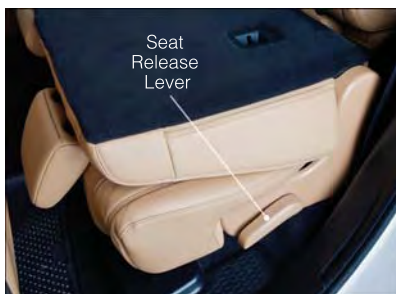

## Rear Captain Chairs

### Fold And Tumble

The left or right side of the second row seat-back can be folded flat to carry cargo. When the lower storage compartment is accessed using the rear push button it allows the armrest to flip forward for "fold flat mode". Fold flat mode allows the console armrest to be lowered below fold flat seat plane and protect the armrest vinyl from damage when using the vehicle to haul cargo.



The left and right side of the second row seat can also be tumbled forward to allow access to the third row seat. Pull upward on the release lever to release the seat. Pulling upward on this handle allows the outboard seating positions to be reclined.

- Tumble the seat forward using the red pull strap located behind the seatback.

### NOTE:

If sitting in the third row seat, pull rearward on the tumble pull strap located at the rear of the seat and tumble the seat forward.

If your vehicle is equipped with a mini console there is a stepping pad to allow passengers to easily access the third row seats.



## 50/50 Third Row Folding Seat

Either or both third row seats can be folded forward to increase the rear cargo storage area.

After opening the liftgate, either seat can be folded flat by pulling up the release handle on the back of the seat.

A seat that is folded flat can be returned to the upright position by using the pull strap located on the back of the seat next to the release handle.

# GETTING STARTED

## NOTE:

The second row seats must be in their full upright position, or tumbled when folding the third row seats.

- To raise the seat, pull the seat toward you using the strap located on the back of the seat.


## WARNING!

Do not drive the vehicle with the second row seats in the tumbled position. The second row seats are only intended to be tumbled for entry and exit to the third row seat. Failure to follow these instructions could result in personal injury.

## POWER FOLDING THIRD ROW HEAD RESTRAINTS

For improved visibility when in reverse, the third row head restraints can be power folded.

The power fold third row head restraints control is located in the touchscreen.

- Press the headrest fold button  on the touch screen to power fold the third row head restraints.




## NOTE:

The head restraints can only be folded downward using the headrest fold button. The head restraints must be raised manually when occupying the third row.

## HEATED/VENTILATED SEATS

### Front Heated Seats

The front heated seats control buttons are located within the climate or controls screen of the touchscreen.

- Press the heated seat button  once to turn the High setting On.
- Press the heated seat button  a second time to turn the Low setting On.
- Press the heated seat button  a third time to turn the heating elements Off.

If the High-level setting is selected, the system will automatically switch to Low-level after approximately 60 minutes. The Low-level setting will turn Off automatically after approximately 45 minutes.

## NOTE:

### Vehicle Equipped With Remote Start

On models that are equipped with remote start, this feature can be programmed to come on during a remote start through the Uconnect® system. Refer to “Uconnect® Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD.




## Front Ventilated Seats

Located in the seat cushion and seatback are small fans that draw the air from the passenger compartment and pull air through fine perforations in the seat cover to help keep the driver and front passenger cooler in higher ambient temperatures.

There are two ventilated seat control buttons located in the touchscreen that allow the driver and passenger to operate the seats independently.

The ventilated seat buttons are used to control the speed of the fans located in the seat.

To operate the system, press the “Controls” button on touchscreen located on the bottom of the Uconnect<sup>®</sup> display.

- Press the ventilated seat button  once to choose HIGH.
- Press the ventilated seat button  a second time to choose LOW.
- Press the ventilated seat button  a third time to turn the ventilated seat OFF.

### NOTE:

#### Vehicle Equipped With Remote Start

On models that are equipped with remote start, this feature can be programmed to come on during a remote start through the Uconnect<sup>®</sup> system. Refer to “Uconnect<sup>®</sup> Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD.

## Rear Heated Seats

Second row heated seat switches are located on the rear of the center console:

- Press the switch once to select High-level heating.
- Press the switch a second time to select Low-level heating.
- Press the switch a third time to shut the heating elements Off.
- If the High-level setting is selected, the system will automatically switch to Low-level after approximately 60 minutes. The Low-level setting will turn Off automatically after approximately 45 minutes.



1 – Heated Seat Switches

# GETTING STARTED



## WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical conditions must exercise care when using the seat heater. It may cause burns even at low temperatures, especially if used for long periods of time.
- Do not place anything on the seat that insulates against heat, such as a blanket or cushion. This may cause the seat heater to overheat. Sitting in a seat that has been overheated could cause serious burns due to the increased surface temperature of the seat.

## HEATED STEERING WHEEL

The steering wheel contains a heating element that heats the steering wheel to one temperature setting.

The heated steering wheel control button is located within the climate or controls screen of the touchscreen.

- Press the heated steering wheel button  once to turn the heating element On.
- Press the heated steering wheel button  a second time to turn the heating element Off.

Once the heated steering wheel has been turned on, it will operate for up to 80 minutes before automatically shutting off. The heated steering wheel can shut off early or may not turn on when the steering wheel is already warm.

### NOTE:

#### Vehicle Equipped With Remote Start

On models that are equipped with remote start, this feature can be programmed to come on during a remote start through the Uconnect® system. Refer to “Uconnect® Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD.

## WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion, or other physical conditions must exercise care when using the steering wheel heater. It may cause burns even at low temperatures, especially if used for long periods.
- Do not place anything on the steering wheel that insulates against heat, such as a blanket or steering wheel covers of any type and material. This may cause the steering wheel heater to overheat.

## TILT/TELESCOPING STEERING COLUMN

### Manual Tilt/Telescoping Steering Column

The tilt/telescoping control handle is located below the steering wheel at the end of the steering column.

- Push the handle down to unlock the steering column.
- To tilt the steering column, move the steering wheel upward or downward as desired.
- To lengthen or shorten the steering column, pull the steering wheel outward or push it inward as desired.
- Pull up on the handle to lock the column firmly in place.



### Power Tilt/Telescoping Steering Column

- The power tilt/telescoping steering control is located below the turn signal/wiper/washer/high beam lever on the steering column.
- To tilt the steering column, move the power tilt/telescoping control up or down as desired.
- To lengthen or shorten the steering column, pull the control toward you or push the control away from you as desired.



### WARNING!

- Do not adjust the steering wheel while driving. The tilt/telescoping adjustment must be locked while driving. Adjusting the steering wheel while driving or driving without the tilt/telescoping adjustment locked could cause the driver to lose control of the vehicle. Failure to follow this warning may result in you and others being severely injured or killed.
- Moving the steering column while the vehicle is moving is dangerous. Without a stable steering column, you could lose control of the vehicle and have a collision. Adjust the column only while the vehicle is stopped.

# OPERATING YOUR VEHICLE

## ENGINE BREAK-IN RECOMMENDATIONS

A long break-in period is not required for the engine and drivetrain (transmission and axle) in your vehicle.

Drive moderately during the first 300 miles (500 km). After the initial 60 miles (100 km), speeds up to 50 or 55 mph (80 or 90 km/h) are desirable.

While cruising, brief full-throttle acceleration within the limits of local traffic laws contributes to a good break-in. Wide-open throttle acceleration in low gear can be detrimental and should be avoided.

The engine oil installed in the engine at the factory is a high-quality energy conserving type lubricant. Oil changes should be consistent with anticipated climate conditions under which vehicle operations will occur. For the recommended viscosity and quality grades, refer to "Maintaining Your Vehicle."

### NOTE:



A new engine may consume some oil during its first few thousand miles (kilometers) of operation. This should be considered a normal part of the break-in and not interpreted as an indication of an engine problem or malfunction.

### CAUTION!

Never use Non-Detergent Oil or Straight Mineral Oil in the engine or damage may result.

## HEADLIGHT SWITCH

### Automatic Headlights/Parking Lights/Headlights

- Rotate the headlight switch, located on the instrument panel to the left of the steering wheel, to the first detent for parking lights  and to the second detent for headlights .
- With the parking lights or low beam headlights on, push the headlight switch once for fog lights.
- Rotate the headlight switch to "AUTO" for AUTO headlights.
- When set to AUTO, the system automatically turns the headlights on or off based on ambient light levels.





# OPERATING YOUR VEHICLE


## Automatic High Beams

The Automatic High Beams system provides increased forward lighting at night by automating high beam control through the use of a digital camera mounted on the inside rearview mirror. This camera detects vehicle specific light and automatically switches from high beams to low beams until the approaching vehicle is out of view. This feature is programmable through the Uconnect® system. Refer to “Uconnect® Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD for further details.

## Instrument Panel Dimmer

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the dimmer control up to increase the brightness of the instrument panel when the parking lights or headlights are on.
- Rotate the dimmer control up to the next detent position to fully brighten the odometer and radio when the parking lights or headlights are on.
- Rotate the dimmer control up to the last detent position to turn on the interior lighting.
- If your vehicle is equipped with a touchscreen, the dimming is programmable through the Uconnect® system. Refer to “Uconnect® Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD for further details.

## TURN SIGNAL/WIPER/WASHER/HIGH BEAM LEVER

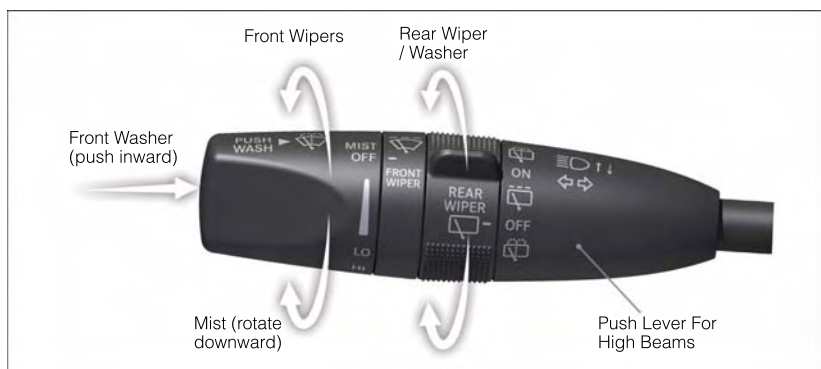

## Turn Signal/Lane Change Assist

- Tap the lever up or down once and the turn signal (right or left) will flash three times and automatically turn off.

# OPERATING YOUR VEHICLE

## Front Wipers

### Intermittent, Low And High Operation

- Rotate the end of the lever to one of the first four detent positions for intermittent settings, the fifth detent for low wiper operation and the sixth detent for high wiper operation.

### Washer Operation

- Push inward on the end of the lever and hold for as long as spray is desired.

### Mist

- Rotate the end of the lever downward when a single wipe is desired.

### NOTE:

The mist feature does not activate the washer pump; therefore, no washer fluid will be sprayed on the windshield. The wash function must be activated in order to spray the windshield with washer fluid.

### Rain Sensing Wipers

- This feature senses moisture on the vehicle's windshield and automatically activates the wipers for the driver when the switch is in the intermittent position. Rotate the end of the lever to one of four settings to activate this feature and adjust sensitivity.
- The Rain Sensing feature can be turned on and off using the Uconnect® System. Refer to the "Programmable Features" in the "Electronics" section in this guide.
- Refer to the Owner's Manual on the DVD for further details.

## Rear Wiper

### Rear Wiper Operation

- Rotate the center portion of the lever forward to the first detent for intermittent operation and to the second detent for rear wiper operation.

### Rear Washer Operation

- Rotate the center portion of the lever past the second detent to activate the rear washer.

## High Beam Operation

- Push the lever forward to activate the high beams. Pull the lever toward you for flash to pass.

### NOTE:

For safe driving, turn off high beams when oncoming traffic is present to prevent headlight glare and as a courtesy to other motorists.

# OPERATING YOUR VEHICLE


## AUTOMATIC DIMMING MIRRORS

- The rearview and driver side exterior mirror automatically adjusts for headlight glare from vehicles behind you.
- You can turn the feature on or off when the Automatic Dimming Mirror feature is selected through the programmable features in the Uconnect® system. Refer to “Uconnect® Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD for further details.


## SPEED CONTROL

The Speed Control switches are located on the right side of the steering wheel.

### Cruise ON/OFF

- Push the ON/OFF button  to activate the Speed Control.

CRUISE CONTROL READY will appear on the instrument cluster to indicate the Speed Control is on.

- Push the ON/OFF button  a second time to turn the system off.

CRUISE CONTROL OFF will appear on the instrument cluster to indicate the Speed Control is off.

### SET

- With the Speed Control on, push and release the SET+ or SET- button to set a desired speed.

Once a speed has been set a message

CRUISE CONTROL SET TO MPH/KM will appear indicating what speed was set. An indicator CRUISE will also appear and stay on in the instrument cluster when the speed is set.

### Accel/Decel

#### To Increase Speed

- When the Electronic Speed Control is set, you can increase speed by pushing the SET + button.

The speed increment shown is dependant on the speed of U.S. (mph) or Metric (km/h) units:

U.S. Speed (mph)

- Pressing the SET + button once will result in a 1 mph increase in set speed. Each subsequent tap of the button results in an increase of 1 mph.



**Speed Control Switches**

- 1 – Push Cancel
- 2 – Push Set+/Accel
- 3 – Push Resume
- 4 – Push On/Off
- 5 – Push Set-/Decel

# OPERATING YOUR VEHICLE

- If the button is continually pressed, the set speed will continue to increase until the button is released, then the new set speed will be established.

## Metric Speed (km/h)

- Pressing the SET + button once will result in a 1 km/h increase in set speed. Each subsequent tap of the button results in an increase of 1 km/h.
- If the button is continually pressed, the set speed will continue to increase until the button is released, then the new set speed will be established.

## To Decrease Speed

- When the Electronic Speed Control is set, you can decrease speed by pushing the SET - button.

The speed decrement shown is dependant on the speed of U.S. (mph) or Metric (km/h) units:

## U.S. Speed (mph)

- Pressing the SET - button once will result in a 1 mph decrease in set speed. Each subsequent tap of the button results in a decrease of 1 mph.
- If the button is continually pressed, the set speed will continue to decrease until the button is released, then the new set speed will be established.

## Metric Speed (km/h)

- Pressing the SET - button once will result in a 1 km/h decrease in set speed. Each subsequent tap of the button results in a decrease of 1 km/h.
- If the button is continually pressed, the set speed will continue to decrease until the button is released, then the new set speed will be established.

## Resume

- To resume a previously selected set speed in memory, push the RES button and release.

## Cancel

- Push the CANCEL button, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

### WARNING!

Leaving the Electronic Speed Control system on when not in use is dangerous. You could accidentally set the system or cause it to go faster than you want. You could lose control and have an accident. Always leave the system OFF when you are not using it.

## ADAPTIVE CRUISE CONTROL (ACC)

If your vehicle is equipped with adaptive cruise control the controls operate exactly the same as the normal (fixed speed) speed control with one difference. You can set a specified distance you would like to maintain between you and the vehicle in front of you.

If the ACC sensor detects a vehicle ahead, ACC will apply limited braking or acceleration automatically to maintain a preset following distance, while matching the speed of the vehicle ahead.

If the sensor does not detect a vehicle ahead of you, ACC will maintain a fixed set speed.



**Adaptive Cruise Switches**

- 1 – Adaptive Cruise Control (ACC) On/Off
- 2 – Distance Setting - Decrease
- 3 – Distance Setting - Increase

### ACC ON/OFF

- Push and release the Adaptive Cruise Control (ACC) ON/OFF button.

ACC READY will appear on the instrument cluster to indicate the ACC is on.

- Push and release the Adaptive Cruise Control (ACC) ON/OFF button a second time to turn the system off.

Adaptive Cruise Control (ACC) Off will appear on the instrument cluster to indicate the ACC is off.

### Distance Setting (ACC Only)

The specified following distance for ACC can be set by varying the distance setting between four bars (longest), three bars (long), two bars (medium) and one bar (short). Using this distance setting and the vehicle speed, ACC calculates and sets the distance to the vehicle ahead. This distance setting displays in the EVIC.

- To increase the distance setting, press the Distance Setting-Increase button and release. Each time the button is pressed, the distance setting increases by one bar (longer).
- To decrease the distance setting, press the Distance Setting-Decrease button and release. Each time the button is pressed, the distance setting decreases by one bar (shorter).

### ACC Operation At Stop

If the ACC system brings your vehicle to a standstill while following a target vehicle, if the target vehicle starts moving within two seconds of your vehicle coming to a standstill, your vehicle will resume motion without the need for any driver action.

# OPERATING YOUR VEHICLE

If the target vehicle does not start moving within two seconds of your vehicle coming to a standstill, the ACC with Stop system will cancel and the brakes will ramp-out. Driver intervention will be required at this moment.

While ACC with Stop is holding your vehicle at a standstill, if the driver seatbelt is unbuckled or the driver door is opened, the ACC with Stop system will cancel and the brakes will ramp-out. Driver intervention will be required at this moment.

## Changing Modes (ACC Only)

If desired, the Adaptive Cruise Control mode can be turned off and the system can be operated as a normal (Fixed Speed) Speed Control mode. When in the normal (Fixed Speed) Speed Control mode the distance setting feature will be disabled and the system will maintain the speed you set.

- To change between the different cruise control modes, press the ADAPTIVE CRUISE CONTROL (ACC) ON/OFF button which turns the ACC and the normal (Fixed Speed) Speed Control OFF.
- Pressing the normal (Fixed Speed) SPEED CONTROL ON/OFF button will result in turning ON (changing to) the normal (Fixed Speed) Speed Control mode.

Refer to your Owner's Manual on the DVD for further information.

### WARNING!

- Adaptive Cruise Control (ACC) is a convenience system. It is not a substitute for active driving involvement. It is always the driver's responsibility to be attentive of road, traffic, and weather conditions, vehicle speed, distance to the vehicle ahead; and, most importantly, brake operation to ensure safe operation of the vehicle under all road conditions. Your complete attention is always required while driving to maintain safe control of your vehicle. Failure to follow these warnings can result in a collision and death or serious personal injury.
- The ACC system:
  - Does not react to pedestrians, oncoming vehicles, and stationary objects (e.g., a stopped vehicle in a traffic jam or a disabled vehicle).
  - Cannot take street, traffic, and weather conditions into account, and may be limited upon adverse sight distance conditions.
  - Does not always fully recognize complex driving conditions, which can result in wrong or missing distance warnings.
  - Can only apply a maximum of 40% of the vehicle's braking capability, and will not bring the vehicle to a complete stop.

You should switch off the ACC system:

- When driving in fog, heavy rain, heavy snow, sleet, heavy traffic, and complex driving situations (i.e., in highway construction zones).
- When entering a turn lane or highway off ramp; when driving on roads that are winding, icy, snow-covered, slippery, or have steep uphill or downhill slopes.
- When towing a trailer up or down steep slopes.
- When circumstances do not allow safe driving at a constant speed.

## FORWARD COLLISION WARNING (FCW) WITH MITIGATION

The Forward Collision Warning (FCW) system with mitigation provides the driver with audible warnings, visual warnings within the EVIC, and may apply a brake jerk to warn the driver when it detects a potential frontal collision. The warnings and limited braking are intended to provide the driver with enough time to react, avoid or mitigate the potential collision.

### NOTE:

FCW monitors the information from the forward looking sensors as well as the Electronic Brake Controller (EBC), to calculate the probability of a forward collision. When the system determines that a forward collision is probable, the driver will be provided with audible and visual warnings and may provide a brake jerk warning. If the driver does not take action based upon these progressive warnings, then the system will provide a limited level of active braking to help slow the vehicle and mitigate the potential forward collision. If the driver reacts to the warnings by braking and the system determines that the driver intends to avoid the collision by braking but has not applied sufficient brake force, the system will compensate and provide additional brake force as required.

### Turning FCW ON Or OFF

#### NOTE:

The default status of FCW is "On", this allows the system to warn you of a possible collision with the vehicle in front of you when you are farther away and it applies limited braking. This gives you the most reaction time to avoid a possible collision.

The forward collision button is on the switch panel that is located in the center of the instrument panel.

- To turn the FCW system OFF, press the forward collision button once (LED turns on).
- To turn the FCW system back ON, press the forward collision button again (LED turns off).

### Changing FCW Status

The FCW feature has two settings and can be changed within the Uconnect® System Screen:

- Far
- Near

#### NOTE:

The FCW and active braking settings can only be changed when the vehicle is in PARK.

#### Far

The default status of FCW is the "Far" setting.

The far setting provides warnings for potential collisions more distant in front of the vehicle, allowing the driver to have the most reaction time to avoid a collision.

This setting is designed to provide early warnings per NHTSA (National Highway Traffic Safety Administration) recommendations.

More cautious drivers that do not mind frequent warnings may prefer this setting.

# OPERATING YOUR VEHICLE

**NOTE:**

This setting gives you the most reaction time.

**Near**

Changing the FCW status to the “Near” setting, allows the system to warn you of a potential frontal collision when you are much closer.

This setting provides less reaction time than the “Far” setting, which allows for a more dynamic driving experience.

More dynamic or aggressive drivers that want to avoid frequent warnings may prefer this setting.

**Off**

Changing the FCW status to “Off” prevents the system from warning you of a possible collision with the vehicle in front of you.

**Turning Active Braking ON Or OFF**

The Active Braking feature has two settings and can be changed within the Uconnect® System Screen:

- On
- Off

Changing the Active Braking status to “Off” prevents the system from providing limited autonomous braking, or additional brake support if the driver is not braking adequately in the event of a potential frontal collision.

**NOTE:**

If FCW is set to “Off”, “FCW OFF” will be displayed in the EVIC.

Refer to the Owner’s Manual on the DVD for further details.

**WARNING!**

Forward Collision Warning (FCW) is not intended to avoid a collision on its own, nor can FCW detect every type of potential collision. The driver has the responsibility to avoid a collision by controlling the vehicle via braking and steering. Failure to follow this warning could lead to serious injury or death.



## ELECTRONIC SHIFTER

Your vehicle is equipped with a fuel efficient eight-speed transmission. The Electronic gear selector is located on the center console. The transmission gear (PRND) is displayed both above the shifter control and in the Electronic Vehicle Information Center (EVIC).

- To select a gear range, simply rotate the shifter control.

### NOTE:

You must press the brake pedal to shift the transmission out of PARK or from NEUTRAL into DRIVE or REVERSE.

- To shift past multiple gear ranges at once (such as PARK to DRIVE), simply rotate the switch to the appropriate detent.
- Select the DRIVE range for normal driving.



# OPERATING YOUR VEHICLE

## WARNING!

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- Your vehicle could move and injure you and others if it is not in PARK. Make sure the transmission is in PARK before leaving the vehicle.
- It is dangerous to shift out of PARK or NEUTRAL if the engine speed is higher than idle speed. If your foot is not firmly pressing the brake pedal, the vehicle could accelerate quickly forward or in reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when the engine is idling normally and your foot is firmly pressing the brake pedal.
- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the engine is running. Before exiting a vehicle, always apply the parking brake, shift the transmission into PARK, turn the engine OFF, and remove the key fob. When the ignition is in the OFF position, the transmission is locked in PARK, securing the vehicle against unwanted movement.
- When leaving the vehicle, always make sure the ignition switch is in the OFF position, remove the key fob from the vehicle, and lock the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the transmission gear selector.
- Do not leave the key fob in or near the vehicle (or in a location accessible to children), and do not leave the ignition of a vehicle equipped with Keyless Enter-N-Go™ in the ACC or ON/RUN mode. A child could operate power windows, other controls, or move the vehicle.

## AUTOSTICK®

AutoStick® is a driver-interactive transmission feature providing manual shift control, giving you more control of the vehicle.

AutoStick® allows you to maximize engine braking, eliminate undesirable upshifts and downshifts, and improve overall vehicle performance. This system can also provide you with more control during passing, city driving, cold slippery conditions, mountain driving, trailer towing, and many other situations.



# OPERATING YOUR VEHICLE

## Operation

- When the transmission is in DRIVE, it will operate automatically, shifting between the eight available gears. To engage AutoStick<sup>®</sup>, simply tap one of the steering wheel-mounted shift paddles (+/-). Tapping (-) to enter AutoStick<sup>®</sup> will downshift the transmission to the next lower gear, while using (+) to enter AutoStick<sup>®</sup> will retain the current gear.

When AutoStick<sup>®</sup> is active, the current transmission gear is displayed in the instrument cluster.

In AutoStick<sup>®</sup> mode, the transmission will shift up or down when (+/-) is manually selected by the driver, unless an engine lugging or overspeed condition would result.

### NOTE:

To disengage AutoStick<sup>®</sup> mode, press and hold the (+) shift paddle until "D" is once again displayed in the instrument cluster. You can shift in or out of AutoStick<sup>®</sup> mode at any time without taking your foot off the accelerator pedal.

## WARNING!

Do not downshift for additional engine braking on a slippery surface. The drive wheels could lose their grip and the vehicle could skid, causing a collision or personal injury.

## FUEL ECONOMY (ECO) MODE

The Fuel Economy (ECO) mode can improve the vehicle's overall fuel economy during normal driving conditions.

Each time the vehicle is started ECO mode is engaged and a amber light in the center stack of the instrument panel will be illuminated.

- To disable ECO mode, press the "ECO" switch in the center stack of the instrument panel and the amber light will go out indicating ECO mode is disabled.

When the Fuel Economy (ECO) Mode is engaged, the vehicle control systems will be able to change the following:

- The transmission will upshift sooner and downshift later.
- The overall driving performance will be more conservative.
- Some ECO mode functions may be temporarily inhibited based on temperature and other factors.



# OPERATING YOUR VEHICLE

## AUTOMATIC CLIMATE CONTROLS WITH TOUCHSCREEN

### Touchscreen Automatic Climate Controls



Uconnect® 8.4

### Climate Control Knobs



# OPERATING YOUR VEHICLE

- Select the desired temperature by pushing the up or down temperature buttons for the driver or passenger.
- The system will maintain the set temperature automatically.

## Air Conditioning (A/C)

- If the air conditioning button is pressed while in AUTO mode, the system will exit AUTO mode and stay in A/C. The mode and blower will be set at the closest mode and blower position that the system was operating in AUTO.

## MAX A/C

- MAX A/C sets the control for maximum cooling performance.
- Touch and release to toggle between MAX A/C and the prior settings. The soft-key illuminates when MAX A/C is ON.
- In MAX A/C, the blower level and mode position can be adjusted to desired user settings. Pressing other settings will cause the MAX A/C operation to switch to the prior settings and the MAX A/C indicator will turn off.

## SYNC Temperature Soft-Key

- Touch the "SYNC" soft-key on the Uconnect® radio to control the driver and passenger temperatures simultaneously. Touch the "SYNC" soft-key a second time to control the temperatures individually.

## Air Recirculation


- Use Recirculation for maximum A/C operation.
- For window defogging, turn the Recirculation button off.
- If the Recirculation button is pressed while in front defrost mode, the indicator will flash three times to indicate that recirculation state is not allowed in front defrost mode.

## Heated Mirrors

The mirrors are heated to melt frost or ice. This feature is activated whenever you turn on the rear window defroster.

# OPERATING YOUR VEHICLE

## Rear Temperature Controls

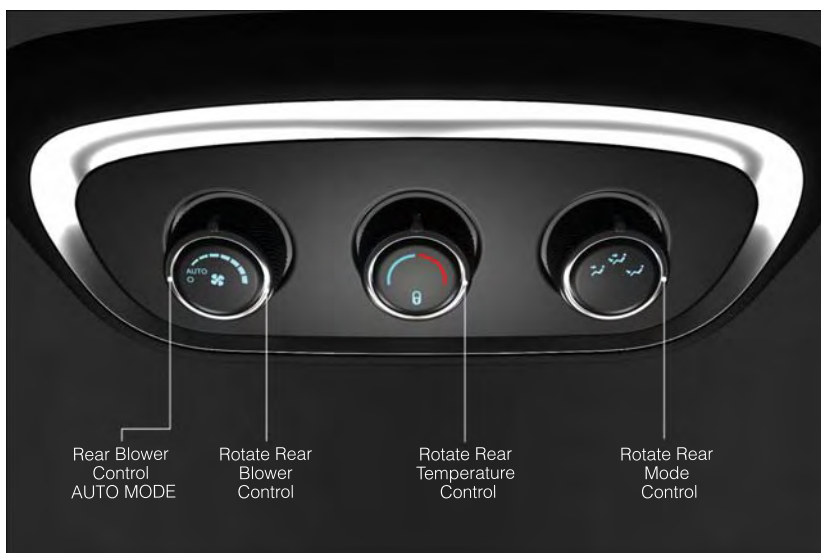

### Rear Temperature Controls

The rear controls for the ATC System are located in the headliner, near the center of the vehicle.

The rear temperature controls can be turned on two ways:

- Press the REAR control soft-key on the Uconnect<sup>®</sup> front temperature control screen and adjust to the desired rear temperature.
- Rotate the Rear Temperature Control or the Rear Blower Control knobs on the rear temperature controls.
- Press the REAR soft-key and then the OFF button on the Uconnect<sup>®</sup> front temperature control screen to turn the rear controls off.

## PARKSENSE<sup>®</sup> REAR PARK ASSIST

The four ParkSense<sup>®</sup> sensors, located in the rear fascia/bumper, monitor the area behind the vehicle that is within the sensors' field of view.

The sensors can detect obstacles from approximately 12 in (30 cm) up to 79 in (200 cm) from the rear bumper while the vehicle is in REVERSE, a warning will display in the Electronic Vehicle Information Center (EVIC) and a chime will sound (when Sound and Display is selected from the Customer Programmable Features section of the Uconnect<sup>®</sup> System screen). As the vehicle moves closer to the object, the chime rate will change from single 1/2 second tone, to slow, to fast, to continuous.

# OPERATING YOUR VEHICLE

## Cleaning The ParkSense® Sensors

If "CLEAN PARK ASSIST SENSORS" appears in the Electronic Vehicle Information Center (EVIC), clean the ParkSense® sensors with water, car wash soap and a soft cloth. Do not use rough or hard cloths. Do not scratch or poke the sensors. Otherwise, you could damage the sensors.

### NOTE:

When the Instrument Cluster reads either Clean Sensor or Blinded, please clean off the bumper sensors to see if the condition is corrected.

## PARKVIEW® REAR BACK-UP CAMERA

You can see an on-screen image of the rear of your vehicle whenever the shift lever/gear selector is put into REVERSE. The ParkView® Rear Back-Up Camera image will be displayed on the radio display screen, located on the center stack of the instrument panel.

If the radio display screen appears foggy, clean the camera lens located on the liftgate.

### WARNING!

Drivers must be careful when backing up; even when using the ParkView® Rear Back-Up Camera. Always check carefully behind your vehicle, and be sure to check for pedestrians, animals, other vehicles, obstructions, or blind spots before backing up. You must continue to pay attention while backing up. Failure to do so can result in serious injury or death.

## BLIND SPOT MONITORING

The Blind Spot Monitoring (BSM) system uses two radar-based sensors, located inside the rear bumper fascia, to detect Highway licensable vehicles (automobiles, trucks, motorcycles etc.) that enter the blind spot zones from the rear/front/side of the vehicle.

The Blind Spot Monitoring (BSM) system warning light, located in the outside mirrors, will illuminate if a vehicle moves into a blind spot zone.

The BSM system can also be configured to sound an audible (chime) alert and mute the radio to notify you of objects that have entered the detection zones.

Refer to your Owner's Manual on the DVD for further details.

# OPERATING YOUR VEHICLE

## POWER SUNROOF

The power sunroof switch is located on the overhead console.

### Opening Sunroof

#### Express Open

- Press the switch rearward and release it within one-half second. The sunroof will fully open and stop automatically.

#### Manual Open

- Press and hold the switch rearward to open the sunroof. Any release of the switch will stop the movement, and the sunroof will remain in a partially open position until the switch is pressed again.



Power Sunroof Switch

### Venting Sunroof

- Press and release the button and the sunroof will open to the vent position.

This is called "Express Vent" and will occur regardless of sunroof position. During Express Vent operation, any movement of the switch will stop the sunroof.

- 1 – Opening Sunroof
- 2 – Venting Sunroof
- 3 – Closing Sunroof

### Closing Sunroof

#### Express Closing

- Press the switch forward and release it within one-half second. The sunroof will fully close automatically from any position.

#### Manual Closing

- Press and hold the switch forward to close the sunroof. Any release of the switch will stop the movement, and the sunroof will remain in a partially closed position until the switch is pressed again.

### Pinch Protection Feature

This feature will detect an obstruction in the opening of the sunroof during Express Close operation. If an obstruction in the path of the sunroof is detected, the sunroof will automatically retract. Remove the obstruction if this occurs. Next, press the switch forward and release to Express Close.

#### NOTE:

If three consecutive sunroof close attempts result in Pinch Protect reversals, the fourth close attempt will be a Manual Close movement with Pinch Protect disabled.



# OPERATING YOUR VEHICLE

## WARNING!

- Do not let children play with the sunroof. Never leave children unattended in a vehicle, or with access to an unlocked vehicle. Do not leave the Key Fob in or near the vehicle, and do not leave the ignition of a vehicle equipped with Keyless Enter-N-Go™ in the ACC or ON/RUN mode. Occupants, particularly unattended children, can become entrapped by the power sunroof while operating the power sunroof switch. Such entrapment may result in serious injury or death.
- In a collision, there is a greater risk of being thrown from a vehicle with an open sunroof. You could also be severely injured or killed. Always fasten your seat belt properly and make sure all passengers are properly secured.
- Do not allow small children to operate the sunroof. Never allow your fingers, other body parts, or any object to project through the sunroof opening. Injury may result.

## WIND BUFFETING

Wind buffeting can be described as a helicopter-type percussion sound. If buffeting occurs with the rear windows open, adjust the front and rear windows together.


If buffeting occurs with the sunroof open, adjust the sunroof opening, or adjust any window. This will minimize buffeting.

# ELECTRONICS



## YOUR VEHICLE'S SOUND SYSTEM

1. Uconnect® Phone Button pg. 101
2. Uconnect® Voice Command Button pg. 69
3. Phone Hang Up Button pg. 101
4. Steering Wheel Audio control (Right) pg. 109
5. Steering Wheel Audio control (Left) pg. 109
6. Volume/Mute Knob
7. Assist Button pg. 57

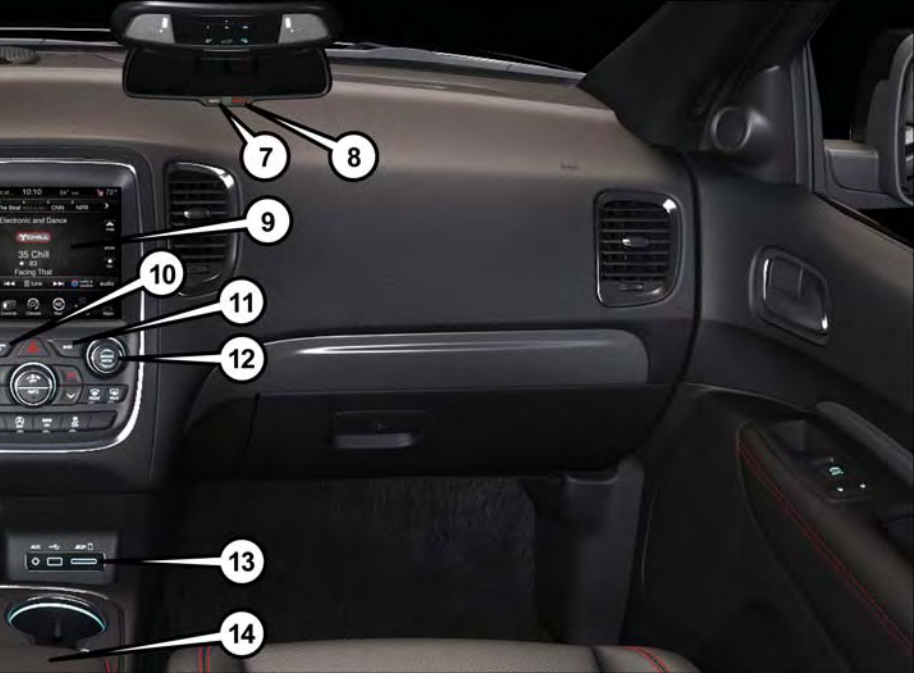

- 8. Emergency 911 Button pg. 57
- 9. Uconnect® Radio pg. 65
- 10. Uconnect® Radio Screen Off Button
- 11. Uconnect® Radio Back Button
- 12. Tune/Scroll Knob/Browse/Enter Button
- 13. Media Hub: AUX Audio Jack, USB Port, and SD Card Slot  
(located inside front console) pg. 67
- 14. CD Player Inside Center Console pg. 67

# ELECTRONICS

## IDENTIFYING YOUR RADIO

### Uconnect® 5.0



Uconnect® 5.0

- 5" Touchscreen
- Three hard-keys on either side of the display

### Uconnect® 8.4A



Uconnect® 8.4A

- 8.4" Touchscreen
- Climate soft-key in lower menu bar

### Uconnect® 8.4AN

- 8.4" Touchscreen
- Climate soft-key in lower menu bar



Uconnect® 8.4AN

## Uconnect<sup>®</sup> ACCESS

### Uconnect<sup>®</sup> Access – If Equipped (Available On Uconnect<sup>®</sup> 8.4AN)

#### WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect<sup>®</sup> features and applications in this vehicle. Only use Uconnect<sup>®</sup> when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Uconnect<sup>®</sup> Access enhances your ownership and driving experience by connecting your vehicle with a built-in cellular connection. With Uconnect<sup>®</sup> Access, you can:

- Place a call to a local 911 Operator for emergency assistance.
- Remotely lock/unlock your doors and start your vehicle from virtually anywhere, using the Uconnect<sup>®</sup> Access App for your smartphone. You can also do so by logging into Mopar Owner Connect, or by calling Uconnect<sup>®</sup> Care. (Vehicle must be within the United States and have network coverage).
- Turn your vehicle into a WiFi Hotspot and connect your devices to the internet.
- Receive text or email notifications if your vehicle's theft alarm goes off.
- Receive stolen vehicle assistance, using GPS technology to help authorities locate your vehicle if it is stolen.
- Listen to your text messages or send free-form text messages with your voice while keeping your hands on the wheel, using the Voice Texting feature. Requires a cell phone that supports Bluetooth Message Access Profile [MAP].
- Search for places to eat, shop, relax and play with Yelp<sup>®</sup>, using your voice or on-screen menu. Then navigate to them (navigation standard on Uconnect<sup>®</sup> 8.4AN, optional on Uconnect<sup>®</sup> 8.4A).
- Get operator assistance using the Assist button on your mirror.

#### **Before you drive, familiarize yourself with the easy-to-use Uconnect<sup>®</sup> System.**

1. The ASSIST and 9-1-1 buttons are located on your rearview mirror. The ASSIST Button is used for contacting Roadside Assistance, Vehicle Care and Uconnect<sup>®</sup> Care. The 9-1-1 Button connects you to emergency services.

#### **NOTE:**

**Vehicles sold in Canada and Mexico DO NOT have 9-1-1 Call system capabilities. 9-1-1 or other emergency line operators in Canada and Mexico may not answer or respond to 9-1-1 system calls.**

2. The Uconnect<sup>®</sup> "Apps" button on the menu bar at the bottom right corner of the radio touchscreen. This is where you can begin your registration process, manage your Apps and purchase WiFi on demand.

# ELECTRONICS

3. The Uconnect® Voice Command and Uconnect® Phone buttons are located on the left side of your steering wheel. These buttons let you use your voice to give commands, make phone calls, send and receive text messages hands-free, enter navigation destinations, and control your radio and media devices.

## Included Trial Period For New Vehicles

Your new vehicle may come with an included trial period for use of the Uconnect® Access Services starting at the date of vehicle purchase (date based on vehicle sales notification from your dealer). **To activate the trial, you must first register with Uconnect® Access.** After the trial period, if you wish to continue your Uconnect® Access Services you can choose to purchase a subscription.

## Features And Packages

- After the trial period, you can subscribe to continue your service by visiting the Uconnect® Store located within the Mopar Owner Connect website (moparownerconnect.com). If you need assistance, U.S. residents can call Uconnect® Care at 855-792-4241.
- For the latest information on packages and pricing information: U.S. residents visit DriveUconnect.com.

## Uconnect® Access Registration (Uconnect® 8.4AN Only, U.S. 48 Contiguous States And Alaska)

### NOTE:

Should you require assistance anytime during the registration process, simply call Uconnect® Care at 855-792-4241.

1. From the parked vehicle with the radio touchscreen powered on, select the "Apps" button on the touchscreen located near the bottom right-hand corner.
2. Press "Register" if you see a reminder screen or select "Uconnect Registration" under the 'Favorites' tab.
3. The Uconnect® Access Registration App will open and display step-by-step instructions to start your registration.
4. Enter your email address into the radio touchscreen.
5. A message will display on the touchscreen indicating your email submission was accepted.
6. At home, or wherever you access your email, look for an email from Uconnect® Access that contains your personalized registration link. If you don't see it, check your spam or junk email folder. Open the email and click on the link to continue registering online.

### NOTE:

For security reasons, this link is valid for 72 hours from the time you submit your email address into the radio touchscreen. If the link has expired, start the process over (see step 1).

7. You are now registered for your Uconnect® Access Trial! Apps will be downloaded the next time you start your vehicle. It may take over 30 minutes for all of the Apps to install. If the Apps have not appeared after 72 hours, please contact Uconnect® Care at 855-792-4241.
8. Get to know Uconnect® Access! We recommend:
  - Go to [moparownerconnect.com](http://moparownerconnect.com) and log in using the email address and password you established while registering. Go to the Learn & Use tab for complete information on using Uconnect® Access.
  - If you have a smartphone, download the Uconnect® Access App and set up your Via Mobile features. See instructions below.

## Download The Uconnect® Access App

If you own a compatible Apple or Android® powered device, the Uconnect Access App allows you to remotely lock or unlock your doors, start your engine or activate your horn and lights from virtually anywhere (Vehicle must be within the United States and have network coverage). You can download the App from Mopar Owner Connect or from the Apple App or Google Play store. For Uconnect® phone compatibility - visit [UconnectPhone.com](http://UconnectPhone.com) or call 1-877-855-8400.

## Set Up Your Via Mobile Profile – If Equipped

Setting up your Via Mobile profile means entering your login information for each app so that they can work in your vehicle. Complete your Via Mobile Profile online during registration of your Uconnect® Access system. Access this page by logging into your Mopar Owner Connect account ([moparownerconnect.com](http://moparownerconnect.com)), going to Edit Profile, then Via Mobile Profile.

If you already have an account with these apps, click "SetUp" to enter your information. If you do not have an account, you can create a new one.

### Aha™ by HARMAN ([www.aharadio.com](http://www.aharadio.com))

- Enter your email address and password for Aha™, or create a new Aha™ account.
- You can link your Facebook, Twitter or Slacker accounts on the Aha™ website.

### iHeartRadio ([www.iheart.com](http://www.iheart.com))

- Click "Sign Up" if you're new to iHeartRadio, or "Log In" to enter your iHeartRadio account information.
- Select "Activate" to continue,
- Select "Close" to complete activation.

### Pandora® ([www.pandora.com](http://www.pandora.com))

- Enter your Pandora® username/email address and password, then click "Save."

## **Slacker Radio ([www.slacker.com](http://www.slacker.com))**

- Enter your Slacker username/email address and password, then click “Save.”

Invite family and friends to use the Via Mobile Apps in your vehicle by setting up their own Via Mobile profile.

## **Renewing Subscriptions And Purchasing WiFi Hotspot (Uconnect® 8.4N Only, U.S. 48 Contiguous States And Alaska)**

Subscriptions, and WiFi Hotspot, can be purchased from the Uconnect® Store within your vehicle, and online at Mopar Owner Connect. If you need help press the ASSIST button on the rearview mirror, then select Uconnect® Care (or dial 855-792-4241).

### **Purchasing Online**

You can renew your subscription to a package or purchase WiFi from the Mopar Owner Connect website. You must first set up a Uconnect® Access Payment Account online. Log into [moparownerconnect.com](http://moparownerconnect.com), select Edit Profile, then Uconnect® Payment Account.

1. Log In to the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)) with your username/email and password.
2. Click on the “Shop” tab, then click on the Uconnect® Store.
3. From the Uconnect® Store, select the item you wish to purchase.
4. This will launch the selected item into purchase mode along with providing additional information. The purchase process begins when you press the “Buy” button on the touchscreen.
5. The Uconnect® Store will display a “Purchase Overview” message confirming the financial details of your purchase. Press the “Purchase” key to continue.
6. The Uconnect® Store will ask you to “Confirm Payment” using your default payment method on file in your Payment Account. Press the “Complete” key to continue.
7. The Uconnect® Payment Account will then ask for your “Payment Account PIN,” which you established when setting up your Uconnect® payment account. After entering this four digit PIN, press the “Complete” key to make the purchase.
8. You will receive a confirmation message that your purchase has been submitted. Press the OK button to end the process.



## Purchasing WiFi Hotspot While In Your Vehicle

You must set up a Uconnect® Access Payment Account online (log in to moparownerconnect.com, go to Edit Profile, then Uconnect® Payment Account, to set up and manage your Payment Account).

1. To purchase WiFi while in your vehicle, ensure the vehicle is running and in Park. Press the Apps button on the touchscreen, then select WiFi within the Tools menu. Follow the on-screen instructions. When asked for your payment PIN, use the 4-digit PIN you established when setting up your payment account on Mopar Owner Connect.

### NOTE:

This may be different than the Uconnect® Security PIN you established for using features such as Remote Vehicle Start. After purchasing WiFi, it may take up to 30 minutes (with the vehicle running) before the WiFi will be active in your vehicle.

2. Select WiFi again, then note the hotspot name. Select this network when connecting devices to the hotspot. Also click on View/Edit Passphrase, then note the security passphrase you will need to connect to the network on each device.

If your devices cannot see the WiFi Hotspot network after 30 minutes, please contact Uconnect® Care by pressing the Assist button on the rear view mirror, or by calling 855-792-4241.

## Using Uconnect® Access

### Getting Started With Apps

Applications (Apps) and features in your Uconnect® Access system deliver services that are customized for the driver and are certified by FCA US LLC. Two different types are:

1. **Built-In Features** – use the built-in 3G Cellular Network on your Uconnect® 8.4A or 8.4AN radio.
2. **Uconnect® Access via Mobile (if equipped)** – uses the Uconnect Access app and your smartphone's data plan to access your personal Pandora®, iHeartRadio, Aha™ and Slacker accounts from the vehicle and control them using the vehicle touchscreen. Customer's data plan charges will apply.

Get started with your Uconnect® Access apps by pressing the Uconnect® "Apps" button on the menu bar at the bottom right corner of the radio touchscreen. Available apps and features are organized by the tabs on the left of the screen:

**Favorite Apps** – This is the default screen when you first press the "Apps" button on the touchscreen, and is a good place to put the apps you use most frequently. To make an App a "favorite", press the "settings" button on the touchscreen to the right of the app, and select "Make a favorite."

**All Apps** – Organizes your Uconnect® Access apps (when available).

**Running Apps** – Press this tab to see which apps are currently running.



**Favorite Apps**

## Maintaining Your Uconnect® Access Account

### Reinstalling An App (Uconnect® 8.4AN Only)

You can easily correct many Application related issues you may be experiencing by resetting the App back to the factory setting. From the vehicle's radio touchscreen, complete the following steps:

1. Press the "Uconnect® App" and open the Uconnect® Store. Go to My Apps.
2. In My Apps, select "Settings," then "Reinstall App." Press "Continue."
3. Your Apps have been successfully re-installed.

### Canceling Your Subscription

Should you want to cancel your subscription, you can remove your account information using the same procedure contained in the Selling Your Vehicle section.

### Selling Your Vehicle

When you sell your vehicle, we recommend that you remove your Uconnect® Access Account information from the vehicle. You can do this using the radio touchscreen in the vehicle (**Uconnect® 8.4AN only**) or on the Mopar Owner Connect website (moparownerconnect.com). Removing your account information cancels your subscription and makes your vehicle factory-ready for a new owner/subscriber.

1. From your vehicle's radio touchscreen, select "Uconnect<sup>®</sup> Store" from the Apps Menu.
2. Select "My Apps," then "Settings." Press "Remove Uconnect<sup>®</sup> Account."
3. Enter your Uconnect<sup>®</sup> Security PIN, select "Proceed to Remove Vehicle from Uconnect Account."

For additional information on Uconnect<sup>®</sup>:

- U.S. residents - visit [DriveUconnect.com](http://DriveUconnect.com) or call 1-877-855-8400.
- Canadian Residents - visit [DriveUconnect.com](http://DriveUconnect.com) or call, 1-800-465-2001 (English) or 1-800-387-9983 (French).

## Built-In Features (Uconnect<sup>®</sup> 8.4A And 8.4AN Only)

1. **Assist Call** – The rear view mirror contains an ASSIST push button which (once registered) automatically connects the vehicle occupants to one of these predefined destinations for immediate support:

- **Roadside Assistance Call** – If you get a flat tire, or need a tow, you'll be connected to someone who can help anytime. Additional fees may apply. Additional information in this section.
- **Uconnect<sup>®</sup> Access Care** – In vehicle support for Uconnect<sup>®</sup> Access System, Apps and Features.
- **Vehicle Care** – Total support for your FCA US LLC vehicle.



Interior Rearview Mirror

2. **Emergency 9-1-1 Call (If Equipped)** – The rear view mirror contains a 9-1-1 button that, when pressed, will place a call to a local 9-1-1 operator to request help from local police, fire or ambulance personnel in the event of an emergency. If this button is accidentally pressed, you will have 10 seconds to cancel the call. To cancel, press the 9-1-1 Call button again or press the "cancellation button" shown on the touchscreen. After 10 seconds has passed, the 9-1-1 call will be placed and only the 9-1-1 operator can cancel it. The LED light on the rearview mirror will turn green once a connection to a 9-1-1 operator has been made. The green LED light will turn off once the 9-1-1 call is terminated. Have an authorized dealer service the vehicle if the rearview mirror light is continuously red. **If a connection is made between a 9-1-1 operator and your vehicle, you understand and agree that 9-1-1 operators may, like any other 9-1-1 call, record conversations and sounds in and near your vehicle upon connection.**
3. **Roadside Assistance (If Equipped)** – If your vehicle is equipped with this feature and within wireless range, you may be able to connect to Roadside Assistance by pressing the "Assist" button on the rearview mirror. You will be presented with Assist Care options. Make a selection by touching the prompts displayed on the radio. If Roadside Assistance is provided to your vehicle, you agree to be responsible for any additional roadside assistance service costs that you may incur. In order to provide Uconnect<sup>®</sup> Services to

# ELECTRONICS

you, we may record and monitor your conversations with Roadside Assistance, Uconnect<sup>®</sup> Care or Vehicle Care, whether such conversations are initiated through the Uconnect<sup>®</sup> Services in your vehicle, or via a landline or mobile telephone, and may share information obtained through such recording and monitoring in accordance with regulatory requirements. You acknowledge, agree and consent to any recording, monitoring or sharing of information obtained through any such call recordings.

4. **Yelp<sup>®</sup>** – Customers have the ability to search for nearby destinations or a point of interest (POI) either by category or custom search by using keywords (for example, “Italian restaurant”). Searching can be done by voice or using the touchscreen keypad. Using the touchscreen, launch Yelp<sup>®</sup> by selecting the “Apps” icon, touch the “All Apps” tab, and then touch “Yelp.” Using voice recognition press the Voice Command (VR) button on the steering wheel and say “Launch Yelp<sup>®</sup>.”
5. **Security Alarm Notification** – The Security Alarm Notification feature notifies you via email or text (SMS) message when the vehicle’s factory-installed security alarm system has been set-off. There are a number of reasons why your alarm may have been triggered, one of which could be that your vehicle was stolen. If so, please see the details of the Stolen Vehicle Assistance service below. When you register, Security Alarm Notification is automatically set to send you an email at the mail address you provide should the alarm go off. You may also opt to have a text message sent to your mobile device.
6. **Stolen Vehicle Assistance** – If your vehicle is stolen, contact local law enforcement immediately to file a stolen vehicle report. Once this report has been filed, Uconnect<sup>®</sup> care can help locate your vehicle. The Uconnect<sup>®</sup> Care agent will ask for the stolen vehicle report number issued by local law enforcement. Then, using GPS technology and the built-in wireless connection within your vehicle, the Uconnect<sup>®</sup> Care agent will be able to locate the stolen vehicle and work with law enforcement to help recover it. (Vehicle must be within the United States, have network coverage and must be registered with Uconnect<sup>®</sup> Access with an active subscription that includes the applicable feature).
7. **WiFi Hotspot** – WiFi Hotspot is on-demand WiFi 3G connectivity that’s built-in and ready to go whenever you are. Once your vehicle is registered for Uconnect<sup>®</sup> Access, you can purchase a Wifi Hotspot subscription at the Uconnect<sup>®</sup> Store. After you’ve made your purchase, turn on your signal and connect your devices. It’s never been easier to bring your home or office with you.

Your vehicle must have a working electrical system for any of the in vehicle Uconnect<sup>®</sup> features to operate.

## Uconnect<sup>®</sup> Access Remote Features

If you own a compatible iPhone<sup>®</sup> or Android<sup>®</sup> powered device, the Uconnect<sup>®</sup> Access App allows you to remotely lock or unlock your doors, start your engine or activate your horn and lights from virtually anywhere (Vehicle must be within the United States and have network

coverage). You can download the App from Mopar Owner Connect or from the App Store (iPhone) or Google Play store. Visit UconnectPhone.com to determine if your device is compatible. For Uconnect® Phone customer support and to determine if your device is compatible.

U.S. residents - visit UconnectPhone.com or call 1-877-855-8400

**Remote Start** – This feature provides the ability to start the engine on your vehicle, without the keys and from virtually any distance. You can send a request to your vehicle in one of two ways:

1. Using the Uconnect® Access App from a compatible smartphone.
2. From the Mopar Owner Connect website.
  - You can also send a command to turn-off an engine that has been remote started.
  - After 15 minutes if you have not entered your vehicle with the key, the engine will shut off automatically.
  - This remote function requires your vehicle to be equipped with a factory-installed Remote Start system. To use this feature after the Uconnect® Access App is downloaded, login with your user name and Uconnect® Security PIN.
  - You can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent. Login to Mopar Owner Connect (moparownerconnect.com) and click on Edit Profile to manage Uconnect® Notifications.

**Remote Door Lock/Unlock** – This feature provides the ability to lock or unlock the door on your vehicle, without the keys and from virtually any distance. You can send a request to your vehicle in one of three ways:

1. Using the Uconnect® Access App from a compatible smartphone.
2. From the Mopar Owner Connect website.
3. By contacting the Uconnect® Care on the phone.

To use this feature after the Uconnect® Access App is downloaded, login using your user name and Uconnect® Security PIN. Press the “App” button on your smartphone with the closed lock icon to lock the door, and press the “open lock” icon to unlock the driver’s door.

You can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent. Login to Mopar Owner Connect (moparownerconnect.com) and click on Edit Profile to manage Uconnect® Notifications.

**Remote Horn And Lights** – It’s easy to locate a vehicle in a dark, crowded or noisy parking area by activating the horn and lights. It may also help if you need to draw attention to your vehicle for any reason. You can send a request to your vehicle in one of three ways:

1. Using the Uconnect® Access App from a compatible smartphone.
2. From the Mopar Owner Connect website.
3. By contacting the Uconnect® Care on the phone.

# ELECTRONICS

To use this feature after the Uconnect® Access App is downloaded, login using your user name and Uconnect® Security PIN. You can set-up notifications for your account to receive an email or text (SMS) message every time a command is sent. Login to Mopar Owner Connect (moparownerconnect.com) and click on Edit Profile to manage Uconnect® Notifications.

**Voice Texting (U.S. Residents Only)** – Want to dictate a personal message? Register with Uconnect® Access to take advantage of a new, cloudbased Voice Texting service, an enhancement to Voice Text Reply.

Voice Texting allows you to compose a new text or reply to an incoming text message. Before you attempt to use the Voice Texting feature, check to ensure you have the following:

1. A paired, Bluetooth® enabled phone with the Message Access Profile (MAP). Not all Bluetooth® enabled phones support MAP, including all iPhones® (Apple iOS). Visit UconnectPhone.com for system and device compatibility information.
2. An active Uconnect® Access trial or paid subscription. Press the “U” button on the lower right hand corner of the touchscreen to begin the registration process.
3. Accept the Allow MAP profile request on your smart phone. (Please refer to device manufacturer instructions for details).

## To Send A Text Message:

1. Press the “Uconnect® Phone” button.
2. Wait for the beep.
3. Say “Text.”
4. Uconnect® will prompt you “Say the phone number, or full name and phone type of the contact you want to send a message to.”
5. Wait for the beep and say a contact that is in your phonebook, or a mobile phone number that you would like to send the message to.
6. Uconnect® will prompt you “Please say the message that you would like to send.” (If you do not hear this prompt, you may not have an active subscription with Uconnect® Access).
7. Wait for the beep, and then dictate any message up to 140 characters. If you exceed 140 characters, you will hear the following prompt: “Message was too long; your message will be truncated.”
8. Uconnect® will then repeat the message back to you.
9. Uconnect® will prompt you: “To add to your message, say “Continue”; To delete the current message and start over, say “Start Over”; to send the current message, say “Send”; to hear the message again, say “Repeat”.
10. If you are happy with your message and would like to send it, wait for the beep and say “Send”.
11. Uconnect® will then say “Sending your message.”

**Sample Commands For Voice Text Reply And Voice Texting**

<b>Example Command</b>	<b>Action</b>
"Text John Smith"	Send a message to specific contact in address book
"Text 123 - 456 - 7890"	Send 123 - 456 - 7890 a message from your phonebook
"Show messages"	See recent text messages listed by number on Uconnect® screen
"Listen to/view (message number four, for example)"	Hear messages or read it on Uconnect® screen
"Reply"	Send a voice text reply to a current message
"Forward text/message to "John Smith"	Forward current text to specific contact in address book
"Forward text/message to "123 - 456 - 7890"	Forward current text to specific phone number

**Uconnect® Access Via Mobile (If Equipped – Available On Uconnect® 8.4A And Uconnect® 8.4AN)**

Uconnect® Access via Mobile offers additional apps such as Aha™, iHeartRadio, Pandora® and Slacker Radio. It uses your smartphone's existing data plan to access Uconnect® System-enabled apps, which you can control using both your touchscreen and steering wheel controls. Customer's data plan charges will apply.

To get started using Via Mobile apps, first register your Uconnect® Access system where you'll be guided through the setup of your Via Mobile (requires a compatible Android or iPhone® smartphone). Please refer to "Uconnect® Access Registration" for more information.

The Uconnect® Access app is compatible with select iPhone® and Android smartphones. Visit [UconnectPhone.com](http://UconnectPhone.com) to confirm that your smartphone is compatible with Uconnect®. Once you've confirmed your smartphone is compatible, pair it to the vehicle touchscreen via Bluetooth® to use Via Mobile apps. If using an iPhone®, a USB cable may also be supported for the data connection.

# ELECTRONICS

Launch the Uconnect<sup>®</sup> Access App on your smartphone, and login with your username and password that was set up during registration. Accept the Terms and Conditions.

- Ensure that Via Mobile data has been turned on under “Settings” in the Uconnect<sup>®</sup> Access App.
- A green indicator next to the words Via Mobile will show when it is ready to provide data to the radio (a blue indicator when data is being sent). A red indicator means that it is not ready to provide data.

Each time you want to use a Via Mobile app in your vehicle, the Uconnect Access App must be running on your smartphone and the smartphone must be paired via Bluetooth<sup>®</sup>.




Enable Smartphone For via Mobile Apps




If equipped, the Via Mobile apps can be found by selecting the "Apps" soft-key in the lower right corner of the radio touchscreen. Via Mobile apps are listed under the "All Apps" tab. The words "Via Mobile" will appear after the app name indicating it is a Via Mobile app.

Via Mobile apps can also be launched through Voice Recognition by pressing the VR button on the steering wheel and stating "launch" and then the name of the app. For example, you can say "launch Aha via Mobile."

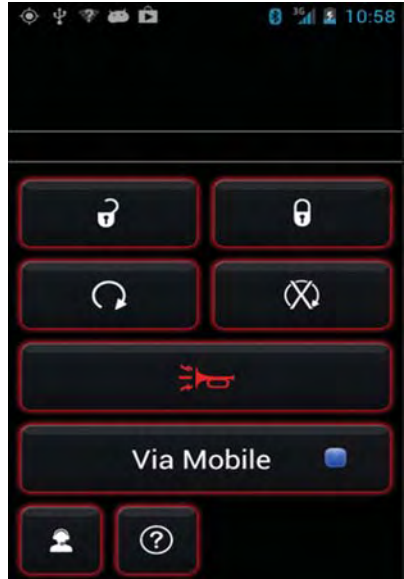

Via Mobile Data Indicator

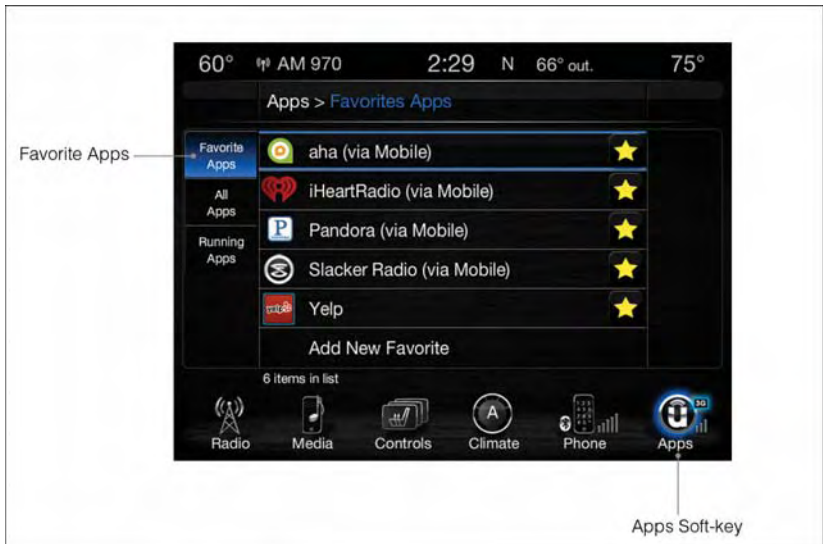

Favorite Apps

**NOTE:**

For detailed information on how to use Via Mobile apps visit the Mopar Owner Connect website ([www.moparownerconnect.com](http://www.moparownerconnect.com)) and login using the username and password you set up when registering for Uconnect® Access.

A message will be displayed to remind you that Via Mobile apps utilize the data plan on your connected smartphone to provide content. Many smartphones have a limit to how much data they can utilize before incurring additional charges. The amount of data being used varies by smartphone device, cellular service provider and specific app. Check your mobile phone service plan for more details.\* Touch "OK" to continue or the "X" to exit.

(\*Additional smartphone data usage charges may apply.)

## Determine If Your Vehicle Is Via Mobile-Enabled

To see if your Uconnect® 8.4A or 8.4AN system is equipped with Via Mobile, press the "Apps" button on the touchscreen, then press the "All Apps" tab on the left side of the touchscreen. If you see Aha™, iHeartRadio, Pandora® and Slacker then your system is capable of playing Via Mobile apps (registration required).

Earlier vehicles with Uconnect® 8.4A or 8.4AN may qualify for a software upgrade to enable Via Mobile. Call Uconnect Care at 855-792-4241 and please have the last eight characters of your Vehicle Identification Number (VIN) available, or visit:

[DriveUconnect.com/features/via-mobile/](http://DriveUconnect.com/features/via-mobile/)

- Click on Help & Support > Select your Brand > System Updates

## Via Mobile Apps – If Equipped

- **Aha™ by HARMAN** – Aha™ by HARMAN makes it easy to instantly access your favorite Web content on the go. Choose from over 40,000+ stations spanning internet radio, personalized music, news, entertainment, hotels, weather, audiobooks, Facebook®, Twitter®, and more.
- **iHeartRadio** – iHeartRadio provides instant access to more than 1,500 live radio stations from across the country and allows listeners to create custom music stations inspired by their favorite artists or songs.
- **Pandora®** – Pandora® gives people the music and comedy they love anytime, anywhere. Personalized stations launch instantly, with the input of a favorite artist, track, comedian, or genre.
- **Slacker Radio** – Enjoy millions of songs and hundreds of handcrafted stations.

**NOTE:**

For detailed information on how to use Via Mobile apps visit the Mopar Owner Connect website ([moparownerconnect.com](http://moparownerconnect.com)) and log in using the username and password you set up when registering for Uconnect® Access.

## Uconnect® 5.0



## Uconnect® 5.0

## Setting The Time

1. Press the "MORE" hard-key on the right side of the display, next press the "Settings" soft-key and then the "Time" soft-key. **OR** Press the "Settings" hard-key on the right side of the display, then press the "Clock" soft-key. The Time setting screen is displayed and the clock can be adjusted as described in the following procedure.

**NOTE:**

In the Clock Setting Menu you can also select "Display Clock". Display Clock turns the clock display in the status bar on or off.

2. Touch the "Up" or "Down" arrows to adjust the hours or minutes, next select the AM or PM soft-key. You can also select 12hr or 24hr format by touching the desired soft-key.
3. Once the time is set press the "Done" soft-key to exit the time screen.

## Equalizer, Balance And Fade

1. Press the SETTINGS hard-key on the right side of the unit.
2. Then scroll down and press the "Audio" soft-key to get to the Audio menu.
3. The Audio Menu shows the following options for you to customize your audio settings.

# ELECTRONICS

## Equalizer

- Touch the “Equalizer” soft-key to adjust the Bass, Mid and Treble. Use the + or - soft-key to adjust the equalizer to your desired settings. Press the “Back Arrow” soft-key when done.

## Balance/Fade

- Touch the “Balance/Fade” soft-key to adjust the sound from the speakers. Use the arrow soft-key to adjust the sound level from the front and rear or right and left side speakers. Touch the Center “C” soft-key to reset the balance and fade to the factory setting. Press the “Back Arrow” arrow soft-key when done.

## Speed Adjusted Volume

- Touch the “Speed Adjusted Volume” soft-key to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the “Back Arrow” soft-key when done.

## Loudness

- Touch the “Loudness” soft-key to select the Loudness feature. When this feature is activated it improves sound quality at lower volumes.

## Surround Sound

- Touch the “Surround Sound” soft-key, select On or Off followed by pressing the “Back Arrow” soft-key. When this feature is activated, it provides simulated surround sound mode.

## Radio Operation

### Seek Up/Down Buttons

- Press to seek through radio stations in AM, FM or SXM bands.
- Hold either button to bypass stations without stopping.

### Store Radio Presets

- When you are receiving a station that you wish to commit into memory, press and hold the desired numbered soft-key for more than two seconds, or until you hear a confirmation beep.
- The Radio stores up to 12 presets in each of the Radio modes. Four presets are visible at the top of the radio screen. Touching the “all” soft-key on the radio home screen will display all of the preset stations for that mode.

## SiriusXM Premier Over 160 Channels

- Get every channel available on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio<sup>®</sup>, every MLB<sup>®</sup> and NHL<sup>®</sup> game, every NASCAR<sup>®</sup> race, Martha Stewart and more. And get 20+ extra channels, including SiriusXM Latino, offering 20 channels of commercial free music, news, talk, comedy, sports and more dedicated to Spanish language programming.
- To access SiriusXM Satellite Radio, press the RADIO hard-key and then the “SXM” soft-key.
- SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 for U.S. residents and 1-888-539-7474 for Canadian residents to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com) for U.S. residents and [www.siriusxm.ca](http://www.siriusxm.ca) for Canadian residents.** All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. ©2014 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

## Disc Operation

- Your vehicle may have a remote CD player located in the lower center console storage bin.
- CD/Disc Mode is entered by either inserting a CD/Disc or by touching the “Media” button located on the side of the display. Once in Media Mode, select “Disc”.
- Gently insert one CD into the CD player with the CD label facing as indicated on the illustration located on the Disc player.

## Seek Up/Down Buttons

- Press to seek through Disc tracks.
- Hold either button to bypass tracks without stopping.

## Browse

- Touch the “Browse” soft-key to scroll through and select a desired track on the Disc. Touch the “Exit” soft-key if you wish to cancel the browse function.

## USB/Audio Jack (AUX)/Bluetooth<sup>®</sup> Operation

### USB/iPod<sup>®</sup>

- USB/iPod<sup>®</sup> Mode is entered by either inserting a USB Jump Drive or iPod<sup>®</sup> cable into the USB port or by touching the “Media” hard-key located left of the display. Once in Media Mode, touch the “Source” soft-key and select USB/iPod<sup>®</sup>

# ELECTRONICS

- Pressing the “Media” hard-key, then touch the “Source” soft-key and then select “USB/iPod®” to change the mode to the USB device if the device is connected, allowing the music from your portable device to play through the vehicle's speakers.

## Audio Jack (AUX)

- The AUX allows a portable device, such as an MP3 player or an iPod®, to be plugged into the radio and utilize the vehicle's audio system, using a 3.5 mm audio cable, to amplify the source and play through the vehicle speakers.
- Pressing the “Media” hard-key, then touch the “Source” soft-key and then select AUX to change the mode to auxiliary device if the audio jack is connected, allowing the music from your portable device to play through the vehicle's speakers.
- The functions of the portable device are controlled using the device buttons, not the buttons on the radio. The volume may be controlled using the radio or portable device.

## Bluetooth®

- If using a Bluetooth® equipped device, you may also be able to stream music to your vehicle's sound system.
- Press the “Media” hard-key, then touch the “Source” soft-key. Select “Bluetooth®” to change the mode to Bluetooth® if the device is paired, allowing the music from your portable device to play through the vehicle's speakers.


## Uconnect® 5.0 Available Media Hubs

Uconnect® 5.0	Media Hub (SD, USB, AUX Ports)	Dual Charging Ports
	S	0

S = Standard Equipment

0 = Optional Equipment

## Voice Text Reply (Not Compatible With iPhone®)

- Once your Uconnect® system is paired with a compatible mobile device, the system can announce a new incoming text message, and read it to you over the vehicle audio system. You can reply to the message using Voice Recognition, by selecting, or saying one of the 18 pre-defined messages.
- **Here's How:** Press the Uconnect® Phone button  and wait for the beep, then say “reply.” Uconnect® will give the following prompt: “Please say the message you would like to send.” Wait for the beep and say one of the pre-defined messages. (If you are not sure, you can say “help”). Uconnect® will then read the pre-defined messages allowed. As soon as you hear the message you would like to send, you can interrupt the list of prompts by pressing the Uconnect® phone button and saying the phrase. Uconnect® will confirm the message by reading it back to you. Then press the Phone button and say “Send.”




## PRE-DEFINED VOICE TEXT REPLY RESPONSES

Yes.	Stuck in Traffic.	See you later.
No.	Start without me.	I'll be Late.
Okay.	Where are you?	I will be <number> minutes late.
Call me.	Are you there yet?	
I'll call you later.	I need directions.	See you in <number> of minutes.
I'm on my way.	Can't talk right now.	
I'm lost.		Thanks.




- Voice texting reply and voice texting features require a compatible mobile device enabled with Bluetooth® Message Access Profile (MAP). iPhone® and some other smartphones do not currently support Bluetooth® MAP. Visit [www.UconnectPhone.com](http://www.UconnectPhone.com) for system and device compatibility.
- Want to dictate a personal message? You must first register with Uconnect® Access (U.S. residents only) to take advantage of a new, cloud-based Voice Texting service, an enhancement to Voice Text Reply.

## VOICE COMMAND QUICK REFERENCE

## Uconnect® 5.0 Voice Command Quick Reference

- If the Uconnect® Voice Command  button exists on your steering wheel, you have the Voice Command feature, which is optimized for the driver. The Voice Command feature lets you keep your hands on the wheel, and your eyes on the road.
- When you press the Voice Command  button located on the steering wheel, you will hear a beep. After the beep, give your command. If you do not know what commands to say, you can say “help” and the system will provide options to you. If you ever wish to interrupt the system while it lists options, press the Voice Command  button, after the beep, say your command.

**NOTE:**

All phone oriented voice commands are accessible by first pressing the Phone Pick Up  button, not the Voice Command button. To end a call, simply press the Phone Hang Up  button. In some vehicle's, the Phone Pickup  button serves the dual purpose of ending calls as well.

**Voice Command (VR) User TIPS**

- To hear available commands, press the Uconnect® Voice Command button and say “Help.” You will hear available commands for the menu displayed.
- At any time, you can say the words “Cancel” or “Help.” These commands are universal and can be used from virtually any menu. All other specific commands can be used depending upon the active application.
- You can interrupt the system prompts at any time by pressing the Uconnect® Voice Command button while the system is speaking. After the beep, you can say a command.
- You can chain commands together for faster results. Say “Call Joe Doe mobile”, for example.

# ELECTRONICS



- For best performance, adjust the rearview mirror to provide at least ½ in (1 cm) gap between the overhead console (if equipped) and the mirror.
- Always wait for the beep before speaking.
- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.
- Make sure that no one other than you is speaking during a Voice Command period.

## Steering Wheel Buttons

- You can control many of your radio features using your voice. Press either the VR (VR) or Phone Pick Up (Phone) button on your steering wheel.



Steering Wheel Buttons

	Steering Wheel Buttons to Press:	Radio Mode	Media Mode	Phone Mode
Types of Voice Commands Available	 Uconnect® Voice Command (VR) Button	AM/FM & Satellite Band Control	Media Devices Control	-
	 Uconnect® Phone Pick Up Button	-	-	Call Initiation, Call Management, Pre-defined Voice Text Reply
<b>GENERAL</b>				



## Voice Command Examples - Uconnect® 5.0

While In:	Voice Command Example:
<b>GENERAL</b>	
<b>Anytime</b>	"Go to Radio" (Media, Phone) - Compass, Settings, and More functions are not Voice Command accessible "Cancel" "Help" (to listen to suggested commands specific to current need) "Repeat"
<b>RADIO</b>	
<b>AM/FM</b>	"Tune to AM950", "Tune to 95.5FM (preset 5)"
<b>Satellite Band Control</b>	"Tune to Satellite Channel 80's on 8", Tune to Satellite Channel 32 (preset 4)"
<b>MEDIA</b>	
<b>Media Devices Control</b> (Functionality is dependent on compatibility between devices and radio)	"Browse" (show) "artist" (albums, music) "Show paired phones" (devices) "Play song - Maple Leaf Rag" (artist - Scott Joplin, genre - rock, album - Ragtime Favorites)
<b>PHONE</b>	
<b>Call Initiation</b> (Requires that phone has been Bluetooth® paired with radio)	"Dial 123-456-7890" (phone number) "Call John Smith mobile" (home, office, other) "Redial" "Show outgoing" (recent) "calls"
<b>Call Management</b>	"Search for John Smith" (any contact name in address book) "Show (display list) contacts"
<b>Voice Text Reply</b> (Radio audibly recognizes these 18 pre-defined SMS messages as you speak). <b>NOTE:</b> Requires a compatible mobile device enabled with Bluetooth® Message Access Profile (MAP). iPhone® and some other smartphones do not currently support Bluetooth® MAP. Visit <a href="http://www.UconnectPhone.com">www.UconnectPhone.com</a> for system and device compatibility.	Forward one of 18 pre-defined SMS messages to incoming calls/text messages: "Yes." "No." "Okay." "I can't talk right now." "Call me." "I'll call you later." "I'm on my way." "Thanks." "I'll be late." "I will be <number> minutes late." "See you in <number> minutes." "Stuck in traffic." "Start without me." "Where are you?" "Are you there yet?" "I need directions." "I'm lost." "See you later."

## Uconnect® 8.4A

### Uconnect® 8.4A AT A GLANCE



### Uconnect® 8.4A

#### Displaying The Time

- If the time is not currently displayed on the radio or player main page, touch the “Settings” soft-key (if equipped), or the “Apps” or “Controls” soft-key and then the “Settings” soft-key. In the Settings list, touch the “Clock” soft-key then touch the check box next to “Show Time” in Status Bar.

#### Setting The Time

- Model 8.4AN synchronizes time automatically via GPS, so it should not require any time adjustment. If you do need to set the time manually, follow the instructions below for Model 8.4A.
- For Model 8.4A, turn the unit on, then touch the “time display” at the top of the screen. Touch “Yes”.
- If the time is not displayed at the top of the screen, touch the “Settings” soft-key (if equipped), or the “Apps” or “Controls” soft-key and then the “Settings” soft-key. In the Settings screen, touch the “Clock” soft-key, then check or uncheck this option.
- Touch + or - next to Set Time Hours and Set Time Minutes to adjust the time.
- If these features are not available, uncheck the Sync with GPS box.
- Touch X to save your settings and exit out of the Clock Setting screen.

## **Audio Settings**

- Touch of the “Audio” soft-key to activate the Audio settings screen to adjust Balance\Fade, Equalizer, and Speed Adjusted Volume.
- You can return to the Radio screen by touching the X located at the top right.

## **Balance/Fade**

- Touch the “Balance/Fade” soft-key to Balance audio between the front speakers or fade the audio between the rear and front speakers.
- Touching the “Front, Rear, Left, or Right” soft-keys or touch and drag the Speaker Icon to adjust the Balance/Fade.

## **Equalizer**

- Touch the “Equalizer” soft-key to activate the Equalizer screen.
- Touch the + or - soft-keys, or by touching and dragging over the level bar for each of the equalizer bands. The level value, which spans between plus or minus 9, is displayed at the bottom of each of the Bands.

## **Speed Adjusted Volume**

- Touch the “Speed Adjusted Volume” soft-key to activate the Speed Adjusted Volume screen. The Speed Adjusted Volume is adjusted by touching the + and - buttons or by touching and dragging over the level bar. This alters the automatic adjustment of the audio volume with variation to vehicle speed.

## **Surround Sound**

- Touch the “Surround Sound” soft-key, select On or Off followed by pressing the “arrow back” soft-key. When this feature is activated, it provides simulated surround sound mode.

## RADIO



### Uconnect® 8.4A Radio

- To access the Radio mode, touch the Radio soft-key at the lower left of the screen.

#### Selecting Radio Stations

- Touch the desired radio band (AM, FM or SXM) soft-key.

#### Seek Up/Seek Down

- Touch the Seek arrow soft-keys for less than two seconds to seek through radio stations.
- Touch and hold either arrow soft-key for more than two seconds to bypass stations without stopping. The radio will stop at the next listenable station once the arrow soft-key is released.

#### Direct Tune

- Tune directly to a radio station by pressing the "Tune" button on the screen, and entering the desired station number.

#### Store Radio Presets

- Your radio can store 36 total preset stations, 12 presets per band (AM, FM and SXM). They are shown at the top of your radio screen. To see the 12 preset stations per band, press the arrow soft-key at the top right of the screen to toggle between the two sets of six presets.
- To set a station into memory press and hold the desired numbered soft-key for more than two seconds or until you hear a confirmation beep.

## SiriusXM PREMIER OVER 160 CHANNELS

- Get every channel available on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio<sup>®</sup>, every MLB<sup>®</sup> and NHL<sup>®</sup> game, every NASCAR<sup>®</sup> race, Martha Stewart and more. And get 20+ extra channels, including SiriusXM Latino, offering 20 channels of commercial free music, news, talk, comedy, sports and more dedicated to Spanish language programming.
- To access SiriusXM Satellite Radio, touch the “SXM” soft-key on the main Radio screen.
- The following describes features that are available when in SiriusXM Satellite Radio mode.

### Seek Up/Seek Down

- Touch the “Seek” arrow soft-keys for less than two seconds to seek through channels in SXM mode.
- Touch and hold either “arrow” soft-key for more than two seconds to bypass channels without stopping. The radio will stop at the next listenable channel once the “arrow” soft-key is released.

### Direct Tune

- Tune directly to a SXM channel by pressing the “Tune” soft-key on the screen, and entering the desired station number.

### Jump

- Automatically tells you when Traffic & Weather for a favorite city is available, and gives you the option to switch to that channel. Touch “Jump” to activate the feature. After listening to Traffic and Weather, touch “Jump” again to return to the previous channel.

### Fav

- Activates the favorites menu. You can add up to 50 favorite artists or songs. Just touch “Add Fav Artist” or “Add Fav Song” while the song is playing. You will then be alerted any time one of these songs, or works by these artists, is playing on other SiriusXM channels.

### SiriusXM Parental Controls

- You can skip or hide certain channels from view if you do not want access to them. Touch the “More” soft-key, then the “Settings” soft-key, next touch the “Sirius Setup” soft-key, then select “Channel Skip”. Touch the box, check-mark, next to the channel you want skipped. They will not show up in normal usage.
- SiriusXM also offers the option to permanently block selected channels. Call [1-888-601-6297 for U.S. customers, 1-877-438-9677 for Canadian customers] and request the Family - Friendly Package.

### Browse

- Lets you browse the SiriusXM channel listing or Genre listing. Favorites, Game Zone, Weather and Jump settings also provide a way to browse the SiriusXM channel list.

# ELECTRONICS

Browse Sub-Menu	Sub-Menu Description
All	Shows the channel listing.
Genre	Provides a list of all genres, and lets you jump to a channel within the selected genre.
Presets	Lets you scroll the list of Preset satellite channels. Touch the channel, or press Enter on the Tune knob, to go to that channel. Touch the trash can icon to delete a preset. Your presets are also shown at the top of the main Satellite Radio screen.
Favorites	Lets you manage artists and songs in the Favorites list and configure Alert Settings to let you know when favorite songs or artists are playing on other channels. Also, view a list of channels airing any of your Favorites.
Game Zone	Provides alerts when your favorite sports teams are starting a game which is being aired on other SiriusXM channels, or when their game score is announced. You can select and manage your Teams list here, and configure alerts.
Jump	Lets you select your favorite cities for Traffic & Weather information, which is used by the Jump feature on the main satellite radio screen.

## Replay

- Lets you replay up to 44 minutes of the content of the current SiriusXM channel.

Replay Option	Option Description
Play/Pause	Touch to Pause content playback. Touch Pause/Play again to resume playback.
Rewind/RW	Rewinds the channel content in steps of five seconds. Touch and hold to rewind continuously, then release to begin playing content at that point.
Fast Forward/FW	Forwards the content, and works similarly to Rewind/RW. However, Fast Forward/FW can only be used when content has been previously rewound.
Replay Time	Displays the amount of time in the upper center of the screen by which your content lags the Live channel.
Live	Resumes playback of Live content at any time while replaying rewound content.

- SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 for U.S. residents and 1-888-539-7474 for Canadian residents to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com) for U.S. residents and [www.siriusxm.ca](http://www.siriusxm.ca) for Canadian residents.** All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. ©2014 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

## Disc Operation

- Your vehicle may have a remote CD player located in the lower center console storage bin.
- CD/Disc Mode is entered by either inserting a CD/Disc or by touching the “Media” button located on the side of the display. Once in Media Mode, select “Disc”.
- Gently insert one CD into the CD player with the CD label facing as indicated on the illustration located on the Disc player.

## Seek Up/Down Buttons

- Press to seek through Disc tracks.
- Hold either button to bypass tracks without stopping.

## Browse

- Touch the “Browse” soft-key to scroll through and select a desired track on the Disc. Touch the “Exit” soft-key if you wish to cancel the browse function.

## MEDIA HUB – PLAYING iPod®/USB/MP3 DEVICES

- There are many ways to play music from iPod®/MP3 players or USB devices through your vehicle's sound system.

### Audio Jack (AUX)

- The AUX allows a portable device, such as an MP3 player or an iPod®, to be plugged into the radio and utilize the vehicle's sound system, using a 3.5 mm audio cable, to amplify the source and play through the vehicle speakers.
- Touching the Media soft-key then choose AUX source will change the mode to auxiliary device if the audio jack is connected, allowing the music from your portable device to be heard through the vehicle's speakers. In order to activate the AUX, plug in the audio jack.
- The functions of the portable device are controlled using the device buttons. The volume may be controlled using the radio or portable device.
- To route the audio cable out of the center console, use the access cut out in the front of the console.

### USB Port

- Connect your iPod® or compatible device using a USB cable into the USB Port. USB Memory sticks with audio files can also be used. Then, audio from the device can be played on the vehicle's sound system while providing metadata (artist, track title, album, etc.) information on the radio display.
- When connected, the iPod®/compatible USB device can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.
- The iPod® battery charges when plugged into the USB port (if supported by the specific device).
- To route the USB/iPod® cable out of the center console, use the access cut out.

# ELECTRONICS

## NOTE:

- When connecting your iPod® device for the first time, the system may take several minutes to read your music, depending on the number of files. For example, the system will take approximately five minutes for every 1000 songs loaded on the device. Also during the reading process, the Shuffle and Browse functions will be disabled. This process is needed to ensure the full use of your iPod® features and only happens the first time it is connected. After the first time, the reading process of your iPod® will take considerably less time unless changes are made or new songs are added to the playlist.
- The USB port supports certain Mini, Classic, Nano, Touch, and iPhone® devices. The USB port also supports playing music from compatible external USB Mass Storage Class memory devices. Some iPod® software versions may not fully support the USB port features. Please visit Apple's website for iPod® software updates.

## SD Card

- Play songs stored on an SD card inserted into the SD card slot.
- Song playback can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.

## Bluetooth® Streaming Audio

- If equipped with Uconnect® Voice Command, your Bluetooth®-equipped iPod® devices, cell phones or other media players, may also be able to stream music to your vehicle's sound system. Your connected device must be Bluetooth®-compatible, and paired with your system (see Uconnect® Phone for pairing instructions). You can access the music from your connected Bluetooth® device by touching the Bluetooth® soft-key while in Media mode.


Uconnect® 8.4A & 8.4AN	Media Hub (USB, AUX Ports)	Media Hub (SD, USB, AUX Ports)	Remote USB Port (Fully Functional)	Remote USB Port (Charg- ing Only)	Dual Charg- ing Ports
	-	S	S	O	O

S = Standard Equipment

O = Optional Equipment



## iPod®/CD/AUX CONTROLS

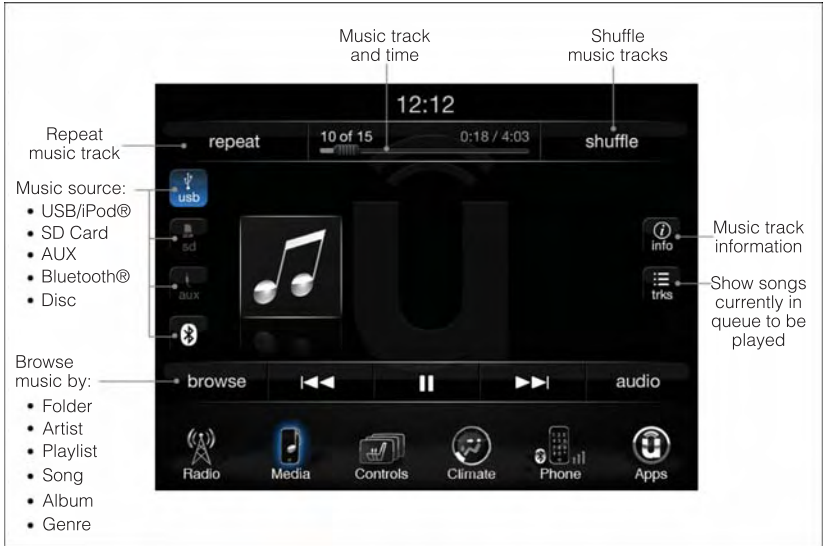

## iPod®/CD/AUX Controls

- The iPod®/CD/AUX controls are accessed by touching the desired soft-key displayed on the side of the screen and choose between Disc, AUX, iPod®, Bluetooth® or SD Card.

**NOTE:**

Uconnect® will usually automatically switch to the appropriate mode when something is first connected or inserted into the system.

**NAVIGATION (DEALER-ACTIVATED OPTION)**

- Your Uconnect® 8.4A is "Navigation-Ready", and can be equipped with Navigation at an extra cost. See your dealer for details.
- The information in this section is only applicable if the feature has been equipped. If equipped, you will see a Nav soft-key at the bottom of the touchscreen.

**Changing The Navigation Voice Prompt Volume**

1. Touch the "Settings" soft-key.
2. In the Settings menu, touch the "Guidance" soft-key.
3. In the Guidance menu, adjust the Nav Volume by touching the + or - Nav Volume Adjustment soft-keys.



**Navigation Main**

## Finding Points Of Interest (POI)

- From the main Navigation menu, touch the Where To? soft-key, then touch the Points of Interest soft-key.
- Select a Category and then a subcategory, if necessary.
- Select your destination and touch the Yes soft-key.

## Finding A Place By Spelling The Name

- From the Main Navigation Menu touch the “Where to?” soft-key, touch the “Points of Interest” soft-key and then touch the “Spell” Name soft-key.
- Enter the name of your destination.
- Touch the “List” soft-key.
- Select your destination and touch the “Yes” soft-key.

## Entering A Destination Address

- From the main Navigation menu touch the “Where To?” soft-key, then touch the “Address” soft-key.
- Follow the on-screen prompts [country, state/province, city, street] to enter the address and touch the “Yes” soft-key.
- Destination entry is not available while your vehicle is in motion. However, you can also use Voice Command to enter an address while moving. See Voice Command Tips for more information.

### Setting Your Home Location

- Touch the “NAV” soft-key in the menu bar to access the Navigation system and the Main Navigation menu.
- Touch the “Where To?” soft-key, then touch the “Go Home” soft-key.
- You may enter your address directly, use your current location as your home address, or choose from recently found locations.
- To delete your Home location (or other saved locations) so you can save a new Home location, touch the “Where To?” soft-key from the Main Navigation menu, then touch the “Go Home” soft-key, and in the Yes screen touch the “Options” soft-key. In the Options menu touch “Clear Home”. Set a new Home location by following the previous instructions.

### Go Home

- A Home location must be saved in the system. From the Main Navigation menu, touch the “Where To?” soft-key, then touch the “Go Home” soft-key.



### Navigation

- Your route is marked with a blue line on the map. If you depart from the original route, your route is recalculated. A speed limit icon could appear as you travel on major roadways.

### Adding A Stop

- To add a stop you must be navigating a route.
- Touch the “Menu” soft-key to return to the Main Navigation menu.

# ELECTRONICS

- Touch the “Where To?” soft-key, then search for the extra stop. When another location has been selected, you can choose to cancel your previous route, add as the first destination or add as the last destination.
- Touch the desired selection and touch the “Yes” soft-key.

## Taking A Detour


- To take a detour you must be navigating a route.
- Touch the “Detour” soft-key.

### NOTE:

If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

- For more information, see your Uconnect® Supplement Manual.

## Uconnect® Phone (Bluetooth® Hands Free Calling)

- If the Uconnect® Phone Button  exists on your steering wheel, then you have the Uconnect® Phone features.
- The Uconnect® Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).
- The Uconnect® Phone allows you to dial a phone number with your mobile phone using simple voice commands or using button on the touchscreen.
- Refer to the Understand The Features Of Your Vehicle section of your vehicle's Owner's Manual on the DVD for further details.

### NOTE:

The Uconnect® Phone requires a mobile phone equipped with the Bluetooth® Hands-Free Profile, Version 1.0 or higher. For Uconnect® Customer Support:

- U.S. residents visit [www.UconnectPhone.com](http://www.UconnectPhone.com) or call 1-877-855-8400.
- Canadian Residents visit [www.UconnectPhone.com](http://www.UconnectPhone.com) or call, 1-800-465-2001 (English) or 1-800-387-9983 (French).

## Pairing A Phone

- To use the Uconnect® Phone feature, you must first pair your Bluetooth® phone with the Uconnect® system.

### Start Pairing Procedure On The Radio

- Press the “Phone” button on the touchscreen, then press the “Settings” button on the touchscreen. Next, press “Add Device.”
- Uconnect® Phone will display an “In progress” screen while the system is connecting.

### Start Pairing Procedure On Mobile Phone

- Search for available devices on your Bluetooth® enabled mobile phone. This is usually within Settings or Options under “Bluetooth.” See your mobile phone's manual for details.

- When your phone finds the system, select “Uconnect” as the paired device. You may be prompted by your phone to download the phonebook. This is so you can make calls by saying the name of your contact (PBAP-Phone Book Access Profile).


## Complete The Pairing Procedure

- When prompted on the phone, verify with radio password shown on the Uconnect® Screen.
- If your phone asks you to accept a connection request from Uconnect®, select “Yes.” If available, check the box telling it not to ask again – that way your phone will automatically connect each time you start the vehicle.

## Select The Mobile Phone's Priority Level

- When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting “Yes” will make this phone the highest priority. This phone will take precedence over other paired phones within range. Only one phone can be paired at a time.
- You are now ready to make hands-free calls. Press the “Uconnect® Phone” button on your steering wheel to begin.



## Making A Phone Call

- Press the Uconnect® Phone button .
- After the BEEP, say “dial” then the number (or “call” then the name as listed in your phone; see Phonebook).

### NOTE:

You can also initiate a call by using the touchscreen on the Phone main screen.

## Receiving A Call – Accept (And End)

- When an incoming call rings/is announced on Uconnect®, press the Phone button .
- To end a call, press the Hang Up or Phone button .

## Mute (Or Unmute) Microphone During Call

- During a call, press the “Mute” button on the touchscreen on the Phone main screen to mute and unmute the call.

## Transfer Ongoing Call Between Handset And Vehicle

- During an on-going call, touch the “Transfer” soft-key on the Phone main screen to transfer an on-going call between handset and vehicle.


## Common Phone Commands (Examples)

- "Call John Smith"
- "Call John Smith mobile"
- "Dial 1 248 555 1212"
- "Call Emergency"
- "Call Towing Assistance"
- "Redial"


## Phonebook

- Uconnect<sup>®</sup> radios automatically downloads your phonebook from your paired phone, if this feature is supported by your phone. Entries are updated each time that the phone is connected. If your phone book entries do not appear, check the settings on your phone. Some phones require you to enable this feature manually.
- Your phonebook can be browsed on your radio screen, but editing can only be done on your phone. To browse, touch the "Phone" soft-key, then the "Phonebook" soft-key.
- Favorite phonebook entries can be saved as Favorites for quicker access. Favorites are shown at the top of your main phone screen.




## Voice Command Tips

- Using complete names (i.e; Call John Doe vs. Call John) will result in greater system accuracy.
- You can "chain" commands together for faster results. Say "Call John Doe, mobile", for example.
- If you are listening to available voice command options, you do not have to listen to the entire list. When you hear the command that you need, press the  button on the steering wheel, wait for the beep and say your command.


## Changing The Volume

- Start a dialogue by pressing the Phone button , then say a command for example - "Help".
- Use the radio ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect<sup>®</sup> system is speaking. Please note the volume setting for Uconnect<sup>®</sup> is different than the audio system.

**NOTE:**

To access help, press the Uconnect® Phone  button on the steering wheel and say "help." Touch the display or push either  or  button and say "cancel" to cancel the help session.

**Voice Text Reply (Not Compatible With iPhone®)**


- Once your Uconnect® system is paired with a compatible mobile device, the system can announce a new incoming text message, and read it to you over the vehicle audio system. You can reply to the message using Voice Recognition, by selecting, or saying one of the 18 pre-defined messages.
- Here's How:** Press the Uconnect® Phone button  and wait for the beep, then say "reply." Uconnect® will give the following prompt: "Please say the message you would like to send." Wait for the beep and say one of the pre-defined messages. (If you are not sure, you can say "help"). Uconnect® will then read the pre-defined messages allowed. As soon as you hear the message you would like to send, you can interrupt the list of prompts by pressing the Uconnect® phone button and saying the phrase. Uconnect® will confirm the message by reading it back to you. Then press the Phone button and say "Send."

**PRE-DEFINED VOICE TEXT REPLY RESPONSES**



Yes.	Stuck in Traffic.	See you later.
No.	Start without me.	I'll be Late.
Okay.	Where are you?	I will be <number> minutes late.
Call me.	Are you there yet?	
I'll call you later.	I need directions.	See you in <number> of minutes.
I'm on my way.	Can't talk right now.	Thanks.
I'm lost.		

- Voice texting reply and voice texting features require a compatible mobile device enabled with Bluetooth® Message Access Profile (MAP). iPhone® and some other smartphones do not currently support Bluetooth® MAP. Visit [www.UconnectPhone.com](http://www.UconnectPhone.com) for system and device compatibility.
- Want to dictate a personal message? You must first register with Uconnect® Access (U.S. residents only) to take advantage of a new, cloud-based Voice Texting service, an enhancement to Voice Text Reply.




**VOICE COMMAND QUICK REFERENCE****Uconnect® 8.4A Voice Command Quick Reference**

- If the Uconnect® Voice Command  button exists on your steering wheel, you have the Voice Command feature, which is optimized for the driver. The Voice Command feature lets you keep your hands on the wheel, and your eyes on the road.

# ELECTRONICS

- When you press the Voice Command  button located on the steering wheel, you will hear a beep. After the beep, give your command. If you do not know what commands to say, you can say “help” and the system will provide options to you. If you ever wish to interrupt the system while it lists options, press the Voice Command  button, after the beep, say your command.



## NOTE:


All phone oriented voice commands are accessible by first pressing the Phone Pick Up  button, not the Voice Command button. To end a call, simply press the Phone Hang Up  button. In some vehicles, the Phone Pickup  button serves the dual purpose of ending calls as well.

## Voice Command (VR) User TIPS

- To hear available commands, press the Uconnect® Voice Command button and say “Help.” You will hear available commands for the menu displayed.
- At any time, you can say the words “Cancel” or “Help”. These commands are universal and can be used from virtually any menu. All other specific commands can be used depending upon the active application.
- You can interrupt the system prompts at any time by pressing the Uconnect® Voice Command button while the system is speaking. After the beep, you can say a command.
- You can chain commands together for faster results. Say “Call Joe Doe mobile,” for example.
- For best performance, adjust the rearview mirror to provide at least ½ inch (1 cm) gap between the overhead console (if equipped) and the mirror.
- Always wait for the beep before speaking.
- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.
- Make sure that no one other than you is speaking during a Voice Command period.



## Steering Wheel Buttons

- You can control many of your radio features using your voice. Press either the VR  or Phone Pick Up  button on your steering wheel.

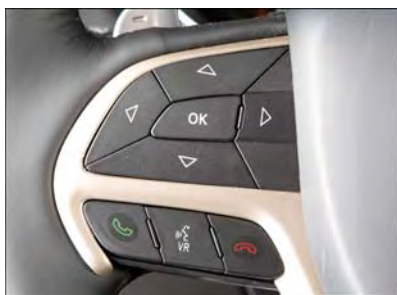

Steering Wheel Buttons



	Steering Wheel Buttons to Press:	Radio Mode	Media Mode	Climate Controls	Navigation	Phone Mode	APPS
Types of Voice Commands Available	 Uconnect® Voice Command (VR) Button	AM/FM & Satellite Band Control	Media Devices Control	Temperature Control	Destination Selection and View	-	Yelp®
	<b>GENERAL</b>						
	 Uconnect® Phone Pick Up Button	-	-	-	-	Call Initiation, Call Management, Pre-defined Voice Text Reply	-

## Voice Command Examples - Uconnect® 8.4A

While In:	Voice Command Example:
<b>GENERAL</b>	
Anytime	"Go to Radio" (Media, Climate, Navigation, Phone, Apps) - Settings, and Controls are not Voice Command accessible "Cancel" "Help" (to listen to suggested commands specific to current need) "Repeat" "Launch Yelp®" - Required 1st voice command to launch Yelp® app "Yelp® Search" - Required 2nd voice command to activate app functionality using Steering Wheel Voice Control Button "Hotel" (Restaurant, Gas Station, Hospital) - for nearest desired general POI
<b>RADIO</b>	
AM/FM	"Tune to AM950", "Tune to 95.5FM (preset 5)
Satellite Band Control	"Tune to Satellite Channel 80's on 8," Tune to Satellite Channel 32 (preset 4)
<b>MEDIA</b>	
Media Devices Control (Functionality is dependent on compatibility between devices and radio)	"Browse" (show) "artist" (albums, music) "Show paired phones" (devices) "Play song - Maple Leaf Rag" (artist - Scott Joplin, genre - rock, album - Ragtime Favorites) "Shuffle" - available with iPod, USB and SD Card

While In:	Voice Command Example:
<b>CLIMATE</b>	
<b>Temperature Control</b>	"Set temperature to 70 degrees" - single climate zone vehicles
	"Set driver" (passenger) "temperature to 75 degrees" - dual climate zone vehicles
<b>NAVIGATION</b>	
<b>Destination Selection &amp; View</b>	"Go Home" - destination previously defined by driver
	"Repeat guidance" - hear the last navigation prompt
	"Cancel Route"
	"View Map"
<b>PHONE</b>	
<b>Call Initiation</b> (Requires that phone has been Bluetooth® paired with radio)	"Dial 123-456-7890" (phone number)
	"Call John Smith mobile" (home, office, other)
	"Redial"
	"Show outgoing" (recent) "calls"
<b>Call Management</b>	"Search for John Smith" (any contact name in address book) "Show (display list) contacts"
<b>Voice Texting</b> (Requires registration with Uconnect® Access and a current subscription.) <b>NOTE:</b> Requires a compatible mobile device enabled with Bluetooth® Message Access Profile (MAP). iPhone® and some other smartphones do not currently support Bluetooth® MAP. Visit <a href="http://www.UconnectPhone.com">www.UconnectPhone.com</a> for system and device compatibility.	Create a text message using Voice Command Capability "Send a message to John Smith (123-456-7890)" "Show Messages" "Listen to" (view) "number 4" "Reply" "Forward text" (message) "to John Smith" (phone type, number)

While In:	Voice Command Example:
<p><b>Voice Text Reply</b> (Radio audibly recognizes these 18 pre-defined SMS messages as you speak)</p> <p><b>NOTE:</b> Requires a compatible mobile device enabled with Bluetooth Message Access Profile (MAP). iPhone® and some other smartphones do not currently support Bluetooth® MAP. Visit <a href="http://www.UconnectPhone.com">www.UconnectPhone.com</a> for system and device compatibility.</p>	<p>Forward one of 18 pre-defined SMS messages to incoming calls/text messages:</p> <p>“Yes.”  “No.”  “Okay.”  “I can’t talk right now.”  “Call me.”  “I’ll call you later.”  “I’m on my way.”  “Thanks.”  “I’ll be late.”  “I will be &lt;number&gt; minutes late.”  “See you in &lt;number&gt; minutes.”  “Stuck in traffic.”  “Start without me.”  “Where are you?”  “Are you there yet?”  “I need directions.”  “I’m lost.”  “See you later.”</p>
<b>APPS</b>	
<p><b>Yelp®</b> (Yelp® adds it's own audible prompts, and response time varies depending on carrier coverage speed)</p>	<p>“Launch Yelp®” – Required 1st voice command to launch Yelp® app  “Yelp® Search” – Required 2nd voice command to activate app functionality using Steering Wheel Voice Control Button  “Hotel” (Restaurant, Gas Station, Hospital) – for nearest desired general POI</p>

## Uconnect® 8.4AN

### Uconnect® 8.4AN AT A GLANCE



### Uconnect® 8.4AN

#### Displaying The Time

- If the time is not currently displayed on the radio or player main page, touch the "Settings" soft-key (if equipped), or the "Apps" or "Controls" soft-key and then the "Settings" soft-key. In the Settings list, touch the "Clock" soft-key then touch the check box next to "Show Time" in Status Bar.

#### Setting The Time

- Model 8.4AN synchronizes time automatically via GPS, so it should not require any time adjustment. If you do need to set the time manually, follow the instructions below for Model 8.4A.
- For Model 8.4A, turn the unit on, then touch the "Time" display at the top of the screen. Touch "Yes".
- If the time is not displayed at the top of the screen, touch the "Settings" soft-key (if equipped), or the "Apps" or "Controls" soft-key and then the "Settings" soft-key. In the Settings screen, touch the "Clock" soft-key, then check or uncheck this option.
- Touch + or - next to Set Time Hours and Set Time Minutes to adjust the time.
- If these features are not available, uncheck the Sync Time box.
- Touch X to save your settings and exit out of the Clock Setting screen.

## Audio Settings

- Touch the “Audio” soft-key to activate the Audio settings screen to adjust Balance\Fade, Equalizer and Speed Adjusted Volume.
- You can return to the Radio screen by touching the X located at the top right.

## Balance/Fade

- Touch the “Balance/Fade” soft-key to balance audio between the front speakers or fade the audio between the rear and front speakers.
- Touching the “Front, Rear, Left, or Right” soft-keys or touch and drag the blue Speaker Icon to adjust the Balance/Fade.

## Equalizer

- Touch the “Equalizer” soft-key to activate the Equalizer screen.
- Touch the + or - soft-keys, or by touching and dragging over the level bar for each of the equalizer bands. The level value, which spans between plus or minus 9, is displayed at the bottom of each of the Bands.

## Speed Adjusted Volume

- Touch the “Speed Adjusted Volume” soft-key to activate the Speed Adjusted Volume screen. The Speed Adjusted Volume is adjusted by touching the volume level indicator. This alters the automatic adjustment of the audio volume with variation to vehicle speed.

## Surround Sound

- Touch the “Surround Sound” soft-key, select On or Off followed by pressing the “arrow back” soft-key. When this feature is activated, it provides simulated surround sound mode.

## RADIO



### Uconnect® 8.4AN Radio

- To access the Radio mode, touch the “Radio” soft-key at the lower left of the screen.

#### Selecting Radio Stations

- Touch the desired radio band (AM, FM or SXM) soft-key.

#### Seek Up/Seek Down

- Touch the “Seek” arrow soft-keys for less than two seconds to seek through radio stations.
- Touch and hold either arrow soft-key for more than two seconds to bypass stations without stopping. The radio will stop at the next listenable station once the arrow soft-key is released.

#### Direct Tune

- Tune directly to a radio station by pressing the “Tune” button on the screen, and entering the desired station number.

#### Store Radio Presets

- Your radio can store 36 total preset stations, 12 presets per band (AM, FM and SXM). They are shown at the top of your radio screen. To see the 12 preset stations per band, press the arrow soft-key at the top right of the screen to toggle between the two sets of six presets.

- To set a station into memory press and hold the desired numbered soft-key for more than two seconds or until you hear a confirmation beep.

## **HD Radio**

- HD Radio technology (available on Uconnect<sup>®</sup> 8.4AN) allows broadcasters to transmit a high-quality digital signal.
- With an HD radio receiver, the listener is provided with a clear sound that enhances the listening experience. HD radio can also transmit data such as song title or artist.

## **SiriusXM PREMIER OVER 160 CHANNELS**

- Get every channel available on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio<sup>®</sup>, every MLB<sup>®</sup> and NHL<sup>®</sup> game, every NASCAR<sup>®</sup> race, Martha Stewart and more. And get 20+ extra channels, including SiriusXM Latino, offering 20 channels of commercial free music, news, talk, comedy, sports and more dedicated to Spanish language programming.
- To access SiriusXM Satellite Radio, touch the “SXM” soft-key on the main Radio screen.
- The following describes features that are available when in SiriusXM Satellite Radio mode.

## **Seek Up/Seek Down**

- Touch the “Seek” arrow soft-keys for less than two seconds to seek through channels in SXM mode.
- Touch and hold either “arrow” soft-key for more than two seconds to bypass channels without stopping. The radio will stop at the next listenable channel once the “arrow” soft-key is released.

## **Direct Tune**

- Tune directly to a SXM channel by pressing the “Tune” soft-key on the screen, and entering the desired station number.

## **Jump**

- Automatically tells you when Traffic & Weather for a favorite city is available, and gives you the option to switch to that channel. Touch “Jump” to activate the feature. After listening to Traffic and Weather, touch “Jump” again to return to the previous channel.

## **Fav**

- Activates the favorites menu. You can add up to 50 favorite artists or songs. Just touch “Add Fav Artist” or “Add Fav Song” while the song is playing. You will then be alerted any time one of these songs, or works by these artists, is playing on other SiriusXM channels.

# ELECTRONICS

## SiriusXM Parental Controls

- You can skip or hide certain channels from view if you do not want access to them. Touch the “More” soft-key, then the “Settings” soft-key, next touch the “Sirius Setup” soft-key, then select “Channel Skip”. Touch the box, check-mark, next to the channel you want skipped. They will not show up in normal usage.
- SiriusXM also offers the option to permanently block selected channels. Call [1-888-601-6297 for U.S. customers, 1-877-438-9677 for Canadian customers] and request the Family - Friendly Package.

## Browse

- Lets you browse the SiriusXM channel listing or Genre listing. Favorites, Game Zone, Weather and Jump settings also provide a way to browse the SiriusXM channel list.

Browse Sub-Menu	Sub-Menu Description
All	Shows the channel listing.
Genre	Provides a list of all genres, and lets you jump to a channel within the selected genre.
Presets	Lets you scroll the list of Preset satellite channels. Touch the channel, or press Enter on the Tune knob, to go to that channel. Touch the trash can icon to delete a preset. Your presets are also shown at the top of the main Satellite Radio screen.
Favorites	Lets you manage artists and songs in the Favorites list and configure Alert Settings to let you know when favorite songs or artists are playing on other channels. Also, view a list of channels airing any of your Favorites.
Game Zone	Provides alerts when your favorite sports teams are starting a game which is being aired on other SiriusXM channels, or when their game score is announced. You can select and manage your Teams list here, and configure alerts.
Jump	Lets you select your favorite cities for Traffic & Weather information, which is used by the Jump feature on the main satellite radio screen.

## Replay

- Lets you replay up to 44 minutes of the content of the current SiriusXM channel.

Replay Option	Option Description
Play/Pause	Touch to Pause content playback. Touch Pause/Play again to resume playback.
Rewind/RW	Rewinds the channel content in steps of five seconds. Touch and hold to rewind continuously, then release to begin playing content at that point.
Fast Forward/FW	Forwards the content, and works similarly to Rewind/RW. However, Fast Forward/FW can only be used when content has been previously rewind.
Replay Time	Displays the amount of time in the upper center of the screen by which your content lags the Live channel.
Live	Resumes playback of Live content at any time while replaying rewind content.



- SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 for U.S. residents and 1-888-539-7474 for Canadian residents to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com) for U.S. residents and [www.siriusxm.ca](http://www.siriusxm.ca) for Canadian residents.** All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. ©2014 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

## Disc Operation

- Your vehicle may have a remote CD player located in the lower center console storage bin.
- CD/Disc Mode is entered by either inserting a CD/Disc or by touching the “Media” button located on the side of the display. Once in Media Mode, select “Disc”.
- Gently insert one CD into the CD player with the CD label facing as indicated on the illustration located on the Disc player.

## Seek Up/Down Buttons

- Press to seek through Disc tracks.
- Hold either button to bypass tracks without stopping.

## Browse

- Touch the “Browse” soft-key to scroll through and select a desired track on the Disc. Touch the “Exit” soft-key if you wish to cancel the browse function.

## MEDIA HUB – PLAYING iPod®/USB/MP3 DEVICES

- There are many ways to play music from iPod®/MP3 players or USB devices through your vehicle's sound system.

## Audio Jack [AUX]

- The AUX allows a portable device, such as an MP3 player or an iPod®, to be plugged into the radio and utilize the vehicle's sound system, using a 3.5 mm audio cable, to amplify the source and play through the vehicle speakers.
- Touching the Media soft-key then choose AUX source will change the mode to auxiliary device if the audio jack is connected, allowing the music from your portable device to be heard through the vehicle's speakers. In order to activate the AUX, plug in the audio jack.
- The functions of the portable device are controlled using the device buttons. The volume may be controlled using the radio or portable device.
- To route the audio cable out of the center console, use the access cut out in the front of the console.

# ELECTRONICS

## USB Port

- Connect your iPod® or compatible device using a USB cable into the USB Port. USB Memory sticks with audio files can also be used. Then, audio from the device can be played on the vehicle's sound system while providing metadata (artist, track title, album, etc.) information on the radio display.
- When connected, the iPod®/compatible USB device can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.
- The iPod® battery charges when plugged into the USB port (if supported by the specific device).
- To route the USB/iPod® cable out of the center console, use the access cut out.

## NOTE:

- When connecting your iPod® device for the first time, the system may take several minutes to read your music, depending on the number of files. For example, the system will take approximately five minutes for every 1000 songs loaded on the device. Also during the reading process, the Shuffle and Browse functions will be disabled. This process is needed to ensure the full use of your iPod® features and only happens the first time it is connected. After the first time, the reading process of your iPod® will take considerably less time unless changes are made or new songs are added to the playlist.
- The USB port supports certain Mini, Classic, Nano, Touch, and iPhone® devices. The USB port also supports playing music from compatible external USB Mass Storage Class memory devices. Some iPod® software versions may not fully support the USB port features. Please visit Apple's website for iPod® software updates.

## SD Card

- Play songs stored on an SD card inserted into the SD card slot.
- Song playback can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.

## Bluetooth® Streaming Audio


- If equipped with Uconnect® Voice Command, your Bluetooth®-equipped iPod® devices, cell phones or other media players, may also be able to stream music to your vehicle's sound system. Your connected device must be Bluetooth®-compatible, and paired with your system (see Uconnect® Phone for pairing instructions). You can access the music from your connected Bluetooth® device by touching the Bluetooth® soft-key while in Media mode.

Uconnect® 8.4A & 8.4AN	Media Hub (USB, AUX Ports)	Media Hub (SD, USB, AUX Ports)	Remote USB Port (Fully Functional)	Remote USB Port (Charg- ing Only)	Dual Charging Ports
	-	S	S	O	O

S = Standard Equipment

O = Optional Equipment

## iPod®/CD/AUX CONTROLS

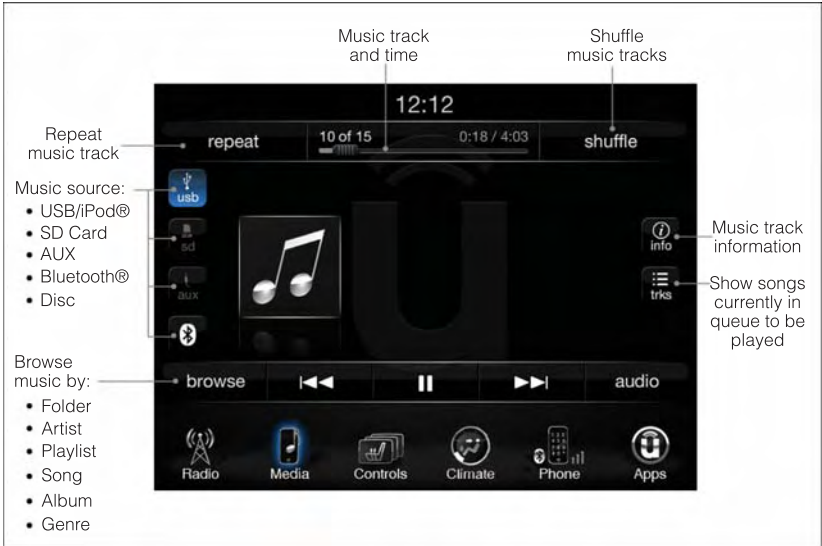

### iPod®/CD/AUX Controls

- The iPod®/CD/AUX controls are accessed by touching the desired soft-key displayed on the side of the screen and choose between Disc, AUX, iPod®, Bluetooth® or SD Card.

#### NOTE:

Uconnect® will usually automatically switch to the appropriate mode when something is first connected or inserted into the system.

## NAVIGATION

- Touch the “Nav” soft-key in the menu bar to access the Navigation system.

### Changing The Navigation Voice Prompt Volume

1. Touch the “Settings” soft-key.
2. In the Settings menu, touch the “Guidance” soft-key.
3. In the Guidance menu, adjust the Nav Volume by touching the + or - Nav Volume Adjustment soft-keys.



**Navigation Main**

## Finding Points Of Interest (POI)

- From the main Navigation menu, touch the “Where To?” soft-key, then touch the “Points of Interest” soft-key.
- Select a Category and then a subcategory, if necessary.
- Select your destination and touch the “Yes” soft-key.

## Finding A Place By Spelling The Name

- From the Main Navigation Menu touch the “Where to?” soft-key, touch the “Points of Interest” soft-key, then touch the “Spell Name” soft-key.
- Enter the name of your destination.
- Touch the “List” soft-key.
- Select your destination and touch the “Yes” soft-key.

## Entering A Destination Address

- From the main Navigation menu, touch the “Where To?” soft-key, then touch the “Address” soft-key.
- Follow the on-screen prompts [country, state/province, city, street] to enter the address and touch the “Yes” soft-key.

**NOTE:**

Destination entry is not available while your vehicle is in motion. However, you can also use Voice Commands to enter an address while moving. Refer to Common Navigation Voice Commands in the Uconnect® Voice Command section.

**Setting Your Home Location**

- Touch the “NAV” soft-key in the menu bar to access the Navigation system and the Main Navigation menu.
- Touch the “Where To?” soft-key, then touch the “Go Home” soft-key.
- You may enter your address directly, use your current location as your home address, or choose from recently found locations.
- To delete your Home location (or other saved locations) so you can save a new Home location, touch the “Where To?” soft-key from the Main Navigation menu, then touch the “Go Home” soft-key, and in the Yes screen touch the “Options” soft-key. In the Options menu touch the “Clear Home” soft-key. Set a new Home location by following the previous instructions.

**Go Home**

- A Home location must be saved in the system. From the Main Navigation menu, touch the “Where To?” soft-key, then touch the “Go Home” soft-key.

**Navigation**

- Your route is marked with a blue line on the map. If you depart from the original route, your route is recalculated. A speed limit icon could appear as you travel on major roadways.

# ELECTRONICS

## Adding A Stop

- To add a stop you must be navigating a route.
- Touch the “Menu” soft-key to return to the Main Navigation menu.
- Touch the “Where To?” soft-key, then search for the extra stop. When another location has been selected, you can choose to cancel your previous route, add as the first destination or add as the last destination.
- Touch the desired selection and touch the “Yes” soft-key.

## Taking A Detour

- To take a detour you must be navigating a route.
- Touch the “Detour” soft-key.

### NOTE:

- If the route you are currently taking is the only reasonable option, the device might not calculate a detour.
- For more information, see your Uconnect® Supplement Manual.

## SiriusXM TRAFFIC (US Market Only)

### Don't Drive Through Traffic. Drive Around It.

Avoid congestion before you reach it. By enhancing your vehicle's navigation system with the ability to see detailed traffic information, you can pinpoint traffic incidents, determine average traffic speed and estimate travel time along your route. Since the service is integrated with a vehicle's navigation system, SiriusXM Traffic can help drivers pick the fastest route based on traffic conditions.

1. Detailed information on traffic speed, accidents, construction, and road closings.
2. Traffic information from multiple sources, including police and emergency services, cameras and road sensors.
3. Coast-to-coast delivery of traffic information.
4. View conditions for points along your route and beyond. Available in over 130 markets.

## SiriusXM TRAVEL LINK (US Market Only)

In addition to delivering over 130 channels of the best sports, entertainment, talk, and commercial-free music, SiriusXM offers premium data services that work in conjunction with compatible navigation systems. SiriusXM Travel Link brings a wealth of useful information into your vehicle and right to your fingertips.

- **Fuel Prices** – Check local gas and diesel prices in your area and route to the station of your choice.
- **Movie Listings** – Check local movie theatres and listings in your area and route to the theater of your choice.

- **Sports Scores** – In-game and final scores as well as weekly schedules.
- **Weather** – Check variety of local and national weather information from radar maps to current and 5-day forecast.

SiriusXM Travel Link feature is completely integrated into your vehicle. A few minutes after you start your vehicle, Travel Link information arrives and updates in the background. You can access the information whenever you like, with no waiting.

To access SiriusXM Travel Link, press “Apps” button on the touchscreen, then press the “SiriusXM Travel Link” button on the touchscreen.


**NOTE:**

SiriusXM Travel Link requires a subscription, sold separately after the 1 year trial subscription included with your vehicle purchase.

SiriusXM Travel Link is only available in the United States.

<b>Fuel Prices</b>	Check local gas and diesel prices in your area and route to the station of your choice.
<b>Movie Listings</b>	Check local movie theatres and listings in your area and route to the theater of your choice.
<b>Sports Scores</b>	In-game and final scores as well as weekly schedules.
<b>Weather</b>	Check variety of local and national weather information from radar maps to current and 5-day forecast.

### Uconnect<sup>®</sup> Phone (Bluetooth<sup>®</sup> Hands Free Calling)

- If the Uconnect<sup>®</sup> Phone Button  exists on your steering wheel, then you have the Uconnect<sup>®</sup> Phone features.
- The Uconnect<sup>®</sup> Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).
- The Uconnect<sup>®</sup> Phone allows you to dial a phone number with your mobile phone using simple voice commands or using button on the touchscreen.
- Refer to the Understand The Features Of Your Vehicle section of your vehicle's Owner's Manual on the DVD for further details.

**NOTE:**

The Uconnect<sup>®</sup> Phone requires a mobile phone equipped with the Bluetooth<sup>®</sup> Hands-Free Profile, Version 1.0 or higher. For Uconnect<sup>®</sup> Customer Support:

- U.S. residents visit [www.UconnectPhone.com](http://www.UconnectPhone.com) or call 1-877-855-8400.
- Canadian Residents visit [www.UconnectPhone.com](http://www.UconnectPhone.com) or call, 1-800-465-2001 (English) or 1-800-387-9983 (French).

## Pairing A Phone

- To use the Uconnect<sup>®</sup> Phone feature, you must first pair your Bluetooth<sup>®</sup> phone with the Uconnect<sup>®</sup> system.

### Start Pairing Procedure On The Radio

- Press the “Phone” button on the touchscreen, then press the “Settings” button on the touchscreen. Next, press “Add Device.”
- Uconnect<sup>®</sup> Phone will display an “In progress” screen while the system is connecting.

### Start Pairing Procedure On Mobile Phone

- Search for available devices on your Bluetooth<sup>®</sup> enabled mobile phone. This is usually within Settings or Options under “Bluetooth.” See your mobile phone’s manual for details.
- When your phone finds the system, select “Uconnect” as the paired device. You may be prompted by your phone to download the phonebook. This is so you can make calls by saying the name of your contact (PBAP-Phone Book Access Profile).


### Complete The Pairing Procedure

- When prompted on the phone, verify with radio password shown on the Uconnect<sup>®</sup> Screen.
- If your phone asks you to accept a connection request from Uconnect<sup>®</sup>, select “Yes.” If available, check the box telling it not to ask again – that way your phone will automatically connect each time you start the vehicle.

### Select The Mobile Phone's Priority Level

- When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting “Yes” will make this phone the highest priority. This phone will take precedence over other paired phones within range. Only one phone can be paired at a time.
- You are now ready to make hands-free calls. Press the “Uconnect<sup>®</sup> Phone” button on your steering wheel to begin.



## Making A Phone Call

- Press the Uconnect<sup>®</sup> Phone button .
- After the BEEP, say “dial” then the number (or “call” then the name as listed in your phone; see Phonebook).

### NOTE:

You can also initiate a call by using the touchscreen on the Phone main screen.

## Receiving A Call – Accept (And End)

- When an incoming call rings/is announced on Uconnect<sup>®</sup>, press the Phone button .
- To end a call, press the Hang Up or Phone button .



## Mute (Or Unmute) Microphone During Call

- During a call, press the “Mute” button on the touchscreen on the Phone main screen to mute and unmute the call.

## Transfer Ongoing Call Between Handset And Vehicle

- During an on-going call, touch the “Transfer” soft-key on the Phone main screen to transfer an on-going call between handset and vehicle.


## Common Phone Commands (Examples)

- “Call John Smith”
- “Call John Smith mobile”
- “Dial 1 248 555 1212”
- “Call Emergency”
- “Call Towing Assistance”
- “Redial”


## Phonebook

- Uconnect<sup>®</sup> radios automatically downloads your phonebook from your paired phone, if this feature is supported by your phone. Entries are updated each time that the phone is connected. If your phone book entries do not appear, check the settings on your phone. Some phones require you to enable this feature manually.
- Your phonebook can be browsed on your radio screen, but editing can only be done on your phone. To browse, touch the “Phone” soft-key, then the “Phonebook” soft-key.
- Favorite phonebook entries can be saved as Favorites for quicker access. Favorites are shown at the top of your main phone screen.




## Voice Command Tips

- Using complete names (i.e; Call John Doe vs. Call John) will result in greater system accuracy.
- You can “chain” commands together for faster results. Say “Call John Doe, mobile”, for example.
- If you are listening to available voice command options, you do not have to listen to the entire list. When you hear the command that you need, press the  button on the steering wheel, wait for the beep and say your command.


## Changing The Volume

- Start a dialogue by pressing the Phone button  , then say a command for example - “Help”.
- Use the radio ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect<sup>®</sup> system is speaking. Please note the volume setting for Uconnect<sup>®</sup> is different than the audio system.

## NOTE:

To access help, press the Uconnect<sup>®</sup> Phone  button on the steering wheel and say "help." Touch the display or push either  or  button and say "cancel" to cancel the help session.

## Voice Text Reply (Not Compatible With iPhone<sup>®</sup>)

- Once your Uconnect<sup>®</sup> system is paired with a compatible mobile device, the system can announce a new incoming text message, and read it to you over the vehicle audio system. You can reply to the message using Voice Recognition, by selecting, or saying one of the 18 pre-defined messages.
- Here's How:** Press the Uconnect<sup>®</sup> Phone button  and wait for the beep, then say "reply." Uconnect<sup>®</sup> will give the following prompt: "Please say the message you would like to send." Wait for the beep and say one of the pre-defined messages. (If you are not sure, you can say "help"). Uconnect<sup>®</sup> will then read the pre-defined messages allowed. As soon as you hear the message you would like to send, you can interrupt the list of prompts by pressing the Uconnect<sup>®</sup> phone button and saying the phrase. Uconnect<sup>®</sup> will confirm the message by reading it back to you. Then press the Phone button and say "Send."


### PRE-DEFINED VOICE TEXT REPLY RESPONSES



Yes.	Stuck in Traffic.	See you later.
No.	Start without me.	I'll be Late.
Okay.	Where are you?	I will be <number> minutes late.
Call me.	Are you there yet?	
I'll call you later.	I need directions.	See you in <number> of minutes.
I'm on my way.	Can't talk right now.	Thanks.
I'm lost.		

- Voice texting reply and voice texting features require a compatible mobile device enabled with Bluetooth<sup>®</sup> Message Access Profile [MAP]. iPhone<sup>®</sup> and some other smartphones do not currently support Bluetooth<sup>®</sup> MAP. Visit [www.UconnectPhone.com](http://www.UconnectPhone.com) for system and device compatibility.
- Want to dictate a personal message? You must first register with Uconnect<sup>®</sup> Access (U.S. residents only) to take advantage of a new, cloud-based Voice Texting service, an enhancement to Voice Text Reply.




## VOICE COMMAND QUICK REFERENCE

### Uconnect<sup>®</sup> 8.4N Voice Command Quick Reference

- If the Uconnect<sup>®</sup> Voice Command  button exists on your steering wheel, you have the Voice Command feature, which is optimized for the driver. The Voice Command feature lets you keep your hands on the wheel, and your eyes on the road.

- When you press the Voice Command  button located on the steering wheel, you will hear a beep. After the beep, give your command. If you do not know what commands to say, you can say “help” and the system will provide options to you. If you ever wish to interrupt the system while it lists options, press the Voice Command  button, after the beep, say your command.



## NOTE:

All phone oriented voice commands are accessible by first pressing the Phone Pick Up  button, not the Voice Command button. To end a call, simply press the Phone Hang Up  button. In some vehicles, the Phone Pickup  button serves the dual purpose of ending calls as well.



## Voice Command [VR] User TIPS

- To hear available commands, press the Uconnect<sup>®</sup> Voice Command button and say “Help”. You will hear available commands for the menu displayed.
- At any time, you can say the words “Cancel” or “Help”. These commands are universal and can be used from virtually any menu. All other specific commands can be used depending upon the active application.
- You can interrupt the system prompts at any time by pressing the Uconnect<sup>®</sup> Voice Command button while the system is speaking. After the beep, you can say a command.
- You can chain commands together for faster results. Say “Call Joe Doe mobile”, for example.
- For best performance, adjust the rearview mirror to provide at least ½ inch (1 cm) gap between the overhead console (if equipped) and the mirror.
- Always wait for the beep before speaking.
- Speak normally, without pausing, just as you would speak to a person sitting a few feet/meters away from you.
- Make sure that no one other than you is speaking during a Voice Command period.

## Steering Wheel Buttons

- You can control many of your radio features using your voice. Press either the VR  or Phone Pick Up  button on your steering wheel.



	Steering Wheel Buttons to Press:	Radio Mode	Media Mode	Climate Controls	Navigation	Phone Mode	APPS
Types of Voice Commands Available	 Uconnect® Voice Command (VR) Button	AM/FM & Satellite Band Control	Media Devices Control	Temperature Control	Destination Selection and View	-	Yelp®
	<b>GENERAL</b>						
	 Uconnect® Phone Pick Up Button	-	-	-	-	Call Initiation, Call Management, Pre-defined Voice Text Reply	-

## Voice Command Examples - Uconnect® 8.4AN

While In:	Voice Command Example:
<b>GENERAL</b>	
<b>Anytime</b>	"Go to Radio" (Media, Climate, Navigation, Phone, Apps) - Settings, and Controls are not Voice Command accessible "Cancel" "Help" (to listen to suggested commands specific to current need "Repeat" "Launch Yelp®" - Required 1st voice command to launch Yelp® app "Yelp® Search" - Required 2nd voice command to activate app functionality using Steering Wheel Voice Control Button "Hotel" (restaurant, gas station, mail, hospital) - for nearest desired general POI "Italian restaurants" - for nearest specified POI category
<b>RADIO</b>	
<b>AM/FM</b>	"Tune to AM 950", "Tune to 95.5 FM (preset 5)
<b>Satellite Band Control</b>	"Tune to Satellite Channel 80's on 8", Tune to Satellite Channel 32 (preset 4)
<b>MEDIA</b>	
<b>Media Devices Control</b> (Functionality is dependent on compatibility between devices and radio)	"Browse" (show) "artist" (albums, music) "Show paired phones" (devices) "Play song - Maple Leaf Rag" (artist - Scott Joplin, genre - rock, album - Ragtime Favorites) "Shuffle" - available with iPod®, USB and SD Card

While In:	Voice Command Example:
<b>CLIMATE</b>	
<b>Temperature Control</b>	"Set temperature to 70 degrees" – single climate zone vehicles
	"Set driver" [passenger] "temperature to 75 degrees" – dual climate zone vehicles
<b>NAVIGATION</b>	
<b>Destination Selection &amp; View</b>	"Navigate to" [Destination] 123 Any Street, Any town, Any State (any full address) "Go Home" – destination previously defined by driver "Repeat guidance" – hear the last navigation prompt "Cancel Route" "View Map"
<b>PHONE</b>	
<b>Call Initiation</b> (Requires that phone has been Bluetooth® paired with radio)	"Dial 123-456-7890" (phone number) "Call John Smith mobile" (home, office, other) "Redial" "Show outgoing" (recent) "calls"
<b>Call Management</b>	"Search for John Smith" (any contact name in address book) "Show (display list) contacts"
<b>Voice Texting</b> (Requires registration with Uconnect® Access and a current subscription)  <b>NOTE:</b> Requires a compatible mobile device enabled with Bluetooth Message Access Profile (MAP). iPhone and some other smartphones do not currently support Bluetooth® MAP. Visit <a href="http://www.UconnectPhone.com">www.UconnectPhone.com</a> for system and device compatibility.	Create a text message using Voice Command Capability "Send a message to John Smith (123-456-7890)" "Show Messages" "Listen to" (view) "number 4" "Reply" "Forward text" (message) "to John Smith" (phone type, number)

While In:	Voice Command Example:
<p><b>Voice Text Reply</b> (Radio audibly recognizes these 18 pre-defined SMS messages as you speak)</p> <p><b>NOTE:</b> Requires a compatible mobile device enabled with Bluetooth Message Access Profile (MAP). iPhone and some other smartphones do not currently support Bluetooth® MAP. Visit <a href="http://www.UconnectPhone.com">www.UconnectPhone.com</a> for system and device compatibility.</p>	<p>Forward one of 18 pre-defined SMS messages to incoming calls/text messages:</p> <p>“Yes.”            “No.”            “Okay.”            “I can’t talk right now.”            “Call me.”            “I’ll call you later.”            “I’m on my way.”            “Thanks.”            “I’ll be late.”            “I will be &lt;number&gt; minutes late.”            “See you in &lt;number&gt; minutes.”            “Stuck in traffic.”            “Start without me.”            “Where are you?”            “Are you there yet?”            “I need directions.”            “I’m lost.”            “See you later.”</p>
<b>APPS</b>	
<p><b>SiriusXM Travel Link</b> (Traffic function is not voice command accessible within SiriusXM Travel Link)</p>	<p>“Show Fuel prices”            “Show Current Weather” – provides access to Forecast as well            “Show Weather map” – multiple map formats available            “Show Sports”            “Show Movie listings”            “Show My favorites”</p>
<p><b>Yelp®</b> (Yelp® adds its own audible prompts, and response time varies depending on carrier coverage speed)</p>	<p>“Launch Yelp®” – Required 1st voice command to launch Yelp® app            “Yelp® Search” – Required 2nd voice command to activate app functionality using Steering Wheel Voice Control Button            “Hotel” (Restaurant, Gas Station, Hospital) – for nearest desired general POI</p>

## STEERING WHEEL AUDIO CONTROLS

The steering wheel audio controls are located on the rear surface of the steering wheel.

### Right Switch

- Press the switch up or down to increase or decrease the volume.
- Press the button in the center to change modes AM/FM/CD/SXM.

### Left Switch

- Press the switch up or down to search for the next listenable station or select the next or previous CD track.
- Press the button in the center to select the next preset station (radio) or to change CDs if equipped with a CD Changer.



## ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)

The EVIC features a driver interactive display that is located in the instrument cluster. Pressing the controls on the left side of the steering wheel allows the driver to select vehicle information and Personal Settings. For additional information, refer to Programmable Features in this guide.

- Press and release the UP  $\triangle$  button to scroll upward through the main menus (Speedometer, MPH/km/h, Vehicle Info, Terrain, Driver Assist, Fuel Economy, Trip A, Trip B, Audio, Stored Messages, Screen Set Up).
- Press and release the DOWN  $\nabla$  button to scroll downward through the main menu and submenus (Speedometer, MPH/km/h, Vehicle Info, Terrain, Driver Assist, Fuel Economy, Trip A, Trip B, Audio, Stored Messages, Screen Set Up).
- Press and release the RIGHT  $\triangleright$  button to access the information screens or sub-menu screens of a main menu item.
- Press the BACK/LEFT  $\triangleleft$  button to access the information screens or sub-menu screens of a main menu item.



1 – EVIC Controls

# ELECTRONICS

- Press the **OK** button to access/select the information screens or sub-menu screens of a main menu item. Press and hold the OK button for two seconds to reset displayed/selected features that can be reset.

## Compass Calibration

This compass is self-calibrating, which eliminates the need to set the compass manually. When the vehicle is new, the compass may appear erratic and the EVIC will display "CAL" until the compass is calibrated.

You may also calibrate the compass by completing one or more 360 degree turns (in an area free from large metal or metallic objects) until the "CAL" message displayed in the EVIC turns off. The compass will now function normally.

## ECO

The ECO message will appear in your EVIC display whenever you are driving in a fuel efficient manner.

This feature allows you to monitor when you are driving in a fuel efficient manner, and it can be used to modify driving habits in order to increase fuel economy.

## PROGRAMMABLE FEATURES

### EVIC Programmable Features

The EVIC can be used to view the following main menu items:

#### NOTE:

Depending on the vehicles options, feature settings may vary.

- Speedometer
- MPH to km/h
- Vehicle Info
- Driver Assist
- Fuel Economy
- Trip
- Audio
- Stored Messages
- Screen Setup
- Speed Warning - If Equipped

#### NOTE:

Refer to your Owner's Manual on the DVD for further information.

### Uconnect® Customer Programmable Features

The Uconnect® system allows you to access Customer Programmable feature settings such as Display, Clock, Safety/Assistance, Lights, Doors & Locks, Auto-On Comfort & Remote Start, Engine Off Operation, Compass Settings, Audio, Trailer Brake, Phone/Bluetooth®, Suspension and SiriusXM Setup and System Information through soft-keys.



- Press the **SETTINGS** button (Uconnect® 5.0), or press the “Apps” button (Uconnect® 8.4) located near the bottom of the touchscreen, then press the “Settings” button on the touchscreen to access the Settings screen. When making a selection, scroll up or down until the preferred setting is highlighted, then press and release the preferred setting until a check-mark appears next to the setting, showing that setting has been selected. The following feature settings are available:

- Display
- Safety/Assistance
- Auto-On Comfort & Remote Start
- Phone/Bluetooth®
- Lights
- Compass (Uconnect® 5.0)
- Suspension
- Units
- Clock
- Doors & Locks
- Engine Off Options
- Audio
- SiriusXM Setup
- Trailer Brake
- System Information
- Voice

**NOTE:**

Depending on the vehicles options, feature settings may vary.

## **EVIC Screen Setup**

The following settings allow you to change what information is displayed in the instrument cluster as well as the location that information is displayed.

- Compass
- Date
- Time
- Outside Temp
- Fuel Economy Info
- Speed
- Range to Empty

### **Trip A**

- Press and release the UP or DOWN arrow button until the Trip A icon is highlighted in the EVIC (Toggle left or right to select Trip A or Trip B). Press and release the OK button to display the Trip A information.

### **Trip B**

- Press and release the UP or DOWN arrow button until the Trip B icon is highlighted in the EVIC (Toggle left or right to select Trip A or Trip B). Press and release the OK button to display the Trip B information.

## **Fuel Economy**

Press and release the UP or DOWN arrow button until the Fuel Economy icon is highlighted. Press the RIGHT arrow button and the next screen will display the following:

- Average Fuel Economy/Miles Per Gallon (MPG Bargraph)
- Range To Empty (RTE)
- Current Miles Per Gallon (MPG)

## UNIVERSAL GARAGE DOOR OPENER (HomeLink®)

- HomeLink® replaces up to three hand-held transmitters that operate devices such as garage door openers, motorized gates, lighting or home security systems. The HomeLink® unit is powered by your vehicle's 12 Volt battery.
- The HomeLink® buttons that are located in the overhead console or sunvisor designate the three different HomeLink® channels.
- The HomeLink® indicator is located above the center button.

### Before You Begin Programming HomeLink®

- Be sure that your vehicle is parked outside of the garage before you begin programming.
- For more efficient programming and accurate transmission of the radio-frequency signal it is recommended that a new battery be placed in the hand-held transmitter of the device that is being programmed to the HomeLink® system.
- Erase all channels before you begin programming. To erase the channels, place the ignition switch into the ON/RUN position, then press and hold the two outside HomeLink® buttons (I and III) for up to 20 seconds or until the red indicator flashes.



#### NOTE:

- Erasing all channels should only be performed when programming HomeLink® for the first time. Do not erase channels when programming additional buttons.
- If you have any problems, or require assistance, please call toll-free 1-800-355-3515 or, on the Internet at [www.HomeLink.com](http://www.HomeLink.com) for information or assistance.

### Programming A Rolling Code

#### NOTE:

For programming Garage Door Openers that were manufactured after 1995. These Garage Door Openers can be identified by the "LEARN" or "TRAIN" button located where the hanging antenna is attached to the Garage Door Opener. It is NOT the button that is normally used to open and close the door. The name and color of the button may vary by manufacturer.

1. Place the ignition switch into the ON/RUN position.
2. Place the hand-held transmitter 1 to 3 in (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.

3. Simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button.
4. Continue to hold both buttons and observe the indicator light. The HomeLink® indicator will flash slowly and then rapidly after HomeLink® has received the frequency signal from the hand-held transmitter. Release both buttons after the indicator light changes from slow to rapid.
5. At the garage door opener motor (in the garage), locate the “LEARN” or “TRAINING” button. This can usually be found where the hanging antenna wire is attached to the garage door opener motor. Firmly press and release the “LEARN” or “TRAINING” button.

**NOTE:**

You have 30 seconds in which to initiate the next step after the LEARN button has been pressed.

6. Return to the vehicle and press the programmed HomeLink® button twice (holding the button for two seconds each time). If the device is plugged in and activates, programming is complete.

**NOTE:**

If the device does not activate, press the button a third time (for two seconds) to complete the training.

7. To program the remaining two HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

## Programming A Non-Rolling Code

**NOTE:**

For programming Garage Door Openers manufactured before 1995.

1. Turn the ignition switch to the ON/RUN position.
2. Place the hand-held transmitter 1 to 3 inches (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.
3. Simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button.
4. Continue to hold both buttons and observe the indicator light. The HomeLink® indicator will flash slowly and then rapidly after HomeLink® has received the frequency signal from the hand-held transmitter. Release both buttons after the indicator light changes from slow to rapid.
5. Press and hold the programmed HomeLink® button and observe the indicator light. If the indicator light stays on constantly, programming is complete and the garage door (or device) should activate when the HomeLink® button is pressed.
6. To program the two remaining HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

# ELECTRONICS

## Using HomeLink®

- To operate, press and release the programmed HomeLink® button. Activation will now occur for the programmed device (e.g., garage door opener, gate operator, security system, entry door lock, home/office lighting, etc.). The hand-held transmitter of the device may also be used at any time.

### WARNING!

- Your motorized door or gate will open and close while you are programming the universal transceiver. Do not program the transceiver if people or pets are in the path of the door or gate.
- Do not run your vehicle in a closed garage or confined area while programming the transceiver. Exhaust gas from your vehicle contains Carbon Monoxide (CO) which is odorless and colorless. Carbon Monoxide is poisonous when inhaled and can cause you and others to be severely injured or killed.

## POWER INVERTER

There is a 115 Volt, 150 Watt power inverter outlet located on the back of the center console. This outlet can power cellular phones, electronics and other low power devices requiring power up to 150 Watts.

### NOTE:

The power inverter is designed with built-in overload protection. If the power rating of 150 Watts is exceeded, the power inverter will automatically shut down. Once the electrical device has been removed from the outlet, the inverter should automatically reset. If the power rating exceeds approximately 170 Watts, the power inverter may have to be reset manually. To reset the inverter manually, unplug the device and plug it in again. To avoid overloading the circuit, check the power ratings on electrical devices prior to using the inverter.



### WARNING!

To Avoid Serious Injury or Death DO NOT:

- insert any objects into the receptacles
- touch with wet hands

Close the lid when not in use. If this outlet is mishandled, it may cause an electric shock and failure.

## POWER OUTLET

The front power outlet is located in the front center storage bin of the instrument panel.

There are two power outlets located in the center console.

The rear power outlet is located in the right rear cargo area.

The power outlets are labeled with either a “key” or a “battery” symbol to indicate how the outlet is powered. Power outlets labeled with a “key” are powered when the ignition switch is in the ON/RUN or ACC position, while the outlets labeled with a “battery” are connected directly to the battery and powered at all times.

### NOTE:

- Do not exceed the maximum power of 160 Watts (13 Amps) at 12 Volts. If the 160 Watt (13 Amp) power rating is exceeded, the fuse protecting the system will need to be replaced. See below image for fuse locations.
- Power outlets are designed for accessory plugs only. Do not insert any other object in the power outlet as this will damage the outlet and blow the fuse. Improper use of the power outlet can cause damage not covered by your new vehicle warranty.



# ELECTRONICS

- The rear cargo power outlet can be switched to "battery" powered all the time by switching the power outlet right rear quarter panel fuse in the fuse panel.



# OFF-ROAD CAPABILITIES

## ALL-WHEEL DRIVE OPERATION

### Single-Speed Operating Instructions/Precautions

This system contains a single-speed (HI range only) transfer case, which provides convenient full-time all-wheel drive. No driver interaction is required. The Brake Traction Control (BTC) System, which combines standard ABS and Traction Control, provides resistance to any wheel that is slipping to allow additional torque transfer to wheels with traction.

#### NOTE:

This system is not appropriate for conditions where AWD LOW range is recommended. Refer to "Off-Road Driving Tips" in "Starting and Operating" on the DVD for further information.

### Electronically Shifted Transfer Case (Three-Position Switch)

This is an electronic shift transfer case and is operated by the AWD Control Switch (Transfer Case Switch), which is located on the center console.

This electronically shifted transfer case provides three mode positions:

- All-wheel drive automatic range (AWD AUTO)
- All-wheel drive low range (LOW RANGE)
- Neutral (NEUTRAL)

When additional traction is required, the LOW RANGE position can be used to lock the front and rear driveshafts together forcing the front and rear wheels to rotate at the same speed. The LOW RANGE position are designed for loose, slippery road surfaces only. Driving in the LOW RANGE positions on dry hard surfaced roads may cause increased tire wear and damage to the driveline components.

When operating your vehicle in LOW RANGE, the engine speed is approximately three times that of the AWD HI position at a given road speed. Take care not to overspeed the engine and do not exceed 25 mph (40 km/h).



Rotate AWD Control Knob

# OFF-ROAD CAPABILITIES

## **NOTE:**

The "SERV AWD Warning Light" monitors the electronic shift all-wheel drive system. If this light remains on after engine start up or illuminates during driving, it means that the all-wheel drive system is not functioning properly and that service is required.

## **Shifting Procedures**

### **AWD Auto To Low Range**

## **NOTE:**

When shifting into or out of LOW RANGE some gear noise may be heard. This noise is normal and is not detrimental to the vehicle or occupants.

- Shifting can be performed with the vehicle rolling 2 to 3 mph (3 to 5 km/h) or completely stopped. Use either of the following procedures:

### **Preferred Procedure**

1. With the engine running, slow the vehicle to 2 to 3 mph (3 to 5 km/h).
2. Shift the transmission into NEUTRAL.
3. While still rolling, rotate the transfer case control switch to the desired position.
4. After the desired position indicator light is ON (not flashing), shift the transmission back into gear.

### **Alternate Procedure**

1. Bring the vehicle to complete stop.
2. With the ignition switch in the ON position and the engine either OFF or running, shift the transmission into NEUTRAL.
3. Rotate the transfer case control switch to the desired position.
4. After the desired position indicator light is ON (not flashing), shift the transmission back into gear.

## **NOTE:**

- If Steps 1 or 2 of either the Preferred or Alternate Procedure are not satisfied prior to attempting the shift or if they no longer are being met while the shift attempt is in process, the desired position indicator light will flash continuously while the original position indicator light is ON, until all requirements have been met.
- The ignition switch must be in the ON position for a shift to take place and for the position indicator lights to be operable. If the ignition switch is not in the ON position, then the shift will not take place and no position indicator lights will be on or flashing.



# OFF-ROAD CAPABILITIES

## **WARNING!**

- Always engage the parking brake when powering down the vehicle if the “SERV AWD Warning Light” is illuminated. Not engaging the parking brake may allow the vehicle to roll which may cause personal injury.
- You or others could be injured if you leave the vehicle unattended with the transfer case in the NEUTRAL position without first fully engaging the parking brake. The transfer case NEUTRAL position disengages both the front and rear driveshafts from the powertrain and will allow the vehicle to move regardless of the transmission position. The parking brake should always be applied when the driver is not in the vehicle.

## ROOF LUGGAGE RACK

The crossbars on your vehicle are delivered stowed within the roof rack side rails. When installed, the roof rack can hold a maximum of 150 lbs (68 kg) of evenly distributed weight.

### Installing The Crossbars

1. To install the crossbars, completely loosen the thumb screws at both ends and slide the crossbar out from its stowed position.
2. Bend the pivot points at each end of the crossbar and push the thumb screw down.

### NOTE:

Position the crossbars across the roof making sure the letters on the crossbar align with the matching letters on the side rail.

3. Set the crossbars into position, slide them into the groove and tighten the thumb screws.
4. Refer to the Owner's Manual on the DVD for further details.

## TRAILER TOWING WEIGHTS (MAXIMUM TRAILER WEIGHT RATINGS)

Engine	Model	GCWR (Gross Combined Wt. Rating)	Frontal Area	Max. GTW (Gross Trailer Wt.)	Max. Trailer Tongue Wt. (See Note)
3.6L	RWD	11,600 lbs (5 262 kg)	40 sq ft (3.72 sq m)	6,200 lbs (2 812 kg)	620 lbs (281 kg)
3.6L	AWD	11,600 lbs (5 262 kg)	40 sq ft (3.72 sq m)	6,200 lbs (2 812 kg)	620 lbs (281 kg)
5.7L	RWD	13,100 lbs (5 942 kg)	60 sq ft (5.57 sq m)	7,400 lbs (3 357 kg)	740 lbs (336 kg)
5.7L	AWD	13,100 lbs (5 942 kg)	60 sq ft (5.57 sq m)	7,200 lbs (3 266 kg)	720 lbs (327 kg)

Refer to local laws for maximum trailer towing speeds.

**NOTE:** The trailer tongue weight must be considered as part of the combined weight of occupants and cargo, and should never exceed the weight referenced on the Tire and Loading Information placard. The addition of passengers and cargo may require reducing trailer tongue load and Gross Trailer Weight (GTW). Redistributing cargo (to the trailer) may be necessary to avoid exceeding Rear Gross Axle Weight Rating (GAWR) of 3,900 lbs (1 769 kg).

- If the gross trailer weight is 3,500 lbs (1587 kg) or more, it is mandatory to use a weight-distributing hitch to ensure stable handling of your vehicle.

**NOTE:**

Vehicles not factory equipped with trailer tow package are limited to 3,500 lbs (350 lbs tongue weight).

## RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.)

### Towing This Vehicle Behind Another Vehicle

Towing Condition	Wheels OFF the Ground	Rear-Wheel Drive Models	All-Wheel Drive Models With Single-Speed Transfer Case	All-Wheel Drive Models With Two-Speed Transfer Case
Flat Tow	NONE	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>	<ul style="list-style-type: none"> <li>• <b>See Instructions</b></li> <li>• Transmission in PARK</li> <li>• Transfer case in NEUTRAL (N)</li> <li>• Tow in forward direction</li> </ul>
Dolly Tow	Front	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>
	Rear	OK	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>
On Trailer	ALL	OK	OK	OK

### Rear-Wheel Drive Models

**DO NOT flat tow this vehicle. Damage to the drivetrain will result.**

Recreational towing (for two-wheel drive models) is allowed **ONLY** if the rear wheels are **OFF** the ground. This may be accomplished using a tow dolly or vehicle trailer. If using a tow dolly, follow this procedure:

1. Properly secure the dolly to the tow vehicle, following the dolly manufacturer's instructions.
2. Drive the rear wheels onto the tow dolly.
3. Firmly apply the parking brake. Shift the transmission into PARK.
4. Turn the ignition switch to the OFF position.
5. Properly secure the rear wheels to the dolly, following the dolly manufacturer's instructions.
6. Install a suitable clamping device, designed for towing, to secure the front wheels in the straight position.

### CAUTION!

Towing with the rear wheels on the ground will cause severe transmission damage. Damage from improper towing is not covered under the New Vehicle Limited Warranty.

**All-Wheel Drive Models (Single-Speed Transfer Case)**

**Recreational towing is not allowed.** This model does not have a NEUTRAL position in the transfer case.

**NOTE:**

This vehicle may be towed on a flatbed or vehicle trailer provided all four wheels are OFF the ground.

**CAUTION!**

Towing this vehicle in violation of the above requirements can cause severe transmission and/or transfer case damage. Damage from improper towing is not covered under the New Vehicle Limited Warranty.

**All-Wheel Drive Models (Two-Speed Transfer Case)**

The transfer case must be shifted into NEUTRAL (N) and the transmission must be in PARK for recreational towing. The NEUTRAL (N) selection button is at the center of the transfer case selector switches. Shifts into transfer case NEUTRAL (N) can take place from any other transfer case mode.

**CAUTION!**

- DO NOT dolly tow any All-Wheel Drive (AWD) vehicle. Internal damage to the transmission or transfer case will occur if a dolly is used when recreational towing.
- Tow only in the forward direction. Towing this vehicle backwards can cause severe damage to the transfer case.
- The transmission must be in PARK for recreational towing.
- Before recreational towing, perform the procedure outlined under "Shifting Into NEUTRAL(N)" to be certain that the transfer case is fully in NEUTRAL (N). Otherwise, internal damage will result.
- Failure to follow these procedures can cause severe transmission and/or transfer case damage. Damage from improper towing is not covered under the New Vehicle Limited Warranty.
- Do not use a bumper-mounted clamp-on tow bar on your vehicle. The bumper face bar will be damaged.

**Shifting Into NEUTRAL**

Use the following procedure to prepare your vehicle for recreational towing:

1. Bring the vehicle to a complete stop, with the engine running.
2. Press and hold the brake pedal.
3. Shift the transmission into NEUTRAL.
4. Using a ballpoint pen or similar object, press and hold the recessed transfer case NEUTRAL (N) button (located by the selector switch) for four seconds. The light behind

the N symbol will blink, indicating shift in progress. The light will stop blinking (stay on solid) when the shift to NEUTRAL (N) is complete. A "FOUR WHEEL DRIVE SYSTEM IN NEUTRAL" message will display on the EVIC [Electronic Vehicle Information Center].

5. After the shift is completed and the NEUTRAL (N) light stays on, release the NEUTRAL (N) button.
6. Shift the transmission into REVERSE.
7. Release the brake pedal for five seconds and ensure that there is no vehicle movement.
8. Shift the transmission back into NEUTRAL.
9. Firmly apply the parking brake.
10. With the transmission and transfer case in NEUTRAL, press and hold the ENGINE START/STOP button until the engine turns off. Turning the engine off will automatically place the transmission in PARK.
11. Press the ENGINE STOP/START button again (without pressing the brake pedal), if needed, to turn the ignition switch to the OFF position.

## CAUTION!

Damage to the transmission may occur if the transmission is shifted into PARK with the transfer case in NEUTRAL (N) and the engine running. With the transfer case in NEUTRAL (N) ensure that the engine is OFF before shifting the transmission into PARK.

12. Attach the vehicle to the tow vehicle using a suitable tow bar.
13. Release the parking brake.

### NOTE:

- Steps 1 through 3 are requirements that must be met before pressing the NEUTRAL (N) button, and must continue to be met until the shift has been completed. If any of these requirements are not met before pressing the NEUTRAL (N) button or are no longer met during the shift, the NEUTRAL (N) indicator light will flash continuously until all requirements are met or until the NEUTRAL (N) button is released.
- The ignition switch must be in the ON/RUN position for a shift to take place and for the position indicator lights to be operable. If the ignition switch is not in the ON/RUN position, the shift will not take place and no position indicator lights will be on or flashing.
- A flashing NEUTRAL (N) position indicator light indicates that shift requirements have not been met.

**CAUTION!**

- Towing with the rear wheels on the ground will cause severe transmission damage. Damage from improper towing is not covered under the New Vehicle Limited Warranty.
- Front or rear wheel lifts should not be used. Internal damage to the transmission or transfer case will occur if a front or rear wheel lift is used when recreational towing.
- It is necessary to follow these steps to be certain that the transfer case is fully in NEUTRAL before recreational towing to prevent damage to internal parts.

**WARNING!**

You or others could be injured if you leave the vehicle unattended with the transfer case in the NEUTRAL position without first fully engaging the parking brake. The transfer case NEUTRAL position disengages both the front and rear driveshafts from the powertrain and will allow the vehicle to move even if the transmission is in PARK. The parking brake should always be applied when the driver is not in the vehicle.

**Shifting Out Of NEUTRAL (N)**

Use the following procedure to prepare your vehicle for normal usage:

1. Bring the vehicle to a complete stop, leaving it connected to the tow vehicle.
2. Firmly apply the parking brake.
3. Start the engine.
4. Press and hold the brake pedal.
5. Shift the transmission into NEUTRAL.
6. Using a ballpoint pen or similar object, press and hold the recessed transfer case NEUTRAL (N) button (located by the selector switch) for one second.
7. When the NEUTRAL (N) indicator light turns off, release the NEUTRAL (N) button.
8. After the NEUTRAL (N) button has been released, the transfer case will shift to the position indicated by the selector switch.
9. Shift the transmission into PARK and turn the engine OFF.
10. Release the brake pedal.
11. Disconnect vehicle from the tow vehicle.
12. Start the engine.
13. Press and hold the brake pedal.
14. Release the parking brake.
15. Shift the transmission into DRIVE, release the brake pedal, and check that the vehicle operates normally.

**NOTE:**

- Steps 1 through 5 are requirements that must be met before pressing the NEUTRAL (N) button, and must continue to be met until the shift has been completed. If any of these requirements are not met before pressing the NEUTRAL (N) button or are no longer met during the shift, the NEUTRAL (N) indicator light will flash continuously until all requirements are met or until the NEUTRAL (N) button is released.
- The ignition switch must be in the ON/RUN position for a shift to take place and for the position indicator lights to be operable. If the ignition switch is not in the ON/RUN position, the shift will not take place and no position indicator lights will be on or flashing.
- A flashing NEUTRAL (N) position indicator light indicates that shift requirements have not been met.



# WHAT TO DO IN EMERGENCIES

## ROADSIDE ASSISTANCE

Dial toll-free 1-800-521-2779 for U.S. Residents or 1-800-363-4869 for Canadian Residents.

- Provide your name, vehicle identification number, license plate number, and your location, including the telephone number from which you are calling.
- Briefly describe the nature of the problem and answer a few simple questions.
- You will be given the name of the service provider and an estimated time of arrival. If you feel you are in an “unsafe situation”, please let us know. With your consent, we will contact local police or safety authorities.

## INSTRUMENT CLUSTER WARNING LIGHTS

### - Tire Pressure Monitoring System (TPMS) Light

Each tire, including the spare (if provided), should be checked monthly, when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a Tire Pressure Monitoring System (TPMS) which display in the Electronic Vehicle Information Center (EVIC) when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure EVIC display illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

**IF THE LIGHT STARTS FLASHING INDICATING A LOW TIRE PRESSURE, ADJUST THE AIR PRESSURE IN THE LOW TIRE TO THE AIR PRESSURE SHOWN ON THE VEHICLE PLACARD OR TIRE INFLATION PRESSURE LABEL LOCATED ON THE DRIVER'S DOOR.**

# WHAT TO DO IN EMERGENCIES

## NOTE:

**After inflation, the vehicle may need to be driven for 20 minutes before the flashing light will turn off.**

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low EVIC display.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue each time the vehicle is restarted as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle, to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

## NOTE:

Tire pressures change by approximately 1 psi (7 kPa) per 12° F (7° C) of air temperature change. Keep this in mind when checking tire pressure inside a garage, especially in the Winter. Example: If garage temperature is 68°F (20°C) and the outside temperature is 32°F (0°C), then the cold tire inflation pressure should be increased by 3 psi (21 kPa), which equals 1 psi (7 kPa) for every 12°F (7°C) for this outside temperature condition.

## CAUTION!

The TPMS has been optimized for the original equipment tires and wheels. TPMS pressures and warning have been established for the tire size equipped on your vehicle. Undesirable system operation or sensor damage may result when using replacement equipment that is not of the same size, type, and/or style. Aftermarket wheels can cause sensor damage. Do not use tire sealant from a can, or balance beads if your vehicle is equipped with a TPMS, as damage to the sensors may result.

## BRAKE - Brake Warning Light

This light monitors various brake functions, including brake fluid level and parking brake application. If the brake light turns on it may indicate that the parking brake is applied, that the brake fluid level is low, or that there is a problem with the anti-lock brake system reservoir.

If the light remains on when the parking brake has been disengaged, and the fluid level is at the full mark on the master cylinder reservoir, it indicates a possible brake hydraulic system malfunction or that a problem with the Brake Booster has been detected by the Anti-Lock

# WHAT TO DO IN EMERGENCIES

Brake System (ABS)/Electronic Stability Control (ESC) system. In this case, the light will remain on until the condition has been corrected. If the problem is related to the brake booster, the ABS pump will run when applying the brake and a brake pedal pulsation may be felt during each stop.

The dual brake system provides a reserve braking capacity in the event of a failure to a portion of the hydraulic system. A leak in either half of the dual brake system is indicated by the Brake Warning Light, which will turn on when the brake fluid level in the master cylinder has dropped below a specified level. The light will remain on until the cause is corrected.

Vehicles equipped with the Anti-Lock Brake System (ABS), are also equipped with Electronic Brake Force Distribution (EBD). In the event of an EBD failure, the Brake Warning Light will turn on along with the ABS Light. Immediate repair to the ABS system is required.

Operation of the Brake Warning Light can be checked by turning the ignition switch from the OFF position to the ON/RUN position. The light should illuminate for approximately two seconds. The light should then turn off unless the parking brake is applied or a brake fault is detected. If the light does not illuminate, have the light inspected by an authorized dealer.

The light also will turn on when the parking brake is applied with the ignition switch in the ON/RUN position.

## NOTE:

This light shows only that the parking brake is applied. It does not show the degree of brake application.

## WARNING!

Driving a vehicle with the red brake light on is dangerous. Part of the brake system may have failed. It will take longer to stop the vehicle. You could have a collision. Have the vehicle checked immediately.



## - Malfunction Indicator Light (MIL)

The Malfunction Indicator Light (MIL) is part of an onboard diagnostic system called OBD II that monitors engine and automatic transmission control systems. The light will illuminate when the key is in the ON/RUN position before engine start. If the bulb does not come on when turning the key from OFF to ON/RUN, have the condition checked promptly.

Certain conditions, poor fuel quality, etc., may illuminate the light after engine start. The vehicle should be serviced if the light stays on through several of your typical driving cycles. In most situations, the vehicle will drive normally and will not require towing.

## CAUTION!

Prolonged driving with the Malfunction Indicator Light (MIL) on could cause damage to the engine control system. It also could affect fuel economy and driveability. If the MIL is flashing, severe catalytic converter damage and power loss will soon occur. Immediate service is required.

# WHAT TO DO IN EMERGENCIES


## WARNING!

A malfunctioning catalytic converter, as referenced above, can reach higher temperatures than in normal operating conditions. This can cause a fire if you drive slowly or park over flammable substances such as dry plants, wood, cardboard, etc. This could result in death or serious injury to the driver, occupants or others.

### - Electronic Stability Control (ESC) Activation/Malfunction Indicator Light

The “ESC Activation/Malfunction Indicator Light” in the instrument cluster will come on when the ignition switch is turned to the ON/RUN position. It should go out with the engine running. If the “ESC Activation/Malfunction Indicator Light” comes on continuously with the engine running, a malfunction has been detected in the ESC system. If this light remains on after several ignition cycles, and the vehicle has been driven several miles (kilometers) at speeds greater than 30 mph (48 km/h), see your authorized dealer as soon as possible to have the problem diagnosed and corrected.

#### NOTE:

- The “ESC Off Indicator Light” and the “ESC Activation/Malfunction Indicator Light” come on momentarily each time the ignition switch is turned to ON/RUN.
- Each time the ignition is turned to ON/RUN, the ESC system will be ON, even if it was turned off previously.
- The ESC system will make buzzing or clicking sounds when it is active. This is normal; the sounds will stop when ESC becomes inactive following the maneuver that caused the ESC activation.
- To improve the vehicle's traction when starting off in deep snow, sand or gravel, it may be desirable to switch the ESC system to Partial Off mode by momentarily pressing the ESC Off  switch located below the climate controls, on the switch panel.

### - Charging System Light

This light shows the status of the electrical charging system. If the charging system light remains on, it means that the vehicle is experiencing a problem with the charging system.

We recommend you do not continue driving if the charging system light is on. Have the vehicle serviced immediately.

### - Oil Pressure Warning Light

This light indicates low engine oil pressure. If the light turns on while driving, stop the vehicle and shut off the engine as soon as possible. A chime will sound for four minutes when this light turns on.

We recommend you do not operate the vehicle or engine damage will occur. Have the vehicle serviced immediately.

# WHAT TO DO IN EMERGENCIES

## - Anti-Lock Brake (ABS) Light

This light monitors the Anti-Lock Brake System (ABS). The light will turn on when the ignition switch is turned to the ON/RUN position and may stay on for as long as four seconds.

If the ABS light remains on or turns on while driving, it indicates that the Anti-Lock portion of the brake system is not functioning and that service is required. However, the conventional brake system will continue to operate normally if the BRAKE warning light is not on.

If the ABS light is on, the brake system should be serviced as soon as possible to restore the benefits of Anti-Lock brakes. If the ABS light does not turn on when the ignition switch is turned to the ON/RUN position, have the light inspected by an authorized dealer.

## - Electronic Throttle Control (ETC) Light

This light informs you of a problem with the Electronic Throttle Control (ETC) system.

If a problem is detected, the light will come on while the engine is running. Cycle the ignition key when the vehicle has completely stopped and the shift lever/gear selector is placed in the PARK position; the light should turn off.

If the light remains lit with the engine running, your vehicle will usually be drivable; however, see an authorized service center immediately. If the light is flashing when the engine is running, immediate service is required and you may experience reduced performance, an elevated/rough idle or engine stall and your vehicle may require towing.

## - Air Bag Warning Light

This light will turn on for four to eight seconds as a bulb check when the ignition switch is first turned to the ON/RUN position. If the light is either not on during starting, stays on, or turns on while driving, have the system inspected at an authorized dealer as soon as possible. Refer to "Occupant Restraints" in "Things To Know Before Starting Your Vehicle" of your Owner's Manual for further information.


### NOTE:

**The Air Bag System is designed to be maintenance free.**

## Oil Life Reset

Your vehicle is equipped with an engine oil change indicator system. The "Oil Change Due" message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded, to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate, dependent upon your personal driving style.

### Vehicles Equipped With Passive Entry

- Without pushing the brake pedal, push the ENGINE START/STOP button and cycle the ignition to the ON/RUN position (Do not start the engine.)
- Push and release the **DOWN**  arrow button to scroll downward through the main menu to "Vehicle Info".

# WHAT TO DO IN EMERGENCIES

- Push and release the **RIGHT** ▷ arrow button to access the "Oil Life" screen.
- Push and hold the **RIGHT** ▷ arrow button for one second to access the "Oil Life Reset" screen.
- Push and hold the **DOWN** ▽ arrow button until the screen shows 100% oil life.
- Push and release the **Up** arrow button to exit the EVIC screen.

## Vehicles Not Equipped With Passive Entry

- Without pushing the brake pedal, cycle the ignition to the ON/RUN position (Do not start the engine.)
- Push and release the **DOWN** ▽ arrow button to scroll downward through the main menu to "Vehicle Info".
- Push and release the **RIGHT** ▷ arrow button to access the "Oil Life" screen.
- Push and hold the **RIGHT** ▷ arrow button for one second to access the "Oil Life Reset" screen.
- Push and hold the **DOWN** ▽ arrow button until the screen shows 100% oil life.
- Push and release the **Up** arrow button to exit the EVIC screen.

### NOTE:

If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary, repeat this procedure.

## IF YOUR ENGINE OVERHEATS

In any of the following situations, you can reduce the potential for overheating by taking the appropriate action:

- On the highways – slow down.
- In city traffic – while stopped, shift the transmission to NEUTRAL, but do not increase engine idle speed.

### NOTE:

There are steps that you can take to slow down an impending overheat condition:

- If your air conditioner (A/C) is on, turn it off. The A/C system adds heat to the engine cooling system and turning the A/C off can help remove this heat.
- You can also turn the temperature control to maximum heat, the mode control to floor and the blower control to high. This allows the heater core to act as a supplement to the radiator and aids in removing heat from the engine cooling system.

# WHAT TO DO IN EMERGENCIES

## **CAUTION!**

Driving with a hot cooling system could damage your vehicle. If the temperature gauge reads HOT (H), pull over and stop the vehicle. Idle the vehicle with the air conditioner turned off until the pointer drops back into the normal range. If the pointer remains on HOT (H), and you hear continuous chimes, turn the engine off immediately, and call for service.

## **WARNING!**

You or others can be badly burned by hot engine coolant (antifreeze) or steam from your radiator. If you see or hear steam coming from under the hood, do not open the hood until the radiator has had time to cool. Never try to open a cooling system pressure cap when the radiator or coolant bottle is hot.

# WHAT TO DO IN EMERGENCIES

## JACKING AND TIRE CHANGING

### Jack Location

The scissor-type jack and tire changing tools are located in rear cargo area, below the load floor.

- Rotate the plastic thumb screw on the end of the jack to remove the jack from the bracket.



1 – Jacking Tools





# WHAT TO DO IN EMERGENCIES

## Spare Tire Stowage

- The spare tire is stowed under the rear of the vehicle by means of a cable winch mechanism. To remove or stow the spare, use the jack handle/lug wrench connected to the square socket extension to rotate the "spare tire drive" nut. The nut is located under a plastic cover at the center-rear of the cargo floor area, just inside the liftgate opening.



## Spare Tire Removal

1. Remove the jack tools from the bag.
2. Raise the protective rubber mat covering the storage compartment floor and remove the plug to access the winch drive.
3. Fit the jack handle extension over the drive nut. Use the lug wrench handle and extension to completely lower the spare tire. Keep turning the handle until the winch STOPS.

### NOTE:

Do not use power tools to operate the winch.



# WHAT TO DO IN EMERGENCIES

4. Slide the tire out from under the vehicle and rotate it vertically behind the rear bumper.



5. Spread the retaining tabs on the plastic plate and pull the metal stamping toward you to release it from the plastic plate.



6. Slide the metal stamping up the steel extension tube and winch cable. Rotate the metal stamping and push it through the hole in the plastic plate and wheel.



# WHAT TO DO IN EMERGENCIES

7. Pinch the three short and two long tubes to remove the protective plate from the steel spare wheel.



## Preparations For Jacking

1. Park the vehicle on a firm level surface, away from traffic for your safety.
2. Turn the engine off, place the transmission in PARK, fully depress the pedal to the floor to set the parking brake, and activate the Hazard Warning flashers.
3. Block both the front and rear of the wheel diagonally opposite of the jacking position.

### NOTE:

Passengers should not remain in the vehicle when the vehicle is being jacked.



# WHAT TO DO IN EMERGENCIES

## Jacking Instructions

1. Loosen the lug nuts on the road wheel one turn while still on the ground, but do not remove.



2. Determine the jacking location on the side of the vehicle. Attach the jack tool with the hook, the extension and the lug wrench to the jack as shown.



# WHAT TO DO IN EMERGENCIES



# WHAT TO DO IN EMERGENCIES


3. For the front axle, place the jack on the body flange just behind the front tire as indicated by the triangular lift point symbol on the sill molding. **Do not raise the vehicle until you are sure the jack is fully engaged.**



4. For a rear tire, place the jack in the slot on the rear tie-down bracket, just forward of the rear tire (as indicated by the triangular lift point symbol on the sill molding). **Do not raise the vehicle until you are sure the jack is fully engaged.**

5. Raise the vehicle by turning the jack screw clockwise. Raise the vehicle just enough to remove the flat tire.

6. Remove the lug nuts and wheel.

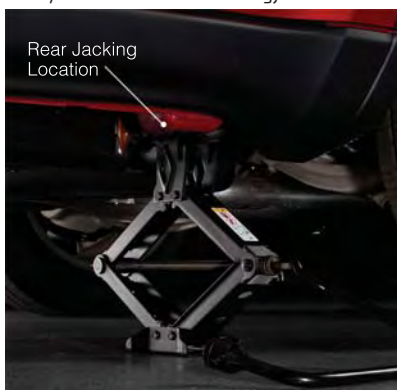

# WHAT TO DO IN EMERGENCIES

7. Install the temporary spare wheel/tire and lightly tighten the lug nuts prior to lowering to prevent the vehicle from moving on the jack.
8. Lower the vehicle by turning the jack screw counterclockwise, and remove the jack.
9. Finish tightening the lug nuts. Push down on the wrench while at the end of the handle for increased leverage. Tighten the lug nuts in a star pattern until each nut has been tightened twice. The correct wheel nut tightness is 130 ft lbs (176 N·m). If in doubt about the correct tightness, have them checked with a torque wrench by your authorized dealer or at a service station.
10. Remove the Dodge center cap using a jack tool from inside the aluminum road wheel and snap on the protective plastic plate.

## NOTE:

The plastic plate will prevent the road wheel from being scratched when sliding it under the vehicle.

11. Stand the wheel up against the bumper with the plastic plate facing you.
12. Slide the cable end, spring and metal tube through the wheel and plastic plate. Rotate the stamping on the cable and push it through the wheel and plastic plate. Snap the stamping into place.
13. Slide the road wheel on the ground using the protective plate until it is directly under the winch and between the rear bumper and exhaust system heat shields. Raise the tire by turning the lug wrench on the winch extension clockwise until it clicks/skips three times to make sure the cable is tight.



# WHAT TO DO IN EMERGENCIES

## NOTE:

Double check to ensure the tire is snug against the underbody of the vehicle. Damage to the winch cable may result if the vehicle is driven with the tire loose.

14. Lower the jack to the fully closed position. Return the tools to the proper positions in the tool bag. Fold the flap on the tool bag under the tools and roll the tools in the bag underneath the others. Use the Velcro<sup>®</sup> straps to secure the tool bag to the jack with the lug wrench on the forward side of the jack. Expand the jack on the bracket by turning the thumb screw clockwise until it is tight to prevent rattles.
15. Reinstall the plastic plug into the floor of the cargo area. Roll up and store the Jack, Tool Kit and Tire Changing Instructions. Reinstall the cover for the jack in the rear storage bin.

## NOTE:

The plastic thumb screw being on the right and the position of the lug wrench before the Velcro<sup>®</sup> straps go around the fully closed jack.

16. Remove the blocks/rocks from the opposite tire.
17. Have the aluminum road wheel and tire repaired as soon as possible and properly secure the spare tire, jack and tool kit.





# WHAT TO DO IN EMERGENCIES

## Road Tire Installation

1. Mount the road tire on the axle.
2. Install the remaining lug nuts with the cone shaped end of the nut toward the wheel. Lightly tighten the lug nuts.
3. Lower the vehicle to the ground by turning the jack handle counterclockwise.
4. Finish tightening the lug nuts. Push down on the wrench while at the end of the handle for increased leverage. Tighten the lug nuts in a star pattern until each nut has been tightened twice. The correct tightness of each lug nut is 130 ft/lbs (176 N·m). If in doubt about the correct tightness, have them checked with a torque wrench by your authorized dealer or service station.
5. After 25 miles (40 km) check the lug nut torque with a torque wrench to ensure that all lug nuts are properly seated against the wheel.

### CAUTION!

- Do not use power tools to winch the tire up or down. Impact type tools can damage the winch mechanism.
- Do not attempt to raise the vehicle by jacking on locations other than those indicated in the Jacking Instructions for this vehicle.
- Be sure to mount the spare tire with the valve stem facing outward. The vehicle could be damaged if the spare tire is mounted incorrectly.

# WHAT TO DO IN EMERGENCIES

## WARNING!

- Do not attempt to change a tire on the side of the vehicle close to moving traffic. Pull far enough off the road to avoid the danger of being hit when operating the jack or changing the wheel.
- Being under a jacked-up vehicle is dangerous. The vehicle could slip off the jack and fall on you. You could be crushed. Never put any part of your body under a vehicle that is on a jack. If you need to get under a raised vehicle, take it to a service center where it can be raised on a lift.
- The jack is designed to be used as a tool for changing tires only. The jack should not be used to lift the vehicle for service purposes. The vehicle should be jacked on a firm level surface only. Avoid ice or slippery areas.
- Always park on a firm, level surface as far from the edge of the roadway as possible before raising the vehicle.
- Turn on the Hazard Warning flasher.
- Block the wheel diagonally opposite the wheel to be raised.
- Set the parking brake firmly and set the automatic transmission in PARK.
- Never start or run the engine with the vehicle on a jack.
- Do not let anyone sit in the vehicle when it is on a jack.
- Do not get under the vehicle when it is on a jack.
- Only use the jack in the positions indicated and for lifting this vehicle during a tire change.
- If working on or near a roadway, be extremely careful of motor traffic.
- To assure that spare tires, flat or inflated, are securely stowed, spares must be stowed with the valve stem facing the ground. Carefully follow these tire changing warnings to help prevent personal injury or damage to your vehicle:
  - Raising the vehicle higher than necessary can make the vehicle less stable. It could slip off the jack and hurt someone near it. Raise the vehicle only enough to remove the tire.
  - To avoid the risk of forcing the vehicle off the jack, do not fully tighten the wheel nuts until the vehicle has been lowered. Failure to follow this warning may result in personal injury.
  - Do not use power tools to winch the tire up or down. Impact-type tools may damage the winch mechanism.
  - A loose tire or jack, thrown forward in a collision or hard stop could endanger the occupants of the vehicle. Always stow the jack parts and the spare tire in the places provided.
  - To avoid the risk of forcing the vehicle off the jack, do not tighten the lug nuts fully until the vehicle is lowered to the ground.

# WHAT TO DO IN EMERGENCIES

## BATTERY LOCATION

The battery in your vehicle is located under the passenger's front seat. Remote battery posts are located on the right side of the engine compartment for jump-starting.

## JUMP-STARTING

If your vehicle has a discharged battery it can be jump-started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack.

Jump-starting can be dangerous if done improperly so please follow the procedures in this section carefully.


### NOTE:

When using a portable battery booster pack follow the manufacturer's operating instructions and precautions.

### Preparations For Jump-Start

The battery in your vehicle is located under the passenger's front seat. There are remote locations under the hood to assist in jump starting.

- Set the parking brake, shift the automatic transmission into PARK and turn the ignition to OFF.
- Turn off the heater, radio, and all unnecessary electrical accessories.
- Remove the protective cover over the remote positive (+) battery post. Pull upward on the cover to remove it.
- Remove the protective plug covering the remote negative (-) post.
- If using another vehicle to jump-start the battery, park the vehicle within the jumper cables reach, set the parking brake and make sure the ignition is OFF.

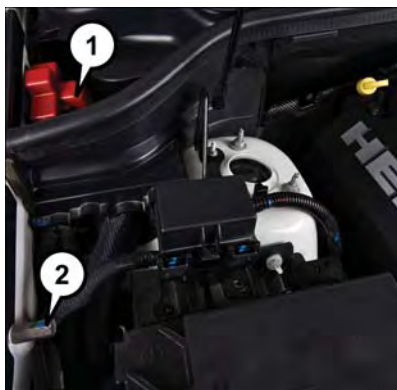

1 – Remote Positive (+) Jump Starting Post  
2 – Remote Negative (-) Jump Starting Post

# WHAT TO DO IN EMERGENCIES

## Jump-Starting Procedure

1. Connect the positive **(+)** end of the jumper cable to the remote positive **(+)** post of the vehicle with discharged battery.
2. Connect the opposite end of the positive **(+)** jumper cable to the positive **(+)** post of the booster battery.
3. Connect the negative end **(-)** of the jumper cable to the negative **(-)** post of the booster battery.
4. Connect the opposite end of the negative **(-)** jumper cable to the remote negative **(-)** post of the vehicle with the discharged battery.
5. Start the engine in the vehicle that has the booster battery, let the engine idle a few minutes, and then start the engine in the vehicle with the discharged battery.

Once the engine is started, remove the jumper cables in the reverse sequence:

1. Disconnect the negative **(-)** jumper cable from the remote negative **(-)** post of the vehicle with the discharged battery.
2. Disconnect the negative end **(-)** of the jumper cable from the negative **(-)** post of the booster battery.
3. Disconnect the opposite end of the positive **(+)** jumper cable from the positive **(+)** post of the booster battery.
4. Disconnect the positive **(+)** end of the jumper cable from the remote positive **(+)** post of the vehicle with the discharged battery.
5. Reinstall the protective cover over the remote positive **(+)** post of the vehicle with the discharged battery.
6. Reinstall the protective plug over the remote negative **(-)** post of the vehicle with the discharged battery.

### NOTE:

If frequent jump-starting is required to start your vehicle you should have the battery and charging system inspected at your authorized dealer.

### CAUTION!

- Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery, starter motor, alternator or electrical system may occur.
- Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.
- Accessories that can be plugged into the vehicle power outlets draw power from the vehicle's battery, even when not in use (e.g., cellular phones, etc.). Eventually, if plugged in long enough, the vehicle's battery discharges sufficiently to degrade battery life and/or prevent the engine from starting.

# WHAT TO DO IN EMERGENCIES

## WARNING!

- When temperatures are below the freezing point, electrolyte in a discharged battery may freeze. Do not attempt jump-starting because the battery could rupture or explode and cause personal injury. Battery temperature must be brought above the freezing point before attempting a jump-start.
- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime the ignition switch is on. You can be injured by moving fan blades.
- Remove any metal jewelry, such as watch bands or bracelets, that might make an inadvertent electrical contact. You could be severely injured.
- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.
- Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.
- Failure to follow this procedure could result in personal injury or property damage due to battery explosion.
- Do not connect the cable to the negative post (-) of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

## MANUAL PARK RELEASE 8-SPEED

In order to push or tow the vehicle in cases where the transmission will not shift out of PARK (such as a dead battery), a Manual Park Release is available. The Manual Park Release is located in the center console under an access cover.

Follow these steps to use the Manual Park Release:

1. Lift upward on the access cover, located in the rear portion of the center console to release it from the console hinges.
2. Using a screwdriver or similar tool, push the metal latch in towards the tether strap.
3. While the metal latch is in the open position, simultaneously pull upwards on the tether strap until it clicks and releases out of the park position.



# WHAT TO DO IN EMERGENCIES

## NOTE:

To prevent the vehicle from rolling unintentionally, firmly apply the parking brake.

To Disengage the Manual Park Release Lever:

1. Pull upward on the tether while pushing the release latch towards the tether to unlock the lever.
2. Once the tension has been released and the lever has been unlocked, push the lever all the way down to be sure it is stowed properly and locks into position.
3. Reinstall the access cover by pushing it downward until it is locked into place.



# WHAT TO DO IN EMERGENCIES

## TOWING A DISABLED VEHICLE

Towing Condition	Wheels OFF the Ground	Rear-Wheel Drive Models	All-Wheel Drive Models With Single-Speed Transfer Case	All-Wheel Drive Models With Two-Speed Transfer Case
Flat Tow	NONE	<p><b>If Transmission Is Operable:</b></p> <ul style="list-style-type: none"> <li>Transmission in <b>NEUTRAL</b></li> <li>30 mph (48 km/h)</li> <li>30 miles (48 km) <b>max</b> distance</li> </ul>	<b>NOT ALLOWED</b>	<p><b>See Instructions:</b></p> <ul style="list-style-type: none"> <li>Transmission in <b>PARK</b></li> <li>Transfer case in <b>NEUTRAL (N)</b></li> <li>Tow in forward direction</li> </ul>
Wheel Lift or Dolly Tow	Front	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>
	Rear	OK	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>
Flatbed	<b>ALL</b>	<b>BEST METHOD</b>	<b>BEST METHOD</b>	<b>BEST METHOD</b>

# WHAT TO DO IN EMERGENCIES

## FREEING A STUCK VEHICLE

- If your vehicle becomes stuck in mud, sand or snow, it can often be moved by a rocking motion. Turn your steering wheel right and left to clear the area around the front wheels. Then, move the shift lever/gear selector back and forth between REVERSE and DRIVE. Using minimal accelerator pedal pressure to maintain the rocking motion, without spinning the wheels, is most effective.
- Allow the engine to idle with the transmission shift lever/gear selector in NEUTRAL for at least one minute after every five rocking-motion cycles. This minimizes overheating and reduce the risk of transmission failure during prolonged efforts to free a stuck vehicle.

### NOTE:

If your vehicle is equipped with Electronic Stability Control (ESC) then press the "ESC Off" switch, to place the Electronic Stability Control (ESC) system in "Partial Off" mode, before rocking the vehicle.

### CAUTION!

Revvng the engine or spinning the wheels too fast may lead to transmission overheating and failure. It can also damage the tires. Do not spin the wheels above 30 mph (48 km/h) while in gear (no transmission shifting occurring).

### WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause tire damage or failure. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) when you are stuck. Do not let anyone near a spinning wheel, no matter what the speed.



# WHAT TO DO IN EMERGENCIES

## EVENT DATA RECORDER (EDR)

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating.
- Whether or not the driver and passenger safety belts were buckled/fastened.
- How far (if at all) the driver was depressing the accelerator and/or brake pedal.
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

### **NOTE:**

EDR data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age, and crash location) is recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

## CAP-LESS FUEL FILL FUNNEL

The funnel for the Cap-Less Fuel System is located on the jacking tool kit. If your vehicle is out of fuel and an auxiliary fuel can is needed, insert the funnel into the filler neck and proceed to fill the vehicle.

# MAINTAINING YOUR VEHICLE

## OPENING THE HOOD

1. Pull the hood release lever located below the steering wheel at the base of the instrument panel.
2. Reach into the opening beneath the center of the hood and push and hold the safety latch lever to the left while lifting the hood at the same time.



### WARNING!

Be sure the hood is fully latched before driving your vehicle. If the hood is not fully latched, it could open when the vehicle is in motion and block your vision. Failure to follow this warning could result in serious injury or death.

# MAINTAINING YOUR VEHICLE

## ADDING FUEL

1. Press the fuel filler door release switch (located under the headlamp switch).



2. Open the fuel filler door.

### NOTE:

In certain cold conditions, ice may prevent the fuel door from opening. If this occurs, lightly push on the fuel door to break the ice buildup and re-release the fuel door using the inside release button. Do not pry on the door.

3. There is no fuel filler cap. A flapper door inside the pipe seals the system.
4. Insert the fuel nozzle fully into the filler pipe, the nozzle opens and holds the flapper door while refueling.
5. Fill the vehicle with fuel, when the fuel nozzle "clicks" or shuts off the fuel tank is full.
6. Remove the fuel nozzle and close the fuel door.



# MAINTAINING YOUR VEHICLE

## Fuel Door Emergency Release

- To manually open the fuel door, remove the storage bin located in the left rear cargo area.



- Pull the release cable located in the storage bin opening.




## ENGINE COMPARTMENT 3.6L ENGINE



# MAINTAINING YOUR VEHICLE

## 5.7L ENGINE

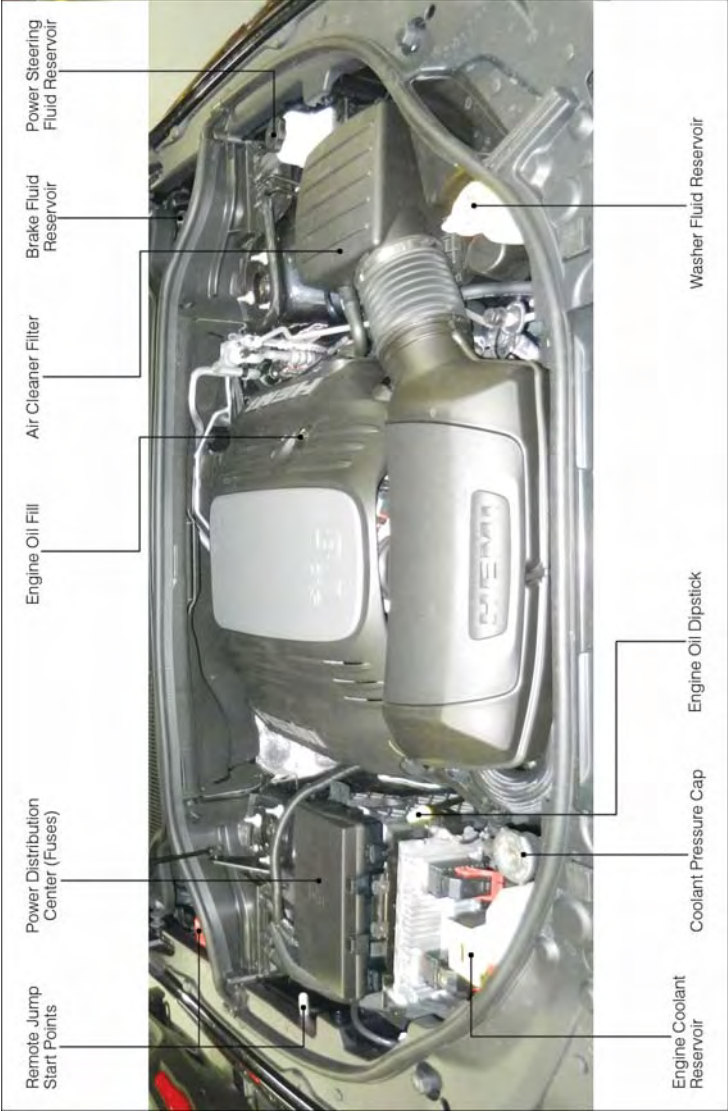

# MAINTAINING YOUR VEHICLE

## FLUIDS AND CAPACITIES

Component	Fluid, Lubricant, or Genuine Part	Capacities
Engine Coolant – 3.6L Engine	We recommend you use MOPAR® Engine Coolant/Antifreeze 10-Year/150,000 Mile Formula.	10.4 Quarts (9.9 Liters) Includes heater and coolant recovery bottle filled to MAX level.
Engine Coolant – 5.7L Engine (Without Trailer Tow Package)	We recommend you use MOPAR® Engine Coolant/Antifreeze 10-Year/150,000 Mile Formula.	15.4 Quarts (14.6 Liters) Includes heater and coolant recovery bottle filled to MAX level.
Engine Coolant – 5.7L Engine (With Trailer Tow Package)	We recommend you use MOPAR® Engine Coolant/Antifreeze 10-Year/150,000 Mile Formula.	16 Quarts (15.2 Liters) Includes heater and coolant recovery bottle filled to MAX level.
Engine Oil with Filter – 3.6L Engine	We recommend you use API certified 5W-20 engine oil, meeting the requirements of Chrysler Material Standard MS-6395 such as MOPAR®, Pennzoil®, Shell Helix® or equivalent. Refer to your oil filler cap for correct SAE grade.	6 Quarts (5.6 Liters)
Engine Oil with Filter – 5.7L Engine	We recommend you use API certified 5W-20 engine oil, meeting the requirements of Chrysler Material Standard MS-6395 such as MOPAR®, Pennzoil®, Shell Helix® or equivalent. Refer to your oil filler cap for correct SAE grade.	7 Quarts (6.6 Liters)
Engine Oil Filter	We recommend you use MOPAR® Engine Oil Filters.	–
Spark Plug – 3.6L Engine	We recommend you use MOPAR® Spark Plugs (Gap 0.043 in [1.1 mm]).	–
Spark Plug – 5.7L Engine	We recommend you use MOPAR® Spark Plugs (Gap 0.043 in [1.1 mm]).	–
Automatic Transmission	Use only Mopar® ZF 869 Speed ATF™ Automatic Transmission Fluid or equivalent. Failure to use the correct fluid may affect the function or performance of your transmission.	–
Transfer Case – 3.6L Engine	We recommend you use Shell Automatic Transmission Fluid 3353.	–
Transfer Case – 5.7L Engine	We recommend you use MOPAR® ATF+4® Automatic Transmission Fluid.	–
Axle Differential (Front/Rear)	We recommend you use MOPAR® GL-5 Synthetic Axle Lubricant SAE 75W-85.	–

# MAINTAINING YOUR VEHICLE

Component	Fluid, Lubricant, or Genuine Part	Capacities
Brake Master Cylinder	We recommend you use MOPAR® DOT 3 and SAE J1703. If DOT 3 is not available, then DOT 4 is acceptable. Use only recommended brake fluids.	–
Power Steering Reservoir – 3.6L Engine	We recommend you use MOPAR® Hydraulic Fluid meeting Chrysler Material Standard MS-11655.	–
Power Steering Reservoir – 5.7L Engine	We recommend you use MOPAR® Power Steering Fluid +4, or MOPAR® ATF+4® Automatic Transmission Fluid meeting Chrysler Material Standard MS-9602.	–
Fuel Selection – 3.6L, 5.7L Engine	87 Octane acceptable. 89 Octane recommended for 5.7L.	25 Gallons (94 Liters) (Approximate)

## CAUTION!

- Mixing of engine coolant (antifreeze) other than specified Organic Additive Technology (OAT) engine coolant (antifreeze), may result in engine damage and may decrease corrosion protection. Organic Additive Technology (OAT) engine coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) engine coolant (antifreeze) or any “globally compatible” coolant (antifreeze). If a non-OAT engine coolant (antifreeze) is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS-12106), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based engine coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator engine coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based engine coolant (antifreeze). Use of propylene glycol-based engine coolant (antifreeze) is not recommended.

## E-85 Flexible Fuel – 3.6L Engine Only

## CAUTION!

Only vehicles with the E-85 fuel filler door label or a yellow gas cap can operate on E-85.

- Refer to your Owner's Manual on the DVD for further details.



# MAINTAINING YOUR VEHICLE

## MAINTENANCE SCHEDULE – GASOLINE ENGINE

Your vehicle is equipped with an automatic oil change indicator system. The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

Based on engine operation conditions, the oil change indicator message will illuminate. This means that service is required for your vehicle. Operating conditions such as frequent short-trips, trailer tow, extremely hot or cold ambient temperatures, and E85 fuel usage will influence when the “Oil Change Required” message is displayed. Severe Operating Conditions can cause the change oil message to illuminate as early as 3,500 miles (5,600 km) since last reset. Have your vehicle serviced as soon as possible, within the next 500 miles (805 km).

Your authorized dealer will reset the oil change indicator message after completing the scheduled oil change. If a scheduled oil change is performed by someone other than your authorized dealer, the message can be reset by referring to the steps described under “Instrument Cluster Warning Lights” in “What To Do In Emergencies” in this guide or “Electronic Vehicle Information Center (EVIC)” in “Understanding Your Instrument Panel” in your Owners Manual on the DVD for further information.

### **NOTE:**

Under no circumstances should oil change intervals exceed 10,000 miles (16,000 km) or twelve months, whichever comes first.

### **Severe Duty All Models**

Change Engine Oil at 4000 miles (6,500 km) if the vehicle is operated in a dusty and off road environment. This type of vehicle use is considered Severe Duty.

### **Once A Month Or Before A Long Trip:**

- Check engine oil level
- Check windshield washer fluid level
- Check the tire inflation pressures and look for unusual wear or damage
- Check the fluid levels of the coolant reservoir, brake master cylinder, power steering and transmission as needed
- Check function of all interior and exterior lights

# MAINTAINING YOUR VEHICLE

## Maintenance Chart

### Required Maintenance

Refer to the Maintenance Schedules on the following pages for required maintenance.

<b>At Every Oil Change Interval As Indicated By Oil Change Indicator System:</b>
• Change oil and filter.
• Rotate the tires. <b>Rotate at the first sign of irregular wear, even if it occurs before the oil indicator system turns on.</b>
• Inspect battery and clean and tighten terminals as required.
• Inspect automatic transmission fluid if equipped with dipstick.
• Inspect brake pads, shoes, rotors, drums, hoses and park brake.
• Inspect engine cooling system protection and hoses.
• Inspect exhaust system.
• Inspect engine air cleaner if using in dusty or off-road conditions.

# MAINTAINING YOUR VEHICLE

Mileage or time passed (whichever comes first)	20,000	30,000	40,000	50,000	60,000	70,000	80,000	90,000	100,000	110,000	120,000	130,000	140,000	150,000
Or Years:	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Or Kilometers:	32,000	48,000	64,000	80,000	96,000	112,000	128,000	144,000	160,000	176,000	192,000	208,000	224,000	240,000
<b>Additional Inspections</b>														
Inspect the CV joints.		X			X			X			X			X
Inspect front suspension, tie rod ends, and replace if necessary.	X		X		X		X		X		X		X	
Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, off-road or frequent trailer towing.	X		X		X		X		X		X		X	
Inspect the brake linings, replace as necessary.	X		X		X		X		X		X		X	
Adjust parking brake.	X		X		X		X		X		X		X	
Inspect transfer case fluid.		X			X			X						X
<b>Additional Maintenance</b>														
Replace engine air filter.		X			X			X			X			X
Replace air conditioning filter.	X		X		X		X		X		X		X	
Replace spark plugs (3.6L engine).**								X						
Replace spark plugs (5.7L engine).**								X						
Flush and replace the engine coolant at 10 years or 150,000 miles (240,000 km) whichever comes first.									X				X	
Change transfer case fluid.											X			
Inspect and replace PCV valve if necessary.									X					

\*\* The spark plug change interval is mileage based only, yearly intervals do not apply.

# MAINTAINING YOUR VEHICLE

## **WARNING!**

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident.

# MAINTAINING YOUR VEHICLE

## MAINTENANCE RECORD

	Odometer	Date	Signature, Authorized Service Center
20,000 Miles (32,000 km) or 2 Years			
30,000 Miles (48,000 km) or 3 Years			
40,000 Miles (64,000 km) or 4 Years			
50,000 Miles (80,000 km) or 5 Years			
60,000 Miles (96,000 km) or 6 Years			
70,000 Miles (112,000 km) or 7 Years			
80,000 Miles (128,000 km) or 8 Years			
90,000 Miles (144,000 km) or 9 Years			
100,000 Miles (160,000 km) or 10 Years			
110,000 Miles (176,000 km) or 11 Years			
120,000 Miles (192,000 km) or 12 Years			
130,000 Miles (208,000 km) or 13 Years			
140,000 Miles (224,000 km) or 14 Years			
150,000 Miles (240,000 km) or 15 Years			

# MAINTAINING YOUR VEHICLE

## FUSES

### Power Distribution Center (fuses)

- The Power Distribution Center is located in the engine compartment near the battery. This center contains cartridge fuses, micro fuses, relays, and circuit breakers. A description of each fuse and component may be stamped on the inside cover, otherwise the cavity number of each fuse is stamped on the inside cover that corresponds to the following chart.

Cavity	Cartridge Fuse	Micro Fuse	Description
F03	60 Amp Yellow		Rad Fan
F05	40 Amp Green		Compressor for Air Suspension – If Equipped
F06	40 Amp Green		Antilock Brakes/Electronic Stability Control Pump
F07	40 Amp Green		Starter Solenoid
F08	40 Amp Green		Emission sensors (Diesel engine only)
F09	40 Amp Green		Diesel Fuel Heater (Diesel engine only)
F10	40 Amp Green		Body Controller / Exterior Lighting #2
F11	30 Amp Pink		Trailer Tow Electric Brake – If Equipped
F12	40 Amp Green		Body Controller #3 / Interior Lights
F13	40 Amp Green		Blower Motor Front
F14	40 Amp Green		Body Controller #4 / Power Locks
F17	30 Amp Pink		Headrest Release – If Equipped
F20	30 Amp Pink		Passenger Door Module
F22	20 Amp Blue		Engine Control Module
F23	30 Amp Pink		Body Controller #1
F24	30 Amp Pink		Driver Door Module
F25	30 Amp Pink		Front Wipers
F26	30 Amp Pink		Antilock Brakes/Stability Control Module/Valves
F28	20 Amp Blue		Trailer Tow Backup Lights – If Equipped
F29	20 Amp Blue		Trailer Tow Parking Lights – If Equipped
F30	30 Amp Pink		Trailer Tow Receptacle – If Equipped
F32	30 Amp Pink		Drive Train Control Module
F34	30 Amp Pink		Slip Differential Control
F35	30 Amp Pink		Sunroof – If Equipped
F36	30 Amp Pink		Rear Defroster
F37	30 Amp Pink		Rear Blower – If Equipped

# MAINTAINING YOUR VEHICLE

Cavity	Cartridge Fuse	Micro Fuse	Description
F38	30 Amp Pink		Power Inverter 115V AC – If Equipped
F39	30 Amp Pink		Power Liftgate – If Equipped
F40	10 Amp Red		Daytime Running Lights
F42		20 Amp Yellow	Horn
F44		10 Amp Red	Diagnostic Port
F46		10 Amp Red	Tire Pressure Monitor – If Equipped
F49		10 Amp Red	Integrated Central Stack / Climate Control
F50		20 Amp Yellow	Air Suspension Control Module – If Equipped
F51		10 Amp Red	Ignition Node Module / Keyless Ignition / Steering Column Lock
F52		5 Amp Tan	Battery Sensor
F53		20 Amp Yellow	Trailer Tow – Left Turn/Stop Lights – If Equipped
F56		15 Amp Blue	Additional Content (Diesel engine only)
F57		15 Amp Blue	Transmission
F59		10 Amp Red	Purging Pump (Diesel engine only)
F60		15 Amp Blue	Transmission Control Module
F62		10 Amp Red	Air Conditioning Clutch
F63		20 Amp Yellow	Ignition Coils (Gas), Urea Heater (Diesel)
F64		25 Amp Natural	Fuel Injectors / Powertrain
F66		10 Amp Red	Sunroof / Passenger Window Switches / Rain Sensor
F67		15 Amp Blue	CD / DVD / Bluetooth Hands-free Module – If Equipped
F68		20 Amp Yellow	Rear Wiper Motor
F70		20 Amp Yellow	Fuel Pump Motor
F71		30 Amp Green	Audio Amplifier
F73		15 Amp Blue	HID Headlamps Right
F74		20 Amp Yellow	Brake Vacuum Pump – If Equipped
F76		10 Amp Red	Antilock Brakes/Electronic Stability Control
F77		10 Amp Red	Drivetrain Control Module/Front Axle Disconnect Module
F78		10 Amp Red	Engine Control Module / Electric Power Steering – If Equipped
F80		10 Amp Red	Universal Garage Door Opener / Compass / Anti-Intrusion Module
F81		20 Amp Yellow	Trailer Tow Right Turn/Stop Lights

# MAINTAINING YOUR VEHICLE

Cavity	Cartridge Fuse	Micro Fuse	Description
F82		10 Amp Red	Steering Column Control Module/ Cruise Control
F83		10 Amp Red	Fuel Door
F84		15 Amp Blue	Switch Bank/Instrument Cluster
F85		10 Amp Red	Airbag Module
F86		10 Amp Red	Airbag Module
F87		10 Amp Red	Air Suspension – If Equipped/ Trailer Tow / Steering Column Control Module
F88		15 Amp Blue	Instrument Panel Cluster
F90/F91		20 Amp Yellow	Power Outlet (Rear seats) Selectable
F92		10 Amp Red	Rear Console Lamp – If Equipped
F93		20 Amp Yellow	Cigar Lighter
F94		10 Amp Red	Shifter / Transfer Case Module
F95		10 Amp Red	Rear Camera / Park Assist
F96		10 Amp Red	Rear Seat Heater Switch / Flashlamp Charger – If Equipped
F97		25 Amp Natural	Rear Heated Seats & Heated Steering Wheel – If Equipped
F98		25 Amp Natural	Front Heated Seats – If Equipped
F99		10 Amp Red	Climate Control / Driver Assistance Systems Module
F100		10 Amp Red	Active Damping – If Equipped
F101		15 Amp Blue	Electrochromatic Mirror/Smart High Beams – If Equipped
F103		10 Amp Red	Cabin Heater (Diesel engine only)
F104		20 Amp Yellow	Power Outlets (Instrument Panel/ Center Console)

## CAUTION!

- When installing the power distribution center cover, it is important to ensure the cover is properly positioned and fully latched. Failure to do so may allow water to get into the power distribution center and possibly result in an electrical system failure.
- When replacing a blown fuse, it is important to use only a fuse having the correct amperage rating. The use of a fuse with a rating other than indicated may result in a dangerous electrical system overload. If a properly rated fuse continues to blow, it indicates a problem in the circuit that must be corrected.



# MAINTAINING YOUR VEHICLE


## TIRE PRESSURES

Check the inflation pressure of each tire, including the spare tire, at least monthly and inflate to the recommended pressure for your vehicle.

The tire pressures recommended for your vehicle are found on the “Tire and Loading Information” label located on the driver’s side door opening.

### NOTE:

Refer to the Owner’s Manual on the DVD for more information regarding tire warnings and instructions.

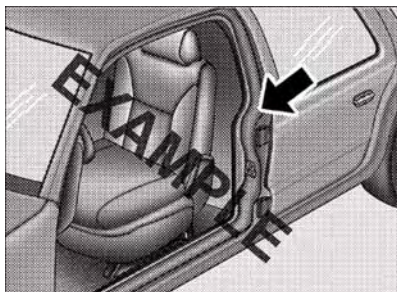

Tire And Loading Information Location (Example)

### WARNING!

- Overloading of your tires is dangerous. Overloading can cause tire failure, affect vehicle handling, and increase your stopping distance. Use tires of the recommended load capacity for your vehicle. Never overload them.
- Improperly inflated tires are dangerous and can cause collisions. Under-inflation is the leading cause of tire failure and may result in severe cracking, component separation, or “blow out”. Over-inflation reduces a tire’s ability to cushion shock. Objects on the road and chuck holes can cause damage that results in tire failure. Unequal tire pressures can cause steering problems. You could lose control of your vehicle. Over-inflated or under-inflated tires can affect vehicle handling and can fail suddenly, resulting in loss of vehicle control.

## WHEEL AND WHEEL TRIM CARE

All wheels and wheel trim, especially aluminum and chrome plated wheels, should be cleaned regularly using mild (neutral Ph) soap and water to maintain their luster and to prevent corrosion. Wash wheels with the same soap solution recommended for the body of the vehicle.

Your wheels are susceptible to deterioration caused by salt, sodium chloride, magnesium chloride, calcium chloride, etc., and other road chemicals used to melt ice or control dust on dirt roads. Use a soft cloth or sponge and mild soap to wipe away promptly. Do not use harsh chemicals or a stiff brush. They can damage the wheel’s protective coating that helps keep them from corroding and tarnishing.

# MAINTAINING YOUR VEHICLE

## NOTE:

Many aftermarket wheel cleaners contain strong acids or strong alkaline additives that can harm the wheel surface.

### CAUTION!

Avoid products or automatic car washes that use acidic solutions or strong alkaline additives or harsh brushes. These products and automatic car washes may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, MOPAR Wheel Cleaner or equivalent is recommended.

When cleaning extremely dirty wheels including excessive brake dust, care must be taken in the selection of tire and wheel cleaning chemicals and equipment to prevent damage to the wheels. Mopar Wheel Treatment or Mopar Chrome Cleaner or their equivalent is recommended or select a non-abrasive, non-acidic cleaner for aluminum or chrome wheels. Do not use any products on Dark Vapor or Black Satin Chrome Wheels. They will permanently damage this finish and such damage is not covered by the New Vehicle Limited Warranty.

### CAUTION!

Do not use scouring pads, steel wool, a bristle brush, metal polishes or oven cleaner. These products may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, MOPAR Wheel Cleaner or equivalent is recommended.

## NOTE:

If you intend parking or storing your vehicle for an extended period after cleaning the wheels with wheel cleaner, drive your vehicle for a few minutes before doing so. Driving the vehicle and applying the brakes when stopping will reduce the risk of brake rotor corrosion.

### Dark Vapor Or Black Satin Chrome Wheels

### CAUTION!

If your vehicle is equipped with Dark Vapor or Black Satin Chrome wheels DO NOT USE wheel cleaners, abrasives or polishing compounds. They will permanently damage this finish and such damage is not covered by the New Vehicle Limited Warranty. USE ONLY MILD SOAP AND WATER WITH A SOFT CLOTH. Used on a regular basis; this is all that is required to maintain this finish.

# MAINTAINING YOUR VEHICLE

## EXTERIOR BULBS

<b>LIGHT BULBS - Exterior</b>	<b>Bulb Number</b>
Low Beam/High Beam (Bi-Xenon) Headlamps	D3S (Service at Authorized Dealer)
Low Beam/High Beam/Daytime Running Lamp (DRL) Bi-Halogen Headlamps (Base)	HIR2
Low Beam/High Beam (Bi-Halogen) Headlamps (Uplevel)	HIR2
Front Park/Turn Signal Lamps (Base)	3157NAK
Front Turn Signal Lamps (Uplevel & Premium)	3157NAK
Front Park Lamp/Daytime Running Lamp (Uplevel & Premium)	LED (Service at Authorized Dealer)
Front Side Marker Lamps	LED (Service at Authorized Dealer)
Front Fog Lamps	H11
Rear Tail Lamps/Sidemarkers Lamps	LED (Service at Authorized Dealer)
Rear Stop/Turn Signal Lamps	LED (Service at Authorized Dealer)
Rear Liftgate Tail Lamps	LED (Service at Authorized Dealer)
Rear Backup Lamps	921 (W16W)
Rear License Lamps	LED (Service at Authorized Dealer)
Center High-Mounted Stop Lamp (CHMSL)	LED (Service at Authorized Dealer)

\* CHMSL is not serviceable. It is a LED lamp. To replace the LED, the entire CHMSL assembly must be replaced.

\*\* The headlamps are a type of high-voltage discharge tube. High voltage can remain in the circuit even with the headlamp switch off and the Key Fob removed. Because of this, you should not attempt to service a headlamp bulb yourself. If a headlamp bulb fails, take your vehicle to an authorized dealer for service.

# CUSTOMER ASSISTANCE

## FCA US LLC CUSTOMER CENTER

P.O. Box 21-8004 Auburn Hills, MI 48321-8004 Phone: 1-800-423-6343

## FCA CANADA INC. CUSTOMER CENTER

P.O. Box 1621 Windsor, Ontario N9A 4H6 Phone: 1-800-465-2001 (English) Phone: 1-800-387-9983 (French)

## ASSISTANCE FOR THE HEARING IMPAIRED

To assist customers who have hearing difficulties, the manufacturer has installed special TDD (Telecommunication Devices for the Deaf) equipment at its customer center. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with the manufacturer by dialing 1-800-380-CHRY. Canadian residents with hearing difficulties that require assistance can use the special needs relay service offered by Bell Canada. For TTY teletypewriter users, dial 711 and for Voice callers, dial 1-800-855-0511 to connect with a Bell Relay Service operator.

### WARNING!

Engine exhaust, some of its constituents, and certain vehicle components contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm.

## PUBLICATIONS ORDERING

- **If you are the first registered retail owner of your vehicle**, you may obtain one free printed copy of the Owner's Manual, Warranty Booklet or Radio Manuals on your DVD by calling 1-800-423-6343 (U.S.) or 1-800-387-1143 (Canada) or by contacting your dealer.
- Replacement User Guide kits or DVDs or, if you prefer, additional printed copies of the Owner's Manual, Warranty Booklet or Radio Manuals may be purchased by visiting [www.techauthority.com](http://www.techauthority.com) or by calling 1-800-890-4038 (U.S.) or 1-800-387-1143 (Canada). Visa, Master Card, American Express and Discover orders are accepted. If you prefer mailing your order, please call the above numbers for an order form.

### NOTE:

- A street address is required when ordering manuals (no P.O. Boxes).
- The Owner's Manual and User Guide electronic files are also available on the Chrysler, Jeep, Ram Truck, Dodge and SRT websites.
- Click on the "For Owners" tab, select "Owner/Service Manuals", then select your desired model year and vehicle from the drop down lists.

## REPORTING SAFETY DEFECTS IN THE UNITED STATES

If you believe that your vehicle has a defect that could cause a collision or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying the manufacturer.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your authorized dealer and the manufacturer.

To contact NHTSA, you may either call the Auto Safety Hotline toll free at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., West Building, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

### **In Canada**

If you believe that your vehicle has a safety defect, you should contact the Customer Service Department immediately. Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/eng/roadsafety/safedrivers-childsafety-index-53.htm>

French Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/securiteroutiere/>

# MOPAR<sup>®</sup> ACCESSORIES

## AUTHENTIC ACCESSORIES BY MOPAR<sup>®</sup>

- The following highlights just some of the many Authentic Dodge Accessories by Mopar<sup>®</sup> featuring a fit, finish, and functionality specifically for your Dodge Durango.
- In choosing Authentic Accessories you gain far more than expressive style, premium protection, or extreme entertainment, you also benefit from enhancing your vehicle with accessories that have been thoroughly tested and factory-approved.
- For the full line of Authentic Dodge Accessories by Mopar<sup>®</sup>, visit your local Dodge dealership or online at [mopar.com](http://mopar.com).

### EXTERIOR:

- Molded Running Boards
- Front End Cover
- Chrome Tubular Side Steps
- Chrome Front Air Deflector
- Wheels
- Black Tubular Side Steps
- Molded Splash Guards
- Chrome Accents

### INTERIOR:

- Premium Carpet Floor Mats
- All-Weather Mats
- Heated Seats
- Door Sill Guards
- Katzkin Leather Interiors
- Ambient Lighting
- Molded Cargo Tray
- Bright Pedal Kit

### ELECTRONICS:

- Mopar<sup>®</sup> Web (WiFi)
- Remote Start
- Rear View Camera
- Park Distance Sensors
- Electronic Vehicle Tracking System

### CARRIERS:

- Hitch-Mount Bike Carrier
- Roof Mount Ski and Snowboard Carrier
- Roof Rack
- Roof Box Cargo Carrier
- Roof Mount Water Sports Carrier
- Hitch Receiver
- Roof Mount Bike Carrier
- Cargo Basket

# FREQUENTLY ASKED QUESTIONS

## FREQUENTLY ASKED QUESTIONS

### GETTING STARTED

- How do I install my LATCH Equipped Child Seat? pg. 17
- How do I program my Front Seat Memory? pg. 21

### OPERATING YOUR VEHICLE

- How does the Automatic Climate Control operate? pg. 42

### ELECTRONICS

- Which radio is in my vehicle?
  - Uconnect<sup>®</sup> 5.0 pg. 65
  - Uconnect<sup>®</sup> 8.4 pg. 72
  - Uconnect<sup>®</sup> 8.4N pg. 90
- How do I activate the Audio Jack?
  - Uconnect<sup>®</sup> 5.0 pg. 65
  - Uconnect<sup>®</sup> 8.4 pg. 72
  - Uconnect<sup>®</sup> 8.4N pg. 90
- How do I set the clock on my radio?
  - Uconnect<sup>®</sup> 5.0 pg. 65
  - Uconnect<sup>®</sup> 8.4 pg. 72
  - Uconnect<sup>®</sup> 8.4N pg. 90
- How do I use the Navigation feature?
  - Uconnect<sup>®</sup> 8.4N pg. 90
- How do I pair my cell phone via Bluetooth<sup>®</sup> with the UConnect<sup>®</sup> Hands-Free Voice Activation System? pg. 102
- How do I use my USB port to listen to audio through my touch-screen radio?
  - Uconnect<sup>®</sup> 5.0 pg. 65
  - Uconnect<sup>®</sup> 8.4 pg. 72
  - Uconnect<sup>®</sup> 8.4N pg. 90

### UTILITY

- How do I know how much I can tow with my Dodge Durango? pg. 121



# FREQUENTLY ASKED QUESTIONS

## **WHAT TO DO IN EMERGENCIES**

- What do I do if my TPMS warning light is blinking? pg. 127
- How do I change a flat tire? pg. 134
- How do I Jump-Start my vehicle? pg. 145

## **MAINTAINING YOUR VEHICLE**

- Where is my Fuse Block located? pg. 164
- What type of oil do I use? pg. 157
- How often should I change my engine's oil? pg. 159
- What should my tire pressure be set at? pg. 167



Adaptive Cruise Control (ACC) (Cruise Control) . . . . .	.35
Adding Fuel . . . . .	.153
Airbag . . . . .	.16
Air Bag	
Advance Front Air Bag . . . . .	.16
Air Bags . . . . .	.16
Air Bag Warning Light . . . . .	.16, 131
Driver Knee Air Bag . . . . .	.16
Front Air Bag . . . . .	.16
Rollover . . . . .	.16
Side Impacts . . . . .	.16
Air Conditioning . . . . .	.42, 43
Alarm	
Arm The System . . . . .	.14
Disarm The System . . . . .	.15
Vehicle Security Alarm . . . . .	.14
Alarm (Security Alarm) . . . . .	.14
All Wheel Drive (AWD) . . . . .	.117
Anti-Lock Brake System (ABS) . . . . .	.131
Arming System (Security Alarm) . . . . .	.14
Assistance Towing . . . . .	.127
Automatic Dimming Mirror . . . . .	.33
Automatic Headlights . . . . .	.30
Automatic High Beams . . . . .	.31
Automatic Temperature Control (ATC) . . . . .	.42
SYNC Temperature Button . . . . .	.44
Automatic Transmission	
Fluid Type . . . . .	.157
Axle Fluid . . . . .	.157
Back-Up Camera . . . . .	.45
Battery . . . . .	.145
Charging System Light . . . . .	.130
Blind Spot Monitoring . . . . .	.45
Brake Fluid . . . . .	.157, 158
Brake System	
Warning Light . . . . .	.128
Break-In Recommendations, New Vehicle . . . . .	.30
Bulb Replacement . . . . .	.169
Calibration, Compass . . . . .	.110
Caps, Filler	
Fuel . . . . .	.151
Cargo Compartment	
Luggage Carrier . . . . .	.120
Change Oil Indicator . . . . .	.131
Changing A Flat Tire . . . . .	.134
Charging System Light . . . . .	.130
Check Engine Light (Malfunction Indicator Light) . . . . .	.129
Child Restraints	
Car Seat . . . . .	.17
Child Restraints . . . . .	.17
Child Seat Installation . . . . .	.18, 19
Installing Child Restraints Using The Vehicle Seat Belt . . . . .	.19
Lower Anchors And Tethers For Children . . . . .	.17, 18, 19
Using The Top Tether Anchorage . . . . .	.19
Child Seat . . . . .	.18
Climate Control . . . . .	.42
Cluster Warning/Indicator Lights	
Air Bag Warning Light . . . . .	.131
Brake Warning Light . . . . .	.128
Compass Calibration . . . . .	.110
Cooling System	
Coolant Capacity . . . . .	.157
Cruise Control (Speed Control) . . . . .	.33
Cruise Light . . . . .	.33
Customer Assistance . . . . .	.170
Customer Programmable Features . . . . .	.110
Defects, Reporting . . . . .	.171
Dimmer Control . . . . .	.31
Dimmer Switch, Headlight . . . . .	.31
Disabled Vehicle Towing . . . . .	.127
Disarming, Security System . . . . .	.15
Discharged Battery . . . . .	.145
Driver Cockpit . . . . .	.7
ECO . . . . .	.110
Economy (Fuel) Mode . . . . .	.41
Electronically Shifted Transfer Case . . . . .	.117
Electronic Power Distribution Center (Fuses) . . . . .	.164
Electronics	
Your Vehicle's Sound System . . . . .	.48, 49
Electronic Speed Control (Cruise Control) . . . . .	.33
Electronic Stability Control (ESC) . . . . .	.130
Electronic Throttle Control Warning Light . . . . .	.131
Electronic Vehicle Information Center Programmable Features . . . . .	.110

# INDEX

- Electronic Vehicle Information Center (EVIC) . . . . .109, 110
  - Language (Selecting The Language) . . . . .110
  - Units (Set Units) . . . . .110
- Emergency, In Case of
  - Jacking . . . . .134
  - Overheating . . . . .132
  - Towing . . . . .127
- Engine
  - Break-In Recommendations . . . . .30
  - Compartment . . . . .155
  - Coolant (Antifreeze) . . . . .157
  - Malfunction Indicator (Check Engine) . . . . .129
  - Oil . . . . .157
  - Oil Filter . . . . .157
  - Oil Selection . . . . .157
  - Overheating . . . . .132
  - Starting . . . . .13
  - Stopping . . . . .13
- Event Data Recorder . . . . .151
- Exterior Lights . . . . .169
- Fluid Capacities . . . . .157
- Fluids . . . . .157
- Fog Lights . . . . .30
- Folding Front Passenger Seat . . . . .23
- Folding Power Third Row Head Restraints . . . . .26
- Folding Rear Seat . . . . .24, 25
- Forward Collision Warning . . . . .37
- Four Wheel Drive . . . . .117
  - Operation . . . . .117
  - Systems . . . . .117
- Four Wheel Drive Operation . . . . .117
- Freeing A Stuck Vehicle . . . . .150
- Fuel
  - Economy Mode . . . . .41
  - Filler Door Emergency Release . . . . .154
  - Specifications . . . . .157, 158
- Fuses . . . . .164
- Headlights
  - Automatic . . . . .30
  - Dimmer Switch . . . . .31
  - High Beam . . . . .32
  - High Beam/Low Beam Select Switch . . . . .32
- Head Restraints
  - Power Folding Third Row . . . . .26
- Heated Mirrors . . . . .43
- Heated Seats . . . . .26
- Heated Steering Wheel . . . . .28
- High Beam/Low Beam Select (Dimmer) Switch . . . . .32
- HomeLink® (Garage Door Opener) . . . . .112
- Hood Release . . . . .152
- Identifying Your Radio . . . . .50
- Instrument Cluster . . . . .9
  - Indicators . . . . .9
- Instrument Cluster Warning Lights . . . . .8
- Interior and Instrument Lights . . . . .7
- Intermittent Wipers (Delay Wipers) . . . . .32
- Introduction . . . . .2
- Inverter Outlet (115V) . . . . .114
- Inverter, Power . . . . .114
- Jacking Instructions . . . . .138
- Jack Location . . . . .134
- Jack Operation . . . . .134, 138
- Jump Starting . . . . .145
- Key Fob . . . . .10
  - Arm The Alarm . . . . .14
  - Disarm The Alarm . . . . .15
  - Lock The Doors . . . . .10
  - Unlock The Doors . . . . .10
- Keyless Enter-N-Go . . . . .10
  - Lock/Unlock . . . . .11, 12, 13
  - Starting/Stopping . . . . .13
- Lane Change Assist . . . . .31
- LATCH (Lower Anchors and Tether for CHildren) . . . . .17
- Liftgate . . . . .10
  - Power . . . . .10
- Light Bulbs . . . . .169
- Lights
  - Headlights . . . . .30
  - Warning (Instrument Cluster Description) . . . . .8
- Locks
  - Liftgate, Tailgate . . . . .10
- Luggage Rack (Roof Rack) . . . . .120

Maintenance Record . . . . .	.163
Maintenance Schedule . . . . .	.159
Malfunction Indicator Light (Check Engine) . . . . .	.129
Memory Seat . . . . .	.21
Mirrors	
Automatic Dimming . . . . .	.33
Heated . . . . .	.43
MOPAR® Accessories . . . . .	.172
Navigation . . . . .	.79, 97
New Vehicle Break-In Period . . . . .	.30
Oil Change Indicator . . . . .	.131
Oil Change Indicator, Reset . . . . .	.131
Oil, Engine	
Capacity . . . . .	.157
Outlet	
Power . . . . .	.115
Overheating, Engine . . . . .	.132
Panic Alarm . . . . .	.10
ParkSense® System, Rear . . . . .	.44
Phone (Pairing). . . . .	.82, 102
Placard, Tire and Loading Information. . . . .	.167
Power	
Folding Third Row Head Restraints . . . . .	.26
Glass Sunroof . . . . .	.46
Inverter . . . . .	.114
Lift Gate . . . . .	.10
Outlet (Auxiliary Electrical Outlet) . . . . .	.115
Seats . . . . .	.21
Steering . . . . .	.157, 158
Preparation for Jacking . . . . .	.137
Programmable Electronic Features . . . . .	.110
Rain Sensitive Wiper System . . . . .	.32
Rear Camera . . . . .	.45
Rear Cross Path . . . . .	.45
Rear Heated Seats . . . . .	.27
Rear ParkSense System . . . . .	.44, 45
Rear Seat, Folding . . . . .	.24
Reclining Front Seats. . . . .	.23
Recreational Towing . . . . .	.122
Shifting into Transfer Case Neutral (N) . . . . .	.123
Shifting out of Transfer Case Neutral (N) . . . . .	.125
Remote Keyless Entry (RKE)	
Arm The Alarm . . . . .	.14
Disarm The Alarm . . . . .	.15
Lock The Doors . . . . .	.10
Remote Keyless Entry (RKE) . . . . .	.10
Unlock The Doors . . . . .	.10
Remote Starting System. . . . .	.10, 11
Replacement Bulbs . . . . .	.169
Reporting Safety Defects. . . . .	.171
Roll Over Warning . . . . .	.4
Roof Rack (Luggage Rack). . . . .	.120
Schedule, Maintenance . . . . .	.159
Seat Belt	
Automatic Locking Retractor (ALR) . . . . .	.15
Child Restraints . . . . .	.15, 17
Energy Management Feature . . . . .	.15
Engage The Automatic Locking Mode . . . . .	.19
Lap/Shoulder Belts . . . . .	.15
Seat Belt Pretensioner . . . . .	.15
Seat Belt Reminder . . . . .	.15
Seats . . . . .	.21, 23
Adjustment . . . . .	.23
Folding Front Passenger . . . . .	.23
Heated . . . . .	.26
Manual . . . . .	.23
Memory . . . . .	.21
Power . . . . .	.21
Rear Folding . . . . .	.24, 25
Ventilated . . . . .	.27
Security Alarm	
Arm The System . . . . .	.14
Disarm The System . . . . .	.15
Security Alarm . . . . .	.14
Signals, Turn . . . . .	.31
SIRIUS Travel Link . . . . .	.100
Spare Tire . . . . .	.135
Spark Plugs . . . . .	.157
Speed Control	
Accel/Decel . . . . .	.33
Distance Setting (ACC Only) . . . . .	.34
Mode Setting (ACC Only) . . . . .	.36
Speed Control (Cruise Control) . . . . .	.33
Starting	
Remote . . . . .	.11

# INDEX

Steering	
Tilt Column . . . . .	.29
Wheel, Heated . . . . .	.28
Steering Wheel Audio Controls . . . . .	.109
Sun Roof . . . . .	.46
Supplemental Restraint System	
- Airbag . . . . .	.16
Temperature Control, Automatic	
(ATC). . . . .	.42
Tether Anchor, Child Restraint . . . . .	.18
Text Messaging . . . . .	.68, 85, 104
Tilt Steering Column . . . . .	.29
Tires	
Air Pressure . . . . .	.167
Changing . . . . .	.134
Jacking . . . . .	.134
Pressure Warning Light . . . . .	.127
Spare Tire . . . . .	.135
Towing . . . . .	.121
Disabled Vehicle . . . . .	.149
Recreational . . . . .	.122
Towing Vehicle Behind a Motorhome . . . . .	.122
Trailer Towing	
Trailer and Tongue Weight . . . . .	.121
Trailer Weight. . . . .	.121
Transfer Case	
Electronically Shifted . . . . .	.117
Fluid . . . . .	.157
Transmission	
Fluid . . . . .	.157
Turn Signals. . . . .	.31
Uconnect® 5.0 . . . . .	.65
Uconnect® 8.4A. . . . .	.72
Uconnect® 8.4AN. . . . .	.90
Uconnect® Access . . . . .	.51
Warning, Roll Over . . . . .	.4
Washer	
Rear . . . . .	.32
Washers, Headlight . . . . .	.31
Washers, Windshield . . . . .	.32
Wheel and Wheel Trim Care . . . . .	.167
Wind Buffeting . . . . .	.47
Windshield Washers . . . . .	.32
Windshield Wipers . . . . .	.32
Wiper, Rear . . . . .	.32
Wipers, Intermittent . . . . .	.32
Wipers, Rain Sensitive . . . . .	.32





---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---









# NOTES

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# DODGE.COM

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation/Uconnect® Manuals and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit [www.mopar.com](http://www.mopar.com) (U.S.), [www.mopar.ca](http://www.mopar.ca) (Canada) or your local Dodge dealer.



## DRIVING AND ALCOHOL

Drunken driving is one of the most frequent causes of accidents. Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a friend, or use public transportation.

---

## WARNING!

Driving after drinking can lead to an accident. Your perceptions are less sharp, your reflexes are slower, and your judgment is impaired when you have been drinking. Never drink and then drive.



## DOWNLOAD A FREE ELECTRONIC COPY OF THE OWNER'S MANUAL OR WARRANTY BOOKLET

by visiting the Owners tab at:

[www.dodge.com](http://www.dodge.com) (U.S.)

[www.dodge.ca](http://www.dodge.ca) (Canada)



14WD01-926-AA  
DURANGO

Sixth Edition  
User Guide