

# Gigaset

## GS185

You can also find the user guide  
online on your smartphone



# Contents

<b>Overview</b>	<b>3</b>
Gigaset GS185	3
Start screen	4
Illustration in the user guide	5
<b>Safety precautions</b>	<b>6</b>
<b>Getting started</b>	<b>9</b>
<b>Using the device</b>	<b>13</b>
Getting to know your device	13
Configuring the start screens	18
Notifications	20
Apps	23
Downloads	27
Fingerprint sensor	27
“Do not disturb”	29
Additional functions	30
<b>Communication</b>	<b>34</b>
Making calls	34
Contacts	38
Messages (SMS/MMS)	42
<b>Settings</b>	<b>46</b>
Device	46
Security	52
Accounts and location detection	58
Apps	61
Network connections	63
System	74
<b>Appendix</b>	<b>78</b>
Customer service	78
Manufacturer's advice	80
Icons	83
<b>Index</b>	<b>85</b>



Not all functions described in the user guide are available in all countries or from all network providers.

# Overview

## Gigaset GS185



- 1 SIM/SD card slot
- 2 Message LED
- 3 Front camera
- 4 Headset connector (3.5 mm jack)
- 5 Receiver
- 6 Flash
- 7 Volume button (top: +, bottom: -)
- 8 On/Off button
- 9 Touchscreen

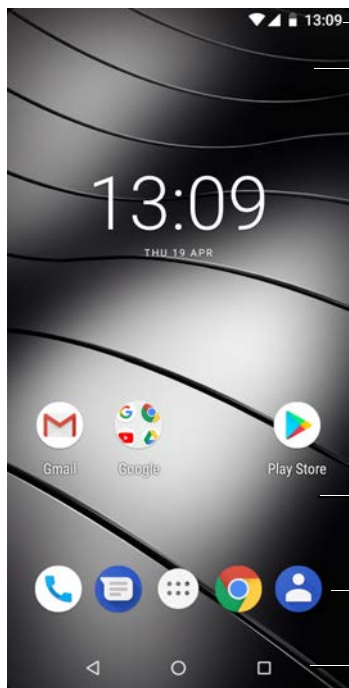
- 10 Microphone
- 11 Micro-USB socket
- 12 Speaker
- 13 Rear camera
- 14 Flash / torch
- 15 Fingerprint sensor

## Message LED status displays

The message LED provides information about the charge level when charging and the arrival of notifications for the following events: SMS, MMS or email received, missed call.

LED	Colour	Meaning	
On	Red	Charge level below 90%	No notification
Flashing	Red	Charge level below 90%	Notification received
On	Green	Charge level over 90%	No notification
Flashing	Green	Charge level over 90% or device not charging	Notification received
Off	–	Device not charging	No notification

## Start screen



### Notifications and Status bar

Icons show the arrival of notifications and various states (→ p. 83)

Access to notifications (→ p. 20)

Access to quick settings (→ p. 15)

### Area for apps and widgets

They can be placed anywhere (→ p. 18)





### Favourites bar

Access to the App menu and frequently used apps (→ p. 18)

Navigation buttons (→ p. 15)

## Illustration in the user guide






### Icons

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.

### Procedures

**Example:** Change the time for transitioning to the idle status

▶  ▶  **Settings** ▶ **Display** ▶  **Advanced** ▶ **Sleep** ▶ Select time

Step	Follow this procedure
▶ 	Tap the icon above the Favourites bar. The App menu opens. <b>Note:</b> You can skip this step if the app you want to open is on a start screen.
▶  <b>Settings</b>	Tap the <b>Settings</b> app. The Settings menu opens.
▶ <b>Display</b>	Tap the menu entry <b>Display</b> .
▶  <b>Advanced</b>	Tap <b>Advanced</b> . Further settings are displayed.
▶ <b>Sleep</b>	Tap <b>Sleep</b> .
▶ Select time	Tap the required time  = Selected,  = Not selected

# Safety precautions



Please read these instructions carefully. Failure to comply presents a risk of injury and damage to a device, as well as breaches of applicable laws.

Please explain the contents of this document as well as the potential risks associated with using this device to your children.

## General information



Dispose of used mobile telephones in line with the instructions (Chapter Waste and environmental protection → p. 81).

- For your own safety, only use original, approved accessories from Gigaset for your mobile phone. Using incompatible accessories can damage the mobile phone and entail hazardous situations. Original accessories can be purchased from Gigaset Customer Service (see Customer service → p. 78).
- The mobile phone is not waterproof. The device or its accessories must therefore not be kept or charged in damp environments (in bathrooms, shower rooms or kitchens, for example). Rain, moisture or any liquid can contain minerals which can cause the electrical circuitry to corrode. There is a risk of electric shock, fire or damage when the device is being charged.
- Permitted temperature range for charging and operation: 0-40°C.  
High temperatures can shorten the life of electronic devices and damage the battery; plastic parts can deform or melt. Using or keeping the mobile phone in refrigerated areas can result in condensation on the inside of the telephone which will destroy the electronic circuitry.
- The mobile phone must not be used or kept in dusty or dirty places. Dust can be a reason for the mobile phone to malfunction.
- Switch off your mobile phone when in potentially explosive areas and observe all warning signs. Potentially explosive areas also include places where switching off vehicle engines is normally recommended. It is at these kinds of places that flying sparks can be the cause of explosions or fires with resulting injuries, and there may be a risk to life.  
These areas include petrol stations, chemical factories, transport and storage systems for hazardous chemicals, spaces under ship decks, areas in which the air contains chemical substances or fine particles (such as dust or metal powder particles).
- Short-circuiting, disassembling and modifying the mobile phone are not permitted because they present a risk of injury, electric shock, fire or damage to the charger.
- The USB connection must be established with USB version 2.0 or higher.
- If the mobile telephone becomes hot, changes colour or shape or leaks whilst being used, charged or at any other time, contact Gigaset Customer Service immediately.

## Battery and charging

- The battery is built-in. Do not disassemble, weld and/or modify the battery. Do not keep the mobile telephone where it is exposed to strong mechanical effects.
- The battery electrolyte coming into contact with eyes can cause a loss of eyesight. If electrolyte does enter an eye, please do not rub the eye with a hand. Immediately wash the affected eye thoroughly with clear water and consult a doctor. The electrolyte coming into contact with skin (or clothing) presents a risk of skin burns. Immediately wash the skin or clothing thoroughly with soap and clear water, and consult a doctor if required.
- The temperature of the mobile phone rises during the charging process. Do not store the mobile telephone in the same place as flammable products as this poses a risk of fire.
- Do not charge the battery for longer than 12 hours.
- Only charge the device indoors. Whilst the phone is charging, do not use the phone for calls or dial any numbers.
- The socket must be easily accessible during the charging process.
- Electrical storms pose a risk of electric shocks.
- Do not use the charger when the power cable is damaged because this poses a risk of electric shock and fire.

## Headset



High volumes can impair hearing. Listening to music or conversation with headphones set to a loud volume can be unpleasant and permanently impair hearing.

To prevent loss of hearing, do not have the volume turned up too high for long periods.

- If you wear headphones whilst out walking or running, please ensure that the cord does not wrap itself around your body or objects on your person.
- Only wear headphones in dry environments. The static electricity which builds up on the headphones can discharge via your ears as an electric shock. The static electricity can discharge if you touch the headphones with your hand or touch bare metal before connecting with the mobile phone.

## Use in hospitals / medical devices

- The function of medical equipment near your mobile phone can be impaired. Bear in mind the technical conditions of the environment in question (such as in doctors' surgery).
- If you use a medical device such as a pacemaker, please consult the manufacturer of the product before using your mobile phone. You will be provided information on the sensitivity of the device to external, high-frequency energy sources.
- Heart pacemakers, implantable cardioverter defibrillators:  
When you switch on your mobile phone, ensure that the distance between the phone and an implant is at least 152 mm. To reduce potential interference, use the mobile phone on the opposite side to the implant. Please switch the mobile phone off immediately if interference occurs. Do not keep the mobile phone in a shirt pocket.
- Hearing aids, cochlear implants:  
Some digital wireless devices can interfere with hearing aids and cochlear implants. Please consult the manufacturers of these products if interference occurs.
- Other medical devices:  
If you and the people around you use other medical devices, please contact the relevant manufacturer for information on whether such devices are protected from radio frequency signals in the environment. You can also consult your doctor about this.

## Emergency calls

- Make sure the mobile phone is switched on and connected to the GSM network. Enter the emergency number as required and speak.
- Tell the person at the emergency call centre your location.
- Do not end the conversation until the person at the emergency call centre asks you to.

## Children and pets

- Keep the mobile phone, chargers and accessories out of the reach of children and pets. Children and/or pets can swallow the small parts, posing a risk of suffocation and other hazards. A child may only use the mobile phone under the supervision of an adult.

## Playing games

- Playing games on the mobile phone for long periods may mean assuming an unhealthy body posture. Take a 15 minute break every hour. Stop immediately if you feel unwell during game play. Consult a doctor straight away if your condition persists.

## Aeroplanes, vehicles and road safety

- Switch off your mobile phone in aeroplanes.  
Please observe applicable restrictions and regulations. Wireless devices can interfere with the function of aeronautical equipment. Follow the instructions issued by flight personnel when using your mobile phone.
- The absolute priority for every vehicle driver and everyone in a vehicle is safety on the roads and for road users.  
Using a mobile phone whilst driving can be distracting and therefore lead to dangerous situations. You can also be violating applicable laws.

## Safety precautions

### SIM card, memory card and data connector cable

- Do not remove the card from the mobile phone whilst data is being sent or received as this presents a risk of data loss and damage to the mobile phone or memory card.
- Charges might apply when establishing Internet connections via the SIM card.

### Defective devices

- The installation and repair of products are the sole preserves of qualified maintenance personnel.
- Dispose of faulty devices carefully or have them repaired by our Customer Service team. These devices could interfere with other wireless services.
- Careless handling of the mobile phone, such as dropping it, can shatter the display and damage the electronic circuitry and sensitive parts inside.
- Do not use the device if the display is cracked or shattered. Fragments of glass or plastic can injure hands and face.
- In the event of malfunction of your mobile phone, battery or accessories, please contact a Gigaset Service Centre for an inspection.

### Other important information

- Never point the flash light directly at the eyes of people or animals. Pointing a flash light too near to human eyes poses a risk of temporary loss of eyesight or impairment of vision.
- The device can heat up when running power-intensive apps or programs for longer periods. This is normal and has no bearing on the performance of the device.
- When the device warms up, please put it aside for a while and stop the program you were running. Coming into contact with a hot device can cause minor skin irritations such as redness.
- Do not apply lacquer to the mobile phone. Lacquer and paint can damage the parts of the mobile phone and may cause malfunction.



# Getting started

## Contents of the package

- A Gigaset GS185 smartphone
- A charger cable with power adapter

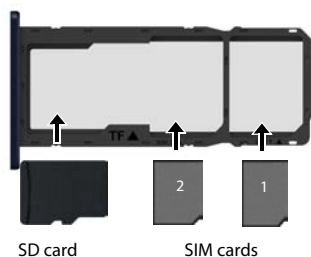
## Getting started

### Inserting SIM and SD cards

You can insert two nano SIM cards and one micro SD card in the smartphone. You can use the SD card to store personal data, photos, videos or music.

- ▶ Open the SIM/SD card slot. To do this, poke a pointed implement into the small opening on the SIM/SD card slot and press.
- ▶ Pull out the card slot.
- ▶ Place the nano SIM card(s) / micro SD card (optional) in the card slot.

Do not exert any force when inserting the SIM or the memory card because doing so might damage the card slot.



- ▶ Replace the SIM/SD card slot and push down until it clicks into place.

The front of the smartphone should be facing up.




The device detects SD cards with a storage capacity of 32 GB. Higher capacity cards (to 256 GB) can be used if formatted on the Gigaset GS185 (not from a PC).

### Charging the battery

- ▶ Plug the Micro-USB connector of the charger cable provided into the Micro-USB socket of the smartphone
- ▶ Connect the power adapter to the USB connector of the charger cable and connect it to the power source.



The Message LED lights red during the charging process (→ p. 3). The device is charged once the Message LED lights green and the charge icon  in the Status bar is filled completely.




So your phone does not discharge during set-up, keeping it connected to the power is recommended until set-up is complete.

### Switching on the device

- ▶ Keep the On/Off button pressed until the device vibrates.

When you are requested to unlock the SIM card,

- ▶  use the keypad to enter the PIN of the SIM card ▶ ✓

When switching on the device for the first time, a wizard starts which guides you through the initial configuration.

### Wizard for configuring the device

When you switch on your phone for the first time, you are automatically guided through the most important configuration steps.

- < Back: Check and change as required settings already configured.
- Next >** Apply the setting on the screen and jump to the next screen.
- Skip** Configure the setting later.

### Selecting the language

The set language is displayed.

- ▶ Select another language as required ▶ tap **Start**

### Inserting SIM cards


This screen is only shown when no SIM card is inserted:

- ▶ Insert card now (→ p. 9)

Insert SIM card later: ▶ **Skip**

### Establishing a WLAN connection

Wireless networks (WLANs) in range are displayed.

- ▶ Tap the required WLAN ▶  Enter the WLAN password ▶ **Connect** ... A connection to the selected WLAN is established

## Copying apps & data

You can now specify whether you want to set up the device as a completely new device or if you want to copy personal data (e. g. apps, photos, music) from another device or from Google Cloud.

### Copying data




You already have an Android smartphone, a Google account or an iPhone.

- ▶ Select the required option ▶ Select the desired data source
- ▶ Follow the instructions on the screen.


## Setting up a new device

### Logging in to an existing Google account

- ▶  Enter the email address and password of your Google account

or

### Creating a new account

- ▶  Enter the email address and password for a new Google account.

## Setting up protection for the phone

Protect your smartphone from unauthorised use.

### Fingerprint

- ▶ **Add fingerprint** ▶ **Next** ▶ ... A wizard opens to guide you through the necessary steps.  
Additional information → p. 28

or

### PIN, pattern or password

- ▶ **Configure PIN, pattern or password** ▶ **Next** ▶ Select **Pattern** | **PIN** | **Password** ▶ **Next** ▶ Specify whether the selected protection also applies for starting the device
- ▶ Enter pattern, PIN or password ▶ **Next** ▶ Repeat ▶ **Confirm**

## Enabling Google Assistant

Google Assistant answers questions and carries out a range of tasks. This page provides information about the authorisations required for Google Assistant.

If you want to enable Google Assistant: ▶ Tap **Yes, enable**.

If you do not want to enable Google Assistant: ▶ Tap **No, thank you**.

The data used for these settings can be taken from any device logged into the Google account. You can change these settings any time in your Google account at [myaccount.google.com](https://myaccount.google.com).

### Using Google services

Various services are displayed.

- ▶ Use the switch to enable/disable the service you want to use ▶ **Next**



Performing this step also means you accept the conditions of use and data protection declaration of Google.

---

### Setting up other functions

You can now configure other settings, e. g. set up another email account.

Gmail is set up once you log in to your Google account. If you set up email addresses for other email accounts, these emails can also be displayed in the **Gmail** app.

- ▶ Select provider ▶  Enter access details ▶ **Next**

If you do not want to configure any more settings now: ▶ **Done!**

---

### Settings for the start screen

The start screen is displayed. You can specify various settings for the start screen.

- ▶ Touch and hold the wallpaper on the start screen

#### Changing the wallpaper:

- ▶ **Wallpapers** ... Images saved on the device are displayed ▶ Select the wallpaper ▶ Tap **Choose wallpaper from**

#### Making widgets available on the start screen:

- ▶ **Widgets** ... The available widgets are displayed ▶ Touch and hold the required widget ... The start screen is displayed ▶ Position the widget and release it at the required position

**Your smartphone is now ready to use.**

# Using the device

## Getting to know your device

### Switching the device on and off

#### Switching on

- ▶ Press and **hold** the On/Off button ▶ Unlock the display if required (if a display lock is set up to protect against unauthorised starting) ... The device is started

Display lock: → p. 52

#### Unlocking the SIM card

- ▶  Enter the PIN for the SIM card ▶ **OK**

#### Removing notifications (if available)

- Clear notification: ▶ Swipe to the left or right
- Deal with notification later: ▶ Swipe upwards to the Notifications bar


Notifications → p. 20

#### When a display lock is set up to protect against unauthorised use

- ▶ Unlock the display ... The start screen is displayed

Display lock: → p. 52

#### Switching off

- ▶ Press and **hold** the On/Off button ▶ Tap  **Power off** ▶ **OK**



You can also switch the smartphone to **Airplane mode**. This only disables the wireless functions, the other device functions remain available.

## Switching the device to and ending idle mode

#### Switching the device to idle mode

- ▶ **Briefly** press the On/Off button



If the device is not used for a defined time, it automatically switches to idle mode.

#### Setting the period of inactivity for transitioning to idle mode

- ▶  ▶  **Settings** ▶ **Display** ▶  **Advanced** ▶ **Sleep** ▶ Select period

#### Ending idle mode

- ▶ **Briefly** press the On/Off button ▶ Remove any notifications as required ▶ Unlock the display



Some apps can be accessed directly from idle mode with a fingerprint (→ p. 27).

## Using the touchscreen

Movements and gestures for using the touchscreen:

### Tapping

- ▶ Briefly touch the screen with your finger

Examples:

Start an app, and select function or setting: ▶ tap the element

Enter text: ▶ Tap a text field ... A keypad is shown

### Touching and holding

- ▶ Keep your finger on an element until it responds.

### Dragging and releasing

- ▶ Touch and hold the element ▶ Move your finger across the screen to the place required ▶ Release the element

Example: Moving apps on the start screen

### Swiping or dragging

- ▶ Move your finger quickly across the screen without stopping

Example: Switching between the start screens

### Double tapping

- ▶ Tap the screen twice quickly in succession.

Example: Zooming. Only possible for special screens (such as websites or maps).

Zoom in: ▶ Tap twice quickly in succession

Zoom back out: ▶ Tap twice again

### Spreading apart / pinching together your fingers

- ▶ Place two or more fingers on the screen at the same time

Zoom in: ▶ Spread your fingers apart

Zoom out: ▶ Pinch your fingers together

Example: Scaling screen content. Only possible for special screens (such as Google Maps and Chrome).

## Start screen

A start screen is displayed when you switch on or unlock the device, and no app is open.

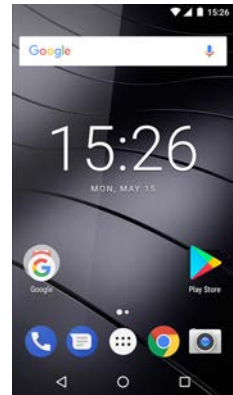
You can create several start screens and configure them as you wish - to be able to quickly access favourite apps and content (→ p. 18).

### Returning to the start screen from any user situation

- ▶ Tap the Navigation button  ... The start screen which was open last time is displayed

### Switching between start screens




- ▶ Swipe left or right to the required start screen.



## Switching between start screens and apps

At the bottom of every screen are three Navigation buttons:




-  Opens the screen last viewed, even if it belongs to another app. You can go back several times (only as far as the start screen).
-  Opens the start screen which was open last time.
-  Opens an overview of the apps and browser tabs used last time.
  - Open an app: ▶ Tap it
  - Close an app: ▶ Swipe the app left or right

## Quick settings

The quick settings enable you to access frequently used settings from all user situations, such as screen lighting, WLAN, Bluetooth and similar settings.

### Opening the quick settings

- ▶ From the Status bar, swipe down ... The most important quick settings are displayed
- ▶ Swipe down again, or tap  in the top right ... More quick settings are displayed ▶ Swipe left/right to display all the quick settings

Icons of the quick settings → p. 83

### Enabling and disabling a function

- ▶ Tap the setting ... The setting icon is black when enabled and grey when disabled

## Getting to know your device


### Changing a setting

Settings for which there are more options (e.g. WLAN or Bluetooth) have a small arrow next to the name.


- ▶ Tap the name under the icon ▶ Change the setting as required

### Editing quick settings

You can make available more quick settings, remove any not used and rearrange the icons.

- ▶ Tap  ... Quick settings not being used are shown at the bottom ▶ Touch and keep your finger on the icon, and drag it to the required position

Finish editing: ▶ Tap  in the top left

Restore to default settings: ▶ Tap  ▶ **Reset**

---


## Writing and editing text


Use the Google keypad to write text.


### Opening the keypad

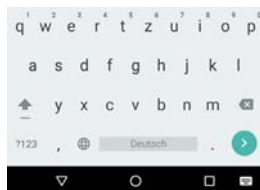
- ▶ Tap a place where text can be entered

You can enter letters, digits and special characters.


Switching between entry of letters and digits / special characters: ▶ Tap 

▶ Tap 

Convert to international keypad layout: ▶ Tap 




### Closing the keypad

- ▶ Tap  in the navigation bar

---

## Adding text

Entering letters and symbols: ▶ Tap a key

Entering uppercase letters: ▶ Tap the shift key ()

Enabling/disabling Caps Lock: ▶ Double tap the shift key ()

Showing umlauts: ▶ Touch and hold the key

Whilst text is being entered, suggestions from the keypad dictionary are shown above the keypad.

Using a suggestion: ▶ Tap the word ... The word is included and a space is inserted automatically

---



## Editing text

Positioning the cursor: ▶ Tap the place in the text where you want to position the cursor

Moving the cursor: ▶ Swipe left or right on the text



Deleting a character: ▶ Touch and hold the backspace key



- Selecting text:
  - ▶ Touch and hold a word ▶ Select more or less text with tabs on both sides
- Selecting all:
  - ▶ Touch and hold a word ▶ Tap  ▶ **Select all**
- Cutting selected text:
  - ▶ Tap **Cut**
- Copying selected text:
  - ▶ Tap  ▶ **Copy**
- Pasting text:
  - ▶ Position the cursor ▶ Tap on the cursor ▶ **Paste**
- Formatting text:
  - ▶ Select text ▶ **Format** ... Various formatting options are displayed, e. g. underline, colour, bold etc.

## Changing the keypad settings

You can change various keypad settings, such as the language for the keypad assignment, the response to keypresses and the keypad design.

- ▶  ▶  **Settings** ▶ **System** ▶ **Languages & input** ▶ **Virtual keyboard** ▶ **Android keyboard**



## Setting voice entry

If an app permits it, you can also enter text by speaking into the microphone. The function is enabled by default.

Enable/disable voice input:

- ▶  ▶  **Settings** ▶ **System** ▶ **Languages & input** ▶ **Virtual keyboard** ▶ **Manage keyboards** ▶ **Enable/disable Google Voice input** with the switch

Voice input settings:

- ▶  ▶  **Settings** ▶ **System** ▶ **Languages & input** ▶ **Virtual keyboard** ▶ **Google Voice input**

# Configuring the start screens


You can create several start screens and configure them as you wish - to be able to quickly access favourite apps and content.

## Tailoring the Favourites bar

At the bottom of every start screen is the Favourites bar, from which you are able to quickly access the apps you use most frequently.



Opening the menu with all the apps:

- ▶ Tap the icon  in the middle of the Favourites bar


The apps in the App menu are in alphabetical order.

Scrolling through the list: ▶ swipe up or down

## Removing apps from the Favourites bar

- ▶ Touch an app in the Favourites bar and drag it upwards
  - ▶ Drag the app to the **Forget** button at the top of the screen and release your fingeror
  - ▶ Drag it to somewhere else on the screen and release your finger

## Adding an app

- ▶  ▶ Select the required app ▶ Touch and hold the app . . . The start screen is shown in the background ▶ Drag the app to a free space in the Favourites bar and release your finger.


## Changing the wallpaper

- ▶ Touch and hold the wallpaper ▶ Tap **Wallpapers** ▶ Select an image from the predefined backgrounds or your own photo from **My photos** ▶ Tap **Set wallpaper**



More wallpaper images can be downloaded from Google Play.

## Adding an app to a start screen

- ▶  ▶ Open the App menu ▶ Look for the required app ▶ Touch and drag the app . . . The start screen is displayed in the background ▶ Drag the app to a free space in a start screen and release your finger

## Adding a widget to a start screen

Widgets are components that are specifically intended to be displayed on a start screen, e.g. a clock, a calendar extract for the current day, an important entry from the contact list or a direct dial.

- ▶ Touch and hold a free space on a start screen ▶ Tap **Widgets**
- ▶ Touch and hold the required widget . . . The start screen is displayed in the background ▶ Drag the widget to a free space in a start screen and release your finger

The sizes of some widgets can be changed:

- ▶ Touch and hold a widget ▶ Release your finger . . . If the size of the widget can be changed, you see a dotted frame on the edges ▶ Change the size of the widget by dragging the dots

Once the correct size is set: ▶ Tap anywhere outside the widget

## Moving apps and widgets

- ▶ Touch and hold an app or widget on a start screen ▶ Drag the app or widget to the required position and release your finger, or drag it to the left or right to another start screen and release your finger



## Creating folders for apps

- ▶ Touch and hold an app on a start screen ▶ Drag the app icon over another app icon

Adding apps:

- ▶ Touch and hold an app ▶ Drag it to the folder

Renaming a folder:

- ▶ Open the folder ▶ Tap the name . . . The keypad opens ▶ Delete the old name ▶  Enter the new name ▶ 


## Removing an app or widget

- ▶ Touch and hold an app or widget on a start screen ▶ Drag it up to option **Remove** and release your finger

## Adding, rearranging and removing start screens

If you have created multiple start screens, a fine white bar will appear above the Favourites bar when you swipe left or right, displaying the number of start screens and the position of the current start screen.

### Adding start screens

- ▶  ▶ Touch and hold an app ▶ Drag the app all the way to the right until a blank start screen is shown ▶ Release your finger . . . A new start screen is created and the app is placed on it

### Rearranging start screens

- ▶ Touch and hold a free space on a start screen . . . Images for the start screens are displayed in the background ▶ Touch and hold an image for a start screen ▶ Drag it to the left or right to the required position and release your finger

## Notifications

### Removing a start screen

- ▶ Remove all apps and widgets from a start screen (by deleting them or moving them to another start screen) . . . When the last app or widget has been removed, the start screen is deleted



---

## Browse smartphone and Internet


You can add the Google search widget to the start screen so you can search on your smartphone or browse the Internet.



### Entering a search term

- ▶ Tap the Search bar ▶  Enter a search term using the keypad ▶ 

### Search using voice entry

- ▶ Tap the Microphone icon  ▶ Speak your search term into the microphone

Additional information → [Google Help](#)

---

## Notifications

Notifications inform you about various events, such as the arrival of a new voice message or email, appointments or wake-up calls.


Notifications are displayed as follows:

- In the Notifications bar: ▶ Swipe over the screen from the top down  
An icon in the Notifications bar denotes which notifications are available (→ p. 83).
- On the lock screen: when the phone starts and when returning from idle mode
- At the top of the screen whilst you are doing something else on your phone, such as reading an email or watching a video
- If notification dots are permitted: with a coloured dot on the app icon that sent a notification
- Briefly on the idle screen

Changing the settings for displaying notifications: → p. 21

Flashing of the Message LED also indicates the following events:

- New email
- New voice message
- Missed call



---

## Dealing with notifications

### Viewing and responding to notifications

- ▶ Tap the notification ... The contents of the message are displayed in the associated app. If there are several possible apps, you can select one.

Which information is displayed and which actions are possible depend on the app which triggers a notification.

Some apps allow actions to respond to a notification. You can for example reply directly to a mail, switch off a wake-up call or show on the map the meeting place for an appointment.

Changing the display options of the app for notifications: → p. 22

---

### Deleting and resetting notifications

Deleting a notification:

- ▶ Swipe the notification to the left or right

Deleting all notifications on the Notifications screen:

- ▶ Scroll down to the end of the notifications ▶ **Clear all**

Resetting a notification on the lock screen or at the top of the screen to read it later:

- ▶ Swipe the notification up

---

## Settings for notifications

### Changing the default notification sound

- ▶  ▶  **Settings** ▶ **Sound** ▶  **Advanced** ▶ **Default notification sound** ▶ Select notification sound ▶ **OK**



No notification sound: ▶ Select **None** (first entry in the list)



- If you do not wish to be disturbed, you can mute your device. No notification sound is then played.  
Use the "Do not disturb" function to mute your device → p. 29
- In some apps, sound and vibration settings for notifications can be set directly in the app from the **Settings** menu.
- If the volume for the ringtone is reduced down to Vibration mode (→ p. 47), the device vibrates for notifications instead of playing a sound. The smartphone continues to vibrate for notifications for which Vibration mode is already selected.

### Changing the settings for app notifications



Specify how and when notifications for an app are displayed

- ▶  ▶  Settings ▶ Apps & notifications ▶ Display all apps ▶ Select an app ▶ **App notifications**

or

- ▶ Touch and hold an app notification ▶ **All Categories**
- ▶ Enable/disable the required option with the switch

Check the settings for all apps



- ▶  ▶  Settings ▶ Apps & notifications ▶ Notifications ▶ **App notifications** ... All apps are displayed

---

### Permitting/blocking notification dots

Notification dots indicate new notifications from an app with a coloured dot on the app icon.

Default setting for all apps:

- ▶  ▶  Settings ▶ Apps & notifications ▶ Notifications ▶ Enable/disable **Allow notification dots** with the switch

App-specific setting:

- ▶  ▶  Settings ▶ Apps & notifications ▶ Display all apps ▶ Select an app ▶ **App notifications** ▶ Enable/disable **Allow notification dots** with the switch

---



### Notifications on the lock screen

The following settings are available for the lock screen:



- **Don't show notifications at all**
- **Show all notification content**
- **Hide sensitive notification content**

You can configure these settings differently for individual apps or use them as default settings for all apps.

Default setting for all apps:

- ▶  ▶  Settings ▶ Apps & notifications ▶ Notifications ▶ **On the lock screen** ▶ Select the required option

App-specific setting:

- ▶  ▶  Settings ▶ Apps & notifications ▶ ... All apps are displayed ▶ Select an app ▶ **App notifications** ▶ **On the lock screen** ▶ Select the required option

## Apps

The apps available on the device are stored in the App menu. The device is supplied with a number of default apps. Additional apps from your mobile operator are installed as soon as you insert a SIM card.

You can download and install more apps, or disable and uninstall existing apps.



You can place frequently used apps directly on a start screen (→ p. 18), and the four most important apps in the Favourites bar (→ p. 18).

## Opening and exiting apps

### Opening an app from the App menu



The start screen is open. If not: ▶ Tap

- ▶ Tap ... All apps are displayed (sorted alphabetically) ▶ Tap the app you want to open

### Switching between apps

- ▶ Tap in the Navigation bar ... Recently used apps are displayed ▶ Tap the app you want to open

Navigation bar: → p. 15

## Ending/exiting apps

### Exiting an app

- ▶ Tap in the Navigation bar ... The start screen is displayed. The app stays open and is included in the app overview.

### Ending an app

- ▶ Tap in the Navigation bar ... The app overview is displayed ▶ Swipe an app left or right ... The app is ended

Ending all the apps: ▶ Scroll all the way up ▶ **Dismiss all**

## Looking for an app

- ▶ Tap ... All apps are displayed ▶ Tap **Search apps** above the app list ▶ Enter the first letter of the app you are looking for ... All matching apps are displayed

---

## Installing/uninstalling apps

---

### Installing new apps

Downloading apps from Google Play:

- ▶  ▶  **Play Store** ... The Google Play Store is opened ▶ Look for the app you want ▶ Open the app screen ▶ **Install**

---



### Uninstalling or disabling apps

You can delete apps you no longer need from the device.


You can uninstall apps you have downloaded. They are completely removed from the device. Apps preinstalled on the device (system apps) can be disabled but not completely removed. Disabled apps are not show on the device.



Disabling a system app can cause problems with other apps.

- ▶  ▶  **Settings** ▶ **Apps & notifications** ▶ Display all apps ▶ Select the app that you wish to uninstall ▶ **Uninstall / Disable**

or (for apps which can be uninstalled)

- ▶  ▶ Touch and hold the app you want to uninstall ▶ Drag it to **Uninstall** and release your finger













Show system apps and processes:

- ▶  ▶  **Settings** ▶ **Apps & notifications** ▶ Display all apps ▶ Tap  ▶ **Show system**



## Preinstalled default Google apps

The smartphone makes available many of the default apps from Google, including:

	Search	Browse Internet and search smartphone
	Chrome	Browser for surfing on the Internet
	Gmail	Receive, write and send emails
	Maps	Look for and find out about places in all corners of the globe
	YouTube	Play YouTube videos and playlists
	Drive	Store data centrally
	Play Music	Listen to the radio
	Play Movies & TV	Watch films and series
	Hangouts	Communicate with friends with voice calls, messages and videos
	Photos	Save and manage photos centrally
	Video calls	Make calls with video view
	Play Store	Download apps

More information on Google apps → [Google Help](#)

## Using two apps at the same time



Split screen mode enables you to display two apps next to or above each other on the screen, and to work with both apps in parallel.




Both apps support the function.

### Starting Split screen mode

#### Selecting the first app

- ▶ Open the first app from a start screen or the App menu ▶ Tap  in the Navigation bar ▶ Touch and hold the title line of the app ▶ Drag up (or to the side if you are holding the device horizontally) and release ... The app is shown at the top (or on the side) at half its size. The  icon is now displayed in the Navigation bar.

#### Selecting the second app


- ▶ Tap  ... The start screen is opened ▶ Open the second app from a start screen or the App menu ... The app is loaded into the second screen area

or


- ▶ In the list of recently used apps in the second screen area, tap the title of the second app ... The app is loaded into the second screen area

## Apps


### Changing the second app

▶ Tap  ▶ Select a different app from a start screen or the App menu

or

▶ Tap  ▶ Tap the title of a different app

### Ending Split screen mode

▶ Touch and hold the  icon

or



▶ Drag the black bar between the two apps all the way up/down or left/right ... The second app is ended and the device returns to Default mode

---

## Protection from harmful apps

### Downloading apps from sources other than Google Play

If you want to download apps from sources other than Google Play, you must permit it explicitly. You can find this function in the settings for the app that allows the download, e. g. browser or mail program.

▶  ▶  **Settings** ▶ **Apps & notifications** ▶ Display all apps ▶ Select the app that you wish to use to load apps from other sources ▶ **Install unknown apps** ▶ Enable the **Allow from this source** switch.

If you intend to use apps that Google classifies as insecure, you must permit the use of such apps explicitly. Find out about the associated security risks from Google beforehand.



Apps from unknown sources can represent a security risk for your smartphone. A download can corrupt your smartphone, and personal details can be misused or go missing.

---

### Enabling Verify apps

When the function is enabled, your device verifies apps when being installed, and regularly searches the device for potentially harmful apps.

▶  ▶  **Settings** ▶ **Google** ▶ **Security** ▶ **Google Play Project** ▶ Enable the **Scan device for security threats** switch


The following actions are possible when you install an app which is not from Google Play:

- Recommendation not to install the app.
- Installation of the app is blocked when there is a threat to the security of the device.
- Information on the app's identification is sent to Google, such as protocol information, URLs connected to the app, the device ID, its operating system version and the IP address.

Apps installed on the device are checked regularly. If a potential harmful app is detected, the app check can take the following actions:

- Recommend that you uninstall the app immediately.
- Remove an app which is known to be insecure.

## Improving the detection of harmful apps



If the function is enabled, Google also receives anonymous information on all apps installed which are not from the Google Play Store. This helps Google to provide better protection for users against harmful apps.

- ▶ ▶ **Settings** ▶ **Google** ▶ **Security** ▶ **Google Play Project** ▶ Enable the **Improve harmful app detection** switch

This option might not work for all apps because developers are able to disable this function to prevent their apps being subjected to verification.

## Downloads

You can download files from websites onto your device. Downloaded files are stored mainly in the **Files** app.

Content such as music, TV programs and books are generally not stored in **Files** but in the app with which the download was performed.

## Working with downloaded files

- ▶ ▶ **Files**

If **Downloads** is not displayed: ▶ ▶ **Tap Downloads**

Display with large/small icons:

- ▶ Tap /

Opening a file: ▶ Tap the file ▶ Select the app to use to display the download

Deleting a file: ▶ Touch and hold the file ▶ Tap

Sharing a file: ▶ Touch and hold the file ▶ Tap

## Fingerprint sensor

The device has a fingerprint sensor. It enables for example the device to be unlocked using a fingerprint, purchases to be authorised, you to register with certain apps and opening of a contact quickly from idle mode.

## Setting up the fingerprint

- ▶ ▶ **Settings** ▶ **Security & location** ▶ **Fingerprint** ... A wizard opens which guides you through the necessary steps ▶ **Next**

When a display lock is set up: ▶ Enter the pattern, PIN or password

If a display lock is not yet set up: ▶ **Set up screen lock** (⇒ p. 52)

## Fingerprint sensor



Pattern, PIN and password are alternatives to the fingerprint.

The alternative method must be used in the following cases:

- The fingerprint is not recognised after several attempts
- For editing fingerprint settings
- When it has been more than 48 hours since the alternative method was used for unlocking

### Scanning a fingerprint

- ▶ Place your finger onto the sensor on the back of the device. Hold the device as you will also hold it later for unlocking. ▶ **Next**
- ▶ Keep tapping the sensor until the **Fingerprint added** message is shown. Keep changing the position of your finger.

Ending the scan: ▶ **Done**

Add more fingerprints ▶ **Fingerprint** ▶ **Add fingerprint**



You can add up to five fingerprints. They are saved as Finger 1 to Finger 5.

Note that all those who add their fingerprints are able to unlock the phone and authorise purchases with your account.

Fingerprints are stored securely and never outside the device.

---

## Changing a fingerprint name

Assign a suitable name for the fingerprint, e.g. "Index finger left".

- ▶ ▶ **Settings** ▶ **Security & location** ▶ **Fingerprint** ▶ Use the alternative method for unlocking (pattern, PIN or password) ▶ Touch a name ▶ Enter the new name in the text field (max. 15 characters) ▶ **OK**

---

## Using a fingerprint

If an action can be authorised with a fingerprint, the icon or alternative pattern is displayed if a display lock with fingerprint is set up.

- ▶ Tap the fingerprint sensor with a finger which has been scanned ▶ Repeat the process as required

The alternative method is enabled automatically if the fingerprint is not recognised after several attempts.

## "Do not disturb"

The "Do not disturb" function mutes the device. It does not ring or vibrate. It prevents for example the phone ringing at night and during meetings, and all interruptions apart from a wake-up call. You can choose between three modes:

### Total silence (total silence)

No ringtones, no vibrating, no audible signalling of wake-up calls or notifications, no sound for music, videos, games or other media.

### Alarms only

Signalising of wake-up calls, also the sound for music, videos, games or other media is turned on.

### Priority only

Signalising of important notifications, also the sound for music, videos, games or other media is turned on.

Important notifications are messages from apps with setting **Treat as priority** (→ p. 22). Further events can be defined as important interruptions, such as calls from certain people.



"Do not disturb" can also be enabled automatically in line with defined rules.  
Defining the rules: → p. 48

## Enabling "Do not disturb"

- ▶ From the Status bar, swipe down ... The quick settings are displayed ▶ Tap **Do not disturb**
- ▶ Tap **Alarms only** ▶ Select the required mode (**Total silence** / **Alarms only** / **Priority only**) ▶ Specify how long the setting is to apply (**Until you turn off Do Not Disturb** or use +/- to choose a time period in hours) ▶ **Done** ... The following icon is displayed in the Status bar:  
**Total silence:** / **Alarms only, Priority only:**



You can also set the **Alarms only** mode as follows:

- ▶ With the display enabled, keep the Quiet button on the right of the device pressed until the volume has reached the lowest setting ▶ Press the Quiet button again ... The **Alarms only** mode is enabled

## Disabling "Do not disturb"

- ▶ From the Status bar, swipe down using two fingers ... The quick settings are displayed ▶ Tap the or icon ... All signals are turned on again and the icon is displayed

or


- ▶ Press the Quiet button on the right of the device ▶ Tap **Turn off now** ▶ Set the volume as required

### Disabling "Do not disturb" for certain apps

- ▶ ▶ **Settings** ▶ **Apps & notifications** ▶ Display all apps ▶ ... All apps are displayed ▶ Select app ▶ **App notifications** ▶ Enable the switch next to **Override Do Not Disturb** ... Notifications from this app are permitted in **Priority only** mode

### Specifying important interruptions

Specify events which are to be signalled acoustically in the **Priority only** mode.

- ▶ From the Status bar, swipe down ... The quick settings are displayed ▶ Tap  **Do not disturb** ▶ **More settings** ▶ **Priority only allows** ▶ Enable/disable events for **Alarms, Reminders, Events** and **Repeat callers** with the switch

Messages and calls are not signalled acoustically by default (setting **None**). To change the setting:

- ▶ Tap **Messages / Calls** ▶ Select the required option (**From anyone, From contacts only, From starred contacts only**)  
Selected contacts are denoted as favourites in the contact list (→ p. 41).

---




## Additional functions

---

### Setting up multiple users

You can enable the device for more users. All users receive a separate area they can set up themselves, such as own start screen, apps, accounts and contacts. Different user icon colours denote different users.


#### Setting up users

- ▶  ▶  **Settings** ▶ **Users & accounts** ▶ **Personal** ... All available users are displayed ▶ **Add user** ▶ **OK** ... A user is entered ▶ **Set up now** ... The device switches to the new user's area
- ▶ Swipe the toolbar down using two fingers ▶ Tap  ▶ **More settings** ▶ Enter a name

The Setup Wizard is opened.

- ▶ Configure user-specific settings with the Wizard.

#### Switching user

- ▶ Swipe down the toolbar using two fingers ▶ Tap  ... All available users are displayed ▶ Tap the required user ... The settings for the selected user are loaded



It is only possible to set up new users from the Settings menu of the main user.  
The updating of apps is possible and applicable for all users.

## Creating screenshots


Take a screenshot of the smartphone as an image, and edit, share and send it.

### Taking a screenshot

- ▶ Open the screen for which you want to create a screenshot.
- ▶ Press and hold the On/Off button ▶ **Screenshot**

or

- ▶ Press the On/Off and Volume buttons at the bottom at the same time.

The screen content is stored in the internal memory of the device. The  icon is displayed in the Notifications bar.

### Viewing a screenshot

- ▶ Swipe the Notifications bar down ▶ Tap notification **Screenshot captured.** ... The screenshot is displayed

If more than one app is available for editing images, such as **Photos** and **Gallery**: ▶ Select the desired app



Screenshots can be edited with app resources.

For more detailed information on the app **Photos** → [Google Help](#)


## Sending files between a computer and the smartphone

Use a USB cable to send photos, music, ringtones and other files between a computer and the smartphone.



A computer detects the device connected via USB. It is linked in as a drive.

### Connecting the USB cable

- ▶ Use the USB cable provided to connect the phone to a computer ... The  icon is displayed in the Notifications bar.



### Transferring files



For data interchange with a Mac: Android File Transfer is installed and started on the computer.

- ▶ Swipe the Notifications bar down
- ▶ Tap the USB notification
- ▶ Select **Transfer files**

**Windows:** Automatic drive detection is opened on the computer ▶ Open Windows Explorer ▶ Use drag-and-drop to move files as for other external drives

**Mac:** The **Android File Transfer** window is opened on the computer ▶ Use Drag-and-Drop to move the files

---

### Managing music

Use the Music Manager to upload music from the computer to the Google Play media library. For information on managing music with Google Play Music: → [Google Help](#)

---

### Printing

Apps with a print function enable you to print from your device.



A printer is available which is able to receive data over a WLAN connection or mobile network.

---

### Printing via apps

The procedure for printing depends on the used app.

- ▶ Open the menu from icon or
- ▶ Tap **Printing**

Printing the screen content: ▶ Take a screenshot (→ p. 31) and then print it.

---

### Adding, enabling and disabling printers

- ▶ ▶ **Settings** ▶ **Connected devices** ▶ **Printing**

Adding the print service:

- ▶ **Add service** ▶ Select the print service ▶ Install

Enabling/disabling the print service:

- ▶ Select the print service ▶ Enable/disable it with the **On/Off** switch





## Sending the screen content to another device (streaming)

Send the image and sound of your smartphone to a TV device.



The TV device is fitted with a streaming unit (such as Chromecast) and accessible via WLAN.


### Starting transmission

- ▶ Start video on the smartphone
- ▶ From the Status bar, swipe down using two fingers ... The quick settings are opened
- ▶ Tap  **Cast** ... Streaming units within range are searched ▶ In the list, tap the streaming unit to which the screen is to be sent ... The transmission is started. The  icon is displayed in the Notifications bar

### Stopping transmission

- ▶ From the Notifications bar, swipe down ▶ In the **Cast** message, tap **Stop casting**


### Permitting, enabling and disabling streaming units

- ▶  ▶  **Settings** ▶ **Connected devices** ▶ **Cast** ... Streaming units within range are searched ▶ Select unit ... It is entered in the list
- ▶ Enable/disable unit using the **On/Off** switch

For information on Chromecast → [Google Help](#)

# Communication

## Making calls

To make calls, use the  **Phone** app. It is in the Favourites bar on the start screen by default (→ p. 18).

### Making a call

▶  **Phone** ...


#### Entering the number

▶ Tap  ... The dialpad is shown ▶ Type in the phone number ▶ Tap 




Whilst a number is being entered, contacts with a potential matching phone number are displayed. If there are no matching entries, you can add the entered number to the contact list.

#### Using a phone number from a contact

▶ Tap  ... The contact list opens ▶ Select an entry ... All phone numbers stored for the contact are shown ▶ Tap the required phone number

Contacts → p. 38

#### Using a phone number of a favourite contact

▶ Tap  ... The Favourites list opens ▶ Tap the required contact ... The main phone number of the contact is selected

Adding contacts to Favourites → p. 41

#### Using a phone number from the call log


▶ Tap  ... The call log opens ▶ Tap the required phone number

Call log → p. 38

#### Dialling a number with fast access




The number is set up as a fast access number (→ p. 36)

▶ Tap  ▶ touch and hold the fast access key (2-9) to which the number is assigned.

#### Ending a call

▶ Tap 



Calls can be initiated from some other apps or widgets, e. g. from the app  **Contacts**.

## Incoming calls

With an incoming call, the phone number of the caller is displayed, if available. Information on the contact or the Caller ID is also displayed.


### Accepting a call

- Display lock enabled: ▶ Touch the white circle and swipe up
- No display lock: ▶ Tap **Answer**

### Rejecting a call

- Display lock enabled: ▶ Touch the white circle and swipe down
- No display lock: ▶ Tap **Decline**

### Rejecting a call and sending an SMS to the caller

- ▶ Touch the message icon  and drag it up to the right across the screen ▶ Select a predefined quick response or write your own message ▶ **OK** . . . The caller receives a message with the selected text

Changing predefined messages → p. 37



If your mobile network operator has set up a mailbox for you, callers whose calls have been rejected by you can leave a message.

If you accept a call whilst talking to somebody else, the current call is put on hold.

## Options during a call

### Showing the dialpad during a call

- ▶ Tap 

### Switching between headset, speaker and connected Bluetooth headset

- ▶ Tap 





### Muting and switching back on the microphone

- ▶ Tap  / 

### Interrupting and continuing a call


- ▶ Tap 

### Consultation, call swapping

- ▶ Tap  ▶ Enter the call number for a second person with  or select this person from the contacts with  ▶ Tap  . . . The call is initiated. The first call is put on hold.

The call number of the call on hold is displayed as **On hold** at the top of the screen.


Switching between calls (call swapping):


- ▶ Tap  . . . The call on hold becomes the active call


## Making calls


### Merging two calls into a conference call

One call active, one call on hold.

- ▶ Tap  ... The calls are merged

Ending a conference call: ▶ Tap  ... The participants' phone numbers are displayed

- ▶ Tap  next to a phone number ... The connection to this participant will be ended
- or

- ▶ Tap  next to a phone number ... The calls are ended but the connections remain open

---

## Call settings

### Display of caller name in the call log and contact list of the Phone app

- ▶  Phone ▶ Tap  ▶ Settings ▶ Display options ...

Specify how calls are sorted:

- ▶ Sort by ▶ First name or Last name

Specify how the names of contacts are displayed:

- ▶ Name format ▶ First name first or Last name first

---

### Setting tones and vibration


- ▶  Phone ▶ Tap  ▶ Settings ▶ Sounds and vibration ...

Changing the ringtone: ▶ Phone ringtone ▶ Select ringtone ▶ OK

Vibrate for incoming calls: ▶ Enable the **Also vibrate for calls** option

Tones when tapping the dialpad: ▶ Enable the **Keypad tones** option





Other settings for sounds via the app  Settings → p. 47

---

### Setting up fast access


You can assign a phone number to a key between 2-9 which will be dialled immediately when you touch and hold the key (→ p. 34).

- ▶  Phone ▶ Tap  ▶ Settings ▶ Speed dial ... An entry is displayed for each key (1-9). The Mailbox is assigned to key 1.

▶ Tap on the entry for the key to be used for fast access.

- ▶ Tap on the entry field ▶  Enter the number ▶ OK




or

- ▶ Tap  ▶ Select the number from the Contact List

## Editing quick SMS responses

If you do not want to accept a call, you can send a predefined SMS instead (→ p. 35).

Editing automatically sent SMS text:

- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Quick responses** ... Four predefined messages are listed ▶ Tap a reply ▶  Edit the reply ▶ **OK**

## Blocking incoming numbers


Protect yourself against unwanted calls and texts.

- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Call blocking** ... Blocked numbers are listed

Add a number:

- ▶ **Add number** ▶  Enter the number ▶ **BLOCK**

Enable the number again:

- ▶ Tap  next to the number ▶ **UNBLOCK**



## Using TTY for calls

In TTY mode (Telephone Typewriter), those with speech and hearing impediments can communicate by entering text on a smartphone.



The smartphone is connected to a special teletypewriter or other TTY service via USB.

Enabling TTY mode:

- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Accessibility** ▶ **TTY mode** ▶ Select the desired mode



**TTY (full mode)** See the call as text and hear it as audio.

**TTY HCO** Hear what the other person is saying, reply by entering text.

**TTY VCO** See as text what the other person is saying, reply by speaking.

## Network-dependent settings

Depending on your mobile network operator, you can use additional network services such as a mailbox, Call divert and Call waiting. You can set up these services and enable and disable them as required from the Settings menu in the Phone app.



- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Calling accounts** ▶ Tap the SIM card of the operator whose network services you want to edit




### Call log

The call log shows all outgoing, accepted and missed calls.

---

#### Showing the call log

▶  **Phone** ▶ Tap  ... The calls are listed with phone number, place and date. Arrow icons show the types of calls:

-  Missed call
-  Accepted call
-  Outgoing call

#### Showing call details


▶ Tap call ▶ **Call details** ... Information on the call is displayed, e. g. time and duration

---

#### Contacting the caller

▶  **Phone** ▶ Tap  ...

Calling: ▶ Tap  next to the entry

Sending an SMS: ▶ Tap the call ▶ **Send a message** ▶ Enter a message ▶ Tap 

---


#### Adding a phone number to the contacts

▶  **Phone** ▶ Tap  ▶ Tap the call ▶ **Add to contact** or **Create new contact**

---

#### Deleting calls from the call log

▶  **Phone** ▶ Tap  ...



Deleting a call: ▶ Tap the call ▶ **Call details** ▶ Tap 

Deleting all entries:

▶ Tap  ▶ **Call History** ▶ Tap  ▶ **Clear call history** ▶ Confirm with OK


---

## Contacts



You can use the app  **Contacts** to enter and organise all information on your contacts, e. g. different numbers, address, mail address and much more. Other apps, such as the  **Phone** app, access the information and make it available where it is needed.

---


### Using contacts

If you require frequent access to the contacts, move the  **Contacts** app to the start screen (→ p. 18).

## Viewing contacts

- ▶  ▶  **Contacts** ... Frequently-used contacts are displayed first. All contacts are then displayed in alphabetical order.

Specify how the contacts are sorted:

- ▶ Tap  ▶ **Settings** ▶ **Sort by** ▶ **First name** or **Last name**

Specify how the names of contacts are displayed:

- ▶ Tap  ▶ **Settings** ▶ **Name format** ▶ **First name first** or **Last name first**

### Customising view

Display only certain contacts:


- ▶ Tap  ▶ **Customize view** ▶ **Customize** ▶ Select label (group) ▶ **Save** ▶ ... Only the contacts in the selected group are displayed

Display all contacts:

- ▶ Tap  ▶ **Customize view** ▶ **All contacts**









Contacts can be stored at different places - locally on the smartphone, on the SIM card or in the Cloud of an account.

Narrowing down the display of contacts to one source: ▶ Tap  ▶ **Contacts to display** ▶ Select the required display

## Using a contact for communication

Calling a contact, sending an email or SMS to a contact.

- ▶  **Contacts** ▶ Scroll through the list and select the required contact ▶ Select an action ...
  - Calling: ▶ Tap the number or  ... The call is initiated
  - Sending an SMS: ▶ Tap  ... Enter the text message ▶ Tap 
  - Sending an email: ▶ Tap the mail address or  ▶ Write the email ▶ Tap 

## Grouping contacts

You can group contacts under a common label into groups. You can then, for example, send a group notification or a group email to the members of a label. Different labels are predefined, such as Family and Friends.

- ▶  **Contacts** ▶ Tap  ... Existing labels are listed



Creating a new label:

- ▶ **Create label** ▶  Enter label name ▶ **OK** ▶ **Add contacts** ▶ Select a contact ... The label is created with this contact

Adding contacts to a label:


- ▶  **Contacts** ▶ Tap  ▶ Select label

Add a new contact:

- ▶ Tap  ▶  Enter contact details ▶ **Save**

## Contacts

Add a contact from the contact list:

▶ Tap  ... All contacts belonging to the account are listed ▶ Select contact

or

▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Add to label** ▶ Select one or more labels ▶ **OK**



A contact can belong to more than one group.

**Removing a contact from a label:**

▶ Tap label ▶ Touch and hold the contact ▶ Tap  ▶ **Remove from label**

**Deleting a label:**

▶  **Contacts** ▶ Tap  ▶ Select label ▶ Tap  ▶ **Delete label**

---




## Adding contacts



If you have set up a Google account, you can also set up and manage your contacts from your computer. The contacts are automatically synchronised with the smartphone.

---

## Creating a contact

▶  **Contacts** ▶ Tap  ▶  Enter name, phone numbers and other details for the contact ▶ **Save**

---



## Importing/exporting contacts

Contacts can be exported from any location and be imported into a different location, e. g. the contacts stored on the SIM card can be imported into your Google account, and the contacts of the Google account can be stored as vCards in the device's internal memory.

**Exporting contacts:**

▶  **Contacts** ▶ Tap  ▶ **Settings** ▶ **Export** ▶ Tap  ▶ Select the destination for the export ▶ Enter the name for the export ▶ **Save**

**Importing contacts:**





▶  **Contacts** ▶ Tap  ▶ **Settings** ▶ **Import** ▶ Select the source for the import ... The contacts of the source directory are displayed ▶ Select the contacts to import ▶ **Import**




---

## Editing contacts

### Editing contact details



- ▶  **Contacts** ▶ Select the contact to edit ▶ Tap 
  - ▶ Tap the field you wish to edit ▶  Change the contents ▶ **Save**
- or
- ▶ Scroll down ▶ Tap **More fields** ▶  Fill in the required fields ▶ **Save**

### Adding contacts to Favourites


Add people you contact frequently to your Favourites. Favourites are shown in the  **Phone** app in a separate list (→ p. 34).

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ... The contact is displayed in the  **Phone** app in the Favourites list


### Creating a special ringtone for a contact

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Set ringtone** ▶ Select ringtone ▶ **OK**


### Diverting calls from a contact to the mailbox

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Route to voicemail**

### Deleting contacts

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Delete** ▶ **OK**

Deleting more than one contact at the same time:

- ▶ Touch and hold the contacts you wish to delete one after the other ▶ Tap  ▶ **Delete**

### Adding contacts for direct dialling on the start screen

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Add to Home screen** ▶ **Add automatically**

## Linking contacts

Merge multiple contact entries for a person in one contact.

- ▶  **Contacts** ▶ Touch and hold the contacts you wish to merge ▶ Tap  ▶ **Linking**

### Cancelling a link

- ▶ Open the linked contact ▶ Tap  ▶ **View linked contacts** ▶ **Unlink** ▶ **Unlink**

## Messages (SMS/MMS)

To send and receive messages, use the  **Messages** app. It is in the Favourites bar on the start screen by default (→ p. 18).

Instead of **Messages**, use another app as the default app for interchanging messages.



At least one other SMS app is installed.

▶  **Messages** ▶ Tap  ▶ **Settings** ▶ **Default SMS app** ▶ Select another SMS app ▶ **OK**



Help on the **Messages** app:

▶  **Messages** ▶ Tap  ▶ **Settings** ▶ **Help & feedback**

Information on the app settings is also here.


## Sending and replying to messages



Sometimes apps send text messages using billable Premium services. Android detects every attempt by an app to send an SMS in your name. A warning is displayed when there is a suspicion that an SMS entails additional charges. Text messages can be discarded, or sent anyway, in these cases.


## Writing an SMS

A text message (SMS) can comprise a maximum of 160 characters. If you enter more characters, the message is sent in several sub-messages (if this function is supported by your mobile network operator).

▶  **Messages** ... The list of conversations is displayed

Message in an existing conversation: ▶ Tap the conversation

Create a new conversation: ▶ Tap 


▶  Enter the phone number, name or email address ... Whilst you are doing so, matching contacts from the contact list are suggested ▶ Tap a suggestion or continue with your entry

or

▶ Select one or more contacts to whom to send the message


Enter a message: ▶  Enter the text

### Inserting a Smiley (Emoticon)

▶ Whilst entering the text, tap  to the right of the text field ▶ Select the icon

Back to the keypad: ▶ Tap 


### Saving a message as a draft

▶ Whilst entering a text message, tap  ... The message is stored in the list of conversations as a draft


Continue with your entry: ▶ Tap this conversation.

## Writing an MMS


Multimedia messages (MMS) can contain text, images, voice messages, camera pictures or videos, preconfigured stickers (animated symbols) and information about a location.

- ▶ When writing a message, tap  to the left of the text field
- ▶ Select the required attachment(s) ...





### Stickers

- ▶ Tap  ... Stickers are displayed
- ▶ Select a sticker
- Load more stickers: ▶ Scroll down ▶ **Download**

### Pictures and videos


- ▶ Tap  ... Available pictures and videos are displayed
- ▶ Select a picture or video

### Creating new pictures and videos with the camera


- ▶ Tap  ... The camera opens
- Enable Full screen mode: ▶ Tap 
- Record a video: ▶ Tap 
- Start a recording: ▶ Tap 

### Voice messages

- ▶ Tap  ... A microphone icon is displayed
- ▶ Touch and hold the icon
- ▶ Record your voice message
- ▶ Release the icon

 Voice messages are not stored on the device.

### Map with location


- ▶ Tap  ... A map in which your current location is entered is displayed
- ▶ Confirm location
- or: ▶ Drag the map up, move the location and select another position

The files appended are displayed in the message.

Show preview: ▶ Tap the attachment


Delete attachment: ▶ Tap the x in the top right

## Sending a message

- ▶ Write a text or multimedia message ▶ Tap  ... The message is sent
- Back to the list of conversations: ▶ Tap 


The message is the start of a conversation. It is stored in the message list under the name or phone number of the recipient. Responses from the message recipient are displayed in the same conversation.



### Responding to received messages

When a new message arrives, the Message LED flashes, you receive a notification and the  icon is shown in the Notifications bar.

▶ Tap the notification ... The message opens

or

▶  **Messages** ... The list of conversations is displayed ▶ Tap the conversation with the new message


▶  Enter the reply ▶ Tap 

---

### Reading and managing messages

---

#### Reading messages


▶  **Messages** ... The list of conversations is displayed ▶ Tap a conversation ... All messages in this conversation are displayed in chronological order

---

#### Managing messages

▶ Touch and hold the message ... An options bar is shown at the top ▶ Select an option ...


Sharing a message:

▶ Tap  ... Apps with which you can edit and forward the message are shown, such as other Messengers, email and Google Drive.


Forwarding a message to a contact or another recipient:

▶ Tap  ▶ Select a recipient or start a new conversation ▶ Send with 

Copying message text:

▶ Tap  ... The text is copied to cache. You can use it for any text entry.


Displaying more information on the message and sender:

▶ Tap  ... Detailed information depending on the message is displayed

Saving MMS pictures and videos on the device:




▶ Tap  ... The picture is saved in the internal device memory under Pictures/Messages

Deleting a message from a conversation:


▶ Tap  ▶ Confirm with **Delete**


---

#### Searching in messages


▶  **Messages** ▶ Tap  ▶  Enter the search term ... Messages in which text matching the search term occurs are displayed

## Managing conversation

▶  **Messages** ... The list of conversations is displayed ▶ Touch and hold one or more conversations


... All conversations selected are denoted by . An options bar is shown at the top ▶ Select the required option ...

### Deleting conversions

▶ Tap  ▶ Confirm with **Delete**

### Enabling/disabling notifications


The default setting is that you receive a notification when a new message arrives. You can disable notifications for certain contacts.


Disable notification: ▶ Tap 


Re-enable notification: ▶ Tap 

### Archiving conversations

Archived conversations are no longer shown on the start screen of the app, but you can still read them.


▶ Tap  ... The conversations selected are archived

Open archive: ▶ Tap  ▶ **Archived** ... The conversations archived are displayed

Retrieve conversations from the archive: ▶ Touch and hold the conversations ▶ Tap  ... The conversations are displayed again on the start screen

### Blocking conversations

If you do not want to receive any more calls or messages from certain contacts, you can block them.

▶ Tap  ▶ **BLOCK** ... There is no longer notification of calls and messages from the contacts selected



Cancelling a block for contact: ▶ Tap  ▶ **Blocked contacts** ▶ Tap  next to the number ▶ **UNBLOCK**

# Settings

## Device

### Language

Change the language for the displays.

- ▶  ▶  **Settings** ▶ **System** ▶ **Languages & input** ▶ **Languages** ... All available languages are displayed in a list. The language being used at the moment is at the very top.



Make available other languages:

- ▶ **Add a language** ▶ Scroll through the list and select the language ▶ Select the country ... The language is included in the list

Select language:

- ▶ Touch and hold the entry ▶ Drag up and release

Delete language from list:

- ▶ Tap  ▶ **Remove** ▶ Select the languages to delete ▶ Tap  ▶ **OK**

## Display

### Brightness

Change the screen brightness or adapt it the surroundings.

- ▶ From the Status bar, swipe down using two fingers ... The quick settings are opened

or

- ▶  ▶  **Settings** ▶ **Display** ▶ **Brightness level**



- ▶ Set the brightness level with the slider bar



**Automatically adapting the brightness level depending on the ambient light available**

- ▶ Tick the **AUTO** checkbox next to the slider bar

or



- ▶  ▶  **Settings** ▶ **Display** ▶ **Adaptive brightness** ▶ Enable/disable with the switch



Even if the brightness is set to adjust automatically, you can change the brightness level using the slider bar.

## Font size

Change the display size of text.

- ▶  ▶  **Settings** ▶ **Display** ▶ **Advanced** ▶ **Font size** ▶ Select one of the four levels for font size using the slider bar



## Display orientation

Set what the screen content does when you rotate the device.

- ▶  ▶  **Settings** ▶ **Display** ▶ **Advanced** ▶ Enable/disable **Auto-rotate screen**



You can also enable/disable this option in the accessibility features and quick settings.

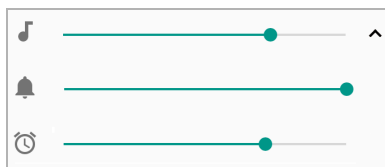
## Tones and volume

### Volume



Change the volume for ringtone, music and alarm.

#### Using the Volume button

- ▶ Press the Volume button on the right-hand side of the device . . . The slider bar for the volume opens ▶ Tap the arrow on the right next to the slider bar ▶ Set the volume using the slider bar




#### From the Settings menu

- ▶  ▶  **Settings** ▶ **Sound** ▶ Set ringtone, media and alarm volumes with slider bars

## Enabling/disabling vibration

Disabling the ringtone, enabling vibration:

- ▶ Press the bottom of the Volume button until the ringtone volume reaches the lowest setting and the device vibrates . . . The  icon is displayed in the Status bar

Enabling the ringtone and vibration:


- ▶  ▶  **Settings** ▶ **Sound** ▶ Enable/disable option **Also vibrate for calls** with the switch

## Ringtones

### Changing the default ringtone

- ▶  ▶  **Settings** ▶ **Sound** ▶ **Phone ringtone** ▶ Select a ringtone ▶ OK

## Adding new ringtones

Ringtone apps: ▶ Download and install ringtone apps from the Google Play Store 

Transferring a music file (MP3) from a computer:

- ▶ Use the USB cable provided to connect the device to a computer → p. 31
- ▶ Transfer the music file (MP3) to the folder **Ringtones**

---

## Setting rules for automatic muting


Automatically mute the smartphone at certain times ("Do not disturb").

- ▶  ▶  **Settings** ▶ **Sound** ▶ **Do Not Disturb preferences**


### Muting tones at certain times

- ▶ Select standard rule **Weeknight**, **Weekend** or **Event** ▶ Change the settings for the rule as required ▶ Enable/disable the rule with the **On/Off** switch

or create a separate rule

- ▶ Tap **Add more** ▶ **Time rule** ▶  Enter the rule name ▶ **OK**
- ▶ Select the day(s), start time and end time for the rule
- ▶ Select option for **Do Not Disturb preferences** (→ p. 29)
- ▶ Enable/disable the option **Alarm can override end time**
- ▶ Enable/disable a rule with the **On/Off** switch

### Muting a tone during events and meetings

- ▶ Tap **Add more** ▶ Tap **Event rule** ▶  Enter the rule name ▶ **OK** ▶ Select the option **During events for:** ▶ Select the account to which the rule applies when you are using more than one account with calendar events
- Where reply is:** ▶ Select the events to which the rule applies (events you have confirmed with "Yes" or "Perhaps", or have not confirmed at all)
- Do Not Disturb preferences:** ▶ Select the "Do not disturb" mode (**Priority only**, **Alarms only**, **Total silence**) (→ p. 29)

### Enabling a rule

- ▶ Enable/disable a rule with the **On/Off** switch





Mute the smartphone manually if required → p. 29

---

## Setting keypad tones





You are using the standard Android keypad.

- ▶  ▶  **Settings** ▶ **System** ▶ **Languages & input** ▶ **Virtual keyboard** ▶ **Android keyboard** ▶ **Preferences** ▶ Enable/disable option **Sound on keypress** and/or **Vibrate on keypress** with the switch



## Enabling/disabling other tones


Set whether tones are sounded or the device vibrates when the dialpad is used - for every touch when the display lock is enabled.

- ▶  ▶  **Settings** ▶ **Sound** ▶ **Advanced** ▶ Enable/disable required option under **Other sounds and vibrations** with the switch.



## Power management

To prolong the life of your smartphone as long as possible, the device has various ways to make best possible use of the battery capacity.




### Showing the battery charge level


The  icon in the Status bar shows the charge level (→ p. 83).

Showing the charge level next to the battery icon in %:

- ▶  ▶  **Settings** ▶ **Battery** ▶ Enable/disable the **Battery percentage** function with the switch

### Showing the power consumption

- ▶  ▶  **Settings** ▶ **Battery** ▶ Tap the battery icon  ... Information on system component usage is also displayed, e. g. **Screen**, **Mobile network standby**, **Wi-Fi**

 When the device is being charged, the remaining time to charge level "Full" is shown instead of the usage time remaining.


## Using Power Save mode

Save power until the device can be charged again.



Some of the device's functions are limited in Power Save mode:

- Google Maps Navigation cannot be used.
- The vibration function, location services and most background data are restricted.
- Email, SMS/MMS and other apps requiring the synchronisation function are only updated when opened.



Enabling/disabling Power save mode:

- ▶ From the Status bar, swipe down ▶ tap the Power Save icon  ... Power Save mode will be switched on or off.

or

- ▶  ▶  **Settings** ▶ **Battery** ▶ **Battery saver** ▶ Enable/disable the function with the switch

### Automatically enabling Power save mode for low charge level

- ▶  ▶  **Settings** ▶ **Battery** ▶ **Battery saver** ▶ Turn on automatically ▶ Never or for a charge level of 5% or 15%



When Power Save mode is on, the battery icon will be displayed in Power Save mode and the Status bar and navigation bar will be red.

Power Save mode ends automatically when the device is being charged.

---

## Other power consumption settings

Power saving by changing the settings for system components.

▶ ▶ Settings ▶ Battery ...

Change the display settings:

- ▶ **Adaptive brightness** ▶ Enable/disable with the switch
- ▶ **Phone idle** ▶ Select a shorter time

---

## Storage

The device differentiates between permanent device storage (which can be extended with an SD card) and main memory. The permanent storage area is for data such as music and photos. Main memory is temporary storage used by the device to run apps and the overall system.

---

### Device storage management without SD card

Check the available storage capacity and memory usage of apps.

▶ ▶ Settings ▶ Storage ... The total storage capacity available, and that being used at the moment, are displayed, as well as a list of components using storage capacity

Show more information: ▶ Tap an entry

---

### Device storage management with SD card



The device detects SD cards with a storage capacity of 32 GB. Higher capacity cards (to 128 GB) can be used if formatted on the Gigaset GS185 (not from a PC).

▶ ▶ Settings ▶ Storage ...

Specifying where personal information is stored:

▶ Select **Internal storage** or **SD card**

Checking the available storage capacity and memory usage of apps:

▶ In the lower area of the screen next to , tap **Internal storage**

Ejecting an SD card:

▶ Next to **SD card...**, tap ... The SD card is disabled. It can no longer be used as memory and the information on the card is no longer available.

Using the SD card again:

▶ Tap **SD card ...** ▶ **Mount**

---

## Freeing up device memory

- ▶ Uninstall apps which are not used (→ p. 24)
- ▶ Delete saved photos and videos and/or save them in the Cloud (e.g. using Google Photos)
- ▶ Remove downloaded music, films and other media
- ▶ Empty/clear the cache or data for individual apps (→ p. 61)

---

## Accessibility features

For those with disabilities, there are a number of useful settings for adapting the usage of the smartphone to personal needs.

- ▶  ▶  **Settings** ▶ **Accessibility** ▶ Enable/disable or set up the required function

For example:

### Text-to-speech output

Configure comprehensive settings for speech output.

### Font size

Use a larger font for text on the display.

### Display size

Show screen elements larger.

### Magnification

Use enlargement movements to temporarily increase the size of content on the screen.

### Color correction

Compensate the effects of colour blindness.

### Color inversion

Swapping of colour values. For example, black text on a white screen becomes white text on a black screen.

### Large mouse pointer

Enlarge cursor.

### Click when the cursor stops

Enable acoustic notification when the cursor stops.

### Power button ends call

End calls by pressing the On/Off button.

### Auto-rotate screen

Automatically switch between landscape or portrait view when the smartphone is rotated.

### Touch & hold delay

Change the time after which "Touch and Hold" is enabled on touching the screen.

### Mono audio

Connect the channels for audio playback.

### Captions

Enable subtitles for the device, and configure settings for voice, text size and subtitle style.

## Security

### High contrast text

Use black or white as the text colour depending on the original text colour.

More information on accessibility features is available from: → [Google Help](#)

---

## Security

---

### Display lock

The display lock protects the device from unauthorised use. When you switch the device on or enable the display, you are prompted to unlock the device.

The display lock becomes active after a defined time after the device has switched to idle mode.

A pattern, PIN or password is used as the display lock.



It is also possible to use a fingerprint as a display lock (→ p. 27). In this case, the display lock set up serves as the alternative method.

---

### Setting up a display lock

- ▶ ▶ **Settings** ▶ **Security & location** ▶ **Screen lock** ▶ Enter the PIN, pattern or password if you have already specified a lock ▶ Select the method ...

**None** ... No security

**Swipe** ... The display can be unlocked by swiping over the screen

#### Pattern, PIN, Password

- ▶ Select option **Require pattern to start device** if the requirement is for the device to prompt unlocking at the start ▶ **Continue**

For **Pattern**:

- ▶ Draw the pattern - join together at least four dots ▶ **Continue** ▶ Repeat the pattern ▶ **Confirm**

For **PIN**:

- ▶ Enter at least four letters or digits ▶ **Continue** ▶ Repeat the PIN ▶ **OK**

For **Password**:

- ▶ Enter at least four letters or digits ▶ **Continue** ▶ Repeat the password ▶ **OK**

---

### Settings for the display lock

- ▶ ▶ **Settings** ▶ **Security & location** ▶ Tap next to **Screen lock** ▶ Make the setting

#### Showing/hiding the pattern

Only for a display lock with pattern. When entering the pattern to unlock the device, the pattern is shown as a line by default. You are able to change this for security reasons.

- ▶ Enable/disable the switch next to **Make pattern visible**

## Setting the time for automatic display lock

The display lock is enabled once the device has been in idle mode for a certain time.

- ▶ **Automatically lock** ▶ Select the duration of idle mode

## Enabling the display lock when switching on and off

- ▶ Enable/disable the switch next to **Power button instantly locks**



The settings for **Automatically lock** and **Power button instantly locks** can be cancelled with Smart Lock.

## Entering a lock screen message

Enter the text to be displayed when the screen lock is enabled, such as your name and address, or an emergency message. All those picking up the phone can read the message without unlocking the smartphone.

- ▶ **Lock screen message** ▶ Enter the text ▶ **Save**

## Automatically unlocking the device with Smart Lock

Smart Lock enables the smartphone to be unlocked automatically under certain circumstances, such as when you have it on you or are at home.



A display lock is set up.

Smart Lock must be enabled in **Trust agents**:

- ▶ ▶ **Settings** ▶ **Security & location** ▶ **Trust agents**

Configuring Smart Lock:

- ▶ ▶ **Settings** ▶ **Security & location** ▶ **Smart Lock**

More information on Smart Lock: → [Google Help](#)

## Screen pinning

When you pass on the smartphone to someone else, you can restrict its usage to a single app. For this, you pin a certain view of this app.

### Enabling/disabling screen pinning

- ▶ ▶ **Settings** ▶ **Security & location** ▶ **Screen pinning** ▶ Enable/disable the function with the switch
- ▶ Use the switch to specify whether the PIN, pattern or password needs to be entered to unpin the screen.

### Pinning the screen

- ▶ Open the screen to be pinned ▶ Tap the **Navigation button** ▶ Swipe up until you can see the **pin icon** ▶ Tap the icon ▶ **OK**

### Unpinning the screen



- ▶ Touch and hold at the same time the  and  Navigation buttons ▶ Enter the PIN, pattern or password as required ... The screen is unpinning

---

### SIM card lock

The SIM card lock prevents unauthorised use of the device. For every locked SIM card, the PIN must be entered when the device is started.

The PIN lock is enabled when the device is purchased. The PIN is available from your mobile network operator.

- ▶  ▶  **Settings** ▶ **Security & location** ▶ **SIM card lock** ▶ When there are two SIM cards, select the provider of the SIM card from the header

Enabling/disabling the SIM card lock:

- ▶ Enable/disable the switch next to **Lock SIM card** ▶  Enter the valid PIN ▶ **OK**

Changing the PIN:

- ▶ **Change SIM PIN** ▶  Enter the valid PIN ▶ **OK** ▶  Enter the new 4-digit PIN ▶ **OK**

---

### App permissions

When downloading an app from Google Play, specify the functions and data to which this app has access, e.g. to contacts or your location.

You can check and change permissions for apps on your device. With App permissions management, you have quick access to all permissions granted to apps on the device.

---


### Permissions when installing apps

Many apps downloaded from Play Store request access to particular information before installation. For apps developed for Android 6.0 and higher, you can grant or deny permissions on initial use.

Information on app permissions in the Google Play Store:

- On the "Permissions" screen for an app in the Play Store, you can check which permissions the app requires and then decide whether you want to install it. Scroll down to the very end of the app description.
- For many apps, all permissions are displayed in Google Play before installation. You can use this information to decide whether you want to install the apps.
- Some apps are installed without any prompts about permissions. You are then able to grant or deny individual permissions when using the apps for the first time.
- Permissions might be changed when apps are updated automatically. When using for the first time a function which requests a new permission, you might have to grant or deny access to this data or function.
- If you want to check all updates before an installation, disable the automatic updates option in the Play Store.

For certain apps: In the  menu under **My apps and games**

For all apps: In the  menu under **Settings**


## Enabling/disabling permissions for apps on the smartphone

- ▶  ▶  **Settings** ▶ **Apps & notifications** ... All installed apps are listed

Setting the permissions for an app:

- ▶ Select the app for which you want to change the permissions ▶ **Permissions** ... All meaningful permissions for the app are displayed ▶ Grant/deny the required permissions with the switch

Displaying all permissions in detail:

- ▶ Tap  ▶ **All permissions**



If you revoke or do not grant permissions for an app, it might not work properly.

## Android Device Manager

If you have lost your smartphone, you can use the Android Device Manager to locate it, ring it, lock it and delete data on it.





The device is registered with a Google account (→ p. 58)

Location detection is enabled (→ p. 59).

Enabling/disabling monitoring by the Android Device Manager:

- ▶  ▶  **Settings** ▶ **Google** ▶ **Security** ▶ **Find My Device** ▶ Enable/disable the function with the switch

or



- ▶  ▶  **Settings** ▶ **Security & location** ▶ **Find My Device** ▶ Enable/disable the function with the switch
- ▶ Select the service you want to use for device location, install the app if necessary and log in to your Google account.
- ▶ Check whether the Android Device Manager can locate the device:
- ▶ Log in to your Google account using the selected service and see whether your device is displayed



You can also install the Android Device Manager on mobile devices, such as your smartphone or a tablet (downloaded from Google Play).

## Device administrators

Device administrators are apps authorised to create a connection to your smartphone and to exchange data, for synchronisation for example. You can authorise this by setting up an account hosted by a business service, such as for an email, calendar or business app.

- ▶  ▶  **Settings** ▶ **Security & location** ▶ **Manage device admin apps** ... A list of device administrators is displayed ▶ Tick the checkboxes next to the apps to be allowed as device administrators

Displaying device administrator information:

- ▶ Touch and hold a service in the list



If you disable a device administrator, you revoke the permission of associated services to synchronise data on your phone.

Google services (Gmail, contacts, calendar, etc.) are not treated as device administrators. Permissions for these services to make changes on the smartphone are managed from the Google account settings.

---

## Certificates

Digital certificates are used to identify your smartphone in secure network connections. You require a certificate for VPN or WLAN connections for example, or for authentication with email servers, browsers or other apps. Some certificates are already stored on your phone by default. You can install further certificates.



Supported formats:

- DER coded X.509 certificates with file extensions .CRT and .CER.
- X.509 certificates in PKCS#12 keystore files with file extensions .P12 and .PFX. If you install a certificate from a PKCS#12 keystore file, the corresponding private key certificates or certification authority (CA) certificates are also installed.

Files with different file extensions cannot be installed. Change the file extension if required.



## Managing certificates

- ▶  ▶  **Settings** ▶ **Security & location** ▶ **Encryption & credentials** ▶ **Trusted credentials**

The installed certificates are displayed.

**System:** Contains all certificates issued by a certification authority (CA) that are permanently installed in the write-protected memory of your phone.

**User:** Contains all CA certificates you have installed yourself, when installing a client certificate for example.

If a certificate is corrupt or you do not trust a certificate, you can disable or delete it.




- ▶ Tap a certificate ... Information on the certificate is displayed ▶ Scroll down

System certificate: ▶ **Disable/Enable** ▶ **OK**

User certificate: ▶ **Remove** ▶ **OK** ... The certificate is deleted permanently and needs to be reinstalled if required

## Installing client and CA certificates

Install additional certificates from an SD card, internal storage, the Download folder or Google Drive.

- ▶ Save a certificate or keystore file on one of the media mentioned above.
- ▶  ▶  **Settings** ▶ **Security & location** ▶ **Encryption & credentials** ▶ **Install from SD card** ▶ Open the  menu ▶ Select the certificate location ▶ Tap the file name of the required certificate or keystore ▶ Enter the keystore password ▶ **OK** ▶ Enter the certificate name ▶ **OK**

CA certificates upon which client certificates are based are also installed.



A display lock with high security level must be set (with PIN or password) if you want to install certificates. You might be prompted to set a display lock (➔ p. 52).

---

# Accounts and location detection

---

## Accounts

Use one or more accounts to use personal information such as contacts, pictures and mailbox on multiple devices. An account enables synchronisation of the information and makes it available to all registered devices.

---

### Account types

#### Google account


You need a Google account for Google services such as Gmail™, Google+™ or YouTube™, and for downloading apps from Google Play™. When you log in with a Google account, emails, contacts, appointments and other information assigned to this account are automatically synchronised with your device. You can set up a new account on the smartphone or log in the smartphone to an existing account.

#### Email account

If you do not use the Google account for your email, you need to register your smartphone with your mail server. POP3 and IMAP mail servers are supported.

You can still use the **Gmail** app to receive and send emails.

Managing emails with the **Gmail** app: ▶ Use an account type with icon 

Managing emails with the **Email** app: ▶ Use an account type with icon 




You require information on the service the account uses, such as server address, user name and password. The phone must be able to establish an Internet connection over WLAN.

#### Exchange account

You set up an Exchange account to synchronise contacts, calendar, tasks and emails with Microsoft Outlook™.

---

### Adding an account



- ▶  ▶  **Settings** ▶ **Users & accounts** ▶ **Add account** ▶ Tap the type of account you want to add ▶ Enter the account details. Follow the instructions on the screen

---

### Removing an account



When an account is removed from a device, all associated content is also removed, such as emails, contacts and settings.

- ▶  ▶  **Settings** ▶ **Users & accounts** ▶ Tap the account to be deleted ▶ **Remove account**

## Synchronising

You can specify how apps synchronise messages, emails and other current data in your Google account.

Google apps are automatically synchronised with the Google account as standard. You can enable and disable automatic synchronisation for individual Google apps.



Apps which are not from Google cannot be synchronised using a Google account. Look in the respective settings menu for these apps for a synchronisation option.

## Enabling/disabling automatic synchronisation

Setting synchronisation for a Google account:

▶ ▶ **Settings** ▶ **Users & accounts** ▶ Enable/disable **Auto-sync data** option



Disabling automatic synchronisation prolongs the battery life. Enable automatic synchronisation again if you want to continue after charging the battery.

Setting synchronisation for individual apps:

▶ ▶ **Settings** ▶ **Users & accounts** ▶ Select account ▶ **Account sync** . . . A list of Google apps with the time of the most recent synchronisation is displayed ▶ Enable/disable synchronisation of an app with the switch



You can only set synchronisation for individual apps if automatic synchronisation is enabled.

## Manually synchronising an account

In manual synchronisation, the data of all Google apps is updated if automatic synchronisation is not enabled. If automatic synchronisation is enabled, only the apps that do not have automatic synchronisation disabled are synchronised.

▶ ▶ **Settings** ▶ **Users & accounts** ▶ Select account ▶ **Account sync** ▶ Tap ▶ **Sync now**

## Location detection

Apps with **Location detection** permission can use the device's location information to offer location-specific services, such as check-in options, traffic information and nearby restaurants.

## Enabling/disabling location detection

▶ ▶ **Settings** ▶ **Google** ▶ **Location** ▶ Enable/disable the function with the switch

### Changing location mode

Different sources for location detection of the device are used depending on mode.

- **High accuracy**  
GPS, WLAN, Bluetooth or mobile networks are used to determine the location of your device as accurately as possible.
- **Battery saving**  
The device determines its location using sources which require little power, such as WLAN and mobile networks.
- **Device only**  
Only GPS is used. The location service from Google is not used. This mode potentially requires more power and is slower.



Location detection enabled:

▶  ▶  Settings ▶ Google ▶ Location ▶ Mode ▶ Select the mode

---

### Checking location detection by apps

Check which apps are currently accessing your location, or have recently accessed your location.

▶  ▶  Settings ▶ Google ▶ Location . . . In **Recent location requests** is a list of apps which have recently accessed the location of the device.

---

### Managing location history

When **Location history** is enabled, Google can also determine the device's location when no Google app is active. Location history information is stored in your Google account for all devices assigned to the account.

▶  ▶  Settings ▶ Google ▶ Location ▶ **Google-Location History**

The screen is the starting point for all activities pertaining to the location history. You can for example switch off the location history for individual or all devices, view locations visited over a certain period, show information on locations visited or delete all your location history information.

For information on location history → [Google Help](#)

## Apps

Detailed information on working with apps → p. 23

### Default app

If you have several apps with identical functions, you can select which app is used as standard for an action. For example, if you have downloaded from Google Play a different calendar or another app for making calls, you can make these the default apps.



#### Selecting a default app for an action

If multiple apps are available for an action and a default app is not defined, you are prompted to select an app.

- ▶ Tap the app you want to use.
- ▶ Select whether this app is used **Just once** or **Always** for the action.

If you select **Always**, the app is set as the default app for all actions of this type.

#### Resetting the default app



- ▶  ▶  **Settings** ▶ **Apps & notifications** ▶ Display all apps ▶ Select the app for which **Always** was selected before for an action ▶ **Open by default** ▶ **Clear defaults**



If you then restart the action, you are prompted again as to which app to use.

#### Specifying the default app for a frequently used function

For some functions, you can select a default app at any time without performing a corresponding action.

- ▶  ▶  **Settings** ▶ **Apps & notifications** ▶ **Advanced** ▶ **Default apps** ... Different functions are displayed ▶ Select function ... If there are several apps for this function, they are displayed ▶ Select the app

### Changing app settings

Check the current app settings and change them as required.

- ▶  ▶  **Settings** ▶ **Apps & notifications** ▶ Display all apps ▶ Select the app

Which settings are available depends on the respective app.

#### Uninstall / Disable

Uninstall app from device / disable app → p. 24

#### Force stop

Stops the app including all background processes. This is a sensible action when an app no longer responds for example, or is running in the background and is using too many system resources (such as memory). The app can easily be started again from the App menu.

## Apps

### App notifications

Specify the procedure for app notifications (→ p. 21)

### Permissions

Apps and system resources the app is permitted to access (→ p. 55)

### Storage

Internal storage used by the app.

Freeing up storage: ▶ Tap **Storage** ▶ **Clear data**

Freeing up temporary app memory: ▶ Tap **Storage** ▶ **Clear cache**

### Data usage

Data volume downloaded or uploaded by the app over the mobile data network or WLAN (→ p. 67).

### Battery

Battery usage since the last full charge (→ p. 49).

### Open by default

Specify how the app is to proceed with links.

### Memory

Average memory usage in the device's temporary main memory over the last three hours (→ p. 49).

---

## General app settings

Checking and changing the permissions and default values for apps.

▶  ▶  **Settings** ▶ **Apps & notifications**

### Notifications

Set up notifications for apps (→ p. 20).

### Standard apps

If several apps with identical function are available, select which one is used by default (→ p. 61).

### Emergency broadcasts

You can enable or disable various emergency notifications.




### Special app access

Contains detailed information on the access capabilities of apps to data and system resources.

---

## Resetting app settings

Reset all the changes made to app settings.

▶  ▶  **Settings** ▶ **Apps & notifications** ▶ **Display all apps** ▶ Tap  ▶ **Reset app preferences**

## Network connections

The smartphone can establish connections to mobile networks, WLANs and other devices via Bluetooth.

### Mobile networks

To make and receive calls with the smartphone over a mobile network, you require a SIM card from the relevant mobile network operator. Refer to your mobile contract for which services are available, and which terms and conditions apply.

You can insert two SIM cards into your device, i.e. you can use two mobile networks at the same time.

### Editing settings

▶  ▶  Settings ▶ Network & Internet ▶ Mobile network



If two SIM cards are inserted into the device, the **Mobile network settings** screen contains a tab for each SIM card ▶ Select the appropriate tab as required.

### Roaming

Permit the sending of data by the device over mobile networks of other operators whilst you are in a region where the network of your operator is not available.



Additional charges can be incurred by data roaming (depending on your mobile contract).

### Preferred networks

Select a preferred mobile network when you are not in the area of your mobile network operator.

### Preferred network type

Select the preferred mobile standard, such as 2G, 3G, 4G. The smartphone uses the network with the best availability as standard.

### Enhanced 4G LTE Mode

Improve speech quality and other communication.

### Access point names

Your mobile network operator can use these settings to determine the correct IP address for your device, and so establish a secure connection for your device.

### Network operators

Select your provider from the networks available.

### Using two SIM cards

▶  ▶  **Settings** ▶ **Network & Internet** ▶ **SIM cards** ... Detected SIM cards in slots 1 and 2 are displayed

Enabling and disabling a SIM card: ▶ Enable/disable the switch

Showing information:

▶ Tap an entry ... The name of the SIM card, the colour used for the card, the mobile network operator and the phone number are displayed. You can change the name and display colour.

Specify the preferred SIM card for the following functions:

- **Mobile data**

Only one SIM card can be used for mobile data transmission.

- **Calls**

You can specify one SIM card for all outgoing calls, or be prompted for which SIM card to use before every call.

- **SMS messages**

One SIM card can be defined for sending SMS messages.



You might need to perform the assignment anew when you insert a new SIM card or swap out an existing one.

---


### WLAN

Use the smartphone to establish a connection to a WLAN, and use the connection to send data and to surf the Internet.

A connection is established automatically if the smartphone is within range of a registered WLAN and the WLAN function is enabled.


---

### Enabling/disabling the WLAN function

▶ From the Status bar, swipe down using two fingers ... The quick settings are displayed ▶ Tap the  WLAN icon

or

▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Wi-Fi** ▶ Disable/enable WLAN with the On/Off switch


When WLAN is enabled, the  icon is displayed in the Status bar. The icon shows the signal strength on four levels. Little arrows in the icon show when data is being sent.



To prolong the battery life, disable the WLAN function when you are not using it. WLAN is disabled in Flight mode.




## Establishing a connection to a WLAN


- ▶ From the Status bar, swipe down using two fingers ... The quick settings are displayed ▶ Tap the arrow under the  WLAN icon

or

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Wi-Fi**

... All WLANs within range are displayed.

Networks protected by a password have a lock icon  next to the entry. Networks without a lock icon are public hot spots.




- ▶ Tap the required WLAN ▶  Enter the network password ▶ **Connect** ... If the connection is successful, **Connected** is displayed under the network name

WLANs registered for the smartphone are shown in the **Saved networks** list, even if they are currently out of range and no connection is established.

Showing saved WLANs: ▶ **Saved networks**

## Adding more WLANs

WLANs which do not send their name (the SSID) or are not within range are not displayed in the WLAN list. They can still be saved with name and password. The connection is established if the WLAN is within range.



- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Wi-Fi** ▶ **Add a network** ▶  Enter the network name (SSID) and security details ▶ **Save** ... The network is included in the **Saved networks** list

## Removing a WLAN

If the requirement is for the device to not automatically connect to a saved WLAN, the WLAN can be removed from the list of saved networks.

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Wi-Fi** ▶ **Saved networks** ▶ Tap the saved network to be removed ▶ **Forget**

## Viewing WLAN details

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Wi-Fi** ▶ Tap the network name of a connected WLAN ... Information on the connection is displayed, such as signal strength, connection status and transmission rate



Changing the network settings:

- ▶ Touch and hold the network name ▶ **Modify network**

Deleting a network: ▶ **Forget network**

### Connection configuration

Align the network settings to the requirements of the WLAN to be used to establish a connection.

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Wi-Fi** ▶ Touch and hold the network name ▶ **Modify network** ▶ Tap the down arrow next to **Advanced options** ...

#### Proxy

If a connection to a WLAN is established over a proxy: ▶ Tap **Proxy**


Manually entering the proxy details: ▶ **Manual** ▶  Enter the data ▶ **Save**

Automatic proxy configuration: ▶ **Autom. proxy config.** ▶  Enter the URL of a PAC file ▶ **Save**





A Proxy Auto Config (PAC) file enables a web browser to automatically find the right proxy server for a required URL.

#### DHCP

When there is no active DHCP server in the WLAN: ▶ Tap **DHCP** ▶ **Static** ▶  Enter the network configuration data ▶ **Save**

---

### Advanced options

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Wi-Fi** ▶ **Wi-Fi settings** ▶ **Advanced** ▶ Select option ...

**Open network notification** ▶ Enable/disable with the switch

Can be enabled to display a powerful public network.

Digital certificates are used to identify the device for WLAN access. You can install additional certificates if not all those required are available.

- ▶ **Install certificates** ▶ Select the source for the certificate

Certificates → p. 56

Establish a connection between the device and other Wi-Fi Direct-enabled devices.

- ▶ **Wi-Fi Direct** ... WiFi Direct-enabled devices or groups within range are displayed ▶ Select the required device or group

Registration at a WLAN Access Point with the WPS Push function.

- ▶ **WPS Push Button** ▶ Enable WPS Push function at the Access Point ... The connection is established

Registration at a WLAN Access Point with personal identification number (PIN).

- ▶ **WPS Pin Entry** ... The WPS PIN of the device is displayed ▶ Enter WPS PIN at the Access Point ... The connection is established

## Data usage

The data usage is the amount of data uploaded or downloaded by the device over a certain period over the mobile data connection or WLAN. Most tariffs include a restriction of data volume. So as not to incur any additional costs, you can check the data usage of the device and limit it as required.

### Checking data usage

▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Data usage**

Data usage in the mobile network is displayed in a bar - for a certain time period and in relation to the warning limit for mobile data usage.

The data volume transferred so far within the time period set is displayed in **Mobile data usage**. The data volume sent over WLAN within the time period set is shown in **Wi-Fi data usage**.


Show further information, such as the apps involved in data usage:

▶ Tap **Mobile data usage** or **Wi-Fi data usage** ... More information is displayed, such as the apps involved in data usage.

Display another time period:

▶ Tap the arrow next to the time period displayed



Change the billing period for mobile data usage:

▶ **Mobile data usage** ▶ Tap  ▶ Select the start of the monthly billing period ▶ **Billing cycle** ▶ **Set**

### Setting a limit and warning for mobile data usage


#### Entering a data limit

Enter the maximum data volume made available by your provider as a data limit. Once the limit set for data usage is reached, mobile data usage is disabled automatically. You receive a notification.

▶ **Mobile data usage** ▶ Tap  ▶ Enable function **Set data limit** with the switch ▶ **OK**  
 ▶ Tap **Data limit** ▶ Switch between Megabyte (**MB**) and Gigabyte (**GB**) as required ▶   
 Change the value ▶ **Set**

... The limit is entered into the **Mobile data usage** graphic.

Re-enabling data usage:

▶ **Mobile data usage** ▶ Tap  ▶ Disable function **Set data limit** with the switch ▶ **OK**





Data transmission can now incur costs.

### Setting a warning for data usage

Set a value for data volume usage at which you want to receive a warning.

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Data usage** ▶ Tap the bar ▶  Change the value ▶ **Set**

or




- ▶ **Mobile data usage** ▶ Tap  ▶ **Data warning** ▶  Change the value ▶ **Set**

... You receive a notification once the value set for the data volume is reached.

---

### Enabling/disabling your mobile data connection

When you disable data transmission over the mobile network, actions with high data usage (such as the updating of apps) are only performed when there is a connection to a WLAN.

- ▶ From the Status bar, swipe down ... The quick settings are displayed ▶ Tap  /  ( = enabled)

or

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Data usage** ▶ Enable/disable data transmission with the switch next to **Mobile data**






Some of the functions only work with limited functionality when mobile data usage is disabled.

---

### Enabling/disabling Data save mode

Mobile data usage is reduced when Data save mode is enabled. Most apps and services can only retrieve background data over WLAN.

- ▶ From the Status bar, use two fingers to swipe down ... The quick settings are displayed ▶ Tap  /  ( = enabled)

or

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Data usage** ▶ **Data saver** ▶ Enable/disable the function with the switch



Restricting background data can impact the performance of the app. For example, you receive no more notifications until the app is opened the next time.

---

### Restricting background data in chargeable WLANs

Data transmission in a WLAN is normally free of charge. If you are using a chargeable WLAN, e. g. mobile hotspot, you can prevent the accidental transmission of background data.

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Data usage** ▶ **Network restrictions** ... Stored network connections are displayed ▶ Select network ▶ Select the **Metered** option

## Other ways to reduce data usage



### Disabling automatic synchronisation

When automatic synchronisation is enabled, the data of apps is updated automatically (such as contacts and appointments).

Disabling automatic synchronisation: → p. 59

### Disabling data roaming

If the network of your mobile network operator is not available, data roaming enables the device to use the networks of other operators.

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Mobile networks** ▶ Enable/disable the option with the switch next to **Roaming**




Data roaming can entail additional costs, but is in some places the only way to establish an Internet connection.

## Bluetooth

Use the smartphone to establish a connection to a Bluetooth device.


If you are using a Bluetooth device for the first time, it must first be coupled with the smartphone by the Pairing process to enable a secure connection between the two devices. Then the connection is established automatically.

### Enabling/disabling Bluetooth

- ▶ From the Status bar, swipe down using two fingers ... The quick settings are displayed ▶ Tap the  Bluetooth icon

or

- ▶  ▶  **Settings** ▶ **Connected devices** ▶ Disable/enable Bluetooth with the **On/Off** switch

When Bluetooth is enabled, the  icon is displayed in the Status bar.




The device can be seen by all nearby devices with Bluetooth function.

To prolong the battery life, disable the Bluetooth function when you are not using it. Bluetooth is disabled in Flight mode.

## Pairing

Before you can connect a phone or tablet to a Bluetooth device, you must perform a pairing between these devices. After a pairing is performed, the devices keep this status until the pairing is ended.

- ▶  ▶  **Settings** ▶ **Connected devices** ▶ **Bluetooth** ▶ **Pair new device** ... Bluetooth devices available in the vicinity are displayed ▶ Tap the name of the required Bluetooth device ▶ Follow the subsequent instructions on the screen to complete the pairing ... If performed successfully, the device is included in the **Paired devices** list



If requested to enter a password, try the popular 0000 and 1234 passwords, or read the documentation for the Bluetooth device.

---

### Changing the names of connected Bluetooth devices or ending pairing

- ▶ ▶ Settings ▶ Connected devices ▶ Bluetooth ▶ In the Paired devices list, tap next to the Bluetooth device

Changing name: ▶ Enter the name of the device ▶ OK

Ending a pairing: ▶ Forget

---

### Changing the Bluetooth name of the smartphone

The smartphone can be seen by other Bluetooth devices under name Gigaset GS185. You can change this name.

- ▶ ▶ Settings ▶ Connected devices ▶ Bluetooth ▶ Device name ▶ Enter the new device name ▶ Rename

---

### Displaying data transmission information

- ▶ ▶ Settings ▶ Connected devices ▶ Bluetooth ▶ Received files ... Data received via Bluetooth is displayed

---

## Flight mode

WLAN, mobile networks and Bluetooth are disabled in Flight mode.

- ▶ From the Status bar, swipe down using two fingers ... The quick settings are displayed ▶ Tap the Flight mode icon

or

- ▶ ▶ Settings ▶ Network & Internet ▶ Airplane mode ▶ Enable/disable Flight Mode with the switch

or

- ▶ Press and hold the On/Off button ▶ Tap Airplane mode ▶ OK

When Flight mode is enabled, the icon is displayed in the Status bar.

## Virtual Private Networks (VPN)

A Virtual Private Network (VPN) enables you to connect the smartphone to your private or a company network. When you are out and about and have access to a WLAN, use the VPN connection to surf free of eavesdroppers, to make free calls over your landline number, and to access your mailbox or data in the company network.



A VPN server is set up in the private or company network.

A VPN client is preinstalled on the smartphone. You need the configuration details of the VPN to set up a VPN connection.



You might require another VPN client for the VPN with which you want to connect the smartphone. Various VPN apps are available from the Google Play Store. Once you have installed a VPN app, configuration is done via the app.

### Adding a VPN

- ▶ ▶ Settings ▶ Network & Internet ▶ VPN ▶ Tap ▶ Enter the configuration details ▶ Save

### Establishing a connection to a VPN

- ▶ ▶ Settings ▶ Network & Internet ▶ VPN ... The VPNs set up are listed ▶ Select a VPN ▶ Enter Username and Password ▶ Connect

Once the device is connected to a VPN, the icon is shown in the Status bar.

### Ending a VPN connection

- ▶ From the Status bar, swipe down using two fingers ... The quick settings are opened ▶ Next to Network may be monitored, tap the icon ▶ Next to the VPN to be disconnected, tap ▶ Disconnect

### Deleting a VPN

- ▶ ▶ Settings ▶ Network & Internet ▶ VPN ... The VPNs set up are listed ▶ Next to the VPN to be deleted, tap ▶ Forget

### Editing VPN settings

- ▶ ▶ Settings ▶ Network & Internet ▶ VPN ▶ Next to the VPN to be changed, tap ▶ Edit the VPN settings ▶ Save




If you are using a VPN app, it is opened and you can make the required changes.

### Enabling/disabling “always-on” VPN


With some VPNs, the device remains always connected when the VPN connection is not active. This is a sensible option when moving between insecure public WLANs.

Enabling “always-on” VPN:

- ▶ When registering with a VPN, select option **Save account information**
- ▶ Tap  ▶ **Always-on VPN** ▶ Select the VPN ▶ **OK**

You receive a notification that “always-on” VPN is enabled, and when the connection to an “always-on” VPN is down.

Disabling “always-on” VPN:

- ▶ Tap  ▶ **Always-on VPN** ▶ **None** ▶ **OK**



Once you have set up a VPN from an app, the option **Always-on VPN** is not displayed.

### Tethering with WLAN hotspot, Bluetooth or USB

With mobile WLAN hotspots, Bluetooth tethering and USB tethering, you can enable the data connection of the smartphone to other devices. For example, use a smartphone connection to surf the Internet with your notebook.



Using hotspot or tethering connections might entail additional charges. Contact your mobile operator as required.

Hotspots and tethering require high levels of battery power.


- ▶ Connect the smartphone to a power source when using hotspot and tethering.
- ▶ Disable hotspot and tethering when you do not need them.

### Enabling and disabling WLAN hotspot

Set up your own device as a WLAN hotspot.

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Hotspot & tethering** ▶ **Wi-Fi hotspot** ▶ Enable/disable the function with the switch

When the hotspot is enabled, the  icon is displayed in the Status bar.

The  icon is displayed in the Notifications bar. The number of connected and blocked users is displayed in the message.

### Changing WLAN hotspot settings



Change the network name, security, password and frequency band for access points.

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Hotspot & tethering** ▶ **Wi-Fi hotspot** ▶ **Set up Wi-Fi hotspot** ▶ Change the required option ▶ **Save**



## Connecting a device to the WLAN hotspot

Showing the network name and password on the smartphone:

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Hotspot & tethering** ▶ **Wi-Fi hotspot** ▶ **Set up Wi-Fi hotspot** ▶ Tap **Show password** ... The network name and password are displayed

Connecting to the hotspot on the other device:

- ▶ Open the list of WLANs within range ▶ Select network with the network name of the hotspot ▶ Enter the password for the hotspot ▶ Connect.

## Setting up and using Bluetooth tethering



Share the Internet connection with other devices via Bluetooth.



The mobile data connection is active → p. 68

- ▶ Carry out pairing between the smartphone and the device with which you want to share the Internet connection (→ p. 69)
- ▶ Set up the other device so that it establishes a network connection over Bluetooth. For more information, read the instructions for the device.

Enabling and disabling the Internet connection of the phone via Bluetooth tethering:


- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Hotspot & tethering** ▶ Enable/disable the **Bluetooth tethering** function with the switch ... You can now establish an Internet connection with the other device

## Setting up and using USB tethering



Share the Internet connection with another device over a USB cable.



The mobile data connection is active → p. 68

- ▶ Use a USB cable to connect the smartphone to another device ... The  USB icon is displayed in the Notifications bar ▶ Open message over USB connection and ensure that **USB for file transfer** or **USB for photo transfer** is set (→ p. 31)

Enabling/disabling USB tethering:

- ▶  ▶  **Settings** ▶ **Network & Internet** ▶ **Hotspot & tethering** ▶ Enable/disable the **USB tethering** function with the switch ... You can now establish an Internet connection with the other device

When USB tethering is enabled, the  icon is displayed in the Notifications bar.



USB tethering is disabled permanently if you unplug the USB cable.

USB tethering is not available on Mac computers.

## System

---

### Date and time

- ▶  ▶  Settings ▶ System ▶ Date & time ...

#### Automatic setting

The date and time are set automatically using a time server:

- ▶ Activate **Automatic date & time**

or: ▶ Disable it and set the date and time manually

#### Manual setting

- ▶ **Set date** ▶ Select a date in the calendar ▶ **OK**
- ▶ **Set time** ▶ Drag the hour display to the correct position ▶ **OK**  
Use the outer ring for 12-hour display  
Use the inner and outer rings for 24-hour display
- ▶ Tap the minutes display of the time displayed ▶ Drag the pointer to the correct position ▶ **OK**

#### Setting the time zone

The time zone is set automatically by default. Selecting the time zone yourself:

- ▶ Disable the switch next to **Automatic time zone** ▶ Tap **Select time zone** ▶ Select the time zone from the list



#### Setting the date and time format

Displaying the time in 24-hour format (e.g. 18:30) / 12-hour format (6:30 pm):

- ▶ Enable/disable the switch next to **Use 24-hour format**

## Software updates

### Checking the Android version

- ▶  ▶  Settings ▶ System ▶ Phone info ... The current version is displayed under Android version

### Downloading Android updates

You will be informed when a new Android system update is available for your device.



Updates use up power and entail high data volumes.

So before an installation, check the battery charge level (→ p. 49) and data usage (→ p. 67). Connect the device to the power if required and establish a WLAN connection.

### Installing an update after receiving a notification

- Display not locked: ▶ From the Notifications bar, swipe down ▶ Tap the update notification
- Display locked: ▶ Double tap the update notification on the lock screen
- Start the installation: ▶ Tap **Download**




### Installing an update without receiving a notification

- ▶  ▶  Settings ▶ System ▶ Phone info ▶ Update ▶ Check for updates ... The system is checked

If there is a more up-to-date version: ▶ Tap **Download**

### System update settings

You can configure the following settings for downloading updates:

- ▶  ▶  Settings ▶ System ▶ Phone info ▶ Update ▶ Tap 
- Select the schedule for automatic search for updates
  - Select the option if you only want updates to be downloaded using WiFi
  - Select the option if you want updates to be downloaded automatically

---

## Backing up and restoring the system

---

### Backing up data and settings

Use the Android Backup Service to backup data linked to one or more Google accounts. If you have to swap your device or delete data, you can restore the data from every Google account backed up beforehand.

The following data is backed up:

- Google calendar settings
- WLAN networks and passwords
- Wallpaper of start screens
- Gmail settings
- Apps installed with Google Play (apps backed up in the Play Store app)
- Screen settings (i.e. brightness and sleep mode)
- Language and input settings
- Date and time
- Settings and data of third party apps (different depending on app)



The Android Backup Service is not used by all apps. Not all data might be backed up or restored for certain apps.

- ▶ ▶ **Settings** ▶ **System** ▶ **Backup** ▶ Enable/disable the **Save on Google Drive** function using the switch

Setting up another backup account:

- ▶ **Account** ▶ **Add account** ▶ Enter the PIN, pattern or password ▶ Enter the account details



You can set up more than one backup account.

---

### Resetting network settings

Reset WLAN, mobile and Bluetooth data.

- ▶ ▶ **Settings** ▶ **System** ▶ **Reset options** ▶ **Reset Wi-Fi, mobile & Bluetooth** ▶ **Reset settings**

---

### Resetting app settings

You can reset settings for apps such as disabling, notifications, standard settings. All app data are retained.



- ▶ ▶ **Settings** ▶ **System** ▶ **Reset options** ▶ **Reset app preferences** ▶ **Reset apps**

## Resetting the device to the default settings

You can remove all personal data when you pass on the device to another person.



When resetting the device to the default settings, the internal storage is cleared, downloaded apps, music, photos, etc. are removed and registration to the Google account is cancelled.

▶  ▶  Settings ▶ System ▶ Reset options ▶ Erase all data (factory reset) ▶ Reset phone

# Appendix

## Customer service

Spare parts and accessories for your product are available from [www.gigaset.com](http://www.gigaset.com).

Help is available from [www.gigaset.com/service](http://www.gigaset.com/service).

In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Australia .....	61 1300 780 878	Jordan .....	00962 6 5625460/1/2
Austria.....	0043 1 311 3046	Kuwait .....	+965 -22458737/22458738
Bahrain .....	31 73 11 173	Lebanon .....	+9611240259/ .....
Belgium .....	07815 6679	.....	+9611236110
Bosnia Herzegovina.....	033 276 649	Luxembourg.....	(+352) 8002 3811
Brazil		Malaysia.....	+603-8076 9696
Grandes Capitais e Regiões Metropolitanas:		Malta .....	+39 02360 46111 (0,10 €)
.....	4003 3020	Mexico	
.....	(Preço de uma ligação local)	.....	01800 999 4442738 (01800 999 GIGASET)
Demais localidades:		Netherlands .....	0900-3333102
.....	0800 888 3020	New Zealand .....	0800 780 878
.....	(Gratuito)	Norway .....	+47 2231 0845
Bulgaria.....	+359 2 9710666	Oman .....	+968 70928 Ext. 49/21/75
Canada .....	1-866 247-8758	Poland .....	801 140 160
China .....	0 21 400 670 6007 (RMB 0.11)	Portugal.....	(+351) 308 804 760
Croatia.....	01 / 2456 555	.....	(custo de uma chamada local)
Czech Republic.....	233 032 727	Romania .....	+40 021 204 9130
Denmark.....	+45 43682003	Russia .....	8-800 333 4956
Finland .....	+358 (0)9725 19734	Serbia.....	0800 222 111
France .....	(0)1 57 32 45 22	Singapore .....	6735 9100
Germany.....	02871 / 912 912	Slovak Republic.....	044 5567 988
Greece.....	+30 2111 98 1778	Slovenija .....	+386 (1) 5466 511
Hong Kong.....	2763 0203	South Africa .....	0800 98 08 42
.....	2389 7285	Spain .....	(+34) 910 920 931
Hungary .....	06(1)267-2109	Sweden .....	+46 (0)8502 52347
India .....	Please refer to your	Switzerland.....	0848 212 000
.....	local warranty card	Taiwan .....	02 266 24343
Indonesia .....	(62-21) 5673813	Turkey ...	<b>Son kullanıcı için +90 212 888 6346</b>
.....	(62-21) 888856000	<b>Bayi için +90 212 888 6347</b>	
Ireland.....	0818 200 033	Ukraine .....	+380-44-451-71-72
Italy .....	02.600.630.45	United Arab Emirates.....	+97144458255
(Il numero è di tipo "urbano nazionale" e può essere chiamato da qualunque operatore di rete fissa o mobile. Il costo della chiamata è inerente al proprio piano tariffario definito con l'operatore telefonico, ad esempio in caso di un contratto con tariffa FLAT, non ci sono costi aggiuntivi per la chiamata a questo numero, in quanto si tratta di un numero urbano nazionale.)		.....	+97144458254
		United Kingdom .....	020 36953111
		USA.....	1-866 247-8758
		.....	tollfree

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - The device is opened (this is classed as third party intervention)
  - Repairs or other work done by persons not authorised by Gigaset Communications.
  - Components on the printed circuit board are manipulated
  - The software is manipulated
  - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: micro-wave, sauna etc.)
- Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by: Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

## Manufacturer's advice

### Exclusion of liability

The display is made up of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Certain content and services which can be accessed using this device are the property of third parties and are protected by copyrights, patents, trademarks and/or other laws for the purpose of safeguarding intellectual property. Such content and services are provided solely for non-commercial, private usage. You may not use content or services which has/have not been authorised by the owner of particular content or a service provider. Without limiting the generality of the foregoing, except as expressly specified by the owner of the content or the service provider, the modification, reproduction, dissemination, uploading, publication, transmission, translation, sale, creation of derived works, distribution of content or services shown on this device are not permitted in any form and on any medium.

---

## Manufacturer's advice

---

### Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset GS185 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.



## Waste and environmental protection

### Correct disposal of this product

(Directive for electric and electronic equipment (WEEE))

(Applicable in countries with waste separation systems)



This label on the product, accessory or in documentation indicates that the product and its electronic accessories (such as charger, headphones and USB cable) may not be disposed of in household waste.

To avert potential environmental harm and health risks from unmanaged waste disposal, recycle responsibly with the aim of encouraging sustainable reuse of raw materials.

Private users should turn to the dealers from where they bought their products, or contact the authorities responsible, who are able to provide information on where parts can be taken for disposal in an environmentally friendly manner.

Commercial users should please contact their suppliers and check the general terms of their purchase agreement.

This product and the electronic accessory parts may not be disposed of with other commercial waste. This "WEEE" is compatible with the RoHS Directive.

## Technical data

### Frequency and bands

Frequency	Bands	maximum power
2G	1900 MHz	29.5 dBm
	1800 MHz	29.5 dBm
	850 MHz	32.5 dBm
	900 MHz	32.5 dBm
3G	B1	22.8 dBm
	B8	22.8 dBm
4G	B1	21.8 dBm
	B3	21.8 dBm
	B7	21.5 dBm
	B8	22 dBm
	B20	22 dBm
WLAN	2412-2472 MHz 11B:16 dBm 11G:14 dBm 11N:12 dBm	
BT	2402-2480 MHz. 6.0 dBm	

## About radiation

### Information on SAR certification (specific absorption rate)

THIS DEVICE SATISFIES THE INTERNATIONAL DIRECTIVES FOR EXPOSURE BY RADIO WAVES.

Your mobile device has been developed so as not to exceed internationally recommended exposure thresholds for radio waves.

These directives have been specified by an independent scientific organisation (ICNIRP) and include a high margin of safety which should guarantee the safety of all regardless of age and state of health. The directives on exposure to radio waves use a unit called the specific absorption rate (SAR). The SAR threshold for mobile devices is 2.0 W/kg. The highest SAR values in the ICNIRP Directives for this device model:

Highest SAR value for this phone model and measurement conditions

SAR for head 0.190 W/kg (10g)

SAR for wearing on body 1.109 W/kg (10g)













The SAR values for wearing on the body are determined at a distance of 5 mm. To comply with the HF exposure directives for wearing on the body, the device should be positioned at least this distance away from the body.

## Icons

### Status bar and quick settings

	Battery charge status / battery is charging
	WLAN connection enabled. The receive quality is shown on four levels.
	WLAN connection disabled.
	Bluetooth enabled / disabled
	Mobile connection enabled. The receive quality is shown on four levels.
	Mobile connection disabled / no SIM card inserted
	VPN connection active
	Data connection enabled / disabled
	Data save mode enabled / disabled
	Flight mode enabled / disabled
	Portrait view set / automatic rotation of screen possible
	Ringtone: Highest volume / Switched off / Vibration only
	Torch switched on/off
	Streaming: Start / stop data transfer
	"Do not disturb" function: <b>Disabled / Alarms only, Priority only / Total silence</b>
	WLAN hotspot activated

## Notifications

	App authorisation management
	Missed call
	New text message
	New email
	New SD card detected
	Screenshot created
	USB cable connected / USB tethering enabled
	WLAN hotspot activated
	Multiple tethering connections activated (USB and/or WLAN)
	Data downloaded / data uploaded
	Turbo download enabled
	Update for Google available / Google apps updated

... Other app-specific notifications

# Index

## Numerics

4G LTE ..... 63

## A

Accessibility features ..... 51

Account ..... 58

Add ..... 58

Remove ..... 58

Synchronise ..... 59

Account types ..... 58

Adding the print service ..... 32

Android Device Manager ..... 55

Android version

Checking ..... 75

Update ..... 75

## App

Data usage ..... 62

Default ..... 61

Detecting harmful ..... 27

Disable ..... 24

Email ..... 58

End ..... 23

Exit ..... 23

Force stop ..... 61

Install ..... 24

Install from other source ..... 26

Move on start screen ..... 19

On start screen ..... 18

Open last time ..... 15

Security ..... 26

Store in folder on screen ..... 19

Uninstall ..... 24

Unknown source ..... 26

Using two apps in parallel ..... 25

Verify ..... 26

App notifications ..... 22, 62

App permissions ..... 54, 62

Granting/Denying ..... 55

On installation ..... 54

App settings ..... 61

Reset ..... 62

## Apps

Contacts ..... 38

Downloads ..... 27

Messages ..... 42

Phone ..... 34

Settings ..... 46

Arranging start screens ..... 19

Authorisation ..... 80

Authorisations ..... 62

Automatic muting

Setting rules ..... 48

## B

Battery

Charging ..... 10

Battery charge level ..... 49

Blocking background data in chargeable

WLANs ..... 68

Blocking incoming numbers ..... 37

Bluetooth

Change name of your own device ..... 70

Change names of connected devices ..... 70

Enable/disable ..... 69

End pairing ..... 70

Pairing ..... 69

Tethering ..... 73

Brightness ..... 46

Adapt to ambient conditions ..... 46

## C

Call

Accept ..... 35

Delete from call list ..... 38

End ..... 34

Initiate ..... 34

Initiate from call list ..... 38

Initiate from contact ..... 39

Reject ..... 35

Reject with SMS ..... 35

Call account ..... 37

Call details ..... 38

Call list ..... 38

Call log

Call back caller ..... 38

Delete calls ..... 38

Call swapping ..... 35

Calls, sort sequence in the Phone app ..... 36

Camera

Front ..... 3

Rear ..... 3

Certificate ..... 56

Delete ..... 57

Enable/disable ..... 57

Install from SD card ..... 57

Show list ..... 57

WLAN ..... 66

Charge icon ..... 10

Conference call ..... 36

Configuration ..... 10

Configuration wizard ..... 10

Connecting the USB cable ..... 10, 31

Connection

Bluetooth ..... 69

Data usage ..... 67

Headset ..... 3

Mobile ..... 63

## Index

- VPN ..... 71
  - WLAN ..... 65
  - Connector
    - Micro-USB ..... 3
  - Consultation ..... 35
  - Contact
    - Add to Favourites ..... 41
    - Add to group ..... 39
    - Add to start screen ..... 41
    - Call ..... 39
    - Create ..... 40
    - Delete ..... 41
    - Delete more than one ..... 41
    - Divert call to mailbox ..... 41
    - Set ringtone ..... 41
  - Contact group ..... 39
  - Contacts ..... 38
    - Group ..... 39
    - Import/Export ..... 40
    - Link ..... 41
    - Name format ..... 39
    - Sorting ..... 39
  - Contents of the package ..... 9
  - Conversation ..... 43
    - Block ..... 45
    - Delete ..... 45
  - Cover
    - Open ..... 9
  - Create screenshot ..... 31
  - Creating folders for apps ..... 19
  - Customer care ..... 78
  - Customer service ..... 78
- 
- D**
- Data
    - Backup ..... 76
  - Data connection
    - Check usage ..... 67
    - Enable ..... 72
    - Enable/disable ..... 68
  - Data loaded via Bluetooth ..... 70
  - Data roaming ..... 63
  - Data save mode ..... 68
  - Data usage ..... 62, 67
    - Limit ..... 67
    - Reduce ..... 69
    - Warning ..... 68
  - Date and time
    - Set automatically ..... 74
    - Set manually ..... 74
  - Date format ..... 74
  - Default app ..... 61
  - Default settings ..... 77
  - Deleting data remotely ..... 55
  - Device
    - Configuration ..... 10
    - Locate ..... 55
    - Lock remotely ..... 55
    - Open ..... 9
    - Ring remotely ..... 55
    - Switch on ..... 10
  - Device administrator ..... 56
  - Device Manager ..... 55
  - Device storage ..... 50
  - DHCP, in WLAN ..... 66
  - Dialpad ..... 34
  - Dialpad tones ..... 49
    - Enable in Phone app ..... 36
  - Display
    - Brightness ..... 46
    - Idle mode ..... 13
    - Larger font ..... 51
    - Rotate ..... 47
  - Display lock ..... 52
    - Automatic ..... 53
    - Password ..... 52
    - Pattern ..... 52
    - PIN ..... 52
    - Replacement for fingerprint ..... 27
  - Display size ..... 51
  - Disposal ..... 81
  - Do not disturb ..... 29
    - Disable ..... 29
    - Enable ..... 29, 30
    - Only permit important interruptions ..... 29
    - Silent ..... 29
    - Specify important interruptions ..... 30
    - Wake-up function only ..... 29
  - Double tapping ..... 14
  - Download ..... 27
  - Download file from the Internet ..... 27
  - Draft, SMS ..... 42
  - Drag ..... 14
- 
- E**
- Email account
    - Set up from Settings ..... 58
    - Set up with wizard ..... 12
  - Emergency message ..... 53
  - Emoticon in SMS ..... 42
  - Enabling/disabling notifications for messages ..... 45
  - Environment ..... 81
  - Exchange account ..... 58
  - Exclusion of liability ..... 80
  - Export of contacts ..... 40
- 
- F**
- Favourite, in contacts ..... 41
  - Favourites bar ..... 4
    - Tailoring ..... 18
  - Fingerprint
    - Alternative method ..... 27
    - Name ..... 28
    - Processing ..... 28
    - Sensor ..... 3
    - Set up from Settings ..... 27
    - Set up with wizard ..... 11
    - Using ..... 28
  - Fingerprint sensor ..... 27
  - Flash ..... 3

- 
- Flight mode ..... 70
  - Font size ..... 47, 51
  - For multimedia messages, see MMS
  - For text messages, see SMS
  - For the screen lock, refer to the Display lock
  - Function
    - Enabling/disabling with quick settings ..... 15
- 
- G**
- Google account ..... 58
  - Google apps ..... 25
  - Google keypad ..... 16
  - Google search ..... 20
  - Google services ..... 58
    - Enable/disable with wizard ..... 12
  - Guarantee Certificate ..... 79
- 
- H**
- Handsfree mode ..... 35
  - Headset connection ..... 3
  - Help ..... 78
  - Help on the Messages app ..... 42
  - Hotspot ..... 72
- 
- I**
- Icons
    - Notifications ..... 84
    - Quick settings ..... 83
    - Status bar ..... 83
    - User guide ..... 5
  - Idle mode
    - Enable ..... 13
    - End ..... 13
    - Set period of inactivity ..... 13
  - Import of contacts ..... 40
  - Important interruptions ..... 30
  - Importing vCards ..... 40
  - Install CA certificate ..... 57
  - Install client certificate ..... 57
  - Installation, app ..... 24
- 
- K**
- Keypad ..... 16
  - Keypad settings ..... 17
  - Keypad tones ..... 48
- 
- L**
- Language
    - Setting from Settings menu ..... 46
    - Setting with wizard ..... 10
  - Location detection ..... 59
  - Location history ..... 60
  - Location mode ..... 60
  - Lock screen message ..... 53
- 
- M**
- Main memory ..... 50
  - Making calls ..... 34
    - Using headset ..... 35
    - Using speaker ..... 35
  - Memory
    - Freeing up ..... 51
  - Message LED ..... 4, 20
  - Message LED, status displays ..... 4
  - Messages ..... 42
    - Manage ..... 44
    - Read ..... 44
  - Microphone ..... 3
    - Muting ..... 35
  - Micro-USB socket ..... 3
  - MMS
    - Create ..... 43
    - Search all ..... 44
  - Mobile network ..... 63
  - Music
    - Managing ..... 32
    - Setting the volume ..... 47
  - Muting
    - From quick settings ..... 29
- 
- N**
- Name format
    - Contact in Contacts app ..... 39
    - Contact in Phone app ..... 36
  - Navigation buttons ..... 4, 15
  - Network connections ..... 63
  - Network services ..... 37
  - Notification ..... 20
    - Clear ..... 21
    - Reset ..... 21
    - Sound ..... 21
    - Vibration mode ..... 21
    - View ..... 21
  - Notification dot ..... 22
  - Notifications
    - Settings ..... 21
  - Notifications bar ..... 4
    - Open ..... 20
  - Number
    - Enter from keypad ..... 34
  - Numbers
    - Block ..... 37
- 
- O**
- On/Off button ..... 3
  - Open the App menu ..... 5
- 
- P**
- Pairing ..... 69
    - Ending ..... 70

## Index

- Password
    - Display lock ..... 52
    - Set up with wizard..... 11
  - Pattern
    - Display lock ..... 52
    - Set up with wizard..... 11
    - Visible / not visible ..... 52
  - Permissions for apps ..... 54
  - Phone number
    - Add to contacts from call log ..... 38
  - PIN
    - Display lock ..... 52
    - Set up with wizard..... 11
  - PKCS#12 keystore files ..... 56
  - Power consumption..... 49
  - Power Save mode ..... 49
  - Power save mode
    - Enable automatically ..... 49
  - Preferred SIM card ..... 64
  - Premium SMS ..... 42
  - Printing ..... 32
  - Protection against unauthorised use..... 52
  - Protection from unauthorised use
    - Set up with wizard..... 11
  - Proxy, WLAN ..... 66
- 
- Q**
  - Quick response
    - Edit ..... 37
    - Send ..... 35
  - Quick settings..... 15
    - Icons ..... 83
- 
- R**
  - Radiation ..... 82
  - Resetting network settings..... 76
  - Responses to SMS/MMS ..... 44
  - Ringtone
    - Change ..... 36, 47
    - Set for contact ..... 41
    - Volume ..... 47
  - Ringtone volume
    - Setting from Settings menu ..... 47
  - Roaming..... 63
- 
- S**
  - SAR certification ..... 82
  - Scaling screen content ..... 14
  - Screen content
    - Create screenshot ..... 31
    - Rotate ..... 47
    - Sending to another device ..... 33
  - Screen pinning ..... 53
  - SD card
    - Ejecting ..... 50
    - Storage capacity ..... 50
    - Using again ..... 50
    - Using as memory extension ..... 50
  - Search ..... 20
  - Send email to contact ..... 39
  - Set large font ..... 51
  - Setting rules for automatic muting..... 48
  - Silent
    - Enable from "Do not disturb"..... 29, 30
  - SIM card
    - Insert..... 9
    - Preferred ..... 64
    - Unlock..... 13
    - Using two ..... 64
  - SIM card lock ..... 54
  - Smart Lock..... 53
  - Smiley in SMS..... 42
  - SMS
    - Billable ..... 42
    - Draft ..... 42
    - Save as draft..... 42
    - Search all..... 44
    - Send to a contact ..... 39
    - Write ..... 42
  - SMS/MMS
    - Respond to ..... 44
    - Send ..... 43
  - Software update ..... 75
  - Sort sequence, Phone app ..... 36
  - Sorting sequence, contacts ..... 39
  - Speaker ..... 3
  - Split screen mode ..... 25
  - Spread apart / pinch together your fingers ..... 14
  - Start screen ..... 15
    - Add ..... 19
    - Add, remove, move apps..... 18
    - Add, remove, move widgets ..... 19
    - Change wallpaper ..... 18
    - Configuration..... 18
    - Contact for direct dialling ..... 41
    - Overview ..... 4
    - Remove ..... 20
    - Return to ..... 15
    - Settings in the wizard ..... 12
    - Switching..... 15
  - Status bar..... 4
  - Status displays ..... 4
  - Storage capacity
    - Assignment ..... 50
    - Available ..... 50
  - Storage, permanent ..... 50
  - Storage, temporary ..... 50
  - Streaming ..... 33
  - Subtitles..... 51
  - Swipe or drag..... 14
  - Switching off ..... 13
  - Switching on ..... 10, 13
  - Switching on and off..... 13
  - Synchronisation
    - Automatic ..... 59
  - Synchronising..... 59
  - System
    - Backup ..... 76
    - Update ..... 75



<b>T</b>	
Tap	14
Tethering	
Bluetooth	73
USB	73
Text	
Font size	47
Writing and editing	16
Text-to-speech output	51
Time format	74
Time server	74
Time zone	74
Torch	3
Touch and hold	14
Transferring files to/from a computer	31
Trust agents	53
TTY mode	37
Two SIM cards	64
<b>U</b>	
Update	75
USB tethering	73
User	
Set up	30
Switch	30
Using the touchscreen	14
<b>V</b>	
Verification of apps	26
Vibration	
Enable/Disable in Phone app	36
Setting from Settings menu	47
Setting from Volume button	47
Virtual Private Network, see VPN	
Volume	
Setting from Settings menu	47
Setting from Volume button	47
Volume button	3
VPN	71
Add	71
End connection	71
Establish connection	71
<b>W</b>	
Wake-up alarm, volume	47
Wallpaper	
Change	18
Set with wizard	12
Widget	19
Change size	19
Move on start screen	19
On start screen	19
Position on start screen	12
Wi-Fi Direct	66
WLAN	
Add	65
Certificate	66
Configuration	66
DHCP	66
Enable/disable	66
Establish connection	10, 65
Establish connection with wizard	10
Hotspot	72
Proxy	66
Remove	65
WPS PIN	66
WPS Push button	66
<b>X</b>	
X.509 certificate	56
<b>Z</b>	
Zooming	14

Issued by

Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2018

Subject to availability.

All rights reserved. Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)

Google, Android, Google Play and other brands are trademarks of Google Inc.