

890GXM-G65 series

MS-7642 (v1.x) Mainboard

msi

Copyright Notice

The material in this document is the intellectual property of **MICRO-STAR INTERNATIONAL**. We take every care in the preparation of this document, but no guarantee is given as to the correctness of its contents. Our products are under continual improvement and we reserve the right to make changes without notice.

Trademarks

All trademarks are the properties of their respective owners.

- MSI® is registered trademark of Micro-Star Int'l Co.,Ltd.
- NVIDIA® is registered trademark of NVIDIA Corporation.
- ATI® is registered trademark of ATI Technologies, Inc.
- AMD® is registered trademarks of AMD Corporation.
- Intel® is registered trademarks of Intel Corporation.
- Windows® is registered trademarks of Microsoft Corporation.
- AMI® is registered trademark of American Megatrends Inc.
- Award® is a registered trademark of Phoenix Technologies Ltd.
- Sound Blaster® is registered trademark of Creative Technology Ltd.
- Realtek® is registered trademark of Realtek Semiconductor Corporation.
- JMicron® is registered trademark of JMicron Technology Corporation.
- Netware® is a registered trademark of Novell, Inc.

Revision History

Revision	Revision History	Date
V1.0	First release	February 2010

Technical Support

If a problem arises with your system and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please try the following help resources for further guidance.

- Visit the MSI website for FAQ, technical guide, BIOS updates, driver updates, and other information: <http://www.msi.com/index.php?func=service>
- Contact our technical staff at: <http://ocss.msi.com>

Safety Instructions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- The openings on the enclosure are for air convection hence protects the equipment from overheating. DO NOT COVER THE OPENINGS.
- Make sure the voltage of the power source and adjust properly 110/220V before connecting the equipment to the power inlet.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- Always Unplug the Power Cord before inserting any add-on card or module.
- All cautions and warnings on the equipment should be noted.
- Never pour any liquid into the opening that could damage or cause electrical shock.
- If any of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or you can not get it work according to User's Manual.
 - The equipment has dropped and damaged.
 - The equipment has obvious sign of breakage.

DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT UNCONDITIONED, STORAGE TEMPERATURE ABOVE 60°C (140°F), IT MAY DAMAGE THE EQUIPMENT.

CAUTION: Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

警告使用者:

這是甲類資訊產品，在居住的環境中使用時，可能會造成無線電干擾，在這種情況下，使用者會被要求採取某些適當的對策。



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling special disposal.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and A.C. power cord, if any, must be used in order to comply with the emission limits.

VOIR LA NOTICE D'INSTALLATION AVANT DE RACCORDER AU RESEAU.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

WEEE (Waste Electrical and Electronic Equipment) Statement

ENGLISH

To protect the global environment and as an environmentalist, MSI must remind you that...

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life. MSI will comply with the product take back requirements at the end of life of MSI-branded products that are sold into the EU. You can return these products to local collection points.



DEUTSCH

Hinweis von MSI zur Erhaltung und Schutz unserer Umwelt

Gemäß der Richtlinie 2002/96/EG über Elektro- und Elektronik-Altgeräte dürfen Elektro- und Elektronik-Altgeräte nicht mehr als kommunale Abfälle entsorgt werden. MSI hat europaweit verschiedene Sammel- und Recyclingunternehmen beauftragt, die in die Europäische Union in Verkehr gebrachten Produkte, am Ende seines Lebenszyklus zurückzunehmen. Bitte entsorgen Sie dieses Produkt zum gegebenen Zeitpunkt ausschliesslich an einer lokalen Altgerätesammelstelle in Ihrer Nähe.

FRANÇAIS

En tant qu'écologiste et afin de protéger l'environnement, MSI tient à rappeler ceci...

Au sujet de la directive européenne (EU) relative aux déchets des équipement électriques et électroniques, directive 2002/96/EC, prenant effet le 13 août 2005, que les produits électriques et électroniques ne peuvent être déposés dans les décharges ou tout simplement mis à la poubelle. Les fabricants de ces équipements seront obligés de récupérer certains produits en fin de vie. MSI prendra en compte cette exigence relative au retour des produits en fin de vie au sein de la communauté européenne. Par conséquent vous pouvez retourner localement ces matériels dans les points de collecte.

РУССКИЙ

Компания MSI предпринимает активные действия по защите окружающей среды, поэтому напоминаем вам, что...

В соответствии с директивой Европейского Союза (ЕС) по предотвращению загрязнения окружающей среды использованным электрическим и электронным оборудованием (директива WEEE 2002/96/EC), вступающей в силу 13 августа 2005 года, изделия, относящиеся к электрическому и электронному оборудованию, не могут рассматриваться как бытовой мусор, поэтому производители вышеперечисленного электронного оборудования обязаны принимать его для переработки по окончании срока службы. MSI обязуется соблюдать требования по приему продукции, проданной под маркой MSI на территории ЕС, в переработку по окончании срока службы. Вы можете вернуть эти изделия в специализированные пункты приема.

ESPAÑOL

MSI como empresa comprometida con la protección del medio ambiente, recomienda: Bajo la directiva 2002/96/EC de la Unión Europea en materia de desechos y/o equipos electrónicos, con fecha de rigor desde el 13 de agosto de 2005, los productos clasificados como "eléctricos y equipos electrónicos" no pueden ser depositados en los contenedores habituales de su municipio, los fabricantes de equipos electrónicos, están obligados a hacerse cargo de dichos productos al término de su período de vida. MSI estará comprometido con los términos de recogida de sus productos vendidos en la Unión Europea al final de su período de vida. Usted debe depositar estos productos en el punto limpio establecido por el ayuntamiento de su localidad o entregar a una empresa autorizada para la recogida de estos residuos.

NEDERLANDS

Om het milieu te beschermen, wil MSI u eraan herinneren dat....

De richtlijn van de Europese Unie (EU) met betrekking tot Vervuiling van Electrische en Electronische producten (2002/96/EC), die op 13 Augustus 2005 in zal gaan kunnen niet meer beschouwd worden als vervuiling. Fabrikanten van dit soort producten worden verplicht om producten retour te nemen aan het eind van hun levenscyclus. MSI zal overeenkomstig de richtlijn handelen voor de producten die de merknaam MSI dragen en verkocht zijn in de EU. Deze goederen kunnen gereturneerd worden op lokale inzamelingspunten.

SRPSKI

Da bi zaštitili prirodnu sredinu, i kao preduzeće koje vodi računa o okolini i prirodnoj sredini, MSI mora da vas podesti da...

Po Direktivi Evropske unije ("EU") o odbačenoj elektronskoj i električnoj opremi, Direktiva 2002/96/EC, koja stupa na snagu od 13. Avgusta 2005, proizvodi koji spadaju pod "elektronsku i električnu opremu" ne mogu više biti odbačeni kao običan otpad i proizvođači ove opreme biće prinuđeni da uzmu natrag ove proizvode na kraju njihovog uobičajenog veka trajanja. MSI će poštovati zahtev o preuzimanju ovakvih proizvoda kojima je istekao vek trajanja, koji imaju MSI oznaku i koji su prodati u EU. Ove proizvode možete vratiti na lokalnim mestima za prikupljanje.

POLSKI

Aby chronić nasze środowisko naturalne oraz jako firma dbająca o ekologię, MSI przypomina, że...

Zgodnie z Dyrektywą Unii Europejskiej ("UE") dotyczącą odpadów produktów elektrycznych i elektronicznych (Dyrektywa 2002/96/EC), która wchodzi w życie 13 sierpnia 2005, tzw. "produkty oraz wyposażenie elektryczne i elektroniczne" nie mogą być traktowane jako śmieci komunalne, tak więc producenci tych produktów będą zobowiązani do odbierania ich w momencie gdy produkt jest wycofywany z użycia. MSI wypełni wymagania UE, przyjmując produkty (sprzedawane na terenie Unii Europejskiej) wycofywane z użycia. Produkty MSI będzie można zwracać w wyznaczonych punktach zbiorczych.

TÜRKÇE

Çevreci özelliğiyle bilinen MSI dünyada çevreyi korumak için hatırlatır:

Avrupa Birliği (AB) Kararnamesi Elektrik ve Elektronik Malzeme Atığı, 2002/96/EC Kararnamesi altında 13 Ağustos 2005 tarihinden itibaren geçerli olmak üzere, elektrik ve elektronik malzemeler diğer atıklar gibi çöpe atılamayacak ve bu elektronik cihazların üreticileri, cihazların kullanım süreleri bittiğten sonra ürünlerini geri toplamakla yükümlü olacaktır. Avrupa Birliği'ne satılan MSI markalı ürünlerin kullanım süreleri bittiğinde MSI ürünlerin geri alınması isteği ile işbirliği içerisinde olacaktır. Ürünlerinizi yerel toplama noktalarına bırakabilirsiniz.

ČESKÝ

Záleží nám na ochraně životního prostředí - společnost MSI upozorňuje...

Podle směrnice Evropské unie („EU“) o likvidaci elektrických a elektronických výrobků 2002/96/EC platné od 13. srpna 2005 je zakázáno likvidovat „elektrické a elektronické výrobky“ v běžném komunálním odpadu a výrobci elektronických výrobků, na které se tato směrnice vztahuje, budou povinni odebírat takové výrobky zpět po skončení jejich životnosti. Společnost MSI splní požadavky na odebírání výrobků značky MSI, prodávaných v zemích EU, po skončení jejich životnosti. Tyto výrobky můžete odevzdat v místních sběrnách.

MAGYAR

Annak érdekében, hogy környezetünket megvédjük, illetve környezetvédelként fellépve az MSI emlékezeti Önt, hogy ...

Az Európai Unió („EU“) 2005. augusztus 13-án hatályba lépő, az elektromos és elektronikus berendezések hulladékairól szóló 2002/96/EK irányelv szerint az elektromos és elektronikus berendezések többé nem kezelhetőek lakossági hulladékként, és az ilyen elektronikus berendezések gyártói kötelessé válnak az ilyen termékek visszavezetére azok hasznos élettartama végén. Az MSI betartja a termékvisszavétellel kapcsolatos követelményeket az MSI márkanév alatt az EU-n belül értékesített termékek esetében, azok élettartamának végén. Az ilyen termékeket a legközelebbi gyűjtőhelyre viheti.

ITALIANO

Per proteggere l'ambiente, MSI, da sempre amica della natura, ti ricorda che....

In base alla Direttiva dell'Unione Europea (EU) sullo Smaltimento dei Materiali Elettrici ed Elettronici, Direttiva 2002/96/EC in vigore dal 13 Agosto 2005, prodotti appartenenti alla categoria dei Materiali Elettrici ed Elettronici non possono più essere eliminati come rifiuti municipali: i produttori di detti materiali saranno obbligati a ritirare ogni prodotto alla fine del suo ciclo di vita. MSI si adeguerà a tale Direttiva ritirando tutti i prodotti marchiati MSI che sono stati venduti all'interno dell'Unione Europea alla fine del loro ciclo di vita. È possibile portare i prodotti nel più vicino punto di raccolta

CONTENTS

Copyright Notice	ii
Trademarks	ii
Revision History.....	ii
Technical Support.....	ii
Safety Instructions.....	iii
FCC-B Radio Frequency Interference Statement.....	iv
WEEE (Waste Electrical and Electronic Equipment) Statement	v
Chapter 1 Getting Started.....	1-1
Mainboard Specifications	1-2
Mainboard Layout	1-4
Packing Checklist.....	1-5
Chapter 2 Hardware Setup.....	2-1
Quick Components Guide	2-2
CPU (Central Processing Unit)	2-3
Memory	2-6
Power Supply	2-8
Back Panel	2-9
Connectors.....	2-11
Jumpers	2-18
Switch.....	2-19
Slots	2-20
LED Status Indicators	2-23
Chapter 3 BIOS Setup.....	3-1
Entering Setup	3-2
The Main Menu	3-4
Standard CMOS Features.....	3-6
Advanced BIOS Features	3-8
Integrated Peripherals.....	3-11
Power Management Setup.....	3-13
H/W Monitor	3-15
Green Power	3-16
BIOS Setting Password.....	3-17
Cell Menu	3-19
M-Flash	3-25
Overclocking Profile	3-28
Load Fail-Safe/ Optimized Defaults	3-29

Appendix A Realtek Audio.....	A-1
Installing the Realtek HD Audio Driver.....	A-2
Software Configuration.....	A-4
Hardware Setup	A-19
Appendix B AMD RAID.....	B-1
RAID Configuration	B-2
Appendix C Control Center.....	C-1
Activating Control Center	C-2
System Information	C-3
Overclocking	C-5
Green Power	C-7

Chapter 1

Getting Started

Thank you for choosing the 890GXM-G65 Series (MS-7642 v1.X) Micro ATX mainboard. The 890GXM-G65 Series mainboards are based on **AMD® 890GX & SB850** chipsets for optimal system efficiency. Designed to fit the advanced **AMD® 64 bits Phenom™ II** processor, the 890GXM-G65 Series deliver a high performance and professional desktop platform solution.

MAINBOARD SPECIFICATIONS

Processor Support

- AMD® 64 bits Phenom™ II processor in the AM3 package.
(For the latest information about CPU, please visit
<http://www.msi.com/index.php?func=cpuform2>)

HyperTransport

- HyperTransport™ 3.0

Chipset

- North Bridge: AMD® 890GX chipset
- South Bridge: AMD® SB850 chipset

Integrated Graphic

- Integrated ATI Radeon™ HD4290 GPU

Memory Support

- 4 DDR3 DIMMs support DDR3 2133 *(OC)/ 1800 *(OC)/ 1600 *(OC)/ 1333/ 1066/ 800 SDRAM (total 16 GB Max)
- Supports Dual-Channel mode
*(For more information on compatible components, please visit
<http://www.msi.com/index.php?func=testreport>)

LAN

- Supports PCIE LAN 10/100/1000 Fast Ethernet by Realtek® RTL8111DL

Audio

- Chip integrated by Realtek® ALC889/ ALC892 (optional)
- Flexible 8-channel audio with jack sensing
- Compliant with Azalia 1.0 Spec

IDE

- 1 IDE port by JMicron® JMB368
- Supports Ultra DMA 66/100/133, PIO & Bus Master operation mode

SATA

- 5 SATA 6 Gb/s ports by AMD® SB850
- 1 E-SATA port by AMD® SB850

RAID

- SATA 1~5 support RAID 0/ 1/ 10/ 5 mode by AMD® SB850

Connectors

■ Back panel

- 1 Optical S/PDIF-Out port
- 1 PS/2 keyboard/ mouse combo port
- 1 VGA port
- 1 DVI-D port **
- 4 USB 2.0 ports
- 2 USB 3.0 blue ports
- 1 HDMI port **
- 1 E-SATA port
- 1 LAN port
- 6 flexible audio ports

**(The HDMI and DVI-D ports can not work simultaneously)

■ On-Board

- 4 USB 2.0 connectors
- 1 Chassis Intrusion connector
- 1 Serial port connector
- 1 Parallel port connector
- 1 CD-In connector
- 1 Front Panel Audio connector
- 1 S/PDIF-out connector
- 1 TPM Module connector

Slots

■ 2 PCI Express 2.0 x16 slots

- when you install two expansion cards into both PCIE x16 slots, the PCI_E1 & PCI_E2 lanes will run with x8 speed.
- if you intend to install only one expansion card, please install it into PCI_E1 slot, and the PCI_E1 lane will run with x16 speed

■ 1 PCI Express x1 slot

■ 1 PCI slot, supports 3.3V/ 5V PCI bus Interface


Form Factor

■ Micro-ATX (24.4cm X 24.4 cm)

Mounting

■ 8 mounting holes

MAINBOARD LAYOUT

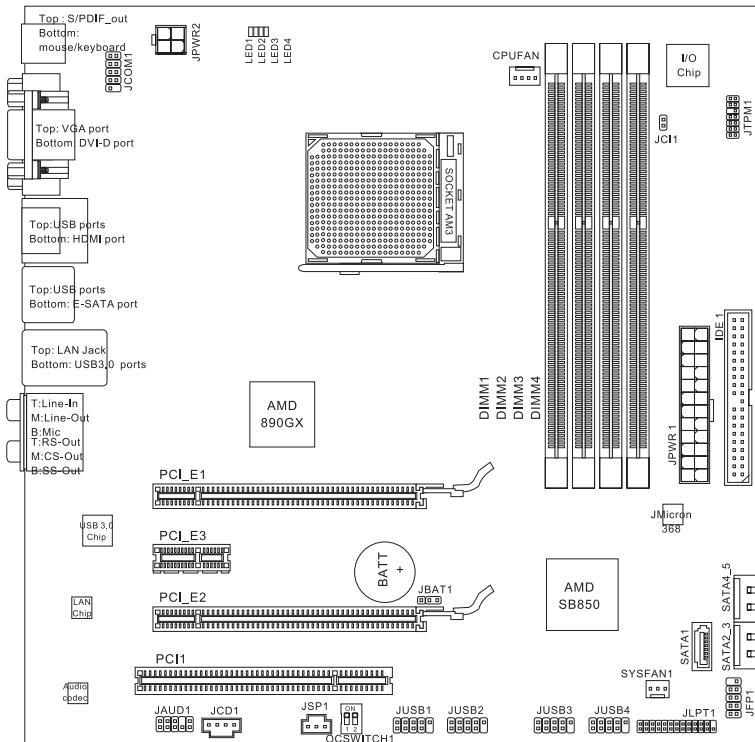

890GXM-G65 Series (MS-7642 v1.X) Mainboard

PACKING CHECKLIST



MSI mainboard



MSI Driver/Utility DVD



SATA Cable



Power Cable



Standard Cable for IDE Devices



Back IO Shield



User's Guide

* The pictures are for reference only and may vary from the packing contents of the product you purchased. If you need to purchase accessories and request the part numbers, you could search the product web page and find details on our web address <http://www.msi.com/index.php>


Chapter 2

Hardware Setup

This chapter provides you with the information about hardware setup procedures. While doing the installation, be careful in holding the components and follow the installation procedures. For some components, if you install in the wrong orientation, the components will not work properly.

Use a grounded wrist strap before handling computer components. Static electricity may damage the components.

QUICK COMPONENTS GUIDE

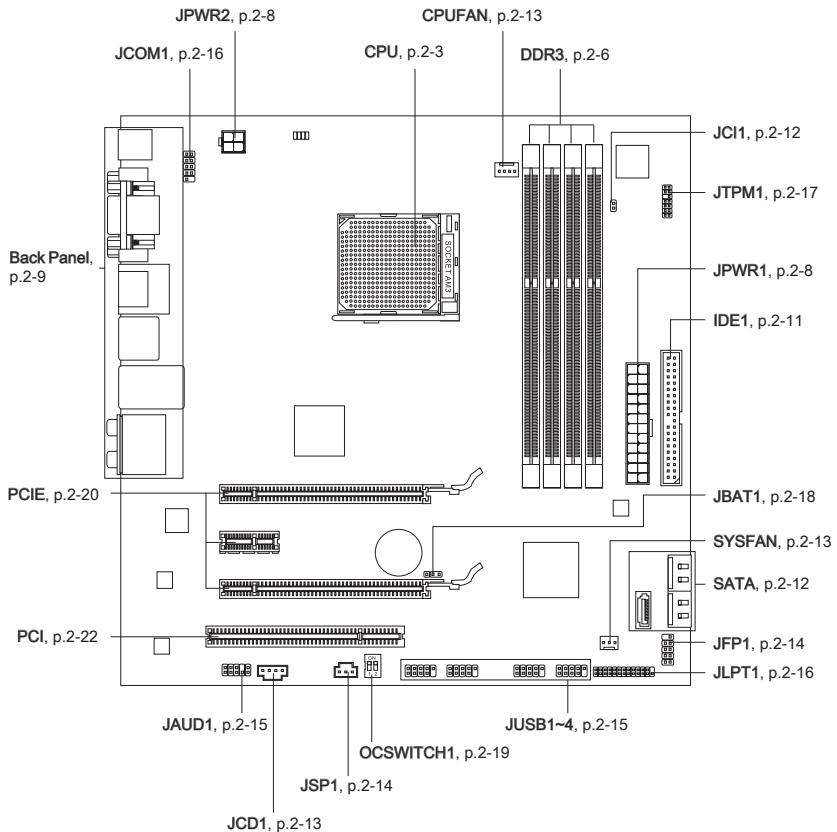

CPU (CENTRAL PROCESSING UNIT)

When you are installing the CPU, make sure to install the cooler to prevent overheating. If you do not have the CPU cooler, consult your dealer before turning on the computer. For the latest information about CPU, please visit <http://www.msi.com/index.php?func=cpuform2>

Important

Overheating

Overheating will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.

Replacing the CPU

While replacing the CPU, always turn off the ATX power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.

Overclocking



This mainboard is designed to support overclocking. However, please make sure your components are able to tolerate such abnormal setting, while doing overclocking. Any attempt to operate beyond product specifications is not recommended. We do not guarantee the damages or risks caused by inadequate operation or beyond product specifications.

CPU & Cooler Installation



When you are installing the CPU, make sure the CPU has a cooler attached on the top to prevent overheating. Meanwhile, do not forget to apply some thermal paste on CPU before installing the heat sink/cooler fan for better heat dispersion.

Follow the steps below to install the CPU & cooler correctly. Wrong installation will cause the damage of your CPU & mainboard


1. Pull the lever sideways away from the socket. Make sure to raise the lever up to a 90-degree angle.
2. Look for the gold arrow of the CPU. The gold arrow should point as shown in the picture. The CPU can only fit in the correct orientation.

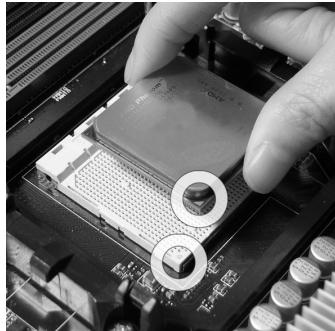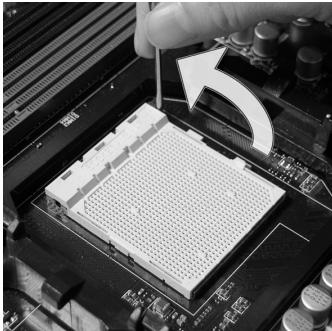


3. If the CPU is correctly installed, the pins should be completely embedded into the socket and can not be seen. Please note that any violation of the correct installation procedures may cause permanent damages to your mainboard.
4. Press the CPU down firmly into the socket and close the lever. As the CPU is likely to move while the lever is being closed, always close the lever with your fingers pressing tightly on top of the CPU to make sure the CPU is properly and completely embedded into the socket.

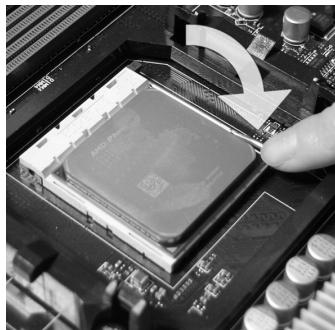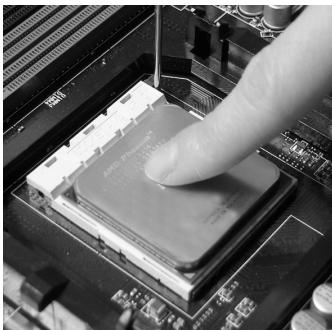

5. Position the cooling set onto the retention mechanism.
Hook one end of the clip to hook first.

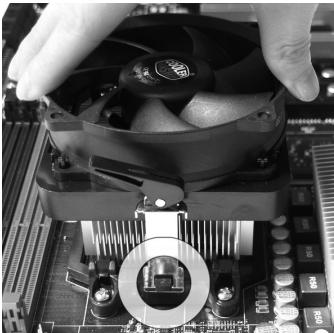


6. Then press down the other end of the clip to fasten the cooling set on the top of the retention mechanism.
Locate the Fix Lever and lift up it.

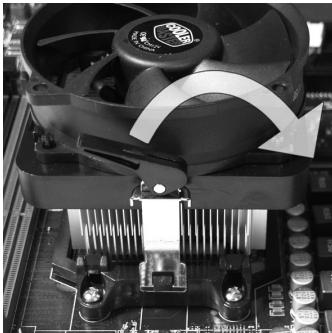

7. Fasten down the lever.



8. Attach the CPU Fan cable to the CPU fan connector on the mainboard.

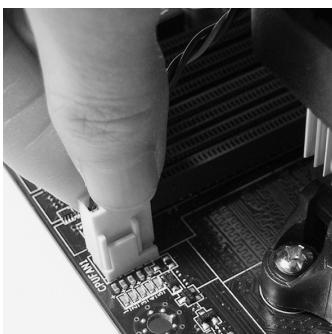


Important

- Mainboard photos shown in this section are for demonstration only. The appearance of your mainboard may vary depending on the model you purchase.
- While disconnecting the Safety Hook from the fixed bolt, it is necessary to keep an eye on your fingers, because once the Safety Hook is disconnected from the fixed bolt, the fixed lever will spring back instantly.

MEMORY


These DIMM slots are used for installing memory modules. For more information on compatible components, please visit <http://www.msi.com/index.php?func=testreport>




Dual-Channel mode Population Rule

In Dual-Channel mode, the memory modules can transmit and receive data with two data bus lines simultaneously. Enabling Dual-Channel mode can enhance the system performance. The following illustrations explain the population rules for Dual-Channel mode.

①



②



Important


- DDR3 memory modules are not interchangeable with DDR2 and the DDR3 standard is not backwards compatible. You should always install DDR3 memory modules in the DDR3 DIMM slots.
- In Dual-Channel mode, make sure that you install memory modules of the **same type and density** in different channel DIMM slots.
- To enable successful system boot-up, always insert the memory modules into the DIMM1 first.
- Due to the chipset resource deployment, the system density will only be detected up to 15+GB (not full 16GB) when each DIMM is installed with a 4GB memory module.

Installing Memory Modules

1. The memory module has only one notch on the center and will only fit in the right orientation.
2. Insert the memory module vertically into the DIMM slot. Then push it in until the golden finger on the memory module is deeply inserted in the DIMM slot. The plastic clip at each side of the DIMM slot will automatically close when the memory module is properly seated.
3. Manually check if the memory module has been locked in place by the DIMM slot clips at the sides.

Important

You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.

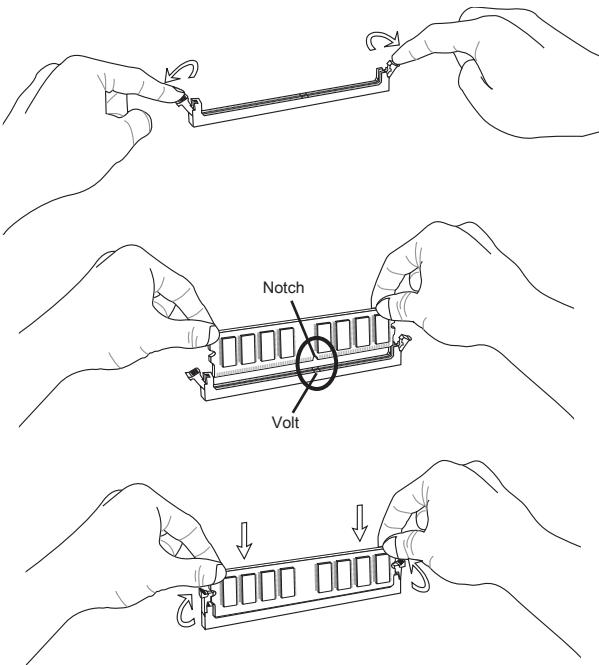


POWER SUPPLY

ATX 24-pin Power Connector: JPWR1


This connector allows you to connect an ATX 24-pin power supply. To connect the ATX 24-pin power supply, make sure the plug of the power supply is inserted in the proper orientation and the pins are aligned. Then push down the power supply firmly into the connector.

You may use the 20-pin ATX power supply as you like. If you'd like to use the 20-pin ATX power supply, please plug your power supply along with pin 1 & pin 13 (refer to the image at the right hand).

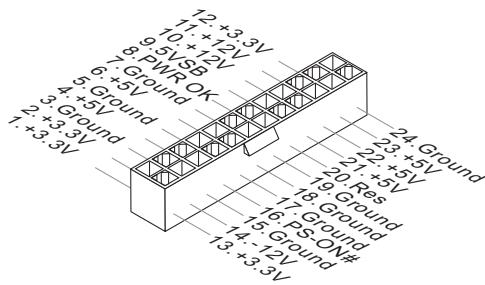

ATX 4-pin Power Connector: JPWR2


This connector is used to provide power to the CPU.

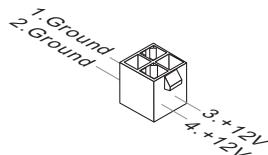

Important

- Make sure that all the connectors are connected to proper ATX power supplies to ensure stable operation of the mainboard.
- Power supply of 350 watts (and above) is highly recommended for system stability.

BACK PANEL

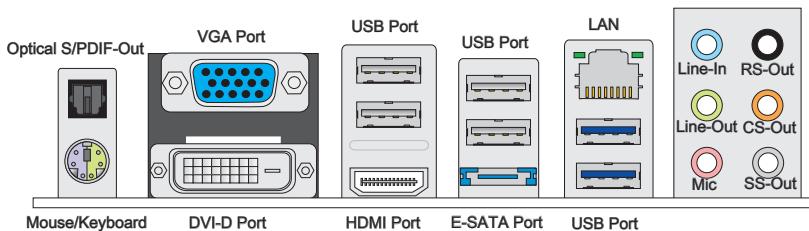

► Optical S/PDIF-Out

This SPDIF (Sony & Philips Digital Interconnect Format) connector is provided for digital audio transmission to external speakers through an optical fiber cable.

► Mouse/Keyboard

The standard PS/2® mouse/keyboard DIN connector is for a PS/2® mouse/keyboard.

► VGA Port

The DB15-pin female connector is provided for monitor.

► DVI-D Port

The DVI-D (Digital Visual Interface-Digital) connector allows you to connect a LCD monitor. It provides a high-speed digital interconnection between the computer and its display device. To connect an LCD monitor, simply plug your monitor cable into the DVI-D connector, and make sure that the other end of the cable is properly connected to your monitor (refer to your monitor manual for more information.)

► USB Port

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices.

► HDMI Port

The High-Definition Multimedia Interface (HDMI) is an all-digital audio/video interface capable of transmitting uncompressed streams. HDMI supports all TV format, including standard, enhanced, or high-definition video, plus multi-channel digital audio on a single cable.

► E-SATA Port

The E-SATA (External-SATA) port is for attaching the E-SATA hard drive.

Important

The HDMI and DVI-D ports can not work simultaneously.

Hardware Setup

► LAN

The standard RJ-45 LAN jack is for connection to the Local Area Network (LAN). You can connect a network cable to it.



Green/ Orange

LED	Color	LED State	Condition
Left	Yellow	Off	LAN link is not established.
		On(Steady state)	LAN link is established.
		On(brighter & pulsing)	The computer is communicating with another computer on the LAN.
Right	Green	Off	10 Mbits/sec data rate is selected.
		On	100 Mbits/sec data rate is selected.
	Orange	On	1000 Mbits/sec data rate is selected.

► Audio Ports


These audio connectors are used for audio devices. It is easy to differentiate between audio effects according to the color of audio jacks.

- Line-In (Blue) - Line In, is used for external CD player, tape-player or other audio devices.
- Line-Out (Green) - Line Out, is a connector for speakers or headphones.
- Mic (Pink) - Mic, is a connector for microphones.
- RS-Out (Black) - Rear-Surround Out in 4/ 5.1/ 7.1 channel mode.
- CS-Out (Orange) - Center/ Subwoofer Out in 5.1/ 7.1 channel mode.
- SS-Out (Gray) - Side-Surround Out 7.1 channel mode.

CONNECTORS

IDE Connector: IDE1

This connector supports IDE hard disk drives, optical disk drives and other IDE devices.

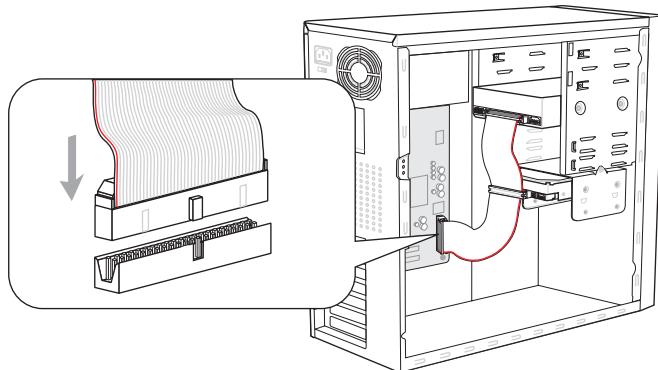


* The MB layout in this figure is for reference only.

Important

If you install two IDE devices on the same cable, you must configure the drives separately to master / slave mode by setting jumpers. Refer to IDE device's documentation supplied by the vendors for jumper setting instructions.

Serial ATA Connector: SATA1~5

This connector is a high-speed Serial ATA interface port. Each connector can connect to one Serial ATA device.

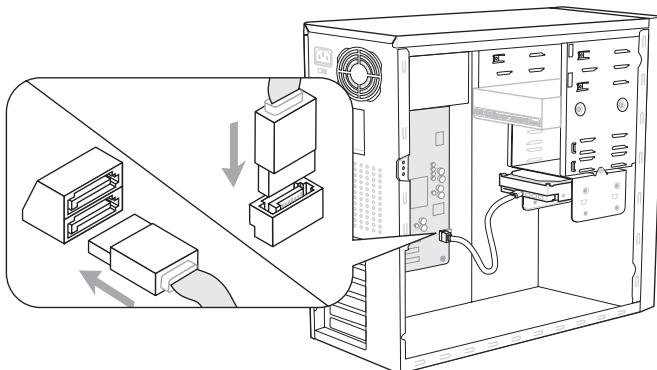


* The MB layout in this figure is for reference only.

Important

Please do not fold the Serial ATA cable into 90-degree angle. Otherwise, data loss may occur during transmission.


Chassis Intrusion Connector: JCI1

This connector connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.

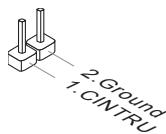

Fan Power Connectors: CPUFAN, SYSFAN

The fan power connectors support system cooling fan with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND. If the mainboard has a System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of the CPU fan control.

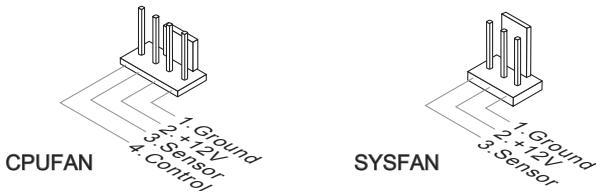


Important

- Please refer to the recommended CPU fans at processor's official website or consult the vendors for proper CPU cooling fan.
- CPUFAN supports fan control. You can install **Control Center** utility that will automatically control the CPU fan speed according to the actual CPU temperature.
- Fan cooler set with 3 or 4 pins power connector are both available for CPUFAN.


CD-In Connector: JCD1

This connector is provided for external audio input.

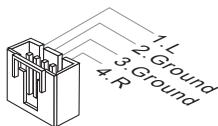


Front Panel Connector: JFP1

This connector is for electrical connection to the front panel switches and LEDs. The JFP1 is compliant with Intel® Front Panel I/O Connectivity Design Guide.

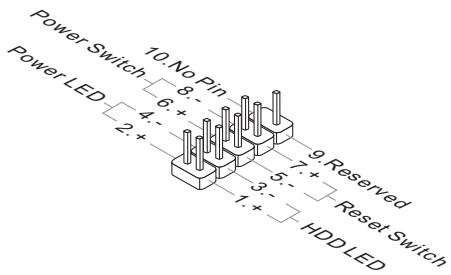

S/PDIF-Out Connector: JSP1


This connector is used to connect S/PDIF (Sony & Philips Digital Interconnect Format) interface for digital audio transmission.

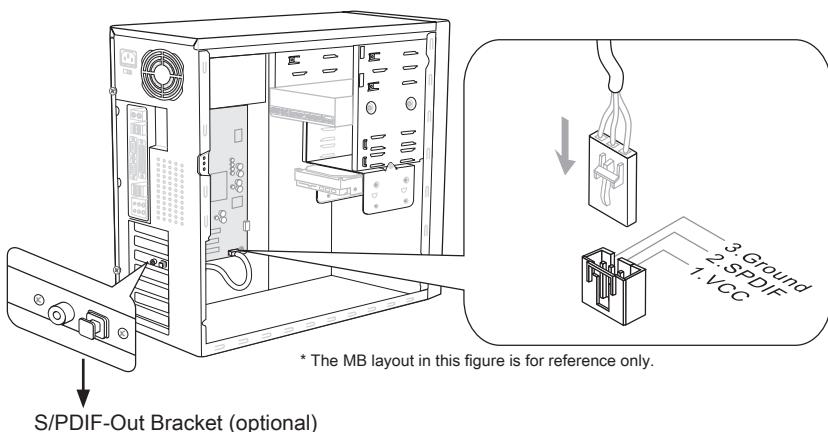

* The MB layout in this figure is for reference only.

Front USB Connector: JUSB1 / JUSB2 / JUSB3/ JUSB4

This connector, compliant with Intel® I/O Connectivity Design Guide, is ideal for connecting high-speed USB interface peripherals such as USB HDD, digital cameras, MP3 players, printers, modems and the like.

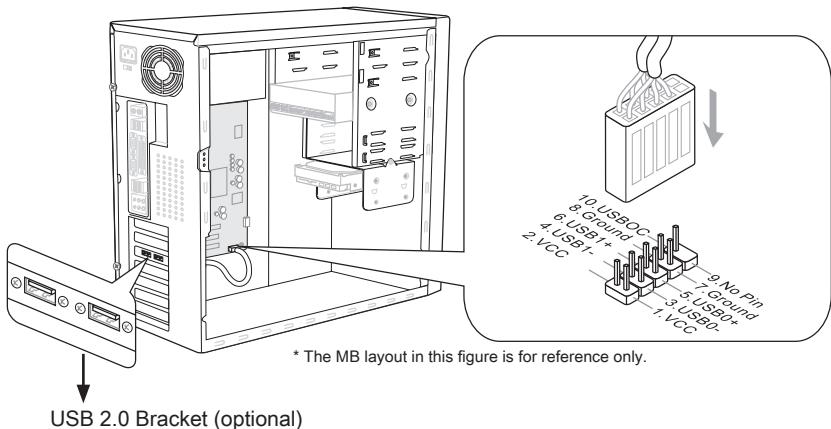


Important

Note that the pins of VCC and GND must be connected correctly to avoid possible damage.


Front Panel Audio Connector: JAUD1

This connector allows you to connect the front panel audio and is compliant with Intel® Front Panel I/O Connectivity Design Guide.

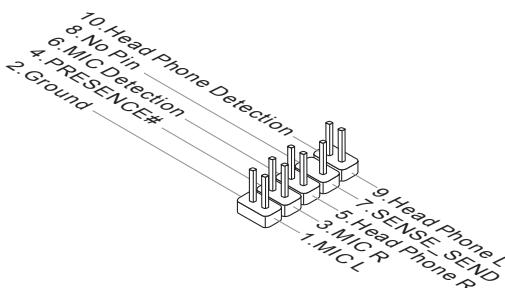


Serial Port Connector: JCOM1

This connector is a 16550A high speed communication port that sends/ receives 16 bytes FIFOs. You can attach a serial device.

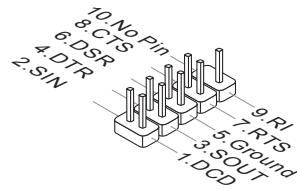



Parallel Port Connector: JLPT1

This connector is used to connect an optional parallel port bracket. The parallel port is a standard printer port that supports Enhanced Parallel Port (EPP) and Extended Capabilities Parallel Port (ECP) mode.

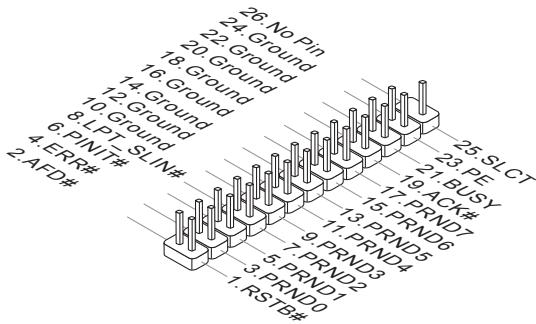

TPM Module connector: JTPM1

This connector connects to a TPM (Trusted Platform Module) module (optional). Please refer to the TPM security platform manual for more details and usages.

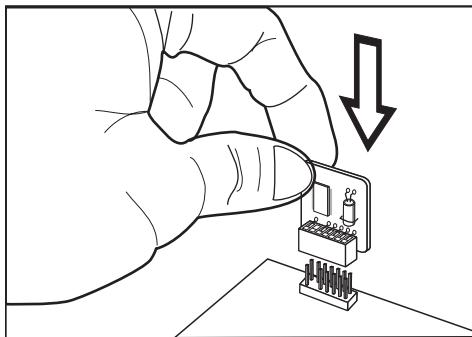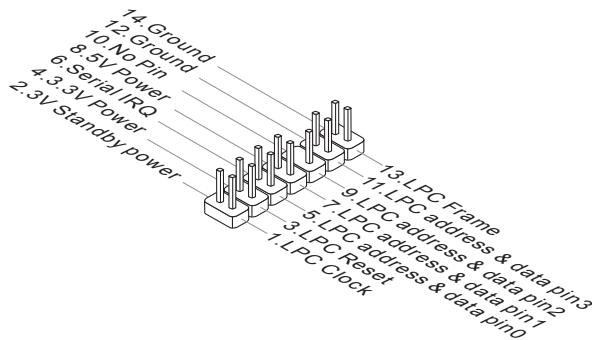

JUMPERS

Clear CMOS Jumper: JBAT1

There is a CMOS RAM onboard that has a power supply from an external battery to keep the data of system configuration. With the CMOS RAM, the system can automatically boot OS every time it is turned on. If you want to clear the system configuration, set the jumper to clear data.



JBAT1



Keep Data



Clear Data

Important

You can clear CMOS by shorting 2-3 pin while the system is off. Then return to 1-2 pin position. Avoid clearing the CMOS while the system is on; it will damage the mainboard.

SWITCH

This mainboard provides the following switch for you to set the computer's function. This section will explain how to change your mainboard's function through the use of switch.

Overclock FSB Switch: OCSWITCH1

You can overclock the FSB to increase the processor frequency by changing the switch. Follow the instructions below to set the FSB.



Default



Increase 10% speed of FSB



Increase 15% speed of FSB



Increase 20% speed of FSB


Important

- Make sure that you power off the system before setting the switch.
- When overclocking cause system instability or crash during boot. Please set the switch to default setting.

SLOTS

PCIE (Peripheral Component Interconnect Express) Slot

The PCI Express slot supports the PCI Express interface expansion card.

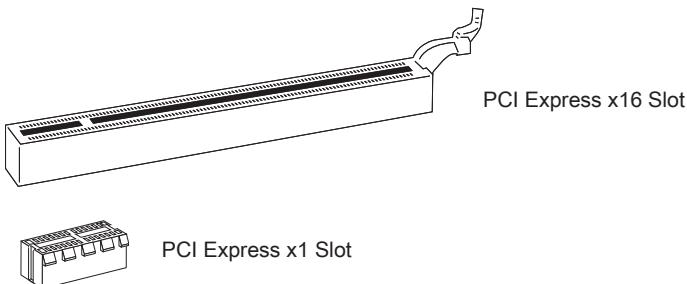

Hybrid CrossFireX™ Technology

Hybrid CrossFireX™ technology brings multi-GPU performance capabilities by enabling an AMD® integrated graphics processor and a discrete graphics processor to operate simultaneously with combined output to a single display for blisteringly-fast frame rates. Unleash the graphics performance.

System Request


1. Hybrid CrossFireX™ is only supported with the Vista & 7 operating system.
2. Graphic card based on an ATI Radeon™ HD 3450 series, ATI Radeon™ HD 3470 series or ATI Radeon™ HD 5450 (for Asymmetric CrossFireX™) graphics processor.
3. Mainboard based on an AMD® integrated chipset.

Enabling Hybrid CrossFireX™ Technology

Power off the system and install the ATI graphic card that supports Hybrid CrossFireX™ technology. After then, power on the system and install the driver that Hybrid CrossFireX™ technology. Restart the system and wait for the ATI Icon to show in the System Tray. Click the icon and then the following aspect appears in Catalyst Control Center:



1. Select the Advanced View from the view drop menu.

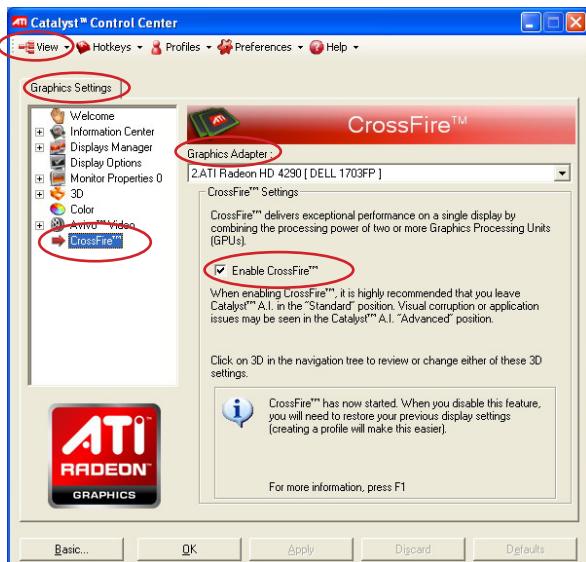

2. From the "Graphics Settings" tree in the Catalyst Control Center, click CrossFire™.
3. From the "Graphics Adapter" list, select the graphics card that acts as the Display GPU.
4. Select "Enable CrossFire™".
5. Click Apply.

When Hybrid CrossFireX™ is enabled, GPU Accelerated Physics is automatically disabled for all cards in the configuration as are all displays except the one used by Hybrid CrossFireX™.

More details please refer to http://game.amd.com/us-en/crossfirex_hybrid.aspx


Important

Changing integrated graphic memory operating mode may cause Hybrid CrossFireX™ fail. To avoid the issue, please follow the steps below to setup the system:

- Disable the Hybrid CrossFireX™ in Catalyst Control Center.
- Reboot into BIOS.
- Select the option in Advanced BIOS Features -> On-Chip VGA.
- Save BIOS settings and reboot.
- Enable the Hybrid CrossFireX™ in Catalyst Control Center.

PCI (Peripheral Component Interconnect) Slot

The PCI slot supports LAN card, SCSI card, USB card, and other add-on cards that comply with PCI specifications.

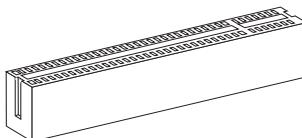

32-bit PCI Slot

Important


When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

PCI Interrupt Request Routing

The IRQ, acronym of interrupt request line and pronounced I-R-Q, are hardware lines over which devices can send interrupt signals to the microprocessor. The PCI IRQ pins are typically connected to the PCI bus pins as follows:

	Order1	Order2	Order3	Order4
PCI Slot1	INT E#	INT F#	INT G#	INT H#

LED STATUS INDICATORS

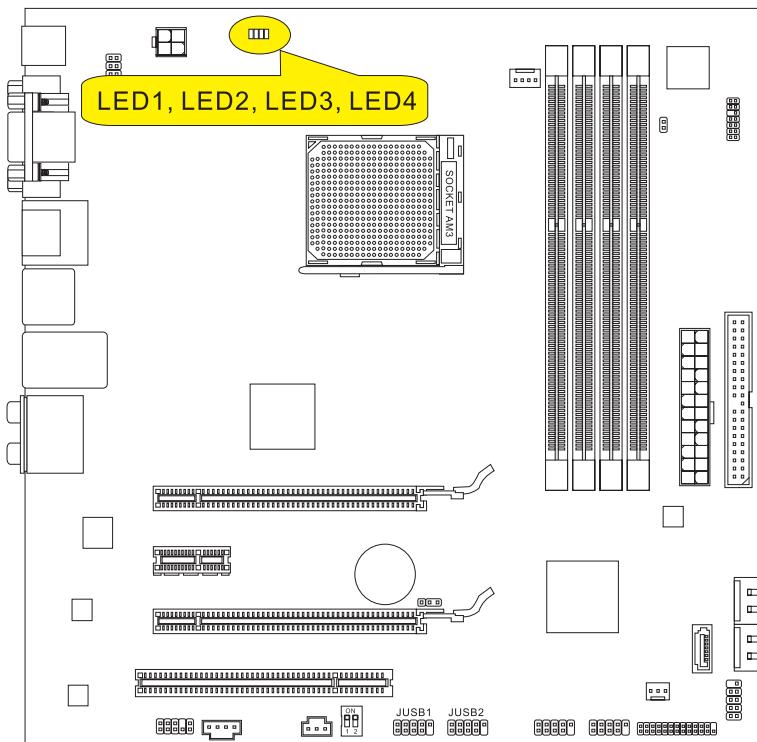

CPU Phase LEDs: LED1, LED2, LED3, LED4

These LEDs indicate the current CPU power phase mode. Follow the instructions below to read.

█ Blue light █ Off

LED1	LED2	LED3	LED4	Mode
█	█	█	█	CPU is in 1 phase power mode.
█	█	█	█	CPU is in 4 phase power mode.

Chapter 3

BIOS Setup

This chapter provides information on the BIOS Setup program and allows you to configure the system for optimum use.

You may need to run the Setup program when:

- An error message appears on the screen during the system booting up, and requests you to run SETUP.
- You want to change the default settings for customized features.

ENTERING SETUP

Power on the computer and the system will start POST (Power On Self Test) process. When the message below appears on the screen, press key to enter Setup.

Press DEL to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system by turning it OFF and On or pressing the RESET button. You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

Important

- The items under each BIOS category described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest BIOS and should be held for reference only.
- Upon boot-up, the 1st line appearing after the memory count is the BIOS version. It is usually in the format:

A7642AMS V1.0 020110 where:

1st digit refers to BIOS maker as A = AMI, W = AWARD, and P = PHOENIX.

2nd - 5th digit refers to the model number.

6th digit refers to the chipset as I = Intel, N = NVIDIA, A = AMD and V = VIA.

7th - 8th digit refers to the customer as MS = all standard customers.

V1.0 refers to the BIOS version.

020110 refers to the date this BIOS was released.

Control Keys

<↑>	Move to the previous item
<↓>	Move to the next item
<↔>	Move to the item in the left hand
<↔>	Move to the item in the right hand
<Enter>	Select the item
<Esc>	Jumps to the Exit menu or returns to the main menu from a submenu
<+/PU>	Increase the numeric value or make changes
<-/PD>	Decrease the numeric value or make changes
<F1>	General Help
<F6>	Load Optimized Defaults
<F8>	Load Fail-Safe Defaults
<F10>	Save all the CMOS changes and exit

Getting Help


After entering the Setup menu, the first menu you will see is the Main Menu.

Main Menu

The main menu lists the setup functions you can make changes to. You can use the arrow keys (↑ ↓) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Sub-Menu


If you find a right pointer symbol (as shown in the right view) appears to the left of certain fields that means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use arrow keys (↑ ↓) to highlight the field and press <Enter> to call up the sub-menu. Then you can use the control keys to enter values and move from field to field within a sub-menu. If you want to return to the main menu, just press the <Esc >.



General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

THE MAIN MENU

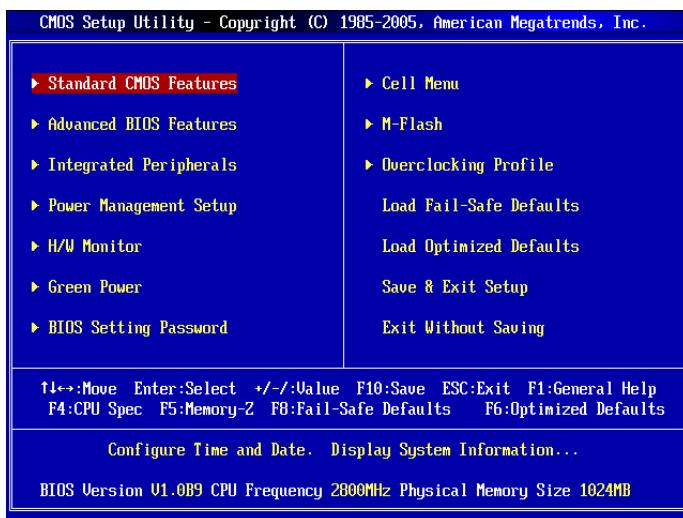**► Standard CMOS Features**

Use this menu for basic system configurations, such as time, date etc.

► Advanced BIOS Features

Use this menu to setup the items of the BIOS special enhanced features.

► Integrated Peripherals

Use this menu to specify your settings for integrated peripherals.

► Power Management Setup

Use this menu to specify your settings for power management.

► H/W Monitor

This entry shows your PC health status.

► Green Power

Use this menu to specify the power phase.

► BIOS Setting Password

Use this menu to set the password for BIOS.

► Cell Menu

Use this menu to specify your settings for frequency/voltage control and overclocking.

► M-Flash

Use this menu to read/ flash the BIOS from storage drive (FAT/ FAT32 format only).

► Overclocking Profile

Use this menu to save/ load your settings to/ from CMOS for BIOS.

► Load Fail-Safe Defaults

Use this menu to load the default values set by the BIOS vendor for stable system performance.

► Load Optimized Defaults

Use this menu to load the default values set by the mainboard manufacturer specifically for optimal performance of the mainboard.

► Save & Exit Setup


Save changes to CMOS and exit setup.

► Exit Without Saving

Abandon all changes and exit setup.

STANDARD CMOS FEATURES

The items in Standard CMOS Features Menu include some basic setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

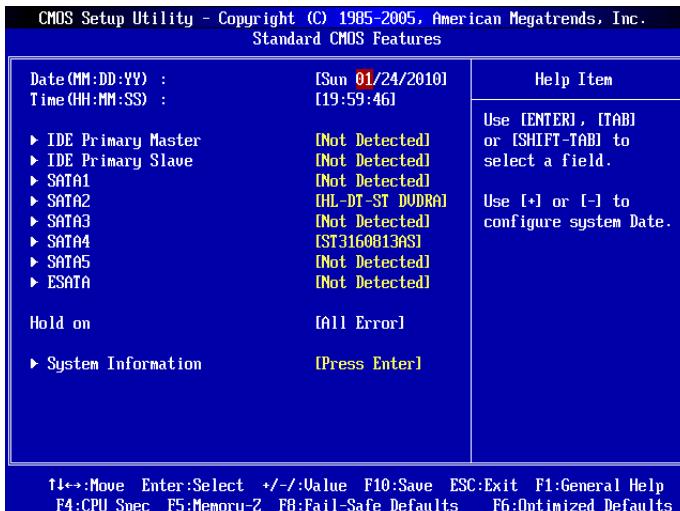

► Date (MM:DD:YY)

This allows you to set the system to the date that you want (usually the current date). The format is <day><month> <date> <year>.

- [day] Day of the week, from Sun to Sat, determined by BIOS. Read-only.
- [month] The month from Jan. through Dec.
- [date] The date from 1 to 31 can be keyed by numeric function keys.
- [year] The year can be adjusted by users.

► Time (HH:MM:SS)

This allows you to set the system time that you want (usually the current time). The time format is <hour> <minute> <second>.

► IDE Primary Master/ Slave & SATA1~5 & E-SATA

Press <Enter> to enter the sub-menu, and the following screen appears.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.	
SATA4	
Device	Help Item
Vendor :ST3160813AS	Disabled: Disables LBA Mode.
Size :160.0GB	Auto: Enables LBA Mode if the device supports it and the device is not already formatted with LBA Mode disabled.
LBA/Large Mode [Auto]	
DMA Mode [Auto]	
Hard Disk S.M.A.R.T. [Auto]	

► Device / Vendor / Size

It will show the device information that you connected to the SATA connector.

► LBA/Large Mode

This allows you to enable or disable the LBA Mode. Setting to Auto enables LBA mode if the device supports it and the devices is not already formatted with LBA mode disabled.

► DMA Mode

Select DMA Mode.

► Hard Disk S.M.A.R.T.

This allows you to activate the S.M.A.R.T. (Self-Monitoring Analysis & Reporting Technology) capability for the hard disks. S.M.A.R.T is a utility that monitors your disk status to predict hard disk failure. This gives you an opportunity to move data from a hard disk that is going to fail to a safe place before the hard disk becomes offline.

Important

IDE Primary Master/ Slave, SATA 1~5 & E-SATA are appearing when you connect the HD devices to the IDE/ SATA/ E-SATA connectors on the mainboard.

► Hold on

The setting determines whether the system will stop if an error is detected at boot. When the system stops for the errors preset, it will halt on for 15 seconds and then automatically resume its operation.

[All Error] The system stops when any error is detected.

[No Error] The system does not stop for any detected error.

► System Information

Press <Enter> to enter the sub-menu. This sub-menu shows the CPU information, BIOS version and memory status of your system (read only).

ADVANCED BIOS FEATURES

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
Advanced BIOS Features		
Item	Setting	Help Item
► Boot Sequence	[Press Enter]	
BIOS Flash Protection	[Disabled]	
Full Screen Logo Display	[Enabled]	
Quick Booting	[Enabled]	
Boot Up Num-Lock LED	[On]	
IOAPIC Function	[Enabled]	
MPS Table Version	[1.4]	
Primary Graphic's Adapter	[PCI-E]	
PCI Latency Timer	[64]	
HPET	[Disabled]	
Surround View	[Auto]	
On-Chip VGA	[UMA+SIDEPORT]	
VGA Share Memory	[Auto]	
UMA Location	[Above]	
SIDEPORT Clock Speed	[400MHz]	
UMA-SP Interleave Mode	[Auto]	
TCG/TPM Support	[No]	

↑↓:Move Enter:Select +/-:Value F10:Save ESC:Exit F1:General Help
 F4:CPU Spec F5:Memory-Z F8:Fail-Safe Defaults F6:Optimized Defaults

► Boot Sequence

Press <Enter> to enter the sub-menu.

► 1st/ 2nd Boot Device

This item allows you to set the first/ second boot device where BIOS attempts to load the disk operating system.

► Boot From Other Device

Setting the option to [Yes] allows the system to try to boot from other device, if the system fails to boot from 1st boot device.

► BIOS Flash Protection

This function protects the BIOS from accidental corruption by unauthorized users or computer viruses. When enabled, the BIOS' data cannot be changed when attempting to update the BIOS with a Flash utility. To successfully update the BIOS, you will need to disable this Flash BIOS Protection function. You should enable this function at all times. The only time when you need to disable it is when you want to update the BIOS. After updating the BIOS, you should immediately re-enable it to protect it against viruses.

► Full Screen Logo Display

This item enables this system to show the company logo on the boot-up screen. Settings are:

- [Enabled] Shows a still image (logo) on the full screen at boot.
- [Disabled] Shows the POST messages at boot.

► Quick Booting

Setting the item to [Enabled] allows the system to boot within 10 seconds since it will skip some check items.

► Boot Up Num-Lock LED

This setting is to set the Num Lock status when the system is powered on. Setting to [On] will turn on the Num Lock key when the system is powered on. Setting to [Off] will allow users to use the arrow keys on the numeric keypad.

► IOAPIC Function

This field is used to enable or disable the APIC (Advanced Programmable Interrupt Controller). Due to compliance with PC2001 design guide, the system is able to run in APIC mode. Enabling APIC mode will expand available IRQ resources for the system.

► MPS Table Version

This field allows you to select which MPS (Multi-Processor Specification) version to be used for the operating system. You need to select the MPS version supported by your operating system. To find out which version to use, consult the vendor of your operating system.

► Primary Graphic's Adapter

This setting specifies which graphic card is your primary graphics adapter.

► PCI Latency Timer

This item controls how long each PCI device can hold the bus before another takes over. When set to higher values, every PCI device can conduct transactions for a longer time and thus improve the effective PCI bandwidth. For better PCI performance, you should set the item to higher values.

► HPET

The HPET (High Precision Event Timers) is a component that is part of the chipset. You can to enable it, and will provide you with the means to get to it via the various ACPI methods.

► Surround View

Surround view provides the power and convenience of multi-adapter, multi-monitor support for computers that use an PCIE based graphics card in conjunction with integrated graphics processors (IGPs).

► On-Chip VGA

This item specifies whether to allocate the memory for onboard integrated GPU from the system memory or sideport memory. Setting to [UMA], allocates the system share memory for onboard integrated GPU.

► VGA Share Memory

The system shares memory to onboard integrated GPU. This setting controls the exact memory size shared to onboard integrated GPU.

► UMA Location

This item is used to select the location of UMA to avoid over-lapping with the other data blocks in system memory.

BIOS Setup

► SIDEPORT Clock Speed

This item allows you to set the SIDEPORT memory frequency (in MHz).


► UMA-SP Interleave Mode

This item allows you to adjust the ratio of UMA to SIDEPORT memory.

► TCG/TPM Support

Setting the option to [Yes] enables TPM (Trusted Platform Module) for the system.

INTEGRATED PERIPHERALS

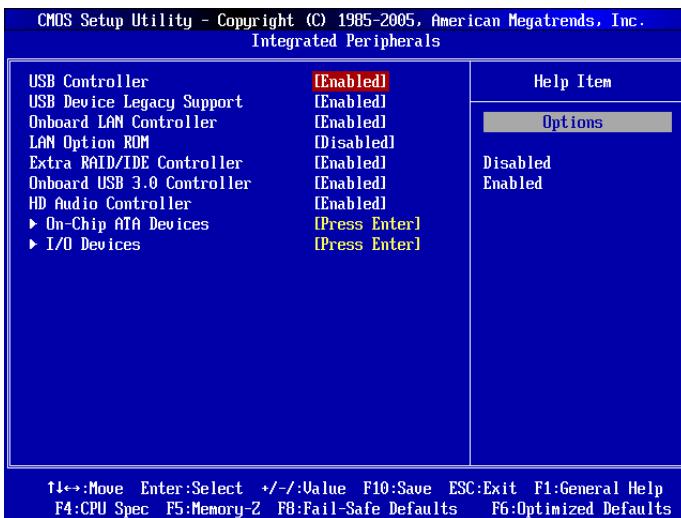

▶ USB Controller

This setting allows you to enable/disable the onboard USB 1.1/ 2.0 controller.

▶ USB Device Legacy Support

Select [Enabled] if you need to use a USB-interfaced device in the operating system.

▶ Onboard LAN Controller

This setting allows you to enable/disable the onboard LAN controller.

▶ LAN Option ROM

This item is used to decide whether to invoke the Boot ROM of the onboard LAN.

▶ Extra RAID/IDE Controller

This setting is used to enable/disable the JMicron 368 controller.

▶ Onboard USB 3.0 Controller

This setting is used to enable/disable the onboard USB 3.0 controller.

▶ HD Audio Controller

This setting is used to enable/disable the onboard audio controller.

▶ On-Chip ATA Devices

Press <Enter> to enter the sub-menu and the following screen appears:

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
On-Chip ATA Devices		
PCI IDE BusMaster	[Enabled]	Help Item
On-Chip SATA Controller	[Enabled]	
RAID Mode	[IDE]	ENABLED: BIOS uses PCI IDE BusMaster

► PCI IDE BusMaster

This item allows you to enable/ disable BIOS to used PCI busmastering for reading/ writing to IDE drives.

► On-Chip SATA Controller

This item allows users to enable or disable the SATA controller.

► RAID Mode

This item is used to select mode for SATA connectors.

► I/O Devices

Press <Enter> to enter the sub-menu and the following screen appears:

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
I/O Devices		
COM Port 1	[3F8/IRQ4]	Help Item
Parallel Port	[378]	
Parallel Port Mode	[Normal]	Allows BIOS to Select Serial Port1 Base

► COM Port 1

Select an address and corresponding interrupt for the serial port.

► Parallel Port

There is a built-in parallel port on the on-board Super I/O chipset that provides Standard, ECP, and EPP features. It has the following options:

[Disabled]

[3BC/IRQ7] Line Printer port 0

[278/IRQ5] Line Printer port 2

[378/IRQ7] Line Printer port 1

► Parallel Port Mode

[SPP] Standard Parallel Port

[EPP] Enhanced Parallel Port

[ECP] Extended Capability Port

[ECP + EPP] Extended Capability Port + Enhanced Parallel Port

[Bi-Directional]


To operate the onboard parallel port as Standard Parallel Port only, choose [SPP].

To operate the onboard parallel port in the EPP mode simultaneously, choose [EPP].

By choosing [ECP], the onboard parallel port will operate in ECP mode only. Choosing [ECP + EPP] will allow the onboard parallel port to support both the ECP and

EPP modes simultaneously.

POWER MANAGEMENT SETUP

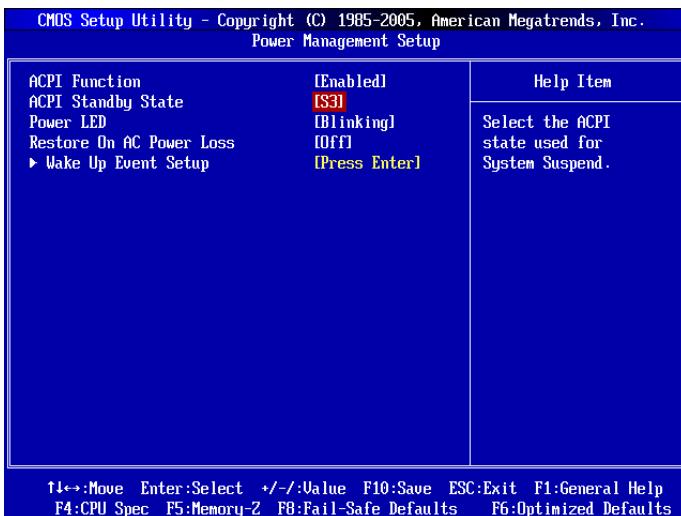

Important

S3-related functions described in this section are available only when the BIOS supports S3 sleep mode.

► ACPI Function

This item is to activate the ACPI (Advanced Configuration and Power Management Interface) Function. If your operating system is ACPI-aware, select [Enabled].

► ACPI Standby State

This item specifies the power saving modes for ACPI function.

► Power LED

This item configures how the system uses power LED on the case to indicate the sleep/suspend state.

[Single] The power LED turns off during the sleep/suspend mode.

[Dual] The power LED changes its color to indicate the sleep/suspend state.

[Blinking] The power LED blinks to indicate the sleep/suspend state.

BIOS Setup

► Restore On AC Power Loss

This item specifies whether your system will reboot after a power failure or interrupt occurs. Settings are:

- [Off] Always leaves the computer in the power off state.
- [On] Always leaves the computer in the power on state.
- [Last State] Restore the system to the status before power failure or interrupt occurred.

► Wake Up Event Setup

Press <Enter> and the following sub-menu appears.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
Wake Up Event Setup		
Wake Up Event By	[BIOS]	Help Item
Resume From S3 By USB Device	[Disabled]	Options
Resume From S3 By PS/2 Keyboard	[Disabled]	Disabled
Resume From S3 By PS/2 Mouse	[Disabled]	Enabled
Resume By PCI or PCI-E Device	[Enabled]	
Resume By RTC Alarm	[Disabled]	

► Wake Up Event By

Setting to [BIOS] activates the following fields, and use the following fields to set the wake up events. Setting to [OS], the wake up events will be defined by OS.

► Resume From S3 By USB Device

The item allows the activity of the USB device to wake up the system from S3 (Suspend to RAM) sleep state.

► Resume From S3 By PS/2 Keyboard / Mouse

These items determine whether the system will be awakened from what power saving modes when input signal of the PS/2 keyboard/ mouse is detected.


► Resume By PCI or PCI-E Device

When set to [Enabled], the feature allows your system to be awakened from the power saving modes through any event on PCIE or PCI device.

► Resume By RTC Alarm

The field is used to enable or disable the feature of booting up the system on a scheduled time/date.

H/W MONITOR

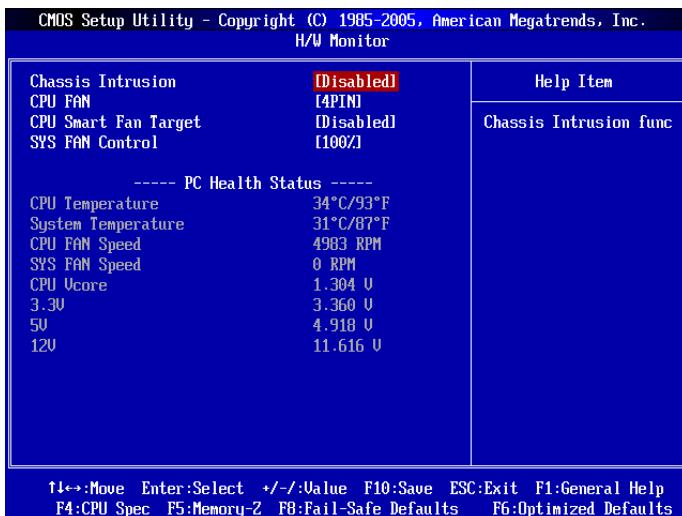

► Chassis Intrusion

The field enables or disables the feature of recording the chassis intrusion status and issuing a warning message if the chassis is once opened. To clear the warning message, set the field to [Reset]. The setting of the field will automatically return to [Enabled] later.

► CPU FAN

This item is used to select the type of installed CPU FAN.

► CPU Smart Fan Target

The mainboard provides the Smart Fan function which can control the CPU fan speed automatically depending on the current temperature to keep it within a specific range. You can enable a fan target value here. If the current CPU fan temperature reaches to the target value, the smart fan function will be activated. It provides several sections to speed up for cooling down automatically.

► SYS FAN Control


This item allows users to select how percentage of speed for the SYS FAN.

► PC Health Status

► CPU/ System Temperature, CPU FAN/ SYS FAN Speed, CPU Vcore, 3.3V, 5V, 12V

These items display the current status of all of the monitored hardware devices/components such as CPU voltage, temperatures and all fans' speeds.

GREEN POWER

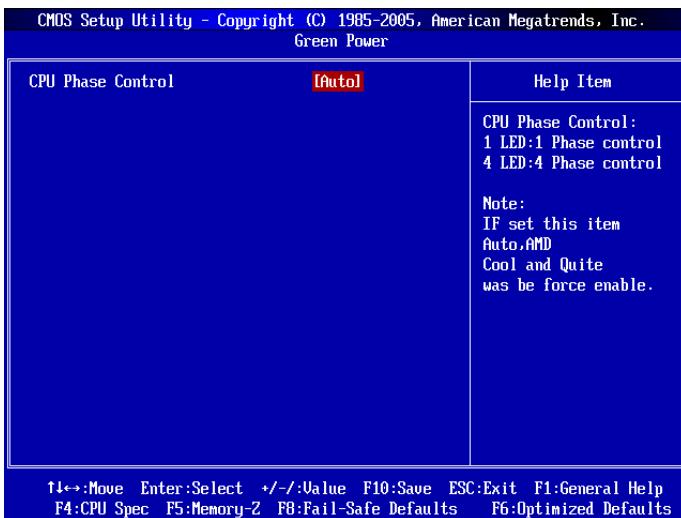

► CPU Phase Control

When it set to [Auto], the AMD Cool and Quite was be force enable.

BIOS SETTING PASSWORD

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
BIOS Setting Password		
Setting	Current Value	Help Item
Supervisor Password	Installed	
User Password	Not Installed	
UDisk-Key	Not Installed	
U-Key	[Disabled]	Install or Change the password.
Change Supervisor Password	[Press Enter]	
Change User Password	[Press Enter]	
User Access Level	[Full Access]	
Password Check	[BIOS]	
Save Supervisor Password to	[CMOS]	

↑↓:Move Enter:Select +/−:Value F10:Save ESC:Exit F1:General Help
 F4:CPU Spec F5:Memory-Z F8:Fail-Safe Defaults F6:Optimized Defaults

► U-Key

This item is used to enable/ disable USB driver device as a key.

► Make U-Key at

This item is used to specify the USB driver device as a key.

► Change Supervisor Password

This item is used to set the supervisor password.

► Change User Password

This item is used to set the user password.

Important

Type the password, up to eight characters in length, and press <Enter>. The password typed now will replace any previously set password. You will be prompted to confirm the password. Retype the password and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To clear a set password, just press <Enter> when you are prompted to enter the password. A message will show up confirming the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup without entering any password.

When a password has been set, you will be prompted to enter it every time you try to enter Setup/ System. This prevents an unauthorized person from changing any part of your system configuration.

About Supervisor Password & User Password:

Supervisor password: Can enter and change the settings of the setup menu.

User password: Can only enter but do not have the right to change the settings of the setup menu.

► **User Access Level**

This item is used to limit the user access level.

► **Passwrod Check**


This specifies the type of BIOS password protection that is implemented. Settings are described below:

Option	Description
[BIOS]	The password prompt appears only when end users try to run Setup.
[System]	A password prompt appears every time when the computer is powered on or when end users try to run Setup.

► **Save Supervisor Password to**

This item is used to assign a place to save the supervisor password.

CELL MENU

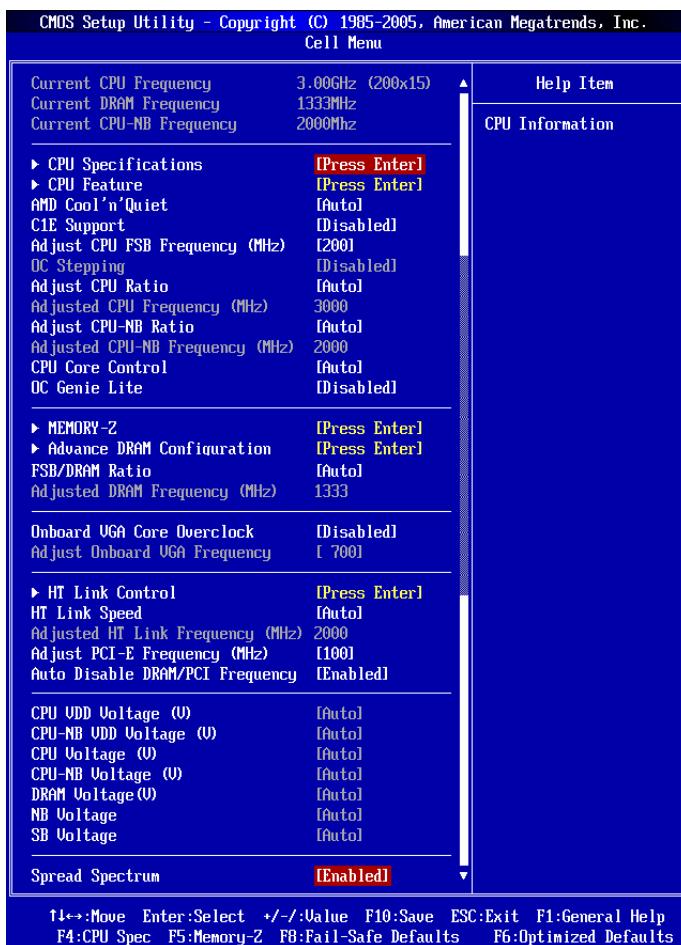

Important

Change these settings only if you are familiar with the chipset.

► Current CPU / DRAM / CPU-NB Frequency

These items show the current clocks of CPU, Memory and CPU-NB speed. Read-only.

BIOS Setup

► CPU Specifications

Press <Enter> to enter the sub-menu and the following screen appears. This submenu shows the information of installed CPU.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.	
CPU Specifications	
	Help Item
AMD Phenom™ II X4 925 Processor	
CPUID/MicroCode	0F42/086
CPU Frequency	2800MHz
CPU Ratio	14.0
CPU Stepping	C2
Cache L1	0KB
Cache L2	2040KB
Cache L3	6144KB
Core VID	1.3250 V
Current Core VID	1.304 V
Core Number	4
► CPU Technology Support	[Press Enter]

► CPU Technology Support

Press <Enter> to enter the sub-menu and the following screen appears. This submenu shows the technologies that the installed CPU supported.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.	
CPU Technology Support	
	Help Item
MMX™	YES
SSE Extensions	YES
SSE2 Extensions	YES
SSE3 Extensions	YES
SSE4 Extensions	N/A
SSE5 Extensions	N/A
Page Size Extension (PSE)	YES
Page Attribute Table (PAT)	YES
3D-NOW	YES
SUM	YES

► CPU Feature

Press <Enter> to enter the sub-menu and the following screen appears.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.	
CPU Feature	
	Help Item
AMD Cool'n'Quiet	[Enabled]
C1E Support	[Enabled]
SUM Support	[Enabled]
	Enabled/Disabled AMD Cool'n'Quiet function


► AMD Cool'n'Quiet

The Cool'n'Quiet technology can effectively and dynamically lower CPU speed and power consumption.

Important

To ensure that Cool'n'Quiet function is activated and will be working properly, it is required to double confirm that:

- Run BIOS Setup, and select Cell Menu. Under Cell Menu, find AMD Cool'n'Quiet, and set this item to "Enabled".
- Enter Windows, and select [Start]->[Settings]->[Control Panel]->[Power Options]. Enter Power Options Properties tag, and select Minimal Power Management under Power schemes.

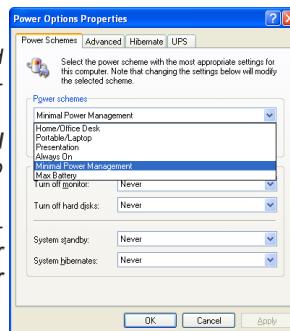

► C1E Support

To enable this item to read the CPU power consumption while idle. Not all processors support Enhanced Halt state (C1E).

► SVM Support

This item is used to enable/ disable SVM.

► Adjust CPU FSB Frequency (MHz)

This item allows you to select the CPU Front Side Bus clock frequency (in MHz).

► OC Stepping

This item will be enabled after you set the overclocking frequency in the "Adjust CPU FSB Frequency (MHz)". And the following items will appear. This items will help the system to overclock step by step after system booting up.

► Start OC Stepping From (MHz)

This item is used to set the initial FSB clock. The system will boot with the initial base clock, and start to overclock from initial FSB clock to set FSB clock that you set in "Adjust CPU FSB Frequency (MHz)" step by step.

► OC Step

This item is used to set how many steps for FSB colck overclocking.

► OC Step Count Timer

This item is used to set the buffer time for every step.

► Adjust CPU Ratio

This item is used to adjust CPU clock multiplier (ratio). It is available only when the processor supports this function.

► Adjusted CPU Frequency (MHz)

It shows the adjusted CPU frequency. Read-only.

► Adjust CPU-NB Ratio

This item is used to adjust CPU-NB ratio.

► Adjusted CPU-NB Frequency (MHz)

It shows the adjusted CPU NB frequency. Read-only.

BIOS Setup

► CPU Core Control

This item allows you to select the number of active processor cores.

► OC Genie Lite

This item is built for auto detecting the overclocking speeder of CPU and GPU for current setting. When it set to [with iGPU], the onboard integrated GPU frequency will set to 800 MHz automatically.

► Memory-Z

Press <Enter> to enter the sub-menu and the following screen appears.



► DIMM1~4 Memory SPD Information

Press <Enter> to enter the sub-menu. The sub-menu displays the information of installed memory.

► Advance DRAM Configuration

Press <Enter> to enter the sub-menu and the following screen appears.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
Advance DRAM Configuration		
DRAM Timing Mode	[Auto]	Help Item
DRAM Drive Strength	[Auto]	When you change this item to Auto, system will read the data inside SPD "Serial Presence Detect" and run suitable memory timing.
DRAM Advance Control	[Auto]	
1T/2T Memory Timing	[Auto]	
DCT Unganged Mode	[Enabled]	
Bank Interleaving	[Auto]	
Power Down Enable	[Disabled]	
MemClk Tristate C3/ATLVID	[Disabled]	

► DRAM Timing Mode

This field has the capacity to automatically detect all of the DRAM timing.

► DRAM Drive Strength

This item allows you to control the memory data bus' signal strength. Increasing the drive strength of the memory bus can increase stability during overclocking.

► DRAM Advance Control

This field has the capacity to automatically detect the advanced DRAM timing. If you set this field to [DCT 0], [DCT 1] or [Both], some fields will appear and selectable.

► 1T/2T Memory Timing

This item controls the SDRAM command rate. Select [1T] makes SDRAM signal controller to run at 1T (T=clock cycles) rate. Selecting [2T] makes SDRAM signal controller run at 2T rate.

► DCT Unganged Mode

This feature is used to Integrate two 64-bit DCTs into a 128-bit interface.

► **Bank Interleaving**

Bank Interleaving is an important parameter for improving overclocking capability of memory. It allows system to access multiple banks simultaneously.

► **Power Down Enable**

This is a memory power-saving technology. When the system does not access memory over a period of time, it will automatically reduce the memory power supply.

► **MemClk Tristate C3/ATLVID**

This setting allows you to enable/disable the MemClk Tristating during C3 and ATLVID.

► **FSB/DRAM Ratio**

This item allows you to select the ratio of FSB/ DRAM.

► **Adjusted DRAM Frequency (MHz)**

It shows the adjusted Memory frequency. Read-only.

► **Onboard VGA Core Overclock**

This item is used to enable/ disable the following item “Adjust Onboard VGA frequency”.

► **Adjust Onboard VGA Frequency**

This item will appear when Onboard VGA Core Overclock sets to [Enabled]. It allows you to adjust the onboard VGA clock.

► **HT Link Control**

Press <Enter> to enter the sub-menu and the following screen appears.



► **HT Incoming/ Outgoing Link Width**

These items allow you to set the Hyper-Transport Link width. Setting to [Auto], the system will detect the HT link width automatically.

► **HT Link Speed**

This item allows you to set the Hyper-Transport Link speed. Setting to [Auto], the system will detect the HT link speed automatically.

► **Adjusted HT Link Frequency (MHz)**

It shows the adjusted HT Link frequency. Read-only.

► **Adjust PCI-E Frequency (MHz)**

This field allows you to select the PCIE frequency (in MHz).

► **Auto Disable DRAM/PCI Frequency**

When set to [Enabled], the system will remove (turn off) clocks from empty DRAM/ PCI slots to minimize the electromagnetic interference (EMI).

- ▶ CPU VDD Voltage (V)/ CPU-NB VDD Voltage (V)/ CPU Voltage (V)/ CPU-NB Voltage (V)/ DRAM Voltage (V)/ NB Voltage/ SB Voltage

These items are used to adjust the voltage of CPU, Memory and chipset.


- ▶ **Spread Spectrum**

When the mainboard's clock generator pulses, the extreme values (spikes) of the pulses create EMI (Electromagnetic Interference). The Spread Spectrum function reduces the EMI generated by modulating the pulses so that the spikes of the pulses are reduced to flatter curves.

Important

- *If you do not have any EMI problem, leave the setting at [Disabled] for optimal system stability and performance. But if you are plagued by EMI, select the value of Spread Spectrum for EMI reduction.*
- *The greater the Spread Spectrum value is, the greater the EMI is reduced, and the system will become less stable. For the most suitable Spread Spectrum value, please consult your local EMI regulation.*
- *Remember to disable Spread Spectrum if you are overclocking because even a slight jitter can introduce a temporary boost in clock speed which may just cause your over-clocked processor to lock up.*

M-FLASH

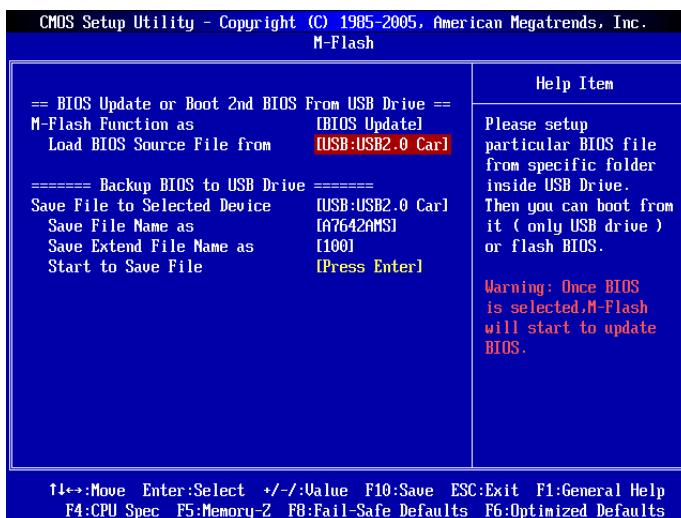

== BIOS Update or Boot 2nd BIOS From USB drive==

► M-Flash function as

M-Flash function allows you to flash BIOS from USB drive/ storage drive (FAT/ FAT32 format only), or allows the system to boot from the BIOS file inside USB drive (FAT/ FAT32 format only).


[Disabled] Disable M-Flash function.

[BIOS Update] Flash BIOS via the USB/ Storage drive directly. Update BIOS ROM chip data from selected file, which was be download from official website and must be saved in the root directory of the USB/ Storage drive. It only supports particular file name, which is the official BIOS file name from us.

[Boot] After allocated particular BIOS file, system will boot from this BIOS file which saved in the root directory of USB drive. System will skip MB ROM chip data and boot with this particular BIOS inside USB drive. Note: this option is for USB drive only.

Important

- Please refer to the block diagram below about the M-Flash function.

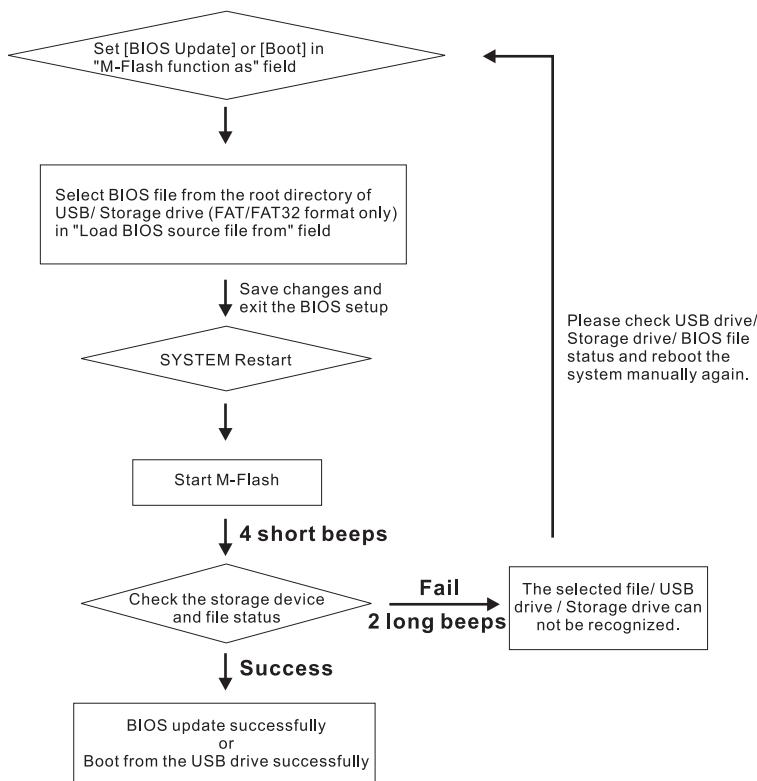

- Due to the special design of some graphics cards will cause dark screen during M-flash operation, and you may refer the beeps from the system to confirm the current M-flash process.

► Load BIOS source File from

When the M-Flash function as sets to [Boot] or [BIOS Update], this item is selectable. Use this item to select particular BIOS file from the USB/ Storage (FAT/32 format only) drive.

== Backup BIOS to USB Drive ==

The following fields are used to read the onboard BIOS ROM data, and save it to USB drive/ storage drive.

► Save File to Selected Device

Please setup a specific folder in specific USB drive/ storage drive to save BIOS file from BIOS ROM chip data. Note: it only supports FAT/ FAT32 file system drive.

► Save File Name as

Please setup a specific name for the BIOS file, which will be saved into the USB drive/ storage drive. Note: we suggest you using the official name as the default name.


► Save Extend File Name as

Please setup a specific extend name for the BIOS file, which will be saved into the USB drive/ storage drive. Note: we suggest you using [ROM] as default name.

► Start to Save File

Press "Enter" and select "OK" the system will start to save the onboard ROM chip data to the selected USB drive/ storage drive.

OVERCLOCKING PROFILE

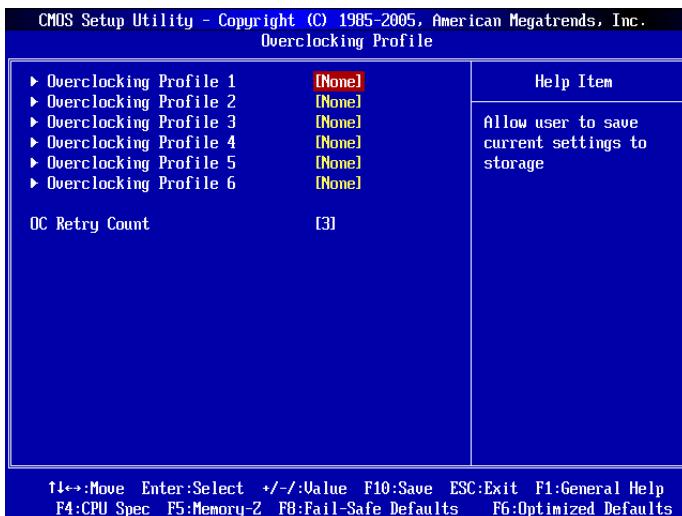

▶ Overclocking Profile 1/ 2/ 3/ 4/ 5/ 6

These items are used to save the correct settings to selected profile, and they are also used to load the settings from the selected profile.

▶ OC Retry Count

When the overclocking is failed, setting this item to [5,7] will allow system to reboot 5/ 7 times with the overclocking configuration. If the overclocking was failed every time, the system will restore the defaults.

LOAD FAIL-SAFE/ OPTIMIZED DEFAULTS

The two options on the main menu allow users to restore all of the BIOS settings to the default Fail-Safe or Optimized values. The Optimized Defaults are the default values set by the mainboard manufacturer specifically for optimal performance of the mainboard. The Fail-Safe Defaults are the default values set by the BIOS vendor for stable system performance.

When you select Load Fail-Safe Defaults, a message as below appears:



Selecting Ok and pressing Enter loads the BIOS default values for the most stable, minimal system performance.

When you select Load Optimized Defaults, a message as below appears:



Selecting Ok and pressing Enter loads the default factory settings for optimal system performance.

Appendix A

Realtek Audio

The Realtek audio provides 10-channel DAC that simultaneously supports 7.1 sound playback and 2 channels of independent stereo sound output (multiple streaming) through the Front-Out-Left and Front-Out-Right channels.

INSTALLING THE REALTEK HD AUDIO DRIVER

You need to install the HD audio driver for Realtek audio codec to function properly before you can get access to 2-, 4-, 6-, 8- channel or 7.1+2 channel audio operations. Follow the procedures described below to install the drivers for different operating systems.

Installation for Windows® XP

For Windows® XP, you must install Windows® XP Service Pack3 or later before installing the driver.

The following illustrations are based on Windows® XP environment and could look slightly different if you install the drivers in different operating systems.


1. Insert the application DVD into the DVD-ROM drive. The setup screen will automatically appear.
2. Click Realtek HD Audio Drivers button.




Important

The HD Audio Configuration software utility is under continuous update to enhance audio applications. Hence, the program screens shown here in this section may be slightly different from the latest software utility and shall be held for reference only.

3. Click Next to install the Realtek High Definition Audio Driver.


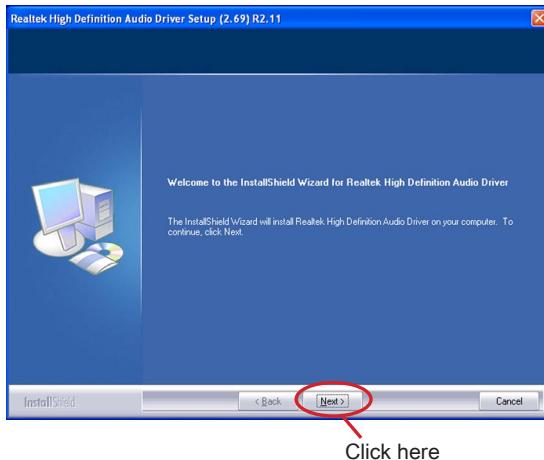


4. Click Finish to restart the system.

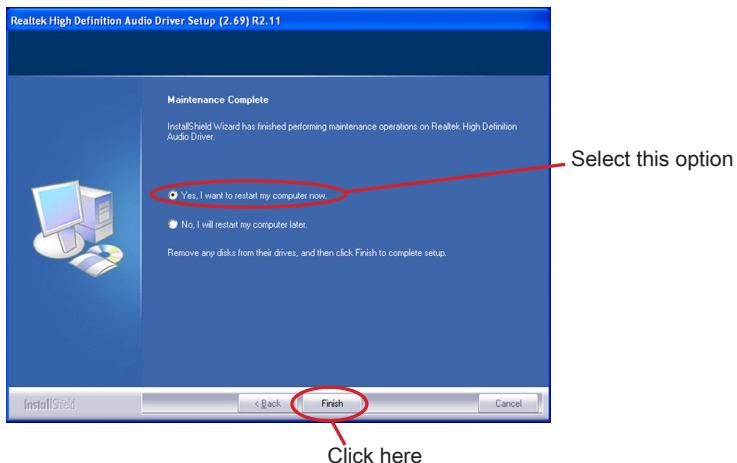

SOFTWARE CONFIGURATION

After installing the audio driver, you are able to use the 2-, 4-, 6- or 8- channel audio feature now. Click the audio icon  from the system tray at the lower-right corner of the screen to activate the HD Audio Configuration. It is also available to enable the audio driver by clicking the Realtek HD Audio Manager from the Control Panel.

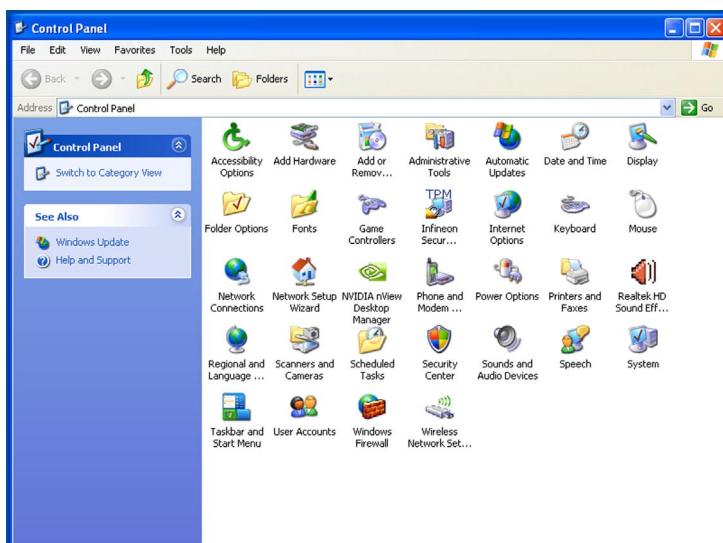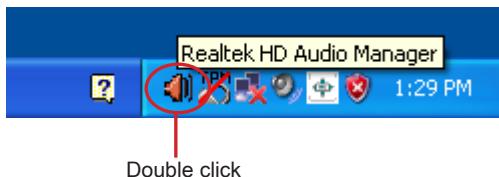

Sound Effect

Here you can select a sound effect you like from the **Environment** list.



■ Environment Simulation

You will be able to enjoy different sound experience by pulling down the arrow, totally 23 kinds of sound effect will be shown for selection. Realtek HD Audio Sound Manager also provides five popular settings “Stone Corridor”, “Bathroom”, “Sewer pipe”, “Arena” and “Auditorium” for quick enjoyment.


You may choose the provided sound effects, and the equalizer will adjust automatically. If you like, you may also load an equalizer setting or make a new equalizer setting to save as a new one by using the “Load EQ Setting” and “Save Preset” button, click “Reset EQ Setting” button to use the default value, or click “Delete EQ Setting” button to remove a preset EQ setting.

There are also other pre-set equalizer models for you to choose by clicking “Others” under the **Equalizer** part.

■ Equalizer Selection

Equalizer frees users from default settings; users may create their own preferred settings by utilizing this tool.

10 bands of equalizer, ranging from 100Hz to 16KHz.

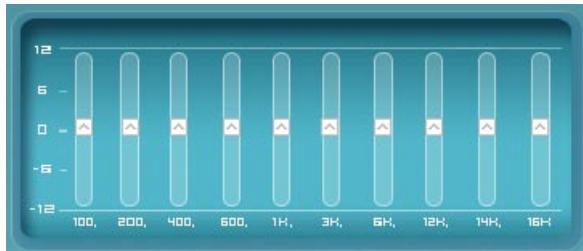

Save

The settings are saved permanently for future use

Reset

10 bands of equalizer would go back to the default setting

Enable / Disable

To disable, you can temporarily stop the sound effect without losing the settings

Load

Whenever you would like to use preload settings, simply click this, the whole list will be shown for your selection.

Delete

To delete the pre-saved settings which are created from previous steps.

Frequently Used Equalizer Setting

Realtek recognizes the needs that you might have. By leveraging our long experience at audio field, Realtek HD Audio Sound Manager provides you certain optimized equalizer settings that are frequently used for your quick enjoyment.


[How to Use It]

Other than the buttons “Pop”, “Live”, “Club” & “Rock” shown on the page, to pull down the arrow in “Others” you will find more optimized settings available to you.

■ Karaoke Mode

Karaoke mode brings Karaoke fun back home. Simply using the music you usually play, Karaoke mode can help you eliminate the vocal of the song or adjust the key to accommodate your range.

1. Vocal Cancellation: Single click on “Voice Cancellation” the vocal of the song would be eliminated, while the background music is still in place, and you can be that singer!
2. Key Adjustment: Using “Up / Down Arrow” to find a key which better fits your vocal range.

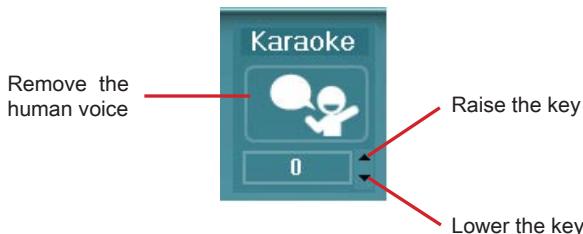

Mixer

In the Mixer part, you may adjust the volumes of the rear and front panels individually.

■ Adjust Volume

You can adjust the volume of the speakers that you plugged in front or rear panel by select the Realtek HD Audio rear output or Realtek HD Audio front output items.



Important

Before set up, please make sure the playback devices are well plugged in the jacks on the rear or front panel. The Realtek HD Audio front output item will appear after you plugging the speakers into the jacks on the front panel.

■ Multi-Stream Function

Realtek audio supports an outstanding feature called Multi-Stream, which means you may play different audio sources simultaneously and let them output respectively from the indicated real panel or front panel. This feature is very helpful when 2 people are using the same computer together for different purposes.

Click the  button and the Mixer ToolBox menu will appear. Then check the Enable playback multi-streaming and click OK to save the setup.

Important

You have to plug audio device into the jacks on the rear and front panel first before enable the multi-stream function.



When you are playing the first audio source (for example: use Windows Media Player to play DVD/VCD), the output will be played from the rear panel, which is the default setting.

Then you must to select the **Realtek HD Audio 2nd output** from the scroll list first, and use a different program to play the second audio source (for example: use Winamp to play MP3 files). You will find that the second audio source (MP3 music) will come out from the Line-Out audio jack of Front Panel.



■ Playback control



Mute

You may choose to mute single or multiple volume controls or to completely mute sound output.

Tool

- Show the following volume controls

This is to let you freely decide which volume control items to be displayed.

- Advanced controls

- Enable playback multi-streaming

With this function, you will be able to have an audio chat with your friends via headphone (stream 1 from front panel) while still has music (stream 2 from back panel) in play. At any given period, you can have maximum 2 streams operating simultaneously.



■ Recording control



Mute

You may choose to mute single or multiple volume controls or to completely mute sound input.

Tool

- Show the following volume controls

This is to let you freely decide which volume control items to be displayed.

- Enable recording multi-streaming



Important

Realtek audio allows you to record the CD, Line, Mic and Stereo Mix channels simultaneously, frees you from mixing efforts. At any given period, you may choose 1 of the following 4 channels to record.

Audio I/O

In this tab, you can easily configure your multi-channel audio function and speakers. You can choose a desired multi-channel operation here.

- Headphone for the common headphone
- 2CH Speaker for Stereo-Speaker Output
- 4CH Speaker for 4-Speaker Output
- 6CH Speaker for 5.1-Speaker Output
- 8CH Speaker for 7.1-Speaker Output



■ Speaker Configuration:

1. Plug the speakers in the corresponding jack.
2. Dialogue “connected device” will pop up for your selection. Please select the device you have plugged in.
 - If the device is being plugged into the correct jack, you will be able to find the icon beside the jack changed to the one that is same as your device.
 - If not correct, Realtek HD Audio Manager will guide you to plug the device into the correct jack.

■ Connector Settings

Click  to access connector settings.



Disable front panel jack detection (optional)

Jack detection function only works with HD audio front panel. Please check if front jacks on your system are so-called AC'97 jacks. If so, please check this item to disable front panel jack detection.


Mute rear panel output when front headphone plugged in.

Enable auto popup dialogue, when device has been plugged in

Once this item checked, the dialog "Connected device" would automatically pop up when device plugged in.

■ S/PDIF

Short for Sony/Philips Digital Interface, a standard audio file transfer format. S/PDIF allows the transfer of digital audio signals from one device to another without having to be converted first to an analog format. Maintaining the viability of a digital signal prevents the quality of the signal from degrading when it is converted to analog.

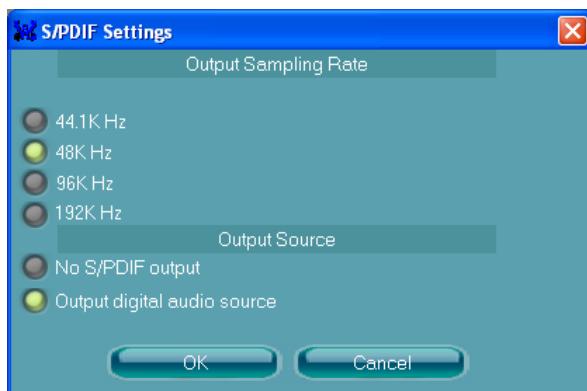

Output Sampling Rate

44.1KHz: This is recommended while playing CD.

48KHz: This is recommended while playing DVD or Dolby.

96KHz: This is recommended while playing DVD-Audio.

192KHz: This is recommended while playing High quality Audio.


Output Source

Output digital audio source: The digital audio format (such as .wav, .mp3, .midi etc) will come out through S/PDIF-Out.

S/PDIF-in to S/PDIF -out pass through mode: The data from S/PDIF-In can be real-time played from S/PDIF-Out.

■ Test Speakers

You can select the speaker by clicking it to test its functionality. The one you select will light up and make testing sound. If any speaker fails to make sound, then check whether the cable is inserted firmly to the connector or replace the bad speakers with good ones. Or you may click the **auto test**  button to test the sounds of each speaker automatically.

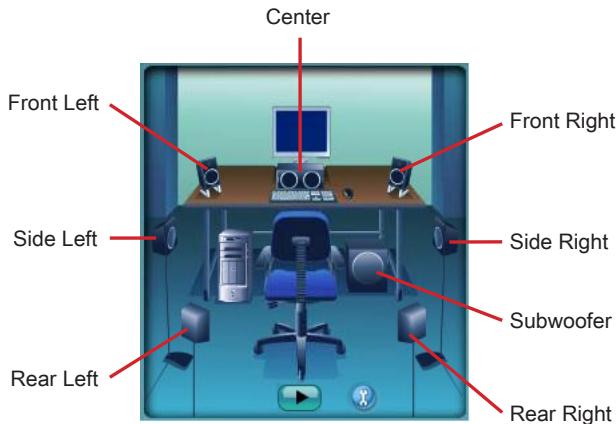

Microphone

In this tab you may set the function of the microphone. Select the **Noise Suppression** to remove the possible noise during recording, or select **Acoustic Echo Cancellation** to cancel the acoustic echo during recording.

Acoustic Echo Cancellation prevents playback sound from being recorded by microphone together with your sound. For example, you might have chance to use VOIP function through Internet with your friends. The voice of your friend will come out from speakers (playback). However, the voice of your friend might also be recorded into your microphone then go back to your friend through Internet. In that case, your friend will hear his/her own voice again. With AEC (Acoustic Echo Cancellation) enabled at your side, your friend can enjoy the benefit with less echo.



3D Audio Demo

In this tab you may adjust your 3D positional audio before playing 3D audio applications like gaming. You may also select different environment to choose the most suitable environment you like.



Information

In this tab it provides some information about this HD Audio Configuration utility, including Audio Driver Version, DirectX Version, Audio Controller & Audio Codec. You may also select the language of this utility by choosing from the **Language** list.



Also there is a selection **Show icon in system tray**. Switch it on and an icon  will show in the system tray. Right-click on the icon and the **Audio Accessories** dialogue box will appear which provides several multimedia features for you to take advantage of.




HARDWARE SETUP

Connecting the Speakers


When you have set the Multi-Channel Audio Function mode properly in the software utility, connect your speakers to the correct phone jacks in accordance with the setting in software utility.

- 2-Channel Mode for Stereo-Speaker Output

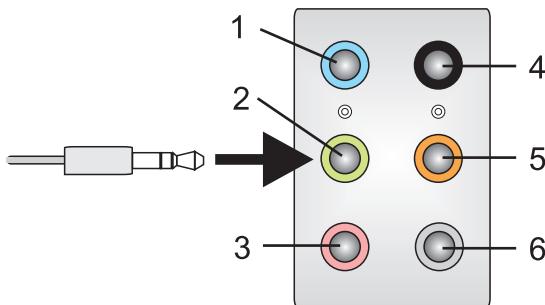


- 1] Line In
- 2] Line Out (Front channels)
- 3] MIC
- 4] No function
- 5] No function
- 6] No function

■ 4-Channel Mode for Stereo-Speaker Output

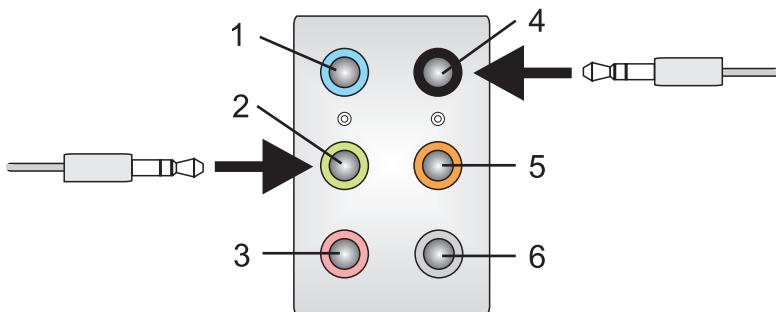


- 1] Line In
- 2] Line Out (Front channels)
- 3] MIC
- 4] Line Out (Rear channels)
- 5] No function
- 6] No function

- 6-Channel Mode for Stereo-Speaker Output

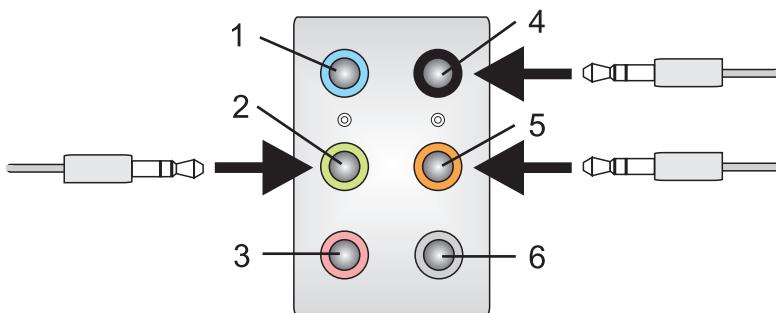

- 1] Line In
- 2] Line Out (Front channels)
- 3] MIC
- 4] Line Out (Rear channels)
- 5] Line Out (Center and Subwoofer channel)
- 6] No function

■ 8-Channel Mode for Stereo-Speaker Output

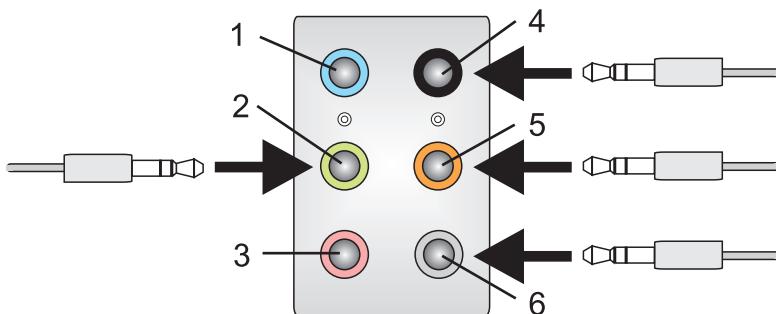

- 1] Line In
- 2] Line Out (Front channels)
- 3] MIC
- 4] Line Out (Rear channels)
- 5] Line Out (Center and Subwoofer channels)
- 6] Line Out (Side channels)

Important

To enable 7.1 channel audio-out function on Windows Vista operating system, you have to install the Realtek Audio Driver. Or, the mainboard will support 5.1 channel audio-out only.

Appendix B

AMD RAID

The integrate one SATA host controller separately, and support RAID function for performance and reliability.

SB850 SATA RAID (SATA1~5) provides support for RAID 0 (Striping), RAID 1 (Mirroring), RAID 10 (Striping & Mirroring) & RAID 5 (striping with parity). RAID 0 greatly improves hard disk I/O performance by concurrently striping data across multiple drives. RAID 1 makes sure data is not lost if a drive fails as data is simultaneously written to two drives. Drives configured for RAID Striping are said to form a RAID 0 set, while drives configured for RAID Mirroring are said to form a RAID 1 set. RAID 10 is implemented as a mirrored array whose segments are RAID 0 arrays. RAID 10 has same fault tolerance as mirroring and reduces overhead by striping. It needs at least four drives to form a RAID 10. RAID 5 defines techniques for parity data.

RAID CONFIGURATION


Creating and deleting RAID set and performing other RAID setting up operations are done in the RAID BIOS. During bootup, a screen similar to the one below will appear for about few seconds. Press <Ctrl-F> to enter FastBuild utility.



Important

Be sure to enable the RAID function for SATA device in BIOS before configuring the Fastbuild Utility.

The FastBuild menu screen will appear. The Main Menu is used to choose the operation to be performed.

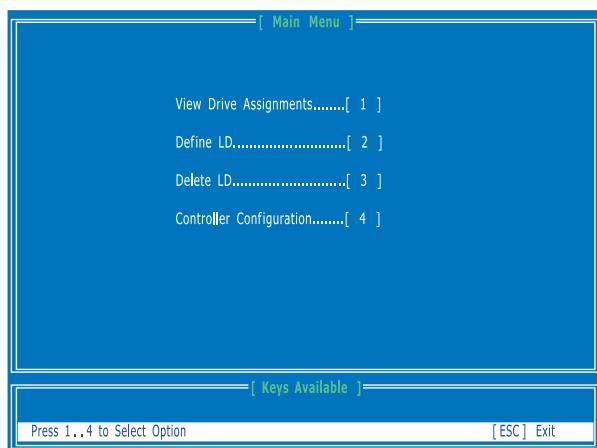

View Drives Assignments

This window displays the model number, capacities and assignment of the drives physically attached to the SATA host adapter.


[View Drives Assignments]			
Channel:ID	Drive Model	Capacity (MB)	Assignment
1 : Mas	WDC WD800JD-00HKA0	80027	
	Extent 1	79960	Free
2 : Mas	WDC WD800JD-00HKA0	80027	
	Extent 1	79960	Free

[Keys Available]		
[↑] Up	[↓] Down	[ESC] Exit


Define LD (Creating RAID)

The selection of the RAID configuration should be based upon factors including performance, data security, and the number of drives available. It is best to carefully consider the long-term role of the system and plan the data storage strategy. RAID sets can be created either automatically, or to allow the greatest flexibility, manually.

1. Press 2 on the Main Menu screen to enter the Define LD Menu.
2. Press the arrow keys to highlight an logical drive number you want to define and press Enter to select it.

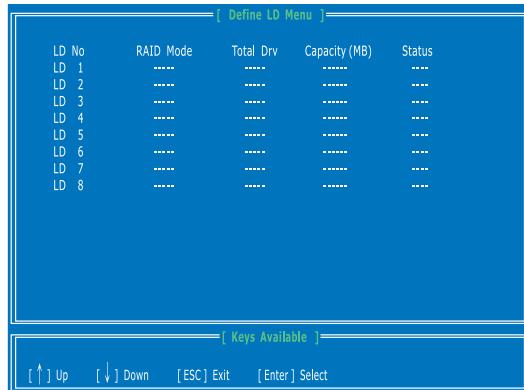


3. On the next screen, use the space key to choose a RAID mode (RAID 0/ 1/ 10/ 5) and use the arrow key to move to the “Drives Assignments” window.

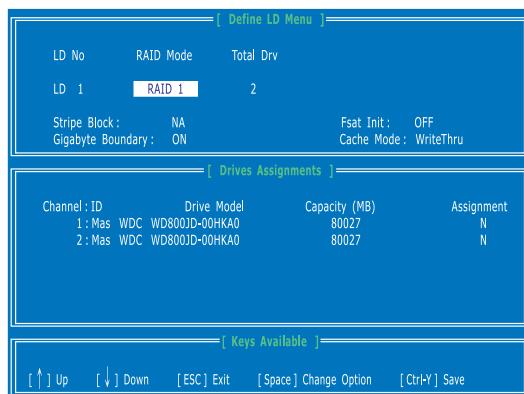

- Initialize logical drive, zero the disk drives. RAID 1 or 10 only.
- Stripe Block Size, the default 64KB is best for most applications. RAID 0 or 10 only.
- Gigabyte Boundary, allows use of slightly smaller replacement drives.
- Cache Mode, WriteThru or WriteBack.

4. On the Drives Assignments window, use the arrow key to choose the hard drives which you want to make part of the LD, use the space key to change the assignment to "Y". Then press [Ctrl+Y] to save the configuration.

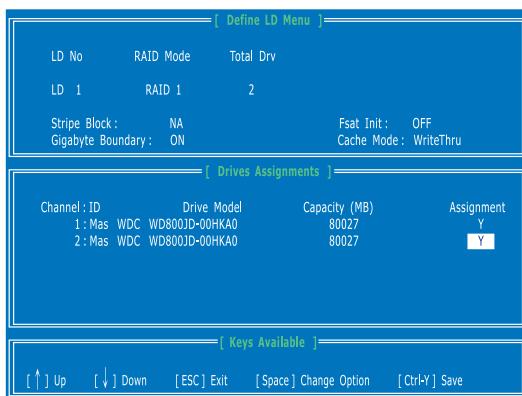

5. A message will show up on the bottom, press any key to save the configuration or press [Ctrl-Y] to allocate the RAID capacity manually.

Press Ctrl-Y to Modify Array Capacity or press any other key to use maximum capacity ...

Important

- The default capacity is the full capacity of the selected hard drives.
- If you allocate the first LD capacity manually, you can create second LD with remaining capacity of the selected hard drives.

AMD RAID

6. The LD creation is done, the screen shows the LD information as below. Press ESC key to the main screen.

[Define LD Menu]				
LD No	RAID Mode	Total Drv	Capacity (MB)	Status
LD 1	RAID 1	2	79000	Functional
LD 2	---	---	---	---
LD 3	---	---	---	---
LD 4	---	---	---	---
LD 5	---	---	---	---
LD 6	---	---	---	---
LD 7	---	---	---	---
LD 8	---	---	---	---


[Keys Available]				
[↑] Up	[↓] Down	[ESC] Exit	[Enter] Select	

7. Press ESC key to exit the utility, a message "System is going to REBOOT! Are You Sure?" will display, answer "Y" to exit it and the system will reboot.


[Main Menu]	
View Drive Assignments.....	[1]
Define LD.....	[2]
Delete LD.....	[3]
Con	System is going to REBOOT! Are You Sure? Y - Reboot / Any Key - Back
[Keys Available]	
Press 1..4 to Select Option	[ESC] Exit

Delete LD (Deleting RAID)

1. Select “Delete LD” on the main screen.
2. Choose a LD No. you want to delete and press “Del” or “Alt+D” delete the RAID set.

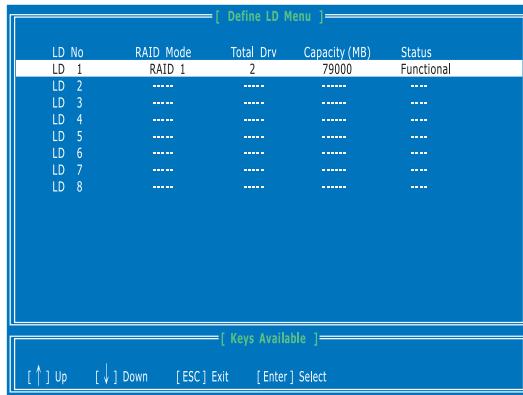

3. On the next screen, a message will display to inform you, press “Ctrl+Y” to delete the RAID set or other key to abort it. Press “Ctrl+Y” to complete the deletion.

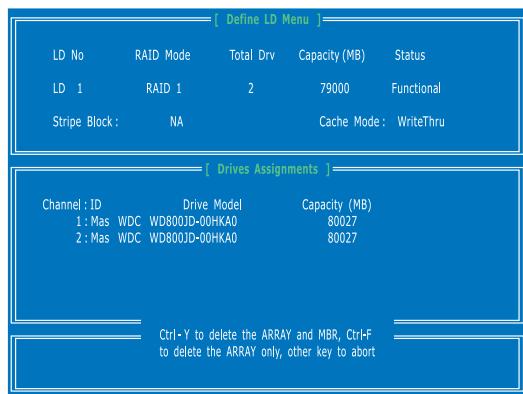

Installing the RAID Driver (for bootable RAID Array)

1. After you complete the RAID BIOS setup, boot from the Windows CD, and the Windows Setup program starts.
2. Press F6 and wait for the Windows Setup screen to appear.
3. Insert the floppy that contains the RAID driver, press the "S" key to select "Specify Additional Device".

Note: for Windows Vista, you can copy the files to a medium (floppy/ CD/ DVD or USB)

Important

Please follow the instruction below to make a SATA RAID driver for yourself.

- *Insert the MSI DVD into the DVD-ROM drive.*
- *Click the "Browse CD" on the Setup screen.*
- *Copy all the contents in the : \\ChipSet\\AMD\\Packages\\Drivers\\SBDrv\\SB8xx\\RAID\\ (and then, please select a folder which was classified according to OS.)*
- *The driver disk for RAID controller is done.*

4. When prompted, insert the floppy disk and press Enter.
For Windows Vista:
During the Operating system installation, after selecting the location to install Vista click on "Load Driver" button to load RAID drive.
5. You should be shown a list of available SCSI Adapters.
6. Select the compatible RAID controller for 32-bit/ 64-bit version system and then press ENTER.
7. The next screen should confirm that you have selected the RAID controller. Press ENTER again to continue.
8. You have successfully installed the RAID driver, and Windows setup should continue.
9. Leave the disk in the floppy drive until the system reboots itself. Windows setup will need to copy the files from the floppy again after the RAID volume is formatted, and Windows setup starts copying files.

Installing the RAID Driver Under Windows (for Non-bootable RAID Array)

1. Insert the MSI DVD into the DVD-ROM drive.
2. The DVD will auto-run and the setup screen will appear.
3. Under the Driver tab, click on AMD chipset drivers by your need. The AMD chipset drivers includes RAID Driver.
4. The driver will be automatically installed.

Appendix C

Control Center


Control Center, the most useful and powerful utility that MSI has spent much research and efforts to develop, helps users to monitor or configure the hardware status of MSI Mainboard in windows, such as CPU clock, voltage, fan speed and temperature.

Before you install the Control Center, please make sure the system has meet the following requirements:


1. 256MB system memory.
2. DVD-ROM drive for software installation.
3. Operation system: Windows XP or up.

ACTIVATING CONTROL CENTER

Once you have your Control Center installed (locate the setup source file in the setup DVD accompanying with your mainboard, path: **Utility** → **MSI Utility** → **Control Center**), it will have a short cut icon on the desktop, and a short cut path in your “Start-up” menu. You may double-click on each icon to activate Control Center.

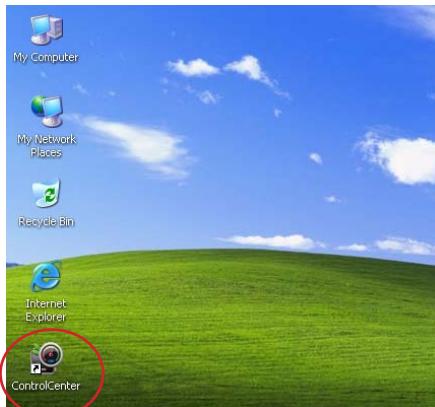

short-cut icon on the desktop

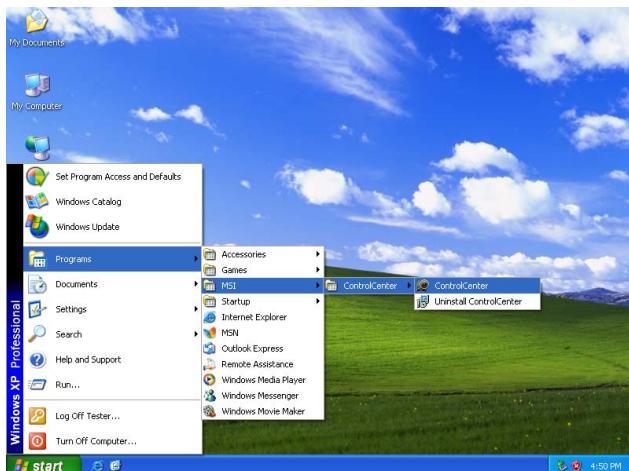


short-cut path in the start-up menu
(path: Start-->Programs-->MSI-->Control Center-->Control Center)

SYSTEM INFORMATION

There are three options for you to select under the System Information item, you can read the mainboard/ CPU/ memory information.

Mainboard

Click Mainboard to read the information of mainboard, mainboard BIOS, audio, installed graphics card and LAN.

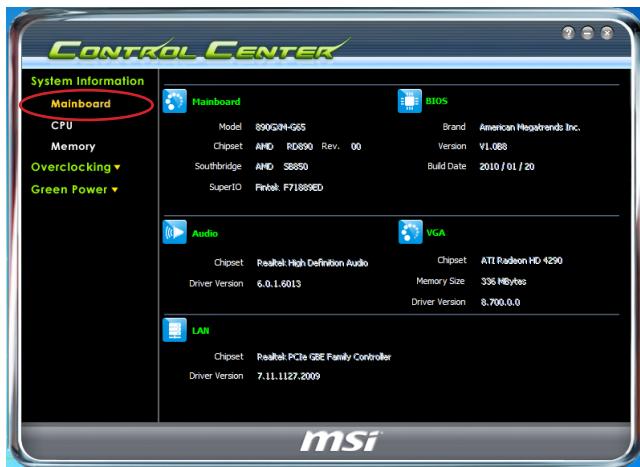

Important

The pictures in this appendix are for reference only and may vary from the product you purchased. Please refer to the appearance of your system for detailed information.

The items under Control Center described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest version and should be held for reference only.

Control Center


CPU

Click CPU to read the information of processor, frequency, and cache.



Memory

Click Memory to read the information of installed memory. You can select a DIMM slot you want to read by clicking arrow button.

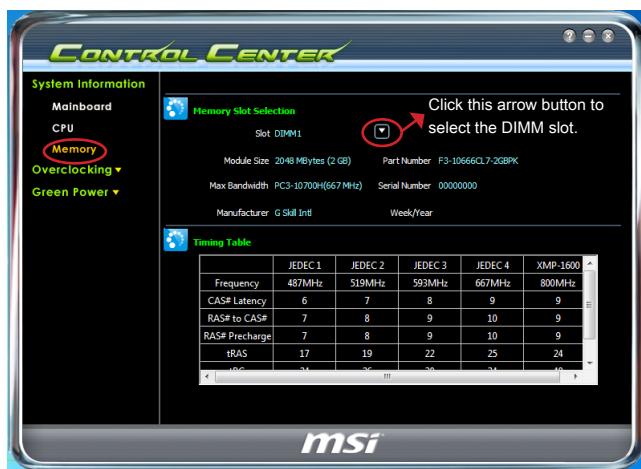


OVERCLOCKING

Under Overclocking function item, you can select Cooling, Default, Cinema, and Game mode to reach the most suitable overclocking effect. That is to say, you can set an overclocking environment in advance, which avoids unnecessary risk and saves the time for doing manual adjustment and efforts on testing and experimenting.

Basic

In the basic, it provides one default mode (Default) and three common modes (Cooling/ Cinema/Game) menus for different scenario. You can adjust the CPU base clock, and its related voltages like CPU Vcore, CPU VTT etc.; in addition, you are able to adjust memory voltage and even memory reference voltages.

The fan speed is also adjustable to meet your power saving or better performance demand. You can do all the above mentioned adjustments under each mode, after that, please click the “Apply” button to execute the configured setting without rebooting the system; or you can click the “Save” button to save the adjustments for future use.

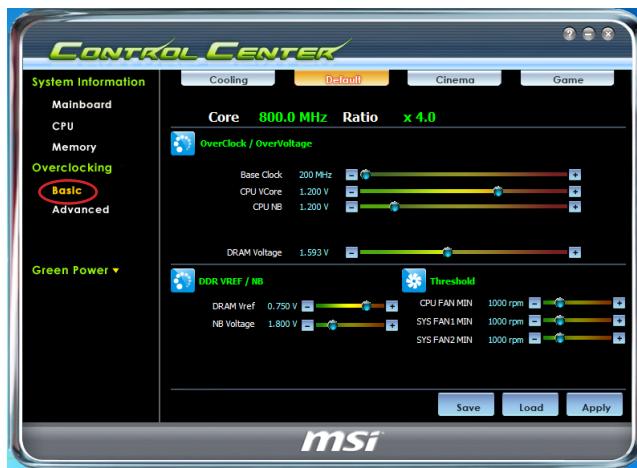

Important

Every time you turn-off the system, the settings will be restored to the factory default. If you want to use the saved settings, you have to load it every time by clicking the “Load” button.

Advanced

In Advanced menu, it shows you the advanced DRAM configuration and advanced DRAM timing information, such as memory, CAS latency, under "Auto" mode. If you click the "Auto" tab, it will become "Manual" mode for you to adjust the advanced DRAM configuration to reach the ultimate overclocking result.



Important


Every time you turn-off the system, the settings will be restored to the factory default. If you want to use the saved settings, you have to load it every time by clicking the "Load" button.

GREEN POWER

Green Power is an energy saving technology that control power supply by auto phase switching (known as Active Phase Switching) for CPU and components. Besides, Green Power can automatically manage your power configuration, resulting in more efficient power usage and reducing acoustic noise.


Basic

Under the Basic item, you can select Disable Green Power, Optimized and Max Power Saving mode to experience different power-saving performance. You can close green power function to have fully loaded power supply; choose Optimized mode for general use, and you can also maximized power saving under Max Power Saving mode. The detailed settings to these three modes are not adjustable.

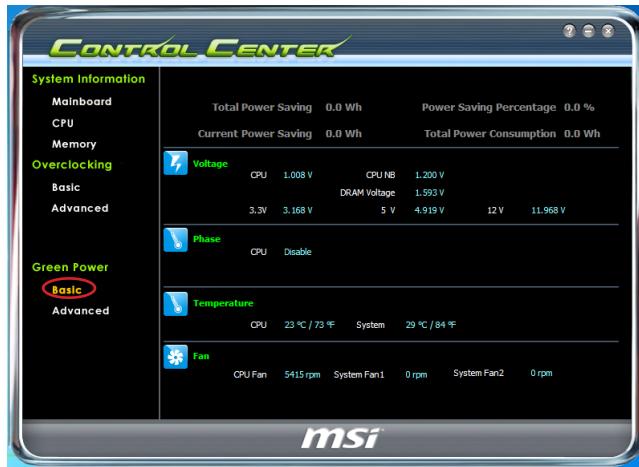

Advanced

Under the Advanced menu, you can adjust the power phase and fan speed.

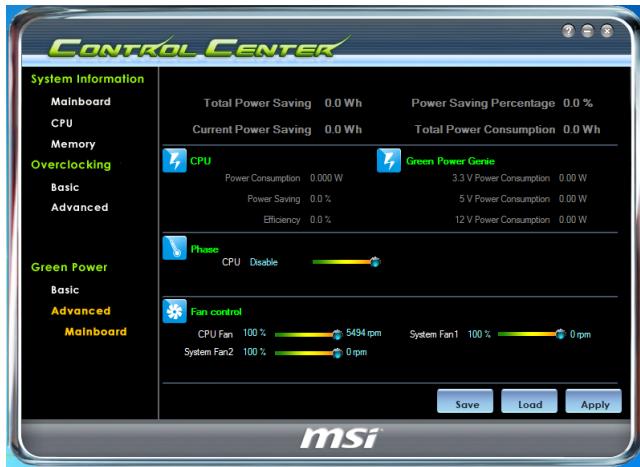

► Mainboard

Under the Mainboard item, it provides you two power saving modes, Optimize and Max Power Saving, to adjust by shifting the gear. You can change the CPU power phases, the CPU fan and system fan speed as well to get a good balance between performance and power saving. And then, you can click the “Apply” button to execute the configured setting or click the “Save” button to save the adjustment for future use.

Important

Every time you turn-off the system, the settings will be restored to the factory default. If you want to use the saved settings, you have to load it every time by clicking the “Load” button.