

Microwave Oven

INSTRUCTION MANUAL

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:**
 - (1) **DOOR (bent)**
 - (2) **HINGES AND LATCHES (broken or loosened)**
 - (3) **DOOR SEALS AND SEALING SURFACE**
- (d) **The oven should not be adjusted or repaired by anyone except properly qualified service personnel.**

Specifications

| | |
|--------------------------------|---------------------------------------|
| Model: | EM131A2SV-E |
| Rated Voltage: | 120V~ 60Hz |
| Rated Input Power(Microwave): | 1550W |
| Rated Output Power(Microwave): | 1100W |
| Oven Capacity: | 1.2 Cu.ft. |
| Turntable Diameter: | Ø 12.4 inch |
| External Dimensions: | 20.5X15.9X12.8 inch (520X403X325.7mm) |
| Net Weight: | Approx. 34.2 Lbs(15.5kg) |

IMPORTANT SAFETY INSTRUCTIONS

WARNING

1. Read all instructions before using the appliance.
2. Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**" found on page 2.
3. As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.
4. To reduce the risk of fire in the oven cavity:
 - i). Do not overcook food. Carefully attend the appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - ii). Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
 - iii). If materials inside the oven ignite, keep the oven door closed. Turn the oven off, and unplug the appliance. Disconnect the power cord, shut off power at the fuse or circuit breaker panel.
 - iv). Do not use the oven cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
5. This oven must be grounded. Connect only to properly grounded outlet. See "**GROUNDING INSTRUCTIONS**" found on page 4.
6. Install or locate this oven only in accordance with the installation instructions provided.
7. Some products such as whole eggs and sealed containers-for example, closed glass jars-are able to explode and should not be heated in the oven.
8. Use this appliance only for its intended uses as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat or cook or dry food. It is not designed for industrial or laboratory use.
9. As with any appliance, close supervision is necessary when used by children.
10. Do not operate this oven if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped.
11. This appliance should be serviced only by qualified service technicians. Contact the nearest authorized service facility for examination, repair or adjustment.
12. Do not cover or block any openings on the oven.
13. Do not store or use this appliance outdoors.
14. Do not use this oven near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
15. Do not immerse cord or plug in water.
16. Keep cord away from heated surfaces.
17. Do not let cord hang over edge of table or counter.
18. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.

19. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**
- i) Do not overheat the liquid.
 - ii) Stir the liquid both before and halfway through heating it.
 - iii) Do not use straight-sided containers with narrow necks.
 - iv) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
 - v) Use extreme care when inserting a spoon or other utensil into the container.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

DANGER

Electric Shock Hazard


Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

Three-pronged (grounding) plug



This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord; and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Radio Interference

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - 1) Clean door and sealing surface of the oven
 - 2) Reorient the receiving antenna of radio or television.
 - 3) Relocate the microwave oven with respect to the receiver.
 - 4) Move the microwave oven away from the receiver.
 - 5) Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

UTENSILS

CAUTION

Personal Injury Hazard

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. **Do not exceed 1 minute cooking time.**

Materials you can use in microwave oven

| Utensils | Remarks |
|-----------------------|--|
| Aluminum foil | Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls. |
| Browning dish | Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. |
| Dinnerware | Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. |
| Glass jars | Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. |
| Glassware | Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. |
| Oven cooking bags | Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. |
| Paper plates and cups | Use for short-term cooking/warming only. Do not leave oven unattended while cooking. |
| Paper towels | Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. |
| Parchment paper | Use as a cover to prevent splattering or a wrap for steaming. |
| Plastic | Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. |
| Plastic wrap | Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. |
| Thermometers | Microwave-safe only (meat and candy thermometers). |
| Wax paper | Use as a cover to prevent splattering and retain moisture. |

Materials to be avoided in microwave oven

| Utensils | Remarks |
|---------------------------------|--|
| Aluminum tray | May cause arcing. Transfer food into microwave-safe dish. |
| Food carton with metal handle | May cause arcing. Transfer food into microwave-safe dish. |
| Metal or metal-trimmed utensils | Metal shields the food from microwave energy. Metal trim may cause arcing. |
| Metal twist ties | May cause arcing and could cause a fire in the oven. |
| Paper bags | May cause a fire in the oven. |
| Plastic foam | Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. |
| Wood | Wood will dry out when used in the microwave oven and may split or crack. |


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

| | |
|-------------------------|---|
| Glass tray | 1 |
| Turntable ring assembly | 1 |
| Instruction Manual | 1 |

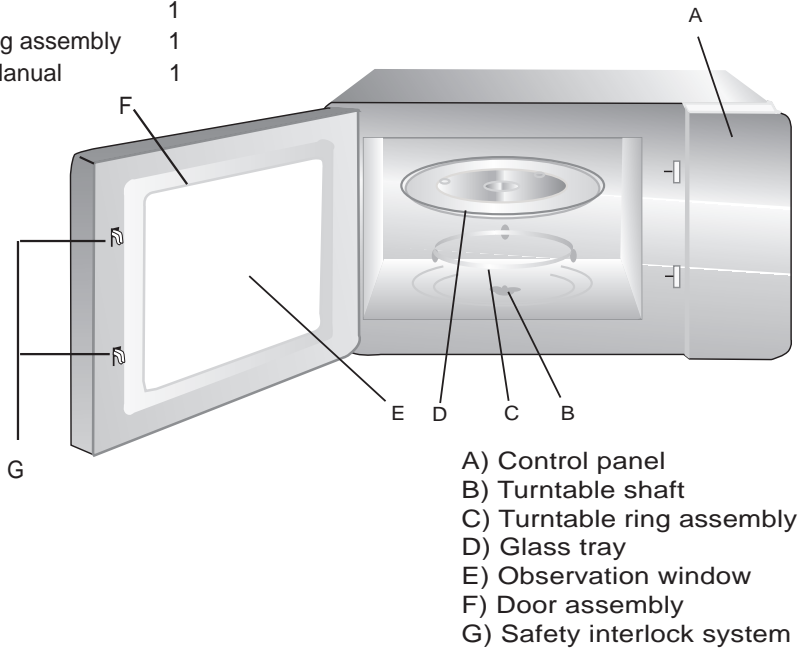

Turntable Installation

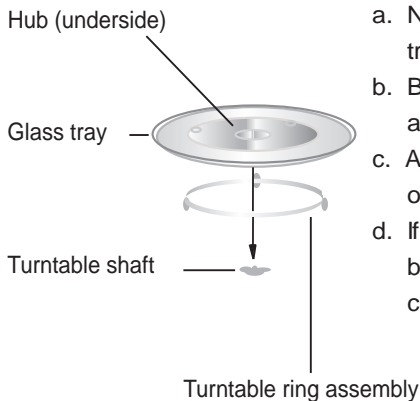

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. **Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.**

Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

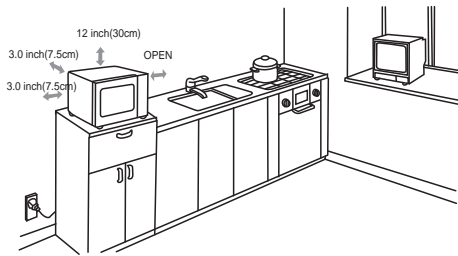

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.


- (1) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (2) Do not remove the legs from the bottom of the oven.

- (3) Blocking the intake and/or outlet openings can damage the oven.
- (4) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

OPERATION

Control Panel and Features

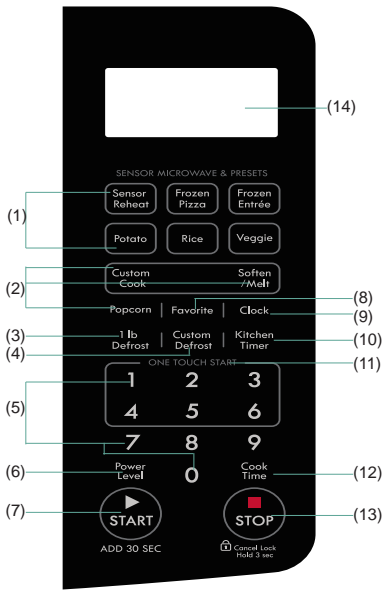

- (1) **Sensor Menu**(Frozen Pizza, Baked Potato, Veggie, Rice, Frozen Entree, Sensor Reheat)
- (2) **Presets Menu**(Custom Cook, Soften/Melt, Popcorn)
- (3) **1lb Defrost**
- (4) **Custom Defrost**
- (5) **Number Buttons**
- (6) **Power Level**
- (7) **START ADD30SEC.**
- (8) **Favorite**
- (9) **Clock**
- (10) **Kitchen Timer**
- (11) **One Touch Start button(1-6)**
- (12) **Cook time**
- (13) **STOP Cancel Lock:** Before cooking starts, press to clear all previous settings. During cooking, press once to stop oven; press twice to stop oven and clear all settings.
- (14) **Display Window**

OPERATION

1. Power Level

Ten power levels are available.

In microwave setting or cooking, press **POWER LEVEL** and "PL10" flash. Now you can press the numer button to adjust the power level.

| | | | | | | | | | | |
|--------------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| numer button | 0 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| Level | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| Power | 100% | 90% | 80% | 70% | 60% | 50% | 40% | 30% | 20% | 10% |
| Display | PL10 | PL9 | PL8 | PL7 | PL6 | PL5 | PL4 | PL3 | PL2 | PL1 |

2. Clock Setting

When the microwave oven is plugged into a outlet, the oven will display " 0:00 "

- (1) Press **CLOCK**, LED will display 00:00, clock indicator will be lighted. The clock figure will flash; ":" and "0" will be lighted.
- (2) Press the number pads and enter the correct time. For example, time is 10:12 now, please press "1,0,1,2" in turn.
- (3) Press **CLOCK** to finish clock setting, and the clock indicator will go out. ":" will flash and the clock will be lighted.
- (5) If the numbers input are not within the range of 1:00--12:59, the setting will be invalid until valid numbers are input.

Note: In the process of clock setting, if the **STOP Cancel Lock** is pressed or if there is no operation within 1 minute, the oven will go back to the former state automatically.

3. Kitchen Timer

- (1) Press **KITCHEN TIMER**, LED will display 00:00, timer indicator will be lighted.
- (2) Press the number pads and enter the correct timer.(The maximum time is 99 minutes and 99 seconds)
- (3) Press **START ADD30SEC.** to confirm setting, timer indicator will flash, timer counts down.
- (4) When time down to 0, timer indicator will go out, and buzzer will ring 5 times.

If the clock be set (12-hour system), LED will display the current time.

Note: 1)The kitchen time is different from 12-hour system, Kitchen Timer is a timer.

- 2)During timer counting down, any program cannot be set. Time cannot be increased by pressing **START ADD30SEC.**
- 3)Press **STOP Cancel Lock** can cancel the timer.

4. Microwave cook

- (1) Press **COOK TIME**, LED will display "00:00", cook indicator will be lighted.
- (2) Press number keys to enter the cooking time; the maximum cooking time is 99 minutes and 99 seconds.

(3) Press **POWER LEVEL** , LED will display "PL10". The default power is 100% power. Now you can press number keys to adjust the power level.

(4) Press **START ADD30SEC.** to start cooking.

Example: to cook the food with 50% microwave power for 15 minutes.

a. Press **COOK TIME** , "00:00" displays.

b. Press "1", "5", "0", "0" in order to enter the cooking time.

c. Press **POWER LEVEL**, then press "5" to select 50% microwave power.

d. Press **START ADD30SEC.** to start cooking.

Note: During the microwave setting, if the **STOP Cancel Lock** button is pressed or no operation within 1 minute, the oven will go out to the setting state.

5. One Touch Start

(1) In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press **START ADD30SEC.** to increase the cooking time up to 99 minutes and 99 seconds.

(2) In waiting state, instant cooking at 100% power level with 30 seconds' cooking time can be started by pressing **START ADD30SEC.** . Each press on the same button will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.

Note: 1) In the cooking of microwave or time defrost , press **START ADD30SEC.** button to increase cooking time by 30 seconds.

2) In the cooking of auto menu, sensor menu and weight defrost and timer counting down, time can be added.

6. Weight Defrost Function

(1) Press **CUSTOM DEFROST** , LED will display "dEF1", "DEF." indicator will be lighted.

Press the same button repeatedly, "dEF2", "dEF3", "dEF1" will display in order.

| LED display | dEF1 | dEF2 | dEF3 |
|-------------|------|---------|------|
| Food | Meat | Poultry | Fish |

(2) Press number buttons to enter the weight to be defrosted food.

The weight range should be between (XXX) Lbs.

If the weight input is not within (XXX) Lbs, the input will be invalid.

(3) Press **START ADD30SEC.** to start defrosting, "DEF." indicator will flash. And the remaining cooking time will display.

7. 1lb Defrost

(1) Press **1lb DEFROST** , LED will display "1.00", "DEF." indicator and "Lbs" will be lighted.

(2) Press **START ADD30SEC.** to start defrosting, "Lbs" go out, "DEF." indicator will flash.

And the remaining cooking time will display.

8.POPCORN

a) Press **POPCORN** repeatedly until the desired weight appears in the display, "Auto" and "Oz" light.

For example, press " **POPCORN** " twice, "3.0" displays.

b) Press **START ADD30SEC.** to cook, "Oz" disappears, "Auto" flash.

| Times(Press POPCORN) | Weight | Display |
|-------------------------------|---------|---------|
| Once | 1.75 Oz | 1.75 |
| 2 Times | 3.0 Oz | 3.0 |
| 3 Times | 3.5 Oz | 3.5 |

9.Sensor Menu (Frozen Pizza, Baked Potato, Veggie, Rice, Frozen Entree, Sensor Reheat)

1) In waiting state, press the sensor menu button, "SC-X" display, "Auto" and "SENS." light.

Example 1: if "Rice" is pressed, " SC-5" will display.

2) Press **START ADD30SEC.** to sensor time, "SC-X" flash. When the cooking start, the remaining time count down, "Auto" and "SENS." flash.

Note:

1)When cooking food with sensor menu, you should note below for better effect.

a.The room temperature cannot be over 35 degrees.

b.The weight of food must be more than 110g (4 Oz).

c.The oven cavity, glass tray and utensils must keep dry.

2) During cooking, you should note below.

a. The food can be covered with the lid. But the lid must has vent hole in order to emanate the steam.

b. If the cooking time does not start to count down, **do not** open the oven door or press

STOP Cancel Lock. Otherwise, the sensor will make mistakes.

c. When the time will count down, you can open the door to mix the food or replace the food.

Example 2 : to use the menu of potato.

1)Press **POTATO** key once, "SC-2" displays.

The max. amount is 4pc and about 6~8 Oz/pc.

2) Press **START ADD30SEC.** to cook. After the cooking time display, food can be turn over.

Note:

a.Each potato is stabbed 6 finestra with the fork on surface.

b.Place the potato on the edge of glass tray, if more potatoes, please keep them deteched and the interval of each one is 2.5mm.

Example 3 : **Sensor Reheat**

- 1) In waiting states, after putting the food into the oven, press **SENSOR REHEAT** and "SC-7" will display.
- 2) Press **START ADD30SEC.** to cook.

Note:1) Food to be avoided in sensor reheating.

- a. Bread and other dry food, such as biscuit, cake.
- b. Raw or uncooked food.
- c. Beverage and frozen food.

- 2) The oven cannot cook automatically when the temperature of the oven cavity is high.
- 3) The reheat food can be covered with the lid. But the lid must have vent hole in order to emanate the steam. Sealed utensil is forbidden.
- 4) The initial temperature is 5 degrees. cover with a lid or vented plastic wrap.
- 5) The sensor reheat has different request for different food.

Casseroles- Add 2 to 3 tablespoons of liquid, cover with lid or vented plastic wrap.

Stir when time appears in the display window.

Canned foods- Empty contents into casserole dish or serving bowl, cover dish with lid or vented plastic wrap. After reheating, let stand for a few minutes.

Plate of food- Arranged food on plate; top with butter, gravy, etc. Cover with lid or vented plastic wrap. After reheating, let stand for a few minutes.

Example 4 : to use the menu of **Veggie**

- 1) Press **Veggie** once, "SC-3" will display, to cook fresh vegetable.
Press **Veggie** 2 times, "SC-4" display, to cook frozen vegetable.
- 2) Press **START ADD30SEC.** to cook. After the cooking time display, food can be turned over.

Sensor menu chart:

| | | | | | | |
|-------------|--------------|--------|------------------------|------|---------------|---------------|
| Menu button | Frozen Pizza | Potato | Veggie | Rice | Frozen Entree | Sensor Reheat |
| Food | Frozen Pizza | Potato | Fresh/Frozen Vegetable | Rice | Frozen Entree | Sensor Reheat |
| Food Code | SC-1 | SC-2 | SC-3/SC-4 | SC-5 | SC-6 | SC-7 |

10. Custom Cook

- Press **Custom Cook** , "CC1" will display, " Auto" light.
- Press numer button 1,2,3,4 or 5 to select the different food.
- Press **START ADD30SEC.** to confirm, the default weight or portion display.
Example, press " 3 " button, "1" displays.
- Press numer button to select the different weight or portion.
- Press **START ADD30SEC.** to cook, "Auto" flash.

11. Soften/Melt

- Press **Soften/Melt** , "S-1" will display, " Auto" light.
- Press numer button 1,...6 or 7 to select the different food.
- Press **START ADD30SEC.** to confirm, the default weight or portion display.
Example, press " 3 " , "8" displays.
- Press numer button to select the different weight or portion.
- Press **START ADD30SEC.** to cook, "Auto" flash.

Auto Menu Chart:

| MENU BUTTON | FOOD | Weight/portion |
|-------------|---|----------------|
| Custom Cook | 1*Custom Cook-Bacon | 2-5 SLICES |
| | 2*Custom Cook-Frozen roll/Muffin-reheat | 1-6 PIECE |
| | 3*Custom Cook-Beverage | 1-2 CUP |
| | 4*Custom Cook-Chicken Pieces | 4/8/16 Oz |
| | 5*Custom Cook-Oatmeal(with milk) | 20/40Oz |
| Soften/Melt | 1*Melt-Butter/Margarine | 1-3 STICH |
| | 2*Melt-Chocolate | 4/8Oz |
| | 3*Melt-Cheese | 8/16Oz |
| | 4*Melt-Marshmallows | 5/10Oz |
| | 5*Soften-Butter | 1-3 STICH |
| | 6*Soften-Ice cream/Frozen juice | 6/12/16Oz |
| | 7*Soften-Cream cheese | 3/8Oz |

12. FAVORITE FUNCTION

Press **FAVORITE** to choose Favorite 1-3 procedure. 1,2,3 will display.

If the favorite programme has been set, press **START ADD30SEC.** to start cooking.

Set the favorite function:

(1) Single or two stages cooking function can be set.

(2) After finishing the setting, press **FAVORITE** to save the Favorite 1-3 and the oven turn back to the waiting state. If not pressing **FAVORITE** but **START ADD30SEC.**, the favorite can be saved and operated at once.

Example: to set a Favorite 2 of cooking food with 80% microwave power for 3 minutes and 20 seconds, follow the steps below:

1) In waiting states, press **FAVORITE** twice, "2" displays.

2) Set the programme:

a. Press **COOK TIME**, then press the number buttons "0", "3", "2", "0".

b. Press **POWER LEVEL**, "PL10" flash. And press "8" to select 80% power, "PL8" displays.

3) Press **FAVORITE** once to save Favorite 2 and the oven turn back to the waiting state.

4) To run Favorite 2, press **FAVORITE** twice, "2" displays. And press **START ADD30SEC.** to run the program.

Note: Auto menu cannot be set as memory cooking.

13. Multi-section cooking

At most 2 sections cooking can be set. In multi-section cooking, if one section is defrosting, defrosting will be placed in the first section. When the first stage finish, the buzzer will sound once and the next stage will begin.

Example: if you want to cook with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes. The cooking steps are as following.

(1) Press **COOK TIME**, then press "0", "5", "0", "0" to enter 5 minutes.

(2) Press **POWER LEVEL**, "PL10" flash.

(3) Press number button "8" to set 80% microwave power.

(4) Press **COOK TIME**, then press "1", "0", "0", "0" to enter 10 minutes.

(5) Press **POWER LEVEL**, "PL10" flash.

(6) Then press number button "6" to set 60% microwave power.

(7) Press **START ADD30SEC.** to start cooking.

Note: auto menu cannot be set as one of the multi-section.

14. INQUIRING FUNCTION

- (1) In cooking state, press **CLOCK**, the clock will be displayed. After three seconds, the oven will turn back to the cooking state.
- (2) When timer counts down, press **KITCHEN TIMER**, the clock will be displayed. After three seconds, the oven will turn back to the timer state.
- (3) In the microwave cooking state, press **POWER LEVEL**, the current microwave power will be displayed. After three seconds, the oven will turn back to the cooking state.

15. LOCK FUNCTION FOR CHILDREN

Lock: In waiting state, press **STOP Cancel Lock** for 3 seconds, there will be a long "beep" denoting the entering into the children-lock state, " Loc" will display .

Unlock: In locked state, press **STOP Cancel Lock** for 3 seconds, there will be a long "beep" denoting that lock is released, the current time or "0:00" will display.

16. COOKING END REMINDING FUNCTION

When the cooking is over, **END** will display. Press **STOP** or open/close the oven door to turn back to the waiting state.

Maintenance

Troubleshooting

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center.

| TROUBLE | POSSIBLE CAUSE | POSSIBLE REMEDY |
|-----------------------|--|--|
| Oven will not start | <ul style="list-style-type: none">a. Electrical cord for oven is not plugged in.b. Door is open.c. Wrong operation is set. | <ul style="list-style-type: none">a. Plug into the outlet.b. Close the door and try again.c. Check instructions. |
| Arcing or sparking | <ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. The oven is operated when empty.c. Spilled food remains in the cavity. | <ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Do not operate with oven empty.c. Clean cavity with wet towel. |
| Unevenly cooked foods | <ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Food is not defrosted completely.c. Cooking time, power level is not suitable.d. Food is not turned or stirred. | <ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Completely defrost food.c. Use correct cooking time, power level.d. Turn or stir food. |
| Overcooked foods | Cooking time, power level is not suitable. | Use correct cooking time, power level. |
| Undercooked foods | <ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Food is not defrosted completely.c. Oven ventilation ports are restricted.d. Cooking time, power level is not suitable. | <ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Completely defrost food.c. Check to see that oven ventilation ports are not restricted.d. Use correct cooking time, power level. |
| Improper defrosting | <ul style="list-style-type: none">a. Materials to be avoided in microwave oven were used.b. Cooking time, power level is not suitable.c. Food is not turned or stirred. | <ul style="list-style-type: none">a. Use microwave-safe cookware only.b. Use correct cooking time, power level.c. Turn or stir food. |