

OPERATOR'S MANUAL
BASE TECH II BASE/REPEATER STATION

Base Tech II Base/Repeater Station Operator's Manual

Introduction	3
Description	3
Features	3
Controls, Indicators and Connectors	4
Operation	7
Installation and Programming	7
Basic Operation	8
Front Panel Operation	8
Signaling	11
Scanning	14
Locking the Keypad	16
Changing Tone Signaling Systems	17
Displaying the Channel Information	18
Display of Received Tone Frequencies	19
Bar Graph Displays	20
LCD Display Back Light	20
Transmit Power Change	20
Calling Party ID Display	21
Displaying any Radio's ID Number	21
Emergency Caller Display	22
Automatic Transmit in Repeater Mode	22
TX Test Mode	23
Keypad Test Mode	23
Frequency Band Test Mode	24
Starting Message	24
Serial Number Display	24
EEPROM Data Check Mode	25
Hardware Error Detection	26
RS232C Communications Error	27
Low Battery Detection	27

INTRODUCTION

Description

The Base Tech II Base Repeaters represents a technological advancement over previous models. The Base Tech II Base Repeater is comprised of separate modules all housed within one 2RU equipment cabinet. The receiver, transmitter, and PA unit are each enclosed within their own die-cast housing. Each one is then mounted directly on the large upper heatsink. A microprocessor-controlled interface module controls the channel selection, LCD Display, timers, interfaces, and signaling features.

The RF power output is 25 — 60 watts on a continuous duty basis. The CTCSS module supports all EIA tones. All tones and different encode and decode tones can be set on a per channel basis during radio programming.

Attention

The antenna(s) used for this transmitter must be fixed-mounted on outdoor permanent structures with a separation distance of at least 6 meters from all persons during normal operation. The peak conducted output power at each antenna terminal must not exceed 250 Watts and the peak radiated output power must not exceed 1000 Watts EIPR. Users and installers must ensure that FCC requirements for satisfying RF exposure compliance are met. (See FCC Rules Part 1, Sections 1307 and 1310)

Features

- Simplex or two frequency Duplex operation
- EEPROM programmable with a PC computer
- 99 programmable multi-mode channels
- Full dot matrix LCD
- Front-facing speaker
- Transmit time limiter to prevent channel jamming
- TX and RX encryption optional
- Two channel scanning modes
- 5-Tone encoder and decoder plus DTMF encoder and decoder
- Up to 99 channels with channel labels
- Two-stage front end allows mixed Simplex and Duplex operation
- Channel selectable Wide or Narrow channel spacing
- CTCSS on a per channel basis (DCS available as an option)
- 5 X 4 Keypad for channel change, etc
- 2RU equipment cabinet
- Step-up VCO voltage for superior selectivity
- Low stand-by current is ideal for solar installations
- Watchdog timer

Base Tech II Base/Repeater Station Operator's Manual

The Titan Base Repeater includes 5-tone selective calling encoder/decoder with non-predictive decoder, as well as, a DTMF encoder and voice encryption option. It supports both all-channel scanning and programmed channel scanning for base use.

The Titan Base Repeater is fitted with a large full dot matrix LCD that is used to display the channel numbers and names, frequency and tone programmed information and signaling information. All user-interface keys and knobs are conveniently located on the front of the radio. All user-entered functions are easily activated in a logical manner via the keypad.

The Titan Base Repeater is supplied with an "N" type connector for the transmitter, and a BNC connector for the receiver to allow easy connection to the duplexer or feeder cables.


The rear panel includes a 9-way D-sub connector for the attachment of an external shared tone panel. Also included is a 25-way D-sub connector that enables external interface with other radios or control equipment.

The Titan Base Repeater is supplied complete with the following items:

- Titan Base Repeater
- DC Cable Connector
- Operators Manual
- Hand Microphone

Controls, Indicators and Connectors

• Front Panel Controls

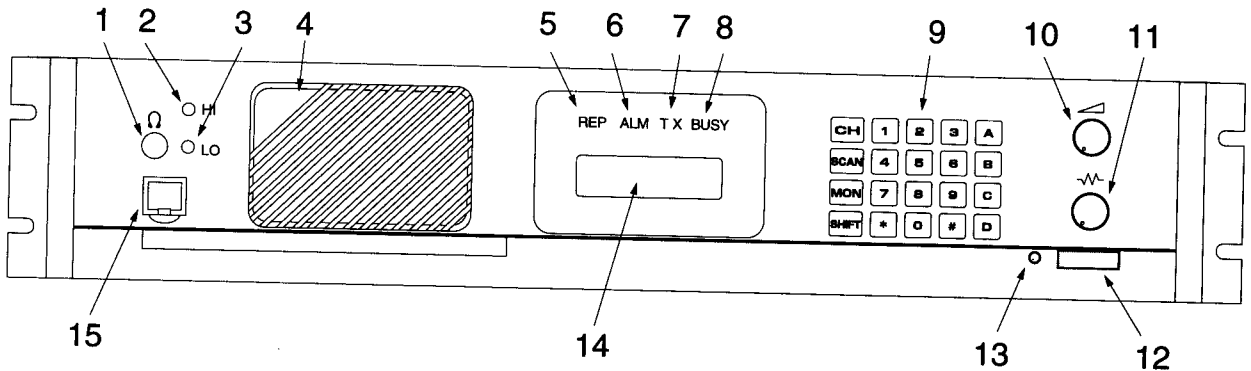

1. Headphone Socket

This socket is provided to allow users to listen to the Titan Base Repeater using headphones. Plugging a headphone into this socket will disconnect the built-in speaker. It does NOT include a microphone input or TX PTT facility.

2. High TX Power

This is a service point and is not used by the radio operators.

Base Tech II Base/Repeater Station Operator's Manual

3. Low TX Power

This is a service point and is not used by the radio operators.

4. Loud Speaker*

The receiver audio signals are heard from this speaker (provided that the volume setting is loud enough and the speaker has not been muted by one of the tone signaling formats).

5. Repeater Mode Indicator LED

The Repeater Mode Indicator LED will illuminate "REP" in **yellow** when the selected channel has been programmed for Repeater operation. This LED is NOT illuminated on any channel that is programmed to operate in Base mode.

6. Alarm Mode Indicator LED

The Alarm Mode Indicator LED will illuminate (Fast flashing) "ALM" in **orange** whenever the transceiver detects a fault in the receiver module, the transmitter module, or the PA module on the selected channel. If supply voltage is going down to 10.8V or less (Low Battery), "ALM" LED will illuminate (Slow flashing).

7. Transmit Mode Indicator LED

The Transmit Mode Indicator LED will illuminate "TX" in **red** whenever the Titan Base Repeater is transmitting.

8. Busy Mode Indicator LED

The Busy Mode Indicator LED will illuminate "BUSY" in **green** whenever the Titan Base Repeater receives a carrier signal on the selected channel that is greater than the Squelch setting.

9. Keypad*

The 5 x 4 key Keypad is used to enter channel selection, tone information, and other data into the Titan Base Repeater. Specific key sequences are described fully in section 4 of this document. It includes the following keys: CH, SCAN, MON, SHIFT, 1, 2, 3, 4, 5, 6, 7, 8, 9, 0, *, #, A, B, C, and D.

10. Volume Control*

The Volume Control is used to set the audio output level from the loudspeaker. Rotate this knob clockwise to increase the audio level, or counter-clockwise to reduce the audio level.

11. Squelch Control*

The Squelch Control is used to set the squelch threshold. Select a channel that is not being used and slowly rotate this knob clockwise until the annoying background noise ceases. It may be desirable to rotate this knob clockwise, slightly past the squelch threshold, to compensate for varying background noise levels.

12. Power ON/OFF Switch

The Power ON/OFF Switch is used to switch the Titan Base Repeater "ON" or "OFF". Press this knob to switch the Titan Base Repeater "ON". Press this knob again to switch the Titan Base Repeater "OFF". This knob is slightly more depressed when in the "ON" position.

Base Tech II Base/Repeater Station Operator's Manual

13. Power On Indicator LED

The Power ON Indicator LED will illuminate in **green** whenever the Power ON/OFF switch is in the "ON" position.

14. Liquid Crystal Display (LCD) (not used on Single Channel Models)







The LCD comprises of four (4) lines, each of which is capable of displaying twenty-one (21) characters. The first line, under normal operating conditions, displays the strength of the signal being received on the selected channel as a bar graph. The second line displays the strength of the transmitting power as a bar graph. The third line displays the selected channel number (up to four characters) in the first four left hand character spaces, and displays the channel name (up to eight characters) in the next eight character spaces.

Any combination of the following characters may be used in the channel name:

0-9, A-Z, a-z, / + - * # ! \$ % () = [] < > ? and space

This area of the LCD is left blank when channel names are not used.

The six character spaces on the right hand side of this line are used to display status symbols as follows:

Symbol	Status
	The monitor status.
	The key lock status.
	The tone encode status.
	The scan mode status.
	The high power transmit status.
	The [SHIFT] key is depressed.


On the left hand side of the fourth line, the type of tone signaling system selected by the user is displayed. For example, "5TON" indicates 5-Tone signaling while "DTMF" indicates Dual-Tone Multi-Frequency signaling.

The right hand side of the fourth line is used to display data that the user enters (for example, 5-Tone calling sequences). These character spaces are also used by the Titan Base Repeater to display messages and information directed to the user.

15. Microphone Input Socket

Connect the microphone into this socket.

• Rear Panel Connectors

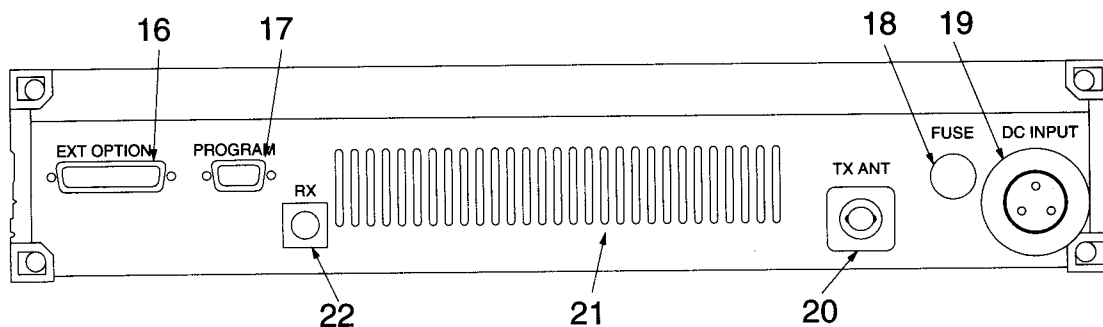

16. 25-way External Options Connector

17. 9-way Programming Connector

18. DC Input Fuse Holder

19. 3-way DC Input Socket

20. TX/Antenna Connector (N type)

21. Ventilation Slots

22. RX Connector (BNC type)

OPERATION

Installation and Programming

As the Titan Base Repeater can be installed to operate as either a Base Station or as a Repeater, some of the instructions in this document may apply to one application only, some may apply in both cases, while others may only apply if the particular function has been enabled during programming. The Titan Base Repeater must be programmed before it will operate correctly. This should be done by the equipment supplier or a qualified radio tradesman. They will need the Titan Base Repeater programming software to do this correctly.

It is important that the Titan Base Repeater be correctly installed at its working location by a qualified radio technician.

As a minimum, it is necessary to:

- Connect the DC Input power lead to a suitable 13.8 Volt Regulated DC Power supply that has sufficient capacity. (Ensure that the DC Polarity is correct).
- Connect the two antenna connectors to suitable antennas (ensure that the VSWR of the antennas is correct).
- Insert the microphone into the microphone connector on the front panel.

Base Tech II Base/Repeater Station Operator's Manual

Basic Operation

- **Switch On**

Switch the Titan Base Repeater "ON" by pressing the knob (12). Then check that the LED indicator (13) is illuminated.

- **Adjust the Volume Setting**

Rotate the Volume Knob (10) clockwise (from the fully counterclockwise position) until the audio level from the speaker is suitable.

- **Adjust the Squelch Setting**

Rotate the Squelch Knob clockwise (from the fully counter clockwise position) slowly until the background noise can no longer be heard. It is wise to rotate the knob slightly further in the clockwise direction so that variations in the background noise level do not "break" the squelch setting and cause annoying squelch noises to be heard from the speaker.

- **Select the Channel**

Select the required channel by pressing the CH key followed by the channel number key. The channel number keys must be selected within two seconds. For example, [CH] + [0] + [1] to select Channel 1. The LCD Display should now display CH01 and (if programmed with a channel label) the channel name: "CH01 NAME".

- **Receiving**

You should now be able to hear any radio traffic that occurs on channel #1 on the Titan Base Repeater. It may be necessary to adjust the Volume setting to suit your listening requirements.

- **Transmitting**

Depending on the legal requirements in your country, and the operating requirements within your organization, it may be necessary to announce your Call Sign. In addition, it will probably be necessary to announce the Call Sign of the party you are calling at the start of your transmission.

When transmitting, it is necessary to hold the microphone about 3 inches from your mouth and speak clearly into the front of the microphone.

It is also necessary to press and hold the "Press To Talk" (PTT) bar on the side of the microphone while speaking into the microphone.

Front Panel Operation

This section describes most signaling and other advanced features that are available on the Titan Base Repeater. The availability of some features is dependent on the programming of the transceiver and installed options. You may find it worthwhile to discuss these features in detail with your radio supplier to obtain a full understanding of their benefits.

Base Tech II Base/Repeater Station Operator's Manual

• Keypad Operation

The Keypad is the interface between the user and the Titan Base Repeater. It is used to enable or disable various functions and to enter the required data for signaling purposes.

The word (5-Tone) or (DTMF) shown after the described feature indicates that the described feature applies to the particular signaling format.

The following keys are used for the purposes described:

- [0] - [9] Entering new channel numbers
 Entering the "KILL" password
 Entering signaling encoding numbers (5-Tone) (DTMF)
 Entering DTMF numbers (DTMF)

- [A] Advancing the Titan Base Repeater to the next higher channel
 Entering the signaling "A" tone (5-Tone) (DTMF)
 Encodes the "A" Tone (DTMF)

- [B] Advancing the Titan Base Repeater to the next lower channel
 Entering the signaling "B" tone (5-Tone) (DTMF)
 Encodes the "B" Tone (DTMF)

- [C] Entering the signaling "C" tone (5-Tone) (DTMF)
 Encodes the "C" Tone (DTMF)

- [D] Entering the signaling "D" tone (5-Tone) (DTMF)
 Encodes the "D" Tone (DTMF)

- [*] Displays the previously entered encode numbers (5-Tone) (DTMF)
 Encodes the "*" -Tone (DTMF)

- [#] Encodes the signaling numbers that are displayed in the LCD display (5-Tone) (DTMF)
 Encodes the "#"-Tone (DTMF)

- [CH] Used with two channel numbers [0] - [9] to change the active channel on the Titan Base Repeater. E.g. [CH]+[9]+[0] will change the active channel to Channel 90 (provided Ch 90 has been programmed into the Titan Base Repeater).

- [SCAN] Used to place the Titan Base Repeater into the "All-Scan" mode where the Titan Base Repeater will scan all programmed channels. Pressing the [SCN] key again will cause the Titan Base Repeater to exit from the "All-Scan" mode.

- [MON] Switches the Titan Base Repeater between "Monitor ON" mode and "Monitor OFF" mode and is used to "Un-mute" the radio when using selective calling (depending on the programming of the Titan Base Repeater).

Base Tech II Base/Repeater Station Operator's Manual

- **Keypad Operation using the [SHIFT] Key**

Some of the Titan Base Repeater's features and related functions can be changed by using the [SHIFT] key. To make these changes, it is necessary to first press the [SHIFT] key followed by the other keys within a two second timeframe.

The following key sequences are used for the purposes described:

[SHIFT]+[0]	Toggles the tone system between 5-Tone signaling, DTMF signaling and No-Tone
[SHIFT]+[1]	Switches the LCD back-light to the "ON" or "OFF" position
[SHIFT]+[2]	Toggles the transmitting power between High power and Low power
[SHIFT]+[3]	Invalid Key
[SHIFT]+[4]	Toggles between "Single Tone Encoding" mode and "5-Tone" or "DTMF" signaling mode
[SHIFT]+[5]	Invalid Key
[SHIFT]+[6]	Enters the "KILL" mode to allow entry of the KILL password
[SHIFT]+[7]	Displays the programmed information for the selected (active) channel in the LCD display
[SHIFT]+[8]	Locks or Unlocks the Titan Base Repeater's keypad
[SHIFT]+[9]	Toggles the Titan Base Repeater between "Normal Channel Scanning" mode and "Priority Channel Scanning" mode
[SHIFT]+[A]	Restores a channel to the Channel Scanning List (The user must first select the channel to be restored as the active channel)
[SHIFT]+[B]	Invalid Key
[SHIFT]+[C]	Indicates to the Titan Base Repeater that you have entered the last number of a DTMF encoding sequence
[SHIFT]+[D]	Invalid Key
[SHIFT]+[*]	Deletes the active channel from the Channel Scanning List
[SHIFT]+[#]	Will attach the "R-Number" data to the active encode number and transmit the whole sequence
[SHIFT]+[CH]	Will start or stop the display of the TX and RX bar graphs in the LCD display
[SHIFT]+[SCAN]	Will place the Titan Base Repeater in the "Program Scan" mode or exit from the "Program Scan" mode
[SHIFT]+[MON]	Invalid Key

Base Tech II Base/Repeater Station Operator's Manual

- **Changing Channels**

To change to another channel, simply press the [CH] key, followed by the required channel number, within two seconds.

For example: To select Channel 8, press [CH] [0] [8]

To select Channel 99, press [CH] [9] [9]

Note that it is always necessary to enter two digits for the Channel Number. The channel # location displayed in the LCD will become blank as soon as the [CH] key is pressed. The cursor will blink at the location of the channel number, and display the new numbers as they are entered.

It is also possible to change channels by using the [CH], [A] and [B] keys instead of entering the channel numbers. Pressing [CH] then the [A] key will advance the channel to the next higher programmed channel, while pressing [B] will advance the channel to the next lower programmed channel.

Note that this action will ignore channels that have not been programmed into the Titan Base Repeater. Accordingly, the LCD display may appear to advance more than one channel if the missed channel is not programmed into the Titan Base Repeater.

Signaling

The Titan Base Repeater includes some very sophisticated signaling capabilities. We suggest that you have your radio supplier conduct some training on the use of these capabilities prior to using them.

While it is possible to use these signaling capabilities in both repeater mode, and in base station mode, many will only be useful in practice when the Titan Base Repeater is used in base station configuration.

The Titan Base Repeater supports the 5-Tone sequential, and/or the DTMF, and the Single Tone signaling formats. The required signaling format(s) must be enabled when the Titan Base Repeater is programmed.

- **5-Tone Signaling**

Available Tones

5-Tone signaling is commonly referred to as "Selective Calling" (or Selcall) and usually comprises of a series of 5 tones sequentially transmitted or received in accordance with certain international standards. It is possible to use longer sequences to enhance the signaling capabilities and to provide additional functions.

Accordingly, the Titan Base Repeater will encode up to sixteen (16) tones and decode up to eight (8) tones.

These tones can be any of the following letter/number combinations:

[0] - [9], and [A] - [D]

The most recently entered tone can be recalled and deleted by pressing the [*] key repeatedly.

Base Tech II Base/Repeater Station Operator's Manual

Entering a 5-Tone Encode Sequence

When switched "ON", the Titan Base Repeater carries out its self-test routine, then waits ready to accept 5-Tone encode numbers. Accordingly, it is necessary to enter the required 5-Tone digits directly using the keypad, then pressing the [#] key to transmit the 5-Tone sequence. (Up to sixteen digits can be entered).

If it is necessary to enter the "R" number sequence to activate the repeater, the [SHIFT] key must be pressed before pressing the [#] key.

If a 5-Tone number is NOT displayed in the LCD, and the [#] key is pressed, then the Titan Base Repeater will recall the most recent 5-Tone number and transmit it.

Recalling the last encoded sequence

Pressing the [*] will recall the most recent 5-Tone encode sequence and display the sequence in the LCD display. Continuing to press the [*] key will delete the last digit of the sequence until all digits are deleted. In practice, users will usually delete the last one or two digits before entering the new digits.

- **DTMF Signaling**

Available Tones

The following DTMF tones can be used in any number/letter combination:

[0] - [9], [A] - [D], [*], and [#]

NOTE: Tone [B] is NOT available if the "Attach Decode No" field in the DTMF Encode Menu has been set to "ON".

Up to sixteen (16) DTMF digits can be encoded in one calling sequence.

DTMF Tone Entry

There are two methods of entering DTMF tones. The specific tone encoding format is selected during the programming of the Titan Base Repeater in the <Main Menu><Encode Set><DTMF Encode><Attach Decode No.> field.

Attach Decode No. "OFF" format

Pressing the PTT lever first automatically selects the DTMF encoding format and allows direct entry of DTMF tones.

Hold the PTT lever on the microphone while pressing the required DTMF tones. The tones will be transmitted as the keys are being pressed.

Base Tech II Base/Repeater Station Operator's Manual

Attach Decode No. "ON" format

Attach Decode No. "ON" automatically encodes the user's DTMF decode number after the encode number. This can be used for any purpose.

Enter the required DTMF tones (up to sixteen tones, except "B" tone) and then transmit the total tone sequence (including the users decode number) by pressing the [#] key. All tones will be transmitted in one continuous sequence after pressing the [#] key.

Pressing the [*] key will delete the last number entered.

Always confirm that the LCD is clear before proceeding, as it may take up to 5 seconds for the tones to be sent.

For example, assume that your decode number is 12345, and that you wish to encode number 12346. You will input 12346, and then press the [#] key. The Titan Base Repeater will encode "12346B12345". The called radio will display "12345" in their LCD indicating the calling party's number is "12345".

NOTE: The "B" tone is used as the delimiter in this encoding format and therefore CANNOT be used as a DTMF tone.

Pressing the [SHIFT] key and then the [#] will encode ONLY the encode number (and not the decode number).

Redialing with DTMF

If, during the programming of the Titan Base Repeater, the <Attach Decode No> field has been set to "OFF", the redialing function operates as follows:

Press [SHIFT], then press [#] and the Titan Base Repeater will redial the last encoded DTMF number.

If, during the programming of the Titan Base Repeater, the <Attach Decode No> field has been set to "ON", the redialing function operates as follows:

Press [#] and the Titan Base Repeater will redial the last encoded DTMF number with the Titan Base Repeater's programmed decode number.

Press [SHIFT], then press [#] and the Titan Base Repeater will redial the last encoded DTMF number without the Titan Base Repeater's programmed decode number.

Restoring the last DTMF number to the LCD Display

It is possible to restore the last encoded DTMF number to the LCD display, provided the <Attach Decode No> field has been set to "ON" during the programming of the Titan Base Repeater. First, confirm that the LCD is NOT displaying any DTMF numbers. Then press [V] and the last encoded DTMF number will be displayed in the LCD display. It is possible to edit this number at this time by pressing the [V] key (which will erase the last number) or by pressing the required keys to add additional numbers.

Encoding DTMF numbers with the 5-Tone system enabled

It is possible to enter DTMF numbers even with the 5-Tone system enabled. This function must be enabled during the programming of the Titan Base Repeater by setting the <DTMF Encode> field in the <5Tone Encode Menu> to "ENABLE".

To enter a DTMF number (with 5-Tone signaling enabled), the user must press the PTT lever while entering the first DTMF number. Second and subsequent numbers do NOT require the PTT lever to be pressed, provided all numbers are entered within a few seconds (before the display reverts to 5-Tone mode and displays "5TON" in the LCD display).

Base Tech II Base/Repeater Station Operator's Manual

- **Single Tone Encoding**

The Titan Base Repeater has the ability to encode one of six single tone frequencies for 1, 2, 3, or 4 seconds. This function is enabled during programming of the Titan Base Repeater by selecting the <Single Tone ON> field in the <Encode Menu>, and setting the encode period.

Press the [SHIFT] and the [4] keys to put the Titan Base Repeater into Single Tone Encoding mode. "S1" and the tone frequency ("xxxxHz") will be displayed in the tone area of the LCD display for about 4 seconds until the Titan Base Repeater reverts back to the normal signaling mode.

While the Titan Base Repeater is in Single Tone Encoding mode, it is possible to advance to the next tone frequency by pressing the [A] key, or to return to the previous tone by pressing the [B] key.

Pressing the [#] key will encode the displayed tone (for the programmed time period). It also automatically exits the Single Tone Encoding mode and returns the Titan Base Repeater to the normal signaling mode.

Scanning

The Titan Base Repeater is supplied with two scanning modes. These are All Channel Scan mode, in which the Titan Base Repeater will scan all channels that are programmed into the Titan Base Repeater; and the Program Channel Scan mode, in which the Titan Base Repeater will scan only the channels that have been designated during the programming of the Titan Base Repeater. One HIGH priority and one LOW priority scan channel can be set for each scan mode during the programming of the radio.

- **All Channel Scan Operation**

Pressing the [SCAN] key places the Titan Base Repeater into All Channel Scan mode. The Scan mode symbol "∞" is displayed in the LCD display. Also the LCD will also display "All Scan Mode-In" for two seconds as shown below:

RX=====
TX
CH01 ∞
All Scan Mode In

- **Program Channel Scan Operation**

Pressing the [SHIFT] and then the [SCAN] key places the Titan Base Repeater into Program Channel Scan mode. The Scan mode symbol "∞" is displayed in the LCD display. The LCD will also display "PRG Scan Mode-In" for two seconds as shown below:

RX=====
TX
CH01 ∞
PRG Scan Mode In

Base Tech II Base/Repeater Station Operator's Manual

- **Removing an Active Channel from the Scan List**

It is possible to temporarily delete an active channel from the scan list by pressing [SHIFT] and the [*] key and holding them down for more than one second. Multiple channels can be deleted from the Scan list, provided that at least one channel remains in the Scan List.


A "beep" sound from the radio confirms correct deletion of the channel from the scan list. This function CANNOT be used in the Priority Scan mode. The Titan Base Repeater automatically restores all channels to their respective scanning list as soon as the Titan Base Repeater exits from the scan mode.

- **Restoring Channels to the Scan List**


Channels can be restored to the scanning list without exiting from the scan mode by pressing the [SHIFT] key and pressing and holding the [A] key for more than one second. This action will restore all channels to the scan list. This action CANNOT be used in the Priority Scan mode.

Locking the Keypad

Pressing the [SHIFT] key and then the [8] key will lock all keys (except the [SHIFT] and [MON] keys) on the Titan Base Repeater's keypad to prevent accidental or inadvertent data entry. After pressing the [SHIFT] and [8] keys, the keypad becomes locked and the Key-Lock symbol "☐" is displayed in the LCD display. The display also shows "Key-Lock" for two seconds as shown below:

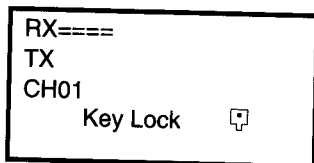

Pressing [SHIFT] and [8] again will Unlock the keypad, remove the Key-Lock symbol from the LCD display, and display "Key-Unlock" in the LCD display for two seconds as shown below:

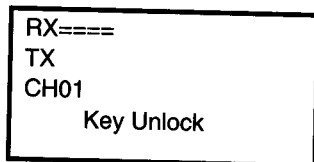

Base Tech II Base/Repeater Station Operator's Manual

Changing Tone Signaling Systems

It is possible to switch the Titan Base Repeater's tone signaling system among 5-Tone sequential signaling, DTMF signaling and Non (No-Tone), providing the <Miscellaneous Menu> <Tone System Change> field was set to "ENABLE" during the programming of the Titan Base Repeater.

Press [SHIFT] and hold down the [0] key for more than one second to change among the 5-Tone system, DTMF system and Non-system. The new signaling system will show up on the LCD display as follows:

```
RX====  
TX  
CH01  
System is DTMF
```

Pressing [SHIFT] and holding down the [0] key for more than one second again will change the Titan Base Repeater to the next signaling system. The new signaling system will show up on the LCD display as shown below:

```
RX====  
TX  
CH01  
System is Non
```


Base Tech II Base/Repeater Station Operator's Manual

Displaying the Channel Information

The Titan Base Repeater can display information pertaining to the selected channel (provided that the <Miscellaneous Menu> <Information Display> field was set to "ENABLE" during the programming of the radio).

This information includes:

- The RX frequency of the selected channel.
- The TX frequency of the selected channel.
- The channel spacing for the selected channel (Wide or Narrow).
- The operating mode for the selected channel (Base, Repeater, Simplex, and Duplex).
- The RX CTCSS/DCS tone for the selected channel (provided CTCSS/DCS has been programmed for use on the selected channel).
- The TX CTCSS/DCS tone for the selected channel (provided CTCSS/DCS has been programmed for use on the selected channel).
- The tone encoding format (providing 5-Tone signaling was selected during programming of the Titan Base Repeater).
- The tone set (providing 5-Tone signaling was selected during programming of the Titan Base Repeater).
- The ANI mode.
- The tone decoding set (provided 5-Tone or DTMF signaling was selected during programming of the Titan Base Repeater).
- The decode number (provided 5-Tone or DTMF signaling was selected during programming of the Titan Base Repeater).

To view this information in the LCD display, first select the required channel. Then press the [SHIFT] key, then the [7] key. You will need to keep the [7] key pressed until the Titan Base Repeater has cycled through the information steps.

This function is NOT available if the <Miscellaneous Menu> <Information Display> field has been set to "DISABLE" during the programming of the Titan Base Repeater.

Display of Received Tone Frequencies.

It is possible to set the Titan Base Repeater to display the received tone frequencies in the LCD display. They will appear in the area normally used to display the strength of the received signals.

Press [SHIFT] and then press [D] to enable this function.

Once enabled, the LCD will show "RCV" in the area of the LCD display that normally shows the strength of the received signal, as well as, "Tone Display On" for two seconds as shown below:

```
RCV
TX
CH01
    Tone Display On
```

Whenever a tone frequency is decoded, the frequency number will be displayed in the LCD display to the right of "RCV" as shown below:

```
RCV 12345
TX
CH01
    5TON
```


Pressing the [SHIFT] key, then the [D] key once again will disable this function and return the LCD display to normal as shown below:

```
RX
TX
CH01
    Tone Display Off
```

Bar Graph Displays

The Titan Base Repeater will normally show the strength of the received signal to the right of "RX" in the LCD display and the strength of the transmitted signal to the right of "TX" in the LCD display. Both will be displayed in the form of a bar graph.

This function can be disabled by pressing the [SHIFT] key, then the [CH] key. The LCD display will indicate "RX Display Off" and "TX Display Off" as shown below:

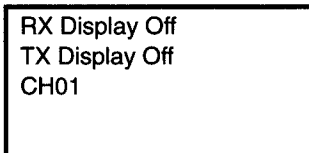

RX Display Off
TX Display Off
CH01

Pressing the [SHIFT] key, then the [CH] key once again will return the Titan Base Repeater to normal. The LCD display will show the normal bar graph display for both the RX signal strength and TX signal strength.

LCD Display Back Light

The LCD Display has a Back-Light to illuminate the display. It normally switches "ON" whenever any key or the PTT lever is pressed, and will remain illuminated for five seconds. Some users may prefer the Back-Light to remain illuminated to assist viewing the LCD display in poor viewing situations.

Press the [SHIFT] key, then press the [1] key for more than one second and the LCD Back-light will remain illuminated.

When finished, press the [SHIFT] key and then press the [1] key for more than one second and the LCD Back-light will revert to normal operation.

Transmit Power Change

It is possible to change the Titan Base Repeater's transmit power from the high power setting to the low power setting (and vice versa) from the keypad, provided that this function has been enabled during the programming of the Titan Base Repeater.

To enable this function, the <Miscellaneous Menu> <TX Power Change> field must be set to "ENABLE".

Press the [SHIFT] key, then the [2] key and the Titan Base Repeater will change from the high transmit power setting to the low transmit power setting. The "►" symbol will be removed from the third line of the LCD display.

Press the [SHIFT] key and the [2] key a second time, and the Titan Base Repeater will change from the low transmit power setting to the high transmit power setting. The "►" symbol will be displayed in the third line of the LCD display.

If this function is NOT required, the <Miscellaneous Menu> <TX Power Change> field must be set to "DISABLE".

Calling Party ID Display

The Titan Base Repeater has the capability to display a calling radio's ID (ANI) number after being called. When the Titan Base Repeater is called, "CALL" will be displayed on the fourth line of the LCD display (and continue to flash). The calling radio's ID number will be displayed to the right of "CALL" as shown below:

RX
TX
CH01
CALL 12346

If the Titan Base Repeater user presses the [#] key (when "CALL" is flashing and the caller's ID number is displayed), the Titan Base Repeater will automatically call the identified radio.

In the case of 5-Tone signaling systems, this function is enabled in the <5Tone Encode Menu> <Encode Format> field, by selecting one of the following parameters:

"Encode + B + Decode"

"Encode + A.Pause + Decode"

"Decode + A.Pause + Encode"

"Encode + ANI"

In the case of DTMF signaling systems, this function is enabled by setting the <DTMF Encode Menu> <Attach Decode No> field to "ON" during the programming of the Titan Base Repeater.

Displaying any Radio's ID Number

The Titan Base Repeater has the capability to display any calling radio's ID (ANI) number. When the Titan Base Repeater receives an ANI number, "DISP" will be displayed on the fourth line of the LCD display (and continue to flash). The radio's ID number will be displayed to the right of "DISP" as shown below:

RX
TX
CH01
DISP 1234

In the case of 5-Tone signaling systems, this function is enabled by setting the <5Tone Decode Menu> <ANI Receive> field to "ON" during the programming of the Titan Base Repeater.

In the case of DTMF signaling systems, this function is enabled by setting the <DTMF Decode Menu> <ANI Receive> field to "ON" during the programming of the Titan Base Repeater.

Base Tech II Base/Repeater Station Operator's Manual

Emergency Caller Display

The Titan Base Repeater has the ability to accept and display emergency calls from other radios within the radio system.

This function is enabled by setting the <Emg Call Receive> field to "ON" in the <5Tone Decode Menu> or <DTMF Decode Menu> during the programming of the radio.

The calling (Emergency) radio must encode its emergency data in the following format:

"000" + the calling radio's ID (decode number).

This format applies to both 5-Tone and DTMF signaling systems.

When the Titan Base Repeater receives an emergency call, it will sound a warning tone from the speaker. The LCD will display "EMG" (flashing) in the fourth line, and display the emergency radio's ID to the right of "EMG" as shown below:

RX
TX
CH01
EMG 12346

Upon receipt of an emergency call, the Titan Base Repeater will automatically respond to the emergency radio by sending the emergency radio's ID number to it.

If the Titan Base Repeater user presses the [#] key, the Titan Base Repeater will resend the emergency radio's ID number.

While the Titan Base Repeater is in the Emergency Mode, all keys (except the [#] key) on the keyboard become disabled.

Pressing the [SHIFT] key and the [*] key will return the Titan Base Repeater to the normal operating mode.

Automatic Transmit in Repeater Mode

The Titan Base Repeater can be programmed to automatically repeat valid incoming messages. First, the active channel of the Titan Base Repeater must be programmed to operate as a repeater. It must then receive a carrier frequency on the designated channel. If the Titan Base Repeater has been programmed for CTCSS or DCS operation, it must also receive a valid CTCSS or DCS tone. It will then automatically retransmit any received signals.

When the Titan Base Repeater ceases to receive a carrier frequency, or a valid CTCSS or DCS tone, it activates the <Auto TX Reset Time> timer. This will keep the Titan Base Repeater repeating (for up to 9.9 seconds depending on the programming of the Titan Base Repeater) and allow other users with a valid CTCSS or DCS tone to access the repeater.

TX Test Mode

The Titan Base Repeater comes equipped with a TX (Transmit) Test Mode. When the Titan Base Repeater is placed in the TX Test Mode, it will transmit a carrier frequency modulated with a 1kHz tone on the selected active channel. It is possible to change channels while in TX Test Mode.

Pressing the [SHIFT] key, then the [B] key places the Titan Base Repeater in TX Test Mode and displays the message in the LCD as shown below:

```
RX
TX
CH01
TXT TX Test Mode-in
```

Pressing the [SHIFT] key and the [B] key a second time will return the Titan Base Repeater to normal mode and displays the message in the LCD as shown below:

```
RX
TX
CH01
TXT TX Test Mode-out
```

Keypad Test Mode

The Titan Base Repeater comes equipped with a Keypad Test Mode that allows the user to electrically test all keypad keys as well as the PTT Key.

Holding the [C] key while switching the POWER SWITCH "ON" places the Titan Base Repeater in Keypad Test Mode and displays the message in the LCD Display as shown below:

```
KEY TEST
Please Key-in
```


Then press the keys to be tested one at a time. The respective key will be displayed in the LCD when the key is operating correctly. For example, if you press the [CH] key, the LCD Display will indicate correct operation as shown below:

```
KEY TEST
CH Key
```

Switch the Titan Base Repeater "OFF" to exit the Keypad Test Mode.

Base Tech II Base/Repeater Station Operator's Manual

Holding the [D] key while switching the POWER SWITCH "ON" places the Titan Base Repeater in Serial Number Display Mode and displays the Titan Base Repeater's Serial Number in the LCD Display as shown below:

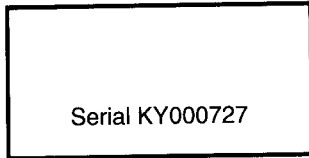


Serial KY000727

Switch the Titan Base Repeater "OFF" to exit from the Serial Number Display Mode.

EEROM Data Check Mode

As soon as the Titan Base Repeater is switched "ON", it will automatically read and check all the data in the EEROM. If this check finds damaged or corrupted data, the Titan Base Repeater will automatically enter the Programming Mode and display the following message in the LCD Display:

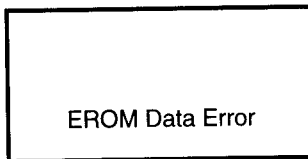


EROM Data Error

Should this happen, it is necessary to return the Titan Base Repeater to your radio supplier or to a qualified radio trades-person who has the facilities to re-program the Titan Base Repeater.

Base Tech II Base/Repeater Station Operator's Manual


Hardware Error Detection

The Titan Base Repeater automatically tests for certain hardware faults or failures, and when a fault is found, it will blink the "ALM" LED display above the LCD Display and indicate the nature of the fault in the LCD Display as shown below:

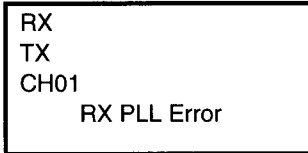


RX
TX
CH01
RX PLL Error

This figure indicates an RX PLL error.

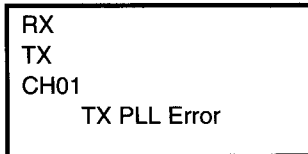

RX
TX
CH01
TX PLL Error

This figure indicates a TX PLL error.

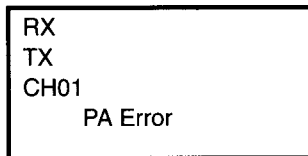

RX
TX
CH01
PA Error

This figure indicates a PA error.

Should the Titan Base Repeater indicate any of these errors, it is necessary to return the Titan Base Repeater to your radio supplier or to a qualified radio trades-person to have the fault corrected.

RS232C Communications Error

If a fault is encountered during programming of the Titan Base Repeater, one of the following messages may be displayed in the LCD Display:

- Over Run Error
- Framing Error
- Parity Error
- Unknown Command
- Data Unmatch
- Send Error
- Answer Timeout
- Receive Timeout

Please switch the Titan Base Repeater "OFF", and then back "ON", and try re-programming the Titan Base Repeater.

Low Battery Detection

If battery supply voltage goes down to 10.8V while repeater Tx operation, the alert tone is automatically transmitted after the Tx is terminated.