

# Sledge GSM

## Quick Start Guide

November 20, 2008

**Dummy Page - To be discarded before printing**

Use this template with A7MotoQSG StructApps



# congratulations

The ZN300 does it all. Use the music player to listen to the newest, hottest tracks. With a stereo wired headset or high quality Bluetooth® stereo headset, listening has never been easier. Or, take photos and video clips, and share them with your friends, in a multimedia message or by uploading them to a social networking website. All this while you're still connected — take or make voice or video calls or exchange messages.

We've crammed all of the main features of your phone into this handy guide, and in a matter of minutes we'll show you just how easy your phone is to use. So go on, avoid those "I'm not sure how to send an MMS" moments and check it out.

**Caution:** Before using your phone for the first time, please read the important **legal and safety** information at the back of this guide (page 59).

## more information

Use this guide to get you going and, if you want more information, see the *User's Guide* (don't worry, it's easy to use). To learn even more, go to [www.motorola.com/consumer/support](http://www.motorola.com/consumer/support).

## this guide

### symbols in this guide



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

# contents


<b>your phone</b> .....	<b>5</b>
<b>main menu</b> .....	<b>6</b>
<b>let's go</b> .....	<b>7</b>
<b>basics</b> .....	<b>8</b>
<b>home screen</b> .....	<b>10</b>
<b>calls</b> .....	<b>11</b>
<b>phonebook</b> .....	<b>21</b>
<b>messages</b> .....	<b>23</b>
<b>text entry</b> .....	<b>26</b>
<b>tips &amp; tricks</b> .....	<b>28</b>
<b>personalize</b> .....	<b>29</b>
<b>photos</b> .....	<b>33</b>
<b>videos</b> .....	<b>35</b>
<b>music</b> .....	<b>37</b>
<b>FM radio</b> .....	<b>40</b>
<b>Web</b> .....	<b>41</b>
<b>airplane mode</b> .....	<b>42</b>
<b>Bluetooth® wireless</b> .....	<b>43</b>
<b>cable connections</b> .....	<b>48</b>
<b>memory card</b> .....	<b>51</b>

<b>synchronize</b> . . . . .	<b>52</b>
<b>tools</b> . . . . .	<b>53</b>
<b>security</b> . . . . .	<b>56</b>
<b>service &amp; repairs</b> . . . . .	<b>58</b>
<b>legal &amp; safety</b> . . . . .	<b>59</b>

DRAFT

# your phone

## *the important keys & connectors*

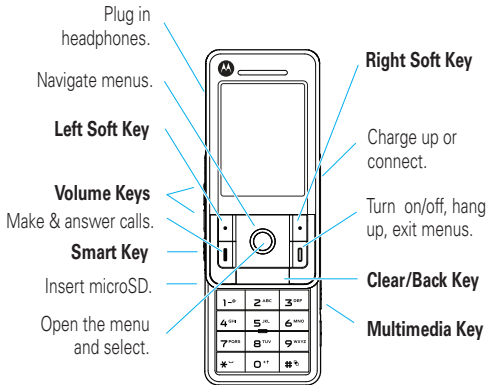

# main menu



## Games & Apps



## Messages

- Create Message
- Voicemail
- Message Inbox
- Email
- Browser Msgs
- Info Services \*
- Outbox
- Drafts
- Templates



## Ring Styles



## Recent Calls



## Multimedia

- Music Library
- Themes
- Voice Records
- Camera
- Video Camera
- Pictures
- Sounds
- Videos



## Web Access \*

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions \*



## Settings

- Personalize
- Tools
- Call Forward
- In-Call Setup
- Initial Setup
- Software Update
- Phone Status
- Headset
- Car Settings
- Airplane Mode
- Network
- Security
- Java Settings



## Phonebook



## Connections

\* optional features

This is the standard main menu layout.

**Your phone's menu may be different.**




# let's go

## let's get you up & running


- 1** remove cover




- 2** SIM:




- 3** microSD memory:



- 4** battery:



- 5** replace cover:



- 6** charge:




**Caution:** See page 59 for battery use & safety information.

# basics

*here are some basics to get you started*


## turn it on & off


Press and hold  for a few seconds or until the display lights up.




**Caution:** If your phone asks for your SIM card PIN code and/or unlock code, see page 56.

## make & answer calls

**To make a call**, enter a phone number and press .




**To answer a call** when your phone rings and/or vibrates, press .

To choose **Hold**, **Mute**, **Transfer**, or other options during a call, press **Options**.

## end calls

Press .



## store contacts


- 1 Enter a phone number in the home screen.
- 2 Press **Store**.
- 3 Enter the contact details and press **Done**.

To manage your **Phonebook**, see page 21.

## call or text contacts

- 1 Press  >  **Phonebook**.
- 2 Scroll to highlight the contact.

**Tip:** To jump to a contact in the phonebook, enter the first few letters of the name.

- 3 To **call**, press .


To send a **text message**, press **Options** > **Send Message**.


To speed dial contacts, see page 14.




**Note:** You can call and text contacts stored in your phone's memory or on your SIM card (see page 21).

# home screen


## *you can always go home*

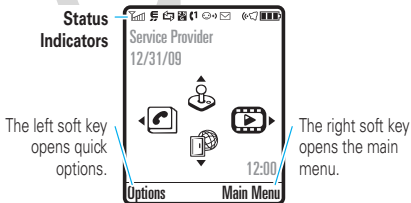The *home screen* appears when you turn on the phone, or any time you press . It looks similar to this:



To **open shortcuts**, press  up, down, left, or right. To change shortcuts, see page 31. To open the **functions** at the bottom of the display, press the **soft keys** (see page 5). To open the **menu**, press . To go back, press .

**Status indicators** appear at the top of the home screen:



# calls

## *it's good to talk*

For the basics, see page 8.

## recent calls & redial

- 1 From the home screen, press  to see a list of recent calls.

To show **Dialed Calls**, **Received Calls**, or **Missed Calls**, press  or .

- 2 Scroll to a call.

To see it, press . To call it, press .




## caller ID

*Calling line identification* (caller ID) shows the caller's name when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.



**Tip:** To play a special ring for a contact, see page 21.

To show or hide **your phone number** from the next person you call, enter their phone number, press **Options** > **Hide ID/Show ID**, then press  to call.


# calls

To show or hide **your phone number** for **all** calls you make, press  >  **Settings** > **In-Call Setup** > **My Caller ID** > **All Calls**.

## emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications, such as medical emergencies.

- 1** Press the keypad keys to dial the emergency number.
- 2** Press  to call the emergency number.

## handsfree


To turn on your phone's handsfree speaker during a call, press **Speaker** (if available), or **Options > Spkrphone On**.

You can use Bluetooth headsets (page 43) or wired headsets plugged into the headset connector (page 5).







**Note:** The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

## handsfree options

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.




To...	Do this...
<b>enable voice dial</b>	Press  >  <b>Settings &gt; Headset</b>  > <b>Voice Dial.</b>

# calls

To...	Do this...	
<b>automatically answer calls</b>	Press  >  <b>Settings</b> > <b>Car Settings</b> or <b>Headset</b> > <b>Auto Answer</b> .	
<b>automatically use a car kit</b>	Press  >  <b>Settings</b> > <b>Car Settings</b> > <b>Auto Handsfree</b> .	

## dialing options

### speed dial

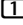To...	Do this...
<b>assign a speed dial</b>	Press  >  <b>Phonebook</b> , scroll to the contact, then press <b>Options</b> > <b>Add to Speed Dial</b> and pick a speed dial key.
<b>use a speed dial</b>	From your home screen, press and hold the key (  calls your voicemail).



# calls

To...	Do this...
<b>edit your speed dial list</b>	Press  >  Phonebook, then press Options > Setup > Speed Dial List.

## quick dial




Dial preprogrammed phone numbers:

**Find it:**   Settings >  Tools > Dialing Services > Quick Dial

## international calls

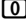

To make international calls, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

## notepad

You can show the last number you entered (such as one you entered during a phone call):

**Find it:**  >  Recent Calls, then Options > Notepad


- To call the number, press .

# calls

- To create a contact with the number in the **Number** field, press **Store**.
- To open the menu to attach a number or insert a special character, press **Options**.

## in-call options


During a call:

- **To put a call on hold**, press **Options > Hold**.
- **To mute a call**, press **Options > Mute**.
- **To answer a second call** when you hear a tone (call waiting), press . Then:
  - To switch between calls, press **Switch**.
  - To connect the two calls, press **Options > Link**.
  - To end the call on hold, press **Options > End Call On Hold**.




**Note:** To turn the call waiting feature on or off, press  >  **Settings > In-Call Setup > Call Waiting > On or Off**.

# calls

- **To start a conference call**, dial the next number and press . When the next number answers, press **Options > Link** to create the conference call.



**Tip:** Press **Options > New Call** before you dial the next number, to put the first caller on hold.




- **To transfer a call**, press **Options > Transfer**, dial transfer number, press .



**Note:** If the transfer fails, your phone might put the first call on hold and try to call the transfer number. If that call connects, you can press **Link** to connect everyone in a conference call.

## answer options

When you receive a call:

- **To stop the call alert** before you answer, press the volume keys.
- **To send the call to your voicemail**, press .
- **To answer by pressing any key**, press  >  **Settings > In-Call Setup > Answer Options > Multi-Key**

# calls

## call forwarding



**Find it:**  >  **Settings** > **Call Forward**

## restrict calls & messages

### block calls from unknown numbers



**Find it:**  >  **Settings** > **Security** > **Restrict Calls**, then enter your unlock code (see page 56)

### block outgoing or incoming calls



**Find it:**  >  **Settings** > **Security** > **Call Barring**



## your phone number

From the home screen, press  then  to see your number.

**Tip:** Want to see your phone number while you're on a call? Press **Options** > **My Tel. Number**.

## edit your contact entry






From the home screen, press  then , select the contact entry, press **View**, then press **Options** > **Edit**.

# calls

## call times & costs

These features give you a rough idea of how much call time you've used and the cost. Note that these figures may not match what your service provider charges you, as they're not measured in the same way.

features	
<b>view call timers</b> ☛ > ☎ Recent Calls, then press Options > Call Times	
<b>show call time during a call</b> ☛ > ⚙ Settings > In-Call Setup > In-Call Timer	
<b>show call cost</b> ☛ > ☎ Recent Calls, then press Options > Call Cost	

## network settings

View network information and adjust network settings:


**Find it:** ☛ > ⚙ Settings > Network



## send or receive data



You can connect your phone to a computer, then place or receive data calls from the computer.

- 1 Ensure that the cable is disconnected** from your phone, then press  > **Connection** > **USB Settings** > **Default Connection** > **Data Connection**.
- 2 Connect the cable** to your phone and an available USB port on your computer.
- 3** Use the computer's software to place or answer a data call. For more information, consult the computer software's documentation.



# phonebook

## *your contacts come with options*

To store and call contacts, see page 9.


## edit or delete contacts

**Find it:**  >  Phonebook

Scroll to the contact or press keypad keys to enter the first letters of a contact you want. You can also press  and  to see the entries in your categories or entries you used recently.

**To delete the contact,** press **Options > Delete Contact.**



**To edit the contact,** press **Options > Edit Contact.**

**Tip:** When you edit a contact, you can give it a special **Ringer ID** and **Picture**. To activate ringer IDs, press  > **Ring Styles > style Detail > Ringer IDs > On.**

## copy contacts

You can **use contacts** stored in your phone's memory or on your SIM card (contacts on the SIM card have fewer details). To choose which you use, press  >  Phonebook, then **Options > View > Phone & SIM Card, SIM Card, or Phone Contacts.**

# phonebook

**To copy one contact** to the phone or SIM card, press  >  Phonebook, scroll to the contact, press Options > Copy to SIM Card or Copy to Phone.

## sort your phonebook

**Find it:**  >  Phonebook, then Options > Setup > Sort by > First Name or Last Name

## send contacts

**Find it:**  >  Phonebook, scroll to the contact, press Options > Send Contact

**To print** a contact on a printer with a Bluetooth wireless connection, select the contact and press Options > Print.



**Note:** You cannot print a **Message List**. For more about Bluetooth connections, see page 43.



# messages

## *sometimes it's better 2 text*



You can send and receive text (SMS), and multimedia (MMS) messages with your phone.

## set up email



**Find it:**  >  Messages, then Options > Setup > Message Setup

Enter the information for your account, then let the phone try to log in. If you have problems or need your account information, contact your email provider.

**Note:** To create a new account, select **[New Entry]** in the **Account Settings** list. Your display shows a folder for each email account under  >  Messages > Email Msgs.

## send messages


**Find it:**  >  Messages > Create Message > New Message or New Email

**1** Press keypad keys to enter text (see page 26).

To insert a **picture or voice note** on the page, press Options > Insert.



**2** When you finish the message, press **Send To**.

# messages

- 3 Scroll to a recipient and press , or press **Options** > **Enter Number** or **Enter Email**.
- 4 Before you send a message, you can press **Options** to choose **Save to Drafts**, **Cancel Message**, or open **Sending Options** (such as message **Subject** or **CC** addresses).
- 5 To **send** the message, press **Send**.


**To use message templates** with preloaded animations, press  >  **Messages** > **Templates** > **Text Templates** or **Multimedia Templates**.



**To send voice messages**, press  >  **Messages** > **Create Message** > **New Voice Msg**. Your phone starts recording the voice message. To stop recording, press **Stop**. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers of the recipients.



## receive messages

When you receive a message, your phone plays an alert and shows a new message indicator . Press **Read** to open the message.















To see all of your messages:

# messages

**Find it:**  >  Messages > Message Inbox or Email

Press **Options** to use or To store any phone numbers, email addresses, Web sites, or files in the message, scroll to the message and press **Options**.

To...	Do this...	
<b>open a message</b>	Press  . To <b>Reply, Forward, Lock,</b> or <b>Delete</b> a message, open it and press <b>Options</b> .	
<b>open browser messages</b>	Press  >  Messages > <b>Browser Msgs.</b>	
<b>store messages</b>	Press  >  Messages, then <b>Options &gt; Setup &gt; Message Setup &gt; Text Msg Setup &gt; Default Storage &gt; SIM Card.</b>	
<b>print messages (using Bluetooth®)</b>	Press  >  Messages > <b>Message Inbox, Email, Outbox, or Drafts.</b> Open the message you want to print and press <b>Options &gt; Print.</b>	

# text entry

## *how fast can u text?*

When you need to enter text, your phone changes to a text entry mode, indicated by an icon at the top of your screen.

**To change modes** when you are entering text, press **#**:

### entry modes

1

or

2

**iTAP™** predicts the word you want, with just one keypress per letter. For example, to enter **home**, press **4 6 6 3**. If the prediction is not correct, press **⦿** to show other options.

**1** or  
**2**

**Tap** lets you press a key one or more times to cycle through the letters and numbers of that key. When you see the character you want, just press another key or wait a second or two to move on. For example, to enter **h**, press **4** two times quickly.

# text entry

## entry modes

**123** **Numeric** mode enters numbers only.

**Shortcut:** Press and hold a number key to temporarily switch to numeric mode.

**@%** **Symbol** mode enters symbols only. To exit this mode, press **#** again.

**To set** your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

**To change capitalization**, press **0** to switch to all capital letters (**ABC**), no capitals (**abc**), or next letter capital (**Abc**).

**To accept** a word completion that appears after the letters you entered, press **⊙** right.







**To enter a space**, press **\***.

**To enter punctuation** or symbols, press **1**.

**To delete a character**, press **C** (to delete a whole word, hold **C**).

# tips & tricks

*make your phone even faster*

To...	Do this...
<b>change ring style</b>	From the home screen, press the volume keys up or down. Hold  to switch to <b>Silent</b> and back.
<b>check your voicemail</b>	In the home screen, press and hold  to check your voicemail.
<b>return to the home screen</b>	In a menu, message, or other screen, press  to cancel and return to the home screen.
<b>update phone software</b>	To check for updates, press  >  <b>Settings</b> > <b>Software Update</b> > <b>Check for Updates</b> 

**Note:** These software updates are safe for your phone, and do not affect your contacts or other personal entries.

# personalize

*add your personal touch*

## ring style

### choose styles

**Find it:**  > Ring Styles > Style: *style name*

**Shortcut:** To change your ring style profile from the **home screen**, just press the volume keys up or down.

### edit ring styles

After you choose a ring style, you can change its alerts, reminders, and volume.

**Find it:**  > Ring Styles > *style* Detail


**Note:** *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.


## themes

A *theme* is a group settings (such as a wallpaper, screen saver, display skin, and ringtone) that you can apply at the same time.











# personalize

To **apply** a theme, press  >  **Multimedia** > **Themes** > *theme*.



To **delete themes you downloaded**, press  >  **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

## display settings

To...	Do this...
<b>choose wallpaper</b>	Press  >  <b>Settings</b> > <b>Personalize</b> > <b>Wallpaper</b> .
<b>choose a skin</b>	Press  >  <b>Settings</b> > <b>Personalize</b> > <b>Skin</b> .
<b>set the scroll bar</b>	Set to <b>Up/Down</b> or <b>Wrap Around</b> in menu lists. Press  >  <b>Settings</b> > <b>Initial Setup</b> > <b>Scroll</b> .
<b>set display brightness</b>	Press  >  <b>Settings</b> > <b>Initial Setup</b> > <b>Brightness</b> .



# personalize

To...	Do this...
<b>save battery life</b>	Your keypad <b>backlight</b> and <b>display</b> turns off when you're not pressing any keys. To set the delay time for this, press  >  <b>Settings</b> > <b>Initial Setup</b> > <b>Backlight</b> .



## home screen shortcuts



You can set the features that open when you press the navigation key, soft keys, or smart key in your home screen (for key locations, see page 5).



**Find it:**  >  **Settings** > **Personalize** > **Home Screen** > **Home Keys**

## main menu appearance

To show your main menu as **icons or a list**, press  >  **Settings** > **Personalize** > **Main Menu** > **View** > **Icons** or **List**.

To change your main menu **order**, press  >  **Settings** > **Personalize** > **Main Menu** > **Reorder**.



# personalize



## time & date

Your phone can use the network to automatically update your time zone, time, and date.

**Find it:**  >  Settings > Initial Setup > Time and Date > Autoupdate > Time & Time Zone



To **manually** set the time zone, time, and date, turn off **Autoupdate**, then: Press  >  Settings > Initial Setup > Time and Date > Time Zone, *time* or *date*.

To choose an **analog or digital** clock for your home screen, press  >  Settings > Personalize > Home Screen > Clock.

## language

Set menu language:

**Find it:**  >  Settings > Initial Setup > Language

# photos

*see it...take it...send it!*


## take & send photos

To get the clearest pictures, wipe the lens clean with a dry cloth before you take a picture.

**Find it:** Slide the multimedia key to .

**Camera Mode**  
(photo or video)

Press  to take the picture.

Press  up or down to view camera settings.  
Press left or right to change.

Open the camera menu.

**Timer**



**Remaining Photos**

232

**Resolution**

**Storage** (phone or memory card)



Zoom  
1x

**Options**

**Exit**

**Focus Point**

Exit the camera.

To change camera settings, press **Options** before you take the photo.

# photos

To take the photo, press  or . Then:

- To **store** the photo, press **Options** > **Store Only**.
- To **send** the photo in a message, press **Send**.
- To **discard** the photo and return to the active viewfinder, press .

## see stored photos

**Find it:**  >  **Multimedia** > **Media**  
**Finder** > **Pictures** > *picture name*

To **copy, move** or **delete** a picture, open it and press **Options** > **Manage** > **Copy**, **Move** or **Delete**.



# videos

*capture moments you want to remember*


## record & send videos


To get the clearest videos, wipe the lens clean with a dry cloth before you record a video.

**Find it:** Slide the multimedia key to .

**Camera Mode  
(photo or video)**

Press  to start the video.


Press  up or down to view camera settings.

Press left or right  to change.

**Minutes  
Remaining**

**Resolution**

**Storage (phone  
or memory card)**

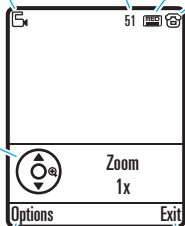

Open the video menu.

Exit the camera.

To change video settings, press **Options**.

# videos

**Tip:** If you want to send your video in a message, set the video length to **MMS**: Press **Options** > **Video Camera Setup** > **Video Length** > **MMS**.

**To record** the video, press .

**To stop** the video, press **Stop**.

- To **preview, store, or discard** the video, press **Options**.
- To **send** the video in a message, press **Send**. Enter text and press **Send To**, then select a recipient.
- To **discard** the video, press .



## play video clips

**Find it:**  >  **Multimedia** > **Videos** > *video*

**Tip:** While a video is playing, you can press **Options** > **Play Full Screen** to see the video at the full display size (press any key to return to the regular view).

# music

*when you need music, all you need is your phone*

## load music

To **download** songs from the Internet, use your phone's micro-browser (press  >  **Web Access** and go to the page with the file).

To **copy** files between your phone and a computer, you will need:



- a USB cable (see page 48) or a computer that supports Bluetooth® connections (see page 43).
- a microSD memory card (see page 51).
- a computer with music files in one of these formats:

music file formats	bit rate
AAC, AAC+, Enhanced AAC+, or M4A	up to 128 kbps
MP3 or MP4	up to 320 kbps

# music


## play music

**Find it:**  >  Multimedia > Music Library

You can open a list of **All Songs**, **Recently Played** songs, or the **Playlists** you created. You can also choose songs by **Albums**, **Artists**, or **Genres**.

**Shortcut:** In a song list, press a number key to jump to songs that begin with the letters on the key.

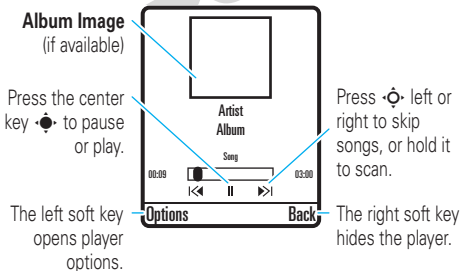


When you select a song:



- **Play or pause**— Press .



# music


- **Rewind or fast-forward**—Hold  left or right (**hold** for at least 2 seconds).
- **Skip to another song**—Press  left or right.
- **Change volume**—Press the volume keys.
- **Hide the player**— Press **Options** > **Hide**. This lets you use other phone features while the song plays. To end the hidden audio player, press  in the home screen.

# FM radio

*listen to news and music anywhere, for free*

## play stations

**Find it:**  >  Multimedia > Radio

- **Volume:** Press  up or down. To mute the radio, press **Options** > **Mute**.
- **Tuning:** Press **Options** > **Scan**.

## use radio presets

**To store** the current station as a preset, just press and hold a number key.

**To go to** a preset station, press the number key.

**To manage** presets, press **Options** > **Station Presets**.


*surf the Web from your phone*

## browser



To **launch** the browser, press  >  **Web Access**.

To **go to a Web page**, press **Options** > **Open** > **Web Address**, enter the Web address (URL), then press **OK**.

To **enter text**, select a text entry field and press  to open it. Then, enter text.

To **choose a storage location** for downloaded files, press  >  **Settings** > **Phone Status** > **Download Location** > **Memory Card** or **Phone**

To **clear the micro-browser history, cache, or cookies**, press  >  **Web Access** > **Browser Setup** > **Clear History**, **Reset Cache**, or **Clear Cookies**

To **exit** the browser, press **Options** > **Exit**.

# airplane mode

## *long flights don't have to be dull*

You can switch your phone to airplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an airplane, without interfering with airplane communications.

**Note:** Your phone cannot make Bluetooth® connections when **Airplane Mode** is on.

**Find it:**  >  **Settings** > **Airplane Mode** > **Airplane Mode** > **On**

You can make the airplane mode option appear whenever you turn on your phone:

**Find it:**  >  **Settings** > **Airplane Mode** > **Prompt At Power Up** > **On**

*don't let wires tie you down*

## connect new devices




**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

**Before you try to connect your phone with a handsfree device,** make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can connect your phone with only one device at a time.


**Find it:**  > **Connection** > **Bluetooth Link** > **Audio Devices**  
> **[Look For Devices]**

Your phone lists the devices it finds within range.

Scroll to one of the Bluetooth devices your phone found and press .

If necessary, press **Yes, OK** or enter the device passkey (such as **0000**) to connect to the device. When the device

# Bluetooth® wireless



is connected, the Bluetooth indicator  appears in the home screen.

**Tip:** Do you have questions about a device? For specific information about a device, check the instructions that came with it.

**For maximum Bluetooth security**, you should always connect Bluetooth devices in a safe, private environment.

## reconnect devices



**Find it:**  >  **Settings** > **Connection** > **Bluetooth Link**  
> **Audio Devices** > *device name*

**Shortcut:** When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. If the device doesn't connect, turn it off and back on. To turn your phone's Bluetooth power on, press  >  **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.

**During a call**, press **Options** > **Use Bluetooth** to switch to a recognized headset or car kit.

## transfer files



You can use a Bluetooth connection to transfer a media file, contact, datebook event, or Web shortcut from your phone to a computer or other device.

**Note:** The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

- 1 On your phone, scroll to the object that you want to transfer.
- 2 **For media files**, press **Options > Manage > Copy or Move**

**Caution:** Moving an object **deletes** the original object from your phone.


**For contacts**, press **Options > Share**

**For datebook events**, press **Options > Send**

# Bluetooth® wireless

- 3 Select a recognized device name, or [Look For Devices] to search for the device where you want to transfer the file.

**If your phone could not transfer the file to the other device**, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

**Note:** Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection.

## receive files



If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing  >  **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.

- 1 Place your phone near the device, and send the file from the device.



# Bluetooth® wireless

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it:

press  >  **Settings** > **Connection** > **Bluetooth Link**  
> **Find Me**.

- 2** Press **Accept** on your phone to accept the file from the other device.


Your phone notifies you when file transfer is complete. If necessary, press **Store** to save the file.


# cable connections

## *your computer wants a friend*



Your phone has a mini USB port so you can connect it to a computer to transfer data.

Before you connect a cable, tell your phone what type of USB connection you want to use by pressing  > **Connection** > **USB Settings** > **Default Connection**.



**Note:** Motorola Original USB data cables and supporting software are sold separately. Check your computer or hand-held device to determine the type of cable you need. To

**transfer data** between your phone and computer, you might need to install the software included with the Motorola Original data kit. See the data kit user's guide for more information.



## connect your memory card to a PC

**Note:** Memory cards are optional. To insert a memory card, see page 7.



# cable connections

You can use a cable connection to access your phone's memory card with a computer. When your phone is connected to a computer, you can only access the memory card through the computer.

**Note:** When your phone is plugged into a computer and is being used for mass storage, it cannot be used for anything else, including making emergency calls. To restore the phone to normal use, disconnect it from the PC.

**Note:** The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

## On your phone:

- 1 **Disconnect the cable** from your phone, if it is connected, then press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

# cable connections

- 2 **Connect the cable** to your phone (see page 48) and to an available USB port on your computer.

## On your computer:

- 1 Open your “My Computer” window, then click on the “Removable Disk” icon to see the files on your memory card.
- 2 Drop files into these folders on the memory card (create the folders if necessary): **mobile\audio**, **mobile\picture** (wallpapers or screen savers), or **mobile\video**.
- 3 When you finish, select the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen, then disconnect the “USB Mass Storage Device” (your memory card).
- 4 Disconnect the cable.

# memory card

*store more*

## show & manage files

**Note:** Memory cards are optional. To insert a memory card, see page 7.



Do not remove your memory card while your phone is using it or writing files on it.

To **see memory card files**, open a file list, such as  **Multimedia** > **Media Finder** > **Pictures**.

To copy or move a file **from your phone to your memory card**, highlight it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**.

To see your card's **available memory** and other information:  >  **Settings** > **Phone Status** > **Storage Devices**.

**Note:** If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

# synchronize



*keep up-to-date*

## ActiveSync



You can use the Internet to synchronize your phone's phonebook and datebook entries with an email account on a Microsoft® Exchange 2003 Server.

You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name**, and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider.

**To schedule** automatic synchronization with an ActiveSync partner you set up, press  >  **Settings** > **Connection** > **MOTOSYNC** > **Exchange**, then press **Options** > **Auto Sync Setup**. Enter the time and days you want your phone to synchronize.

*keep up with life*

## calendar

### add new events

**Find it:**  >  **Settings** > **Tools** > **Calendar**, scroll to the day, press , scroll to **Create New Event**, and press .

When you see an **event reminder**, press **View** to open event details or press **Exit** to close the reminder.

**Tip:** To change your reminder sound, see page 29.

### see or edit events

**Find it:**  >  **Settings** > **Tools** > **Calendar**, scroll to the day, and press .

Scroll to the event and press . To edit the details, press **Options** > **Edit**.

**Tip:** Keeping up with life can be tough work. To see a list of your upcoming events, open the calendar and press **Options** > **View** > **Organized Events**.

# tools

## send events to other devices

**Find it:**  >  **Settings** > **Tools** > **Calendar**, scroll to the day, press , scroll to the event, press **Options** > **Send** > **with Bluetooth**

## print events



You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer.


**Find it:**  >  **Settings** > **Tools** > **Calendar**

Go to the month, week, or day view and press **Options** > **Print**.

For more about Bluetooth connections, see page 43.

## alarms

**To set an alarm,** press  >  **Settings** > **Tools** > **Alarm Clock**

**When an alarm happens:** To turn off the alarm, press **Disable** or . To set a delay, press **Snooze**.



## voice records

### create voice records

**Find it:**  >  **Multimedia** > **Voice Record**

When you are ready, press  and speak into the phone.

### play voice records

**Find it:**  >  **Multimedia** > **Media Finder** > **Voice Notes**, scroll to the voice record, and press .

## calculator & currency converter

### calculator

**Find it:**  >  **Settings** > **Tools** > **Calculator**

### currency converter

**Find it:**  >  **Settings** > **Tools** > **Calculator**, then press **Options** > **Exchange Rate**

Enter the exchange rate, press **OK**, enter the amount, then press **Options** > **Convert Currency**.

# security


*keep your phone safe*

## codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

**Find it:**  >  **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** password.

**If you forget your unlock code:** At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.



**If you forget other codes:** If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

## lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

# security

To **manually lock** your phone:

Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**, then enter your four-digit unlock code.



To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**, then enter your four-digit unlock code.

**Note:** You can make emergency calls on a locked phone (see page 12). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

## lock your SIM card or applications

To lock or unlock your **SIM card**, press  >  **Settings** > **Security** > **SIM PIN**.

**Caution:** If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**.

To **lock an application** (such as **Messaging**), press  >  **Settings** > **Security** > **Lock Application**.

Enter your unlock code to open a list of applications. Select an application and choose **Locked** to lock it.

# service & repairs

## *we're here to help*

If you have questions or need assistance, we're here to help.

Go to [www.motorola.com/support](http://www.motorola.com/support), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

### battery use & safety

**IMPORTANT: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE.** Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

#### **DON'Ts**

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola, even if they appear to be working properly.
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
- Avoid leaving your phone in your car in high temperatures.

#### **DOs**

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

**IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS.**

To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries.

Consumers should confirm that any battery they purchase has a “Motorola Original” hologram.

**Motorola recommends you always use Motorola-branded batteries and chargers.** Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.

**Important:** Motorola’s warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

**Warning:** Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

## **PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING**

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- [www.motorola.com/recycling](http://www.motorola.com/recycling)
- [www.rbc.org/call2recycle/](http://www.rbc.org/call2recycle/) (in English only)

**Disposal:** Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.

**Warning:** Never dispose of batteries in a fire because they may explode.



## **battery charging**

**Notes for charging your phone’s battery:**

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.

- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

DRAFT

# ***Specific Absorption Rate Data***

---

## **The model wireless phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is  $1.6 \text{ W/kg}^1$ . Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is  $1.09 \text{ W/kg}$ , and when worn on the body, as



described in this user guide, is 0.77 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

## European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



IMEI: 350034/40/394721/9

CE 0168

Type: MC2-41H14

Product  
Approval  
Number

The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the

Product Approval Number from your product's label in the "Search" bar on the Web site.

## Safety and General Information

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.**

### Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

### Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

#### Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: [www.motorola.com](http://www.motorola.com).

## RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

### Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

### Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

### Driving Precautions

The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Responsible driving practices can be found in the “Smart Practices While Driving” section in this guide (or separate guide).

## Operational Warnings

Obey all posted signs when using mobile devices in public areas.





### Potentially Explosive Atmospheres



Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

### Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.

Symbol	Definition
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

## Batteries & Chargers

**Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the “battery use & safety” section in the user’s guide.**

## Keep Your Mobile Device and Its Accessories Away From Small Children

These products are not toys and may be hazardous to children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

## Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

## Caution About High Volume Usage



**Warning:** Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at [www.motorola.com/hearingsafety](http://www.motorola.com/hearingsafety) (in English only).

## Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Mar0108]

## FCC Notice to Users

**The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.**

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Use and Care

To care for your Motorola phone, please keep it away from:

### **liquids of any kind**

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.

### **dust and dirt**

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.







### **extreme heat or cold**

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



### **cleaning solutions**

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



### **microwaves**

Don't try to dry your phone in a microwave oven.



### **the ground**

Don't drop your phone.

## Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

## Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

## Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: [www.motorola.com/recycling](http://www.motorola.com/recycling)

## Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

## Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device which updates the device's security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step

instructions on how to delete all personal information from your device, see the section entitled “master clear” or “delete data” in this user’s guide.

**Note:** For information on backing up your mobile device data before erasing it, go to [www.motorola.com](http://www.motorola.com) and then navigate to the “downloads” section of the consumer Web page for “Motorola Backup” or “Motorola Phone Tools.”

- **Understanding AGPS**—In order to comply with emergency caller location requirements of the FCC, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user’s location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how use of your mobile device may impact your privacy or data security, please contact Motorola at [privacy@motorola.com](mailto:privacy@motorola.com), or contact your service provider.

## Smart Practices While Driving

### Drive Safe, Call Smart

**Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas -- for example, handsfree use only. Go to [www.motorola.com/callsmart](http://www.motorola.com/callsmart) (in English only) for more information.**

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.



- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.\*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.\*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196

[www.hellomoto.com](http://www.hellomoto.com)

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© 2008 Motorola, Inc. All rights reserved.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 68XXXXX359 \_\_\_\_

U.S. patent Re. 34,976

---

\* Wherever wireless phone service is available.