

Applicant: Motorola Mobility

FCC ID: IHDP56MA5

Draft Users Manual

Exhibit 8

MOTOROLA PRO+
with MOTOBLUR™

LIFE.  POWERED.

CONGRATULATIONS

MOTOROLA PRO+ WITH MOTOBLUR

Part business, part casual and all smartphone. Whether it's home, work or play, the MOTOROLA **PRO+** with MOTOBLUR is fast, efficient and secure.

- **Fast**—A 1GHz processor for smooth browsing and super fast apps.
- **Personal**—See what's important to you. News, Emails, Documents, Calendar, right on your home screen and laid out how **you** want.
- **Social**—Sharp photos, HD videos, your music and your friends. Quick, simple and shared.
- **Business ready**—Enterprise level security and business ready tools to help keep your work close.

Note: Certain apps and features may not be available in all countries.

Caution: Before assembling, charging, or using your phone for the first time, please read the important safety, regulatory and legal information in this guide.

SAR This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The highest SAR values measured for this device are listed in the legal and safety information packaged with your product.

Note: When using the product while worn on your body, either use an approved accessory such as a holster or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

WANT MORE?

- **Answers:** Touch  >  **Help Center.**

You can also flick your home screen left or right to see the Getting Started and Tips & Tricks widgets.

- **Support:** Phone updates, PC software, user guides, online help and more at www.motorola.com/pro+.
- **MOTOBLUR:** After you create a MOTOBLUR account, open it at www.motorola.com/mymotoblur.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

YOUR PHONE

the important keys & connectors



Note: Your phone might look a little different.

CONTENTS

LET'S GO	3
TOUCHSCREEN & KEYS	6
HOME SCREEN	8
SOCIAL NETWORKING	11
CALLS	13
CONTACTS	16
MESSAGING	19
TEXT ENTRY	22
WEB	24
LOCATION	26
YOUTUBE™	28
APPS & UPDATES	30
BLUETOOTH™ WIRELESS	31
WI-FI	33
DLNA	35
TIPS & TRICKS	35
PERSONALIZE	37
PHOTOS & VIDEOS	39
MUSIC	42
MEMORY CARD & FILE TRANSFER	47
TOOLS	49
MANAGEMENT	53
SECURITY	54
TROUBLESHOOTING	57
SERVICE & REPAIRS	58
SAFETY, REGULATORY & LEGAL	59

LET'S GO

let's get you up and running

ASSEMBLE & CHARGE

1 SIM in



2 microSD in (may already be inserted)



3 Battery in



4 Cover on



5 Charge up



Caution: Please read "**BATTERY USE & SAFETY**" on page 59.


SET UP & GO

Create or log into a MOTOBLUR account to get your contacts, email, messages, and status information, for all your accounts, all in one place. There's more in "YOUR MOTOBLUR ACCOUNT" on page 11. Registration is secure, and should only take a few minutes:

- 1 Turn on.




- 2 Select a language.

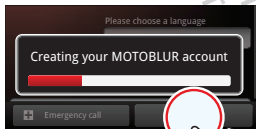

If you have not created a MOTOBLUR account, you'll need to register: Enter your name, your current email address (where MOTOBLUR can send account information), and a new MOTOBLUR account password.

CONFIDENTIAL INFORMATION

- 4 Add your accounts to MOTOBLUR.

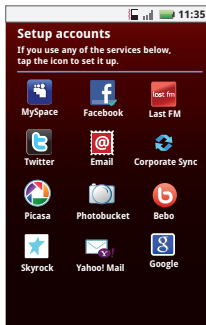



To add an account, touch it. Then, enter the user name or email and password that you set up on that account.

Tip: For more, or to add accounts anytime, go to "ADDAccount" on page 11.

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.


TURN IT ON & OFF

To turn on your phone, press and hold Power  (on the top of the phone).



To turn off your phone, press and hold Power , then touch **Power off**.

LOCK & UNLOCK

To lock the screen/phone:

- Press Power .
- Let the screen time out (don't press anything).

To unlock the screen/phone:

- Press Power , then drag  right.
If you've set a lock pattern, passcode or PIN, you'll be asked to enter it.

For more security features, see “**SECURITY**” on page 54.

WI-FI CONNECT

If you want to use a Wi-Fi network for even faster Internet access, touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.

COOL CONTENT & MORE

Browse and download from thousands of the coolest apps on the planet from Android Market™ (see “**APPS & UPDATES**” on page 30).

Your phone comes with a microSD memory card installed—you can load it up with photos, videos, and music from your computer using “**MEMORY CARD & FILE TRANSFER**” on page 47.

SECURITY

Your contacts are backed-up on MOTOBLUR, so don't worry. Even if you lose your phone, MOTOBLUR can help you find it or wipe it. And when you get your next MOTOBLUR product, your stored info makes it a snap to set up with just a username and password.



Of course it doesn't stop there. There are plenty of ways to protect your phone and your information, in “**SECURITY**” on page 54.

TOUCHSCREEN & KEYS

a few essentials

TOUCHSCREEN ON/OFF

Your touchscreen is on when you need it and off when you don't.

- To make your touchscreen sleep or wake up, just press Power .
- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.
- To let the touchscreen adjust brightness automatically, touch Menu  > **Settings** > **Display** > **Brightness** and check **Automatic brightness**.

Note: Your touchscreen might stay dark if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor. To find Motorola accessories for your phone, visit www.motorola.com/products.

TOUCH TIPS



Here are some tips on how to navigate around your phone.


TOUCH

To choose an icon or option, *touch* it.






TOUCH & HOLD

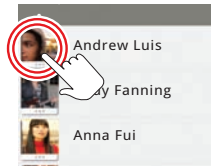To open special options, *touch and hold* an icon or other item. Try it: From the home screen, touch  >  **Contacts**, then touch and hold a contact to open options.



DRAG

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: From the home screen, touch  >  **Contacts**, then drag your contacts list up or down.

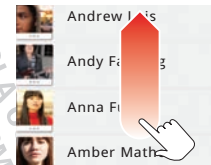

Tip: When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A - Z.

FLICK

To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.

PINCH-TO-ZOOM

Get a closer look at maps, web pages, or photos. To zoom in, *touch* the screen with two fingers and then slide them apart. To zoom out, *drag* your fingers together.



KEY TIPS

MENU, HOME, BACK & SEARCH

Touch Home (🏠) to close any menu or app and return to the home screen.

From the home screen, touch and hold Home (🏠) to show the last few apps you used, then touch an app to open it.

From the home screen, touch Home (🏠) to show all your home screen panels.

Touch Menu (☰) to open menu options, or touch Back (⬅️) to go back.

Touch Search (🔍) for text search, or press (🗣️) for voice search.

SLEEP & WAKE UP

To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power (🔘). To wake up the touchscreen, just press Power (🔘), then drag (🔒) right.

To change how long your phone waits before the screen goes to sleep automatically, touch Menu (☰) > **Settings** > **Display** > **Screen timeout**.

Tip: To make the screen lock when it goes to sleep, use “**SECURITY LOCK**” on page 55.

POWER KEY MENU

Press and hold Power (🔘) to open the power key menu, where you can turn off the phone (**Power off**), or turn **Airplane mode** or **Silent mode** on or off.

ADJUST VOLUME

Press the volume keys to change the ring volume (from the home screen), the earpiece volume (during a call), or the media volume (when listening to music or watching a video clip).