


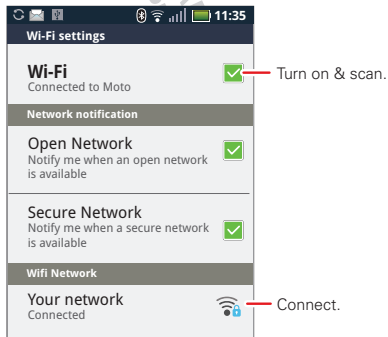
WI-FI

home, office, or hotspot

QUICK START: WI-FI


Use a wireless network for fast Internet access and to download data.

Find it: From the home screen, touch Menu  > **Settings > Wireless & networks > Wi-Fi settings**



Note: Your phone's Wi-Fi features and power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.





TURN WI-FI ON OR OFF

Find it: From the home screen, touch Menu  > **Settings > Wireless & networks > Wi-Fi**

Note: To extend battery life, turn off Wi-Fi power when not in use.

WI-FI SEARCH & CONNECT

To find networks in your range:

- 1 From the home screen, touch Menu  > **Settings > Wireless & networks > Wi-Fi settings.**
- 2 Touch **Wi-Fi** to turn on and scan. If Wi-Fi is already on, touch Menu  > **Scan.** Your phone lists the networks it finds within range.
Tip: To see your phone's MAC address or other Wi-Fi details, touch Menu  > **Advanced.**
- 3 Touch a network to connect.
- 4 If necessary, enter **Network SSID**, **Security**, and **Wireless password**, and touch **Connect.** When your phone is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.

HOTSPOT

Note: You need to subscribe to Wi-Fi hotspot service to use this feature. Contact your service provider.

You can set up your phone as a Wi-Fi hotspot to provide portable, convenient internet access to other Wi-Fi enabled devices.

SETUP

Note: Risks can be associated with connecting to the public internet. Your phone allows you to create a 3G Mobile Hotspot, which may be accessible by unauthorized users. It is highly recommended that you use a password other possible steps to protect your computer from unauthorized access. To add security to your Wi-Fi hotspot:

Find it:  >  **Mobile Hotspot** > **Configure Mobile Hotspot**

Touch a setting to modify it:

- **SSID**—Enter a unique name for your hotspot.
- **Security**—Select the type of security you want: **WEP**, **WPA**, or **WPA2**. Enter a unique password. Other users can access your Wi-Fi hotspot only if they enter the correct password.

Note: Keep it secure. To protect your phone and hotspot from unauthorized access, it is strongly

recommended that you set up hotspot **Security** (**WPA2** is the most secure), including password.

- **Channel**—Select a channel that minimizes potential interference. You may need to try different channels after your hotspot is active for a time.

Touch **Save** when the settings are complete.

ACTIVATE HOTSPOT



Find it:  >  **Mobile Hotspot** > **Mobile Hotspot**


When your Wi-Fi hotspot is active, other Wi-Fi enabled devices can connect by entering your hotspot's **SSID**, selecting a **Security** type, and entering the correct **Wireless password**.

DLNA

DLNA lets you expand the ways you can enjoy your photos and videos on a DLNA Certified HDTV or monitor, using your own Wi-Fi network.

Make sure your phone is connected to an active Wi-Fi network and has access to a DLNA Certified device.



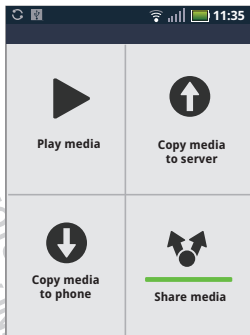





- 1 Touch  >  **DLNA**.
- 2 Touch **Play media**, **Copy media to server**, **Copy media to phone**, or **Share media**. Then follow the instructions you see on your phone.





TIPS & TRICKS

a few handy hints

SHORTCUTS


To...	
Return to the home screen	Touch Home  .
See recently dialed numbers	Touch  Dialer > Recent .
Sleep/wake your phone	To sleep, press Power  . To wake, press Power  again.
Set screen lock	From the home screen, touch Menu  > Settings > Location & security > Set up screen lock .
Perform a text search	Touch Search  .
Perform a voice search	Press  .
Show recent apps	From the home screen, touch and hold Home  .

To...	
Turn airplane mode on/off	Press and hold Power  > Airplane mode.
View and control Bluetooth™, Wi-Fi, and GPS	Touch and hold an empty spot on your home screen, then touch Motorola widgets > Bluetooth toggle, Wi-Fi toggle or GPS toggle.
Sync media to your desktop / laptop	Visit www.motorola.com/medialink
Sync contacts from your desktop / laptop to your phone	Use the MOTOBLUR portal: www.motorola.com/mymotoblur
Change which messages appear in the Universal Inbox	Open the Universal Inbox then touch Menu  > Edit Universal Inbox to choose your accounts.
Add a widget or shortcut on your home screen	Touch and hold an open area on your home screen to open the Add to Home screen menu, then choose Shortcuts.

To...	
Move a widget or shortcut	Touch and hold the widget or shortcut until you feel a vibration, then drag it where you want.
Delete a widget or shortcut	Touch and hold a widget or shortcut until you feel a vibration, then drag it to the trash can at the top of your screen.








BATTERY TIPS

Your phone is like a small computer, giving you a lot of information and apps, at 3G speed, with a touch display! Depending on what you use, that can take a lot of power.

To start getting the most out of your battery, touch Menu  > **Settings > Battery & data manager > Battery mode.** Choose **Performance mode** for constant data transfer and battery use, **Maximum battery saver** when your battery is low, or **Nighttime saver** if you want to limit your data and wireless connections during off-peak hours.

To save even more battery life between charges, you could reduce:

- Recording or watching videos, listening to music, or taking pictures.

- Widgets that stream information to your home screen, like news or weather (“**USE & CHANGE YOUR HOME SCREEN**” on page 8).
- Unused online accounts that you registered with MOTOBLUR (“**EDIT & DELETE ACCOUNTS**” on page 12).
- GPS, Wi-Fi, and Bluetooth™ use: Touch and hold an empty spot on your home screen, then touch **Motorola widgets > Bluetooth toggle, Wi-Fi toggle or GPS toggle** to view and control.
- Email updates: Touch  >  **Messaging > Menu**  > **Messaging Settings > Email > Email delivery.**
- Network speed: from the home screen touch Menu  > **Settings > Wireless & networks > Mobile networks > Select network > 2G only.**
- Network searching: to keep your phone from looking for networks when you are out of coverage, press and hold Power  > **Airplane mode.**
- Display brightness: from the home screen touch Menu  > **Settings > Display > Brightness > (dimmer setting).**
- Display timeout delay: from the home screen touch Menu  > **Settings > Display > Screen timeout > (shorter setting).**

PERSONALIZE

add your personal touch

WIDGETS


To add a widget:



- 1 Find an empty spot on your home screen where you want to add a widget, then touch and hold.
Tip: You can flick left or right to open other panels on your home screen.
- 2 Touch **Motorola widgets** or **Android widgets.**
- 3 Touch the type of widget. If necessary, enter the widget settings.

You can personalize widgets with content that you choose.


RINGTONES

To personalize your ringtones:

Find it: From the home screen, touch Menu  > **Settings > Sound > Phone ringtone or Notification ringtone**

Tip: To use a song as a ringtone, touch  >  **Music > My Music > Songs**, touch and hold the song name, then touch **Set as ringtone.**

To set your vibrate options:

Find it: From the home screen, touch Menu 




> **Settings** > **Sound** > **Phone vibrate**

WALLPAPER



To apply a new wallpaper:

- 1 Find an empty spot on your home screen, then touch and hold.
- 2 Touch **Wallpapers**.
- 3 Touch **Gallery** to select a photo as your wallpaper, touch **Live wallpapers** or **Wallpapers** to choose a wallpaper that comes with your phone.

SOUNDS

- To set volume for ringtone, media and alarms, from the home screen touch Menu  > **Settings** > **Sound** > **Volume**.
- To play tones when using dial pad, from the home screen touch Menu  > **Settings** > **Sound** > **Audible touch tones**.
- To play sound on a screen selection, from the home screen touch Menu  > **Settings** > **Sound** > **Audible selection**.

DISPLAY SETTINGS

- To set display brightness, from the home screen touch Menu  > **Settings** > **Display** > **Brightness**.
- To set animation, from the home screen touch Menu  > **Settings** > **Display** > **Animation**.

DATE & TIME

Set date, time, time zone, and formats:

Find it: From the home screen, touch Menu 

> **Settings** > **Date & time**

LANGUAGE & REGION

Set your menu language and region:

Find it: From the home screen, touch Menu 

> **Settings** > **Language & keyboard** > **Select locale**

PHOTOS & VIDEOS


see it, capture it, share it!

PHOTOS

TAKE A PHOTO


Take that family photo, and post it online for everyone to see.

Find it:  Camera

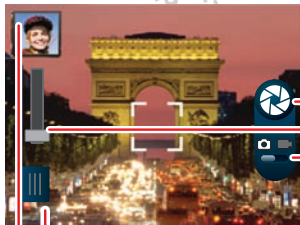

- Capture
- Zoom
- Drag to change mode.

- Open options.
- Open last photo.

Note: To set where photos are stored touch Menu  > **Settings** > **Storage location**. You can store photos on your **SD card** or **Internal phone storage**.








To take the photo, touch . After you take the photo, you'll see a small image in the top left corner.

PHOTO OPTIONS

To **see** the photo you have taken, touch the photo thumbnail. Then:

- To **set** the photo as a wallpaper or contact photo, touch Menu  > **Set as**.
- To **delete** a photo, touch Menu  > **Delete**.
- To **send** the photo in a message or post it online, touch  > **Photo Share**, **Text Messaging** or **Bluetooth**. For more info on sharing, see “**SHARE PHOTOS & VIDEOS**” on page 40.
- To **quick upload** the photo, touch .
- To **comment** on a photo, touch .

CAMERA SETTINGS

Touch the viewfinder, then touch Menu  to change camera settings:

Options

Effects	Set a photo effect: Normal , Black and White , Negative , Sepia , or Solarize .
----------------	--------------------------------------------------------------------------------------------------------------------

Options

Scenes Set the type of photo you want to take: **Auto**, **Portrait**, **Landscape**, **Sport**, **Night Portrait**, **Sunset**, **Macro**, or **Steady shot**.

Modes Set to **Single shot** or **Panorama** mode.

Brightness Drag the bar to change brightness.

Flash Touch Flash to choose **Flash On**, **Flash Off**, or **Auto Flash**.

In the viewfinder, touch Menu  > **Settings** to set **Picture resolution**, **Storage location**, **Geo-Tag**, or **Shutter tone**.


VIEW PHOTOS & VIDEOS

Find it:  >  **Gallery**

Your photos and videos plus your friends' photos and videos all in one place:

- Touch **Camera roll** to see the photos and videos you have taken, or touch **My library** to sort photos and videos by **Albums**, **Locations**, **Tags**, or **Timeline**.

- Touch **Online**, or **Friends** to see your or your friends' online albums.

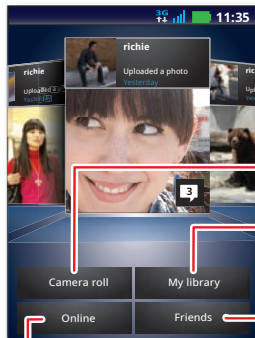

View your captured photos & videos.


Sort your photos & videos.

Go to your friends' online albums.

See your online albums (like Picasa™, Flickr™, or Facebook™).

SHARE PHOTOS & VIDEOS

Find it:  >  **Gallery**

- 1 Touch a photo or video, then touch .
- 2 Choose how you want to share—like **Bluetooth**, **Email**, **Messaging**, or an online album.

MANAGE PHOTOS & VIDEOS

Find it:  >  **Gallery**