





MOTO XT319

User's Guide

Congratulations

MOTOROLA XT318/XT319

Your MOTOROLA **XT318/XT319** phone delivers more for your work and play!

- **Search:** Touch Search  to search across your apps, contacts, web, and maps—or just enter the address for a place or a web page.
- **Apps:** Open  **Market** to download games for fun, social networking apps to keep in touch (like Facebook™ or Twitter), or find something else you like with “**Apps**” on page 6.
- **Touchscreen:** Browse the web and pinch-to-zoom on the touch display in “**Web**” on page 18.
- **Camera:** Capture photos and videos with the 3MP auto-focus camera in “**Photos & videos**” on page 20.

Note: Some apps and features might not be available in all countries.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

More

- **Support:** Phone updates, PC software, online help and more at www.motorola.com/support.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

Your phone

the important keys & connectors



To open the stand, pull outwards.



Contents

| | |
|---|----|
| Let's go..... | 3 |
| Home screen & apps..... | 5 |
| Personalize..... | 7 |
| Calls..... | 9 |
| Contacts..... | 11 |
| Messaging..... | 13 |
| Text entry..... | 15 |
| Schedule..... | 16 |
| Web..... | 17 |
| Location..... | 18 |
| Photos & videos..... | 20 |
| Music..... | 21 |
| Bluetooth™, Wi-Fi, & cable connections..... | 23 |
| Security..... | 26 |
| Tips & tricks..... | 27 |
| Troubleshooting..... | 29 |
| Safety, Regulatory & Legal..... | 30 |

Let's go

let's get you up and running

Assemble & charge

1 Cover off



2 SIM in



3 microSD in (may already be inserted)



4 Battery in



5 Cover on



6 Charge up




Caution: Please read “**Battery Use & Safety**” on page 31.

Tip: To save battery life, see “**Battery tips**” on page 28.

Set up & go

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

When you turn on your new phone, you can create or enter a Google™ account so that you can download apps, use Gmail™, and much more:


- 1 Press and hold Power  to turn on your phone.
- 2 Touch the Android™ image to begin setup.
- 3 Touch a button to **Create** a Google account, **Sign in** with one you have, or **Skip**.




You can log into your account from a computer at accounts.google.com.


- 4 Enter details to create or sign into your account. When your phone confirms the account, it shows account sync options.
 - To change whether your phone shows the Google account’s contacts, Gmail™, and calendar, touch the Google account name.


4 Let’s go

- To add another account, touch **Add account**. For details, see “**Email**” on page 14.
- To exit setup touch Home .

If your phone cannot connect, you can touch Menu  > **Wireless settings** to change mobile network settings.

sleep & wake up

Your screen sleeps when you hold it to your ear during a call, or when it is inactive. To change the sleep delay, touch Menu  > **Settings** > **Display** > **Screen timeout**.

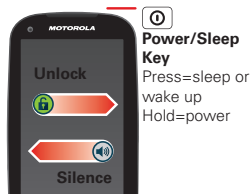



Keys

Use your phone's keys to navigate and open options at any time.

Press the volume keys to change the ringer volume (in the home screen), or the earpiece volume (during a call).

From any screen, press the camera key on the right side of the phone to open the camera.

Touch Home  to return to the home screen. Touch and hold Home  to see your recent apps.




Home screen & apps


a few essentials


Use your home screen for quick access to apps, search, and more. Download social networking apps (like Facebook™ or Twitter) to keep in touch!


Quick start: Home screen

You'll see the home screen when you turn on the phone or touch Home  from a menu:




- To open shortcuts or widgets, **touch** them. Touch Home  to return to the home screen.


When you open shortcuts or widgets, touch Menu  for options.

- To move or delete shortcuts or widgets, **touch and hold** them until you feel a vibration, then drag it to another spot, another panel, or  at the bottom.

In lists like **Contacts**, touch and hold list items for options.


- To add shortcuts, widgets, or wallpaper, touch and hold an empty spot until you see the menu. You can also add a folder to organize your shortcuts.
- To show more panels, **drag or flick** right or left. Touch and hold  to show panel thumbnails.

In lists like **Contacts**, drag or flick to scroll.




To change your ringtone, display brightness, and more, touch Menu  > **Settings** > **Sound** or **Display**. For details, see “**Personalize**” on page 7.

Apps


To show your **app menu**, touch .

- To scroll through the menu, flick up or down.
- To open an app, touch an icon.
- To close the app menu, touch Back .

Tip: To show the last eight apps you opened, touch and hold Home .

To **download** new apps from Android Market™, touch  > **Market**. Touch Search  to find an app, or touch **Downloads** to show or reinstall the apps you downloaded. To download apps from websites, you need to change your security settings: Touch Menu  > **Settings** > **Applications** > **Unknown sources**.


Warning: Apps downloaded from the web can be from unknown sources. To protect your phone and personal data, only download apps from sources you trust.

To **move or uninstall** your apps, touch Menu  > **Settings** > **Applications** > **Manage applications**. Touch an app in the list to show details and options.

On your computer, you can browse and manage apps for all your devices powered by Android™ at market.android.com.

Phone status & notifications

In the status bar at the top of your screen, the right side shows phone status. The left side shows new messages or events (for details, flick the bar down).

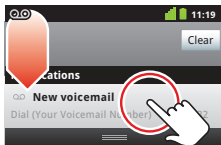

| | | | |
|--|------------------|--|---------------------------|
| | network strength | | battery strength |
| | new voicemail | | new text message |
| | Bluetooth™ on | | Bluetooth connected |
| | Wi-Fi connected | | airplane mode |
| | USB connected | | alarm set |
| | silent ringer | | silent ringer, vibrate on |
| | mute call | | speakerphone |


Personalize

add your personal touch

Customize your phone's sounds and appearance to make it unique to you!


Quick start: Personalize

From the home screen, touch Menu > **Settings** > **Sound** or **Display**.

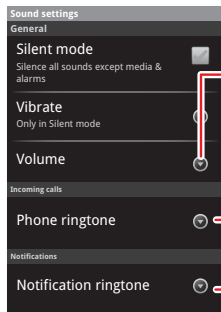





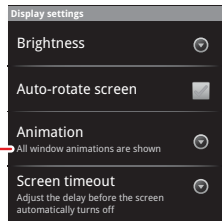



Choose separate volume settings for incoming calls, media, alarms, and notifications.

Call & Message Notifications




Turn on or off menu animations.

| To... | |
|---|--|
| Choose a ringtone or vibration for calls and messages | Touch Menu  > Settings > Sound , then choose Phone ringtone , Notification ringtone , or Vibrate . |
| Change the volume | Touch Menu  > Settings > Sound > Volume . |
| Turn dialpad sounds on or off. | Touch Menu  > Settings > Sound > Audible touch tones . |
| Turn menu selection sounds on or off | Touch Menu  > Settings > Sound > Audible selection . |
| Change your wallpaper | Touch and hold an empty spot on the home screen, then touch Wallpapers . |
| Change shortcuts and widgets on your home screen | Touch and hold them. For details, see “ Home screen & apps ” on page 5. |
| Set display brightness | Touch Menu  > Settings > Display > Brightness . |

| To... | |
|---|---|
| Control whether some apps rotate the screen when you rotate your phone | Touch Menu  > Settings > Display > Auto-rotate screen . |
| Turn on or off animations that make your menus look smoother | Touch Menu  > Settings > Display > Animation . |
| Calibrate the sensors used by some games or navigation apps | Touch and hold the shortcut or widget until you feel a vibration, then drag it to where you want. |
| Delete a shortcut or widget | Touch Menu  > Settings > Display > G-Sensor Calibration (movement) or E-Compass Calibration (direction). |

Language & region


To set your menu language and region, touch Menu  > **Settings** > **Language & keyboard** > **Select language**


Calls







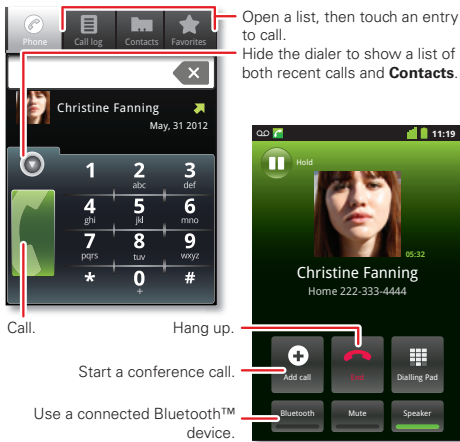


it's good to talk

Dial numbers, see recent calls, combine calls, or set up forwarding, restrictions, and more.



Quick start: Calls

From the home screen, touch .




- To **make** a call, touch , enter a number, then touch . When dialing, touch Menu  to add a pause (pauses two seconds), or wait (waits for your confirmation). To enter the international dialing code, touch and hold .
- To **answer** a call, drag  to the right.
- **During** a call, touch Menu  to switch to a Bluetooth **headset** (see “**Bluetooth™, Wi-Fi, & cable connections**” on page 24). Touch Home  or Back  to hide the active call display (to reopen it, touch .


Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

- To use the **speakerphone** during a call, touch **Speaker**.
- To **enter numbers** during a call, touch **Dialing Pad**.
- To **mute** or **unmute** a call, touch **Mute**.
- To **end** a call, touch .
- To **ignore** an incoming call, drag  to the left.

Tip: For quick access to contacts, see “**Favorites**” on page 12.

Recent calls

To show recent calls, touch  > **Call log**.

- To call, text, open, or save an entry, touch and hold it.
- To clear the list, touch Menu  > **Clear call log**.