


View Notifications and Phone Status

At the top of the screen, icons on the left notify you about new messages or events (notifications). Icons on the right tell you about phone status. Flick the bar down to show notification details.

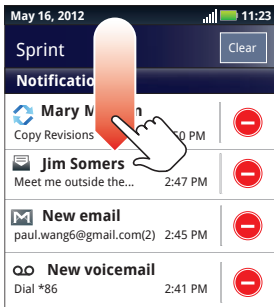

This list identifies the symbols you'll see on your phone's display screen:



Battery Strength — A fuller battery indicates a greater charge. The “lightning” icon (bottom rows) indicates the phone is charging.



Signal Strength — More bars next to the antenna indicate a stronger signal.



No Service — Your phone is without service. You cannot make or receive any type of call.



Phone In Use — Your phone is active on a phone call.



Direct Connect In Use — Your phone is active on a Direct Connect call.



Group/Talkgroup In Use — Your phone is active on a Group Connect or Talkgroup call.



Bluetooth* In Use — Your phone is using Bluetooth. If this icon is black, your phone is in discoverable mode. If this icon is light gray, a Bluetooth connection is active.



Active Phone Line — 1 indicates phone line 1 is ready to make calls; 2 indicates phone line 2 is ready to make calls.



Call Forward — Your phone is set to forward calls. See “Call Forwarding” on page 66.



Ringer Off — All sound is turned off on your phone. See “Vibrate All” on page 85.



Speaker Off — Direct Connect sound is set to come through the earpiece rather than through the speaker.



Speaker On — Direct Connect sound is set to come through the speaker rather than through the earpiece.



Vibrate — Your phone is set to vibrate and not to ring.

Connection — You are connected to a 3G or 4G network.



Airplane Mode — Your phone is set not to receive calls and other transmissions. See “Airplane Mode” on page 88.



TTY — You are ready to use your phone to make calls using a TTY (text telephone) device. See “Telecommunications Relay Service” on page 68.



Hearing Aid — Your phone is set for use with a hearing aid and is active on a phone call. See “Using Your Phone With a Hearing Aid Device” on page 147.



Text Message — You have one or more text messages. See “Receiving Messages” on page 56.



Email — You have one or more emails.



Voicemail — You have one or more voicemails.



Data Sync — Your phone is downloading email and synchronizing your calendar with your personal, Exchange accounts.



GPS — Your phone’s GPS is active.



Missed Call — You have one or more missed calls.



Wi-Fi — Your phone is connected to a wireless network.



Calendar Event — Notification for an upcoming event on you calendar.



Alarm Clock — Your alarm clock is set to ring.




Chat — You have an active Google Talk chat.

Notification Light

Your phone has a light that blinks whenever you receive voicemail, email, text message, have an appointment, or your battery is low.





App Menu

You can find all of your apps in one place. From the home screen, touch the app tab,  to open the app menu.

To close the app menu, press **Home**  or **Back** .

Recent Apps

In the home screen, touch and hold **Home**  to see the most recent apps you used. Touch an app to open it, or touch **Home**  to return to the home screen.

FPO
SCREEN NOT YET AVAILABLE

Widgets

A *widget* is small app on the home screen that displays information, such as weather, news, and social networking updates. You can add a widget, such as a clock, music player, or a calendar that shows upcoming appointments. To open a widget, touch it.


Creating Widgets

1. Find an empty spot on your home screen where you want to add a widget. You can flick left or right to open other panels on your home screen.
2. Touch and hold the empty spot until you see the **Add to Home screen** menu.
3. Touch **Motorola widgets** or **Android widgets**.
4. Touch the type of widget. If necessary, enter the widget settings.




Tip: You can change a widget's size. Just touch and hold the widget. When the widget's outline turns white, drag one of the corners to make it the size you want.

Note: If you install apps from Android Market™ that have widgets, touch and hold the home screen, and then select a widget to add to the home screen.


Setting Up Widgets

You can customize some widgets. Touch a widget to open it, and then touch .

You may already have several useful widgets on your home screen:


- **Messages:** Change the widget name or choose how long it shows new messages. To add email accounts, see “Setting Up Messaging” on page 53.
- **Music:** Set this widget to an artist, album, song, playlist, or just touch  > **Party shuffle**. There’s more about “Music” on page 61.
- **News:** Change the widget name, choose how long it shows new stories, or choose a news source. To choose a source, touch , and then choose preset **Bundles** or **Channels**, or choose **Custom** to enter a URL for a **Webpage** or an **RSS feed**.
- **Weather:** Change temperature units or add locations. To add locations, touch , enter a city, and touch **Search**. When you open the weather widget, flick left to see other locations you added.

Viewing Your Phone Number

- ▶ Touch  > **Settings** > **About phone** > **Status**. (Your phone number and other information about your phone and account appear.)

Entering Text

Touchscreen Keyboards

Touch a text field to open a touchscreen keyboard. Press **Back**  to close it.

To **move the cursor**, touch and hold a word. This opens a magnifier where you can drag the cursor.



Android keyboard

Use the Android™ keyboard to enter letters one at a time.



Letters/Numbers

Touch to open a keypad for symbols or numbers.

Note: To set your screen to rotate when you turn the phone, touch  >  **Settings** > **Sound & display** > **Orientation**.

General Tips


To...

Enter **symbols** chosen from a list

Press **Symbols** .

Enter **alternate** characters in the corners of keys


Press **Alternate** .

Enter **several alternate** characters until you press **Alternate**  again.

Press **Alternate**  twice.

Enter **one capital** letter

Press **Shift** .

Enter **only capital** letters until you press **Shift**  again

Press **Shift**  twice.

Delete a character (hold to delete more)

Press **Delete** .

Start a **new line** (email or text messaging)

Press **Return** .

Select text, Cut, Copy, or Paste

Touch and hold a blank spot in a text entry area.

Text Entry Settings

Touch  >  **Settings** > **Language & keyboard**.

- To change your Swype settings, touch **Swype**.
- To change the language and the style for your touchscreen keyboard, touch **Select locale**.
- To edit your word suggestion dictionary for the Android keyboard, touch **User dictionary**.
- To change your Android keyboard settings, touch **Android keyboard**.
- To show the touchscreen keyboard when holding your phone vertically, touch **Show soft keypad in portrait**.
- To change the device keyboard settings touch, **Device Keyboard**.

Tips and Tricks

General Tips

To...

Return to the **home screen**

Press **Home** .

See **recently dialed** numbers

Press **Talk** .

Sleep/wake your phone

Press  **Power/Screen Lock**.

Set **screen timeout**

Touch  >  **Settings** > **Sound & display** > **Screen timeout**

Turn **sound** on or off

Press and hold  **Power/Screen Lock** > **Silent mode**.

Search

Press **Search** .

Show **last few apps** used

Press and hold **Home** .

To...






Turn **airplane mode** on/off









Press and hold  **Power/Screen Lock** > **Airplane mode.**

Battery Tips

Your phone is like a small computer, giving you a lot of information and apps, with a touch display. Depending on what you use, that can take a lot of power.

To save battery life between charges, you could reduce:


- Recording or watching videos, listening to music, or taking pictures.
- Widgets that stream information to your home screen, like news or weather (“Home Screen” on page 13).
- Email updates: Touch  >  **Email** > **Menu**  > **Account Settings** > **Email check frequency** > **Every hour** or **Never** to check for email manually.
- Turn off Bluetooth power: touch  >  **Settings** > **Wireless & networks** > **Bluetooth.**

- Turn off Wi-Fi: touch  >  **Settings** > **Wireless & networks** > **Wi-Fi.**
- Google app updates: Touch  >  **Settings** > **Accounts & sync** > **Cellular data sync** > **Manual.**
- Display brightness: Touch  >  **Settings** > **Sound & display** > **Brightness** > (dimmer setting).
- Display timeout delay: Touch  >  **Settings** > **Sound & display** > **Screen timeout** > (shorter setting).

Making and Answering Calls

Making Calls

► From the home screen, touch  **Dialer**.

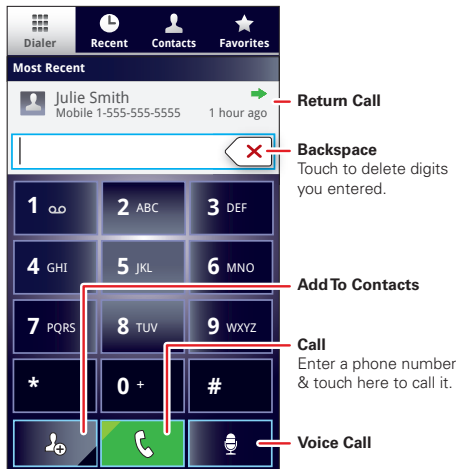

In-Call Options







During a call:



- To use a Bluetooth® device, touch **Bluetooth**. (First, turn on your phone and pair it. See “Connecting New Devices” on page 46.)
- To mute a call, touch **Mute**.
- To use the speakerphone, touch **Speaker**.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Your phone includes a proximity sensor. When you hold the phone to your ear, the display goes dark to prevent accidental touches. When you move your phone away from your ear, the display lights up again.

Tip: You can touch  or  to leave the active call display. To reopen it, touch  >  > **Return to call in progress**.

Answering Calls

- ▶ To answer a call while the display is active, touch . When the display is not active, answer by dragging  to the right.

If the incoming call is from one of your Contacts, the person’s name is displayed. You may also see the caller’s phone number, if available.

Ending a Call

- ▶ To end a call, touch **End Call**.

Tip: To ignore a call, touch **Ignore**.

Note: Screen protectors can interfere with touchscreen performance. Aftermarket screen protectors must have an opening for the proximity sensor to operate properly. You may experience abnormal function if an aftermarket-protector or protective film covers proximity sensor area at the top of the phone.

Missed Phone Calls

Missed phone calls are forwarded to voicemail. When you do not answer an incoming call, you will see a Missed Call notification.




To display a Missed Call entry from the notification bar:

- ▶ Drag the notification bar down and touch the missed call notification.

To display a Missed Call entry from the home screen:



1. Touch  **Dialer** > **Call Log**.
2. Touch an entry.

Recent Calls

- ▶ To see recent or missed calls, touch  **Dialer** > **Recent**
 - To call a number, touch .
 - To send a text message, touch and hold an entry, and then select **Send text message**.
 - To clear the list, touch  > **Clear list**.

Emergency Calls

Your phone supports emergency calling. Emergency phone calls can be made even when your SIM card is blocked or not in your phone.

- ▶ Touch  **Dialer**, enter **9 1 1** and touch  to be connected to an emergency response center. If you are on an active call, you must end it before calling 911. If your phone is locked, touch the **Emergency call** button at the bottom of the screen.

When you make an emergency call, your phone's GPS Enabled feature can help emergency service personnel find you, if you are in a location where your phone's GPS antenna has established a clear view of the open sky and your local emergency response center has the equipment to process location information. See "GPS and AGPS" on page 155. Because of the limitations of this feature, always provide your best knowledge of your location to the emergency response center when you make an emergency call.

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Important: Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

Note: Your phone can use location based services (GPS and AGPS) to help emergency services find you. See “GPS and AGPS” in your legal and safety information.

Battery Cool Down

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see “Cool Down” messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.