

APPLICANT: MOTOROLA MOBILITY, INC.

FCC ID: IHDP56MD2

INSTRUCTION MANUAL

A preliminary draft of the User's Manual follows this page.

EXHIBIT 8

CONGRATULATIONS

MOTOROLA PHOTON™ 4G



Stay connected, organize your life, and absolutely own the web with MOTOROLA PHOTON 4G!

- Surf the web with a blistering fast 1 GHz dual-core processor. 4G connectivity gives you download speeds up to 10x faster than before.
- International roaming lets you make calls and stay in touch wherever you travel.
- Watch streaming videos on your 4.3" qHD touchscreen, or use mirror mode to view your phone on your TV screen for gaming, videos, web browsing, and more.
- Capture life's moments in full 1080p HD video. Use the gallery to gather all your photos and your friends' online albums in one place.

Note: Certain apps and features may not be available in all countries.


Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

MORE

- **Answers:** Touch  >  **Help Center.**
- **Updates:** Smartphone updates, computer software, user guides, online help, and more at www.motorola.com/support.
- **Accessories:** Find accessories for your smartphone at www.motorola.com/products.

YOUR PHONE

the important keys & connectors

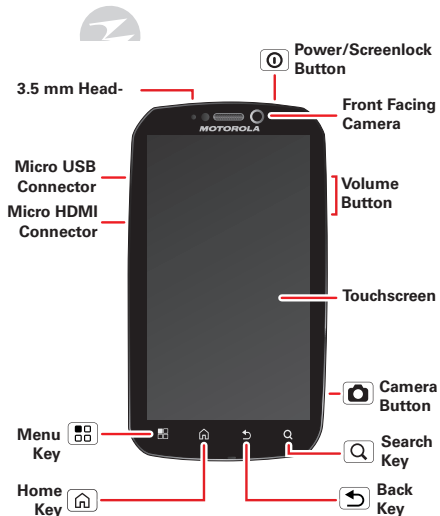

Note: Your phone might look a little different.

CONTENTS


LET'S GO.....	3
TOUCHSCREEN & KEYS	5
HOME SCREEN	8
CALLS	11
CONTACTS	14
MESSAGING.....	16
TEXT ENTRY	19
TIPS & TRICKS.....	22
PHOTOS & VIDEOS	23
MUSIC.....	27
SOCIAL NETWORKING.....	29
WEB	30
PERSONALIZE.....	32
LOCATION	34
APPS FOR ALL.....	36
CONNECTIONS	38
WEBTOP APPLICATION	39
DIGITAL LIVING.....	40
BLUETOOTH™ WIRELESS.....	41
WI-FI	43
MEMORY CARD & FILE MANAGEMENT	45
TOOLS.....	47
MANAGEMENT	49
SECURITY.....	51
UPDATE MY PHONE	53
TROUBLESHOOTING.....	53
SAFETY, REGULATORY & LEGAL.....	54

LET'S GO


let's get you up and running

ASSEMBLE & CHARGE


1 SIM in.

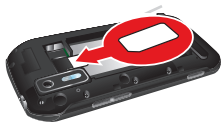

2 MicroSD in.

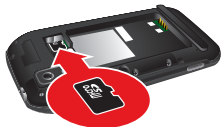

3 Battery in.



4 Cover on.



5 Charge up.



Caution: Please read "**BATTERY USE & SAFETY**" on page 54.

Note: GSM and UMTS-based global services work only with a SIM card supplied by your service provider or by another GSM or UMTS service provider. When you set your phone to use a GSM or UMTS network (see "**MANUALLY SWITCH NETWORK MODE (INTERNATIONAL ROAMING)**" on page 50), you may be prompted to enter a subsidy code. To get this code, contact your service provider.


Tip: To save battery life, see "**BATTERY TIPS**" on page 22.

SET UP & GO

The first time you turn on your phone, a setup wizard guides you through signing in to your Google™ Gmail™ account. If you don't have one, don't worry, the wizard will help you create one.

After you log in to Gmail™, you can set up social networking, or you can do it later.



Note: Your phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

- 1 Press and hold Power  on top of your phone to turn it on.
- 2 Select a language.
- 3 Follow the setup wizard to create or log in to your Gmail account.



Note: If you have an existing Google Gmail account, your contacts from that account are synced to your phone.

WI-FI CONNECT

If you want to use a Wi-Fi network for even faster Internet access, touch  >  **Settings** > **Wireless & networks** > **Wi-Fi settings**. Touch **Wi-Fi** to search for and connect to wireless networks. There's more in "**Wi-Fi**" on page 43.

COOL CONTENT & MORE

Browse and download thousands of the coolest apps on the planet from Android Market™.





Download new apps with "**BROWSE & INSTALL APPS**" on page 37. Your phone can use a microSD memory card (sold separately)—you can load it up with photos, videos, and music from your computer (see "**MEMORY CARD**" on page 45).

TOUCHSCREEN & KEYS

a few essentials

TOUCHSCREEN ON/OFF

Your touchscreen is on when you need it and off when you don't.

- To make your touchscreen sleep or wake up, just press Power .
- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.
- To change how long your phone waits before the screen goes to sleep automatically, touch  > **Settings** > **Display** > **Screen timeout**.
- To make the screen lock when it goes to sleep, use "**SCREEN LOCK**" on page 51. To unlock the screen, press Power  or open the phone. Then, drag  to the right.

Note: Your touchscreen might stay dark if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.





TOUCH TIPS

Here are some tips on how to navigate around your phone.

TOUCH

To choose an icon or option, *touch* it.

TOUCH & HOLD

To open special options, *touch and hold* an icon or other item. Try it: In the home screen, touch  >  **Contacts**, then touch and hold a contact to open options.

SCREEN NOT YET AVAILABLE

SCREEN NOT YET AVAILABLE

DRAG

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch  **Contacts**, then drag your **Contacts** list up or down.

SCREEN NOT YET AVAILABLE

FLICK


To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.

ZOOM


Get a closer look at Google Maps™ or web pages. To zoom in, *double-touch* (tap twice, quickly) the screen. To zoom out, *double-touch* the screen again.

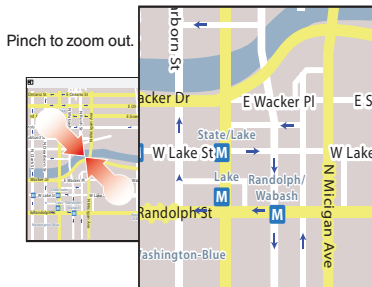

You can also zoom in or out by pinching your fingers together or moving them apart on the screen.






KEY TIPS

MENU, HOME, BACK, & SEARCH




Touch Home  to close any menu or app and return to the home screen. In the home screen, touch and hold Home  to show the last eight apps you used, then touch an app to open it.

Touch Search  for text search, or touch and hold for voice search.

Touch Menu  to open menu options, or touch Back  to go back.

POWER KEY MENU

Press and hold Power  to open the power key menu, where you can turn off your phone (**Power off**), or turn **Airplane mode** or **Silent mode** on or off.

ADJUST VOLUME



Press the volume keys to change the ring volume (in the home screen) or the earpiece volume (during a call).

When playing music or video files, press the volume keys to adjust media volume.






ROTATE THE SCREEN

In many apps, the touchscreen can rotate to stay right-side up when you turn your phone sideways:

Find it:  >  **Settings** > **Display** > **Auto-rotate screen**

QUICK TIPS


If you're not sure what to do next, try one of these:

To...	
Get the details —Open a text message, see details for a contact, or open items in other lists.	Touch the message, contact, or item.
See screen menu —Open a menu for the current screen.	Touch Menu  .
See item options —Open an options menu (if available) for an item on the screen.	Touch & hold the item.
Start again —Go back to the home screen.	Touch Home  .
Wake up your smartphone —Turn on a sleeping touchscreen.	Press Power  .

HOME SCREEN

quick access to the things you need most

QUICK START: HOME SCREEN

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:

Note: Your home screen might look a little different.

The home screen extends to give you room for adding shortcuts, widgets, and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts.


SCREEN NOT YET AVAILABLE


SCREEN NOT YET AVAILABLE

USE & CHANGE YOUR HOME SCREEN

On your home screen, *shortcuts* are icons that open your favorite apps, Web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates right on your homescreen without having to open a separate application or web page.


Flick the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, touch it. Touch Home  to return to the home screen.

Tip: When you open a widget, touch Menu  to see any options or settings (you can choose accounts for **Messages**, **Social Networking**, or **Calendar** widgets).


There's more about social networking widgets in "**YOUR SOCIAL NETWORKING ACCOUNT**" on page 29.

- To **resize** Motorola widgets, touch and hold a corner until you feel a vibration, then drag.
- To **add** something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home screen** menu.

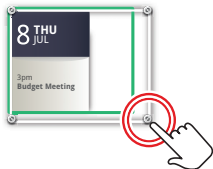



You can add a folder to organize your shortcuts.

Tip: To choose apps for the "hot seat" row of apps along the bottom of the home screen, first add the app as a shortcut. Then, touch and hold the shortcut and drop it on top of one of the three hot seat spots.

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash  at the top of the screen.


SEARCH









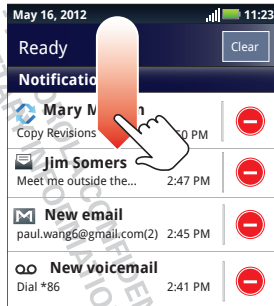







Touch Search , then use the window that appears.



PHONE STATUS & NOTIFICATIONS

The status bar at the top of the screen has icons that tell you about messages and phone status. To view your notifications, touch the status bar and drag it down. Touch a notification to select it.



	Bluetooth® active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi active		3G (fastest data)
	downloading		airplane mode
	vibrate		sync active
	silent		alarm set
	mute call		battery (charging)
	speakerphone active		battery (full charge)


Tip: To see today's date, touch the status bar at the top of the screen.



NOTIFICATION LIGHT

Your phone has a light that blinks whenever you receive voicemail, email, text message, have an appointment, or your battery is low.





APP MENU

You can find all of your apps in one place. From the home screen, touch the app tab,  to open the app menu.

To close the app menu, press Home  or Back .

RECENT APPS

In the home screen, touch and hold Home  to see the most recent apps you used. Touch an app to open it, or touch Home  to return to the home screen.

Tip: You can also open recent apps from the app menu. Touch the icon on the upper left-hand corner and select **Recent**.

EPO
SCREEN NOT YET AVAILABLE