

DRAG

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch  **Contacts**, then drag your **Contacts** list up or down.

SCREEN NOT YET AVAILABLE

FLICK


To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.

ZOOM


Get a closer look at Google Maps™ or web pages. To zoom in, *double-touch* (tap twice, quickly) the screen. To zoom out, *double-touch* the screen again.

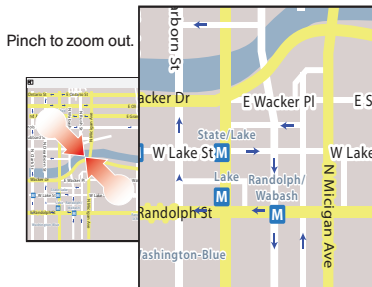

You can also zoom in or out by pinching your fingers together or moving them apart on the screen.






KEY TIPS

MENU, HOME, BACK, & SEARCH




Touch Home  to close any menu or app and return to the home screen. In the home screen, touch and hold Home  to show the last eight apps you used, then touch an app to open it.

Touch Search  for text search, or touch and hold for voice search.

Touch Menu  to open menu options, or touch Back  to go back.

POWER KEY MENU

Press and hold Power  to open the power key menu, where you can turn off your phone (**Power off**), or turn **Airplane mode** or **Silent mode** on or off.

ADJUST VOLUME



Press the volume keys to change the ring volume (in the home screen) or the earpiece volume (during a call).

When playing music or video files, press the volume keys to adjust media volume.






ROTATE THE SCREEN

In many apps, the touchscreen can rotate to stay right-side up when you turn your phone sideways:

Find it:  >  **Settings** > **Display** > **Auto-rotate screen**

QUICK TIPS


If you're not sure what to do next, try one of these:

To...	
Get the details —Open a text message, see details for a contact, or open items in other lists.	Touch the message, contact, or item.
See screen menu —Open a menu for the current screen.	Touch Menu  .
See item options —Open an options menu (if available) for an item on the screen.	Touch & hold the item.
Start again —Go back to the home screen.	Touch Home  .
Wake up your smartphone —Turn on a sleeping touchscreen.	Press Power  .

HOME SCREEN

quick access to the things you need most

QUICK START: HOME SCREEN

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:

Note: Your home screen might look a little different.

The home screen extends to give you room for adding shortcuts, widgets, and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts.


SCREEN NOT YET AVAILABLE


SCREEN NOT YET AVAILABLE

USE & CHANGE YOUR HOME SCREEN

On your home screen, *shortcuts* are icons that open your favorite apps, Web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates right on your homescreen without having to open a separate application or web page.


Flick the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, touch it. Touch Home  to return to the home screen.

Tip: When you open a widget, touch Menu  to see any options or settings (you can choose accounts for **Messages**, **Social Networking**, or **Calendar** widgets).


There's more about social networking widgets in "**YOUR SOCIAL NETWORKING ACCOUNT**" on page 29.

- To **resize** Motorola widgets, touch and hold a corner until you feel a vibration, then drag.
- To **add** something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home screen** menu.

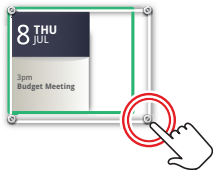



You can add a folder to organize your shortcuts.

Tip: To choose apps for the "hot seat" row of apps along the bottom of the home screen, first add the app as a shortcut. Then, touch and hold the shortcut and drop it on top of one of the three hot seat spots.

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash  at the top of the screen.


SEARCH









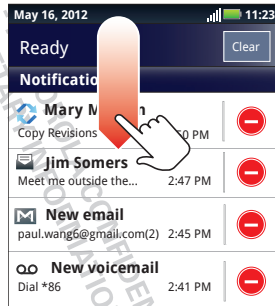







Touch Search , then use the window that appears.



PHONE STATUS & NOTIFICATIONS

The status bar at the top of the screen has icons that tell you about messages and phone status. To view your notifications, touch the status bar and drag it down. Touch a notification to select it.



	Bluetooth® active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi active		3G (fastest data)
	downloading		airplane mode
	vibrate		sync active
	silent		alarm set
	mute call		battery (charging)
	speakerphone active		battery (full charge)


Tip: To see today's date, touch the status bar at the top of the screen.



NOTIFICATION LIGHT

Your phone has a light that blinks whenever you receive voicemail, email, text message, have an appointment, or your battery is low.





APP MENU

You can find all of your apps in one place. From the home screen, touch the app tab,  to open the app menu.

To close the app menu, press Home  or Back .

RECENT APPS

In the home screen, touch and hold Home  to see the most recent apps you used. Touch an app to open it, or touch Home  to return to the home screen.

Tip: You can also open recent apps from the app menu. Touch the icon on the upper left-hand corner and select **Recent**.

EPO
SCREEN NOT YET AVAILABLE

CALLS

it's good to talk

SELECT A NETWORK

MOTOROLA PHOTON 4G switches effortlessly between CDMA, GSM, and UMTS networks, so you can make calls worldwide.

Note: To use your phone on a GSM or UMTS network, you need to insert a SIM card (see “**ASSEMBLE & CHARGE**” on page 3), supplied by service provider or a compatible GSM or UMTS network service provider.

To set your phone to roam globally:


Find it: Touch  >  **Settings** > **Wireless & networks** > **Mobile networks** > **Network Mode** > **Automatic**

To manually switch your phone to a CDMA or GSM/UMTS network, see “**MANUALLY SWITCH NETWORK MODE (INTERNATIONAL ROAMING)**” on page 50.

QUICK START: CALLS

DIALING OPTIONS

From the home screen, touch  **Dialer**.

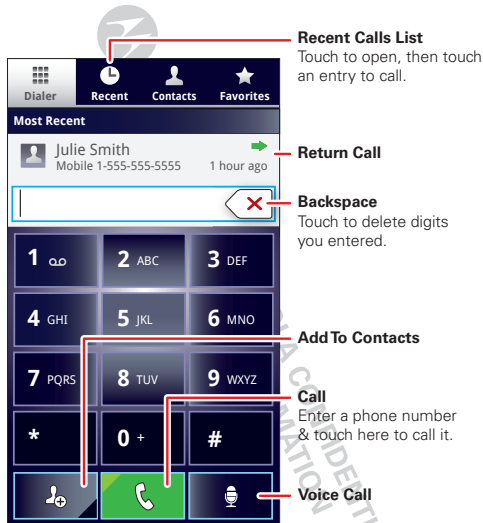

IN-CALL OPTIONS

During a call:



To use a Bluetooth™ device, touch **Bluetooth**. (The device must be turned on and previously paired—see “**CONNECT NEW DEVICES**” on page 42.)


Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Tip: You can touch Home (🏠) or Back (⏪) to leave the active call display. To reopen it, touch Home (🏠) > **Dialer**, or drop down the **Notifications** bar and touch the Current Call notification.

MAKE & ANSWER CALLS

To make a call, touch **Dialer**, enter a number, then touch .

Tip: If the screen is locked, drag  to the right.


To answer a call while the display is active, touch **Answer**. When the display is not active, answer by dragging  to the right.

To ignore a call, touch **Ignore**.

Note: Your phone includes a proximity sensor. When you hold the phone to your ear, the display goes dark to prevent accidental touches. When you move your phone away from your ear, the display lights up again.

END CALLS

Touch **End Call**.

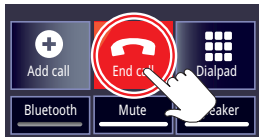


MAKE CALLS (INTERNATIONAL CALLS)

Your phone has an assisted dialing feature that makes dialing easy. For local calls, just dial the local number. For international calls, dial the country code, the area code (if applicable), then the phone number.

RECENT CALLS

Find it:  **Dialer** > **Recent**

- To call a number, touch it.
- To send a text message, create a contact, view a contact, or other options, touch and hold an entry.
- To clear the list, touch Menu  > **Clear list**.

FREQUENT CALLS



Find it:  **Dialer** > **Favorites**

- To call a number, touch it.
- To send a text message, view a contact, or other options, touch and hold an entry.
- To add a contact to Favorites, select the contact, and touch the star in the upper right corner. The star turns green.

CONFERENCE CALLS

To start a conference call, call the first number. After the call connects, touch **Add Call**. Dial the next number, or select it from contacts or favorites. When the next number answers, touch **Merge**.



YOUR PHONE NUMBER

Find it:  >  **Settings** > **About phone** > **Status** > **My Phone number**

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency

call cannot be placed due to network, environmental, or interference issues.

- 1 Touch  **Dialer** (if your phone is locked, touch **Emergency Call**).
- 2 Enter the emergency number.
- 3 Touch  to call the emergency number.

Note: Your mobile device can use GPS and AGPS signals to help emergency services find you. See “GPS & AGPS” in your legal and safety information.

COOL DOWN


In very limited circumstances, such as where your phone has been exposed to extreme heat, “Cool Down” message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

CONTACTS

contacts like you've never had before

QUICK START: CONTACTS


Find it:  >  **Contacts**

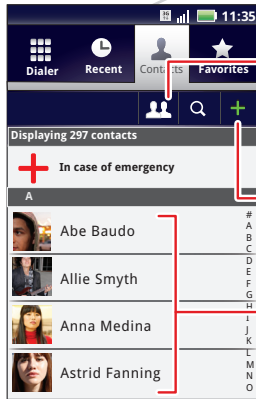

Group
Create and view groups of contacts.

Create Contacts

Contacts List
Touch to view contact information. Touch & hold to call, send a text message, & more.

Tip: To search the list, touch and hold Menu  to open a touchscreen keypad, then type a name. Or, touch a letter of the alphabet on the right to go directly to that letter.