

MOTOROLA XT682 IRON MAX TV (LA) Getting Started Guide January 30, 2012

30th January, 2012

Dummy Page - To be discarded before printing



Use this template with A7BookletPortrait StructApps. See the Reference Pages for template user instructions.



CONGRATULATIONS

MOTOROLA XT682

Your MOTOROLA **XT682** phone delivers more for your work and play!

- **Search:** Touch Search  to search across your apps, contacts, web, and maps—or just enter the address for a place or a web page.
- **Apps:** Open  **Market** to download games for fun, social networking apps to keep in touch (like Facebook™ or Twitter), or find something else you like with “**APPS**” on page 12.
- **Touchscreen:** Browse the web and pinch-to-zoom on the touch display in “**WEB**” on page 34.
- **Camera:** Capture photos and videos with the 8MP auto-focus camera in “**PHOTOS & VIDEOS**” on page 39.
- **Moto Switch:** Moto Switch is a dynamic interface that gives you seamless access to content that is relevant to you. See “**MOTO SWITCH**” on page 11.

Note: Some apps and features might not be available in all countries.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.


MORE

- **Support:** Phone updates, PC software, online help and more at www.motorola.com/support.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

30th. January, 2012

YOUR PHONE

the important keys & connectors

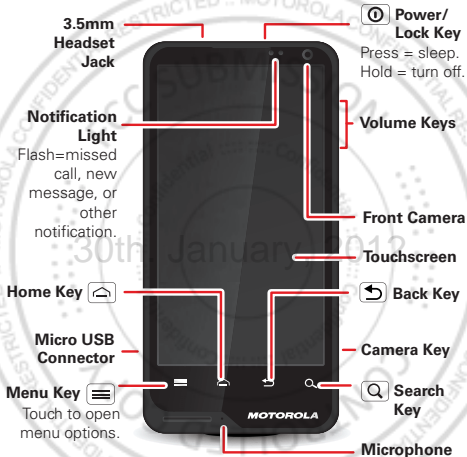

CONTENTS

LET'S GO	5
HOME SCREEN & APPS	9
PERSONALIZE	15
CALLS	18
CONTACTS	22
MESSAGING	25
TEXT ENTRY	29
SCHEDULE	32
WEB	34
LOCATION	36
PHOTOS & VIDEOS	39
MOBILE TV	43
MUSIC	44
BLUETOOTH™, WI-FI, & CABLE CONNECTIONS	47
SECURITY	53
TROUBLESHOOTING	55
SAFETY, REGULATORY & LEGAL	56

LET'S GO

let's get you up and running

ASSEMBLE & CHARGE

1 Cover off



2 SIM in



3 microSD in (optional)



4 Battery in



5 Cover on



6 Charge up




Caution: Please read "**BATTERY USE & SAFETY**" on page 56.

SET UP & GO

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.


When you turn on your new phone, you can create or enter a Google™ account so that you can download apps, use Gmail™, and much more:

1 Press and hold Power/Lock Key  to turn on your phone.

2 Touch the Android™ image to begin setup.

3 Touch a button to **Create** a Google account, **Sign in** with one you have, or **Skip**.





 **Power/
Lock Key**
Press = sleep.
Hold = turn off.

You can log into your account from a computer at accounts.google.com.


4 Enter details to create or sign into your account. When your phone confirms the account, it shows account sync options.


- To change whether your phone shows the Google account's contacts, Gmail™, and calendar, touch the Google account name.

- To add another account, touch **Add account**. For details, see “**EMAIL**” on page 26.
- To exit setup touch Home .

If your phone cannot connect, you can touch Menu  > **Settings** > **Wireless & networks** to change mobile network settings.

SLEEP & WAKE UP

Your screen sleeps when you hold it to your ear during a call, or when it is inactive. To change the sleep delay, touch Menu  > **Settings** > **Display** > **Screen timeout**.

To unlock the screen, drag the lock icon  to the outer ring.

Tip: To access all your favorite apps from a lock screen, see “**MOTO SWITCH**” on page 11.





KEYS

Use your phone's keys to navigate and open options at any time.

Press the volume keys to change the ringer volume (in the home screen), or the earpiece volume (during a call).

From any screen, press the camera key on the right side of the phone to open the camera.

Touch Home  to return to the home screen. Touch and hold Home  to see your recent apps.



Volume Key:


Camera Key

HOME SCREEN & APPS

a few essentials

Use your home screen for quick access to apps, search, and more. Download social networking apps (like Facebook™ or Twitter) to keep in touch!

QUICK START: HOME SCREEN

You'll see the home screen when you turn on the phone or touch Home  from a menu:



Status Indicators

Notifications

Flick down for details.


Widgets


Touch to open. Touch & hold to move or delete.


Drag or flick to open panels (or scroll in lists).

Shortcuts


Open the app menu.

- To open shortcuts or widgets, **touch** them. Touch Home  to return to the home screen.


When you open shortcuts or widgets, touch Menu  for options.

- To move or delete shortcuts or widgets, **touch and hold** them until you feel a vibration, then drag it to another spot, another panel, or  at the top.

In lists like **Contacts**, touch and hold list items for options.

- To add shortcuts, widgets, or wallpaper, touch and hold an empty spot until you see the menu. You can also add a folder to organize your shortcuts.
- To show more panels, **drag** or **flick** right or left. Touch and hold  to show panel thumbnails.

In lists like **Contacts**, drag or flick to scroll.

To change your ringtone, display brightness, and more, touch Menu  > **Settings** > **Sound** or **Display**. For details, see “**PERSONALIZE**” on page 15.

MOTO SWITCH

Jump right to your favorite apps from the lock screen!

To set up your lock screen apps:





Your favorites.

Touch & hold between the two rings to show your most used apps at the bottom.

Drag to scroll.

Most used apps. Drag an app to the outer ring to add it to your favorites.


Tip: To **delete** a favorite app icon, touch and hold between the two rings, then drag the app icon to the trash icon .

To **go to a favorite app** from the lock screen, drag the app towards the lock icon .

Note: For toggle apps, such as **Bluetooth** or **Flight Mode**, the screen will remain locked.





APPS





Tip: Choose your apps and updates carefully, from trusted sites like  **Market**, as some may impact your phone's performance—see “**CHOOSE CAREFULLY**” on page 13.

Note: When installing an app, make sure you read the alerts that tell you what information the app will access. If you don't want the app to have access to this information, cancel the installation.


To show your **app menu**, touch .

- To scroll through the menu, flick up or down.
- To open an app, touch an icon.
- To close the app menu, touch Back .

Tip: To show the last eight apps you opened, touch and hold Home .

To **download** new apps from Android Market™, touch  >  **Market**. Touch Search  to find an app, or touch **Downloads** to show or reinstall the apps you downloaded. To download apps from websites, you need to change your security settings: Touch Menu  > **Settings** > **Applications** > **Unknown sources**.


Warning: Apps downloaded from the web can be from unknown sources. To protect your phone and personal data, only download apps from sources you trust.

To **move** or **uninstall** your apps, touch Menu  > **Settings** > **Applications** > **Manage applications**. Touch an app in the list to show details and options.

On your computer, you can browse and manage apps for all your devices powered by Android™ at market.android.com.

CHOOSE CAREFULLY


Apps are great. There's something for everyone. Play, communicate, work, or have fun. But remember, choose your apps carefully. Here are a few tips:

- To help prevent spyware, phishing, or viruses from affecting your phone or privacy, use apps from trusted sites, like  **Market**.
- In **Market**, check the apps' ratings and comments before installing.
- If you doubt the safety of an app, don't install it.
- Like all apps, downloaded apps will use up memory, data, battery, and processing power—some more than others. For example, a simple battery level widget will use less than a streaming music player app. After installing an app, if you're not happy with how much memory, data, battery or processing power it's using, uninstall it. You can always install it again later.

- Just like web browsing, you may want to monitor childrens' access to apps to help prevent exposure to inappropriate content.
- Certain apps may not provide completely accurate information. Take care, especially when it comes to personal health.

PHONE STATUS & NOTIFICATIONS

In the status bar at the top of your screen, the right side shows phone status. The left side shows new messages or events (for details, flick the bar down).

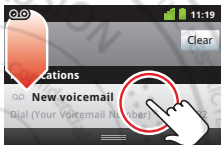

	network strength		battery strength
	new voicemail		new text message
	Bluetooth™ on		Bluetooth connected
	Wi-Fi connected		airplane mode
	USB connected		alarm set
	silent ringer		silent ringer, vibrate on
	mute call		speakerphone


PERSONALIZE

add your personal touch

Customize your phone's sounds and appearance to make it unique to you!


QUICK START: PERSONALIZE

From the home screen, touch Menu  > **Settings** > **Sound** or **Display**.

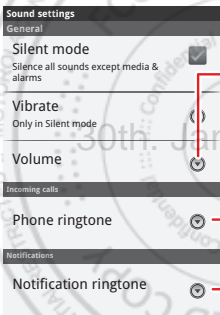


Choose separate volume settings for incoming calls, media, alarms, and notifications.



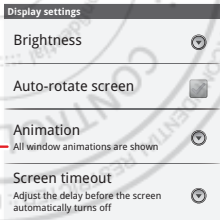




Call & Message Notifications




Turn on or off menu animations.

- To choose a **ringtone** or **vibration** for calls and messages, touch Menu  > **Settings** > **Sound**,

then choose **Phone ringtone**, **Notification ringtone**, or **Vibrate**.

- To change the **volume**, touch Menu  > **Settings** > **Sound** > **Volume**.
- To turn **dialpad** sounds on or off, touch Menu  > **Settings** > **Sound** > **Audible touch tones**.
- To turn menu **selection** sounds on or off, touch Menu  > **Settings** > **Sound** > **Audible selection**.
- To change your **wallpaper**, touch and hold an empty spot on the home screen, then touch **Wallpapers**.
- To change **shortcuts** and **widgets** on your home screen, touch and hold them. For details, see “**HOME SCREEN & APPS**” on page 9.
- To set display **brightness**, touch Menu  > **Settings** > **Display** > **Brightness**.
- To control whether some apps **rotate** the screen when you rotate your phone, touch Menu  > **Settings** > **Display** > **Auto-rotate screen**.
- To turn on or off **animations** that make your menus look smoother, touch Menu  > **Settings** > **Display** > **Animation**.
- To calibrate the **sensors** used by some games or navigation apps, touch Menu  > **Settings** > **Display** > **G-Sensor Calibration** (movement) or **E-Compass Calibration** (direction).

LANGUAGE & REGION

To set your menu language and region, touch Menu 
> **Settings** > **Language & keyboard** > **Select language**


30th. January, 2012


CALLS

it's good to talk

Dial numbers, see recent calls, combine calls, or set up forwarding, restrictions, and more.


QUICK START: CALLS

From the home screen, touch .

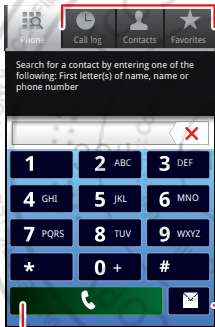

Open a list, then touch an entry to call.

Send a text message.

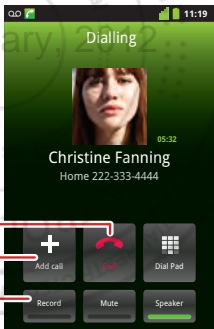



Call.




Hang up.

Start a conference call.



Record phone call.

- To **make** a call, touch , enter a number, then touch .

When dialing, touch Menu  to add a pause (pauses two seconds), or wait (waits for your confirmation). To enter the international dialing code, touch and hold .

- To **answer** a call, drag  to the right.
- **During** a call, touch Menu  to switch to a Bluetooth **headset** (see “**BLUETOOTH™, WI-FI, & CABLE CONNECTIONS**” on page 47). Touch Home  or Back  to hide the active call display (to reopen it, touch .

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

- To use the **speakerphone** during a call, touch **Speaker**.
- To **enter numbers** during a call, touch **Dialpad**.
- To **mute** or **unmute** a call, touch **Mute**.
- To **end** a call, touch .
- To **ignore** an incoming call, drag  to the left.


Tip: For quick access to contacts, see “**FAVORITES**” on page 23.


CONFERENCE CALLS

To start a conference call, call the first number. After they answer, touch **Add call** and call the next number. When the next number answers, touch **Merge calls**. To remove individual callers, touch **Manage**.

CALL WAITING


If you are on a call and a new call arrives:

- With call waiting on, you can drag  to the right to answer the new call and put the old call on hold. Then, touch **Swap** to switch between calls, or **Merge calls** to combine them.
- With call waiting off, the new call goes straight to your voicemail.

To turn on call waiting, touch Menu  > **Settings** > **Call settings** > **Additional settings** > **Call waiting**.

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Open the phone, then touch  (if your phone is locked, touch **Emergency Call**).
- 2 Enter the emergency number.
- 3 Touch **Call** to call the emergency number.

Note: Your mobile device can use AGPS satellite signals to help emergency services find you (“**LOCATION SERVICES**” on page 66).

NETWORK

Note: To make any call, the phone must be connected to a cellular voice network enabled for the region that you are in.

30th. January, 2012