

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT56GN1

**INSTRUCTION MANUAL**

A preliminary draft copy of the Users Manual follows:



# *MOTOMANUAL*


**MOTORAZR™** V3xx  
3G


[motorola.com](http://motorola.com)

# HELLOMOTO


---


Introducing your new **MOTORAZR™ V3xx** 3G wireless phone. Here's a quick anatomy lesson.

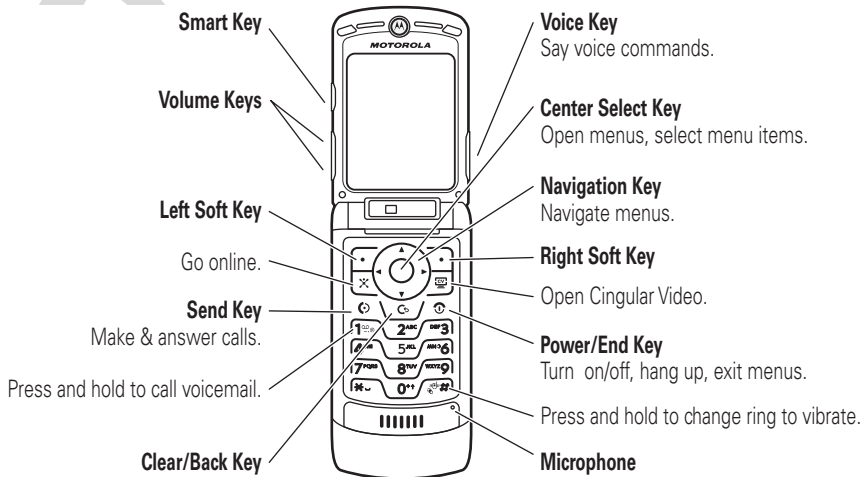

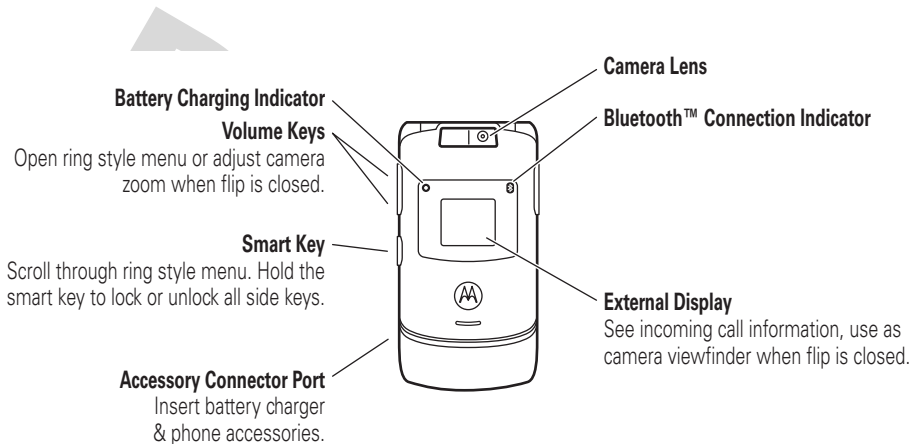

## Home Screen

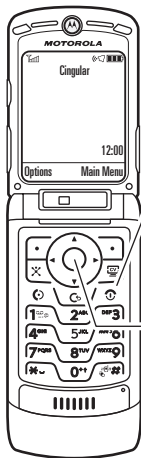

① Press and hold the **Power Key**  for a few seconds or until the display lights up to turn on your phone.

② Press the **Center Key**  to open the **Main Menu**.

## Main Menu



③ Press the Navigation Key **up, down, left, or right**  to highlight a menu feature.

④ Press the **Center Key**  to select it.

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196

[www.hellomoto.com](http://www.hellomoto.com)

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

© Motorola, Inc., 2006.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809507A19-0

# contents

---

<b>menu map</b> . . . . .	<b>7</b>	music player . . . . .	22	<b>customize</b> . . . . .	<b>45</b>
<b>Use and Care</b> . . . . .	<b>9</b>	photos . . . . .	25	audio style . . . . .	45
<b>essentials</b> . . . . .	<b>10</b>	videos . . . . .	27	time & date . . . . .	46
about this guide . . . . .	10	text messages . . . . .	29	wallpaper . . . . .	47
SIM card . . . . .	11	memory card . . . . .	30	screen saver . . . . .	47
battery . . . . .	11	cable connections . . . . .	32	themes . . . . .	48
turn it on & off . . . . .	13	phone updates . . . . .	33	display appearance . . . . .	48
make a call . . . . .	14	<b>basics</b> . . . . .	<b>35</b>	answer options . . . . .	49
answer a call . . . . .	14	display . . . . .	35	<b>calls</b> . . . . .	<b>50</b>
store a phone number . . . . .	14	text entry . . . . .	38	turn off a call alert . . . . .	50
call a stored phone . . . . .	15	volume . . . . .	42	recent calls . . . . .	50
number . . . . .	15	navigation key . . . . .	42	redial . . . . .	52
your phone number . . . . .	15	smart key . . . . .	42	return a call . . . . .	52
<b>main attractions</b> . . . . .	<b>16</b>	external display . . . . .	43	caller ID . . . . .	52
Bluetooth® wireless . . . . .	16	handsfree speaker . . . . .	43	emergency calls . . . . .	53
Cingular music portfolio . . . . .	22	codes & passwords . . . . .	43	voicemail . . . . .	53
		lock & unlock phone . . . . .	44		

<b>other features</b> . . . . .	<b>55</b>	<b>Hearing Aids</b> . . . . .	<b>97</b>
advanced calling . . . . .	55	<b>WHO Information</b> . . . . .	<b>98</b>
address book . . . . .	60	<b>Registration</b> . . . . .	<b>98</b>
messages . . . . .	65	<b>Export Law</b> . . . . .	<b>99</b>
instant messaging . . . . .	68	<b>Recycling</b> . . . . .	<b>99</b>
personalizing . . . . .	68	<b>Perchlorate Label</b> . . . . .	<b>100</b>
call times . . . . .	70	<b>Driving Safety</b> . . . . .	<b>101</b>
handsfree . . . . .	71		
data calls . . . . .	72		
network . . . . .	73		
personal organizer . . . . .	74		
security . . . . .	76		
fun & games . . . . .	77		
<b>service and repairs</b> . . . . .	<b>81</b>		
<b>SAR Data</b> . . . . .	<b>82</b>		
<b>EU Conformance</b> . . . . .	<b>84</b>		
<b>Safety Information</b> . . . . .	<b>86</b>		
<b>Industry Canada Notice</b>	<b>91</b>		
<b>FCC Notice</b> . . . . .	<b>92</b>		
<b>Warranty</b> . . . . .	<b>93</b>		



# menu map

## main menu



### Cingular Video





### Messaging

- Create Message
- Message Inbox
- IM
- Voicemail
- Outbox
- Templates
- Drafts
- Browser Messages
- Info Services \*
- Create Voice Message



### Recent Calls

- (press the  or  to scroll through recent, dialed, received, and missed calls)



### MEdia Net



### Cingular Mall

- Shop Tones
- Shop Games
- Shop Graphics
- Shop Multimedia
- Shop Applications
- MEdia Net Home



### Cingular Music

- Music Player
- Shop Tones
- MusicID
- Streaming Music
- Music Videos
- The Buzz
- Community
- Music Apps



### My Stuff

- Media Finder
  - Music
  - Pictures
  - Videos
  - Voice Notes
  - Ring Tones
  - Wallpapers
- Games & Apps
- Tools
  - Alarm Clock
  - World Clock
  - Calendar
  - Dialing Services
  - Calculator
- Camera
- Video Camera
- Voice Record



### Address Book



### Settings

- (see next page)

\* dependent on your SIM card

This is the standard main menu layout. Your phone's menu may be a little different.

## settings menu



### Personalize

- Home Screen
- Main Menu
- Voice Dial Setup
- Skin
- Greeting
- Wallpaper
- Screen Saver



### Themes



### Audio

- Style
- (style) Detail



### Connection

- Bluetooth® Link
- USB Settings
- Sync



### Call Forward \*

- Voice Calls
- Cancel All
- Forward Status



### In-Call Setup

- Date and Time
- In-Call Timer
- My Caller ID
- Answer Options
- Call Waiting
- MSG Alert



### Initial Setup

- Time and Date
- Speed Dial
- Display Timeout
- Backlight
- Charging Lights
- TTY Setup
- Scroll
- Text Marquee
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



### Phone Status

- My Tel. Numbers
- Battery Meter
- Download Location
- Storage Devices
- Voice Dial Languages
- Software Update \*
- Other Information



### Headset

- Auto Answer
- Ringer Options
- Voice Dial



### Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



### Airplane Mode

- Airplane Mode
- Prompt at Power Up



### Network \*

- New Network
- Network Setup
- Available Networks
- Service Tone
- Call Drop Tone



### Security

- Phone Lock
- External Key Lock
- Lock Application
- Hide/Show Private Entries \*
- Fixed Dial
- Restrict Calls \*\*
- Call Barring \*\*
- SIM PIN
- SIM PIN2 \*
- New Passwords
- Certificate Mgmt \*



### Java™ Settings



### Web Access

- MEdia Net
- Bookmarks
- History
- Go To URL
- Browser Setup
- Web Sessions

\* dependent on your SIM card

\*\* not available on some phones

# Use and Care

---

To care for your Motorola phone, please keep it away from:



## liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



## dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



## extreme heat or cold

Avoid temperatures below  $-10^{\circ}\text{C}/14^{\circ}\text{F}$  or above  $45^{\circ}\text{C}/113^{\circ}\text{F}$ .



## cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



## microwaves

Don't try to dry your phone in a microwave oven.









## the ground

Don't drop your phone.

# essentials

---

**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

- 1 Press the *center key*  to open the menu.
- 2 Press the *navigation key*  to scroll to  **Messaging**, and press the *center key*  to select it.
- 3 Press the navigation key  to scroll to **Create Message**, and press the center key  to select it.

## about this guide

This guide shows how to open a menu feature as follows:

**Find it:**  >  **Messaging** > **Create Message**

This means that, from the home screen:

### symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.

## symbols



This means a feature requires an optional accessory.

## SIM card


**Caution:** Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and address book entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.


To insert and use a **memory card**, see page 30.

**Turn off your phone and remove your battery before you install or remove a SIM card.**

1

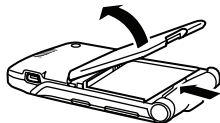

2

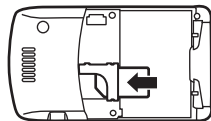

## battery

### battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does



TM

not cover damage caused by non-Motorola batteries and/or chargers.

- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place.

- Never expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.


**Warning:** Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.


## battery installation

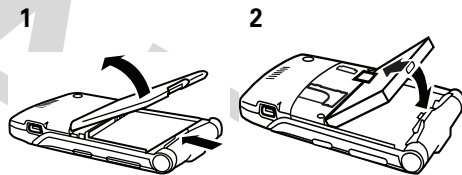

3



4

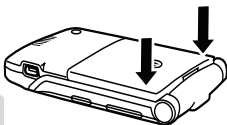


## battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet.

Your phone might take several seconds to start charging the battery.

When finished, your display shows **Charge Complete**.

Battery Charging Indicator

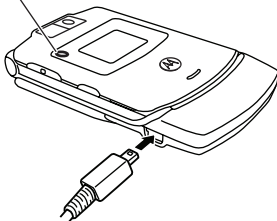



**Tip:** Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

The battery charger shipped with this device is designed for Motorola 3G mobile phones. Other chargers might take longer to charge your battery, or cause your calls to fail during charging.

## turn it on & off

**Caution:** Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.

**To turn on your phone,** press and hold  for a few seconds or until the keypad




or display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.


**To turn off your phone**, press and hold  for a few seconds.

## make a call

**To make a call**, enter a phone number and press . **To “hang up,”** close the flip or press .

## answer a call


**To answer a call** when your phone rings and/or vibrates, just open the flip or press .

**To “hang up,”** close the flip or press .

## store a phone number

You can store a phone number in your

**Address Book:**

- 1 Enter a phone number in the home screen.
- 2 Press the **Store** key.  
Select **Create New Contact**, if necessary.
- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *center key* .
- 4 Press the **Done** key to store the number.

To **edit** or **delete** an **Address Book** entry, see page 61.

To store an **email** address from the home screen, press  >  **Address Book**. Scroll up to **New Entry** and select it. Enter the new contact's name and **Email** information.








# call a stored phone number

**Find it:**  >  **Address Book**



- 1 Scroll to the address book entry.

**Shortcut:** In the address book, press keypad keys to enter the first letters of an entry you want.



- 2 Press  to call the entry.

**Note:** You can show contacts stored in your phone's memory or on your SIM card. To choose which contacts you see, press  >  **Address Book**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**. Contacts on the SIM card only have a **Name** and **Number**. To choose where you store contacts, go back to the home screen and press  >  **Address Book**, then press **Options** > **Setup** > **Default Storage** > **Phone** or **SIM Card**.

# your phone number

From the home screen, press *the clear key*  then , then select **Line 1** to see your number.

**Tip:** Want to see your phone number while you're on a call? Press **Options** > **My Tel. Number**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press the **View** key, press the **Options** key, and select **Edit**. If you don't know your phone number, contact your service provider.



# main attractions

---

You can do much more with your phone than make and receive calls!

## Bluetooth® wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

You can also use Bluetooth A2DP stereo headphones to listen to music files you store on your phone.

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a

call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

**For maximum Bluetooth security**, you should always connect Bluetooth devices in a safe, private environment.

## use a headset or handsfree car kit


**Before you try to connect your phone with a handsfree device**, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).


**Find it:**  >  **Settings** > **Connection**  
> **Bluetooth Link** > **[Add Audio Device]**



**Shortcut:** From the home screen, you can also press **Options** > **Use Bluetooth** > **[Add Audio Device]** to look for devices.

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *center key* .
- 2 Press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  appears in the home screen.

You cannot play some copyrighted files over a Bluetooth connection.

**Shortcut:** When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. If the device doesn't connect, turn it off and back on. During a call or while playing a sound file, you can press **Options** > **Use Bluetooth** to connect to a headset or handsfree device you have used before.

**Tip:** Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it. For more Bluetooth support, see: [www.motorola.com/Bluetoothsupport](http://www.motorola.com/Bluetoothsupport)

## copy files to another device

You can copy a media file, address book entry, calendar event, or Web shortcut



from your phone to a computer or other device.

**Note:** You can't copy some copyrighted objects.





- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
  - **Send > via Bluetooth** for media files.
  - **Send Contact** for address book entries.
  - **Send > with Bluetooth** for calendar events.
- 3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the file.

**If your phone could not copy the file to the other device**, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the

device is not busy with another similar Bluetooth connection.

**Note:** Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's **Access** setting, see page 21.

## receive files from another device

If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing  >  **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**. 

- 1 Place your phone near the device, and send the file from the device.


If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it: press

 >  **Settings** > **Connection** > **Bluetooth Link** > **Find Me**.

- 2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

## send files to a printer

You can use a Bluetooth connection to send a picture, message, address book entry, or calendar view from your phone to a printer. 

**Note:** You cannot print message **Templates** or an address book **Mailing List**.

- 1 On your phone, scroll to the object that you want to print, then press **Options** > **Print** > **Bluetooth**. In the calendar, you can print the month, week, or day.





**Tip:** If you see it, you can print it. After you capture a picture in the camera, you can press the **Options** key and select **Print**.



- 2 If available, choose additional objects or print options.
- 3 Select a recognized printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the printer where you want to print the object.



**Note:** If you see **Service Not Supported** when you try to print, select **Options** > **Manage** > **Copy** > **Bluetooth** instead. Always use this option to print 4x6 photos.






## advanced Bluetooth features




A device is *recognized* after you connect to it once (see page 16).

features	
<b>make phone visible to other device</b>	Allow a Bluetooth device to discover your phone:  >  <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Find Me</b>
<b>connect to recognized device</b>	Connect your phone to a recognized handsfree device:  >  <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Audio Devices</b> > <i>device name</i>



features	
<b>drop connection with headset or handsfree device</b>	 >  <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Audio Devices</b> Scroll to the device name and press the <b>Drop</b> key.
<b>switch to headset or handsfree device during call</b>	During a call, press <b>Options</b> > <b>Use Bluetooth</b> to switch to a recognized headset or car kit. Your phone connects automatically, or shows a list of devices you can select.





features	
<b>play sound files on a recognized headset</b>	<p>While playing a sound file, press  <b>Options</b> &gt; <b>Use Bluetooth</b> to switch to a recognized headset.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> <p>You cannot play some copyrighted files over a Bluetooth connection.</p>
<b>move Media Finder object to device</b>	<p><b>Caution:</b> Moving an object <b>deletes</b> the original object from your phone.</p> <p>Scroll to the object, press <b>Options</b> &gt; <b>Manage</b>  &gt; <b>Move</b>, select the device name. You cannot move some copyrighted files.</p>




features	
<b>copy Media Finder object to device</b>	<p>Scroll to the object, press <b>Options</b> &gt; <b>Manage</b>  &gt; <b>Copy</b>, select the device name. You cannot copy some copyrighted files.</p>
<b>edit device properties</b>	<p> &gt;  <b>Settings</b>  &gt; <b>Connection</b> &gt; <b>Bluetooth Link</b> &gt; <b>Device History</b></p> <p>Scroll to the device name and press the <i>center key</i> .</p> <p><b>Note:</b> The <b>Access</b> setting can restrict how this device connects to your phone. You can choose <b>Automatic</b> (always connects), <b>Always Ask</b> (asks you before connecting), <b>Just Once</b>, <b>Never</b>, or <b>Custom</b>.</p>

features	
set	 >  Settings 
Bluetooth	> Connection
options	> Bluetooth Link > Setup


## Cingular music portfolio

The Cingular Music blue note connects you with the most comprehensive “mobile music experience” with just the push of a button . 

- Shop and load ringtones and Answer Tones .
- Listen to your music on the integrated music player  and with over 40 commercial free streaming music stations .
- Watch music videos .

- Instantly identify the title and artist of songs you hear on the radio or TV with MusicID .
- Get music news and charts, chat and more  .




## music player

Your phone can play and store MP3 and AAC song files. You can use a removable memory card with your phone to store more songs (see page 30). 

**Find it:**  >  Cingular Music > Music Player








**Shortcut:** From the home screen, press the Options key and select Music Player.



Press  up or down to scroll to an option, and press the *center key*  to select it. Press  to return to the menu:

options	
<b>All Songs</b>	Show and play individual songs. <b>Note:</b> All of your phone's songs appear in the <b>Songs</b> list. Some songs do not have any <b>Artist</b> , <b>Album</b> , or <b>Genre</b> information stored, so they don't appear in those lists.
<b>Recently Played</b>	Show and play recently played songs.
<b>Playlists</b>	Create or play a playlist (see page 24).
<b>Artists</b>	Select an artist to show or play their songs.
<b>Albums</b>	Select an album to show or play its songs.

options	
<b>Genres</b>	Select a type of music to show or play songs.
<b>Composers</b>	Select a composer to show or play their songs.





When you select a song, press the *center key*  to play , or pause , press  left for previous , or press  right for next .



If your phone has the album art for a song, it displays the art while the song is playing.

### While music is playing:

- **To change the volume**, press the volume keys on the left side of your phone.

- **To close the music player**, press  (the music keeps playing). You can stop the music by pressing  again.
- **To reopen the music player**, press  >  **Cingular Music** > **Music Player**, then **Options** > **Now Playing**.
- **You can close your phone**, then press the smart key to pause/resume the song.
- **If you receive a call**, the music pauses, then resumes after the call.

You can use **Bluetooth® A2DP stereo headphones** to listen to music files you store on your phone (see page 16).

**Tip:** You can listen to tunes on your way. Use *airplane mode* to make your phone safe to use with a wired headset, even while you're on a plane. See page 80.

## load music files

To shop for songs, press


 >  **Cingular Music** > **Shop Tones**.

To copy files between your phone and a computer, see page 32.


**Note:** Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

## create a playlist

**Find it:**  >  **Cingular Music** > **Music Player** > **Playlists** > **[Create Playlist]**

- 1 Select a song list, such as **All Songs**. Your display shows a list of song titles.
- 2 Scroll to each song you want and press the *center key*  to select it.

- 3 Press the **Done** key to store the list.
- 4 Enter a name for the playlist.
- 5 Press the **OK** key to store the name and the playlist.


To hear your playlist, highlight it under **Playlists** and press the *center key*  twice.


## photos


To view, edit, or delete photos you've taken, see page 77.

Your camera lens is on the back of your phone when the phone is open. **To get the clearest pictures, wipe the lens clean with a dry cloth before you take a picture.**

- 1 Press  >  **My Stuff** > **Camera** to see the camera viewfinder.

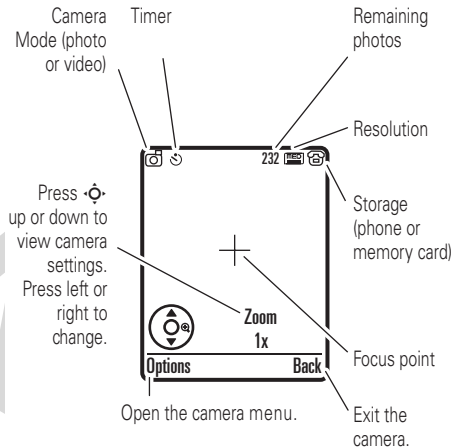


- 2 Press the *center key*  to take the photo in the viewfinder. You can:

- Press the **Options** key to store the photo.  
If you press **Options** > **Print**, you can print the picture over a Bluetooth® connection (see page 19).
- Press the **Send** key to send the photo in a message.  
Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.
- Press  to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
<b>Go To Pictures</b>	See stored pictures and photos.

options	
<b>Go To Video Mode</b>	Switch to the video camera.
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Camera Setup</b>	Open the setup menu to adjust photo settings.
<b>Switch Storage Device</b>	Choose to store pictures on your phone or a memory card. 
<b>Free Space</b>	See how much memory remains.  <b>Note:</b> Your service provider may store some content in user memory before you receive the phone.

## self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.


## videos

### record a video

To view, delete, or manage videos you've recorded, see page 78.

Your camera lens is on the back of your phone, when your phone is open. **To get the clearest videos, wipe the lens clean with a dry cloth before you capture a video.**


Press  > >  **My Stuff > Video Camera** to see the video viewfinder.

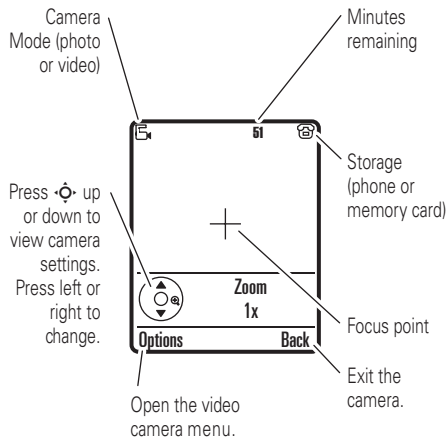



**Note:** The number of minutes remaining is an estimate.

**Tip:** If you want to send your video in a message, the video length must be set to **MMS**. To set length, press

**Options** > **Video Camera Setup** > **Video Length** > **MMS**.


- 1 Press the *center key*  to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop recording the video. You can:
  - Press the **Options** key to store, discard, or preview the video.

To play a stored video from the home screen, press  >  **My Stuff**  
> **Media Finder** > **Videos** > **All Videos**  
> *video name*.



- Press the **Send** key to send the video in a message. 

Enter text and press **Send To**, then scroll to a recipient address and press the *center key*  to select it. Press the **Options** key to enter a new number. To send the message, press the **Send** key.

**Note:** Some other phones or networks do not support messages with videos.

- Press  to discard the video and return to the active viewfinder.

## watch videos online

**Cingular Video** brings you quick, on-demand access to news, sports, weather and entertainment video clips. Look for the 3G network icon on your phone to determine if you are in the **Cingular Video** coverage area. To access **Cingular Video**, press . 


## text messages

To create a group mailing list, see page 64.  
For more message features, see page 65.

### send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses.




**Shortcut:** From the home screen, you can press  up to quickly open a new message.

**Find it:**  >  **Messaging** > **Create Message**

- 1 Press keypad keys to enter text on the page (for details about text entry, see page 38).

To insert a **picture, sound, or other object** on the page, press **Options** > **Insert**. Scroll to and select the file type and the file.


To insert **another page** in the message, enter text or objects on the current page and press **Options** > **Insert** > **New Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press the **Send To** key.
- 3 Scroll to a recipient and press the *center key* . Repeat to add other recipients.

To enter a **new** number or email address, press the **Options** key and select **Enter Number** or **Enter Email**.

- 4 To **send** the message, press the **Send** key.

## receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as . Press the **Read** key to open the message.



To see all of your text messages:

**Find it:**  >  **Messaging** > **Message Inbox**

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and

press the **View** key (image), **Play** key (sound), or **Open** key (address book vCard, calendar vCalendar entry, or unknown file type).

## memory card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).



**Note:** If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.




## install or remove a memory card

1 Remove the battery door (see page 12).

2 **To install the memory card**,

make sure the memory card's metal contacts are facing down, and slide the top of the memory card under the metal band.

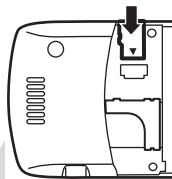

**To remove the memory card**, slide it back out of the holder.

3 Replace the battery door.

## see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 77). Icons can indicate if a

file is stored in your phone memory (📁) or on your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 32) or a Bluetooth connection (see page 17).

To see your **memory card name, available memory**, and other information about the card:

**Find it:** ⬇️ > ⚙️ **Settings > Phone Status > Storage Devices**

- 1 Press ⬇️ to scroll to the memory card that is installed.
- 2 Press the *center key* ⬇️ to see the memory card information. Your phone


stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

**or**

Press **Options** to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

## cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

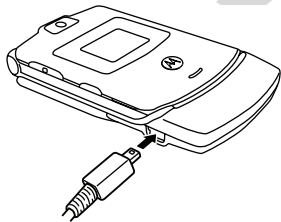

**Note:** Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 72.



## connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

**Note:** When your phone is connected to a computer, you can only access the memory card through the computer.

**On your phone:**

**Disconnect the cable** from your phone, if it is connected, then press   **Settings**

- > **Connection** > **USB Settings** > **Default Connection**
- > **Memory Card.**

This directs the USB connection to your memory card.

**Connect the cable** to your phone and to an available USB port on your computer. Then follow these steps:

#### On your computer:

- 1 Open your “My Computer” window, where your phone’s memory card appears as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the files on your phone’s memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
  - audio files:** > mobile > audio
  - screen savers:** > mobile > picture

**wallpapers:** > mobile > picture

**video clips:** > mobile > video

- 4 When you finish, disconnect your phone by selecting the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen. Then disconnect the “USB Mass Storage Device.”
- 5 Disconnect the cable from your phone and computer.

#### On your phone:

To return to **Data** as your USB default connection, press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Data Connection.**

## phone updates

Sometimes we think of ways to make your phone’s software faster or more



efficient after you've purchased your phone.  
You can find out if your phone can be updated  
at: <http://hellomoto.com/update>

**Note:** Software updates do not affect your  
address book entries or other personal  
entries. If you receive a software update but  
choose to install it later, see page 73.


# basics

---


See page 1 for a basic phone diagram.


## display

The *home screen* appears when you turn on the phone.

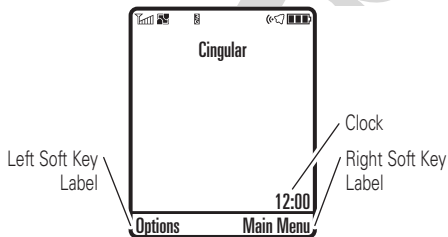

**Note:** Your home screen might look different from the one shown, depending on your service provider.


To dial a number from the home screen, press number keys and .

Press  up, down, left, or right in the home screen to open basic menu features.

Press the *center key*  to open the menu.

*Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

Status indicators can show at the top of the home screen:

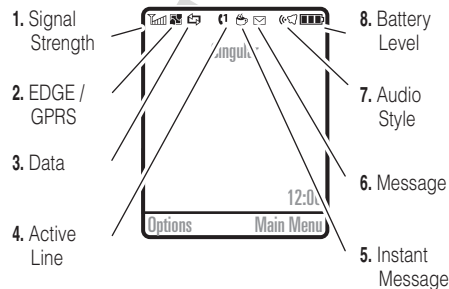

**1 Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when or appears.

**2 EDGE/GPRS Indicator** – Shows when your phone is using a high-speed *Enhanced Data for GSM*



*Evolution (EDGE) or General Packet Radio Service (GPRS) network connection.* Indicators can include:

**3G** 3G network

EDGE

GPRS packet data available

**3 Data Indicator** – Shows connection status.



secure data transfer

unsecure data transfer

data transfer

secure browser page

unsecure browser page

secure transfer




unsecure transfer

USB connect


USB transfer



auto answer

Sync



 mass storage    drive mode  
 Bluetooth® connection is active


 MMS  
message

 voice & text  
message

**4 Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call forwarding is on.

**5 Instant Message Indicator** –  Instant messaging icons from your provider indicate your IM status.

When a Java™ application is active,  can show here. If you set an alarm, or an alert for a datebook event,  can show here.

**6 Message Indicator** – Shows when you receive a new message.  Indicators can include:

 text message    voice message


**7 Audio Indicator** – Shows the audio style setting.

 loud ring    vibrate & ring  
 soft ring    vibrate then ring  
 vibrate    silent

**8 Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your display shows **Low Battery**.

# text entry

Some features let you enter text.

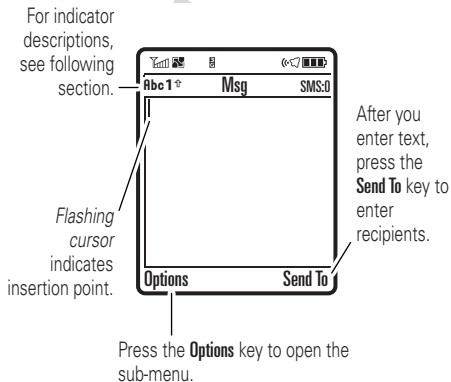

Press **#** in a text entry view to select an entry mode:

## entry modes

<b>1</b> or <b>1</b>	Your <b>Primary</b> text entry mode can be set to any iTAP® <b>1</b> or tap <b>1</b> mode.
<b>2</b> or <b>2</b>	Your <b>Secondary</b> text entry mode can be set to any iTAP <b>2</b> or tap <b>2</b> mode, or set to <b>None</b> if you don't want a secondary entry mode.
<b>123</b>	<b>Numeric</b> mode enters numbers only.
<b>@%</b>	<b>Symbol</b> mode enters symbols only.

To set your primary and secondary text entry modes, press **Options** > **Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

## iTAP® and tap mode tips

- Press **0** in a text entry view to change text case to all capital letters



(**ABC**), no capitals (**abc**), or next letter capital (**Abc**).


- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **[1]** to enter punctuation or other characters.
- Press **[⦿]** to move the flashing cursor to enter or edit message text.
- Press **[C]** to delete the character to the left of the cursor. Hold **[C]** to delete the word.
- To cancel your message, press **[⏏]**.

## iTAP® mode

Press **[#]** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **7 7 6 4**, your display shows:

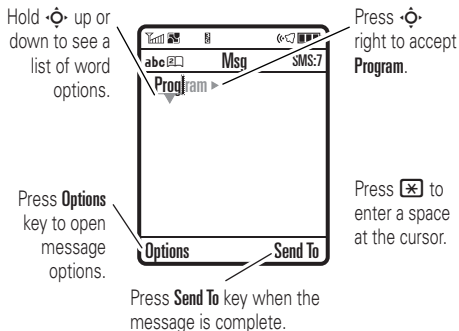

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

**Tip:** Don't worry if you forget how iTAP works. In a text entry display, you can press


**Options > Text Setup > Text Tutorial** to see an explanation.

## tap and tap extended modes

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc1** or **Abc2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **[7]** one time, your display shows:

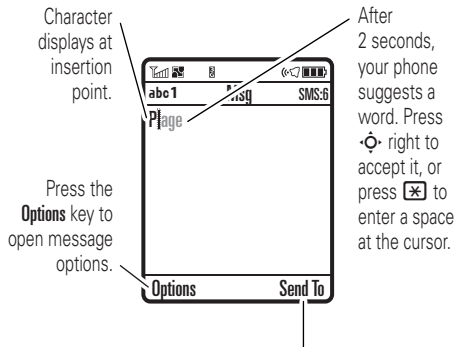

After you enter text, press the **Send To** key to enter recipients.

The first character of every sentence is capitalized. If necessary, press **↵** down to change the character to lowercase before the cursor moves to the next position.

## numeric mode

Press **[#]** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

**Shortcut:** You can press and hold a number key to temporarily switch to numeric mode from iTAP® or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.


## symbol mode

Press **[#]** in a text entry view until your display shows a list of symbols. Scroll to the symbol you want, then press the *center key* **↵**.

## volume

Press the volume keys to:


- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

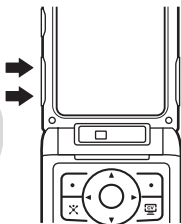


**Tip:** Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Vibrate** or back by holding **#** in the home screen.

To change your ringer volume when your phone is closed, see page 43.



## navigation key

Press the *navigation key*  up, down, left, or right to scroll to items in the display.



When you scroll to an item, press the *center key*  to select it.

## smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *center key* ). The smart key usually does the same thing as pressing the *center key* . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 70.

## external display

When you close your phone, the external display shows the date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 36.

## set phone audio style in external display

- 1 Press a volume key to see **Audio** styles.
- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

## handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

To turn the handsfree speaker on during a call, press the **Speaker** key (if available), or **Options > Speakerphone On**. Your display shows **Spkrphone On** until you turn it off or end the call.


**Note:** The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

## codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

**Find it:**  >  Settings > Security  
> New Passwords

You can also change your **SIM PIN2**, **Private Entries Code**, or **Voice Call Barring Password**.



**If you forget your unlock code:** At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

**If you forget other codes:** If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

## lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Press  >  Settings > Security > Phone Lock > Lock Now.

To **automatically lock** your phone whenever you turn it off: Press  >  Settings > Security > Phone Lock > Automatic Lock > On.

**Note:** You can make emergency calls on a locked phone (see page 53). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

# customize

---

## audio style

Each audio style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

 Loud

 Soft



 Vibrate

 Vibe & Ring


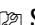
 Vibe then Ring

 Silent

The audio style profile's indicator appears at the top of your home screen. To choose your profile:

**Find it:**  >  Settings > Audio  
> **Style:** *style name*

**Shortcut:** To change your audio style profile from the **home screen**, just press the volume keys up or down. With your **phone closed**, press a volume key to see your audio style profile, press the smart key to change it, then press a volume key to store the change.


**Tip:** Do you get a lot of text messages? If you don't want to hear incoming message alerts during phone calls, press  >  Settings > In-Call Setup > MSG Alert > Not in Call.

## change alerts in an audio style

You can change the alerts for incoming calls and other events. Your changes are saved in the current audio style profile.

**Find it:**  >  Settings > Audio > *style* Detail

**Note:** *Style* represents the current audio style. You can't set an alert for the **Silent** audio style setting.



- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to an alert type (such as **Sound, Music,** or **Vibration Pattern**), then press the **Open** key to see a list of alerts.
- 3 Scroll to the alert you want, then press the *center key* .

## time & date



Your phone can automatically update your time zone, time, and date. It uses the time and date for the calendar.



To **synchronize** the time zone, time, and date with the network: Press



 >  **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **Time & Time Zone**. If you don't want your phone to automatically update your time zone and date, choose **Time Only** instead.

To **manually** set the time zone, time, and date, turn off **Autoupdate**, then: Press

 >  **Settings** > **Initial Setup** > **Time and Date** > **Time Zone**, *time* or *date*. To jump to a city in the time zone list, enter the first letter of its name by pressing keypad keys.

**Tip:** To choose three time zones for easier access, press  >  **My Stuff** > **Tools** > **World Clock**. When you open **World Clock**, you can press the **Options** key to see the **Map View** of time zones.

To choose an **analog or digital** clock for your home screen, press  >  **Settings** > **Personalize** > **Home Screen** > **Clock**.




# wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

**Note:** Your *theme* can also set your wallpaper (page 48).

**Find it:**  >  **Settings** > **Personalize** > **Wallpaper**

options	
<b>Picture</b>	Press  up or down to select a picture, or select <b>None</b> for no wallpaper.
<b>Layout</b>	Select <b>Center</b> to center the image in the display, <b>Tile</b> to repeat the image across the display, or <b>Fit-to-screen</b> to stretch the image across the display.

**Shortcut:** From the home screen, press **Options** > **Change Wallpaper**.


# screen saver

Set a photo, picture, or animation as a screen saver. The screen saver appears when the flip is open and no activity is detected for a specified time.

**Note:** Your *theme* can also set your screen saver (page 48).

**Tip:** This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.



**Find it:**  >  **Settings** > **Personalize**  
> **Screen Saver**



options	
<b>Picture</b>	Press  up or down to select a graphic, picture, or Java screen saver, or select <b>None</b> for no screen saver.
<b>Delay</b>	Select the length of inactivity before the screen saver appears.



## themes



A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.



To **apply** a theme, press  >  **Settings**  
> **Themes** > *theme*.

To **download** a theme, press  >  **Settings**  
> **Themes** > **Shop Themes**.

To **delete themes you downloaded**, press  >  **Settings** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

To **preview** a theme, press  >  **Settings**  
> **Themes**, scroll to the theme, and press **Options** > **Preview**.

## display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalize** > **Skin**. Your *theme* can also set your phone skin (page 48).

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

**Note:** To turn the backlight on or off for Java™ applications, press  >  **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup** > **Display Timeout**.

## answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

**Find it:**  >  **Settings** > **In-Call Setup** > **Answer Options**

options	
<b>Multi-key</b>	Answer by pressing any key.
<b>Open to Answer</b>	Answer by opening the flip.

# calls

---




To make and answer calls, see page 14.

## turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.

## recent calls



Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

**Shortcut:** Press  from the home screen to see a list of dialed calls, then press  or .

to switch to **Dialed Calls**, **Received Calls**, or **Missed Calls**.


**Find it:**  >  **Recent Calls**, then press  or  to switch to **Dialed Calls**, **Received Calls**, or **Missed Calls**

Scroll to a call. A ✓ next to a call means the call connected.



- To call the number, press .
- To see call details (like time and date), press the *center key* .



- To see the **Last Calls Menu**, press **Options**.  
This menu can include:

<b>options</b>	
<b>Filter by</b>	Select all, dialed, received, or missed calls.
<b>Store</b>	Create an address book entry with the number in the <b>No.</b> field. <b>Store</b> does not appear if the number is already stored.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Show ID / Hide ID</b>	Hide or show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.

<b>options</b>	
<b>Send Voice Msg</b>	Record and send a voice message to the number.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the address book or recent calls lists.
<b>Send Tones</b>	Send the number to the network as DTMF tones. <b>Note:</b> This option appears only <b>during a call</b> .
<b>Notepad</b>	Open the number in a text editor.
<b>Call Times</b>	Open your call time information. 

## redial


- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see **Call Failed**, you can press  or the **Retry**  key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.


## return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.

- 2 Scroll to the call you want to return, then press .

## caller ID

*Calling line identification* (caller ID)  shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your address book, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your address book (see page 62).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options > Hide ID/Show ID**.


## emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.


**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

## voicemail


Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number. 

**Note:** Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

**Find it:**  >  **Messaging** > **Voicemail**

**Shortcut:** From the home screen, press and hold  to check your voicemail.

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

**Note:** You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create an address book entry for it. Then you can use the entry to call your voicemail.




# other features

---

## advanced calling

### features

#### voice dial a number not stored in the address book (digit dial)

Press and release the voice key on the right side of your phone (or, hold the  key).

When prompted, say “**digit dial**” (within two seconds). When prompted again, say the digits you want to dial (within two seconds per digit).

Your phone recognizes the digits you want. To voice dial an address book entry, see page 60.

### features

#### attach a phone number




Dial an area code or prefix for an address book number, then press **Options** > **Attach Number**.

## features


### notepad

Press  >  **Recent Calls**, press the **Options** key, then > **Notepad**.

- To call the number, press .
- To create an address book entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialing Menu** to attach a number or insert a special character, press **Options**.

### international calls



If your phone service includes international dialing, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

## features

### hold a call

Press **Options** > **Hold** to put all active calls on hold.

### mute a call

Press the **Mute** key (if available) or **Options** > **Mute** to put all active calls on mute.

## features



### call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Press  to answer the new call.

- To switch between calls, press the **Options > Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press **Options > End Call On Hold**.


To turn the call waiting feature on or off, press  >  **Settings > In-Call Setup > Call Waiting > On or Off**.

## features

### conference call




During a call:

Dial the next number, press , and press **Options > Link**.

### transfer a call



During a call:

**Options > Transfer**, dial transfer number, press .

## features

### automatic call forwarding



Set up or cancel automatic call forwarding:

 >  **Settings** > **Call Forward**

Choose **Voice Calls** to set up forwarding, or **Cancel All** to cancel forwarding.

You can set how long your phone waits before it forwards a call. In the **Voice Calls** menu, choose **Forward** > **Detailed**, then set **Delay** to **5, 10, 15, 20, or 25** seconds.

### restrict calls



Restrict outgoing or incoming calls:

 >  **Settings** > **Security** > **Restrict Calls**



Tell your phone to allow **All**, **None**, or only the calls from your **Address Book**.

## features

### call barring



Restrict your calls to block all calls, international calls, or all calls except ones on your home network.

 >  **Settings** > **Security** > **Call Barring**

### TTY calls



Set up your phone for use with an optional TTY device:

 >  **Settings** > **Initial Setup** > **TTY Setup**



## features

### fixed dial





When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Turn fixed dialing on or off:

 >  **Settings** > **Security** > **Fixed Dial**



Use the fixed dial list:

 >  **My Stuff** > **Tools** > **Dialing Services**  
> **Fixed Dial**

### service dial



Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:

 >  **My Stuff** > **Tools** > **Dialing Services**  
> **Service Dial**

## features

### quick dial





Dial preprogrammed phone numbers:

 >  **My Stuff** > **Tools** > **Dialing Services**  
> **Dial Cingular**

### DTMF tones

Activate DTMF tones:

 >  **Settings** > **Initial Setup** > **DTMF**

To send DTMF tones during a call, just press number keys or scroll to a number in the address book or recent calls lists and press **Options** > **Send Tones**.


# address book

To store and call address book entries, see page 14.

## features

### voice dial an address book entry (name dial)

Voice dial a number stored in the address book:


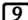
Press and release the voice key on the right side of your phone (or, hold the  key).


When prompted, say “**name dial**” (within two seconds). When prompted again, say the entry’s name (within two seconds).


Your phone matches your voice to an address book entry name. To voice dial a number not stored in the address book, see page 55.

## features

### assign a speed dial key to an address book entry

You can assign the keys  through  to address book entries. Then, when you press and hold a key, your phone calls the entry.

**Note:** Your service provider might assign some keys, such as  for your voicemail number. You can only speed dial the address book entries stored on your phone (not on your SIM card).

Press  >  **Address Book** and scroll to the address book entry. Then, press **Options** > **Add to Speed Dial** and pick a speed dial key.

## features

### use the speed dial key for an address book entry

To **use a speed dial key** that you assigned to an address book entry, just press and hold the key while in your home screen.

### edit your speed dial keys

⬇️ > 📁 **Address Book**, then press **Options** > **Manage Contacts** > **Speed Dial**

## features

### edit or delete an address book entry

Edit a number stored in the address book:

⬇️ > 📁 **Address Book**, scroll to the address book entry, and press **Options**. You can select **Edit Contact**, **Delete Contact**, or other options.

**Shortcut:** In the address book, press keypad keys to enter the first letters of an entry you want. You can also press **\*#** and **#** to see the entries in other categories.

## features

### set ringer ID for an address book entry

Assign a ring alert (ringer ID) to an entry:

📶 > 📁 **Address Book** > *entry*, then press  
**Options** > **Edit Contact** > **Ringer ID** > *ringer name*

**Note:** The **Ringer ID** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 64.

To activate ringer IDs:

📶 > ⚙️ **Settings** > **Audio** > *style Detail*  
> **Ringer IDs** > **On**

## features

### set picture ID for an address book entry

Assign a photo or picture to show when you receive a call from an entry:

📶 > 📁 **Address Book** > *entry*, then press  
**Options** > **Edit Contact** > **Picture** > *picture name*

**Note:** The **Picture** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 64

### set picture ID view for address book

Show entries as a text list, or with picture caller ID photos:

📶 > 📁 **Address Book**, then press  
**Options** > **Setup** > **View by** > *view name*



## features

### set category for an address book entry

•◉ > 📁 Address Book > *entry*, then press  
Options > Edit Contact > Category > *category name*

**Note:** The **Category** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 64

When you open your address book, press  
[\*] or [#] to see your categories.

## features

### set category view for address book

•◉ > 📁 Address Book, then press Options  
> Filter by > Category > *category name*

You can show **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you create.

**Shortcut:** When you open your address book, press [\*] or [#] to see your categories.

## features

### create group mailing list

You can put several address book entries in a group mailing list, then send a message to the list. To create a list:

☛ > 📁 **Address Book**, then press  
**Options** > **Create New** > **Message List**

**Note:** A **Message List** cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 64

### sort address book list

Set the order in which entries are listed:

☛ > 📁 **Address Book**, then press  
**Options** > **Setup** > **Sort by** > **First Name** or **Last Name**

## features

### copy one address book entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:

☛ > 📁 **Address Book**, scroll to the entry, press **Options** > **Copy to SIM Card** or **Copy to Phone**

### copy multiple address book entries

Copy multiple address book entries between the phone and SIM card:

☛ > 📁 **Address Book**, then press  
**Options** > **Select Multiple to**, and select  
**Copy Phone to SIM** or **Copy SIM to Phone**

## features

### send address book entry to another device

Send an address book entry to another phone, computer, or device:

 >  **Address Book**, scroll to the entry, press **Options** > **Send Contact**

For more information about copying files to another device, see page 17.

## features

### print address book entry over Bluetooth® connection



You can use a Bluetooth wireless connection to send an address book entry from your phone to a printer.

 >  **Address Book**

Scroll to the entry you want to print, and press **Options** > **Select Multiple to** > **Print**.

You cannot print a **Mailing List**. For more about Bluetooth connections, see page 16.

## messages



For basic text message features, see page 29.

Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives

messages for the phone number on the new card.



## features

### send voice message

 >  **Messaging** > **Create Voice Message**

To record the voice message, press the **Record** key, speak, then press the **Stop** key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers of the recipients.

### use a message template


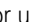



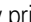

 >  **Messaging** > **Templates**  
> **Text Templates** or **Multimedia Templates**

Select a template to create a new message based on the template.


## features

### read and manage messages

 >  **Messaging** > **Message Inbox**

Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message has an attachment , might be SPAM , or is locked , urgent , or low priority .

To **Reply**, **Delete**, **Call**, **Forward**, or **Lock** a message, scroll to it and press **Options**.

To open a message, press . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

## features

### store message objects

Go to a multimedia message page, or scroll to an object in a message. Then:

Press **Options** > **Store** and select the object you want to store.

### print message over Bluetooth® connection

You can use a Bluetooth wireless connection to send a message from your phone to a printer.

 >  **Messaging** > **Message Inbox, Email Msgs, Outbox, or Drafts**



Scroll to the message you want to print and press **Options** > **Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 16.

## features

### store text messages on your SIM card

To store incoming text messages on your SIM card, press:

 >  **Messaging**, then press **Options** > **Setup** > **Message Setup** > **Text Msg Setup** > **Default Storage** > **SIM Card**

### browser messages

Read messages received by your micro-browser:





 >  **Messaging** > **Browser Msgs**

### info services


Read subscription-based information services messages:

 >  **Messaging** > **Info Services**

## instant messaging

features	
<b>log in</b>	
••• > ✉ Messaging > IM	
Select your IM service provider, then log in.	
<b>add contacts</b>	
After you log in:	
Press <b>Options &gt; Manage &gt; Add Contact</b> and enter the contact's information.	
<b>start conversation</b>	
Press <b>Options &gt; Send Msg To</b> and enter the recipient's IM ID.	
<b>log out</b>	
Press <b>Options &gt; Sign Out</b> .	

## personalizing

features	
<b>language</b>	
Set menu language:	
••• > ⚙ Settings > Initial Setup > Language	
<b>scroll</b>	
Set the scroll bar to <b>Up/Down</b> or <b>Wrap Around</b> in menu lists:	
••• > ⚙ Settings > Initial Setup > Scroll	
<b>text marquee</b>	
Set the speed for scrolling text in your display:	
••• > ⚙ Settings > Initial Setup > Text Marquee	

## features

### activate ringer IDs

Activate ringer IDs assigned to address book entries and categories:

•📶 > ⚙️ Settings > Audio > *style* Detail  
> Ringer IDs

### ring volume

•📶 > ⚙️ Settings > Audio > *style* Detail  
> Ring Volume

### keypad volume

•📶 > ⚙️ Settings > Audio > *style* Detail  
> Key Volume

## features

### reminders

Set a reminder for when you have not responded to an incoming call, message, or other event:

•📶 > ⚙️ Settings > Audio > *style* Detail  
> Reminders

### menu view

Show the main menu as graphic icons or as a text-based list:

•📶 > ⚙️ Settings > Personalize > Main Menu  
> View

### main menu

Reorder your phone's main menu:

•📶 > ⚙️ Settings > Personalize > Main Menu  
> Reorder

## features



### show/hide menu icons

Show or hide menu feature icons in the home screen:

 >  **Settings** > **Personalize** > **Home Screen**  
> **Home Keys** > **Icons**

### change home keys

Change features for the navigation key and smart key in the home screen:

 >  **Settings** > **Personalize** > **Home Screen**  
> **Home Keys**

### master reset

Reset all options **except** unlock code, security code, and lifetime timer:

 >  **Settings** > **Initial Setup** > **Master Reset**


## features

### master clear

**Caution:** Master clear **erases all information you have entered** (including address book and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.







 >  **Settings** > **Initial Setup** > **Master Clear**




## call times

**Network connection time** is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.



The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.








features	
<b>call times</b>	
Show call timers:	
•  >  <b>Recent Calls</b> , press the <b>Options</b> key, then > <b>Call Times</b>	
<b>in-call timer</b>	
Show time information during a call:	
•  >  <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b>	

features	
<b>in-call date and time display</b>	
Show the current date and time during voice calls:	
•  >  <b>Settings</b> > <b>In-Call Setup</b> > <b>Date and Time</b>	

## handsfree

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the

laws and regulations on the use of these products.

features	
<b>speakerphone</b>	
Activate the speakerphone during a call:  Press the <b>Speaker</b> key (if available), or <b>Options &gt; Speakerphone On</b> .	
<b>auto answer</b> (car kit or headset)	
Automatically answer calls when connected to a car kit or headset:   >  <b>Settings &gt; Car Settings or Headset &gt; Auto Answer</b>	
<b>voice dial</b> (headset)	
Enable voice dial with headset send/end key:   >  <b>Settings &gt; Headset &gt; Voice Dial</b>	

## features

### auto handsfree (car kit)



Automatically route calls to a car kit when connected:

 >  **Settings > Car Settings > Auto Handsfree**

## data calls








To connect your phone with a USB cable, see page 32.

## features







### send data





Connect your phone to the device, then place the call through the device application.

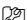
features	
<b>receive data</b>	
Connect your phone to the device, then answer the call through the device application.	
<b>use sync</b>	 
You can call a SyncML Internet server and synchronize your phonebook and datebook entries with the server.	
To <b>set up</b> an Internet sync partner, press  >  <b>Settings</b> > <b>Connection</b> > <b>Sync</b> > <b>[New Entry]</b> . Enter the server details, including <b>Server URL</b> (you can omit <b>http://</b> ) and <b>Data Path</b> (the folder below the URL where your data is stored).	
To <b>synchronize files</b> with a partner you set up, select the partner from the list in  >  <b>Settings</b> > <b>Connection</b> > <b>Sync</b> .	

## network

features	
<b>network settings</b>	
See network information and adjust network settings:	
 >  <b>Settings</b> > <b>Network</b>	
<b>software update</b>	
Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:	
 >  <b>Settings</b> > <b>Phone Status</b> > <b>Software Update</b> > <b>Install Now</b>	

# personal organizer

features
<b>set alarm</b>
•◂◃ >  My Stuff > Tools > Alarm Clock
<b>turn off alarm</b>
When an alarm happens: To turn off the alarm, press the <b>Disable</b> key or  . To set an eight-minute delay, press the <b>Snooze</b> key.
<b>Note:</b> The <b>Snooze</b> key is available only if the phone is already powered on when the alarm sounds.

features
<b>add new calendar event or task</b>
Your calendar can store events (with a start and end time that can repeat) or tasks (with a due date).
•◂◃ >  My Stuff > Tools > Calendar, scroll to the day, press •◂◃, press
<b>Options &gt; Create New Event or Create New Task</b>
<b>see calendar event or task</b>
See or edit event or task details:
•◂◃ >  My Stuff > Tools > Calendar, scroll to the day, press •◂◃
<b>Tip:</b> Keeping up with life can be tough work. To see a list of your upcoming events or tasks, open the calendar and press <b>Options &gt; View &gt; Organized Events or Organized Tasks.</b>

## features

### change calendar settings

•◂ >  **My Stuff** > **Tools** > **Calendar**, then press **Options** > **Setup**

You can choose the **Default View** that appears when you open your calendar, and you can show or hide the **Tasks On Day View**. You can tell your phone to **Power On** if it is turned off when a calendar alert occurs.


### event reminder

When an event reminder happens:  
To see reminder details, press the **View** key.  
To close the reminder, press the **Back** key.

## features

### send calendar event to another device

Send a calendar event to another phone, computer, or device:

•◂ >  **My Stuff** > **Tools** > **Calendar**, scroll to the day, press •◂, scroll to the event, press **Options** > **Send**

### print calendar month, week, or day over Bluetooth® connection

You can use a Bluetooth wireless connection to send a calendar month, week, or day from your phone to a printer.

•◂ >  **My Stuff** > **Tools** > **Calendar**

Go to the month, week, or day view and press **Options** > **Print**.

For more about Bluetooth connections, see page 16.

## features

### create voice note

Press and hold the voice key, speak into the phone, release the voice key.

**Note:** Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

### play voice note

Play back a voice record:

•◂◃• > 📁 My Stuff > Media Finder > Voice Notes > All Voice Records, scroll to the voice record, and press the *center key* •◂◃•

### calculator

•◂◃• > 📁 My Stuff > Tools > Calculator

## features

### currency converter

•◂◃• > 📁 My Stuff > Tools > Calculator, then press **Options** > **Exchange Rate**

Enter exchange rate, press the **OK** key, enter amount, and press **Options** > **Convert Currency**.

## security

## features

### SIM PIN

**Caution:** If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**.

Lock or unlock the SIM card:

•◂◃• > 📁 Settings > Security > SIM PIN

## features

### lock feature

•📍 > ⚙️ **Settings** > **Security** > **Lock Application**

Enter your unlock code to open a list of applications (such as **Messaging**). Select an application and choose **Locked** to lock it.

## fun & games

**Tip:** Your phone has one convenient place to access the music, pictures, videos, voice notes, ring tones, and wallpapers you have stored: •📍 > 📁 **My Stuff** > **Media Finder**.

**Note:** Icons next to a picture, sound, or other object can indicate if the file is locked (🔒), or if it is stored on your phone (📱) or on your memory card (💾).

For basic information on the camera, see page 25.

## features

### view, delete, or manage pictures

Manage photos, pictures, and animations:

•📍 > 📁 **My Stuff** > **Media Finder** > **Pictures**  
> **All Pictures**

To **delete** a file, scroll to it in the list and press **Options** > **Manage** > **Delete**.

To **copy or move** a file from your memory card (💾) to your phone memory (📱), scroll to it in the list and press **Options** > **Manage** > **Copy** or **Move**. Options can include your phone memory, memory card, or a Bluetooth device. You cannot copy or move some copyrighted files.




## features

### view, delete, or manage video clips

• >  My Stuff > Media Finder > Videos  
> All Videos

To **delete** a file, scroll to it in the list and press **Options** > **Manage** > **Delete**.

To **copy or move** a file from your memory card () to your phone memory () , scroll to it in the list and press **Options** > **Manage** > **Copy** or **Move**. Options can include your phone memory, memory card, or a Bluetooth device. You cannot copy or move some copyrighted files.

## features

### start micro-browser


Just press .

Your phone reads micro-browser settings from the USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, press

• >  **Settings** > **Web Access** > **Web Sessions**.

### download objects from Web page

Download a picture, sound, or other object from a Web page:

Press , go to the page that links to the file, scroll to the link, and select it.

### Web sessions

A *Web Session* stores settings that your phone uses to access the Internet. To select or create a Web session:

• >  **Settings** > **Web Access** > **Web Sessions**



## features

### clear micro-browser history




Clear the micro-browser's history, cache, or cookies:

•◂ >  **Settings** > **Web Access** > **Browser Setup** > **Clear History, Reset Cache, or Clear Cookies**

### download game or application



You can download a Java™ game or application the same way you download pictures or other objects:


Press , go to the page that links to the file, scroll to the link, and select it.

## features

### start game or application



Start a Java™ game or application:

•◂ >  **My Stuff** > **Games & Apps**, scroll to the game or application, press the *center key* •◂

**Note:** To install and run games stored on your memory card, press •◂ >  **My Stuff** > **Games & Apps** > **[Install New]**.

## features

### airplane mode

You can switch your phone to airplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an airplane, without interfering with airplane communications.

**Note:** Your phone cannot make Bluetooth® connections when **Airplane Mode** is on.

📶 > > ⚙️ **Settings** > **Airplane Mode**  
> **Airplane Mode** > **On**

You can make the airplane mode option appear whenever you turn on your phone:

📶 > > ⚙️ **Settings** > **Airplane Mode**  
> **Prompt At Startup** > **On**

# service and repairs

---

If you have questions or need assistance, we're here to help.

Go to [www.motorola.com/consumer/support](http://www.motorola.com/consumer/support), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

# Specific Absorption Rate Data

---

## This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.71 W/kg, and when worn on the body, as described in this user guide, is 1.21 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.62 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.


# European Union Directives Conformance Statement

---



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

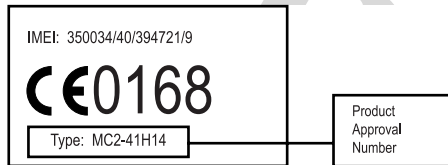

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.



***MOTOROLA***

**Important Safety and  
Legal Information**

# Safety and General Information

---

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.\***

## Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in

---

\* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

the relevant standards, always follow these instructions and precautions.

## External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

**DO NOT** hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

## Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.



When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: [www.motorola.com](http://www.motorola.com).

## RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

### Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

## Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

## Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

## Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

## Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: [www.motorola.com/callsmart](http://www.motorola.com/callsmart).

## Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

### Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

### Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks

on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

## Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.








## Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

**Caution:** To avoid risk of personal injury, do not dispose of your battery in a fire.

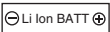

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

## Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

## Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the

lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

## Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

## Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

# Industry Canada Notice to Users

---

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

DRAFT

# FCC Notice To Users

---

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Motorola Limited Warranty for the United States and Canada

---

## What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

## Products and Accessories

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Products and Accessories</b> as defined above, unless otherwise provided for below.	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
<b>Decorative Accessories and Cases.</b> Decorative covers, bezels, PhoneWrap™ covers and cases.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Monaural Headsets.</b> Ear buds and boom headsets that transmit mono sound through a wired connection.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
<b>Consumer and Professional Two-Way Radio Accessories.</b>	<b>Ninety (90) days</b> from the date of purchase by the first consumer purchaser of the product.
<b>Products and Accessories that are Repaired or Replaced.</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

#### Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

**Use of Non-Motorola Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

#### Software

Products Covered	Length of Coverage
<b>Software.</b> Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	<b>Ninety (90) days</b> from the date of purchase.



## Exclusions

**Software Embodied in Physical Media.** No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

**Software NOT Embodied in Physical Media.** Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

## Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

## What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

## How to Obtain Warranty Service or Other Information

<b>USA</b>	<b>Phones</b> 1-800-331-6456 <b>Pagers</b> 1-800-548-9954 <b>Two-Way Radios and Messaging Devices</b> 1-800-353-2729
<b>Canada</b>	<b>All Products</b> 1-800-461-4575
<b>TTY</b>	1-888-390-6456
For <b>Accessories</b> and <b>Software</b> , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

## What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

**Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.**

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

# Hearing Aid Compatibility with Mobile Phones

---

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

# Information from the World Health Organization

---

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

## Product Registration

---

Online Product Registration:

[direct.motorola.com/hellomoto/  
Motosupport/source/registration.asp](http://direct.motorola.com/hellomoto/Motosupport/source/registration.asp)

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

# Export Law Assurances

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation

or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

## Wireless: The New Recyclable

---

Your wireless mobile device can be recycled. Recycling your mobile device reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their mobile devices and have taken steps to promote the collection and environmentally sound recycling of end-of-life devices.

As a mobile device user, you have an important role in ensuring that this device is recycled properly. When it comes time to give this mobile device up or trade it in for a new one, please remember that the mobile device, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices, please visit us at:

[recycling.motorola.young-america.com/  
index.html](http://recycling.motorola.young-america.com/index.html)

# California Perchlorate Label

---

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

“Perchlorate Material – special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).”

There is no special handling required by consumers.

# Smart Practices While Driving

---

## Drive Safe, Call Smart<sup>SM</sup>

**Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to [www.motorola.com/callsmart](http://www.motorola.com/callsmart) for more information.**

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your



eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.\*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.\*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

---

\* Wherever wireless phone service is available.



# index

---

- A**
- accessories 11, 71
  - accessory connector port 1
  - active line indicator 37
  - address book 51, 55, 60, 61
  - airplane mode 80
  - alarm clock 74
  - alarm indicator 37
  - alert
    - set 42, 43, 45
    - turn off 42, 45, 50
  - alert indicator 37
  - animation 77
  - answer a call 14, 49
  - attach a number 51, 55
  - audio player 22
  - audio style indicator 37
  - audio style, setting 42, 43, 45
- B**
- backlight 49
  - battery 12, 13
    - extending battery life 11
  - battery indicator 37
  - battery life, extending 47, 49
  - Bluetooth connection
    - address book entries 65
    - calendar entry, printing 75
    - calendar entry, sending 75
    - description 16
    - messages, printing 67
    - restricting access 21
  - brightness 48
  - browser messages 67
  - browser. See micro-browser
- C**
- cables 32
  - calculator 76
  - calendar 74, 75
  - call
    - answering 14, 49
    - barring 44, 58
    - end 14
    - ending 14
    - forwarding 58
    - making 14
    - timers 71
    - waiting 57

call forward indicator 37  
caller ID 51, 52, 62  
camera 25  
car kit 71  
categories 63  
center key 1, 42  
center select key 10  
clock 46  
codes 43, 44  
conference call 57  
copy files 17

## **D**

data call 72, 73  
data indicator 36  
date, setting 46  
dial a phone number 14, 59  
dialed calls 50  
digit dial 55  
digital audio 22  
display 3, 35, 48

## **104 service and repairs**

downloaded files  
    from Web pages 78  
    in messages 67  
DTMF tones 51, 59

## **E**

earpiece volume 42  
EDGE indicator 36  
emergency number 53  
end a call 14  
end key 1, 14  
Enter Unlock Code message  
    44  
export regulations 99  
external display 27, 43

## **F**

fax call 72, 73  
fixed dial 59  
flip 14, 49  
forward calls 58

## **G**

games 79  
GPRS indicator 36  
group mailing list 64

## **H**

handsfree speaker 43  
headset 71  
headset jack 1  
hearing aids 97  
hold a call 56  
home screen 3, 35, 70

## **I**

IM 68  
in-call indicator 37  
Incoming Call message 52  
information services 67  
instant message indicator  
    37

instant messaging. See IM  
international access code 56  
iTAP text entry mode 39

## J

Java applications 79  
Java indicator 37

## K

keypad 49, 69

## L

language 68  
linking. See Bluetooth  
    connection  
lock  
    application 77  
    phone 44  
    SIM card 76  
Low Battery message 37

## M

make a call 14  
master clear 70  
master reset 70  
memory card 30  
menu 3, 10, 35, 68, 69  
menu icons 35, 69, 70  
message 66, 67  
message alerts 45  
message indicator 30, 37  
message reminders 69  
micro-browser 67, 78, 79  
Missed Calls message 52  
MMS, defined 29  
MP3 sound files 22, 24  
multimedia message 29, 66,  
    67  
mute a call 56

## N

name dial 60

navigation key 1, 10, 42  
network settings 73  
notepad 56  
number. See phone number  
numeric entry mode 41

## O

object exchange 17  
1-touch dial 61  
open to answer 49  
optional accessory 11  
optional feature 10

## P

pairing. See Bluetooth  
    connection  
passwords. See codes  
perchlorate label 100  
personalize 68  
phone number 15  
photo 25, 77

picture 77  
picture ID 52, 62  
PIN code 13, 44, 76  
PIN2 code 44  
power key 1, 13, 14  
printing 19

## Q

quick dial 59

## R

received calls 50  
recent calls 50  
recycling 99  
redial 52  
reminders 69  
restrict calls 58  
return a call 52  
ringer ID 52, 62, 69  
ringer volume 42, 69

## S

safety information 86  
safety tips 101  
screen saver 47  
scrolling 68  
security code 43  
send key 1, 14  
service dial 59  
signal strength indicator 36  
SIM Blocked message 13,  
76  
SIM card 11, 13, 44, 59, 67,  
76  
skin 48  
smart key 42, 43, 70  
soft keys 1, 35, 70  
software update 73  
speakerphone 71  
speed dial 60, 61  
store your number 15  
symbol entry mode 41

Sync 73  
synchronizing 73

## T

tap text entry mode 40  
telephone number. See  
phone number  
text entry 38  
text marquee 68  
text message 66, 67  
theme 48  
time zone 46  
time, setting 46  
timers 71  
transfer a call 57  
TTY device 58  
turn on/off 13

## U

unlock  
application 77

phone 13, 44  
SIM card 76  
unlock code 43, 44  
USB cables 32

## **V**

video clip 78  
videos 27  
voice dial 55, 60, 72  
voice message 66  
voice note 76  
voice record 76  
voicemail 53  
voicemail message indicator  
37, 53  
volume 42, 69

## **W**

wallpaper 47  
warranty 93  
Web pages 78

Web sessions 78  
WHO information 98

## **Y**

your phone number 15

U.S. patent Re. 34,976