

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT56KV2

**INSTRUCTION MANUAL**

A preliminary draft copy of the Users Manual follows:

**FOCUS ON  
WHAT MATTERS.**

MOTOROLA **DEX**™ with **MOTOBLUR**™




## Congratulations

### MOTOROLA DEXT with MOTOBLUR

MOTOROLA **DEXT** with MOTOBLUR brings your conversations, friends, and favorite stuff front and center, so you spend less time managing your life and more time living it.

- Only MOTOBLUR syncs your favorite social networking sites – all your contacts, all your messages, all the latest updates – straight to your MOTOROLA **DEXT**.
- Download thousands of cool apps from Android Market™ and the Motorola app store, to play and surf to your heart's content.
- Backs it all up too. So relax, already.

**Caution:** Before assembling, charging or using your phone for the first time, please read the important legal and safety information packaged with your phone. Once your phone is up and running, press Menu  > **Settings** > **About phone** > **Safety & Regulatory** to read the full information.

### More information

**On your phone**—Press Home  > **Help Center**.

**On your computer**—Go to [www.motorola.com/mydext](http://www.motorola.com/mydext).

After you create a MOTOBLUR account, you can also go to [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur), log in, and select “Help Center.”

So, whether you want to read, watch, or play, we can help.

## Your phone



**Tip:** To change the Notification LED, press Menu  > **Settings** > **Display & security** > **Notification LED**.

When you turn your phone, the home screen adjusts for you.



**Note:** Your phone might look a little different.

## Contents

Let's go	3
Touchscreen & keys	5
Home screen	7
Main menu	9
Social networking	10
Calls	12
Contacts	15
Messaging	18
Text entry	21
Tips & tricks	23
Personalize	24
Photos & videos	26
Music	30
Web	34
YouTube™	37
Google Maps™	38
Latitude	39
Apps for all	40
Bluetooth™ wireless	40
Wi-Fi	42
USB & memory card	43
Synchronize	44
Tools	45
Management	46
Security	47
Troubleshooting	51
Safety, Regulatory & Legal	52

## Let's go


let's get you up and running

### Assemble & charge

1 cover off



2 SIM in




3 battery in




4 microSD in  
(already done)



5 cover on



6 charge up



**Caution:** Please read the battery use and safety text at the back of your *Getting Started Guide*.


## Set up & go

Create or log into a MOTOBLUR account to get your contacts, email, messages, and status information, for all your accounts, all in one place, all the time. There's more in "Your MOTOBLUR account" on page 10. Registration is secure, and should only take a few minutes:


### 1 Turn on.



### 2 Select a language.

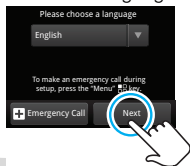


### 3 Register or log in.

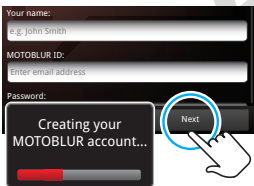

**Tip:** Open your phone to type.

If you have not created a MOTOBLUR account, you'll need to register: Enter your name, your current email address (where MOTOBLUR can send account information), and a new MOTOBLUR account password.

### 4 Add your accounts.




To add an account, tap it. Then, enter the user name or email and password that you set up on that account.

**Tip:** For more, or to add accounts anytime, go to "Add accounts" on page 10.


### 5 Import your SIM contacts.



After you sign in, your phone shows your home screen. Tap **Contacts**, then press Menu  > **Settings** > **Import from SIM card**. Tap **OK** to confirm.


## Turn it on & off

To turn on your phone, press Power  (on the right side).

To turn off your phone, press and hold Power , then tap **Power off** in the menu that opens.



## Wi-Fi connect

If you want to use a Wi-Fi network for even faster Internet access, press Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**. Tap **Wi-Fi** to search for and connect to wireless networks. There's more in "Wi-Fi" on page 42.

## Cool content & more

Browse and download thousands of the coolest apps on the planet from Android. On top of that, you get a full HTML browser, so you can surf in style.

Download new apps with "Android Market™" on page 40. Your phone comes with a microSD memory card installed—you can load it up with photos, videos, and music from your computer using "USB drag & drop" on page 43.

## Security

Your contacts are backed-up on MOTOBLUR, so don't worry. Even if you lose your phone, MOTOBLUR can help you find it or wipe it. And when you get your next MOTOBLUR product, your stored info makes it a snap to set up with just a username and password.

Of course it doesn't stop there. There are plenty of ways to protect your phone and your information, in "Security" on page 47.

## Touchscreen & keys

*a few essentials*

### Touch tips

Here are some tips on how to navigate around your phone.


#### Tap


To choose an icon or option, *Tap* it. Try it: In the home screen, tap

 **Contacts**.




#### Tap & hold


To open special options, *tap and hold* an icon or other item. Try it: In the home screen, tap  **Contacts**, then tap and hold a contact to open options.

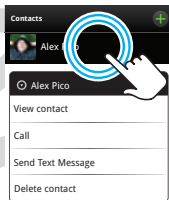



## Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, tap  **Contacts**, then drag your **Contacts** list up or down.

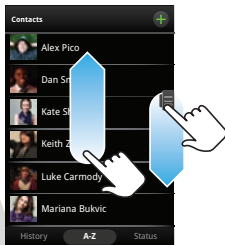

**Tip:** When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A - Z.




## Flick

To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

**Tip:** When you flick a long list, tap the screen to stop it from scrolling.

## Key tips






### Menu, home, & back

Press Home  to close any menu or app and return to the home screen. Press and hold Home  to show the last few apps you used, then tap an app to open it. In the home screen, press Home  to open or close the main menu.



Press Menu  to open menu options, or Back  to go back.

### Sleep & wake up

To save your battery, prevent accidental taps, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power . To wake up the touchscreen, just press Power , Menu , Home , or Back , or open the phone.



To change how long your phone waits before the screen goes to sleep automatically, press Menu  > **Settings** > **Display & security** > **Screen timeout**.


**Tip:** To make the screen lock when it goes to sleep, use “Screen lock” on page 48.

## Power key menu

Press and hold Power  to open the power key menu, where you can turn off the phone (**Power off**), or turn off features (**Airplane mode**, **Bluetooth**, **Wi-Fi**, or **GPS**).

## Adjust volume

Press the volume keys to change the ring volume (in the home screen), or the earpiece volume (during a call).

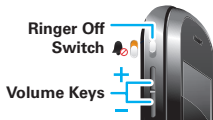


## Ringer off switch

To switch off your ring sound, slide down the Ringer off switch.

## Spin the screen


The touchscreen can spin to stay right-side up when you rotate your phone:

**Find it:** Menu  > **Settings** > **Display & security** > **Orientation**

# Home screen

*quick access to the things you need most*

## Quick start: Home screen


The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or press Home  from a menu. It's basically like this:



## Use & change your home screen

On your home screen, *shortcuts* are icons that you open your favorite apps, Web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates.

Flick the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, tap it. Press Home  to return to the home screen.

To **change** a widget's settings, open it and then press Menu  > **Settings**.


You can find details about the settings for **Happenings** ("Add accounts" on page 10), **Messages** ("Set up messaging" on page 19), **Music** ("Music" on page 30), **Social Status** ("Update your status" on page 10), or **News** or **Weather** ("Set up widgets" on page 24).


- To **add** something or change your **wallpaper**, tap and hold an empty spot until you see the **Add to Home screen** menu.

You can add a folder to organize your shortcuts.

- To **move** or **delete** something, tap and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash at the bottom of the screen.


## Search

To search, use a Search widget (if you have one on your home screen), or open your phone and press Search .



Type, then tap the icon for a text search.










Tap the icon, then speak for a voice search.







**Tip:** In your main menu or **Contacts**, you can open your phone (or press and hold Menu  to open a display keypad), then type an entry name to find it.

## Phone status & notifications

At the top of the screen, icons on the left notify you about new messages or events (flick the bar down for details). Icons on the right tell you about phone status:





	Bluetooth™ active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi active	<b>G</b>	GPRS (fast data)
	downloading	<b>E</b>	EDGE (faster data)
	vibrate	<b>3G</b>	3G (fastest data)
	silent		flight mode

	mute call		battery (charging)
	speakerphone active		battery (full charge)
	Google™ sync active		alarm set

**Tip:** To see today's date, tap and hold the status indicators.


## Main menu

### Quick start: Main menu



The main menu shows you all of your applications. To open it from the home screen, press Home . To close it, press Home  again.



**Note:** Your main menu will vary.

**Tip:** To find an app in the main menu, open your phone (or press and hold Menu  to open a display keypad), then type the app name.

### Switching apps

Press and hold Home  to see the last few apps you used, then tap the app you want. Press Home  to close an app and return to the home screen.

## Social networking

*my life, your life*

### Your MOTOBLUR account

The first time you turned on your phone, you registered for a MOTOBLUR account that manages your messages, contacts, and more (“Set up & go” on page 4). You can log into this account from a computer to upload contacts, manage the account, get help, or even locate your phone: [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur)

### What is MOTOBLUR?

MOTOROLA **DEXT** with MOTOBLUR is the first phone with social skills.

Only MOTOBLUR synchs contacts, posts, feeds, messages, e-mails, photos and much more—from sources like Facebook, Twitter, MySpace, your work e-mail, Picasa, Photobucket—and automatically serves it up just the way you want it. No opening and closing apps and menus, it’s all front and center on your home screen and integrated throughout the entire phone so you can communicate anyway you like.

### Update your status

After you add a social networking account, you can update and see your current status in a **Social Status** widget on your home screen.



To update your status, just tap your **Social Status** widget and enter text. If you have more than one account, you can use the pull-down menu to limit which accounts are updated. If you don’t see a **Social Status** widget, flick your home screen left or right to check all panels.

To add a **Social Status** widget:

- 1 Tap and hold an empty spot on your home screen to open the **Choose widget** menu.
- 2 Tap **Social Status**. The widget appears in the empty spot, and will show your status the next time your phone updates from the network.

### Add accounts

**Note:** You can add your **Facebook, MySpace, Twitter**, or other accounts to your phone. If you don’t have accounts, you can visit their Web sites to set them up.

**Find it:** Menu  > **Settings** > **Accounts** > Menu  > **New account**

To sign into your account, use the user name or email and password that you set up on that account (the same as on your computer).

When you sign into social networking accounts, you'll see your friends and contacts in your **Contacts** list, and your status and updates can appear in **Social Status** and **Happenings** widgets.

**Twitter and MySpace messages** will always appear as "read" on your phone, but your phone notifies you when you receive a new message. MySpace marks your messages as "read" online.

**For email accounts**, see "Set up messaging" on page 19.

**Tip:** To download updates faster, use "Wi-Fi" on page 42.


## View account updates & features

After you add a social networking account, you can see and respond to friends' updates with the **Happenings** widget on your home screen. If you don't see one, set one up in "Widgets" on page 24.

When you tap the **Happenings** widget to open an update, you can tap on the social network's icon to open its Web site.

**Note:** Your network or other factors might affect the speed of widget updates.

## Edit & delete accounts

**Find it:** Menu  > **Settings** > **Accounts**

Tap and hold an account, then tap **Open account** to edit it, or tap **Delete account** to remove it (along with its contacts and messages).


## Calls

it's good to talk


### Quick start: Calls


Dialing options

Find it:  **Dialer**

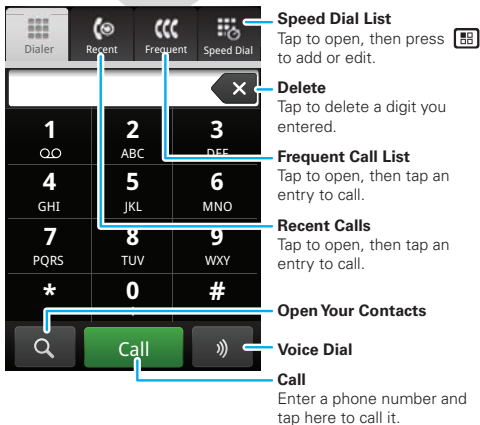

### In-call options

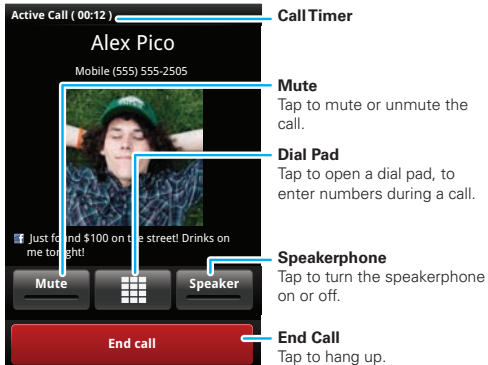


During a call, press Menu  to choose **Hold**, **New call**, or **Use Bluetooth**, or to wake up the touchscreen if it's dark.

**Tip:** You can press Home  or Back  to hide the active call display. To reopen it, tap  **Dialer**.

### Make & answer calls

To make a call, tap  **Dialer**, enter a number, then tap **Call**.

**Tip:** To enter the international dialing code, tap and hold .

To answer a call, drag **Answer** to the right (when your phone is unlocked, **Answer** is just a tap button).



## End calls

Tap **End call**.


**Note:** When you hold your phone to your ear, the display goes dark to avoid accidental taps. When you move your phone away from your ear, the display lights up again.



**Tip:** You can press Home  or Back  to hide the active call display. To reopen it, tap  **Dialer**.

## Speed dial

**Find it:**  **Dialer** > **Spd Dial**

- To call a number, tap it.
- To add, edit, or clear entries, press Menu .

## Voice dial

**Find it:**  **Dialer** > 


Say a number, or a name from your **Contacts**.



## Handsfree


**Note:** Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

During a call:


- To use the speakerphone, tap **Speaker**.
- To use a Bluetooth™ device, press Menu  > **Use Bluetooth**.

## Mute & hold

During a call:

- To mute the current call, tap **Mute**.
- To put a call on hold, press Menu  > **Hold**.

## Enter numbers during a call

To enter numbers during a call, tap  and then tap the dial pad.




## Recent calls

**Find it:**  **Dialer** > **Recent**

- To call a number, tap it.
- To send a text message, create a contact, view a contact, add the call to speed dial, or other options, tap and hold an entry.





- To filter the list, tap the view name (like **All calls**) at the top.
- To clear the list, press Menu .

## Frequent calls

**Find it:**  **Dialer** > **Frequent**

- To call a number, tap it.
- To send a text message, view a contact, add the call to speed dial, or other options, tap and hold an entry.


## Conference calls

To start a conference call, call the first number. After they answer, press Menu  > **New call** and call the next number. When the next number answers, press Menu  > **Join**.

## Your phone number


**Find it:** Menu  > **Settings** > **About phone** > **Status** > **Phone number**

## Your caller ID

To hide your number from the people you call, press Menu  > **Settings** > **Call settings** > **Additional call settings** > **Caller ID**.

## Emergency calls

**Note:** Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Tap  **Dialer** (if your phone is locked, tap **Emergency Call**).
- 2 Enter the emergency number.
- 3 Tap **Call** to call the emergency number.

**Note:** Your mobile device can use AGPS satellite signals to help emergency services find you.

## Call forwarding & waiting

You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network):

**Find it:** Menu  > **Settings** > **Call settings** > **Call forwarding**

When you're on a call and a second call comes in, **Call waiting** lets you answer it by tapping **Answer**. You can turn off **Call waiting**, to send second calls straight to your voicemail:

**Find it:** Menu  > **Settings** > **Call settings**  
> **Additional call settings** > **Call waiting**

## Restrict outgoing calls

To restrict your phone so that it can only dial a few numbers:

**Find it:** Menu  > **Settings** > **Call settings** > **Fixed dialing number**


- To turn fixed dialing on, tap **FDN disabled**.
- To add or delete the allowed numbers, tap **Manage FDN list**.

## Contacts


*contacts like you've never had before*

### Quick start: Contacts

**Find it:**  **Contacts**

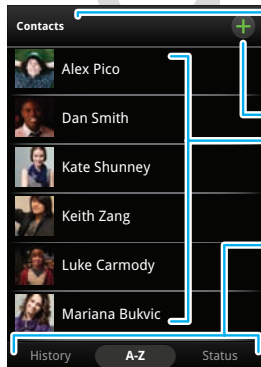

#### Group

Press Menu  to choose which group to show (like All, Favorites, or Facebook).

#### Create Contacts

#### Contacts List

Tap to view contact information. Tap & hold to edit, delete, and more.


#### Views

Tap a list view, or flick the display right or left to show:

**History** - recently used



**A-Z** - list without status

**Status** - list with status

**Tip:** To search the list, open your phone (or press and hold Menu  to open a display keypad), then type a name. When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster.

## Import contacts from your SIM

**Note:** You might have already done this during “Set up & go” on page 4.

If you need to import the contacts from your SIM card, tap  **Contacts**, then press Menu  > **Settings** > **Import from SIM card**.



## Call, text, or email contacts

**Find it:**  **Contacts**

For **Call**, **Send Text Message**, **Email**, **View contact**, or other options, tap and hold the contact.



## View & use contacts

With a MOTOROLA **DEXT** with MOTOBLUR, you'll know what everybody's up to and when. Every time you pick up a call, check a message, or look up a friend's contact info, sure, you'll see their name and number, but you'll see their social network status and smiling face, too.

**Find it:**  **Contacts**

- To filter the contacts by group (**All**, **Facebook**, and so on) tap the filter name at the top.

**Tip:** To change which account provides the pictures for your **Contacts**, from the home screen


press Menu  > **Settings** > **Accounts** > Menu  > **Picture Source**.

- To change the list view, tap **History** (recently used), **A-Z** (list without status), or **Status** (list with status) at the bottom.
- To find a contact, just type the name.

Tap a contact to open their details. To start a call or message, just tap their phone number or other info. You can tap **History**, **Info**, or **Happenings** at the bottom of the screen to see more.

## Edit or delete contacts

**Find it:**  **Contacts**

Tap the contact, then press Menu  > **Edit** or **Delete**. You can set a ringer, address, and other details that will be saved on your phone and your MOTOBLUR account.


**Where are contacts edited or deleted?** Your phone edits the contacts in its memory, and also updates your MOTOBLUR account. Your changes won't affect your SIM card.

## Link contacts



You might have two **Contacts** for the same person, maybe a Facebook friend who is also stored on your

SIM card, or one friend with two email addresses. To combine these two contacts:

**Find it:**  **Contacts**

Tap a contact to open it, then press Menu  > **Link contact** and tap the second entry. Your MOTOBLUR account remembers this connection.

## Create contacts


**Find it:**  **Contacts** > Menu  > **Add contact**

Open your phone to type the name and details.


Tap **Mobile** to choose a different type for this entry.


Tap **+** to add another entry.

Tap **-** to remove this entry.

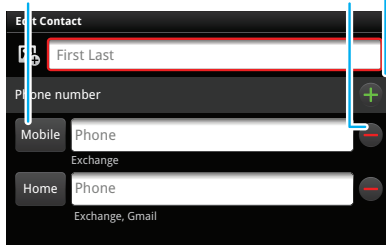

To see more details, flick up.

When you're finished, press Menu  > **Save**.



**Where are contacts saved?** Your phone saves new contacts in its memory, and also updates your MOTOBLUR account. So, if you get another MOTOBLUR phone, you can just log into MOTOBLUR to download your contacts. You can't save new contacts on your SIM card, but you can update your accounts: In **Contacts**, press Menu  > **Settings** to choose which accounts are updated with new contacts.

## Synchronize contacts

When you change one of your **Contacts**, your phone automatically updates your MOTOBLUR account online. Also, your phone updates your **Contacts** and MOTOBLUR account whenever you change a friend in your social networking accounts.

So, you don't have to do anything to synchronize your **Contacts** with your other accounts! MOTOBLUR takes care of it for you.


## My details

**Find it:**  **Contacts** > Menu  > **View my details**

To edit details, tap them.

## Groups

You can put your **Contacts** into groups that you create (like “friends,” “family,” or “work”). Then, you can find contacts faster by showing one group at a time.

To create a group in your **Contacts**, press Menu  > **Add group**. Enter a group name, then tap **Add member** to add members.


To show only one group in your **Contacts**, tap **Contacts** at the top of your screen and choose the group name.

## Messaging

*sometimes it's best 2 text, or IM, or email . . .*

### Quick start: Messaging

**Find it:**  **Messaging** > **Universal Inbox**

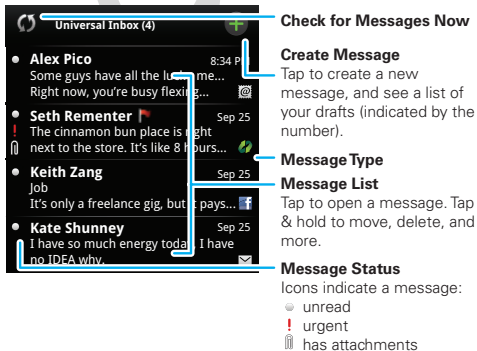

**Tip:** To see more messages, flick or drag up.

### Read & reply to messages

Every text, email, friend-feed, wall post, and bulletin is automatically delivered to you, ready for your immediate reply with the slide-out keypad. The best part is you don't have to dig through any apps, screens

or menu—every message streams right to the phone, viewable exactly the way you want.

**Find it:**  **Messaging** > **Universal Inbox**

**Note:** **Universal Inbox** shows all of your messages together—text, email, and social networking messages. To show only one type of message, tap a message account type instead of **Universal Inbox**.

- To open a message and all of its replies, tap it.
- To respond to a message, just open it and enter your response in the text box at the bottom.

For email, tap  to show the text box.




- To open options, tap and hold a message.

**Tip:** Try the **Messages** widget in “Widgets” on page 24.

## Create messages


**Find it:**  **Messaging** > 

Choose a message type. Then, enter the recipient and message.

In text messages and emails, press Menu  for options like **Insert...** or **Attach Files**.





## Send & receive attachments

To send a file in a message, open a new message and press Menu  > **Insert...** or **Attach Files**.

When you receive a message with an attachment, open the message and tap the file name to download it. Then, tap the name again to open it. Some file formats can be converted to HTML for faster viewing, and your phone will show a button that says **Get HTML version**.



**Tip:** To send and receive large attachments faster, use a Wi-Fi connection, in “Wi-Fi” on page 42.

## Set up messaging

To add email accounts, press Menu  > **Settings** > **Accounts** > Menu  > **New account**.


- **Corporate Sync** is for Exchange server work email accounts. Enter details from your IT administrator.

**Tip:** You might need to enter your domain name with your user name (like *domain/username*)


**Note:** Some work accounts might require you to add a password lock to your phone, for security. To stop an account from showing the contacts you create on your phone, tap  **Contacts**, press Menu  > **Settings**, then uncheck the account under **New contacts**.

- **Email** is for most personal email accounts. For account details, contact the account provider.

**Note:** While you are using a Wi-Fi network, you cannot access **Yahoo Mail** accounts. You can still use your browser to see these accounts at [mail.yahoo.com](mailto:mail.yahoo.com).

To change your settings, press Home   
>  **Messaging** > Menu , then tap:






- **Manage accounts** to change your user name or password (or server settings, for email).
- **Edit Universal Inbox** to choose which accounts show messages in the **Universal Inbox**.
- **Messaging Settings** to set the notification for each account type (along with other preferences, for email).

**To get Gmail™** in your Messages widget and **Universal Inbox**, you'll need to add it as an **Email** account: Tap **Messaging Settings** > **Add account** > **Email** and enter your Gmail™ details. If you added your **Google** account too, turn off its email sync to avoid duplicate email notices: Press Home   
> **Accounts**, tap your Google™ account, and tap the checkmark to turn off **Gmail**.

**Tip:** For social network accounts, see “Add accounts” on page 10.




## Instant messages


To send and receive instant messages, you can use an instant messaging app or your browser.

- To download and use an instant messaging app, press Home  >  **Market** > **Applications** > **Communication**, then choose an app for your provider. Once you download the app, you'll see it in “Main menu” on page 9.
- If you don't see an app for your IM provider, you can use your Web browser. Press Home   
>  **Browser** > Menu  > **Settings**, then enter your provider's Web site and tap **Go**. Once you're there, follow the link to sign in.

**Note:** Your IM options will depend on your IM provider. To browse instant messaging apps from your computer, go to [www.android.com/market](http://www.android.com/market).

## Voicemail

When you have a new voicemail,  shows at the top of your screen. To hear the voicemail, tap  **Dialer**, then tap and hold .














If you need to change your voicemail number, in the home screen press Menu  > **Settings** > **Call settings** > **Voicemail**.








## Text entry


*think keyboard, now think smaller*

### Typing tips

To use the full keypad, slide open your phone (there's a keypad diagram within "Your phone"):

To...	
Enter <b>symbols</b> chosen from a list	Press Symbols 
Enter <b>alternate</b> characters in the corners of keys	Press Alternate 
Enter <b>several alternate</b> characters, until you press Alternate  again	Press Alternate  twice
Enter <b>one capital</b> letter	Press Shift 
Enter <b>only capital</b> letters, until you press Shift  again	Press Shift  twice
<b>Select</b> text (Scroll  left/right), or <b>skip</b> pages (Scroll  up/down)	Press Shift  + Scroll 
<b>Cut</b> selected text	Press Menu  > <b>X</b>
<b>Copy</b> selected text	Press Menu  > <b>C</b>



To...	
<b>Paste</b> cut or copied text	Press Menu  > <b>V</b>
<b>Delete</b> a character (hold to delete more)	Press Delete 
<b>Delete</b> the current <b>line</b>	Press Alternate  + Delete 
<b>Jump</b> to the beginning/end of a line	Press Alternate  + Scroll 
Start a <b>new line</b> (email or social networking) or <b>send</b> the message (text messages)	Press Return 


To change your text entry settings and see the dictionary of terms you've used, from the home screen, press Menu  > **Settings** > **Locale & text**.

### Touchscreen keypad

When your phone is closed, you can open a display keypad by tapping a text field, or pressing and



holding Menu . To close the keypad, press Back .

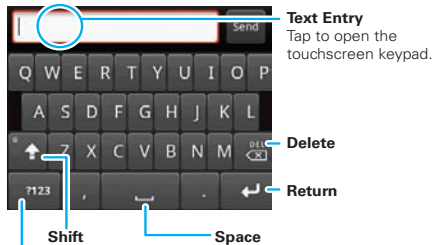




#### Symbols/Numbers

Tap to open a keypad for symbols and numbers.

To change your settings for this keypad, from the home screen, press Menu  > **Settings** > **Locale & text** > **Android keyboard**.

## Format text in emails

When you create an email, you can format your message. To select text for formatting, press and hold Shift , then press Scroll  left or right.

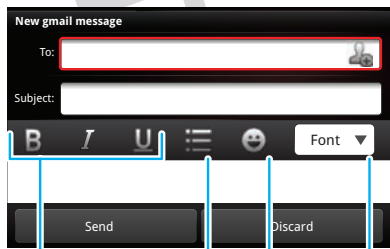

**Bold, Italic,  
or Underline**

**Bullet Smiley**

**Font**

## Text entry settings

When you use the touchscreen keypad, your phone suggests words from your dictionary and chosen language. Your phone also automatically enters apostrophes in some words, like “dont.”



**Find it:** Menu  > **Settings** > **Locale & text**












- To edit your dictionary, tap **User dictionary**.

- To change the language and the style for your touchscreen keypad, tap **Select locale**.
- To change the sounds, corrections, and other settings for your touchscreen keypad, tap **Android keyboard**.
- To change the automatic correction settings for your full keypad, tap **Device keyboard**.

## Tips & tricks

*a few handy hints*

To...	
Return to the <b>home screen</b>	Press Home  .
See <b>recently dialed</b> numbers	Tap  <b>Dialer</b> > <b>Recent</b> .
<b>Sleep/wake</b> your phone	To sleep, press Power  . To wake, press Menu  .
Set <b>lock screen</b>	Press Menu  > <b>Settings</b> > <b>Display &amp; security</b> > <b>Screen lock</b> .
Turn <b>ringer</b> on/off	Slide ringer switch up (ringer on) or down (ringer off).
Google™ <b>search</b>	Press Search  .
Google™ <b>search by voice</b>	Press and hold Search  .
Show <b>last few apps</b> used	Press and hold Home  .
Turn <b>airplane mode</b> on/off	Press and hold Power  > <b>Airplane mode</b> .
Turn <b>Bluetooth™</b> on/off	Press and hold Power  > <b>Bluetooth</b> .

To...	
Turn <b>Wi-Fi</b> on/off	Press and hold Power  > <b>Wi-Fi</b> .
Turn <b>GPS</b> on/off	Press and hold Power  > <b>GPS</b> .
<b>Zoom in</b> to select a link on a web page	Press  > <i>link</i> .
Go to the <b>top of a list</b>	Press Alternate  > Scroll  up.
Go to the <b>bottom of a list</b>	Press Alternate  > Scroll  down.
<b>Scroll list up</b> one screen	Press Shift  > Scroll  up.
<b>Scroll list down</b> one screen	Press Shift  > Scroll  down.

## Personalize

*add your personal touch*

### Widgets




#### Create widgets

- 1 Find an empty spot on your home screen where you want to add a widget. You can flick left or right to open other panels on your home screen.
- 2 Tap and hold the empty spot until you see the **Add to Home screen** menu.
- 3 Tap **Widgets**.
- 4 Tap the type of widget. If necessary, enter the widget settings.

#### Set up widgets

You can customize some widgets. Tap a widget to open it, then press Menu :

- **Happenings:** Update your status, choose which accounts appear in this widget, or manage your accounts (the same as “Add accounts” on page 10).
- **Messages:** Change the widget name or choose how long it shows new messages. To add email accounts, “Set up messaging” on page 19.

- **Music:** Set this widget to an artist, album, song, playlist, or just press Menu  > **Party shuffle**. There's more about "Music" on page 30.
- **News:** Change the widget name, choose how long it shows new stories, or choose a news source. To choose a source, tap , then choose preset **Bundles** or **Channels**, or choose **Custom** to enter a URL for a **Webpage** or an **RSS feed**.
- **Weather:** Change temperature units or add locations. To add locations, tap , enter a city, and tap **Search**. When you open the weather widget, flick left to see other locations you added.

## Ringtones

To personalize your ringtones:

**Find it:** Menu  > **Settings** > **Sound & ringtones** > **Phone ringtone** or **Notification ringtone**

To set your ringer and vibrate options:

**Find it:** Menu  > **Settings** > **Sound & ringtones** > **Ringer & Vibrate Modes**

**Tip:** To switch off your ring sound, slide down the Ringer off switch.

## Sounds

### features

#### set volume for media and videos

Menu  > **Settings** > **Sound & ringtones** > **Media volume**

#### play tones when using dial pad

Menu  > **Settings** > **Sound & ringtones** > **Audible touch tones**

#### play sound on screen selection

Menu  > **Settings** > **Sound & ringtones** > **Audible selection**


## Display settings

### features

#### notification LED

Blinks to tell you that a notification has been received. Menu  > **Settings** > **Display & security** > **Notification LED**

#### set display brightness

Menu  > **Settings** > **Display & security** > **Brightness**

features



### set orientation

Menu  > **Settings** > **Display & security** > **Orientation**

### set animation

Menu  > **Settings** > **Display & security** > **Animation**

## Quick launch shortcuts

To use a quick launch shortcut, press Search  and the assigned key, like Search  and **B** to launch the browser.


## Date & time

Set date, time, time zone, and formats:

**Find it:** Menu  > **Settings** > **Date & time**

## Language & region

Set your menu language and region:

**Find it:** Menu  > **Settings** > **Locale & text** > **Select locale**


## Photos & videos


*see it, capture it, share it!*

### Photos

#### Take & share photos

Take that family photo, and post it online for everyone to see.


**Find it:** Press Camera 

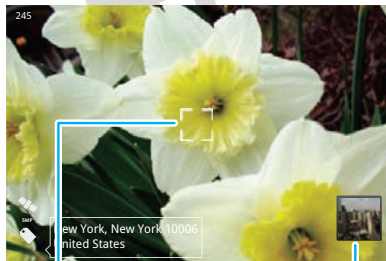

**Autofocus Box**

Tap the screen to show a thumbnail of your last photo.

**Note:** Photos are stored on your microSD memory card. **Picture Resolution** is 3MP, unless you change it.

To take the photo, lightly press Camera  halfway until the autofocus box turns green, then press all the way to take the photo.

Tap the viewfinder to see a thumbnail of the photo you've just taken (on the right). Tap the thumbnail, then:

- To **see** all your photos, tap **Gallery**.
- To **set** the photo as a wallpaper, contact photo, or social network profile photo, tap **Set as**.
- To **send** the photo in a message or post it online, tap **Share**. For more info on sharing your photos, see "Share your photo gallery" on page 28.
- To **delete** the photo and return to the viewfinder, tap **Delete**.

### Photo options

In the viewfinder, press Menu  > **Settings** to open the camera menu:

options	
<b>Store location in pictures</b>	Save the details of where the photo was taken.
<b>Picture Resolution</b>	Set the resolution of your photo.


### options

**Color Effects** Choose your color settings, like **None**, **Negative**, or **B/W**.

**Advanced settings** Set the **Picture Quality** of your photo, or choose your **White Balance** light settings, like **Auto**, **Daylight**, or **Cloudy**..

### View your photos

**Find it:** Home  >  **Picture Gallery**

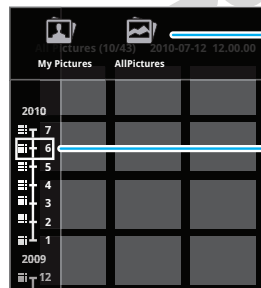

#### Categories


Tap at the top to open, then tap a category.

#### Picture Dates

Tap on the left to open the date list, then drag the dates to find pictures.

### Play a slideshow

Press Home  >  **Picture Gallery**, tap a picture, then tap  to start a slideshow. To stop the

slideshow, tap the display. To return to the gallery, press Back .

### Share your photo gallery

**Find it:** Home  >  **Picture Gallery**

To send your photo in a message or post it online:

- 1 Tap and hold a photo, then tap **Share**.
- 2 Choose how you want to share—like **Email**, **MySpace**, **Social sharing** or **Text Messaging**.

**Tip:** With **Social sharing**, you can post a photo to more than one social network at the same time.

### Manage your photos

**Find it:** Home  >  **Picture Gallery**

Tap and hold a photo, then:

- To delete the photo, press Menu  > **Delete**.
- To set the photo as a contact picture, social network profile picture, or wallpaper, press Menu  > **Set as**.
- To open file details, press Menu  > **More** > **Picture Info**.
- To set your photo order list, press Menu  > **Settings** > **Picture Sort**.

**Tip:** To copy photos to/from a computer, go to “USB drag & drop” on page 43.

### Edit your photos

**Find it:** Home  >  **Picture Gallery** > *picture* > Menu  > **Edit**

To crop a photo, tap the crop tool, stretch and drag the crop square to the image you want, then tap the crop save icon.

### Videos



#### Record & share videos

**Find it:** Home  >  **Camcorder**



Tap the screen to show a thumbnail of your last recording.


**Tip:** To send your video in a message, set the video quality to **Low (for MMS messages)**: Press Menu  > **Settings** > **Select Video Quality**.

**To record** the video, press Camera . To stop the video recording, press Camera  again. Tap the viewfinder to see a thumbnail of the video you've just taken. Tap the thumbnail, then:

- To **see** all your videos, tap **Gallery**.
- To **play** the video, tap **Play**.
- To **send** the video in a message or post it online, tap **Share**. For more info on sharing your photos, see “Share your video gallery” on page 29.
- To **delete** the video, tap **Delete**.

#### Play your videos

**Find it:** Home  >  **Video Gallery** > *video*

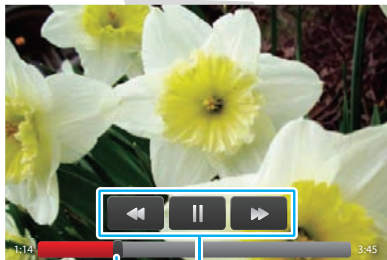

Progress Bar

Video Controls

#### Share your video gallery

**Find it:** Home  >  **Video Gallery**

To send your video in a message or post online:

- 1 Tap & hold a video, then tap **Share**.
- 2 Choose how you want to share—like **MMS**, **Facebook**, or **MySpace**.

#### Manage your videos

**Find it:** Home  >  **Video Gallery**

To delete a video, tap and hold a video, then tap **Delete**.




## Music

when music is what you need...

### Quick start: Music

Tap, tap, play—instant music. Just open your music library, then select what you want to play.


**Find it:** Home  >  **Music**

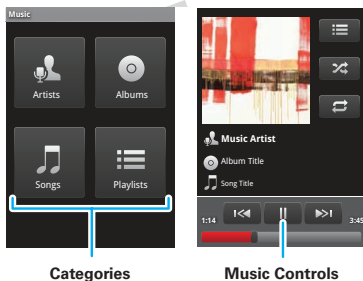

#### Categories

Tap a category, then tap a song or playlist.

#### Music Controls

**Tip:** When a song is playing, you can add it to a playlist by pressing Menu  > **Add to playlist**.

## Set up music

### What music transfer tools do I need?

To put music on your computer and then load it on your phone, you need:

- A Microsoft™ Windows™ PC or Apple™ Macintosh™
- A USB data cable.

### You need a memory card

Your music is stored on your memory card. Your phone supports removable microSD memory cards up to 32 GB capacity. To make sure your memory card is installed, go to “Assemble & charge” on page 3.

**Tip:** To see the available memory on your memory card, press Menu  > **Settings** > **SD card & phone storage**.

### What music file formats can I play?

Your phone can play many types of files: MP3, M4A, AAC, ACC+, MIDI, WAV, and OGG Vorbis.

**Note:** Your phone does not support any DRM protected files.

### What headphones can I use?

Your phone has a 3.5mm headset jack for wired stereo listening. You can go wireless with Bluetooth™ stereo

headphones or speakers (see “Bluetooth™ wireless” on page 40).

## Get music

### Rip a CD

Not literally. If you’re new to digital music transfer, this means transferring music from a music CD to your computer.

To rip a music CD on your computer, you can use Microsoft™ Windows™ Media Player. You can download Windows Media Player from [www.microsoft.com](http://www.microsoft.com).


- 1 On your computer, open Windows Media Player.
- 2 Insert a music CD into the computer’s CD ROM drive.  
**Note:** Make sure you change the format to MP3 in “Rip > Format > Rip Settings”.
- 3 In the Windows Media Player window, click on the “Rip” tab.
- 4 Highlight the songs you want to import, and click “Start Rip”.

The songs are imported to the Windows Media Player Library.

## Transfer using Windows Media Player


Transfer music files from a computer to your memory card.

**Note:** Copyright—do you have the right? Always follow the rules.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone’s micro USB port to a USB port on your computer. Your phone should show  in the status bar.  
**Note:** Your phone supports Microsoft™ Windows™ XP, Windows Vista™, and Apple™Macintosh™. Other operating systems may not be compatible.
- 2 Your phone shows a USB connection dialog. Tap **USB drive**. You can’t use the files on your memory card while it is connected.
- 3 On your computer, open Windows Media Player.
- 4 On the “Sync” tab, select “More Options”: Under “Device”, select your phone.
- 5 Select “Properties”, check the “Create folder hierarchy on device” box, and click “OK”.
- 6 Drag your music files over to the “Sync List” and press “Start Sync”.

## Transfer using USB

Transfer music files from a computer to your memory card.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.

**Note:** Your phone supports Microsoft™ Windows™ XP, Windows Vista™, and Apple™ Macintosh™. Other operating systems may not be compatible.

- 2 Your phone shows a USB connection dialog. Tap **USB drive**. You can't use the files on your memory card while it is connected.
- 3 Find "Removable Device" (your memory card) in the "My Computer" window.

- 4 Drag and drop your music to a folder on your memory card.

**Tip:** To help manage your music, create a "Music" folder on your memory card.


- 5 When you're done, use the "Safely Remove Hardware" feature to finish.

## Play music

### Music library


Open your music library, then select what you want to play.

**Find it:** Home  >  **Music**

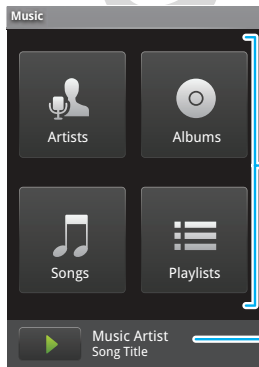


**Categories**  
Tap to list songs or playlists.

**Last Played**  
Tap to play again.

Your music is stored by artists, albums, songs, and playlists. Tap a category, then tap the song or playlist you want to play. Press Menu  > **Party shuffle** to randomly play all your songs, or tap **Search** to look for a song.

## Music player

Just tap a song or playlist to get going.

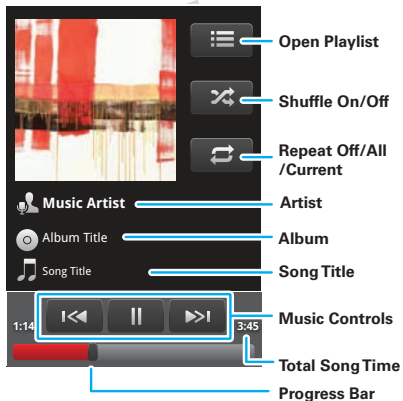

## Music player controls

controls	
<b>play/pause</b>	Tap  .
<b>previous/next</b>	Tap  .
<b>fast forward/rewind</b>	Tap & hold  .

controls	
<b>view playlist</b>	Tap  .
<b>shuffle</b>	Tap  .
<b>repeat</b>	Tap  .
<b>volume</b>	Press the side volume keys.
<b>view library</b>	Press Menu  > <b>Library</b> .
<b>turn shuffle on/off</b>	Press Menu  > <b>Party shuffle</b> .
<b>add to playlist</b>	Press Menu  > <b>Add to playlist</b> .
<b>use as ringtone</b>	Press Menu  > <b>Use as ringtone</b> .
<b>delete</b>	Press Menu  > <b>Delete</b> .

## Hide, wake, turn off

Press Home to use another app. Your music continues to play.

When you see in the status bar a song is playing, flick down to see details. Tap the song to return to the music controls.

To turn off your music tap .

## Playlists

To add a song from the music library to a playlist, tap and hold the song then tap **Add to playlist**. Choose an existing playlist, or tap **New** to create a new playlist.

To add a song to the playlist you're playing, press Menu  > **Add to playlist** in the music player.


To edit, delete and rename playlists, tap and hold the playlist, in the music library.

## Web

*you don't need a computer, surf the web with your phone*

### Quick start: Browser

**Find it:** Home  >  **Browser**

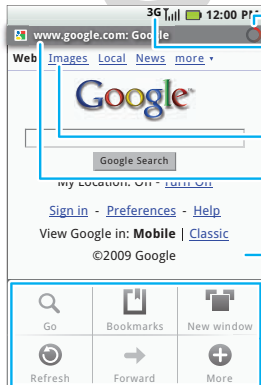

The page is loading.

#### Connection

Over the air:

Mobile Network: **G, E, 3G**

Wi-Fi: 

#### Links


Tap to open.

#### Web Address

To go to a URL, press

 > **Go**.

Drag or flick to scroll.


Press  to open a menu where you can open a Web page, your bookmarks, a new window, and more.

**Note:** If you can't connect, contact your service provider.

## Connect

Your phone uses the mobile phone network (over the air) to automatically connect to the Web.


**Note:** Your service provider may charge to surf the Web or download data.

To use a wireless network, press Menu  > **Settings** > **Wireless controls**. Tap **Wi-Fi** to turn it on, then tap **Wi-Fi settings** to search for nearby wireless networks. Tap a network to connect. There's more in "Wi-Fi" on page 42.

## Web touch tips


### Zoom & magnify

In Web pages, when you scroll (drag or flick), zoom icons appear at the bottom of your screen.

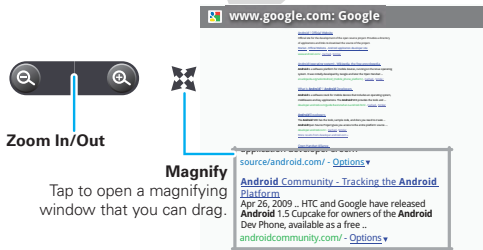


## Select links

When you tap a link, your phone outlines it. If you tap and hold the link, your phone shows options, like **Open in new window** or **Bookmark link**.



## Browser options

Press Menu  to see browser options:

options	
<b>Go</b>	Enter the Web address (URL) you want. <b>Tip:</b> Some sites are optimized for mobile phones, and they use an "m" in the URL instead of "www" (like <a href="http://m.youtube.com">m.youtube.com</a> ).
<b>Search</b>	Enter text to find.
<b>Bookmarks</b>	Shows a list of your bookmarks. Tap <b>Add bookmark...</b> to add the current page to your list.
<b>New window</b>	Opens a new window.
<b>Refresh</b>	Reloads the current page.

## options




**More** Shows browser options, like **Find on page**, **Select text**, **Page info**, **Share page**, **Downloads**, and **Settings**.

## Download apps

**Warning:** Apps downloaded from the Web can be from unknown sources. To protect your phone and personal data, only download apps from sources you trust, like “Android Market™” on page 40.

**Note:** All apps downloaded are stored in your phone memory.

To download apps:

- 1 If you want to download apps from any Web page, press Menu  > **Settings** > **Applications** > **Unknown sources**.
- 2 To launch the browser, press Home  >  **Browser**.
- 3 Find the app you want to download and tap the download link.

## Manage your downloads

To view files or applications you have downloaded, press Home  >  **Browser** >  > **More** > **Downloads**.


To clear your download history, tap **Clear list**. To cancel, tap **Cancel all downloads**.

# YouTube™

go and create your own classic


## Quick start: YouTube

**Find it:** Home  >  YouTube

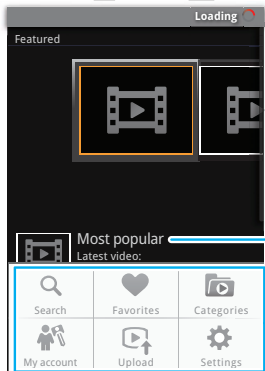

### Categories


Tap a video to play.

Press  to open a menu where you can open a Web page, your bookmarks, a new window, and more.


The YouTube user-generated content Web site lets you share videos with YouTube users everywhere. You don't need a YouTube account to browse and view videos.


**Note:** If you don't have a YouTube account, visit [www.youtube.com](http://www.youtube.com) to find out more. To create an account or sign in, go to "Your account" on page 38.

## Watch YouTube videos

See popular video categories, like Featured, Most viewed, and Top rated. Tap a category, then tap the video to start playing it. To see more video categories, press Menu  > **Categories**.


## Search for YouTube videos

**Find it:** Menu  > **Search**

Enter text, then tap **Search**. To clear your search history, press Menu  > **Settings** > **Clear search history**.

## Share videos

Send someone a link to a video that you are watching.

1 Press Menu  > **Share**.

**Tip:** Just tap and hold a video to open the **Share** menu.

2 Address and complete your email, then tap **Send**.




## Your account

Log in or create account

**Find it:** Menu  > **My account**

- 1 To create your YouTube account, tap the “Don't have a YouTube account? Click here to create one” link.  
If you already have a YouTube account, enter your username, password and tap **Sign in**.
- 2 For a new account, enter a username, and complete the fields, then tap **I accept**.

## Upload videos

**Find it:** Menu  > **Upload**

- 1 Tap the video you want to upload. You can change the video title, description, set the access, and add tags.
- 2 Tap **Upload**.


## Google Maps™

*where you are, where you're going*

### Quick start: Google Maps


Where am I? What's around here? Don't worry—let Google Maps help you explore your surroundings and find what you're looking for.

**Find it:** Home  >  **Google Maps**

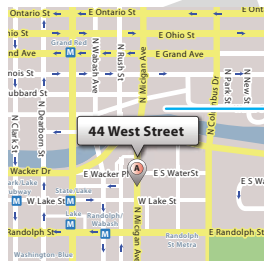

#### Map View

Drag or flick to scroll.  
Tap to show zoom.

Press  to open a menu where you can open a Web page, your bookmarks, a new window, and more.


Google Maps opens by default in “Map mode.”

## Latitude

*where are your friends & family?*

### Join Latitude


See where your friends and family are on Google Maps™. Plan to meet up, check that your parents got home safely, or just stay in touch.

Don't worry, your location is not shared unless you agree to it. You need to join Latitude, and then invite your friends to view your location or accept their invitations. When using Google Maps (in any mode except in Street View), press Menu  > **Latitude**. Read the privacy policy and if you agree with it, tap **Agree & share**.

### Add & remove friends

**Find it:** Home  >  **Google Maps** Menu   
> **Latitude**

To add friends:

- 1 Press Menu  > **Add friends**.
- 2 Tap **Select from Contacts** or **Add via email address**, then tap a contact and **Add friends** > **OK**.

If your friends already use Latitude, they'll receive an email request and a notification. If they have not yet joined Latitude, they'll receive an email request that

invites them to sign in to Latitude with their Google account.

To remove friends:



- 1 Press Menu  > **Latitude** to show your friend's list, then tap a friend in your list.
- 2 Tap **Remove**.

### Share location



When you receive a request to share location details you can choose to:

- **Accept and share back**—see your friend's location, and your friend can see yours.
- **Accept, but hide my location**—see your friend's location, but they can't see yours.
- **Don't accept**—location information is not shared between you and your friend.

### Hide your location

To hide your location from a friend, press Menu  > **Latitude** to show your friend's list. Tap your contact name, then press Menu  > **Privacy** > **Hide your location**.

### Turn off Latitude

Press Menu  > **Latitude** to show your friend's list. Tap Menu  > **Privacy** > **Turn off Latitude**.

## Apps for all


get the app you want

### Android Market™

get the app you want

### About Android Market™

**Find it:** Home  >  **Market**

Get all the fun games and cool apps you want! Android Market provides access to applications developed by developers worldwide, so you can find the app you want. If you need help or have questions about Android Market, press Menu  > **Help**.



### Browse & install apps

Scroll to and tap the app you want to install. Then, tap **Install** (if app is free) or **Buy**.

### Manage & restore apps

**Find it:** Menu  > **Settings** > **Applications** > **Manage applications**


Tap an app in the list, then tap **Uninstall** (for apps you downloaded), **Clear cache**, or other options.


To reinstall any downloaded items, press Home  >  **Market** > **My downloads**. All previously installed apps are listed and available for download.

## Bluetooth™ wireless

lose the wires and go wireless

### Quick start: Bluetooth wireless

**Find it:** Menu  > **Settings** > **Wireless controls** > **Bluetooth settings**

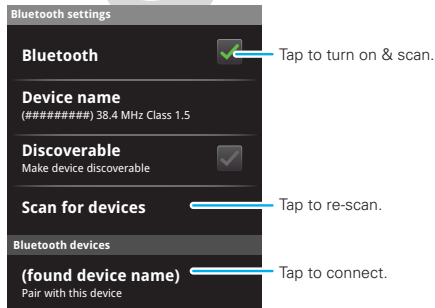

### Turn Bluetooth power on or off

**Find it:** Press and hold Power  > **Bluetooth**

**Note:** To extend battery life, turn Bluetooth power off when not in use.



## Connect new devices

**Note:** This feature requires an optional accessory.

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, see “Reconnect devices” on page 41.

- 1 Make sure the device you are pairing with is in discoverable mode.

**Note:** Refer to the guide that came with the device for details.

- 2 Press Menu  > **Settings** > **Wireless controls** > **Bluetooth settings**.
- 3 Tap **Bluetooth** to turn on and scan. If Bluetooth is already on, tap **Scan for devices**.
- 4 Tap a device to connect.
- 5 If necessary, tap **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth indicator  appears in the status bar.

**Note:** Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

## Reconnect devices

To automatically reconnect your phone with a paired device, simply turn on the device.

To manually reconnect your phone with a paired device, tap the device name in the **Bluetooth devices** list.

## Disconnect devices

To automatically disconnect your phone from a paired device, simply turn off the device.

To manually disconnect your phone from a paired device, tap the device name in the devices list, then press Menu  > **Disconnect**.

## Edit properties

Press Menu  > **Settings** > **Wireless controls** > **Bluetooth settings** > **Device name**. Enter a name and tap **OK**.

## Wi-Fi


home, office, or hotspot

### Quick start: Wi-Fi

**Find it:** Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**

**Note:** Your phone's Wi-Fi features and power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.

Use a wireless network for fast Internet access and to download data.

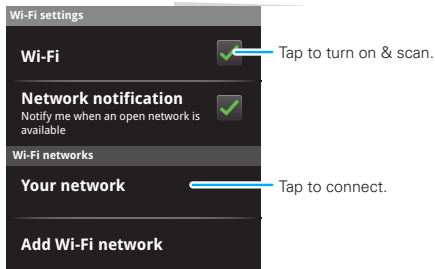





### Turn Wi-Fi on or off

**Find it:** Press and hold Power  > **Wi-Fi**

**Note:** To extend battery life, turn off Wi-Fi power when not in use.

### Wi-Fi search & connect

To find networks in your range:

- 1 Press Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**.
- 2 Tap **Wi-Fi** to turn on and scan. If Wi-Fi is already on, press Menu  > **Scan**. Your phone lists the networks it finds within range.  
**Tip:** To see your phone's MAC address or other Wi-Fi details, press Menu  > **Advanced**.
- 3 Tap a network to connect.
- 4 If necessary, enter **Network SSID**, **Security**, and **Wireless password**, and tap **Connect**. When your phone is connected to the network, the wireless indicator  appears in the status bar.

**Tip:** When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.


## USB & memory card


*connect your phone and computer, then drag & drop*

### USB drag & drop

**Note:** This feature requires an optional accessory.

You can transfer your pictures, videos, music, ringtones, and more, from your computer to your phone's memory card.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.



- Note:** Make sure to connect the phone to a high power USB port. Typically, these are located directly on your computer.
- 2 Your phone shows a USB connection dialog. Tap **USB drive**. You can't use the files on your memory card while it is connected.
- 3 On your computer, use the "My Computer" window to find "Removable Disk".
- 4 Click on the "Removable Disk" icon to access the memory card.

- 5 Drag and drop your pictures, videos, music, ringtones, and more, to your phone folder. To help manage your files, you can create more folders in your phone folder.
- 6 When you're done, use the "Safely Remove Hardware" feature to finish.

### Memory card

**Note:** You need the memory card installed for some features on your phone, like **Camera**.


#### Manage files

**Find it:** Home  >  **Quickoffice** > **Memory card**

Tap a file or folder to open, tap and hold a file to **Delete** or **Share**.

To manage your folders and move stuff around use your USB connection, see "USB & memory card" on page 43.

#### Remove or format your memory card

Before you remove or format your memory card you need to unmount it. Press Menu  > **Settings** > **SD card & phone storage** > **Unmount SD card**.


To format your memory card, tap **Format SD card**.

**Warning:** All data on your memory card will be deleted.

## Synchronize

*keep up-to-date*

### Google™ data synchronization

**Find it:** Menu  > **Settings** > **Google synchronization**

The Google apps on your phone give you access to the same personal information (emails, events, and contacts) that you have on a computer using Gmail™, Google Calendar™, and Contacts. It's easy to synchronize the Google apps information you want to keep up-to-date.

#### Select apps to synchronize



**1** Tap **Background data** and **Auto-sync**.

**Tip:** To save battery power do not tap **Background data**.

**2** Tap the apps you want to synchronize, like **Gmail**, **Calendar**, or **Contacts**.

### Synchronize with Microsoft™ Office Outlook

If you use Microsoft Office Outlook on your work computer, your phone can synchronize emails, events, and contacts with your Microsoft Exchange server.

**Find it:** Menu  > **Settings** > **Accounts** > Menu  > **New account** > **Corporate Sync**

**1** Enter your username (username@company.com), password, email address, and server details (server address is the same URL you use to access your company's email using the Web on your computer).

**Note:** Contact your business IT department for server details.

**2** Tap **Next**.

## Tools


*stay on top of things*


### Alarm clock


**Find it:** Home  >  **Alarm Clock**

To turn on an alarm, tap the check box.

When an alarm sounds, tap **Dismiss** to turn it off or **Snooze** to delay.


To add an alarm, press Menu  > **Add alarm**, then enter alarm details.

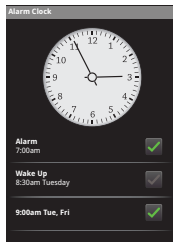

To set a snooze period, tap the alarm, then press Menu  > **Snooze time**.




### Calendar

**Find it:** Home  >  **Calendar**

Your calendar events can be viewed in different ways: Press Menu  > **Month**, **Agenda**, **Week**, or **Day**. When you highlight an event in the day and week views, more details appear.

The calendar on your phone can be synchronized with your Google Calendar™. Press Home  >  **CalendarSync** to manually sync your calendar.

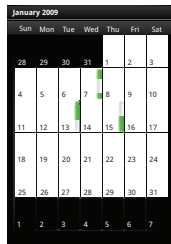


### Add calendar events

From any calendar view, press Menu  > **New event**. Enter event details and tap **Save**.

### Manage calendar events

To edit an event, press Menu  > **Edit event**. Edit event details, then when you're done, tap **Save**.

To delete an event, press Menu  > **Delete event**.


To go to today, press Menu  > **Today**.

### Calculator

**Find it:** Home  >  **Calculator**

Your calculator has two views: basic and advanced. To change your views, press Menu  > **Advanced panel**



or **Basic panel**. To clear history, press Menu  > **Clear history**.

## Quickoffice

Use Quickoffice to view recent documents and files on your memory card.

**Find it:** Home  >  **Quickoffice**


## Management

*stay in control*


### Wireless manager

**Find it:** Menu  > **Settings** > **Wireless controls**


Manage all your wireless connections: Wi-Fi, Bluetooth™, airplane mode, & mobile networks (“Network” on page 46).

**Shortcut:** Press and hold Power  to display the power menu—from here you can control Bluetooth, Wi-Fi and GPS as well as turn the phone off and set airplane mode.

### Airplane mode


Use airplane mode to turn all your wireless connections off—useful when flying. Press Power  > **Airplane mode**.

### Update my phone

To keep your phone current, software updates may be available. Press Menu  > **Settings** > **About phone** > **System updates** to see if your phone is up to date. If it isn't, tap **Update**.

### Network

You should not need to change any network settings. Contact your service provider for help.

Press Menu  > **Settings** > **Wireless controls** > **Mobile networks** to show options for roaming networks, network selection, operator selection, and access point names.


## Security

*help keep your phone safe*

### Quick start: Security


**Find it:** Menu  > **Settings** > **Security & location**

You have lots of ways to keep your phone safe.

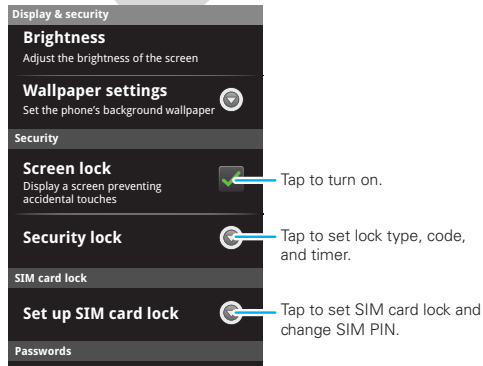





If you lose your phone, you can access your MOTOBLUR account [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur) (and remotely locate your phone, clear the data on your phone, and more).

## Screen lock


Set your phone to display a lock screen, and prevent accidental key presses, press Menu  > **Settings** > **Security & location** > **Screen lock**. You can also set a security lock to prevent others from using your phone.

To set your security level, press Menu  > **Settings** > **Security & location** > **Security lock** > **Security lock type**:

- **None** - press Menu , then Menu  again to unlock.
- **Pattern lock** - press Menu , then draw a pattern to unlock.
- **Passcode lock** - press Menu , then enter a code to unlock.


**Note:** You can make emergency calls on a locked phone (“Emergency calls” on page 14). A locked phone still rings, **but you need to unlock it to answer**.

## Lock pattern

To set the lock pattern, press Menu  > **Settings** > **Security & location** > **Security lock** > **Security lock type** > **Pattern lock**.

Follow the instructions to draw your lock pattern.

When prompted, draw the pattern to unlock the phone.

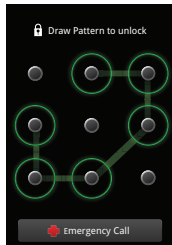


## Passcode lock


To set the passcode, press Menu  > **Settings** > **Security & location** > **Security lock** > **Security lock type** > **Passcode lock**.

Enter a passcode, then tap **OK**. Enter the passcode again to confirm it, and tap **OK**.

When prompted, enter the passcode to unlock the phone.


## Personalize your lock screen

To change your timeout, press Menu  > **Settings** > **Security & location** > **Screen timeout**. If you don't tap the screen or press any keys for this amount of time, the screen locks automatically. To unlock, see “Lock & unlock” on page 49.



To change your lock screen picture, press Menu  > **Settings** > **Display & security** > **Wallpaper settings**.

### Lock & unlock

To lock the screen/phone:

- Press Power .
- Let the screen time out (don't press anything).
- Switch the power off.

To unlock the screen/phone:


- Press Menu  or switch the phone on to display the lock screen.
- Press Menu  to unlock—if you've set a lock pattern or passcode, you'll be asked to enter it.

### Forgot your pattern or passcode?

If you forget your pattern or passcode you will need to reset your phone to its initial factory settings, see “Reset” on page 49.

## Lock your SIM

### Enable SIM PIN

To lock your SIM (the next time you power up the phone you will need to enter your SIM PIN), press Menu  > **Settings** > **Security & location** > **Set up**

**SIM card lock** > **Lock SIM card**. Enter your SIM PIN code.

**Caution:** If you enter an incorrect PIN code three times, your phone locks your SIM card and asks for your PIN unlock code, see “PUK code” on page 49.

### Change SIM PIN


To change your **SIM PIN**, press Menu  > **Settings** > **Security & location** > **Set up SIM card lock** > **Change SIM PIN**.

### PUK code

To unlock your SIM PIN, you need to enter your PIN unlock code (PUK code) when prompted.

**Note:** Your PUK code is provided by your service provider.

### Reset

To reset your phone to factory settings and erase all the data on your phone, press Menu  > **Settings** > **SD card & phone storage** > **Factory data reset** > **Reset phone**.

**Warning:** All data on your phone will be deleted.

### Lost, stolen, broken, cleared

Don't you just hate it when your life is on your phone and it all goes wrong. Lose it, break it, reset it, or even

worse - stolen! Relax, MOTOBLUR can help find your phone, clear it (if you need to) and best of all, restore all your stuff.

### Track your phone

Access your MOTOBLUR account and remotely locate your phone.

- 1 Log into your MOTOBLUR account at: [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur).
- 2 In the MOTOBLUR window, click on "Locate Device." Your phone's location is shown on a map.

### Remote clear

Access your MOTOBLUR account and remotely clear the data on your phone.

- 1 Log into your MOTOBLUR account at: [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur).
- 2 In the MOTOBLUR window, click "Wipe Device."
- 3 A warning notification is displayed, enter your MOTOBLUR password again.

**Warning:** All downloaded apps and user data will be deleted.

### Restore your phone

If you lose your phone don't worry, your contacts are backed-up on MOTOBLUR.

When you get your next MOTOBLUR product, just log into your existing MOTOBLUR account on your phone to recover all your stuff automatically.

To recover your Android Market apps, see "Manage & restore apps" on page 40.

## Troubleshooting

*we're here to help*

### Crash recovery

In the unlikely event that your phone stops responding to taps and key presses, try a quick reset. Remove the back cover and battery (“Assemble & charge” on page 3), then replace and turn on your phone as usual.

### Service & repairs

If you have questions or need assistance, go to [www.motorola.com/support](http://www.motorola.com/support), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

## Battery Use & Safety

**Important: Handle and store batteries properly to avoid injury or damage.**

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

### **DON'Ts**

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola, even if they appear to be working properly.
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
- Avoid leaving your phone in your car in high temperatures.

### **DOs**

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

**Important: Use Motorola Original products for quality assurance and**

**safeguards.** To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

**Motorola recommends you always use Motorola-branded batteries and chargers.** Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola authorized service center.

**Important:** Motorola’s warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

**Warning:** Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

**Proper and safe battery disposal and recycling:** Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- [www.motorola.com/recycling](http://www.motorola.com/recycling)
- [www.rbc.org/call2recycle/](http://www.rbc.org/call2recycle/) (in English only)

**Disposal:** Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



**Warning:** Never dispose of batteries in a fire because they may explode.

## Battery Charging

**Notes for charging your phone’s battery:**

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.



## Specific Absorption Rate

**Your model wireless phone meets the governmental requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output. Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is **1.22 W/kg**, and when worn on the body, as described in this guide, is **0.32 W/kg**. The SAR value for this product in its data transmission mode (body-worn use) is **0.38 W/kg**. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

While there may be differences between the SAR levels of various phones and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

## Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

## Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

## AGPS & Emergency Calls

When you make an emergency call, your mobile device can use *Assisted Global Positioning System* (AGPS) satellite signals to tell the emergency response center your approximate location.

The AGPS feature has limitations, so always tell the emergency response center your best knowledge of your location. Remain on the phone for as long as the emergency response center instructs you.

AGPS **might not work** for emergency calls, if your local emergency response center does not process AGPS location information. For details, contact your local authorities.

If your mobile device cannot find strong AGPS satellite signals, the location of the nearest cell tower in contact with your mobile device is automatically provided to the emergency response center.

### **AGPS Performance Tips**

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices that might interfere with or block AGPS satellite signals.

AGPS uses satellites controlled by the U.S. government and subject to changes implemented in accordance with the Department of Defense AGPS user policy and the Federal Radio Navigation Plan. These changes might affect AGPS performance.

## **Safety & General Information**

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.**

### **Exposure to Radio Frequency (RF) Energy**

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## **Operational Precautions**

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

### **Product Operation**

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: [www.motorola.com](http://www.motorola.com).

### **RF Energy Interference/Compatibility**

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

### **Follow Instructions to Avoid Interference Problems**

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

### **Implantable Medical Devices**

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

## **Driving Precautions**

The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Responsible driving practices can be found in "Smart Practices While Driving."

## **Operational Warnings**

Obey all posted signs when using mobile devices in public areas.







### **Potentially Explosive Atmospheres**

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

## Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

## Batteries & Chargers

**Caution:** Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see “Battery Use & Safety.”

## Keep Your Mobile Device and Its Accessories Away From Small Children

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

## Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

## Caution About High Volume Usage

**Warning:** Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected.

To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.



For more information about hearing, see our Web site at [www.motorola.com/hearingsafety](http://www.motorola.com/hearingsafety) (in English only).

## Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Jan0109]

## FCC Notice to Users

**The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.**

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.



- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Use & Care

To care for your Motorola phone, please keep it away from:



### **liquids of any kind**

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



### **extreme heat or cold**

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



### **microwaves**

Don't try to dry your phone in a microwave oven.



### **dust and dirt**

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



### **cleaning solutions**

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



### **the ground**

Don't drop your phone.

## Smart Practices While Driving

**Drive Safe, Call Smart**

**Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only. Go to [www.motorola.com/callsmart](http://www.motorola.com/callsmart) (in English only) for more information.**

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.



- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Motorola, Inc.  
Consumer Advocacy Office  
600 N US Hwy 45  
Libertyville, IL 60048  
[www.hellomoto.com](http://www.hellomoto.com)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. Macintosh is a registered trademark of Apple Computer, Inc. Google, YouTube, Picasa, Gmail, and the Google logo are trademarks of Google, Inc. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. All other product or service names are the property of their respective owners.

© 2009 Motorola, Inc. All rights reserved.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Bluetooth ID: B015537

MOTOROLA **DEXT** with MOTOBLUR (MB200)  
Manual Number: 68XXXXX367-A  
U.S. patent Re. 34,976



