



MOTO™ WX295

Getting Started Guide

accessories & more

www.motorola.com

CJB31A1ALAAA
68000202698-A

congratulations

Congratulations on your purchase of the stylish Motorola WX295 phone.

Whether you're a talker, a texter, or just love listening to the music on the move, your new phone does it all.

We've crammed all the main features of your phone into this handy guide—you can even take the guide with you.


If you'd like even more information about how to use your new phone, visit www.motorola.com/support.

So, let's go.

Note: Your phone may not appear exactly as the images in this manual.

Important: A headset has been provided for use with your mobile phone. This headset is the only model headset that Motorola warrants to operate with your phone. It is compliant with the acoustic safety requirements specified in France.

your phone

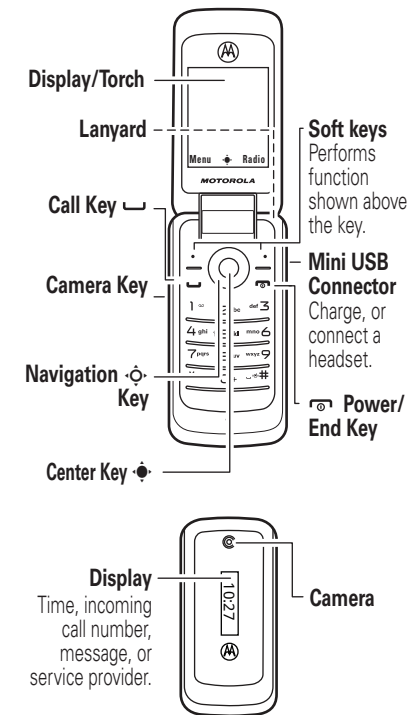

calls

make & answer calls

Enter a number and press . When your phone rings or vibrates, press .

end a call

Press .

emergency calls

To call an emergency number, enter the emergency number and press . Your service provider programs emergency phone numbers, (such as 112 or 911), that you can call under any circumstances, even when your phone is locked.

Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

messages

send messages

- Press > Messages > Messages > Create text message.
- Enter your message.

Tip: Press Options > Input method to switch text entry modes. Press to switch capitalization modes. Press to enter a space. Press Options > Languages to change language.

- Press .
- Select Add number, enter a number and press , or select Add from directory and scroll to a contact. Press to select a contact.
- Press .
- Press to send.

read messages

When you receive a message you will see 1 on your screen. Press > to open the message. You can reply to the message by pressing Options > Reply.

tips & tricks

ring style

To quickly switch your ring style, press and hold from the home screen.

'flip open' to answer

Just open the flip to answer a call. Press > My settings > Clamshell > Clamshell open answer from the home screen.

torch on

To quickly turn on your torch, press and hold from the home screen. Press to turn it off.

voicemail

Press and hold 1. If your voicemail number is pre-set, you will connect.

recent calls

To see your dialled, received and missed calls, press from the home screen.

music player

To use the music player, insert a microSD memory card (optional). The music player supports music formats, such as MP3, MIDI, and AMR.

play music

Find it: > Games & Apps > Music player > All songs.

Tip: Press the music key on the left side of the phone.

controls

function	
play/pause	Press .
skip to next/ previous song	Press right or left.
volume	Press up or down.

Note: To transfer songs to/from your memory card, use an optional microSD memory card reader on your computer to drag & drop files to the "Audios > Music" folder.

main menu

- Games & Apps
 - Music Player
 - Games
- Call Register
 - Call memory *
 - My numbers
 - Billing *
 - Call settings
- Directory
- Messages *
 - Messages
 - Voice message
 - Voicemail
 - Settings
- WAP *
 - Homepage
 - Bookmarks
 - Recent pages
 - Offline pages
 - Go to URL
 - Profiles
- Profiles
- FM Radio
- Camera
- Bluetooth
- My settings
 - Color
 - Clamshell
 - Display
 - Clock
 - Keys
 - Call register
 - More settings
- Services *
 - Organizer
 - Alarm
 - Calculator
 - Fake call
 - Converter
 - File manager
 - Voice memo
 - Memory status
 - My shortcuts
- Tools
 - Organizer
 - Alarm
 - Calculator
 - Fake call
 - Converter
 - File manager
 - Voice memo
 - Memory status
 - My shortcuts

This is a standard main menu layout. Your phone's menu may be a little different.

*Network Dependent

let's go

- cover off
- SIM in
- microSD in
- battery in
- cover on
- charge up

basics

turn it on & off

Press and hold for a few seconds to turn the phone on/off.

menu navigation

Press the center key to open the Main Menu.

Press the navigation key up, down, right or left to highlight a menu option. Press to select the highlighted option. Press Options to display the options menu.

contacts

save contacts

- Enter the number on the home screen and press Save.
- Enter the contact details and press Save.

Tip: Press > Directory > Options > Default storage to choose where to save your contacts (To SIM or To phone).

call contacts

- Press > Directory.
- Press up or down, to scroll through the list to highlight the contact's number.
Tip: Press right or left to change category (General, Most called, SIM directory, Phone directory or Group).
- Press .

personalize

set your wallpaper

Change the wallpaper to one that makes you smile.

Find it: > My settings > Display > Wallpaper

set time & date

Set the time & date shown on your home screen.

Find it: > My settings > Clock > Set time/date

set ringtone & volume

Play it loud or keep it quiet, you choose.

Find it: > Profiles

Choose a profile. Press Options to edit a profile.

create shortcuts

Choose the features you want to access with a single key press from the home screen—really useful stuff:
Find it: > Tools > My shortcuts > Add > Functions > Keys

photos

Note: You can only take photos with WX295.

- Press > Camera > Camera.

Tip: To quickly turn on your camera, press the camera key (on the side of your phone).

- Press to take your photo, then to:
 - Set as your wallpaper press up.
 - Send by Bluetooth press down.
 - Send by MMS press left.
 - Assign as contact press right.
 - Delete press Delete.
 - Return to the viewfinder press Back.

Tip: To set where your photos are stored press Options > Storage > Phone or Memory card.

To transfer photos to/from your memory card, use an optional microSD memory card reader on your computer to drag & drop files to the "Images" folder.

radio

listen to the radio

- Plug a mini-USB headset into your phone.

Note: The FM radio works only when the headset is plugged in.

- Press > > FM Radio from the home screen.

To tune in a station, press left or right or press Options > Auto search.

To adjust volume, press up or down.

To turn off the radio, press Options > Turn off.


store favorite stations

When listening to a station, press Options > Save > channel > Ok. Select a channel number and press Add to store it.

Press Options > Channel list to see your stored stations. Press keys 1 through 4 0 to select a stored station.

home screen

The home screen displays when you turn on the phone. Status indicators can appear across the top of the home screen:

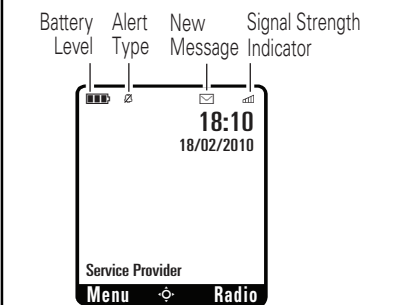

Note: Your phone's home screen may be different than the one shown.

