

APPLICANT: MOTOROLA MOBILITY, INC.

FCC ID: IHDT56MA1

INSTRUCTION MANUAL

A preliminary draft of the User's Manual follows this page.

EXHIBIT 8

# Congratulations

## MOTOROLA XT882

Your MOTOROLA **XT882** phone is loaded with premium features, including videos, music, Web access, a powerful set of business tools, and more—all in a stylish, touch tablet phone design.

- **Dual mode:** CDMA/GSM phone with dual core processor for fast speed & multi-tasking.
- **Mobile video:** Record and watch videos in high-quality 720p HD. Download or stream videos to watch on your phone, or play them on your HDTV with DLNA sharing.
- **Photos:** Take and share great photos with a high performance 8MP camera.
- **Web:** Get more from the Web, with a huge screen, full HTML and support for Adobe® Flash® Player. Search, browse, everything you want to do, all made easier.


**Note:** Certain apps and features may not be available in all countries.

**Caution:** Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

## More

- **Support:** Phone updates, PC software, online help and more at [www.motorola.com/support](http://www.motorola.com/support).
- **MOTOBLUR:** After you create a MOTOBLUR account, open it at [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur).
- **Accessories:** Find accessories for your phone at [www.motorola.com/products](http://www.motorola.com/products).

## Your phone

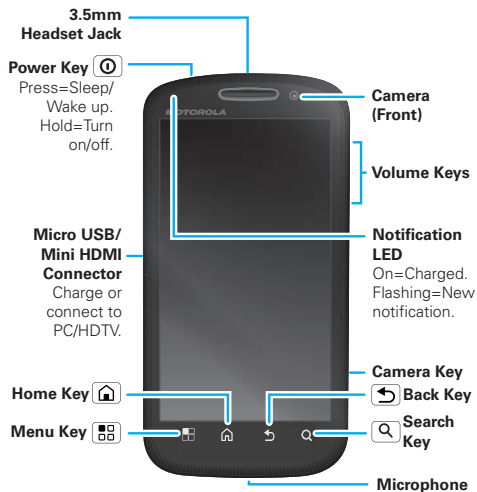

When you turn your phone, the screen adjusts for you.



**Note:** Your phone might look a little different.

# Contents

Let's go . . . . .	3
Touchscreen & keys . . . . .	6
Home screen . . . . .	9
App menu . . . . .	12
Social networking . . . . .	12
Calls . . . . .	14
Contacts . . . . .	18
Messaging . . . . .	21
Media Share . . . . .	23
Photos & videos . . . . .	25
Music . . . . .	30
Web . . . . .	36
Apps for all . . . . .	38
Location . . . . .	39
Tips & tricks . . . . .	41
Text entry . . . . .	43
Personalize . . . . .	44
Tools . . . . .	45
Bluetooth™ wireless . . . . .	48
Wi-Fi™ . . . . .	50
USB, memory card & file transfer . . . . .	52
Synchronize . . . . .	55
Management . . . . .	55
Security . . . . .	56
Troubleshooting . . . . .	59
Safety, Regulatory & Legal . . . . .	60

# Let's go

*let's get you up and running*

## Assemble & charge

1 cover off



2 UIM and/or SIM in



3 microSD in  
(already done)



4 battery in



5 cover on



6 charge up



**Caution:** Please read “Battery Use & Safety” on page 60.

**Tip:** To save battery life, see “Battery tips” on page 42.

## Set up & go

Create or log into a MOTOBLUR account to get your contacts, email, messages, and status information, for all your accounts, all in one place. Registration is secure, and should only take a few minutes.



**Note:** This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. For details, contact your service provider.

- 1 Turn on.
- 2 Select a language.
- 3 Register or log in.

If you have not created a MOTOBLUR account, you'll need to register: Enter your name, your current email address (where MOTOBLUR can send account information), and a new MOTOBLUR password.

- Tip:** Turn your phone to type.
- 4 Add your accounts to MOTOBLUR.

Power Key



To add an account, touch it. Then, enter the user name or email and password that you set up on that account.

**Tip:** For more, or to add accounts anytime, go to “Add accounts” on page 12.

- 5 After you sign in, your phone imports your contacts from your SIM card. To open your contacts, touch **Contacts**.

**Tip:** To manually import contacts from the SIM card, touch Menu > **More** > **Copy to Card/Device** > **G card to Device** or **C card to Device**.


## Your MOTOBLUR account


Only MOTOBLUR syncs contacts, posts, feeds, messages, emails, photos and much more—from sources like Facebook™, Twitter, MySpace, your work email, Picasa™, and Photobucket™—and serves them up just the way you want them. No opening and closing apps and menus, it's all front and center on your home screen and throughout the entire phone, so you can communicate anyway you like.

To add or edit the email, social networking, and other accounts in your MOTOBLUR, Menu > **Settings** > **Accounts** > **Add account**. To set up email accounts, see “Email” on page 22.

You can log into MOTOBLUR from a computer to upload contacts, reset your password, get help, or even locate your phone: [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur)


## Turn it on & off

To turn on your phone, press Power  (on the top left).


To turn off your phone, press and hold Power , then touch **Power off** in the menu that opens.

**Note:** This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.


## Unlock

To unlock your phone, touch the unlock icon  and drag it to the right.

## Sounds off & on

To turn phone sounds off, touch the sound icon  and drag it to the left.

## Wi-Fi™ connect

You can use a Wi-Fi™ connection for even faster Internet access. Touch Menu  > **Settings**

> **Wireless & networks** > **Wi-Fi settings**. Touch **Wi-Fi** to turn it on and search for nearby wireless networks. Touch a network to connect. There's more in "Wi-Fi™" on page 50.

## Cool content & more

Browse and download thousands of the coolest apps on the planet from Android Market™, see "Apps for all" on page 38.

Your phone comes with a microSD memory card installed—you can load it up with photos, videos, and music from your computer using "Memory card" on page 53.

## Security

Your contacts are backed-up on MOTOBLUR, so don't worry. Even if you lose your phone, MOTOBLUR can help you find it or wipe it. And when you get your next MOTOBLUR product, your stored info makes it a snap to set up with just your username and password.

Of course, it doesn't stop there. There are plenty of ways to protect your phone and your information, in "Security" on page 56.






## Touchscreen & keys

### Touchscreen on/off

*a few essentials*


Your touchscreen is on when you need it and off when you don't.

- To make your touchscreen sleep or wake up, just press Power .
- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.
- To make your touchscreen sleep when you put it in your pocket, touch Menu  > **Settings** > **Display** and check **In-pocket detection**.
- To let the touchscreen adjust brightness automatically, touch Menu  > **Settings** > **Display** > **Brightness** and check **Automatic brightness**.


### Touch tips



Here are some tips on how to navigate around your phone.

### Touch


To choose an icon or option, *touch* it. Try it: In the home screen, touch  **Contacts**.

### Touch & hold


To open special options, *touch and hold* an icon or other item. Try it: In the home screen, touch  **Contacts**, then touch and hold a contact to open options.

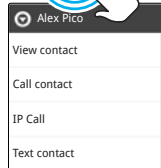

## Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch  **Contacts**, then drag your contact list up or down.

**Tip:** When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A - Z.

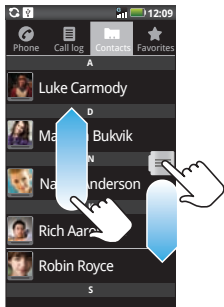


## Flick

To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

**Tip:** When you flick a long list, touch the screen to stop it from scrolling.

## Pinch-to-zoom

Get a closer look at maps, web pages, or photos. To zoom in, *touch* the screen with two fingers and then slide them apart. To zoom out, *drag* your fingers together.

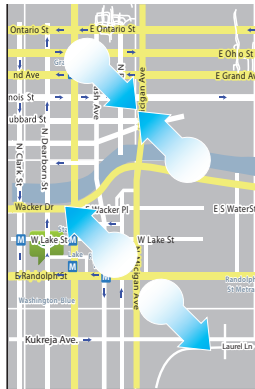

Pinch to zoom in and out.

## Phone covers

Your touchscreen might stay dark during calls if the sensor just above it





covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.

Screen protectors can also interfere with touchscreen performance.

To find Motorola accessories for your phone, visit [www.motorola.com/products](http://www.motorola.com/products).


## Key tips

### Menu, home, back, & search

Touch Home (🏠) to close any app or menu and return to the home screen. Touch and hold Home (🏠) to show the recent apps you have used, then touch an app to open it.

Touch Menu (☰) to open menu options, or Back (↶) to go back.

Touch Search (🔍) to text search. Touch and hold Search (🔍) to voice search.

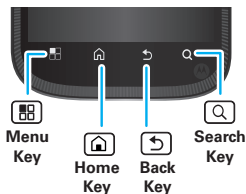

### Sleep & wake up

To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power (🔘). To wake up the touchscreen, just press Power (🔘) again.



To change how long your phone waits before the screen goes to sleep automatically, touch Menu (☰) > **Settings** > **Display** > **Screen timeout**.

### Power key menu

Press and hold Power (🔘) to open the power key menu, where you can turn off the phone (**Power off**), or turn **Silent mode** or **Airplane mode** on or off.

### Adjust volume

Press the volume keys to change the ringer volume (in the home screen), or the earpiece volume (during a call).



## Rotate the screen


The touchscreen can spin to stay right-side up when you rotate your phone:

**Find it:** Menu  > **Settings** > **Sound & display**  
> **Auto-rotate screen**

## Home screen


*quick access to the things you need most*

### Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:




Use the widgets, shortcuts, and panels to show what's important to you—whether it's home, work or play.


**Tip:** From the home screen, touch Menu  > **Profiles** to design different home screens for **Work**, **Home**, or **Weekend**. Your changes are stored in each profile.

## Use & change your home screen

On your home screen, *shortcuts* are icons that open your favorite apps, web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates.

Flick the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, touch it. Home  to return to the home screen.

**Tip:** When you open a widget, touch Menu  to show any options or settings (you can choose accounts for **Messages**, **Social Networking**, or **Calendar** widgets).


There's more about social networking widgets in “View account updates & features” on page 13 and “Update your status” on page 12.

- To **resize Motorola widgets**, touch and hold one until you feel a vibration, then release. Drag a corner to resize.






- To **add** something or change your **wallpaper**, touch and hold an empty spot until you see the **Add to Home screen** menu.

You can add a folder to organize your shortcuts.


- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash  at the top of the screen.


## Running multiple apps


No need to close an app before opening another one. Your phone runs multiple apps, all at once.

You can open a new app while running another. Touch Home  to return to the home screen, touch  to open the main menu, then touch the app you want. To switch from one running app to another, touch and hold Home  to see what apps are already open, then touch the one you want.

## Search


To search, touch Search  on the front of the phone, or touch the search widget in the app menu.









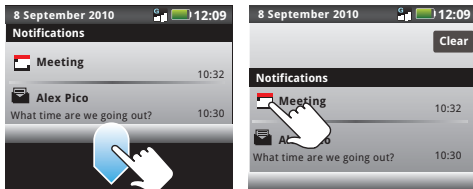







To change search settings, touch Menu  > **Settings** > **Search settings**.

## Phone status & notifications

At the top of the screen, icons on the left notify you about new messages or events (notifications). Icons on the right tell you about phone status. Flick the bar down to show notification details.



	CDMA network (full signal)		GSM network (full signal)
--	-------------------------------	---	------------------------------

	voicemail message		USB connection
	Bluetooth™ active		Bluetooth connected
	Wi-Fi™ active		flight mode
	vibrate mode		silent mode
	mute call		speakerphone active
	firewall active		alarm set
	battery (full charge)		battery (charging)

**Tip:** To see today's date, touch and hold the status indicators.