

INSTRUCTION MANUAL

A representative version of the user's manual follows:



EN

MOTOROLA **XT605**

LIFE.  POWERED.



FCC SUBMISSION

January 10, 2012

CONTROLLED COPY

MOTOROLA CONFIDENTIAL RESTRICTED :: MOTOROLA CONFIDENTIAL RESTRICTED

CONGRATULATIONS

MOTOROLA XT605

Stay connected, organize your life, and absolutely own the web with MOTOROLA XT605.

- **Direct Connect calls.** Keep in touch with your family, friends, and colleagues with the simple touch of a button.
- **Organization.** Check your email, calendar, and contacts wherever you are.
- **Browsing.** Get more from the web with a huge screen. Search, browse, everything you want to do, all made easier.
- **Maps, entertainment, and more.** The latest technology and apps. Google Maps™ to find your way. YouTube™ to stay entertained. Easy access to Google™ and thousands of Android™ apps to expand your world.


Note: Certain apps and features may not be available in all countries.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

SAR This product meets the applicable SAR limits of 1.6 W/kg (FCC & IC) and 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

Note: When using the product while worn on your body, either use an approved accessory such as a holster or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

MORE

- **Answers:** Touch  >  **Help Center.**
- **Updates:** Smartphone updates, computer software, user guides, online help, and more at www.motorola.com/myXT605.
- **Accessories:** Find accessories for your smartphone at www.motorola.com/products.

YOUR PHONE

the important keys & connectors



CONTENTS

LET'S GO	3
TOUCHSCREEN & KEYS	4
HOME SCREEN & APPS	7
CALLS	10
DIRECT CONNECT	13
CONTACTS	16
MESSAGING	20
TEXT ENTRY	23
TIPS & TRICKS	25
PHOTOS & VIDEOS	27
MUSIC	31
SOCIAL NETWORKING	37
WEB	38
PERSONALIZE	40
LOCATION	42
APPS FOR ALL	44
BLUETOOTH™ WIRELESS	46
WI-FI	47
MEMORY CARD & FILE MANAGEMENT	49
TOOLS	53
MANAGEMENT	57
SECURITY	58
TROUBLESHOOTING	61
SAFETY, REGULATORY & LEGAL	62

Note: Your phone might look a little different.

LET'S GO

let's get you up and running

ASSEMBLE & CHARGE



Caution: Please read “**BATTERY USE & SAFETY**” on page 62.

Tip: To save battery life, see “**BATTERY TIPS**” on page 26.

SETUP & GO

Note: This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.



Note: If you have an existing Gmail™ account, your contacts from that account are synced to your phone.

WI-FI CONNECT

If you want to use a Wi-Fi network for even faster Internet access, touch  >  **Settings** > **Wireless & networks** > **Wi-Fi settings**. Touch **Wi-Fi** to search for and connect to wireless networks. There's more in "**WI-FI**" on page 47.

COOL CONTENT & MORE

Browse and download thousands of the coolest apps on the planet from Android Market™. See "**BROWSE & INSTALL APPS**" on page 44.

Your phone can use a microSD memory card (sold separately)—you can load it up with photos, videos, and music from your computer (see "**MEMORY CARD**" on page 49).

January 10, 2012

TOUCHSCREEN & KEYS

a few essentials



TOUCH TIPS

Here are some tips on how to navigate around your phone.

TOUCH

To choose an icon or option, *touch* it.



TOUCH & HOLD

To open special options, *touch and hold* an icon or other item. Try it: In the home screen, touch  >  **Contacts**, then touch and hold a contact to open options.

SCREEN NOT YET AVAILABLE

SCREEN NOT YET AVAILABLE


DRAG

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: Touch  >  **Contacts**, then drag your **Contacts** list up or down.

FLICK

To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.

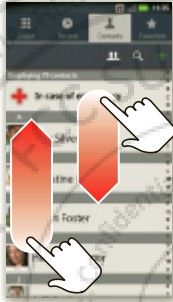


ZOOM

Get a closer look at Google Maps™ or web pages. To zoom in, *double-touch* (tap twice quickly) the screen. To zoom out, *double-touch* the screen again.


You can also zoom in or out by pinching your fingers together or moving them apart on the screen.





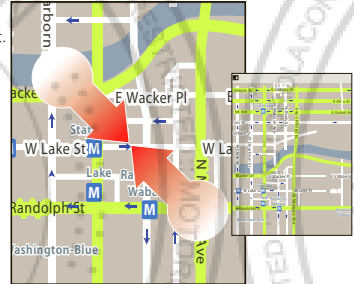Pinch to zoom out.



TOUCHSCREEN ON/OFF

Your touchscreen is on when you need it and off when you don't.

- To make your touchscreen sleep or wake up, just press Power/Lock .
- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.

- To change how long your phone waits before the screen goes to sleep, touch  >  **Settings** > **Display** > **Screen timeout**.
- To make the screen lock when it goes to sleep, use "**SCREEN LOCK**" on page 59. To unlock the screen, press Power/Lock  or open the phone. Then, drag  to the right.



Note: Your touchscreen might stay dark if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.






KEY TIPS

MENU, HOME, BACK, & SEARCH




Touch Home  to close any menu or app and return to the home screen. In the home screen, touch and hold Home  to show the last eight apps you used, then touch an app to open it.

Touch Search  for text search, or touch and hold for voice search.

Touch Menu  to open menu options, or touch Back  to go back.

POWER KEY MENU

Press and hold Power/Lock  to open the power key menu, where you can turn off your phone (**Power off**), or turn **Airplane mode** or **Silent mode** on or off.

ADJUST VOLUME


Press the volume keys to change the ring volume (in the home screen) or the earpiece volume (during a call).

When playing music or video files, press the volume keys to adjust media volume.



ROTATE THE SCREEN


In many apps, the touchscreen can rotate to stay right-side up when you turn your phone sideways:

Find it:  >  **Settings** > **Display** > **Auto-rotate screen**

HOME SCREEN & APPS

quick access to the things you need most

QUICK START: HOME SCREEN

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:


The home screen extends to give you room for adding shortcuts, widgets, and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts.

January 10, 2012


SCREEN NOT YET AVAILABLE

USE & CHANGE YOUR HOME SCREEN

On your home screen, *shortcuts* are icons that open your favorite apps, Web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates right on your homescreen without having to open a separate app or web page.


- To **open** something, touch it. Touch Home  to return to the home screen.

Note: Your home screen might look a little different.


Tip: When you open a widget, touch Menu  to see any options or settings (you can choose accounts for **Messages**, **Social Networking**, or **Calendar** widgets).


There's more about social networking widgets in "**YOUR SOCIAL NETWORKING ACCOUNT**" on page 37.

- To **resize** Motorola widgets, touch and hold a corner until you feel a vibration, then drag.
- To **add** something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home screen** menu.

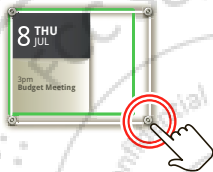


Tip: You can add a folder to organize your shortcuts.

- The dock holds apps and is always at the bottom of the home screen. To change one of the shortcuts in the dock at the bottom of the home screen (except for the app menu icon ) , touch and hold a dock shortcut for a few seconds, and select an app from the **Add to Dock** menu.

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash  at the top of the screen.


SEARCH

Touch Search , or use a Search widget on your home screen.



Touch  for more search options.

Touch here to enter text.

Touch  to search by voice.

SCREEN NOT YET AVAILABLE

PHONE STATUS & NOTIFICATIONS

The status bar at the top of the screen has icons that tell you about messages and phone status.

To view your notifications, touch the status bar and drag it down. Touch a notification to select it.


Tip: To see today's date, touch the status bar at the top of the screen.


NOTIFICATION LIGHT

No need to wake your screen to see if you have a message. The notification light blinks when you have a new message, email, text message, an appointment, or your battery is low.


















APPS

You can find all of your apps in one place. From the home screen, touch .

To return to the home screen, touch Home  or Back .


SCREEN NOT YET AVAILABLE


SCREEN NOT YET AVAILABLE

	Bluetooth active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi active		airplane mode
	downloading		sync active
	vibrate		alarm set
	silent		battery (charging)
	mute call		battery (full charge)
	speakerphone active		call alert
	active DC call		group call

RECENT APPS

Touch and hold Home (🏠) to see the most recent apps you used. Touch an app to open it, or touch Home (🏠) to return to the home screen.

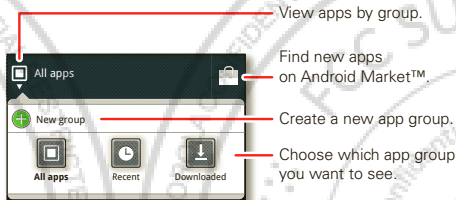

Tip: You can also open recent apps from the app menu. Touch  > **Recent**.


January 10, 2012

CALLS

it's good to talk





QUICK START: CALLS

DIALING OPTIONS

From the home screen, touch  **Phone** > **Dialer**.

SCREEN NOT YET AVAILABLE



IN-CALL OPTIONS

Tip: You can touch Home  or Back  to leave the active call display. To reopen it, touch Home  >  **Phone**, or flick down the **Notifications** bar and touch the Current Call notification.



MAKE & ANSWER CALLS

To make a call, touch  **Phone** > **Dialer**, enter a number, then touch .


Tip: If the screen is locked, drag  to the right.

To answer a call while the display is active, touch  **Answer**. When the display is not active, answer by dragging  to the right.

Note: When you hold the phone to your ear, the display goes dark to prevent accidental touches. When you move your phone away from your ear, the display lights up again.

To ignore a call, touch  **Ignore** when the display is active. Touch  if the display is not active.

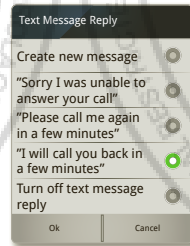

If you ignore a call, your phone gives you the option to send a text message to the caller. Select a message and touch **Ok** to send it or touch **Cancel** to exit without sending a message.



SCREEN NOT YET AVAILABLE

To use a Bluetooth™ device, touch **Bluetooth**. (Be sure the device is turned on and paired—see “**CONNECT NEW DEVICES**” on page 46.)

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

You can enable or disable text message reply for ignored calls, touch  >  **Settings** > **Call settings** > **Text message reply** and check or uncheck the check mark next to **Text message reply**.

To create or edit a preset text message reply, touch **Edit messages**.

END CALLS



Touch  **End Call**.

MISSED PHONE CALL

If you receive a phone call during a Direct Connect call, and don't answer it, you'll receive a missed call notification. To return the phone call, touch **End DC Call**, and then **Return call** when prompted. To continue the Direct Connect call, touch **Dismiss**.


RECENT CALLS

Find it:  **Phone** > **Call log**

- To call a number, touch .
- To send a text message, create a contact, view a contact, or other options, touch and hold an entry.
- To clear the list, touch Menu  > **Clear list**.

FREQUENT CALLS


Find it:  **Phone** > **Favorites**

- To call a number, touch .
- To send a text message, view a contact, or other options, touch and hold an entry.
- To add a contact to **Favorites**, select the contact, and touch the star in the upper right corner. The star turns green.

THREE WAY CALLS

To start a conference call, call the first number. After the call connects, touch **Add Call**. Dial the next number, or select it from contacts or favorites. When the next number answers, touch **Merge**.

YOUR PHONE NUMBER

Find it:  >  **Settings** > **About phone** > **Status** > **My Phone number**

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot

be placed due to network, environmental, or interference issues.

- 1 Touch **Phone** > **Dialer** (if your phone is locked, touch **Emergency Call** at the bottom of the screen).
- 2 Enter the emergency number.
- 3 Touch **Call** to call the emergency number.

Note: Your phone can use location based services (GPS and AGPS) to help emergency services find you. See “**LOCATION SERVICES**” on page 67.

COOL DOWN

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see “Cool Down” messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

DIRECT CONNECT

one or more, talk to them all

DIRECT CONNECT CALLS

Direct Connect calls are calls between two people.

MAKE AND ANSWER DIRECT CONNECT CALLS

To **make** a Direct Connect call:

- Touch **Phone** > **Dialer**, and enter the recipient's DC (Direct Connect) number.
- Touch **App Drawer** > **Contacts**, and select a contact that has a DC number.
- Touch **Phone** > **Call log** or **Favorites**, and select an entry that has a DC number.

To **talk**, press and hold the DC (Direct Connect) Button.
To **listen**, release the DC Button.

To **answer** a Direct Connect call, press the DC Button after the caller has stopped talking.



To **add** a person to a call, touch **Add member**.

To **end** a Direct Connect call, do nothing. The call will end after a few seconds.



DC RESUME

You can extend the automatic timeout of a DC call by about 30 seconds.

Find it:  >  **Settings** > **Call settings** > **Direct Connect settings** > **Resume DC**

ONE TOUCH DC

You can customize the DC Button for quick access to Direct Connect functions.

Find it:  >  **Settings** > **Call settings** > **Direct Connect settings** > **One Touch DC**





Options	
Off	Turn off One Touch DC .
Launch DC Contacts List	Open a list of Direct Connect contacts on your phone.
Launch DC Call log list	Open the DC Call log list.
DC selected contact	Start a Direct Connect call with the selected contact.
DC most recent number	Start a Direct Connect call with the most recent DC number in the Call log .

Tip: To add a quick switch for **One Touch DC**, touch and hold a blank spot on your home screen, then touch **Motorola Widgets** > **One Touch DC**.

ALERTS

Use alert to tell someone you want to speak to them.

To **send** a call alert:

- Touch  **Phone** > **Dialer**, enter a DC number, and press Menu  > **Send Alert**. When prompted, press the DC Button.
- Touch  >  **Contacts**, select a contact containing a DC number, touch [Call Alert Icon], and press the DC Button when prompted.

When you **receive** a call alert, you can:

- **Answer:** Press the DC Button to begin a Direct Connect call with the sender.
- **Later:** Store the call alert to **Notifications**.
- **Dismiss:** Dismiss the call alert.

Note: Alerts are moved to **Notifications** after a few minutes of inactivity. You won't be able to make phone calls or Direct Connect calls until the call alert is moved, or you've chosen an option.

SWITCH FROM A DIRECT CONNECT CALL TO A PHONE CALL

For longer calls, you can switch from a Direct Connect call to a phone call if the Direct Connect call recipient has a phone number stored in **Contacts**.

During a Direct Connect call, Touch Menu  > **Call Contact**.



DIRECT CONNECT PERMISSIONS

You can choose who can contact you via Direct Connect.

Find it:  >  **Settings** > **Call settings** > **Direct Connect Settings** > **Permission settings** > **Permissions type**

You can set the **Permissions type** to **Block List** if you want to accept all Direct Connect calls, except those from people whose Direct Connect numbers you've blocked.

Select **Allow List** if you want to block all Direct Connect calls, except those from people whose Direct Connect number you've added to your **Allow List**.





To edit your Block or Allow lists, touch  >  **Settings** > **Call settings** > **Direct Connect Settings** > **Permission settings** > **Block List** or **Allow List**.

Note: You can't edit or add Direct Connect numbers to the Allow List when the **Permission type** is set to **Block List**. If the **Permission type** is set to **Allow List**, you can't edit or add Direct Connect numbers to the **Block List**.




Tip: You can also add Direct Connect Numbers to the Block or Allow lists from contacts. Touch  >  **Contacts** > Menu  > **Block DC** or **Allow DC**.

GROUP CALLS

Need to talk to more than one person at a time? With group calls you can talk to up to 20 people at a time.

To **create** a group, touch  >  **Contacts** >  >  > **DC Group**, and select the group members. Touch **Save** to save it in your contacts.


Note: If you don't enter a name for the group, it will be stored as "**Group**".

To **make** a group call, touch  >  **Contacts** > , select the group you wish to call and press the DC Button.

Tip: You can also begin a group call with an invite. To send an invite, touch and hold a group to open the options menu. Touch **Send invite**. When prompted, push the DC Button.

INTERRUPTS


When you want to break into a conversation during a Direct Connect or group call, you can send the person talking an interrupt request.

To send an interrupt request, a Direct Connect or group call, touch Menu  > **Interrupt**.

MISSED CALLS, INVITES, & ALERTS

If you receive a Direct Connect or Group call, an alert, or an invite, you'll receive a missed DC call notification. To return the missed call, accept the invite, or reply to the alert, touch **Hold current call**, and then press the DC Button.

SET DIRECT CONNECT SPEAKER

You can listen to Direct Connect calls through your phone's speaker or earpiece. Press Speaker  to turn the speaker on or off.



CONTACTS

contacts like you've never had before

QUICK START: CONTACTS

Find it:  >  **Contacts**

January 10, 2012

SCREEN NOT YET AVAILABLE

TRANSFER CONTACTS

Get all your contacts, all in one place. Here's a few helpful hints:

- **Use Gmail™**

All your Gmail contacts will automatically get synced to your phone. Various computer apps for mobile phones and email accounts allow you to export your contacts as a “CSV” file. You can then use Gmail to import the file. For more details, go to www.motorola.com/transfercontacts or log in to your Gmail account on your computer and select “Help”.

- **Use a microSD card**

You can transfer contacts from your old phone to your new Motorola phone using your microSD card.

- **Use a SIM card**

You can transfer contacts from your old phone to your new Motorola phone using your SIM card.

- **More**


There are other methods and tools to help you at www.motorola.com/transfercontacts.

TRANSFER CONTACTS USING YOUR MICROSD CARD

- 1 On your old phone, copy all the contacts you want to transfer to your microSD card.

Tip: For Motorola Android™ phones, touch  >  **Contacts** > Menu  > **Manage Contacts** > Export contacts to: **SD card**.

- 2 Insert your microSD card in your new phone, see “**ASSEMBLE & CHARGE**” on page 3.

- 3 Import the contacts from your microSD card, touch  >  **Contacts** > Menu  > **Manage Contacts** > Import contacts from: **SD card**.

Note: You might have done this during “**SET UP & GO**” on page 3.

TRANSFER CONTACTS USING YOUR SIM CARD

- 1 On your old phone, copy all the contacts you want to transfer your SIM card.

Tip: For Motorola Android™ phones, touch  >  **Contacts** > Menu  > **Manage Contacts** > Export contacts to: **SIM card**.

- 2 Insert your SIM card in your new phone, see “**ASSEMBLE & CHARGE**” on page 3.

- 3 Import the contacts from your SIM card, touch  >  **Contacts** > Menu  > **Manage Contacts** > Import contacts from: **SIM card**.

Note: You might have done this during “**SET UP & GO**” on page 3.

CALL OR EMAIL CONTACTS

Find it:  >  **Contacts**

For **View contact**, **Call contact**, **Text contact**, or other options, touch and hold the contact.


VIEW & USE CONTACTS

When you set up a social networking account, you'll know what everybody's up to and when (see "**SOCIAL NETWORKING**" on page 37). Every time you pick up a call, check a message, or look up a friend's contact info, sure, you'll see their name and number, but you can see their social network status and smiling face, too.

Find it:  >  **Contacts**

Touch a contact to open its details. While viewing details, you can start a call or message by touching a phone number or other info.

SORT CONTACTS

To sort contacts or set display options, touch Menu  > **Display options** and touch:

- **Filter by:** Choose which types of contacts you want to see. Select **All contacts**, **Contacts with DC numbers**, or **Contacts with phone numbers**.
- **Sort list by:** sort by first or last name.
- **View contact names as:** view contacts as first name or last name first.
- **Choose contacts to display:** select which source to use contacts from.

CREATE CONTACTS

Find it:  >  Contacts > 

Touch any entry area to open the touchscreen keypad.

When you're finished, touch **Save**.

Where are contacts saved? Your phone saves new contacts in its memory and on the Google™ Server. It also updates your social networking account.

EDIT OR DELETE CONTACTS

Find it:  >  Contacts

Touch the contact, then touch Menu  > **Edit contact** or **Delete contact**.

SYNCHRONIZE CONTACTS

When you change one of your contacts, your phone automatically updates your other social networking accounts. Likewise, if you change a social networking friend, your phone updates your contacts.

GROUPS

Find it:  >  Contacts >  > 


You can put your **Contacts** into a **DC group** for Direct Connect group calls, or a **Message Group** to easily send text messages to a group of people.

EDIT GROUPS

Touch and hold a group to open the options menu. Touch **Edit group**.

To add a member, touch , and select a contact.

Tip: You can also add a member to a group during a group call. Touch **Add member**.

Note: Adding a new member during a group call creates a new group. To save this new group, touch Menu 

> **Save**

Touch  to delete a member.



DELETE GROUPS

Touch and hold a group to open the options menu. Touch **Delete group**.

MESSAGING

sometimes it's best to text, or IM, or email . . .

QUICK START: MESSAGING

Find it:  >  **Messaging** > **Universal Inbox**

January 10, 2012

SCREEN NOT YET AVAILABLE

Tip: To see more messages, flick or drag up.

READ & REPLY TO MESSAGES


Find it:  >  **Messaging** > **Universal Inbox**

Note: **Universal Inbox** shows all of your messages together—text, email, and social networking messages. To show only one type of message, touch a message type instead of **Universal Inbox**.

- To open a text message or social networking message and all of its replies, touch it.

- To respond to a message, just open it and enter your response in the text box at the bottom.


To forward a text message, touch and hold a message in the conversation, then touch **Forward message**.

For email, touch  to choose a reply or forward option.


- To open options, touch and hold a message.

CREATE MESSAGES

Find it:  >  **Messaging** > 

Choose a message type, such as **Text Messaging** or **Facebook**. Then, enter the recipient and message. In text messages and emails, touch Menu  for options, like **Insert...** or **Attach Files**.

SEND & RECEIVE ATTACHMENTS


To send a file in a message, open a new message and touch Menu  > **Insert**.

When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster viewing, and your phone will show **Get HTML version**.

While viewing the attachment, touch it to save it, share it, and more.

Tip: To send and receive large attachments faster, use a Wi-Fi connection (see “**Wi-Fi**” on page 47).




SET UP MESSAGING




To add email accounts, touch  >  **Accounts** > **Add account**.

- **Corporate Sync** is for Exchange server work email accounts. Enter details from your IT administrator.

Tip: You might need to enter your domain name with your user name (like *domain/username*).

- **Email** is for most personal email accounts. For account details, contact the account provider.




Note: To add other email accounts to your **Messaging** widget and **Universal Inbox**, touch  >  **Messaging**, then touch Menu  > **Manage accounts** > **Add account** > **Email**.

To change your settings, touch  >  **Messaging** > Menu ,


- **Manage accounts** to add or remove an account.
- **Edit Universal Inbox** to choose which accounts show messages in the **Universal Inbox**.
- **Messaging Settings** to set the notification for each account type and more.

EMAIL™

CREATE A NEW EMAIL


Find it:  >  **Gmail** > Menu  > **Compose**

Enter the recipient email address and message, then touch **Send**.

Tip: Touch Menu  for options, like **Attach** or **Add Cc/Bcc**.

Features

search for email

Touch Search .

choose email notifications

Touch Menu  > **More** > **Settings** > *Gmail account* > **Email notifications**.

apply a label to a thread

Touch and hold a message, then touch **Change labels**.

GOOGLE TALK™

Google Talk instant messaging lets you chat via instant message with other Google Talk users on phones or on the web.


Find it:  >  **Talk**

SCREEN NOT YET AVAILABLE

Touch Menu  to send invitations, add new friends, and more.

Tip: You can also download an instant messaging app from the Android Market™.

VOICEMAIL

When you have a new voicemail,  appears at the top of your screen. Drag down the notification bar and touch the notification.

If you need to change your voicemail number, in the home screen touch  >  **Settings** > **Call settings** > **Voicemail settings**.







TEXT ENTRY

keys when you need them

DEVICE KEYPAD





TYPING TIPS

To: 12	
Enter symbols chosen from a list	Press Alternate  + Space 
Enter alternate characters in the corners of keys	Press Alternate 
Enter several alternate characters, until you press Alternate  again	Press Alternate  twice
Enter one capital letter	Press Shift 

To...



Enter **only capital** letters, until you press Shift  again. Press Shift  twice


Delete a character (hold to delete more) Press Delete 

Start a **new line** (email or text messaging) Press Return 

Select text, Cut, Copy, or Paste Touch and hold a blank spot in a text entry area

TOUCHSCREEN KEYPAD

Turn your phone on its side, and you can open a keypad on your screen by touching a text field, or touching and holding Menu . To close the keypad, touch Back .

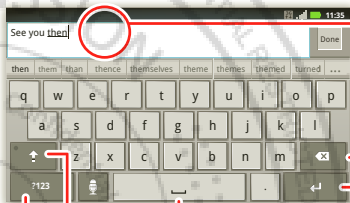

Text Entry

Touch to open touchscreen keyboard.


Delete

Return

TYPING TIPS




To...

Enter **alternate** characters

From the number keypad, touch Alternate . Touch again to return to numbers.

Enter **one capital** letter

Touch Shift .

To...	
Enter only capital letters, until you touch Shift Lock  again	Touch Shift Lock  twice. Touch again to revert to lowercase.
Select text	Touch and hold text to select it.
Cut or Copy selected text	Touch and hold text, then touch Cut or Copy .
Paste cut or copied text	Touch and hold location to paste then touch Paste .
Move the cursor	Touch the location you want to go to.
Delete a character (hold to delete more)	Touch Delete  .

TEXT INPUT SETTINGS









Find it: Touch  >  **Settings** > **Language & keyboard**



- To edit your dictionary, touch **User dictionary**.
- To change the language and the style for your touchscreen keypad, touch **Select locale**.
- To change input method and settings, touch **Multi-touch keyboard** or **Built-in keyboard**.

TIPS & TRICKS

a few handy hints

GENERAL TIPS

To...	
Return to home screen	Touch Home  .
See recently dialed numbers	Touch  Phone > Call log .
Sleep/wake your phone	Press Power/Lock  .
Set screen timeout	Touch  >  Settings > Display > Screen timeout .
Search	Touch Search  .
Use voice search	Touch and hold Voice  .
See recently opened apps	Touch and hold Home  .

To...	
Choose apps for Quick Launch Area	First touch and hold an app icon in the Quick Launch Area for a few seconds. Then, select an app from the Add to Dock menu.
Turn sound on/off	Press and hold Power/Lock  > Silent mode .
Turn airplane mode on/off	Press and hold Power/Lock  > Airplane mode .

- To turn off Wi-Fi, touch  > **Settings > Wireless & networks > Wi-Fi**.

January 10, 2012

BATTERY TIPS

Want to extend your battery life? Try these:

- To select a battery profile that suits your phone use, touch  > **Settings > Battery & data manager > Battery mode**.
- To turn off automatic applications sync, touch  > **Settings > Battery & data manager > Data delivery**.
- To turn off Bluetooth power, touch  > **Settings > Wireless & networks > Bluetooth**.

PHOTOS & VIDEOS

see it, capture it, share it!

PHOTOS

TAKE & SHARE PHOTOS

Take that family photo, and post it online for everyone to see.

Note: To get the clearest photos, wipe the lens clean with a soft, dry cloth before you take a photo.

Find it: Press Camera 

Note: Photos are stored on your phone's internal memory unless you switch it to a microSD memory card (sold separately). **Picture Resolution** is **Large** or **5MP**, unless you change it.


Open your gallery and touch and hold a photo to view options.

Options	
Set as	To set the photo as a wallpaper, contact photo, or social network photo.
Add to album	To upload the photo to an online photo album.
Share	To send the photo in a message or post it online. For more info on sharing your photos, see " SHARE PHOTOS & VIDEOS " on page 31.
Delete	To delete the photo.

SCREEN NOT YET AVAILABLE

To take the photo, touch .

CAMERA SETTINGS

You can make adjustments to optimize your shot. Touch Menu  to see these options.

Options	
Settings	Set Picture Resolution and Geo-tag setting.
Effects	Change photo look: Normal , Black and White , Negative , and more.
Scenes	Adjust in different environments: Auto , Portrait , Landscape , Sport , and more. Touch the screen when finished to return to the viewfinder.
Modes	Chose from Single shot , or Panorama to take multiple shots of wide scenes and join them together to make one large image. Tip: When using Panorama mode, use Capture Direction to specify how shots will be joined: Move up , Move right , Move left , Move down .


Options

Brightness

Flash

Set **Flash On**, **Flash Off**, or **Auto Flash**.

Switch to Camcorder

Flick the switch below  to toggle between photo and camcorder.

TAG PHOTOS

Tag your photos with location information.

Touch Menu  > **Settings** > **Geo-tag**.