


TEXT ENTRY

keys when you need them

When you enter text, like in a message or search, you have keyboard options.

QUICK START: TEXT ENTRY

Android keyboard lets you enter letters by touching them one at a time.

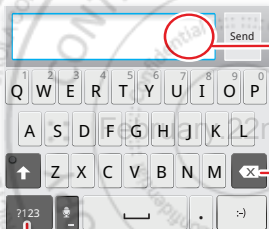


Touch and hold an empty spot to open a menu.


Symbols/Numbers

Delete

TEXT ENTRY DICTIONARY

Your phone's dictionary stores special words or names to recognize when you enter them.

To open your dictionary, from the home screen touch Menu  > **Settings** > **Language & keyboard** > **User dictionary**.

- To **add** a word, touch Menu  > **Add**.
- To **edit** or **delete** a word, touch and hold it.



February.22nd, 2012

SCHEDULE

helping you stay in control

Your **Calendar** events can synchronize with your Google™ account, and the **Clock** can wake you up!


QUICK START: SCHEDULE





From the home screen, touch  >  **Calendar**.




Color indicates events.




Drag or flick to scroll.

Touch  to choose the calendar view. Choose **More** to create an event or change settings.




- To **create** an event, touch  >  **Calendar** > Menu  > **More** > **New event**, then enter details (to close the display keyboard, touch Back ).



Calendar synchronizes with your Google account calendar, which you can open from any computer at

calendar.google.com (or open your calendar within mail.google.com). To stop synchronizing with your account, touch Menu  > **Settings** > **Accounts & sync**, touch your Google account, then uncheck **Sync Calendar**.

- To **edit** or **delete** an event, touch  >  **Calendar**, touch the event to open it, then touch Menu  > **Edit event** or **Delete event**.

ALARM CLOCK

To set an alarm (like to wake up), touch  >  **Clock**, then touch the  alarm.

- To turn an alarm **on** or **off**, touch  next to it.
- To **add** an alarm, touch **Add alarm**, then enter alarm details.
- To **change** an alarm, touch the time.
- To set a **snooze** period, in the **Alarm Clock** list touch Menu  > **Settings** > **Snooze duration**.


When an alarm sounds, touch **Dismiss** to turn it off or **Snooze** to delay it. To cancel a snoozed alarm, drag down the status bar and touch the alarm name.

DATE & TIME



To set the date, time, time zone, and formats, touch Menu  > **Settings** > **Date & time**.


WEB

surf the web with your phone

Open **Browser** or just touch Search  to find a page, then bookmark it, send it, or just explore.

QUICK START: WEB

From the home screen, touch  >  **Browser**.

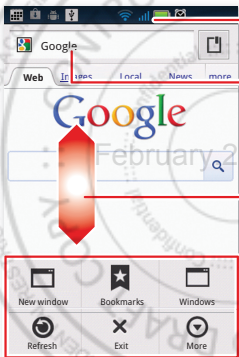


Connection

Mobile Network: 


Wi-Fi: 

Enter a web page URL.

Drag or flick to scroll.

Touch  to open bookmarks, windows, and more.

- To enter a **website address** in the browser or your home screen, just touch Search .

- To **zoom** in or out, pinch two fingers together or apart.
- To **send** the website address in a message, touch Menu  > **More** > **Share page**.





Note: Your phone automatically uses your mobile phone network to connect to the web. Your service provider may charge to surf the web or download data. If you can't connect, contact your service provider.

Tip: You can connect to the web with “**WI-FI NETWORKS**” on page 51.




DOWNLOADS

To download files in your browser, touch a file link or touch and hold a picture to choose **Save image**.

To show the files you downloaded, touch  >  **Downloads**. Touch and hold an item to open it, see details, or remove it from the list.

You can “**BROWSE & INSTALL APPS**” on page 14.

Tip: You can touch and hold a spot on the map to show the nearest address.

- To find stores, restaurants, and other **places** near you, touch  at the top.
- To get **directions**, find an address on the map, touch it, then touch .
- To **save** an address for later, touch it, then touch the star by its name to add it to your **Starred Places**.
- For **help**, touch Menu  > **More** > **Help**.

GOOGLE MAPS™ NAVIGATION

Google Maps Navigation is an Internet-connected GPS navigation system with voice guidance.


To open navigation, touch  >  **Navigation**. Follow the prompts to speak or type your destination.

For more, go to www.google.com/mobile/navigation.

GOOGLE LATITUDE™






Google Latitude™ lets you see where your friends and family are on Google Maps™. Plan to meet up, check that they got home safely, or just stay in touch. Don't worry, your location is not shared unless you agree to it. After you join Google Latitude, you can invite your friends to view your location, or accept their invitations.

Touch  >  **Maps** and then:

- To **join** Google Latitude, touch Menu  > **Join Latitude**. Read the privacy policy and, if you agree with it, choose to continue.

- To **add** friends, touch Menu  > **Latitude** > Menu  > **Add friends**.

Touch **Select from Contacts** or **Add via email address**, then touch a contact and **Add friends**. Your friend will receive an email notice.



- To **remove** friends, touch Menu  > **Latitude** to show your friends list. Touch a name, then touch **Remove**.
- To **share** your location when you receive a request, you can choose **Accept and share back** (show your location and see theirs), **Accept, but hide my location** (hide your location, but see theirs), or **Don't accept** (hide both locations).
- To **hide** your location, touch Menu  > **Latitude** to show your friends list. Touch your contact name, then touch Menu  > **Settings** > **Do not detect your location**.
- To **sign out**, touch Menu  > **Latitude** to show your friends list. Touch Menu  > **Settings** > **Sign out of Latitude**.

PHOTOS & VIDEOS




see it, capture it, share it!

QUICK START: PHOTOS & VIDEOS

Capture photos and videos to send them to friends or save them for later.



From the home screen, touch  >  **Camera**.



- To take a **photo**, touch .
- To record a **video**, open the camera, touch the screen, then touch **Image/Video** to switch to the camcorder. Press the Camera Key to start and stop recording.
- To **open** photos and videos, touch  >  **Gallery**, then touch **Menu** for options like **Share**.

Tip: For the clearest photos and videos, clean the lens with a soft, dry cloth.

VIEW & SHARE PHOTOS & VIDEOS

From the home screen, touch  >  **Gallery**.

Flick left and right to show folders. Touch a folder to show its photos or videos, then touch a thumbnail image to open, share, or delete it.


Tip: From the viewfinder, you can touch the thumbnail in the top right to open your last photo or video.

- To **zoom** in, touch the screen with two fingers and then drag them apart. To zoom out, drag your fingers together.



- To **send** or **post** the photo or video, touch **Menu > Share**.



To use a Bluetooth or cable connection, see “**CONNECTIONS**” on page 48.


- To **delete** the photo or video, touch **Menu > Delete**.
- To **set** a photo as your wallpaper, touch **Menu > More > Set as wallpaper**.
- To **play** a video, touch .

Tip: Turn the phone sideways for a widescreen view.


YOUTUBE™




The YouTube user-generated content website lets you share videos with YouTube users everywhere. You don't need a YouTube account to browse and view videos.

From the home screen, touch  >  **YouTube**.

- To **watch** videos, touch Search  to find a video. Touch a video to watch it.

For more video categories, touch Menu  > **Browse**.

To watch a video in high quality, touch Menu  > **Settings** > **High quality on mobile**.

- To **share** a video, touch it to open it, touch **More** at the top, choose **Share**, then choose how you want to share it.
- To **upload** a video from your phone to your YouTube account, touch  >  **YouTube** > Menu  > **Upload**. Touch the video, then touch **Upload**.

To sign into your YouTube account, touch  >  **YouTube** > Menu  > **My Channel**.



Note: If you don't have an account, touch the link to create one. For more, visit www.youtube.com.


MUSIC

when music is what you need...


QUICK START: MUSIC

Keep your music with you so you can listen and create playlists anytime.


From the home screen, touch  >  **MusicPlayer**, then choose a song to play it:

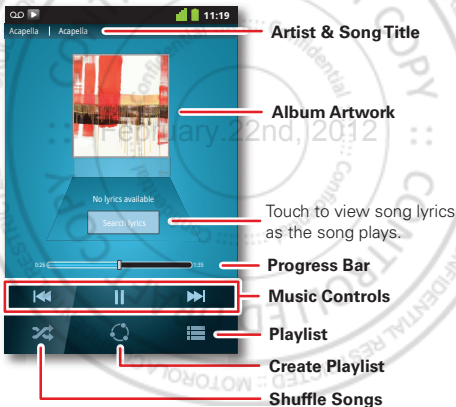



- To adjust **volume**, use the volume keys.

- When a song is playing, you touch Menu  to add it to a **playlist** or use it as a **ringtone**.



To edit, delete, or rename playlists, touch

 >  **Music** touch the **Playlists** tab, then touch and hold the playlist name.

- To **hide** the player and use other apps, touch Home . Your music keeps playing. To return to the player, flick down the status bar and touch .

Tip: For quick music player controls, touch and hold an empty spot in your home screen, then choose



Motorola widgets > Music now.

- To **stop** the player, touch .
- Before a **flight**, turn off network and wireless connections so that you can keep listening to music: Press and hold Power/Lock key  > **Airplane mode**.

Note: When you select airplane mode, all wireless services are disabled. You can then turn Wi-Fi and/or Bluetooth back on, if permitted by your airline. Other wireless voice and data services (such as calls and text messages) remain off in airplane mode.

Emergency calls to your region's emergency number can still be made.

You can use your phone's 3.5mm headset jack to connect wired headphones, or go wireless with a Bluetooth headset in "**CONNECTIONS**" on page 48.

To listen to FM **radio**, plug in a 3.5mm headset and touch  >  **FM Radio**. Your phone uses the headset wire as the radio antenna.

MUSIC FILES

To get songs for your music player, you can download them from online services or copy them from your computer. Your music player can play these file formats: MP3, AAC, AAC+, eAAC+, MIDI, WAV, or OGG Vorbis.

Note: Your phone does not support any DRM protected files.

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

To copy files **from your computer** to your phone, you can use “**CABLE CONNECTIONS**” on page 52 or “**BLUETOOTH™ DEVICES**” on page 49.

To **save a CD** on your computer (“rip” the CD), you can use a program like Microsoft™ Windows™ Media Player. First, make sure you change the format to MP3 (under Rip > Format in Windows Media Player).


CONNECTIONS

home, office, or hotspot

QUICK START: CONNECTIONS

Connect your phone to Bluetooth headsets, fast Wi-Fi networks, or right to your computer.

From the home screen, touch Menu  > **Settings** > **Wireless & networks**, then **Bluetooth settings** or **WLAN settings**.

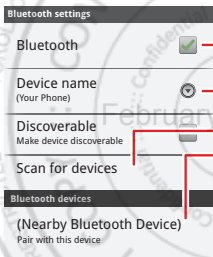


Turn Bluetooth power on & scan, or turn off.

Change your phone's Bluetooth device name.

Re-scan.

Connect a device found by the scan.

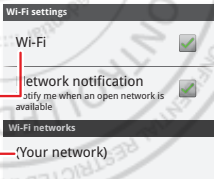

Turn Wi-Fi power on & scan, or turn off.

Notify me when an open network is available

Connect a network found by the scan.

- To connect **Bluetooth devices**, touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth settings**